



CLINTON SERVICE GUIDE

MODEL 117VS-FOTA-KS

SINGER 261

SHEAR CUTTER FOR SHOULDER TAPING OPERATION

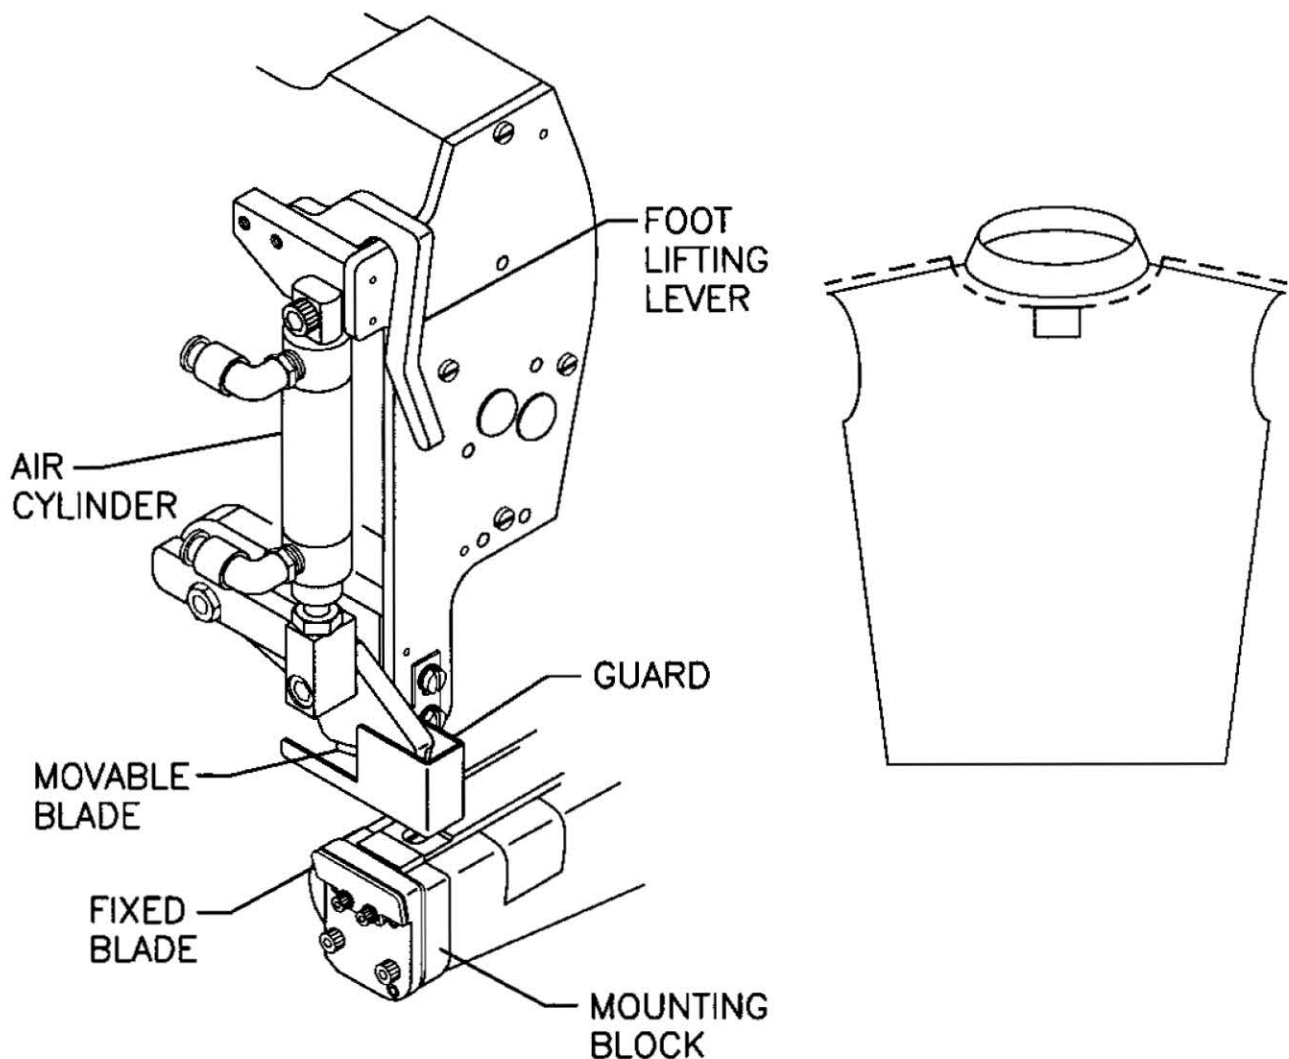


CLINTON INDUSTRIES, INC.
 700 Washington Avenue
 Carlstadt, N.J. 07072
 Phone: 201-935-4242
 FAX: 201-935-3615
 Web Site: <http://www.clintonind.com>
 Email: general@clintonind.com



DRILLING & INSTALLATION INSTRUCTIONS

STEP 1

REMOVE EXISTING FACE PLATE.

STEP 2

INSTALL THE CUTTER AS A COMPLETE ASSEMBLY. START BY PLACING THE LIFT ARM IN AND WORKING THE LIFT ARM UP AND AROUND BETWEEN THE MACHINE WALL AND BAR "A" AS SHOWN.

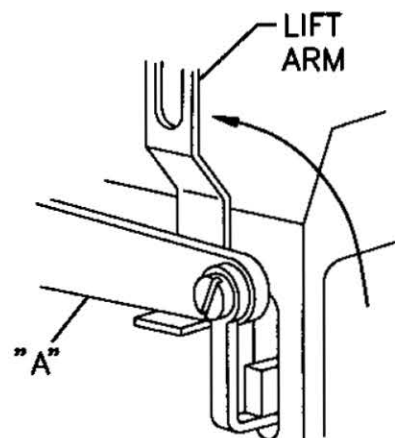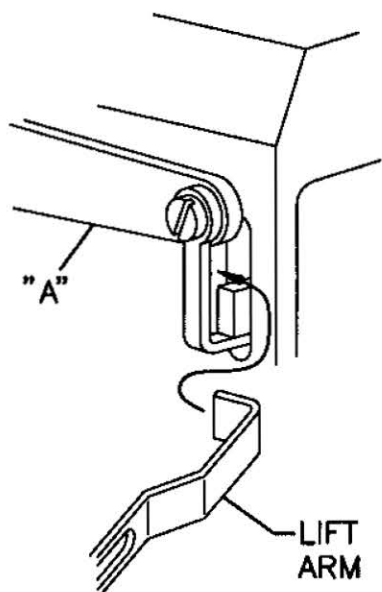


ADJUSTMENTS

WARNING!!

TO PREVENT SERIOUS INJURY, DISCONNECT AIR SUPPLY BEFORE MAKING ANY ADJUSTMENTS.

STEP 3


MOUNT VERTICAL SHEAR CUTTER WITH THE (4) EXISTING SCREWS

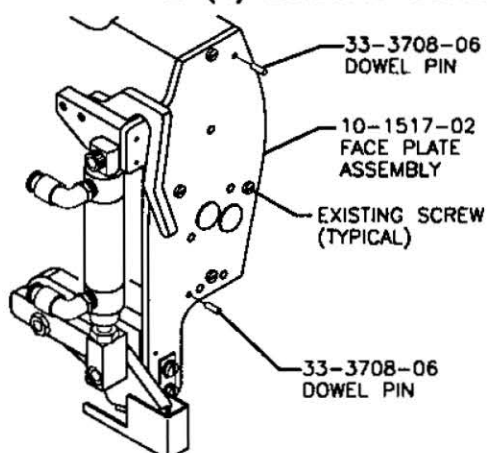

NOTE: LATER WHEN THE CUTTER IS INSTALLED COMPLETELY ALONG WITH THE STATIONARY BLADE AND ALL THE ADJUSTMENTS HAVE BEEN MADE AND THE CUTTER IS WORKING PERFECTLY, USE THE DRILLS PROVIDED TO DRILL HOLES FOR THE DOWEL PINS USING THE FACE PLATE HOLES AS THE TEMPLATE. USE DRILL #33 (30-1070-01) FOR THE PILOT HOLES FIRST, 3/16" DEEP. THEN USE 1/8" DIA. (30-2376-08), SAME DEPTH 3/16".

STEP 4

ADJUSTING THE MOVABLE BLADE

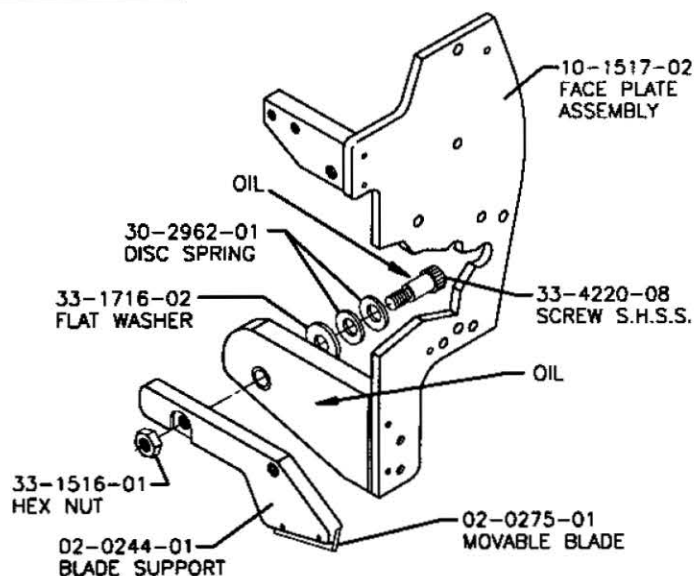


SHOULDER SCREW 33-4220-08 SHOULD BE SCREWED INTO THE BLADE SUPPORT, FINGER TIGHT. THE HEX NUT 33-1516-01 IS USED TO LOCK IN THE ADJUSTED CONDITION.


STEP 5**ADJUSTING THE STATIONARY BLADE**

IF THE BLADES ARE NOT TOUCHING EACH OTHER, LOOSEN THE THE (2) SCREWS 33-3210-08. THIS WILL ALLOW THE (2) TOP JACK SCREWS 33-2210-03 TO BE TURNED TO MAKE UP ANY ADJUSTMENT.

ADJUST THE (2) SCREWS 33-2210-03 ON THE RIGHT FOR THE RADIAL ADJUSTMENT OF THE FIXED BLADE AS SHOWN. RETIGHTEN THE (2) SCREWS 33-3210-08. TRY LOWERING THE MOVABLE BLADE SLOWLY (WITHOUT THE AIR BEING ON) FOR TESTING THE SHEARING ACTION. IT MAY REQUIRE SEVERAL ADJUSTMENTS TO GET EXACTLY YOUR CUTTING NEEDS.

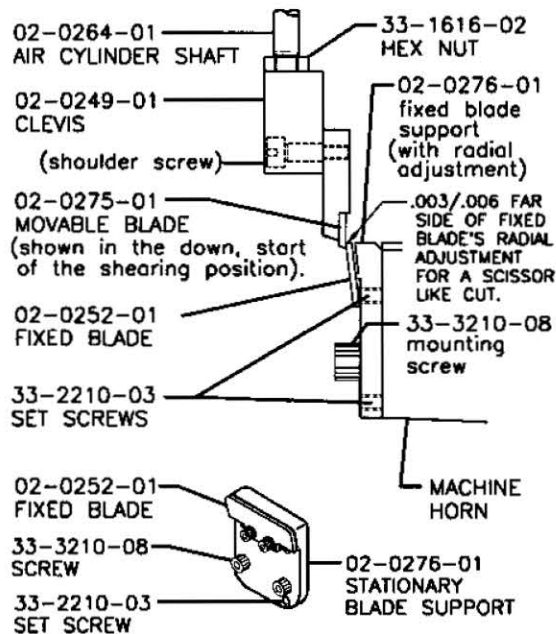**AIR CIRCUIT DIAGRAM**


MODEL 117VS KS
MODEL 117VS F.O.R.G.-KS

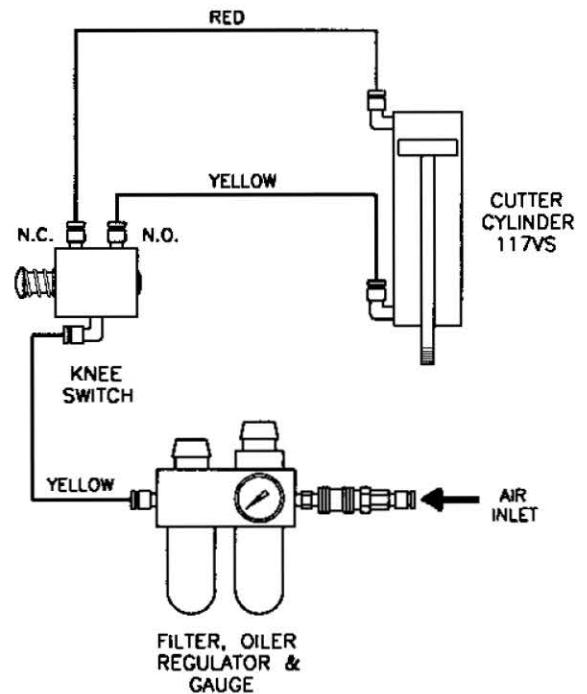

INS-570-3D

FILTER, OILER, REGULATOR, GAUGE ASSEMBLY

80-0181-01
80-0181-10

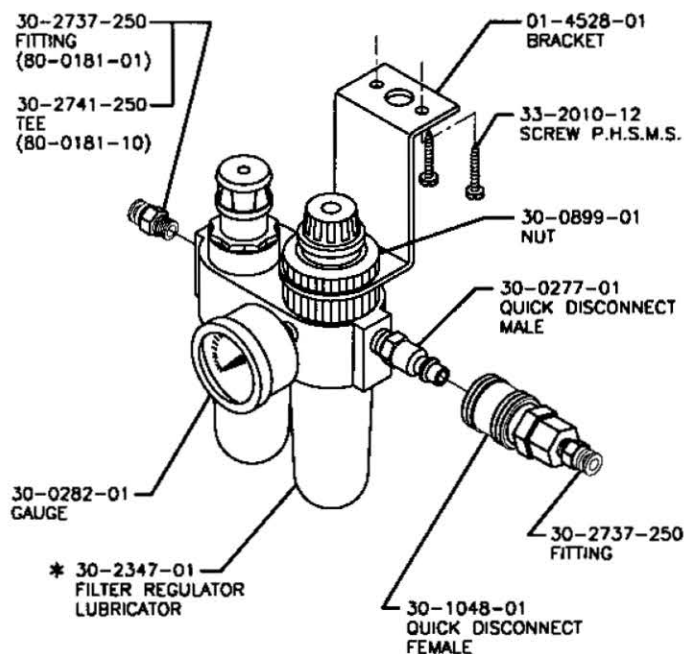


* NOTE: SEE INS-DRAWINGS 2100-1 AND 2100-2 FOR SPARE PARTS

INS-619-1A

4 WAY AIR VALVE, KNEE OPERATED

80-0185-01

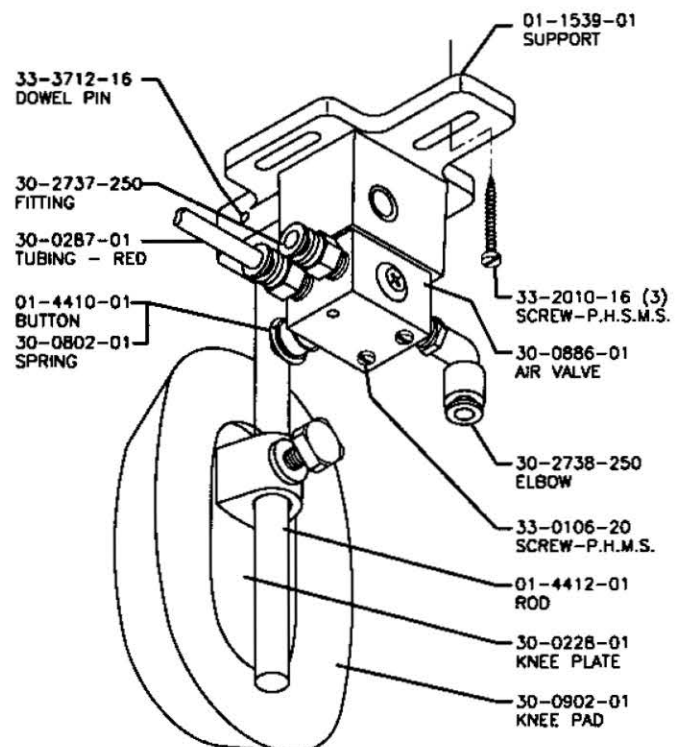

CUTTER ASSEMBLY

MODEL 117VS
SINGER 261
80-0539-02

