


**FINEST QUALITY**

*Union Special*<sup>®</sup>  
LEWIS • COLUMBIA

**INDUSTRIAL  
SEWING  
MACHINES**

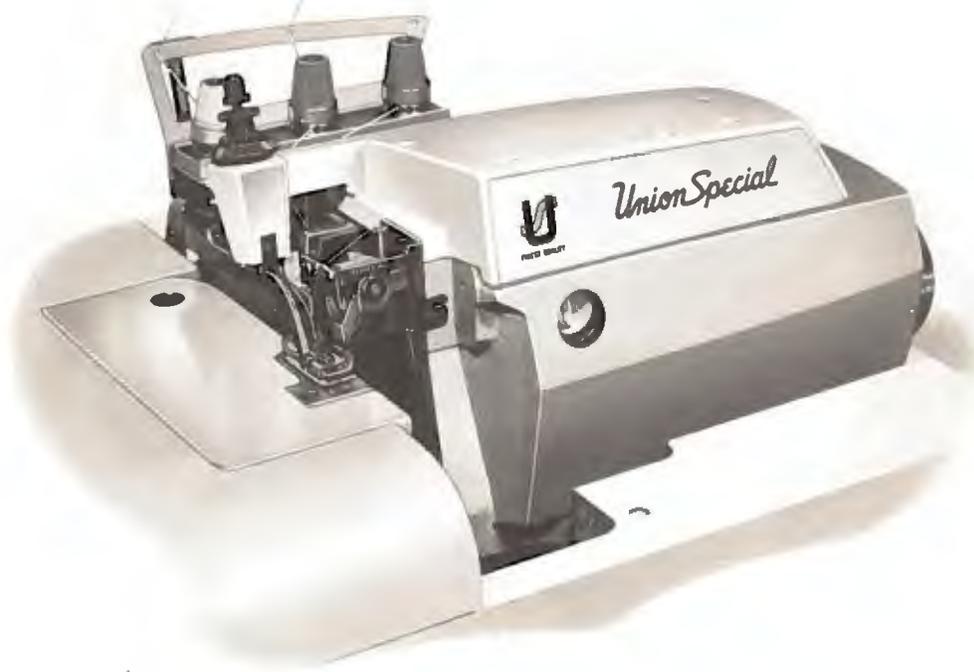

- STYLES**  
39500FS  
39500FT  
39500FU  
39500GD  
39500GL  
39500GT  
39500JP  
39500MM

**CLASS 39500**

**HI-STYLED  
HIGH SPEED OVERSEAMERS  
WITH**

**INTERMITTENT DIFFERENTIAL FEED**

**CATALOG  
No.  
103FS**

**SECOND  
EDITION**

*Union Special* CORPORATION  
CHICAGO

From the library of: Superior Sewing Machine & Supply LLC

# Here are Oil Specifications for Union Special Sewing Machines



**Specification 174** specifies a high quality petroleum oil, viscosity 100 seconds at 100°F. Recommended for all oiling applications on high speed machines.

**Specification 175** specifies a high quality petroleum oil, viscosity 100 seconds at 100°F., water white or with a maximum A.S.T.M. color number of 1. *For use where freedom from oil staining is paramount.*

**Specification 87** specifies a high quality petroleum oil, viscosity 300 seconds at 100°F.

**Specification 100** specifies a general purpose high quality grease for use in ball bearings and transmitters. It is similar to commercial N.L.G.I., grease No. 3. Where No. 3 grease is not obtainable, No. 2 may be used.

## UNION SPECIAL

SPECIFICATION NO.	174	175	87
Viscosity S.S.U. at 100°F	90-125	90-125	300-350
Flash (Min.)	350	350	350
Pour (Max.)	20	20	20
Color A.S.T.M. (Max.)	3	1	3
Neutralization No. (Max.)	0.10	0.10	0.10
Viscosity Index (D & D Min.)	85	85	85
Compounding	None	None	None
Copper Corrosion (Max.)	1A	1A	1A
*Anline No.	175-225	175-225	175-225

\*Used with Buna N Rubber "O" Retainers

**NOTE 1:** The use of non-corrosive additives in oils meeting above classification is desirable but not essential. These may include:

1. Oxidation inhibitors
2. Rust inhibitors
3. Lubricity additives
4. Anti-oxidants
5. Film strength additives

These additives must be completely soluble in the oil and not removable by wick feeding nor shall they separate.

**NOTE 2:** Oils containing the following type additives shall not be used at any time:

1. Extreme pressure additives—corrosive
2. Tackiness or adhesive additives
3. Lead soap additives
4. Detergents

 **Union Special**<sup>®</sup>  
FINEST QUALITY  
**CORPORATION**

Catalog No. 103 FS

INSTRUCTIONS

FOR

ADJUSTING AND OPERATING

LIST OF PARTS

Class 39500

Styles

39500 FS	39500 GL
39500 FT	39500 GT
39500 FU	39500 JP
39500 GD	39500 MM

Second Edition

Copyright 1967

By

Union Special Corporation  
Rights Reserved in All Countries

*Union Special*  
**CORPORATION**  
INDUSTRIAL SEWING MACHINES  
**CHICAGO**

Printed in U. S. A.

October, 1973

## IDENTIFICATION OF MACHINES

Each Union Special machine is identified by a Style number on a name plate on the machine. Style numbers are classified as standard and special. Standard Style numbers have one or more letters suffixed, but never contain the letter "Z". Example: "Style 39500 FS". Special Style numbers contain the letter "Z". When only minor changes are made in a standard machine, a "Z" is suffixed to the standard Style number. Example: "Style 39500 FSZ".

Styles of machines similar in construction are grouped under a Class number which differs from the Style number in that it contains no letters. Example: "Class 39500".

## APPLICATION OF CATALOG

This catalog applies specifically to the standard Styles of machines as listed herein. It can also be applied with discretion to some Special Styles of machines in Class 39500. References to directions, such as right, left, front, back, etc., are given from the operator's position while seated at the machine. Operating direction of handwheel is away from operator.

## STYLES OF MACHINES

Hi-Style High Speed, One or Two Curved Blade Needles, Two Looper, Three or Four Thread Overseaming Machine. Intermittent Differential Feed, Trimming Mechanism with Spring Pressed Lower Knife, Automatic Lubricating System.

39500 FS Single needle three thread, medium to heavy duty machine, for seaming and intermittently gathering or shirring on woven and knit materials such as dresses, aprons, lingerie, smocks, nightgowns and similar garments. Knee press controlled tandem intermittent differential feed. Slotted presser foot to separate top and bottom plies. Gathering ratio up to 3 to 1 depending on stitch length. Seam specification 504-SSa-1. Standard width of seam 1/8 inch (3.17 mm). Stitch range 8-20 per inch. Cam adjusted main and differential feeds. Maximum recommended speed 6000 R. P. M.

39500 FT Single needle three thread, medium to heavy duty machine, for seaming and intermittently gathering or shirring on woven and knit materials such as dresses, aprons, lingerie, smocks, nightgowns and similar garments. Knee press controlled tandem intermittent differential feed. Independent swing-out pressure plate attachment for shirring. Gathering ratio up to 3 to 1 depending on stitch length. Seam specification 504-SSa-1. Standard width of seam 3/16 inch (4.76 mm). Stitch range 8-20 per inch. Cam adjusted main and differential feeds. Maximum recommended speed 6000 R. P. M.

39500 FU Single needle three thread, medium to heavy duty machine, for seaming and intermittently gathering or shirring on woven and knit materials such as dresses, aprons, lingerie, smocks, nightgowns and similar garments. Knee press controlled tandem intermittent differential feed. Presser foot bottom grooved for 1/8 inch cord. Independent swing-out pressure plate attachment for shirring. Gathering ratio up to 5 to 1 depending on stitch length. Seam specification 504-SSa-1. Standard width of seam 3/16 inch (4.76 mm). Stitch range 8-20 per inch. Cam adjusted main and differential feeds. Maximum recommended speed 5500 R. P. M.

39500 GD Two needle four thread, medium to heavy duty machine, for seaming and intermittently gathering or shirring on woven and knit materials such as dresses, aprons, lingerie, smocks, nightgowns and similar garments. Knee press controlled tandem intermittent differential feed. Independent swing-out pressure plate attachment for shirring. Gathering ratio up to 3 to 1 depending on stitch length. Seam specification 512-SSa-1. Standard width of seam from left needle 17/64 inch (6.75 mm). Stitch range 8-20 per inch. Cam adjusted main and differential feeds. Maximum recommended speed 6000 R. P. M.

## STYLES OF MACHINES (Continued)

- 39500 GL Two needle four thread, medium to heavy duty machine, for seaming and intermittently gathering or shirring on woven and knit materials such as dresses, aprons, lingerie, smocks, nightgowns and similar garments. Knee press controlled tandem intermittent differential feed. Independent swing-out pressure plate attachment for shirring. Gathering ratio up to 5 to 1 depending on stitch length. Seam specification 512-SSa-1. Standard width of seam from left needle  $17/64$  inch (6.75 mm). Stitch range 8-20 per inch. Cam adjusted main and differential feeds. Maximum recommended speed 5500 R.P.M.
- 39500 GT Single needle three thread, medium to heavy duty machine, for seaming and intermittently gathering or shirring on all types of cotton, dacron, rayon and silk fabrics where a  $3/32$  inch (2.38 mm) turned down hem is desired. Knee press controlled tandem intermittent differential feed. Presser foot has a short curler stitch tongue. Independent swing-out pressure plate attachment for shirring. Gathering ratio up to 3 to 1 depending on stitch length. Seam specification 504-EFe-1 inverted. Standard width of seam  $3/32$  inch (2.38 mm). Stitch range 10-20 per inch. Cam adjusted main and differential feeds. Maximum recommended speed 6000 R.P.M.
- 39500 JP Single needle three thread, light to medium duty machine, with operator adjusted intermittent differential feed for seaming and trimming all types and weights of flat, warp and ribbed knit cotton, wool, rayon and silk fabrics where long straight seams are necessary. Thumbscrew feed which allows either reversed or forward differential feeding. Seam specification 504-SSa-1. Standard width of seams  $3/32$  and  $1/8$  inch (2.38 and 3.17 mm). Stitch range 8-30 per inch. Cam adjusted main and differential feeds. Maximum recommended speed 6000 R.P.M.
- 39500 MM Single needle three thread, medium to heavy duty machine, for seaming and intermittent gathering or shirring on woven and knit materials such as dresses, aprons, lingerie, smocks, nightgowns and similar garments. Knee press controlled tandem intermittent differential feed. Independent swing-out pressure plate attachment for shirring. Gathering ratio up to 5 to 1 depending on stitch length. Seam specification 504-SSa-1. Standard width of seam  $3/16$  inch (4.76 mm). Stitch range 8-20 per inch. Cam adjusted main and differential feeds. Maximum recommended speed 5500 R.P.M.

## OILING

**CAUTION!** Oil was drained from machine when shipped, so reservoir must be filled before beginning to operate. Oil capacity of Class 39500 is six ounces. A straight mineral oil of a Saybolt viscosity of 90 to 125 seconds at 100° Fahrenheit should be used.

Machine is filled with oil at spring cap in top cover. Oil level is checked at sight gauge on front of machine. Red bulb on oil level indicator should show between gauge lines when machine is stationary.

Machine is automatically lubricated. No oiling is necessary, other than keeping main reservoir filled. Check oil daily before the morning start; add oil as required.

The oil drain plug screw is located at back of machine near bottom edge of base. It is a magnetic screw designed to accumulate possible foreign materials which may have entered the crank case. It should be removed and cleaned periodically.

## NEEDLES

Each Union Special needle has both type and size number. The type number denotes the kind of shank, point, length, groove, finish and other details. The size number, stamped on the needle shank, denotes largest diameter of blade, measured in thousandths of an inch, midway between shank and eye. Collectively, type and size number represent the complete symbol which is given on the label of all needles packaged and sold by Union Special.

Class 39500 machines use a curved blade needle. The standard recommended needle for Styles 39500 FS, FT, FU, GD, GL, JP and MM is Type 154 GAS, while the standard needle for Style 39500 GT is Type 154 GBS. Below are the type numbers, description and sizes available of the recommended needles.

<u>Type No.</u>	<u>Description and Sizes</u>
154 GAS	Round shank, round point, curved blade, standard length, single groove, struck groove, spotted, chromium plated and is available in sizes 022, 025, 027, 029, 032, 036, 040, 044, 049, 054, 060.
154 GBS	Round shank, round point, curved blade, standard length, double groove, struck groove, spotted, chromium plated and is available in sizes 027, 029, 032.

To have needle orders promptly and accurately filled, an empty package, a sample needle, or the type and size number should be forwarded. Use description on label. A complete order would read: "1000 Needles, Type 154 GAS, Size 027".

Selection of the proper needle size is determined by size of thread used. Thread should pass freely through needle eye in order to produce a good stitch formation.

Success in the operation of Union Special machines can be secured only by use of needles packaged under our brand name, *Union Special*, which is backed by a reputation for producing highest quality needles in materials and workmanship for more than three-quarters of a century.

## CHANGING NEEDLES

Release pressure on presser foot by turning presser foot release bushing (AG, Fig. 1 and 1A) and swing presser arm (U) out of position. Turn handwheel in operating direction until needle is at its lowest point of travel. Using hexagonal socket wrench No. 21388 AU, furnished with machine, loosen needle clamp nut about 1/4 turn. Again turn handwheel until needle is at high position; withdraw needle.

To replace needle, leave needle holder at high position and, with the flat to the left, insert needle in holder until it rests against stop pin. Keeping needle in this position, turn handwheel until holder is again at its low point of travel, then tighten nut. Return presser arm (U) to position; re-lock presser foot release bushing (AG).

## THREAD STAND (504 STITCH)

After thread comes from cones on cone support (A, Fig. 1), it is brought up through back hole of thread eyelet (B), then down through the front hole of thread eyelet. Next it is threaded through the upper holes of tension thread guide (C) from front to back and then through the lower holes from back to front. It should be noted that the lower looper thread is threaded through the tension thread guide (C), first through the upper hole back to front, second through the middle hole front to back and third through the lower hole back to front. All threads then continue between the tension discs (J), through tension post slot (K) in tension post (G) and on through front thread guide (M).

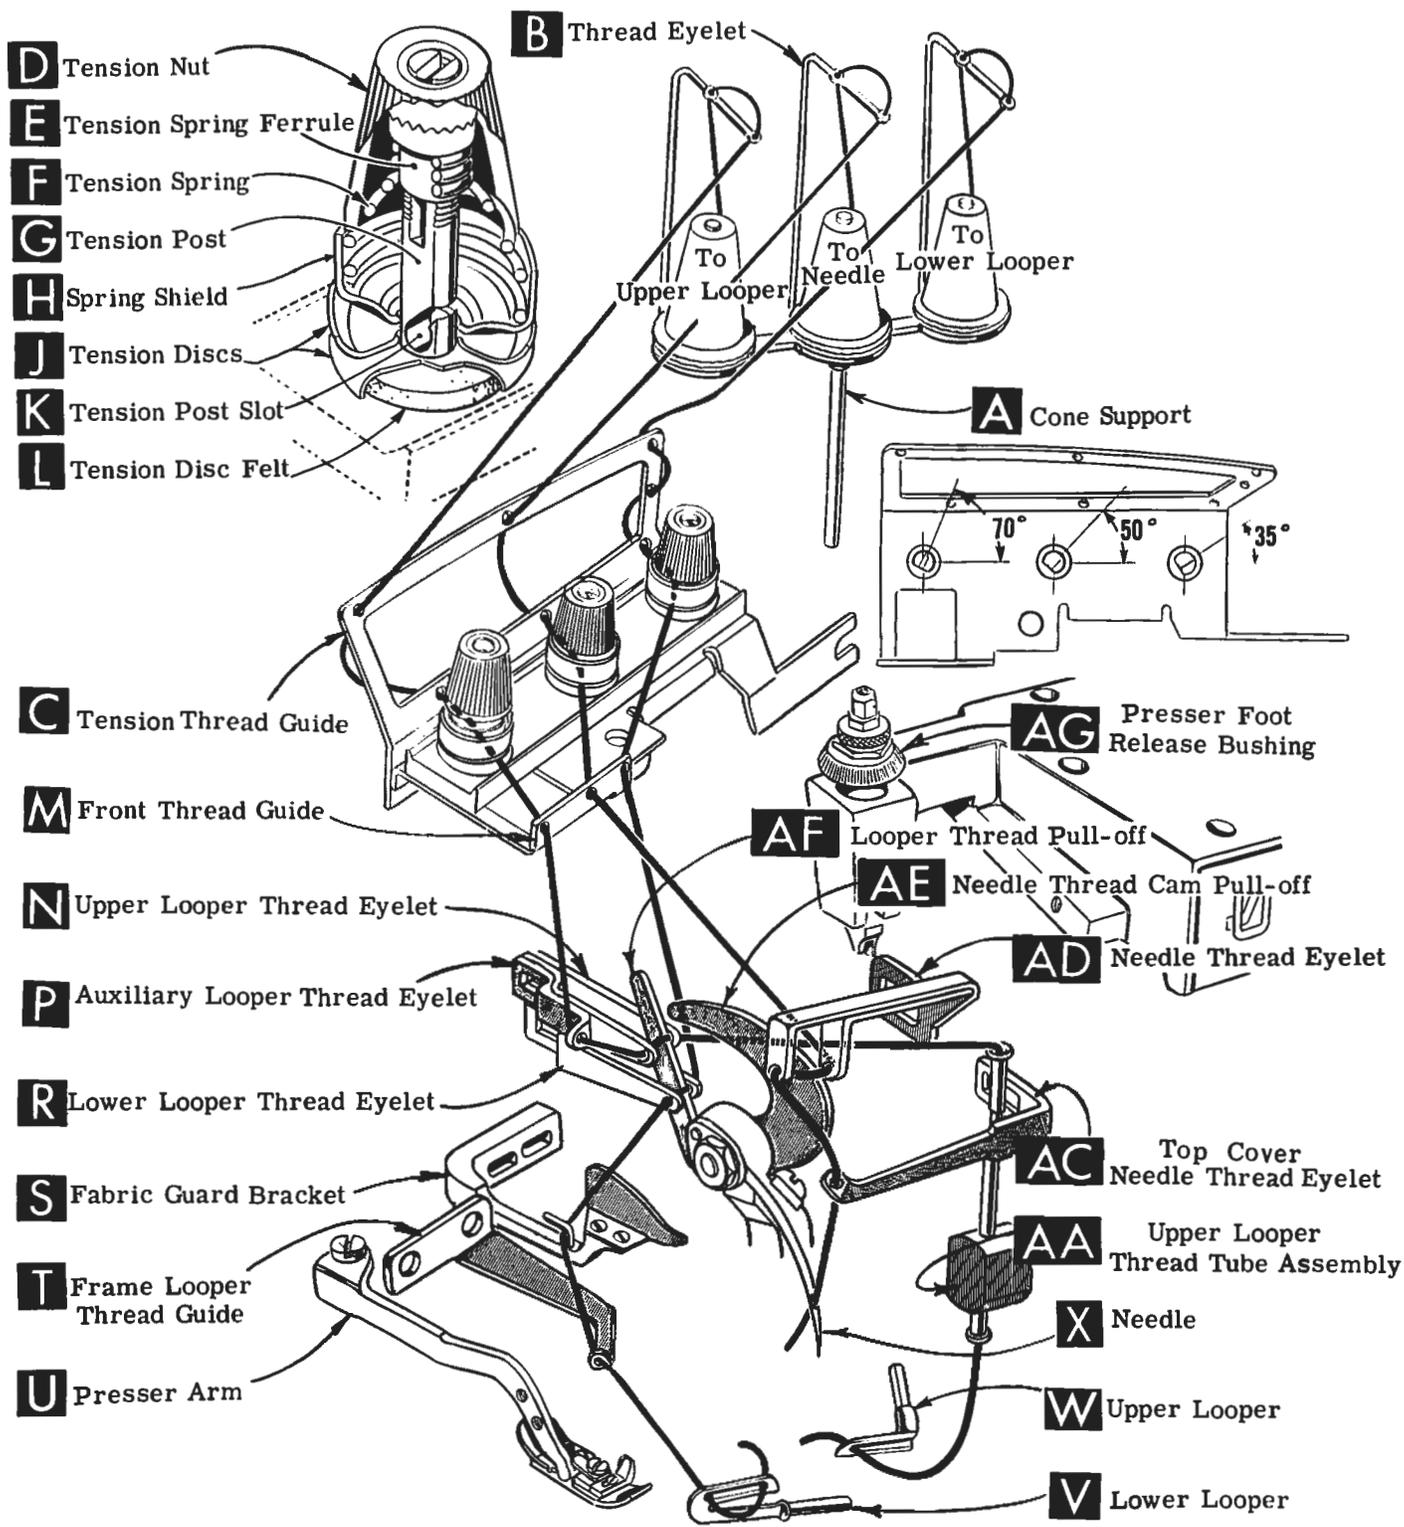


Fig. 1

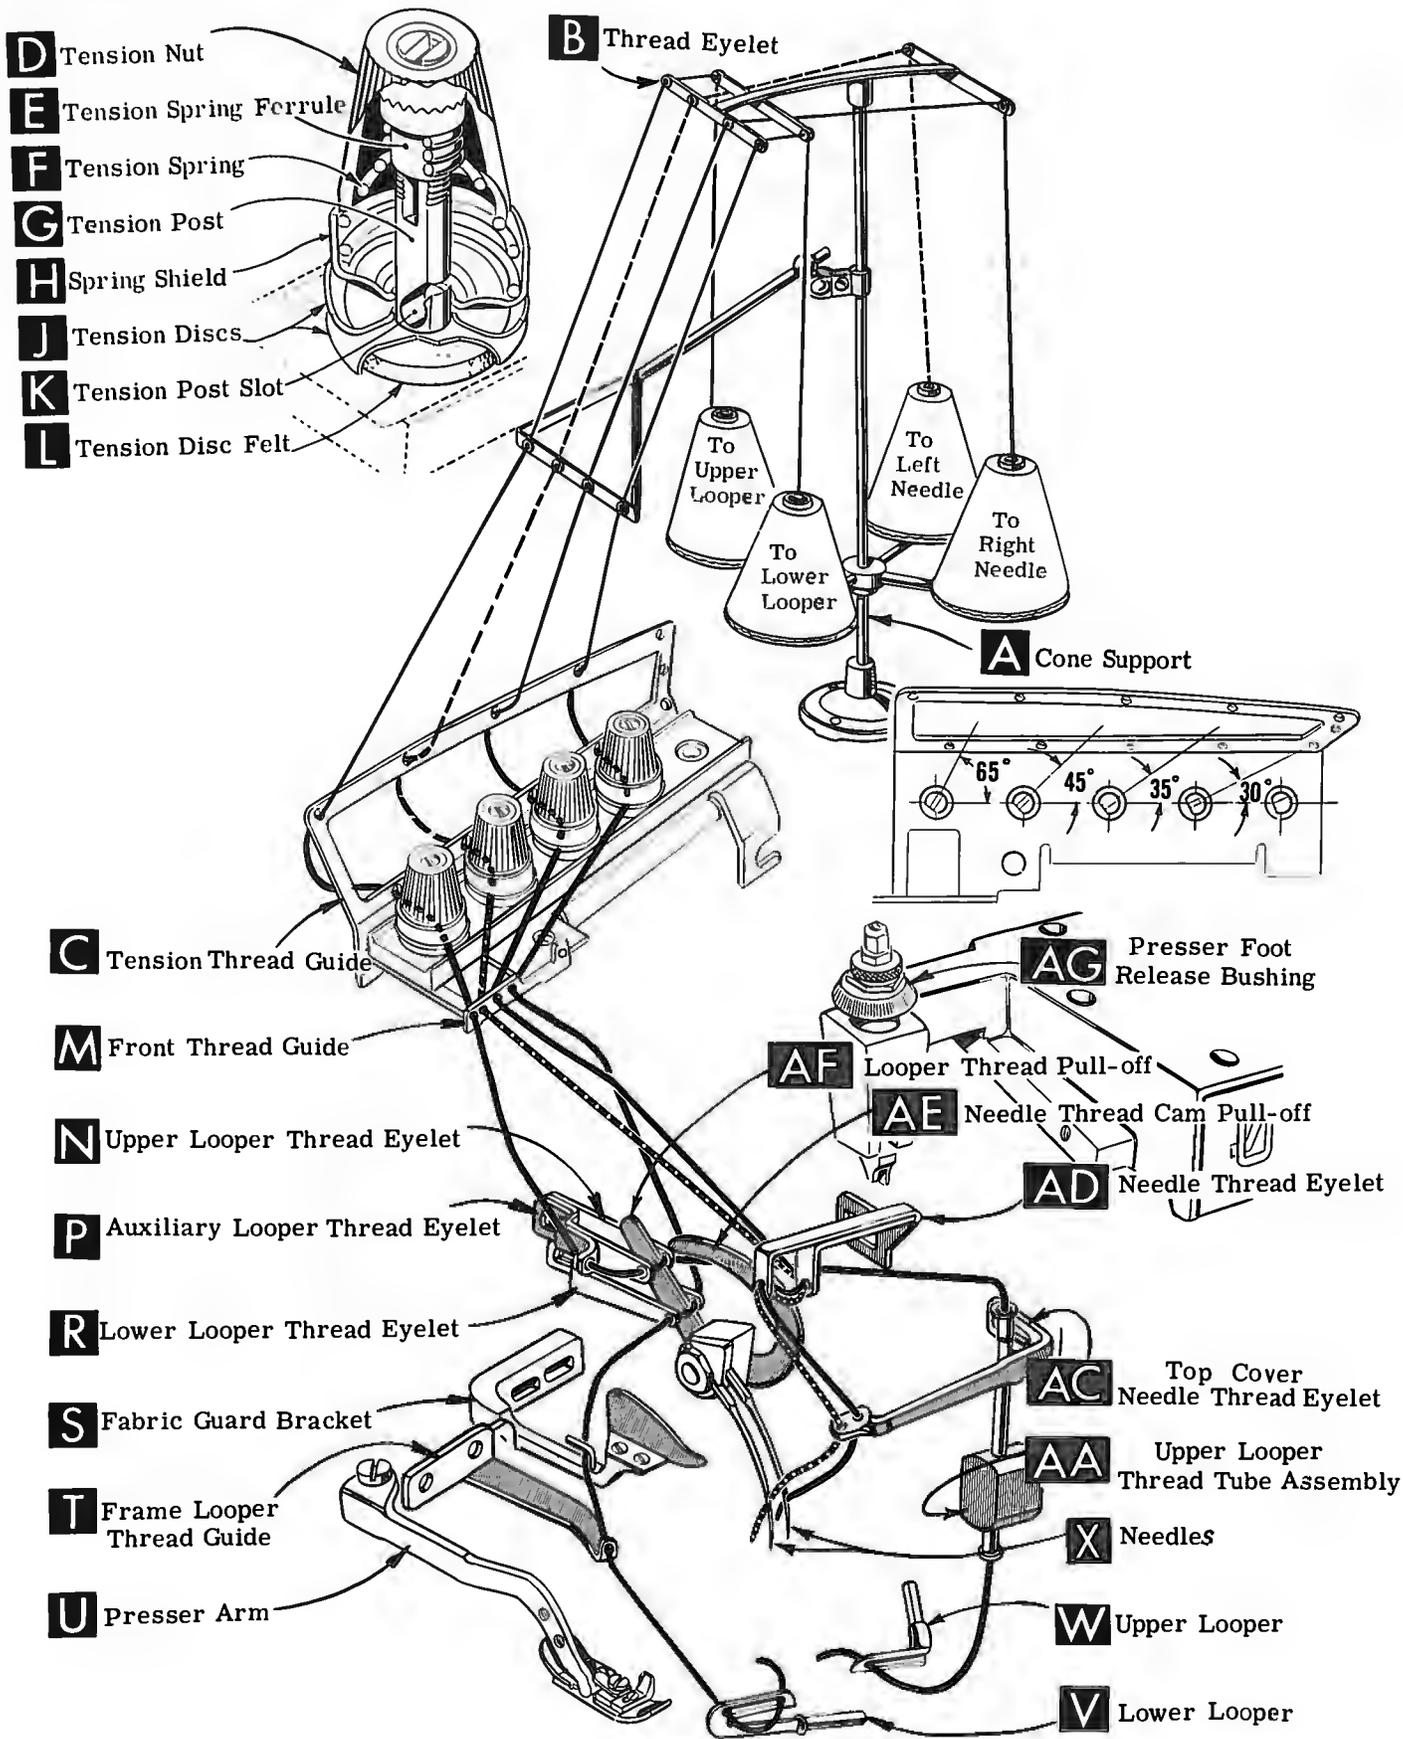


Fig. 1A

## THREAD STAND (512 STITCH)

After thread comes from cones on cone support (A, Fig. 1A), the needle threads are threaded through the back bar of the thread eyelet (B), under the middle bar and through the center holes of the front bar. The looper threads come from the cones, through holes of the middle bar from back to front and then through the two outside holes of the front bar. Next it is threaded through the upper holes of tension thread guide (C) front to back and then through the lower holes from back to front. The threads continue between the tension discs (J), through tension post slot (K) in tension post (G) and on through front thread guide (M).

NOTE: Refer to Fig. 1 for threading Styles 39500 FS, FT, FU, GT, JP and MM, or refer to Fig. 1A for threading Styles 39500 GD and GL.

### THREADING

Only parts involved in threading are shown in threading diagrams (Fig. 1 and 1A). Parts are placed in their relative positions for clarity.

It will simplify the threading of these machines to follow the recommended sequence of threading lower looper first, upper looper second, and needle or needles third.

The threading in Fig. 1 and Fig. 1A are the same, the only difference will be the threading of two needle threads in Fig. 1A as compared to one needle thread in Fig. 1. The additional needle in Fig. 1A moves the lower looper thread tension post to the right.

Before beginning to thread, swing cloth plate open, turn handwheel in operating direction until needle (X) is in high position, release pressure on presser foot by turning presser foot release bushing (AG), and swing presser arm (U) out of position.

Be sure the threads, as they come from the tension thread guide (C), are between the tension discs (J) and in tension post slot (K) in tension post (G). The tension posts should be positioned so the tension post slot will be at the approximate angle for the different threads as indicated in Fig. 1 and 1A.

### TO THREAD LOWER LOOPER

Double end of thread and lead it through both eyes of lower looper thread eyelet (R, Fig. 1 or 1A) from right to left. NOTE: Thread must pass in front of looper thread pull-off (AF). Lead thread behind fabric guard (S) and through hole of frame looper thread guide (T). Turn handwheel in operating direction until heel of lower looper (V) is all the way to the left; then thread through both eyes from left to right. Left eye of lower looper can be threaded easily if tweezers are in left hand.

### TO THREAD UPPER LOOPER

Turn handwheel until point of upper looper (W) is all the way left. Lead thread through auxiliary looper thread eyelet (P) from back to front, then through both eyes of upper looper thread eyelet (N) from left to right. NOTE: Thread must pass in front of looper thread pull-off (AF). After pulling up upper looper thread tube assembly (AA), lead thread under neck of top cover casting and down through thread tube assembly (AA). Pull thread out bottom of tube; push tube down, then insert thread through upper looper eye from front to back.

CAUTION! Be sure upper looper thread is under lower looper thread when passing from tube assembly to upper looper eye.

## TO THREAD THE NEEDLE

Turn handwheel in operating direction until needle or needles (X, Fig. 1 or 1A) is at its highest position. Insert needle thread or threads from right to left, through both eyes of needle thread eyelet (AD), under neck of top cover casting; and then down through hole or holes in top cover needle thread eyelet (AC). Thread needle from front.

## THREAD TENSION

The amount of tension on needle and looper threads is regulated by tension nuts (D, Fig. 1 or 1A). Tension on threads should be only enough to secure proper stitch formation.

## PRESSER FOOT PRESSURE

Sufficient presser foot pressure to feed work uniformly should be maintained. Should it be necessary to increase or decrease amount of pressure on presser foot, loosen lock nut (A, Fig. 2) and turn adjusting screw (B). Adjusting screw has a right hand thread so tightening increases pressure, loosening decreases pressure. When pressure adjusting screw (B) has been properly set, tighten lock nut (A). With presser foot resting on throat plate, position locking nut (C) so that its under surface is approximately 1/32 inch to 1/16 inch (.79 to 1.59 mm) from the top surface of adjusting screw (B). Set cap (D) against locking nut (C).



Fig. 2

## FEED ECCENTRICS

Feed eccentrics used in Style 39500 FS machines have been selected to produce approximately 14 stitches per inch. It will be noted that the part number of main feed eccentric is No. 39540 B-14 while that of the differential feed eccentric is No. 39540 B-4. Minor numbers of the part symbol indicate approximately the number of stitches obtainable when using that eccentric. Unless otherwise specified, machine will be shipped with above combination of eccentrics. Refer to exploded views for eccentrics used on the other styles of machines covered in this catalog.

Generally speaking, the main (right hand) feed eccentric determines the number of stitches produced; the differential (left hand) feed eccentric is selected so as to give the proper differential or gathering action.

Following stitch number feed eccentrics are available under No. 39540 B-4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 18, 20, 22, 24, 26, 28, 30, 32, 34, 36, 40. Only two eccentrics are supplied with each machine. Additional eccentrics may be ordered separately. To order an eccentric, use No. 39540 B with a minor number suffixed to indicate number of stitches desired. Example: "39540 B-14".



Fig. 3

## ASSEMBLING AND ADJUSTING SEWING PARTS

Before assembling and adjusting sewing parts, remove cloth plate, fabric guard, chip guard, upper knife assembly, lower knife holder assembly, then follow this suggested sequence.

## SETTING THE NEEDLE

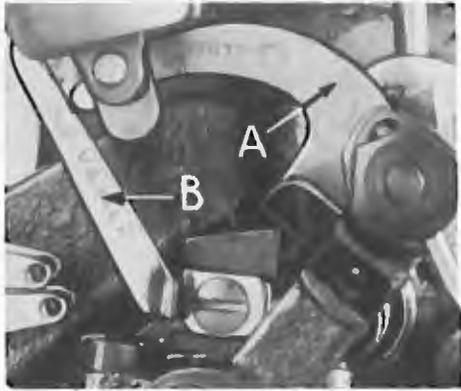


Fig. 4

With throat plate assembled in position, needle should center in the front end of needle slot. When needle is at high position, needle point should be set 1/2 inch (12.70 mm) above throat plate (A, Fig. 3) for Styles 39500 FS, FT, FU, GT, JP and MM; 15/32 inch (11.91 mm) for Styles 39500 GD and GL. To align needle or set the height above the throat plate, move needle driving arm (B, Fig. 3) by loosening clamp screw (C). After needle has been set properly, tighten clamp screw and remove throat plate.

If needle thread cam pull-off (A, Fig. 4) overlaps looper thread pull-off (B), separate by moving looper thread pull-off back. When retightening looper pull-off screw, be sure to take up end play

in needle driving arm.

At this point, insert lower looper (A, Fig. 5) into bar (B). With lower looper at left end of its stroke, set looper point 1/8 inch (3.17 mm) from center of needle (Fig. 5), using looper gauge No. 21225-1/8, on Styles 39500 FS, FT, FU, GT, JP and MM. On Styles 39500 GD and GL, with lower looper at left end of its stroke, set looper point 1/16 inch (1.59 mm) from center of left needle, using looper gauge No. 21225-1/16. Do not have lower looper deflecting needle. Tighten nut (C). Now assemble differential (front) feed dog.

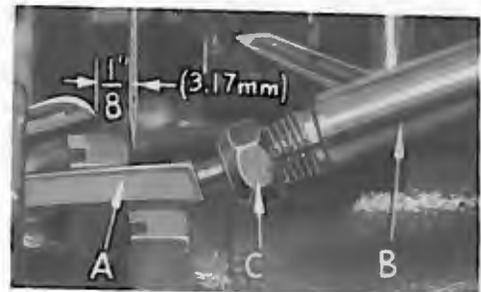


Fig. 5

## SETTING THE REAR NEEDLE GUARD

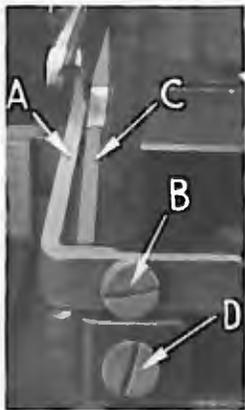


Fig. 6

Set rear needle guard (A, Fig. 6) as high as possible, without interfering with either lower looper or movement of lower knife holder, but still in position to deflect needle or needles forward .002-.004 inch (.051-.102 mm). Screw (B) is used to set rear needle guard. Make sure there is no interference between rear needle guard and lower looper.

## SETTING THE LOWER LOOPER

Now finish lower looper adjustment. As lower looper moves to the right, its point should be set into the needle scarf (A, Fig. 7) until the needle springs forward from rear

needle guard surface another .002-.004 inch (.051-.102 mm). Tighten nut (C, Fig. 5) securely.

## SETTING THE FRONT NEEDLE GUARD

Assemble front needle guard (C, Fig. 6). When lower looper is springing needle off rear needle guard, set front needle guard as close as possible to needle without touching. Screw (D) is used to adjust and set front needle guard. After this setting make sure there is no interference between needle guards and differential feed dog.



Fig. 7

## SETTING THE UPPER LOOPER

Insert upper looper (A, Fig. 8) in its holder. Screw (B), holds upper looper in its holder, and permits it to be pushed in or out or turned around its shank. Insert upper looper holder into upper looper shaft, if it is not already in place. Screw (C), on clamp holds the upper looper holder in the shaft. Locate upper looper in its holder so that the shank extends  $1/16$  to  $3/32$  inch (1.59 to 2.38 mm) beyond holder (Fig. 8) on Styles 39500 FS, FT, FU, GD, GL, GT and MM.



Fig. 8

NOTE: On Style 39500 JP the shank should extend  $1/32$  to  $1/16$  inch (.79 to 1.59 mm) beyond holder.

When the upper looper is at the right end of its stroke, upper looper holder should be set to position upper looper shank approximately vertical on Styles 39500 FS, FT, FU, GT and MM (Fig. 8).



Fig. 9

NOTE: On Styles 39500 GD, GL and JP the upper looper holder should be set to position upper looper shank slightly back of vertical when the upper looper is at right end of its stroke. Be sure on all styles, there is a clearance between heel of looper and casting. By adjusting looper holder in or out of upper looper shaft and by turning the looper around its shank, set upper looper point to cross lower looper to the left of the lower looper eye with .002 to .004 inch (.051 to .102 mm) clearance (Fig. 9).

As the upper looper moves toward the top of its stroke, the heel of the upper looper should pass behind the lower looper head with  $1/64$  to  $1/32$  inch (.40 to .79 mm) clearance.

Next, turn handwheel until looper is at the left end of its travel; check dimensions of upper looper point with respect to needle and throat plate (Fig. 10). If resetting is necessary, do it by moving the upper looper holder (A, Fig. 10). Figure 10 represents the dimensional setting for Styles 39500 FS, FT, FU, GT and MM.

NOTE: For Style 39500 JP, the settings are  $5/32$  and  $31/64$  inch (3.97 and 12.30 mm). For Styles 39500 GD and GL, the settings are  $1/8$  inch (3.17 mm) to the left of right needle and  $17/32$  inch (13.49 mm). For example dimension  $1/2$  inch (12.70 mm) is increased by turning upper looper holder counterclockwise looking from left end of machine; dimension  $9/64$  inch (3.57 mm) is increased by pulling upper looper holder to the left, out of upper looper shaft. After these changes are made, it may be necessary to turn upper looper around its shank slightly to maintain the condition shown in Fig. 9.

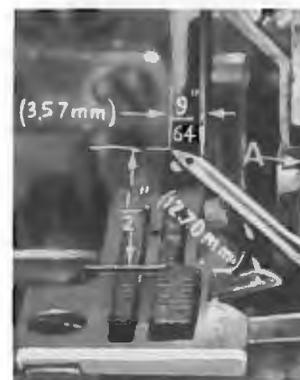


Fig. 10



Fig. 11

When the correct setting is obtained, it can be checked quickly as follows: As upper looper is moving to the right, when upper looper eye centers on the needle, the eyes of the upper looper and needle should align exactly (Fig. 11).

## SETTING THE UPPER LOOPER (Continued)

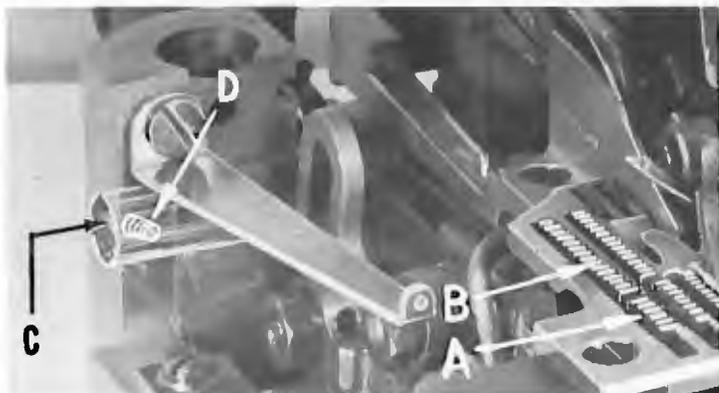


Fig. 12

Check setting to avoid interference between upper looper and needle on needle downstroke. If needle rubs the back of upper looper, pull looper out of its holder slightly and rotate looper a short distance counterclockwise, looking from left end of machine. Reset to maintain dimensions of Figs. 9, 10, 11.

## SETTING THE FEED DOGS

Now assemble differential feed dog (A, Fig. 12) if not already on machine. Assemble main feed dog

(B) and set both feeds so the top surfaces of the teeth all lie in the same plane. This can be checked by sighting across the teeth with a straightedge. Now assemble throat plate. Feed dogs should now be leveled with throat plate surface by rotating feed tilting adjusting pin (C). This pin raises or lowers the back end of both feed bars at the same time.

The feed dogs should be set level at the time teeth first appear above the throat plate. Screw (E) locks feed tilting adjusting pin in place. Now set feed dogs so that teeth rise about  $3/64$  inch (1.19 mm) above throat plate. The differential feed may be set slightly higher if desired.

NOTE: On Style 39500 JP, set the chaining feed dog level with the top of throat plate when feed is at the top of its travel.

## SETTING THE LOWER KNIFE

Replace lower knife holder assembly. Lower knife (A, Fig. 13) should be set with cutting edge flush with throat plate surface. Adjustments are made with hexagonal head screw which holds lower knife. Lower knife is spring pressed against upper knife, so no lateral adjustment is necessary when width of trim is changed.

Lower knife may be secured in any position by tightening screw (B) and locking nut (C) against support bracket. Because screw (B) also serves as latch pin for the cloth plate latch spring, it should always be locked with nut (C) even when screw is not tightened against lower knife holder.

## SETTING THE UPPER KNIFE

Replace upper knife assembly. Clamp upper knife (D, Fig. 13) in position, setting nut (E) to hold clamp (F) in its most clockwise position against upper knife. Upper knife chain guard (G) should be positioned so that the guarding section is approximately  $1/64$  inch (.40 mm) behind the cutting edge and in contact with the top surface of the upper knife.



Fig. 13

## SETTING THE UPPER KNIFE (Continued)

At the bottom of its stroke, front cutting edge of upper knife should extend not less than 1/64 inch (.40 mm) below cutting edge of lower knife.

After upper knife has been set for proper width of trim, screw (H) must be tightened to lock the upper knife holding block (J) in place. This will simplify resetting when upper knife is replaced.

## SETTING THE STITCH LENGTH

Length of stitch is determined by the combination of feed eccentrics used. Outer (left) eccentric (A, Fig. 14) actuates differential (front) feed dog; while the inner (right) eccentric (B) actuates the main (rear) feed dog.

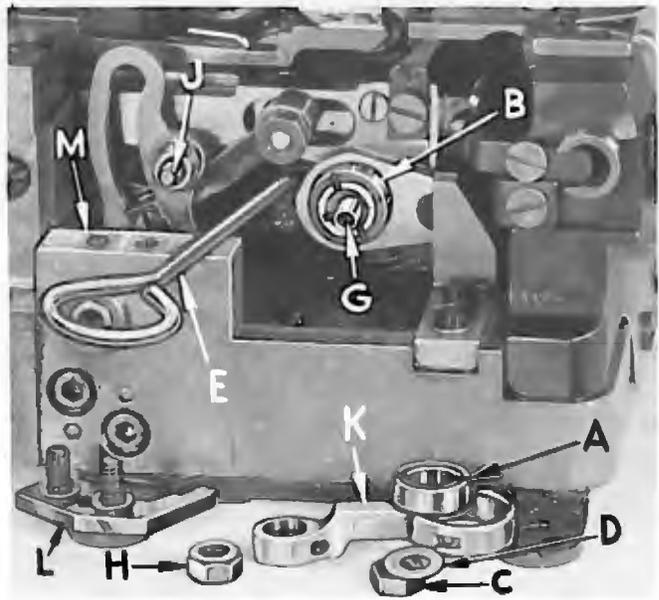


Fig. 14

In assembling feed eccentrics, be sure hubs are facing each other. Be careful not to damage shaft or key. Use nut (C) and washer (D) and tighten securely.

To change feed eccentric, remove thrust finger (L) from its seat on the main frame (M). Remove nut (C) and washer (D) from end of shaft (G). Remove nut (H) from stud (J). Link (K) and eccentric (A) will now slip off.

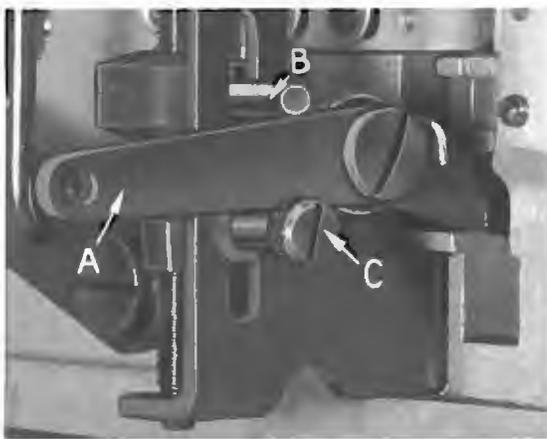


Fig. 15

Using hooked eccentric extractor (E), supplied with machine, reach behind eccentric (B) as shown and withdraw eccentric. It may be necessary to move handwheel back and forth slightly during extraction. When reassembling allow .003 inch (.076 mm) clearance between the thrust finger and the differential feed drive, connecting rod in a 360° turn.

## SETTING THE DIFFERENTIAL RATIO

Differential feed action is obtainable thru the use of one micrometer adjusting screw on Style 39500 JP and two micrometer adjusting screws on Styles 39500 FS, FT, FU, GD, GL, GT and MM.

The position of the differential control lever (A, Fig. 15 and 15A) is governed by an upper and a lower stop. The amount of lever movement between these two stops determines the feed action.

## SETTING THE DIFFERENTIAL RATIO (Continued)

On Style 39500 JP, rotating the one adjusting thumbscrew (located near the tension post assembly) in a clockwise direction increases the differential action by moving the upper stop (B) down, a counterclockwise turn acts in a reverse manner. Now set the lower stop screw (C) so as to obtain the required intermittent differential feed. On Style 39500 JP, the two stops may be reversed to meet a specific sewing requirement.

**NOTE:** After lower stop screw has been set, push differential control lever down, hold in this position and turn handwheel in operating direction to be sure the differential feed dog does not strike the throat plate.



Fig. 15A

On Styles 39500 FS, FT, FU, GD, GL, GT and MM the differential feed action is also controlled by the movement of the differential control lever between an upper and a lower stop, but on these machines both stops are moved by an adjusting thumbscrew rod (Fig. 15A).

To set the amount of differential or plain feed, turn the plain feed control adjusting rod, it is the larger knurled head screw located on the bed in back of the tension post assembly. Turning this rod clockwise decreases the amount of differential and turning it counterclockwise increases the amount of differential.

The amount of intermittent differential feed is set by turning the differential feed control adjusting rod, it is the smaller knurled head screw located just above the plain feed control adjusting rod. Turning this screw clockwise lowers the stop and thus increases the amount of differential, when the differential feed control lever, is actuated. Turning this screw counterclockwise acts the reverse.

## SETTING THE PRESSER FOOT

Assemble the presser foot to presser arm. With needle in high position, swing presser arm into sewing position and set the presser foot to align needle holes (front and back) and flat on throat plate.

The front edge of needle hole in presser foot must be aligned with front edge of needle hole in throat plate. It is also important that the bottom of the presser foot be flat on the throat plate. If necessary, presser foot can be realigned with throat plate slots by shifting the foot lifter lever shaft (H, Fig. 16). To move the shaft, loosen collar screws (B, Fig. 16) and clamp screw (G) and then shift the foot lifter lever shaft to the left or right as required. Retighten collar screws and clamp screw.

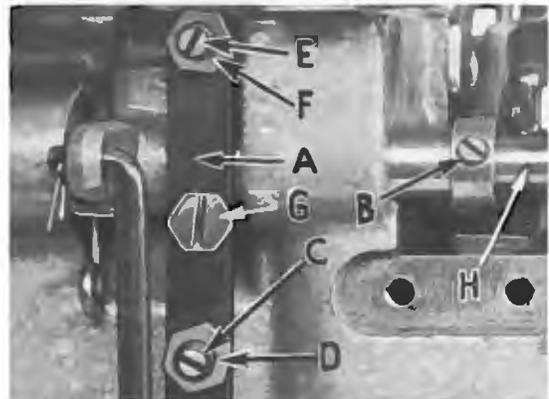


Fig. 16

## SETTING THE PRESSER FOOT (Continued)

The foot lifter lever arm (A, Fig. 16) and the collar (B) secure the shaft. Be sure the presser arm does not bind or rise when presser foot release bushing is unlocked.

Adjust lifter lever stop screw (C) so that presser foot can be raised no higher than upper looper will permit; then lock the nut (D). There should be from 1/16 to 1/8 inch (1.59 to 3.17 mm) free motion of foot lifter lever before the presser foot begins to rise. This adjustment should be made with screw (E) and locked with nut (F). Re-assemble the chip guard, fabric guard and cloth plate. To assemble chip guard, turn handwheel until upper knife assembly reaches its highest position.

## SETTING THE PRESSER FOOT HOLD DOWN PLATE

Styles 39500 FT, FU, GD, GL, GT and MM are equipped with a presser foot hold down plate (A, Fig. 17). The purpose of this plate is to hold down the rear of the presser foot and when set correctly it will help produce a more flat pucker free seam. An approximate setting is shown in Fig. 17. Set the machine with the feed dogs below the throat plate and insert a .005 inch (.127 mm) shim (B) under the front portion of presser foot (C). Loosen screws (D) which hold the hold down plate in position and move the plate down until it rests firmly against the presser foot. Tighten the two screws and remove the shim.

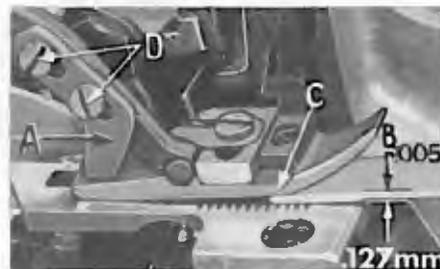


Fig. 17

NOTE: Always be sure the feed dogs are below surface of throat plate when making this setting.

## SETTING THE PRESSURE PLATE ASSEMBLY (FOR STYLES 39500 FT, FU, GD, GL, GT and MM)

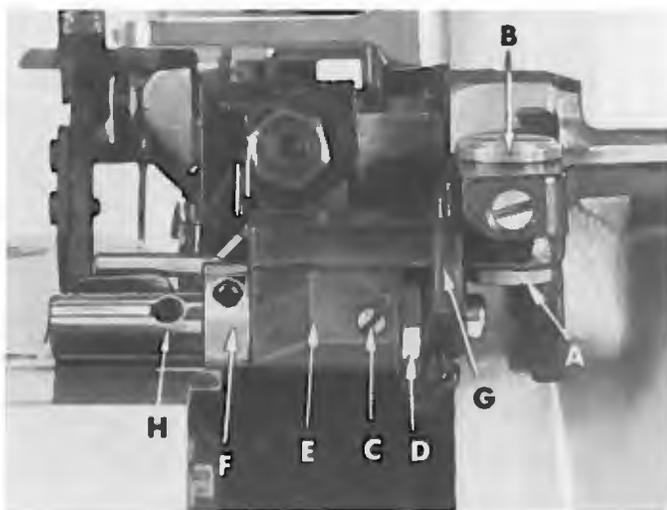


Fig. 18

1. Swing the pressure plate assembly in and out of its operating position and check to assure that it hinges freely on its pivot. If not, loosen lock nut (A, Fig. 18) and adjust shoulder screw (B) for smooth operation.
2. Loosen set screw (C, Fig. 18) and turn the shaft collar (D) counter-clockwise (viewed from the left side of machine) using the spanner wrench provided, so there is some tension on the tension spring located in the shaft bracket (E) and the pressure plate (A, Fig. 19) is forced down slightly.
3. Adjust tension spring, located in the mounting bracket (B, Fig. 19)

with inner screw, after removing outer screw (C). Spring should be tight enough to allow assembly to snap into place and still allow the mechanism to swing out easily. Lock inner screw with outer screw (C).

4. With the feed dogs down, look horizontally between the pressure plate and the throat plate from the front of the machine to assure that the pressure plate lies flat on the throat plate. If not, loosen the two screws (D, Fig. 19) which hold the pressure plate (A) and adjust flat to the throat plate.

SETTING THE PRESSURE PLATE ASSEMBLY (FOR STYLES  
39500 FT, FU, GD, GL, GT and MM) (Continued)

5. Raise or lower the mounting bracket (B, Fig. 19) by loosening screws (E) so that, from the side, the pressure plate is parallel and flat on the throat plate. Retighten screws (E).
6. Adjust screw (F, Fig. 19) so that the front edge of the pressure plate is square to the feed dog teeth. Lock with screw (G).

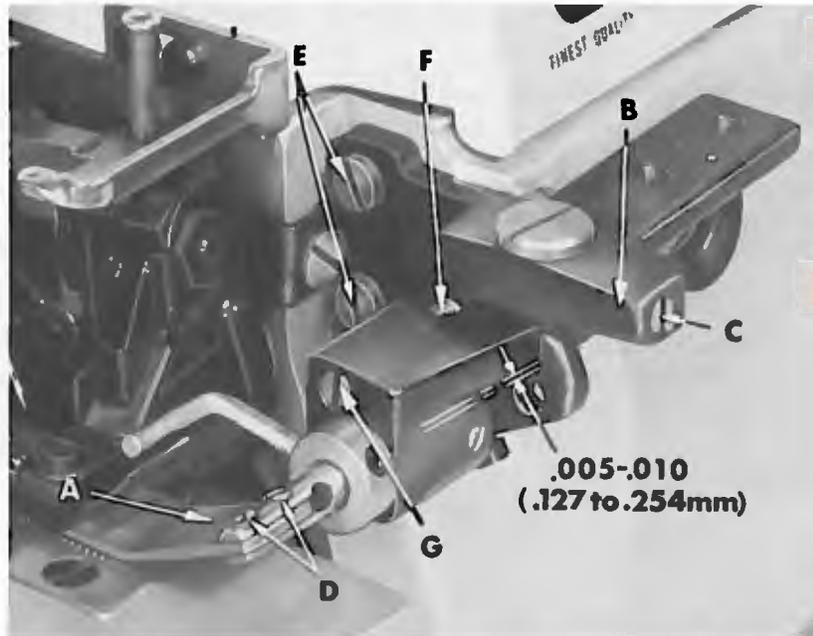


Fig. 19

7. Center pressure plate over the feed dogs by loosening the screws in the actuating collar (F, Fig. 18) and the operating lever (G), and then adjust shaft (H) laterally as required.
8. When retightening operating lever screw make sure that the feed dogs and the pressure plate are down, then tighten operating lever screw leaving approximately .005 to .010 inch (.127 to .254 mm) clearance (See Fig. 19) between operating lever and shaft bracket (E, Fig. 18).
9. With feed dogs up, check from the left side to see if the clearance between the pressure plate and the presser foot is wide enough to allow the largest seam pass. If not, adjustment can be made by loosening screws (E, Fig. 19) and moving the mounting bracket (B) straight toward the operator. Retighten screws (E). Recheck Step 4.
10. The actuating collar (F, Fig. 18) should now be set so that, throughout one revolution of the machine, the minimum distance between the lifter rod and the presser foot is 1/32 inch (.79 mm). The lifter rod should be set to clear the tip of the presser foot if it is important that the shirring mechanism can be swung away without moving the presser foot away first.
11. Loosen set screw (C, Fig. 18) for final adjustment of pressure plate tension spring. Turn shaft collar (D) with spanner wrench until desired tension is acquired to obtain a uniform shirr. Retighten set screw (C).

## NEEDLE THREAD CONTROL

While sewing on material, check needle thread control as follows: Usually all needle thread is drawn on needle down stroke. At top of needle stroke, thread should be just tight enough to feed chain off stitch tongue. Stitch tends to pull down slightly if excessive thread is pulled on the up stroke. With needle at bottom of stroke, position needle thread eyelet (AD, Fig. 1 or 1A) so that needle thread cam pull-off (AE) just contacts needle thread.

## LOWER LOOPER THREAD CONTROL

With material under presser foot, set lower looper thread eyelet (R, Fig. 1 or 1A) back far enough so thread is a little slack when looper thread pull-off (AF) reaches its most rearward position. Looper thread pull-off (AF) is set about 1/8 inch (3.17 mm) distance behind needle thread cam pull-off (AE). Frame looper thread guide (T) should be set with its eyelet approximately 1/8 inch (3.17 mm) right of lower looper (V) heel eyelet at the time lower looper is at extreme left end of its travel.

While sewing on material, check drawing off of looper thread as follows: A portion of lower looper thread should be drawn through the tension before lower looper thread comes off upper looper. To increase amount of thread drawn through the tension while lower looper thread is on upper looper, move lower looper thread eyelet (R) down, keeping the same amount of pull-off action.

## UPPER LOOPER THREAD CONTROL

Before proceeding to adjust upper looper thread eyelet (N, Fig. 1 or 1A) balance all three or four tensions to give a normal appearing stitch. Moderate change in these tensions will not markedly affect the purl.

During needle down stroke, forward stroke of looper thread pull-off (AF) will draw upper looper thread through the tension. When normal amount of looper thread is drawn, upper looper thread will have almost all slack taken up as looper thread pull-off reaches its most rearward position.

## POSITIONING THE PURL

To move the purl more under the edge, both looper thread eyelets (N and R, Fig. 1 or 1A) should be raised keeping the same amount of pull-off. Usually it is better to have slightly more pull-off on upper thread than on lower thread.

If it becomes necessary to move looper thread pull-off (AF), be sure to take up all end play in needle drive shaft before tightening. If upper looper is located so that it is higher over throat plate than recommended in (Fig. 10), the purl will tend to form near top edge. If upper looper is too low, the purl will form nearer bottom edge.

## THREAD TENSIONS

The needle thread tension required is a function of needle thread and material being sewn. In general, lower looper thread tension should be set as high as possible without causing needle thread to be pulled down. Upper looper thread tension should be increased as long as the elasticity of the chain increases, or until the purl is pulled too far over the top.

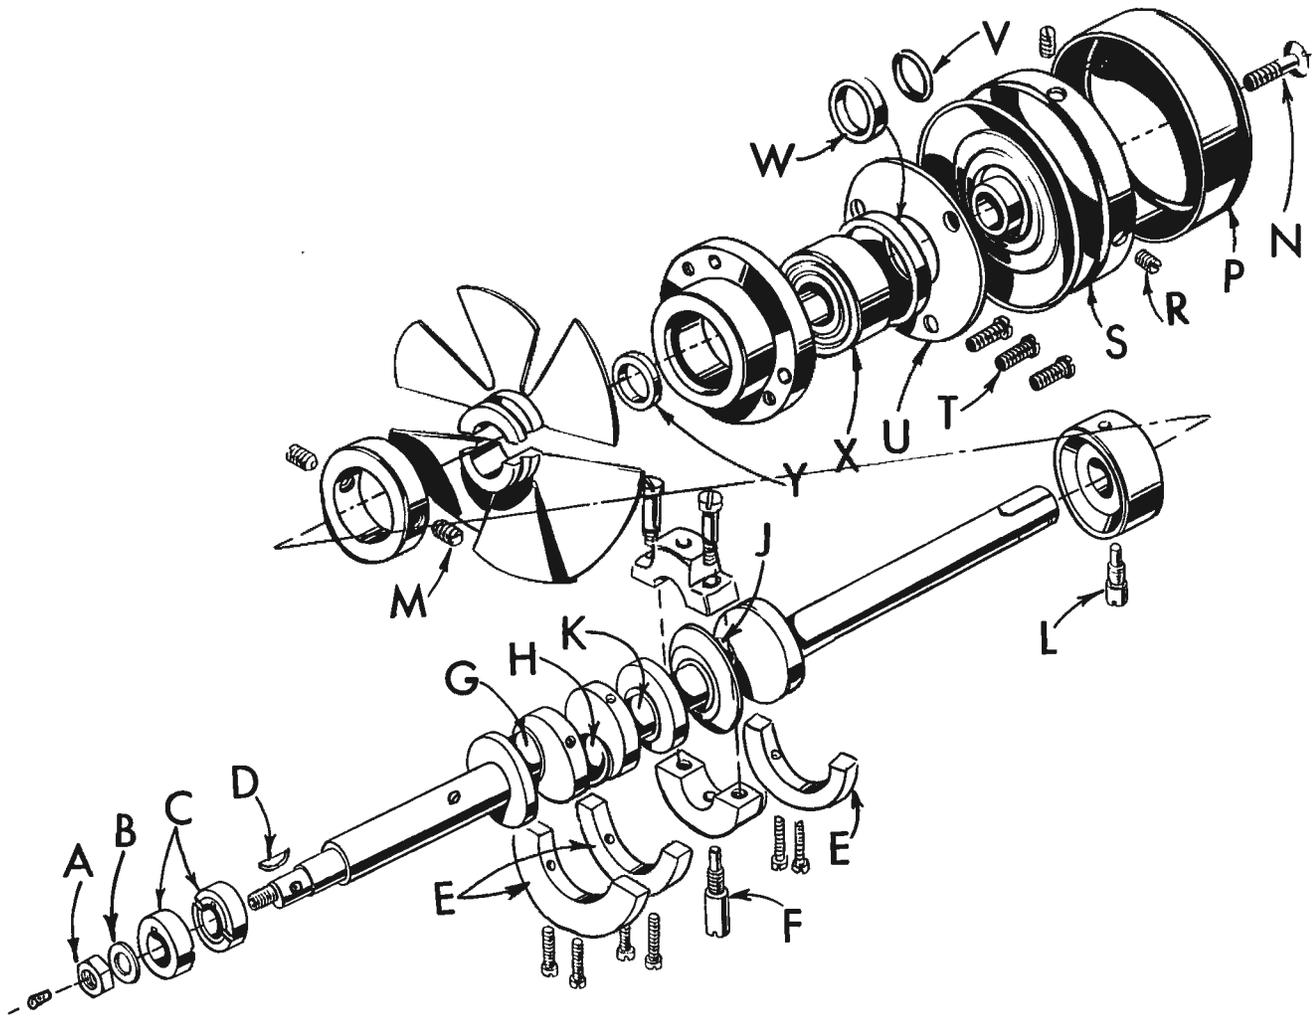


Fig. 20

TO REMOVE CRANKSHAFT

Crankshaft can be withdrawn easier if these steps are followed:

1. Drain oil by removing plug screw located on back of machine near bottom edge of base.
2. Remove top and bottom covers of machine.
3. Remove feed eccentric nut (A, Fig. 20) and washer (B), and, with the aid of the eccentric extractor, slip off the eccentrics (C).
4. Remove key (D).
5. Remove three counterweights (E). Identify these counterweights so that they will be re-assembled in the proper places.
6. Remove screw (F) which holds crankshaft split bearing. This screw is reached through bottom of bed casting.

## TO REMOVE CRANKSHAFT (Continued)

7. Remove caps of bearings on crankshaft at points G, H, and J. When re-assembling bearing caps make sure they are in their original position. Trade marks are stamped on both halves of the caps and both trade marks should be on the same side of the bearings. Also, screws should be re-assembled in the same holes from which they were removed.

8. Loosen clamp nut (A, Fig. 21) which holds upper knife driving arm (B). Access to clamp nut is through top cover. Draw driving arm to the left until upper knife driving lever (C) and connecting rod (D) drop, allowing removal of bearing cap (E). This is at bearing point (K, Fig. 20) on crankshaft. Observe same precautions when re-assembling cap as described in 7 above.

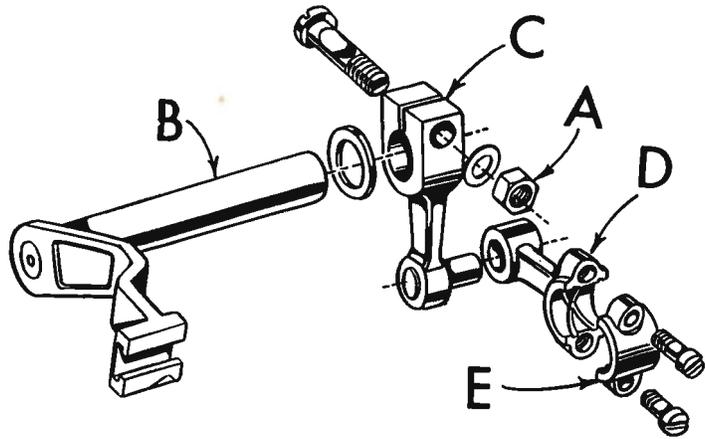


Fig. 21

9. Remove screw (L, Fig. 20) which holds inner right crankshaft bearing. This screw is reached through bottom of bed casting.
10. Loosen two screws (M) in fan collar; remove both halves of cooling fan.
11. Remove screw (N); take off pulley cap (P).
12. Loosen two screws (R); remove pulley (S).
13. Remove three screws (T); take off bearing retaining plate (U); also, spacer collars (V) and (W) may be removed at this time.
14. Crankshaft may now be removed.
15. If necessary to replace ball bearing (X), it should be pressed off shaft on an arbor press. In replacing bearing it must be pressed on carefully until it seats against ground thrust washer (Y).
16. Carefully observing reverse of the foregoing operations should simplify re-assembly of crankshaft. Checking exploded view drawings for location of various parts and constant testing for binds during re-assembly will also prove helpful.
17. Before re-assembling, thoroughly clean and dry top and bottom covers and gaskets. Before re-assembling bottom cover make sure that spring pressed oil wick which lubricates left crankshaft bearing is inserted in hole in casting and that it contacts shaft. The wick stands vertically on its spring against bottom cover. Coat oil drain plug with a sealing compound before re-assembling to prevent oil leakage. No. 1 Crane Lead Seal is recommended.

## ORDERING REPAIR PARTS

### ILLUSTRATIONS

This catalog has been arranged to simplify ordering repair parts. Exploded views of various sections of the mechanism are shown so that the parts may be seen in their actual position in the machine. On the page opposite the illustration will be found a listing of the parts with their part number, description, and the number of pieces required in the particular view being shown.

Numbers in the first column are reference numbers only, and merely indicate the position of that part in the illustration. Reference numbers should never be used in ordering parts. Always use the part number listed in the second column.

Component parts of sub-assemblies which can be furnished for repairs are indicated by indenting their descriptions under the description of the main sub-assembly. Example:

40	29126 DF	Lower Looper Bar Driving Lever and Connecting Rod Assembly-----	1
41	22729 D	Screw, for No. 39544 N -----	2
42	97	Screw, for No. 39544 S -----	2
43	39544 S	Ball Joint Guide Fork -----	1
44	39544 U	Lower Looper Bar Driving Lever -----	1
45	22729 E	Screw, for No. 39544 N -----	2

It will be noted in the above example that the eccentric, ball stud, and bearing are not listed. The reason is that replacement of these parts individually is not recommended, so complete sub-assembly should be ordered.

At the back of the book will be found a numerical index of all the parts shown in this book. This will facilitate locating the illustration and description when only the part number is known.

### IDENTIFYING PARTS

Where the construction permits, each part is stamped with its part number. On some of the smaller parts, and on those where the construction does not permit, an identification letter is stamped in to distinguish the part from similar ones.

Part numbers represent the same part, regardless of the catalog in which they appear.


### USE GENUINE NEEDLES AND REPAIR PARTS

Success in the operation of these machines can be secured only with genuine Union Special Needles and Repair Parts as furnished by the Union Special Corporation its subsidiaries and authorized distributors. They are designed according to the most approved scientific principles, and are made with utmost precision. Maximum efficiency and durability are assured.

Genuine needles are packaged with labels marked *Union Special*. Genuine repair parts are stamped with a reproduction of the familiar Union Special trademark. Each trademark is your guarantee of the highest quality in materials and workmanship.


### TERMS

Prices are net cash and are subject to change without notice. All shipments are forwarded f. o. b. shipping point. Parcel Post shipments are insured unless otherwise directed. A charge is made to cover postage and insurance.

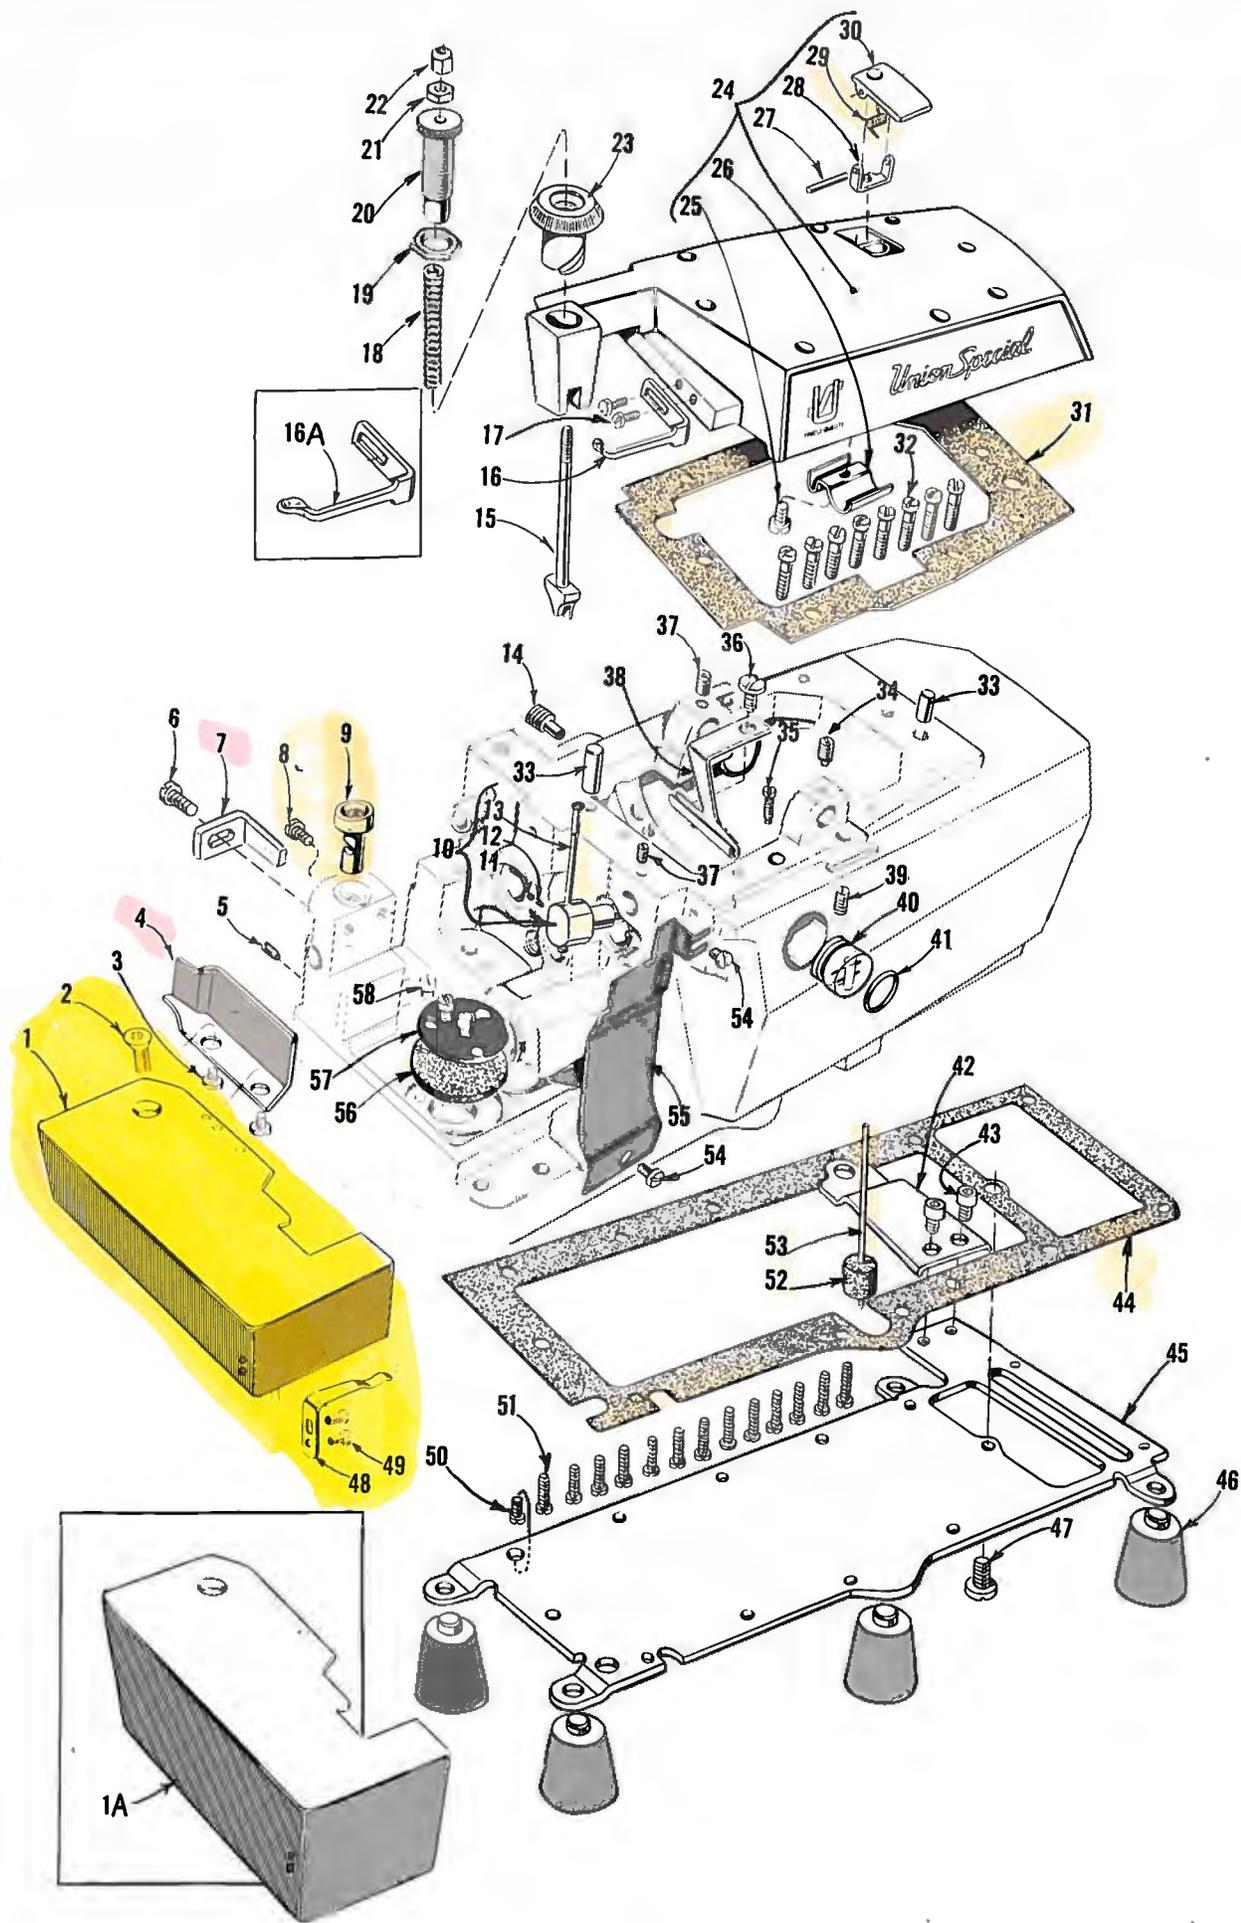

MAIN FRAME, MISCELLANEOUS COVERS AND PLATES


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1	39501 DC	Cloth Plate, for semi or fully submerged installation, for all Styles except 39500 JP -----	1
-	• 39501 D	Cloth Plate, for semi or fully submerged installation, for Style 39500 JP -----	1
1A	39501 EC	Cloth Plate, for non submerged installation, for all Styles except 39500 JP -----	1
-	39501 E	Cloth Plate, for non submerged installation, for Style 39500 JP -----	1
2	22657 D-12	Screw, for cloth plate -----	1
3	138	Screw, for cloth plate fabric guard -----	2
4	39578 K	Cloth Plate Fabric Guard -----	1
5	22565 F	Screw, for feed adjusting pin -----	1
6	22569 C	Screw, for feed bar guide -----	1
7	39535 H	Feed Bar Guide -----	1
8	22569	Screw, for cloth plate stud -----	1
9	• 39501 K	Cloth Plate Stud -----	1
10	29477 GW	Upper Looper Thread Tube Assembly -----	1
11	22743	Screw, for thread tube tension spring -----	1
12	39568 J	Thread Tube Tension Spring -----	1
13	39568 G	Thread Tube -----	1
14	22571 E	Magnetic Oil Drain Plug Screw -----	1
15	39557 A	Presser Spring Plunger -----	1
16	39563 F	Top Cover Needle Thread Eyelet, for Styles 39500 FS, FT, FU, GT, JP, MM -----	1
16A	39563 W	Top Cover Needle Thread Eyelet, for Styles 39500 GD, GL -----	1
17	22569 B	Screw, for top cover needle thread eyelet -----	2
18	39557	Presser Spring -----	1
19	39557 F	Lock Nut, for presser spring plunger adjusting screw -----	1
20	39557 C	Presser Spring Plunger Adjusting Screw -----	1
21	39557 E	Presser Spring Plunger Locking Nut -----	1
22	39557 B	Presser Spring Plunger Cap Nut -----	1
23	39556 A	Presser Foot Release Bushing -----	1
24	39582 AD	Top Cover, for Styles 39500 FS, FT, FU, GT, JP, MM -----	1
-	39582 AK	Top Cover, for Styles 39500 GD, GL -----	1
25	22562 A	Screw, for oil guard -----	1
26	39582 W	Oil Guard -----	1
27	51-103 Blk.	Hinge Pin -----	1
28	39582 AG	Hinge Bracket -----	1
29	39582 V	Spring -----	1
30	39582 AF	Oil Filler Cover -----	1
31	39582 AE	Top Cover Gasket -----	1
32	22541	Screw, for top cover -----	8
33	667 D-8	Dowel Pin -----	2
34	22565 S	Spot Screw, for upper looper drive lever shaft -----	1
35	22569 K	Screw, for oil sight gauge -----	1
36	22569 D	Screw, for oil collector plate -----	1
37	22565	Set Screw, for upper looper thread tube assembly and for upper looper drive lever shaft -----	2
38	39594 R	Oil Collector Plate -----	1
39	22894 AD	Screw, for lower looper bar driving lever shaft -----	2
40	39593 H	Oil Sight Gauge -----	1
41	660-243	Oil Gauge Seal Ring -----	1
42	39582 F	Bottom Cover and Base Plate Extension -----	1
43	22653 D-4	Screw, for bottom cover extension -----	2
44	39582 Y	Bottom Cover Gasket -----	1
45	39582 X	Bottom Cover -----	1
46	39595	Rubber Isolator -----	1
47	22586 R	Screw, for bottom cover -----	1
48	39532 A	Cloth Plate Latch Spring -----	1
49	90	Screw, for cloth plate latch spring -----	2
50	22569 C	Screw, for bottom cover -----	1
51	22569	Screw, for bottom cover -----	13
52	39593 C	Oil Gauge Float -----	1
53	39593 D	Oil Gauge Indicator -----	1
54	22569 D	Screw, for chip guard -----	2
55	39578 W	Chip Guard -----	1
56	39594 H	Oil Strainer -----	1
57	39594 G	Oil Filter Screen -----	1
58	22569 B	Screw, for oil filter screen -----	2

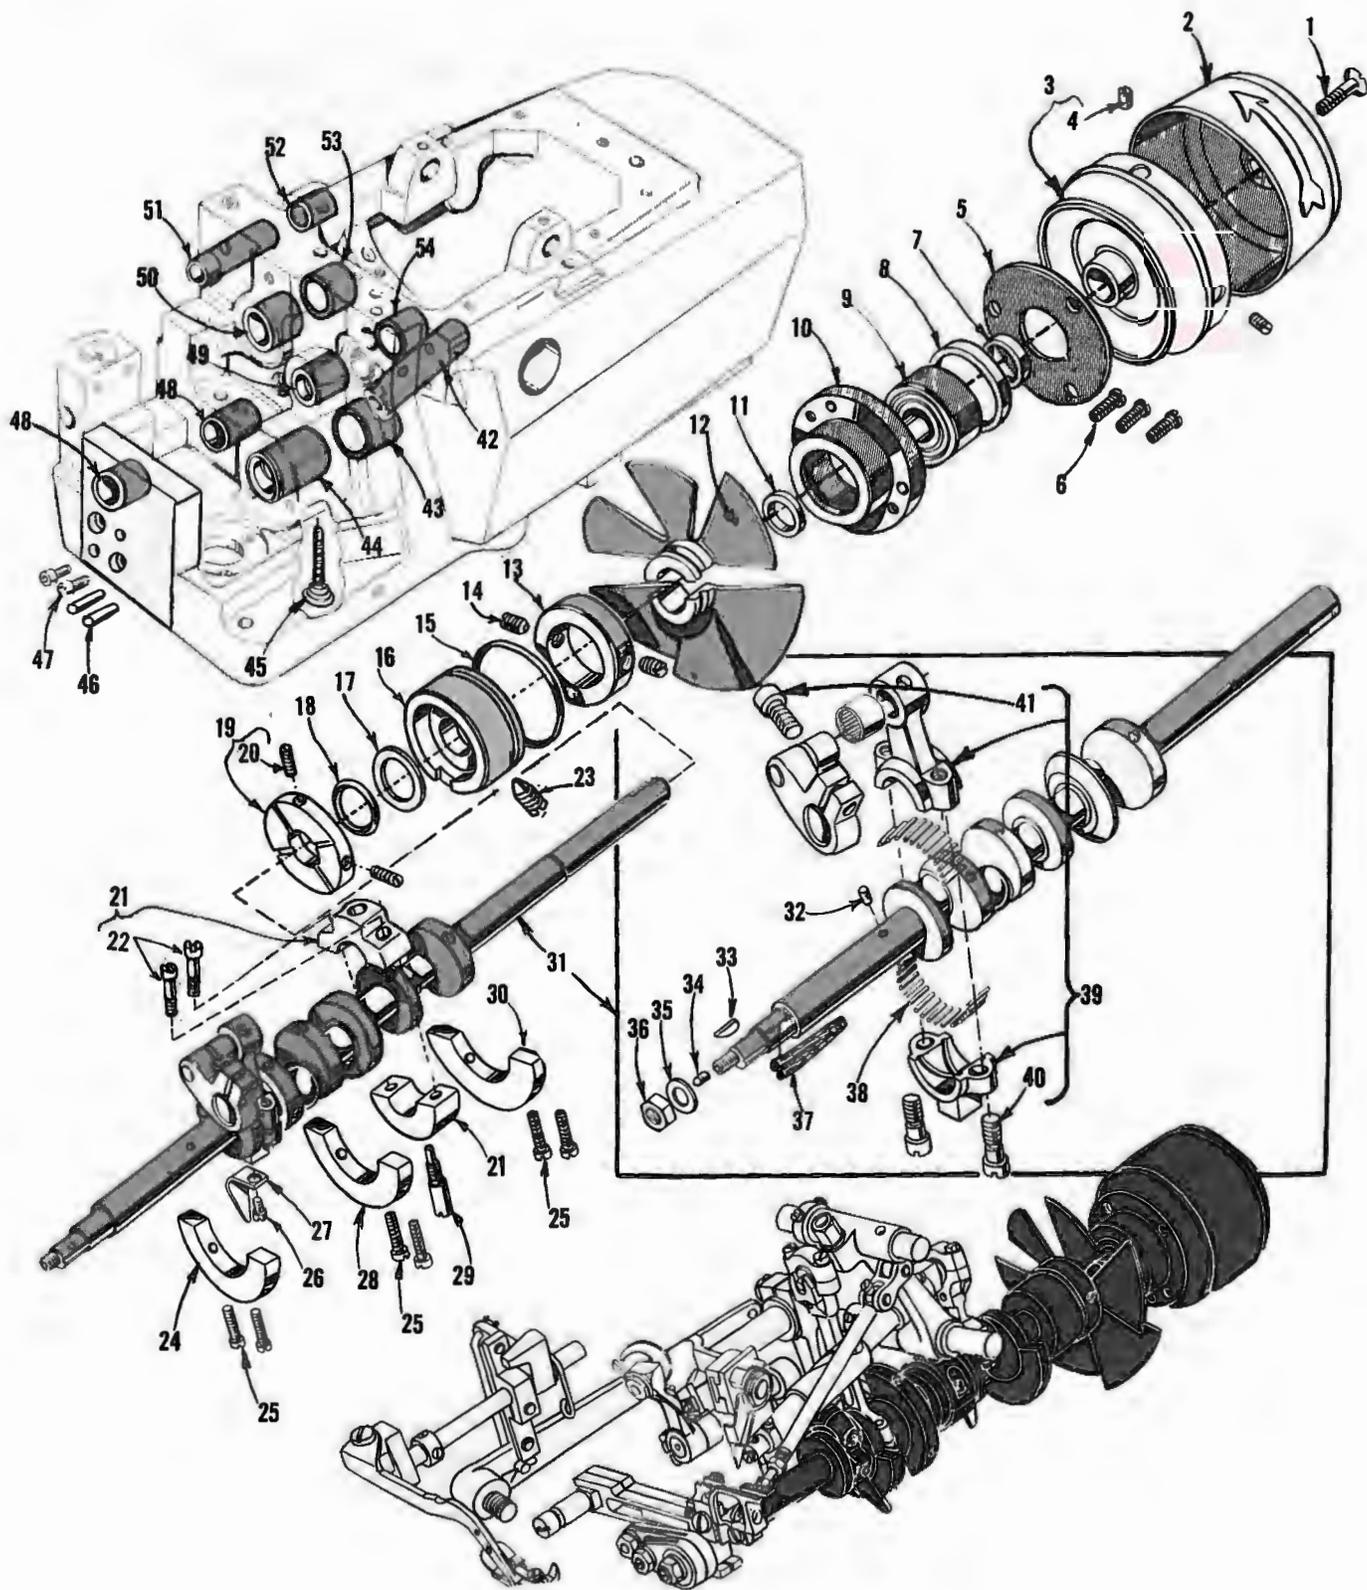

CRANKSHAFT MECHANISM AND BUSHINGS


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1	22769 B	Screw, for pulley cap -----	1
2	39521 D	Pulley Cap-----	1
3	39521 C	Pulley -----	1
4	95	Screw, for pulley -----	2
5	39590 H	Crankshaft Ball Bearing Retaining Plate -----	1
6	22569 B	Screw, for crankshaft ball bearing retaining plate -----	3
7	39590 S	Spacer Collar -----	1
8	39590 R	Ball Bearing Stop Collar -----	1
9	660-268	Ball Bearing -----	1
10	39590 G	Crankshaft Ball Bearing Housing-----	1
11	39590 J	Thrust Washer -----	1
12	39591 L	Crank Chamber Cooling Fan -----	1
13	39591 H	Crank Chamber Cooling Fan Collar -----	1
14	22894 D	Screw, for crank chamber cooling fan collar -----	2
*15	660-443	"O" Ring, for crankshaft bearing, inner right -----	1
*16	39590 L	Crankshaft Bearing, inner right -----	1
*17	39573 A	Washer, for crankshaft bearing, inner right -----	1
*18	660-202	"O" Ring, for crankshaft bearing, inner right -----	1
19	39590 P	Oil Slinger Collar -----	1
20	77 Q	Screw, for oil slinger collar -----	2
21	39590 D	Crankshaft Split Bearing, middle -----	1
22	97 A	Screw, for crankshaft split bearing -----	2
23	22565 F	Screw, for crankshaft bearing, inner right -----	1
24	39591 K	Crankshaft Counterweight, left -----	1
25	22747 B	Screw, for crankshaft counterweights -----	6
26	87 U	Screw, for oil splasher -----	1
27	39594 N	Oil Splasher -----	1
28	39591 A	Crankshaft Counterweight, middle -----	1
29	39590 N	Stud, for crankshaft split bearing -----	1
30	39591 B	Crankshaft Counterweight, right -----	1
31	29477 KE	Crankshaft and Needle Driving Arm Assembly, for all Styles except 39500 JP -----	1
-	29477 JM	Crankshaft and Needle Driving Arm Assembly, for Style 39500 JP-----	1
32	51-228 Blk.	Vent Plug -----	1
33	39541 A	Feed Driving Eccentric Key -----	1
34	CO67 E	Cork Plug -----	1
35	40-46	Washer -----	1
36	258	Nut -----	1
37	WO-3	Wool Yarn -----as required	
38	39516-625	Needle Bearing, .0625 inch (1.588 mm) diameter -----	28
-	39516-626	Needle Bearing, .0626 inch (1.590 mm) diameter -----	28
-	39516-627	Needle Bearing, .0627 inch (1.593 mm) diameter -----	28
39	29477 JN	Needle Driving Arm Crank and Connecting Rod Assembly----	1
40	22587 M	Screw, for needle driving arm connecting rod -----	2
41	22596 G	Screw, for needle driving arm crank -----	1
42	39544 L	Lower Looter Bar Bushing-----	1
43	39590 T	Crankshaft Bearing, inner left-----	1
44	39590	Crankshaft Bearing, left -----	1
45	666-94	Oil Wick and Spring -----	1
46	667 B-12	Dowel Pin -----	2
47	22653 B-12	Socket Head Cap Screw -----	2
48	43243 N	Differential Feed Rocker Shaft Bushing -----	2
49	39552 U	Needle Driving Arm Crank Bushing, left -----	1
50	39573 K	Upper Knife Driving Arm Bushing, left -----	1
51	39555 E	Foot Lifter Shaft Bushing, left-----	1
52	39555 N	Foot Lifter Shaft Bushing, right -----	1
53	39573 AA	Upper Knife Driving Arm Bushing, right-----	1
54	39552 P	Needle Driving Arm Crank Bushing, right -----	1

\* These parts can be ordered as No. 29480 LB and are replacement parts for No. 39590 K.

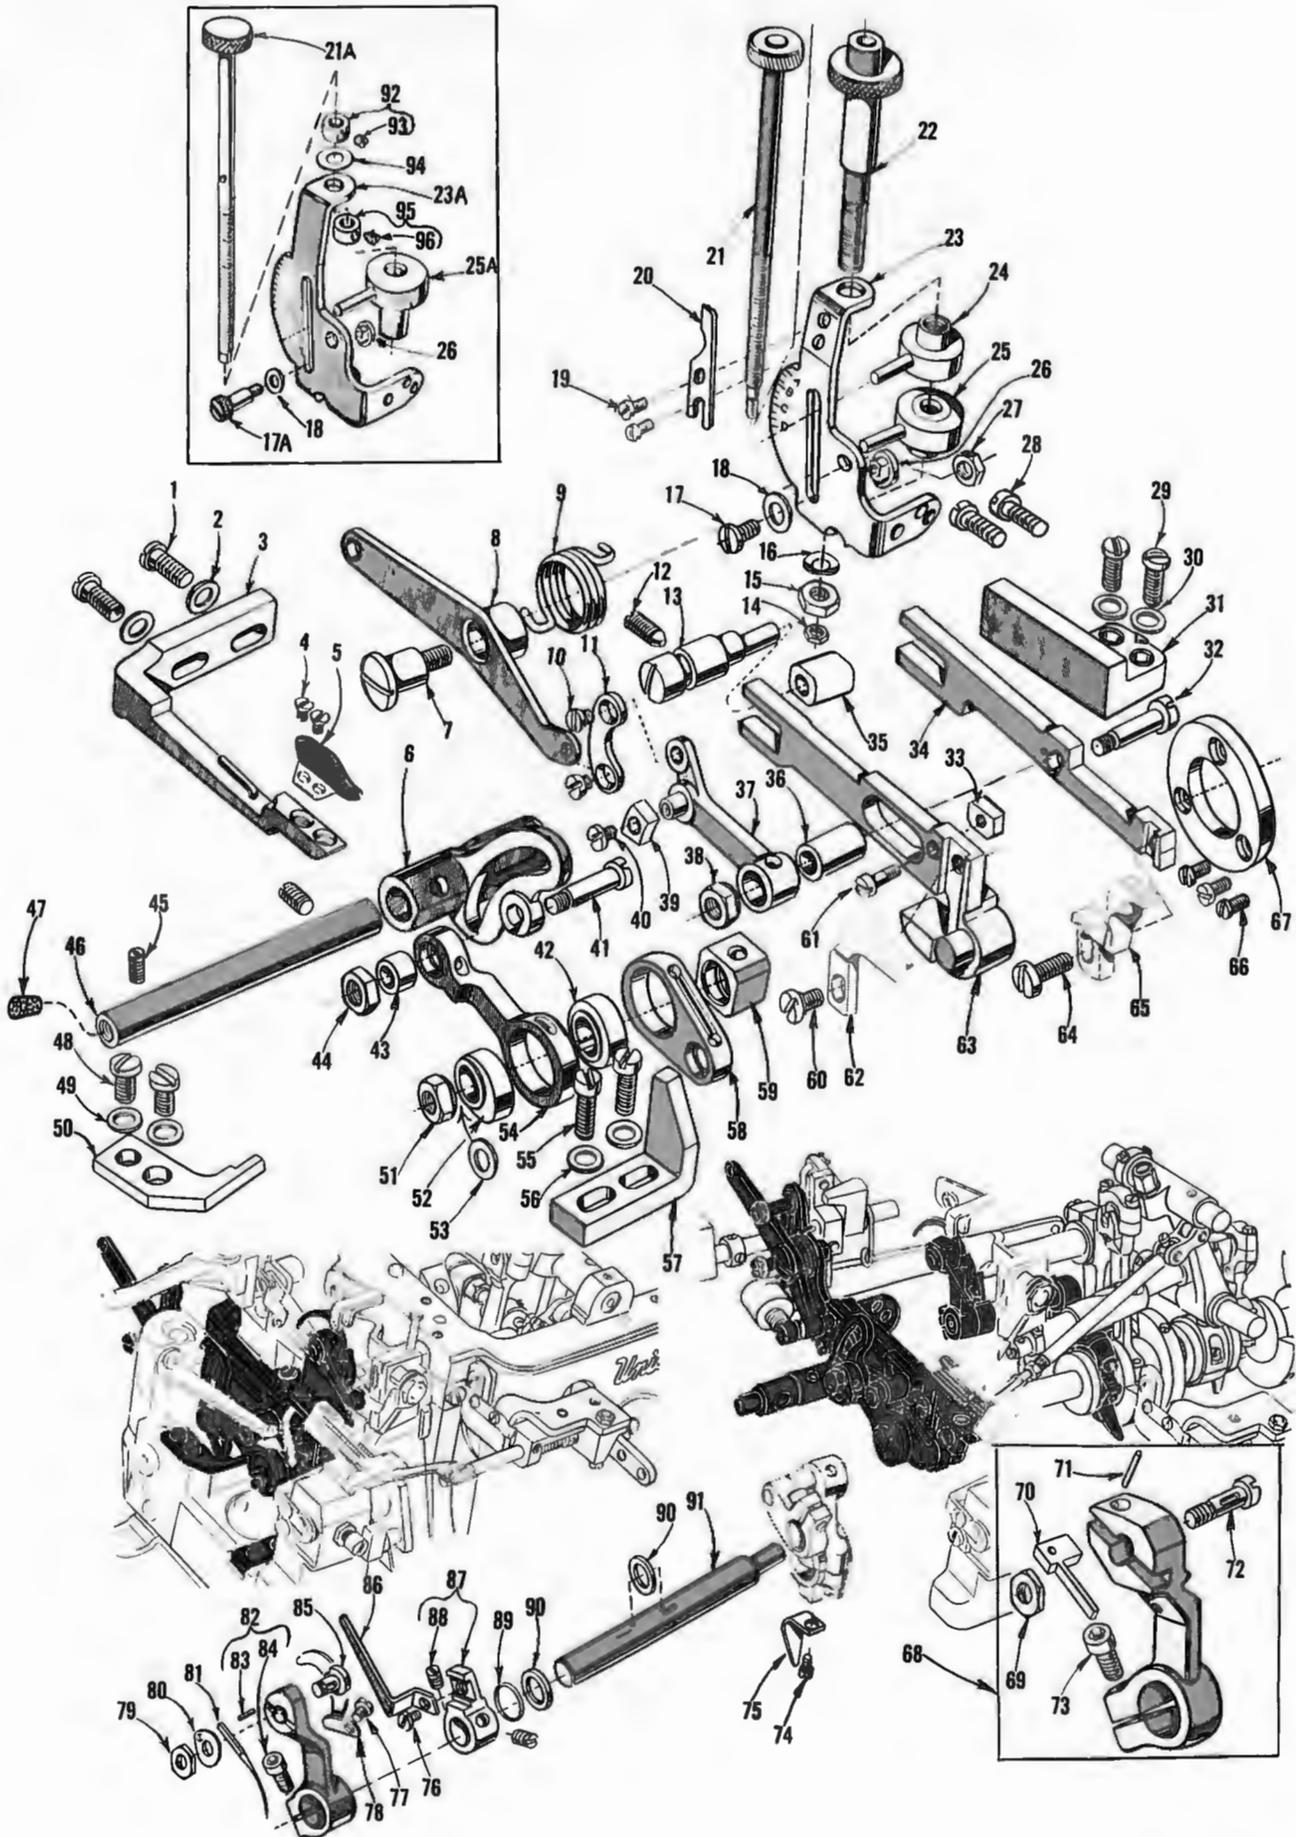


NEEDLE DRIVE AND FEED MECHANISM

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1	22569 B	Screw, for fabric guard mounting bracket -----	2
2	8372 A	Washer, for fabric guard mounting bracket -----	2
3	39578 P	Fabric Guard Mounting Bracket -----	1
4	87	Screw, for fabric guard -----	2
5	39578 M	Fabric Guard -----	1
6	39536 L	Differential Feed Rocker -----	1
7	22557 E	Screw, for differential feed control lever -----	1
8	39536 U	Differential Feed Control Lever -----	1
9	39536 V	Differential Feed Control Spring -----	1
10	39536 Y	Screw, for control lever connecting link -----	2
11	39536 W	Control Lever Connecting Link -----	1
12	22565 F	Screw, for feed adjusting pin -----	1
13	39535 E	Feed Adjusting Pin -----	1
14	12934 A	Lock Nut, for differential feed control adjusting rod, for all Styles except 39500 JP -----	1
15	39536 AH	Friction Nut, for differential feed control adjusting rod, for all Styles except 39500 JP -----	1
16	39198 D	Spring Washer, for differential feed control adjusting rod, for all Styles except 39500 JP -----	1
17	25 CC	Differential Feed Stop Screw, for all Styles except 39500 JP -----	1
17A	22728 A	Differential Feed Stop Screw, for Style 39500 JP -----	1
18	8372 A	Washer, for differential feed stop screw -----	1
19	88 A	Screw, for ratchet stop spring, for all Styles except 39500 JP -----	2
20	39636 E	Ratchet Stop Spring, for all Styles except 39500 JP -----	1
21	39636 C	Differential Feed Control Adjusting Rod, for all Styles except 39500 JP -----	1
21A	39536 AB	Differential Feed Control Adjusting Rod, for Style 39500 JP -----	1
22	39636 A	Plain Feed Control Adjusting Rod, for all Styles except 39500 JP -----	1
23	39636	Differential Feed Control Mounting Bracket, for all Styles except 39500 JP -----	1
23A	39536 AJ	Differential Feed Control Mounting Bracket, for Style 39500 JP -----	1
24	39636 B	Plain Feed Control Adjustable Stop, for all Styles except 39500 JP -----	1
25	39636 D	Differential Feed Control Adjustable Stop, for all Styles except 39500 JP -----	1
25A	39536 AC	Differential Feed Control Adjustable Stop, for Style 39500 JP -----	1
26	43139 A	Nut, for stop screw -----	1
27	18	Nut, for differential feed control lever screw -----	1
28	22569 C	Screw, for differential feed control mounting bracket -----	2
29	22569 B	Screw, for feed bar guide, right -----	2
30	53634 C	Washer, for feed bar guide, right -----	2
31	39535 D	Feed Bar Guide, right -----	1
32	39536 S	Differential Feed Bar Driving Stud -----	1
33	39536 X	Differential Feed Bar Guide Block -----	1
34	39534 B	Differential Feed Bar -----	1
35	39535 J	Main and Differential Feed Bar Guide Block -----	1
36	39536 R	Feed Bar Driving Connection Bushing -----	1
37	39536 P	Differential Feed Drive Link -----	1
38	39536 E	Nut, for differential feed bar driving stud -----	1
39	39536 N-247	Differential Feed Regulating Sliding Block, marked "A", .247 inch (6.274 mm) -----	1
-	39536 N-248	Differential Feed Regulating Sliding Block, marked "B", .248 inch (6.300 mm) -----	1
-	39536 N-249	Differential Feed Regulating Sliding Block, marked "C", .249 inch (6.325 mm) -----	1
40	28	Screw, for differential feed regulating sliding block -----	1
41	39536 J	Differential Feed Drive Connecting Rod Stud -----	1
42	39540 B-12	Main Feed Driving Eccentric, for Style 39500 JP -----	1
-	39540 B-14	Main Feed Driving Eccentric, for Styles 39500 FS, FT, FU, GD, GL, MM--	1
-	39540 B-16	Main Feed Driving Eccentric, for Style 39500 GT -----	1
43	39536 K	Feed Rocker Drive Connecting Bushing -----	1
44	39536 E	Nut, for differential feed drive connecting rod stud -----	1
45	22565 B	Screw, for differential feed rocker shaft -----	2
46	39536 M	Differential Feed Rocker Shaft -----	1
47	CO67 F	Cork, for differential feed rocker shaft -----	1
48 to 96		See following page	

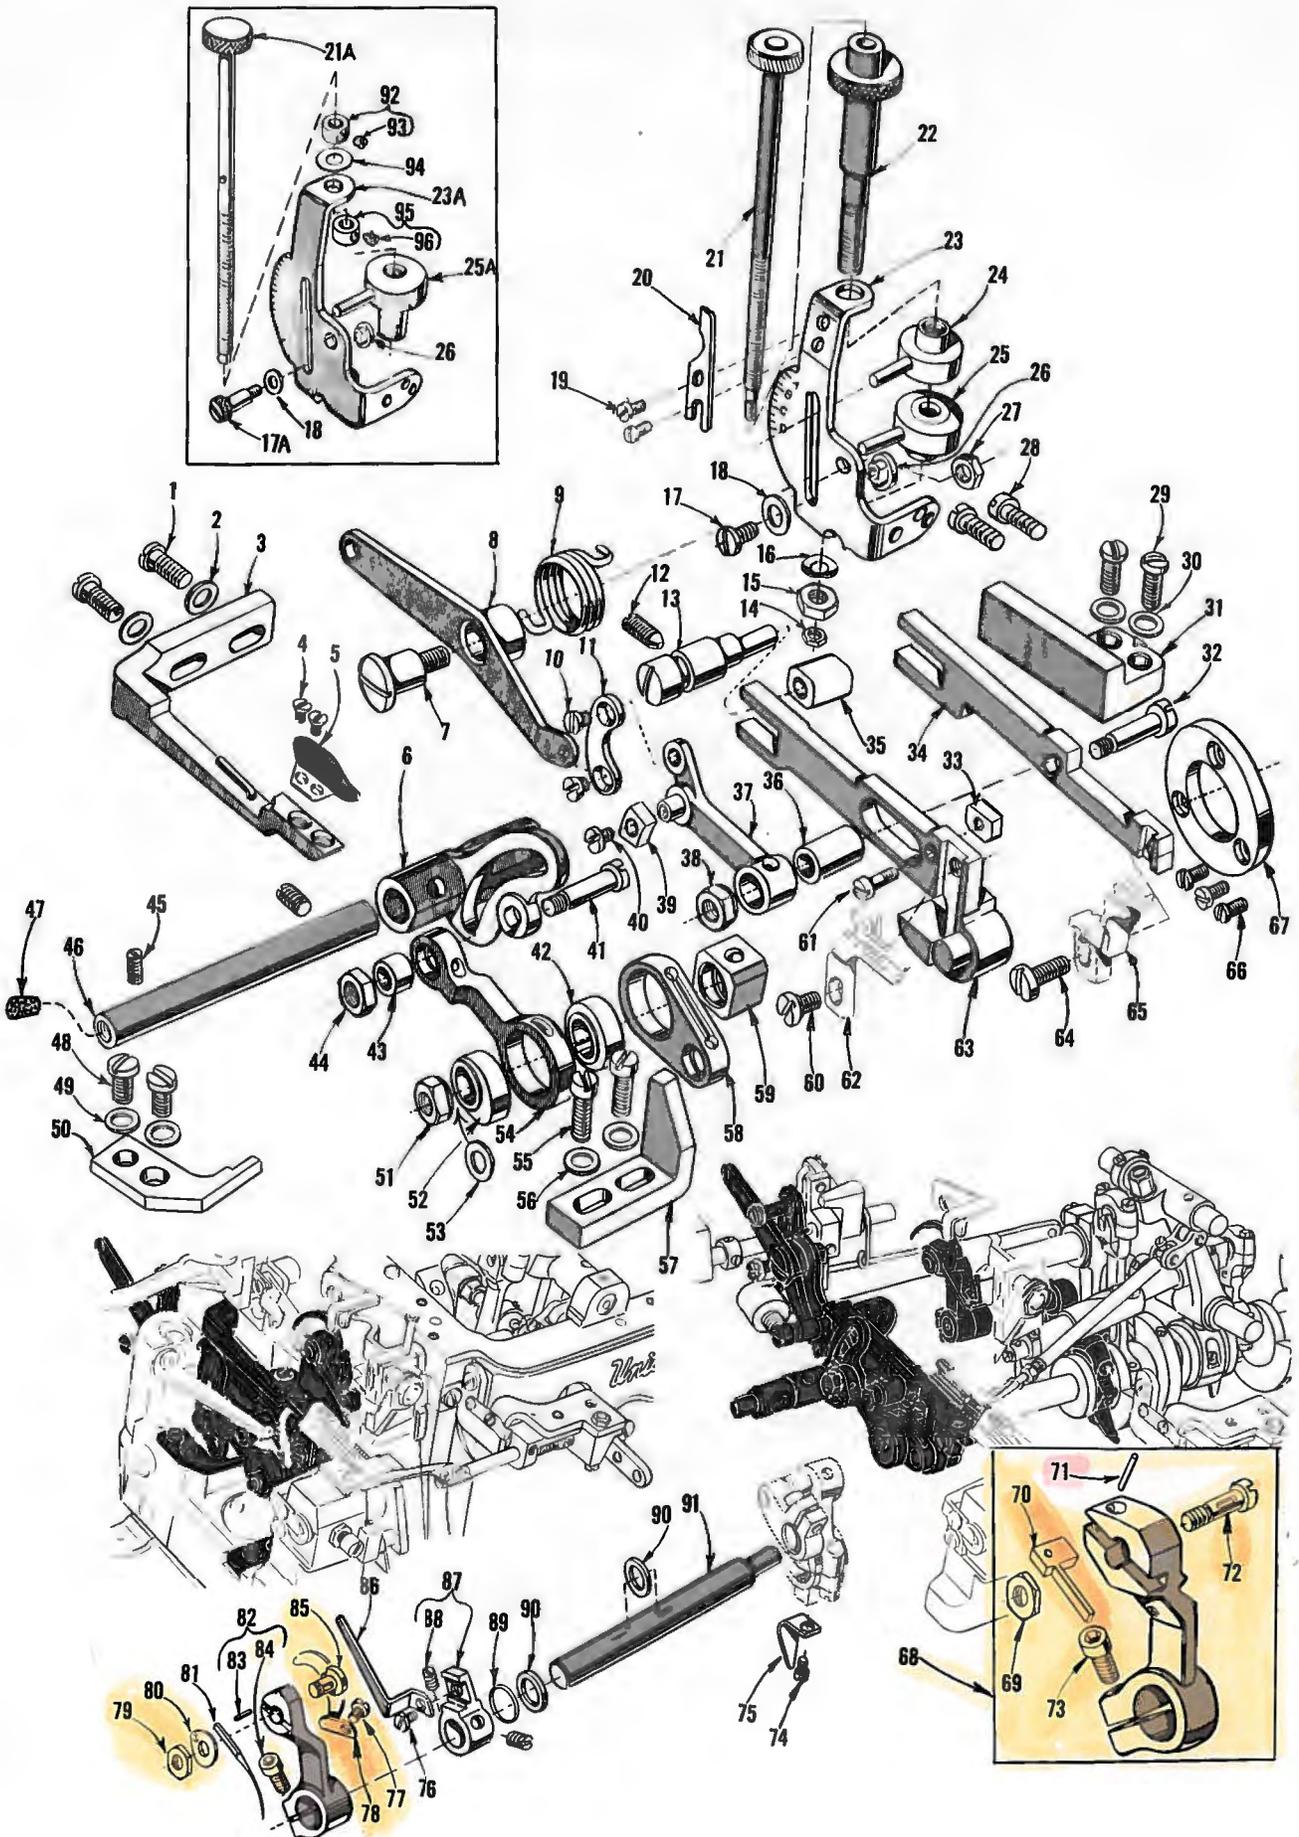

NEEDLE DRIVE AND FEED MECHANISM


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1 thru 47		See preceding page	
48	22569 C	Screw, for thrust finger -----	2
49	53634 C	Washer, for thrust finger -----	2
50	39536 H	Thrust Finger -----	1
51	258	Nut, for crankshaft-----	1
52	39540 B-4	Differential Feed Driving Eccentric, for Styles 39500 FS, FT, GD ---	1
-	39540 B-6	Differential Feed Driving Eccentric, for Styles 39500 GT, JP ----	1
-	39540 C	Differential Feed Driving Eccentric, for Styles 39500 FU, GL, MM	1
53	40-46	Washer, for crankshaft-----	1
54	39536 F	Differential Feed Drive Connecting Rod, for Styles 39500 FS, FT, GD, GT, JP -----	1
-	39536 G	Differential Feed Drive Connecting Rod, for Styles 39500 FU, GL, MM-----	1
55	22541 A	Screw, for feed bar guide, left, for all Styles except 39500 JP ---	2
-	22569 B	Screw, for feed bar guide, left, for Style 39500 JP -----	2
56	53634 C	Washer, for feed bar guide, left -----	2
57	39535 G	Feed Bar Guide, left -----	1
58	39536 AF	Main Feed Bar Driving Connection -----	1
59	39538	Feed Lift Block -----	1
60	94	Screw, for main feed dog -----	1
61	22726 L	Screw, for differential feed bar guide block -----	1
62		Main Feed Dog (See Page 37 ) -----	1
63	39534 A	Main Feed Bar -----	1
64	93	Screw, for differential feed dog, for all Styles except 39500 JP --	1
-	22528	Screw, for differential feed dog, for Style 39500 JP-----	1
65		Differential Feed Dog (See Page 37 ) -----	1
66	22569 G	Screw, for feed bar thrust washer -----	3
67	39534 H	Differential Feed Bar Thrust Washer-----	1
68	39552 T	Needle Driving Arm Assembly, marked "G", for Styles 39500 GD, GL- <del>NOOK SAFETY</del> -----	1
69	14077	Nut, for needle clamp stud -----	1
70	39551 G	Needle Spacer -----	1
71	61351 K-625	Needle Stop Pin -----	1
72	39551 F	Needle Clamp Stud -----	1
73	22596 E	Screw, for needle driving arm -----	1
74	87 U	Screw, for oil splasher -----	1
75	39594 N	Oil Splasher -----	1
76	22513	Screw, for looper thread pull-off -----	1
77	87 U	Screw, for needle thread pull-off -----	1
78	39563 G	Needle Thread Pull-off -----	1
79	14077	Nut, for needle clamp stud, for Styles 39500 FS, FT, FU, GT, JP, MM -----	1
80	39551 A	Needle Clamp Washer, for Styles 39500 FS, FT, FU, GT, JP, MM----	1
81		Needle (See Page for needle used on a specific Style)-----	1 or 2
82	39552	Needle Driving Arm, marked "B", for Styles 39500 FS, FT, FU, GT, JP, MM- <del>NOOK SAFETY</del> -----	1
83	50-774 Blk.	Stop Pin -----	1
84	22596 E	Screw, for needle driving arm-----	1
85	39551 F	Needle Clamp Stud, for Styles 39500 FS, FT, FU, GT, JP, MM----	1
86	39568 A	Looper Thread Pull-off -----	1
87	39568 Y	Looper Thread Pull-off Lever -----	1
88	88 B	Screw, for looper thread pull-off lever -----	2
89	660-207	Oil Seal Ring, for needle driving shaft -----	1
90	39552 C	Needle Driving Arm Crank Thrust Washer -----	2
91	39552 R	Needle Driving Shaft-----	1
92	161	Adjusting Rod Stop Collar, upper, for Style 39500 JP -----	1
93	88	Screw, for upper adjusting rod stop collar -----	1
94	39536 AD	Spring Washer, for differential feed control adjusting rod, for Style 39500 JP-----	1
95	161 A	Adjusting Rod Stop Collar, lower, for Style 39500 JP -----	1
96	22764	Screw, for lower adjusting rod stop collar -----	1

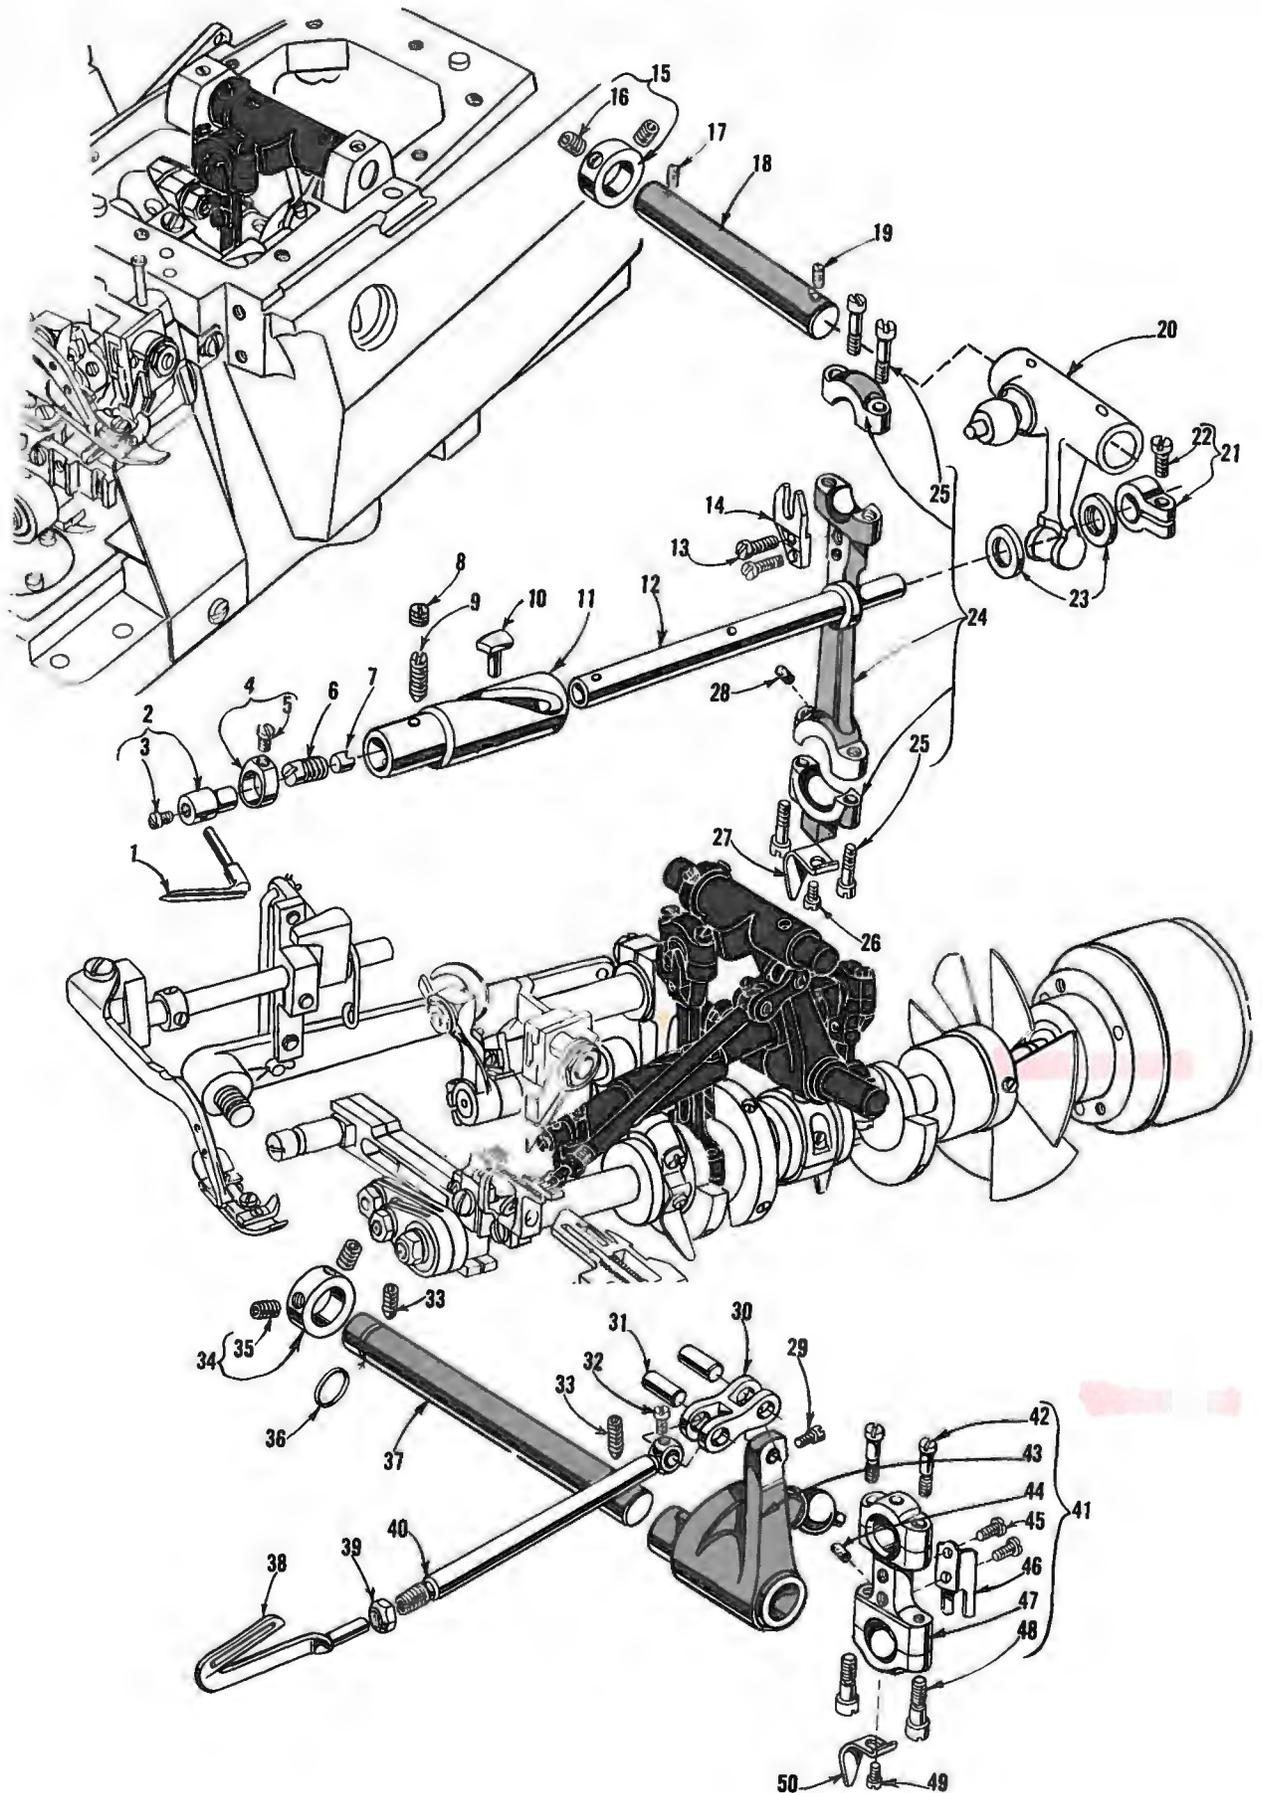

UPPER AND LOWER LOOPER DRIVING PARTS

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1	39508 A	Upper Looper, marked "CC"-----	1
2	39543	Upper Looper Holder -----	1
3	22564 G	Screw, for upper looper holder -----	1
4	39543 A	Upper Looper Holder Collar -----	1
5	22 KH	Screw, for upper looper holder collar -----	1
6	22503 F	Adjusting Screw, for cam follower locking clamp -----	1
7	39543 E	Cam Follower Locking Clamp -----	1
8	1025 L	Lock Screw, for bushing and cam guide -----	1
9	22565 H	Screw, for bushing and cam guide -----	1
10	39543 T	Cam Follower -----	1
*11	39543 S	Upper Looper Bushing and Cam Guide-----	1
*12	39543 K	Upper Looper Drive Shaft -----	1
13	97	Screw, for upper looper ball joint fork -----	2
14	39544 J	Upper Looper Ball Joint Fork -----	1
15	482 C	Upper Looper Shaft Collar -----	1
16	22894 C	Screw, upper looper rock -----	2
17	22565	Screw, for upper looper drive lever shaft -----	1
18	39543 X	Upper Looper Drive Lever Shaft -----	1
19	22565 S	Spot Screw, for upper looper drive lever shaft -----	1
20	39543 W	Upper Looper Drive Lever -----	1
21	39543 M	Clamp Collar, for upper looper drive shaft -----	1
22	22562 A	Screw, for clamp collar -----	1
23	39543 P	Thrust Washer, for upper looper drive shaft-----	2
24	39543 U	Upper Looper Connecting Rod -----	1
25	22729 D	Screw, for upper looper connecting rod -----	4
26	87 U	Screw, for oil splasher -----	1
27	39594 N	Oil Splasher -----	1
28	666-255	Felt Plug, for connecting rod -----	1
29	77	Screw, for lower looper bar connecting link pin -----	2
30	39544 B	Lower Looper Bar Connecting Link -----	1
31	39544 D	Lower Looper Bar Connecting Link Pin -----	2
32	77	Screw, for lower looper bar connecting link pin -----	1
33	22894 AD	Screw, for lower looper shaft -----	2
34	482 C	Lower Looper Shaft Collar-----	1
35	22894 C	Screw, for lower looper shaft collar -----	2
36	660-206	"O" Ring, for lower looper shaft -----	1
37	39544 V	Lower Looper Shaft -----	1
38	39508 B	Lower Looper -----	1
39	39151	Nut, for lower looper bar -----	1
40	39544	Lower Looper Bar -----	1
41	29126 DF	Lower Looper Bar Driving and Connecting Rod Assembly ---	1
42	22729 D	Screw, for connecting rod -----	2
43	39544 U	Lower Looper Bar Driving Lever-----	1
44	666-255	Felt Plug, for connecting rod -----	1
45	97	Screw, for ball joint guide fork-----	2
46	39544 S	Ball Joint Guide Fork -----	1
47	39544 N	Lower Looper Drive Lever Connecting Rod -----	1
48	22729 E	Screw, for connecting rod -----	2
49	87 U	Screw, for oil splasher -----	1
50	39594 N	Oil Splasher -----	1


\* The use of assembly No. 29126 EC is recommended instead of the individual parts.

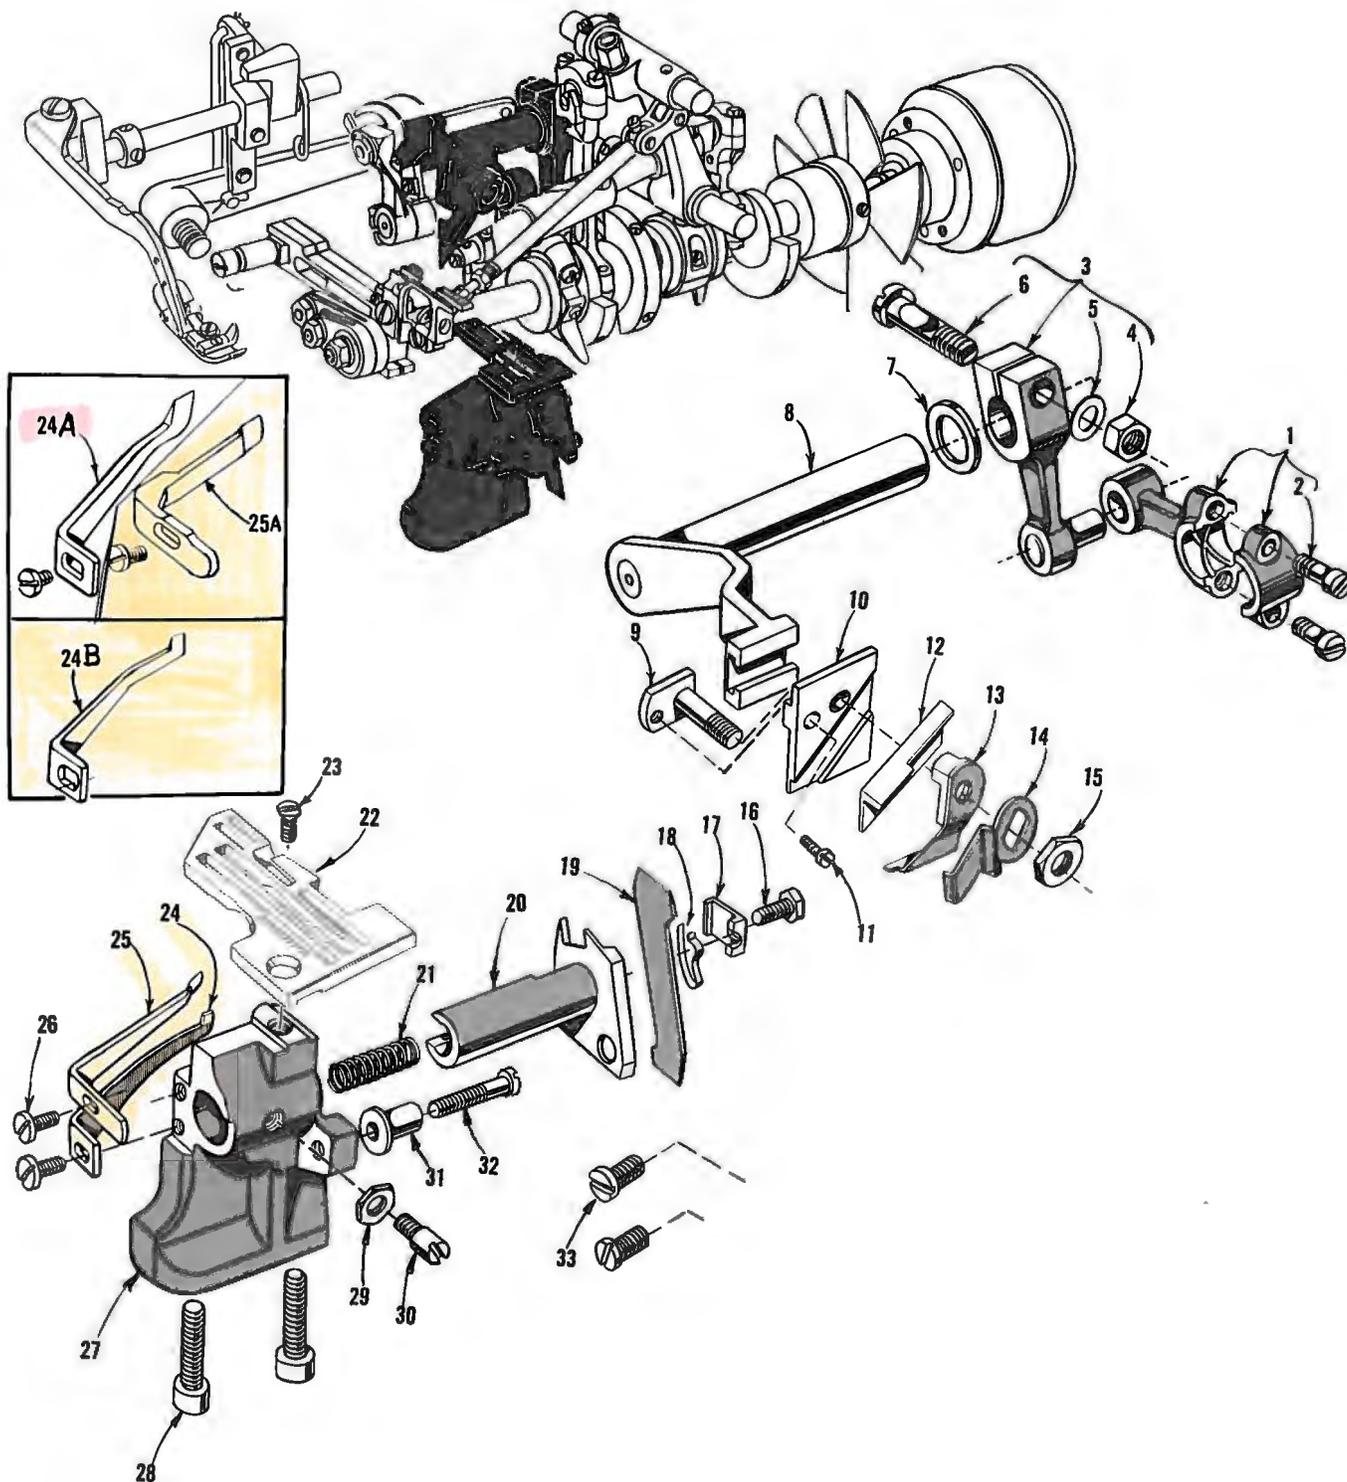

UPPER AND LOWER KNIFE MECHANISM AND PRESSURE PLATE ASSEMBLY

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1	39573 J	Upper Knife Drive Connecting Rod -----	1
2	22587 J	Screw, for upper knife drive connecting rod-----	2
3	39573 E	Upper Knife Driving Lever -----	1
4	55235 E	Nut, for upper knife driving lever -----	1
5	6042 A	Washer, for upper knife driving lever -----	1
6	55235 D	Locking Stud, for upper knife driving lever -----	1
7	39573 A	Upper Knife Driving Arm Washer -----	1
8	39573 H	Upper Knife Driving Arm -----	1
9	39571 C	Upper Knife Clamp Stud, for Styles 39500 FT, FU, MM -----	1
-	39571 D	Upper Knife Clamp Stud, for Styles 39500 FS, GD, GL, GT, JP -----	1
10	39572 A	Upper Knife Holder Block, for Styles 39500 FT, FU, MM -----	1
-	39572	Upper Knife Holder Block, for Styles 39500 FS, GD, GL, GT, JP-----	1
11	22738	Screw, for upper knife clamp stud -----	1
12	39570 J	Upper Knife, for all Styles except 39500 JP -----	1
-	39570	Upper Knife, for Style 39500 JP -----	1
13	39571 F	Upper Knife Clamp -----	1
14	39571 B	Upper Knife Chain Guard-----	1
15	14077	Nut, for upper knife clamp stud -----	1
16	22588 A	Screw, for lower knife clamp -----	1
17	39550 L	Lower Knife Clamp -----	1
18	39550 M	Lower Knife Clamp Spring -----	1
19	39549 J	Lower Knife, for all Styles except 39500 JP-----	1
-	39549	Lower Knife, for Style 39500 JP-----	1
20	39550 N	Lower Knife Holder -----	1
21	39550 E	Lower Knife Holder Spring -----	1
22		Throat Plate (See Page 37 ) -----	1
23	22524	Screw, for throat plate -----	1
24	39525	Needle Guard, front, for Styles 39500 FS, FT, FU, GT, JP, MM -----	1
24A	39525 F	Needle Guard, front, for Style 39500 GL -----	1
24B	39525 M	Needle Guard, front, for Style 39500 GD -----	1
25	39525 A	Needle Guard, rear, for Styles 39500 FS, FT, FU, GT, JP, MM -----	1
25A	39525 N	Needle Guard, rear, for Styles 39500 GD, GL -----	1
26	22585 A	Screw, for needle guards -----	2
27	39580 A	Throat Plate and Lower Knife Support Bracket -----	1
28	22653 B-12	Screw, for throat plate and lower knife support bracket -----	2
29	14077	Nut, for lower knife holder locking screw -----	1
30	22892 B	Locking Screw, for lower knife holder -----	1
31	39550 C	Lower Knife Holder Locating Stud -----	1
32	22729 B	Screw, for lower knife holder locating stud -----	1
33	22569 C	Screw, for pressure plate assembly -----	2
*	29480 GX	Pressure Plate Assembly, for Styles 39500 FT, FU, GD, GL, GT, MM---	1
*	39531 J	Mounting Bracket -----	1
*	35751 D	Shoulder Screw, for mounting bracket -----	1
*	39531 L	Tension Spring -----	1
*	22580 A	Screw, for tension spring -----	1
*	39531 N	Actuating Collar -----	1
*	22894 Y	Set Screw, for actuating collar -----	1
*	95	Locking Screw, for shaft bracket -----	1
*	22597 E	Set Screw, for shaft bracket -----	1
*	39531 K	Shaft Bracket -----	1
*	39531 S	Pressure Plate -----	1
*	22738	Screw, for pressure plate -----	2
*	39531 P	Pressure Plate Shaft -----	1
*	39531 R	Pressure Plate Tension Spring -----	1
*	22743	Set Screw, for pressure plate shaft -----	1
*	39531 M	Pressure Plate Shaft Collar -----	1
*	39531 H	Operating Lever -----	1
*	77 A	Set Screw, for operating lever -----	1
*	15037 A	Lock Nut, for shoulder screw -----	1
*	21388 Y	Spanner Wrench -----	1

\* Not shown on picture plate.

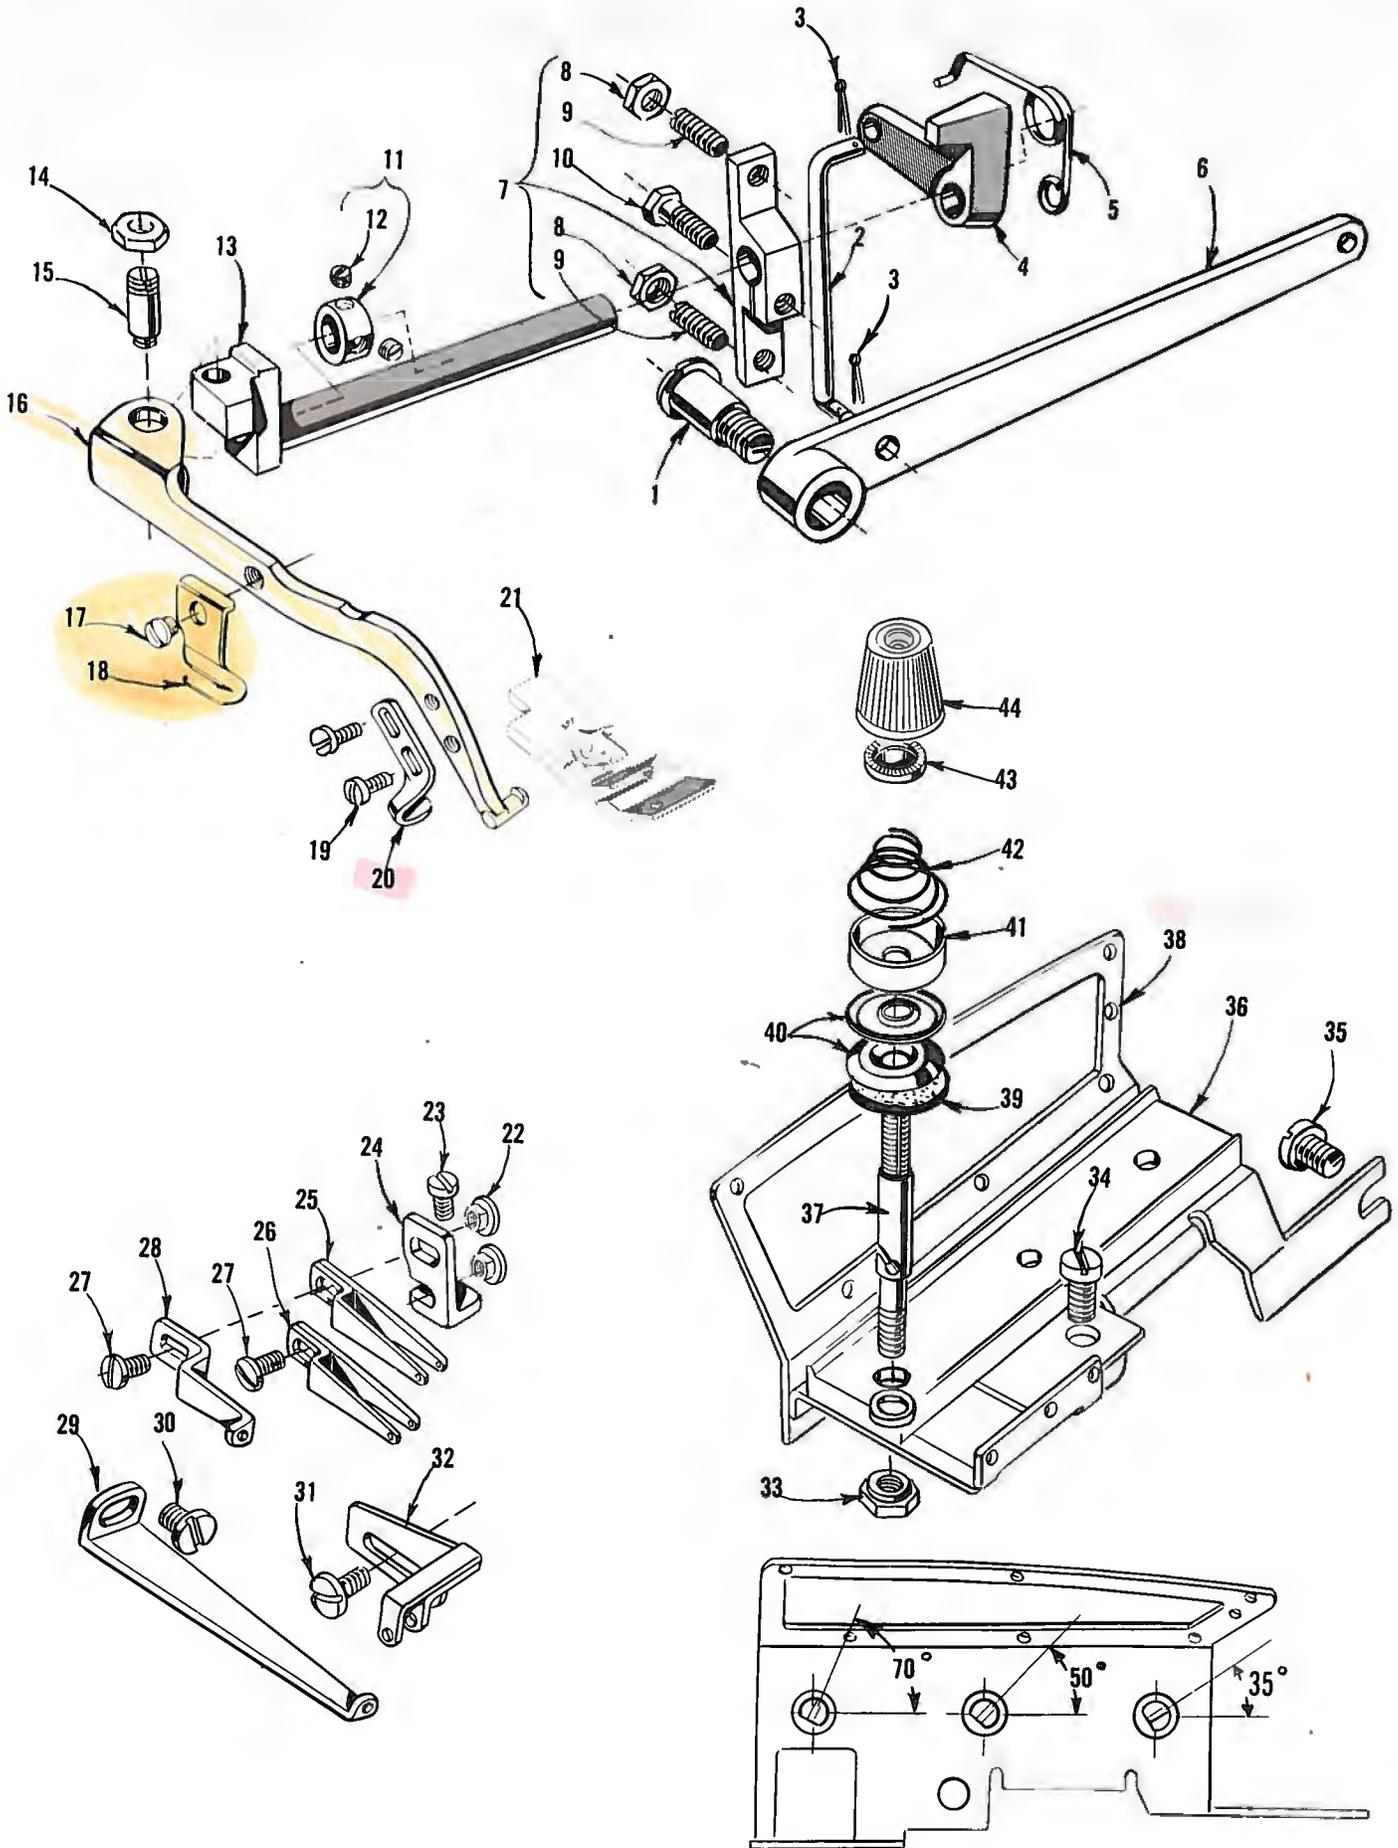

PRESSER FOOT LIFTER, THREAD TENSION AND MISCELLANEOUS EYELETS


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1	22566 B	Screw, for foot lifter lever -----	1
2	39555 F	Foot Lifter Lever Connecting Link -----	1
3	660-142	Cotter Pin, for foot lifter lever connecting link -----	2
4	39555 D	Foot Lifter Intermediate Lever -----	1
5	39555 B	Foot Lifter Lever Spring -----	1
6	39555	Foot Lifter Lever -----	1
7	39555 C	Foot Lifter Lever Arm -----	1
8	12538	Lock Nut, for foot lifter lever arm -----	2
9	22597 E	Screw, for foot lifter lever arm -----	2
10	627	Screw, for foot lifter lever arm -----	1
11	12865	Thrust Collar, for foot lifter lever shaft -----	1
12	88	Screw, for thrust collar -----	2
13	39555 A	Foot Lifter Lever Shaft -----	1
14	258 A	Nut, for presser arm screw pin-----	1
15	22791 H	Screw Pin, for presser arm -----	1
16	39556 F	Presser Arm -----	1
17	22704	Screw, for chain cutting knife for Styles 39500 GD, GL-----	1
18	39556 K	Chain Cutting Knife, marked "J", for Styles 39500 GD, GL ----	1
19	605 A	Screw, for presser foot hold down plate-----	2
20	39556 H	Presser Foot Hold Down Plate, for Styles 39500 FT, FU, GD, GL, GT, MM -----	1
21		Presser Foot (See Page 37 )-----	1
22	43139 A	Nut, for looper thread eyelet screw -----	2
23	22569 B	Screw, for looper thread eyelet mounting bracket -----	1
24	39568 D	Looper Thread Eyelet Mounting Bracket -----	1
25	39568 L	Upper Looper Thread Eyelet-----	1
26	39568 B	Lower Looper Thread Eyelet -----	1
27	376 A	Screw, for looper thread eyelets -----	2
28	39568 E	Auxiliary Looper Thread Eyelet -----	1
29	39568 R	Frame Looper Thread Eyelet -----	1
30	22569 D	Screw, for frame looper thread eyelet -----	1
31	22569 D	Screw, for frame needle thread eyelet -----	1
32	39563 H	Frame Needle Thread Eyelet -----	1
32A	8372 A	Washer, for thread tension post-----	3 or 4
33	39592 AH	Nut, for thread tension post -----	3 or 4
34	22806 A	Screw, for tension post mounting bracket -----	1
35	22847 B	Screw, for tension post mounting bracket -----	1
36	39592 AM	Tension Post Bar, for Styles 39500 FS, FT, FU, GT, JP, MM ---	1
-	39592 AN	Tension Post Bar, for Styles 39500 GD, GL -----	1
37	39592 AL	Thread Tension Post -----	3 or 4
38	39592 AG-3	Tension Post Mounting Bracket, for Styles 39500 FS, FT, FU, GT, JP, MM -----	1
-	39592 AG-5	Tension Post Mounting Bracket, for Styles 39500 GD, GL ----	1
39	39592 AF	Tension Disc Felt -----	3 or 4
40	39592 AD	Thread Tension Disc -----	6 or 8
41	39592 AJ	Spring Shield -----	3 or 4
42	39592 AR-4	Looper Thread Tension Spring, for Styles 39500 FS, FT, FU, GD, GL, GT, MM -----	2
-	39592 AR-5	Looper Thread Tension Spring, for Style 39500 JP -----	2
-	39592 AR-5	Needle Thread Tension Spring, for Style 39500 MM -----	1
-	39592 AR-8	Needle Thread Tension Spring, for Styles 39500 FS, FT, FU, GT, JP -----	1
-	39592 AR-8	Needle Thread Tension Spring, for Styles 39500 GD, GL -----	2
43	39592 AK	Tension Spring Ferrule -----	3 or 4
44	39592 AA	Needle Tension Nut, green, also for right needle on Styles 39500 GD, GL -----	1
-	39592 AB	Upper Looper Tension Nut, blue -----	1
-	39592 AC	Lower Looper Tension Nut, red -----	1
-	39592 Z	Left Needle Tension Nut, yellow, for Styles 39500 GD, GL ----	1



FEED DOGS, THROAT PLATES AND PRESSER FEET

Ref. No.	Part No.	Description	Amt. Req.
1	39526 S	Differential Feed Dog, marked "M", 16 t.p.i., for Styles 39500 FS, GT-----	1
2	39505 S	Main Feed Dog, marked "R", 16 t.p.i., for Styles 39500 FS, FT, FU, GT-----	1
2A	39505 MM	Main Feed Dog, marked "FL", 16 t.p.i., for Style 39500 MM---	1
3	39524 S	Throat Plate, marked "AK", for Style 39500 FS-----	1
4	39520 S	Presser Foot, for Style 39500 FS-----	1
5	39597 S	Presser Foot Stitch Tongue, marked "EB"-----	1
6	39530 G	Presser Foot Hinge Spring-----	1
7	22768 B	Screw, for stitch tongue and hinge spring-----	1
8	91 A	Screw, for stripper blade-----	2
9	39530 F	Stripper Blade-----	1
10	39526 T	Differential Feed Dog, marked "N", 16 t.p.i., for Style 39500 FT-----	1
10A	39526 MM	Differential Feed Dog, marked "FM", 16 t.p.i., for Style 39500 MM-----	1
11	39505 AW	Chaining Feed Dog, marked "FK", 16 t.p.i., for Style 39500 MM-----	1
11A	22747	Screw, for chaining feed dog, for Styles 39500 JP, MM-----	1
12	39524 T	Throat Plate, marked "AL", for Styles 39500 FT, FU, MM-----	1
13	39520 M	Presser Foot, for Styles 39500 FT, MM-----	1
14	J87 J	Screw, for hinge spring and stitch tongue-----	1
15	39530 G	Presser Foot Hinge Spring-----	1
16	39597 T	Presser Foot Stitch Tongue, marked "EC"-----	1
17	39526 U	Differential Feed Dog, marked "P", 16 t.p.i., for Style 39500 FU-----	1
18	39520 T	Presser Foot, for Style 39500 FU <i>GROOVED FOR 1/8" CORO</i> -----	1
19	J87 J	Screw, for hinge spring and stitch tongue-----	1
20	39530 G	Presser Foot Hinge Spring-----	1
21	39597 T	Presser Foot Stitch Tongue, marked "EC"-----	1
X 22	39526 AD	Differential Feed Dog, marked "AJ", 16 t.p.i., for Style 39500 GD-----	1
X 23	39505 AD	Main Feed Dog, marked "AH", 16 t.p.i., for Styles 39500 GD, GL-----	1
24	39524 W	Throat Plate, marked "AN", for Styles 39500 GD, GL-----	1
X 25	39520 AD	Presser Foot, for Styles 39500 GD, GL-----	1
26	22768 B	Screw, for stitch tongue and hinge spring-----	1
27	39530	Presser Foot Hinge Spring-----	1
28	39597 AD	Presser Foot Stitch Tongue, marked "EL"-----	1
29	39526 AL	Differential Feed Dog, marked "AY", 16 t.p.i., for Style 39500 GL-----	1
30	39524 AT	Throat Plate, marked "BF", for Style 39500 GT-----	1
31	39520 AT	Presser Foot, for Style 39500 GT-----	1
32	J87 J	Screw, for hinge spring and stitch tongue-----	1
33	39530 G	Presser Foot Hinge Spring-----	1
34	39597 AT	Presser Foot Stitch Tongue, marked "ET"-----	1
*	39526 AN	Differential Feed Dog, 16 t.p.i., for Style 39500 JP-----	1
*	39505 AN	Main Feed Dog, marked "DJ", 16 t.p.i., for Style 39500 JP----	1
*	39505 L	Chaining Feed Dog, marked "V", 16 t.p.i., for Style 39500 JP---	1
*	39524 C-3/32	Throat Plate, marked "AC-3/32", for Style 39500 JP, for 3/32 inch (2.38 mm) seam width-----	1
*	39524 C-1/8	Throat Plate, marked "AC-1/8", for Style 39500 JP, for 1/8 inch (3.17 mm) seam width-----	1
*	39520 B	Presser Foot, for Style 39500 JP-----	1
*	22738 B	Screw, for chain shield and chip guard-----	2
*	22768 B	Screw, for hinge spring and stitch tongue-----	1
*	39530	Presser Foot Hinge Spring-----	1
*	39530 C	Presser Foot Chain Shield-----	1
*	39530 P	Presser Foot Chip Guard-----	1
*	39597 A	Presser Foot Stitch Tongue, marked "DS"-----	1

\* Parts used on Style 39500 JP, not shown on picture plate.

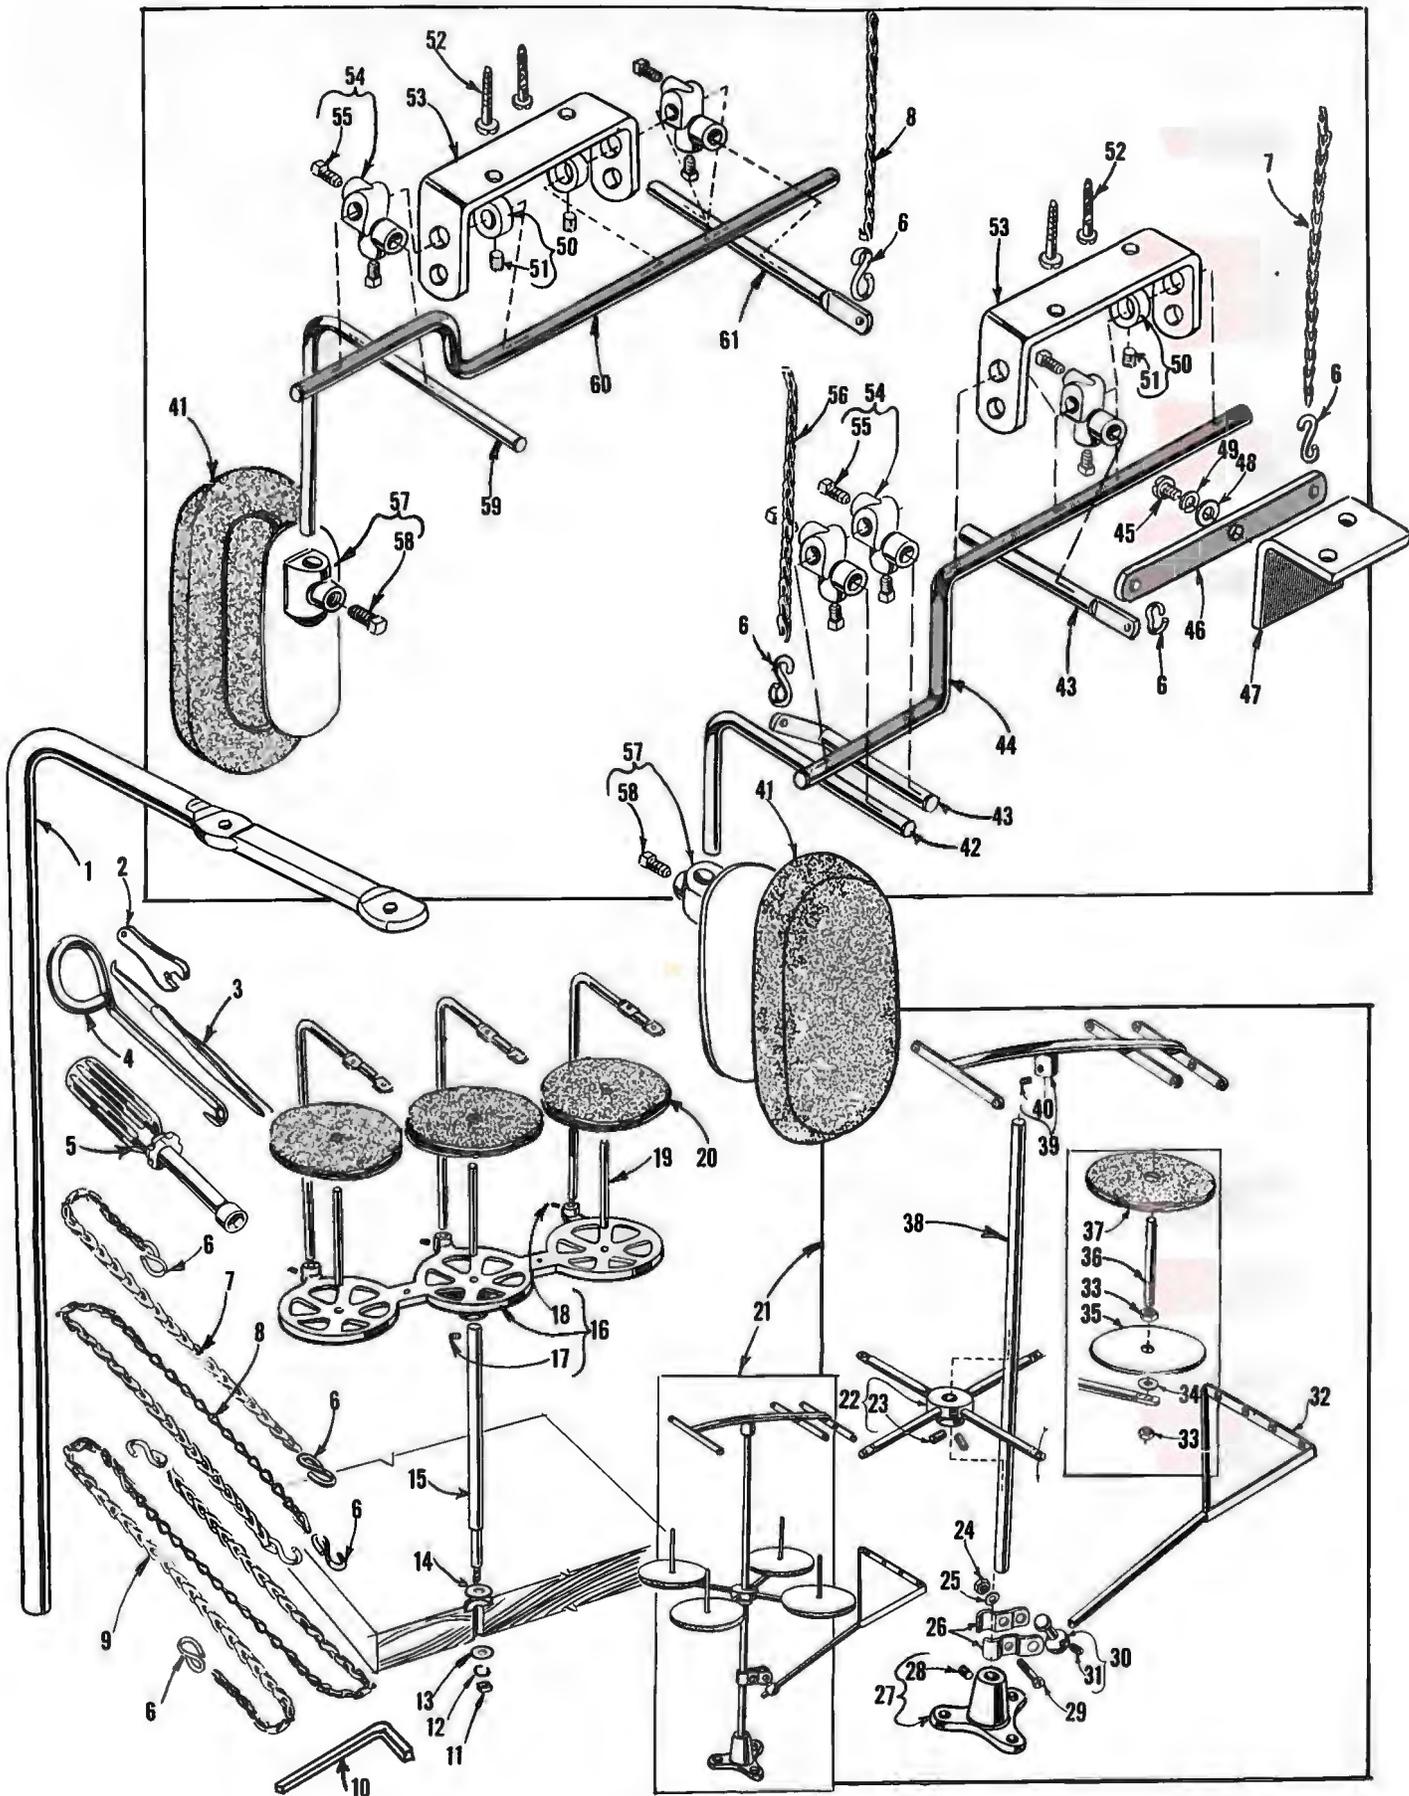

THREAD STANDS, ACCESSORIES AND MISCELLANEOUS TOOLS

Ref. No.	Part No.	Description	Amt. Req.
1	21113 F	Thread Stand Eyelet, for Styles 39500 FS, FT, FU, GT, JP, MM-----	3
2	116	Wrench, for 9/32 inch (7.14 mm) nut -----	1
3	660-240	Thread Tweezers -----	1
4	21227 BF	Feed Eccentric Extractor Hook -----	1
5	21388 AU	Socket Wrench, for 3/8 inch (9.52 mm) nuts holding feed eccentrics -----	1
6	660-264	"S" Hook, for chains -----	2 or 8
* 7	421 D-4	Presser Foot Lifter Chain, for all Styles except 39500 JP -----	1
-	421 D-18	Pressure Plate Lifter Chain, for all Styles except 39500 JP -----	1
8	421 D-5 3/4	Intermittent Differential Feed Control Chain, for all Styles except 39500 JP-----	1
9	421 D-34	Presser Foot Lifter Treadle Chain -----	1
10	WR56	Allen Wrench, 1/8 inch (3.17 mm) hexagon, for Styles 39500 GD, GL -----	1
11	651 A-16	Nut, for thread stand rod, for Styles 39500 FS, FT, FU, GT, JP, MM-----	1
12	WA9 A	Lockwasher, for thread stand rod, for Styles 39500 FS, FT, FU, GT, JP, MM -----	1
13	652 J-16	Washer, for thread stand rod, for Styles 39500 FS, FT, FU, GT, JP, MM ---	1
14	652 J-24	Washer, for thread stand rod, for Styles 39500 FS, FT, FU, GT, JP, MM ---	1
15	21104 AA	Thread Stand Rod, for Styles 39500 FS, FT, FU, GT, JP, MM-----	1
16	21130 W-3	Cone Support, for Styles 39500 FS, FT, FU, GT, JP, MM-----	1
17	22650 CE-6	Screw, for cone support -----	1
18	22650 CB-4	Screw, for thread stand eyelet-----	3
19	69 S	Spool Pin, for Styles 39500 FS, FT, FU, GT, JP, MM -----	3
20	21104 V	Pad, for thread cone, for Styles 39500 FS, FT, FU, GT, JP, MM-----	3
21	21101 H-4	Thread Stand Complete, for Styles 39500 GD, GL -----	1
22	21114 D-4	Spool Seat Support -----	1
23	22651 CD-5	Screw, for spool seat support -----	2
24	21104 H	Nut, for lead eyelet ball split socket -----	1
25	652-16	Washer, for lead eyelet ball split socket-----	1
26	21114 U	Lead Eyelet Ball Split Socket -----	2
27	21114 A	Thread Stand Base -----	1
28	22651 CD-4	Screw, for thread stand base -----	1
29	22810	Screw, for lead eyelet ball split socket -----	1
30	21114 T	Lead Eyelet Socket Ball-----	1
31	22651 CD-4	Screw, for lead eyelet socket ball-----	1
32	21114 S-4	Lead Eyelet -----	1
33	258 A	Nut, for spool pin -----	8
34	652-16	Washer, for spool seat disc -----	4
35	21114	Spool Seat Disc -----	4
36	21114 W	Spool Pin-----	4
37	21104 V	Pad, for thread cone -----	4
38	21104 B-20	Thread Stand Rod -----	1
39	21114 H-4	Eyelet Support -----	1
40	22651 CD-4	Screw, for eyelet support -----	1
41	660-168	Knee Press Pad, for all Styles except 39500 JP -----	1 or 2
*42	21663 A	Knee Press Plate Rod, for all Styles except 39500 JP -----	1
*43	21663 J	Knee Press Rod, for presser foot and pressure plate, for all Styles except 39500 JP -----	2
*44	21663 H	Knee Press Shaft, for presser foot and pressure plate, for all Styles except 39500 JP -----	1
*45	22557 A	Screw, for knee press lever, for all Styles except 39500 JP -----	1
*46	21662 AH	Knee Press Lever, for all Styles except 39500 JP -----	1
*47	21664 C	Bell Crank Bracket, for all Styles except 39500 JP -----	1
*48	43137 E	Washer, for bell crank bracket, for all Styles except 39500 JP-----	1
*49	39536 AD	Spring Washer, for bell crank bracket, for all Styles except 39500 JP ----	1
50	9271	Collar, for all Styles except 39500 JP -----	2 or 3
51	98	Screw, for collar -----	1
52	SC468	Wood Screw, for all Styles except 39500 JP -----	2 or 6
53	21662	Knee Press Bracket, for all Styles except 39500 JP-----	1 or 2
54	21665	Knee Press Rod Connection, for all Styles except 39500 JP -----	2 or 5
55	69 FD	Screw, for knee press rod connection -----	2
*56	421 D-8	Pressure Plate Chain, for all Styles except 39500 JP -----	1
57	21664	Knee Press Plate, for all Styles except 39500 JP -----	1 or 2
58	69 FD	Screw, for knee press plate -----	1
59	21663 A	Knee Press Plate Rod, for all Styles except 39500 JP -----	1
60	21663 G	Knee Press Shaft, for differential feed adjustment, for all Styles except 39500 JP-----	1
61	21663 E	Lifter Length Rod, for all Styles except 39500 JP-----	1
-	28604 R	Container of Oil, 16 ounces, Spec. 174 (not shown) -----	1
-	652-24	Washer, for Style 39500 JP (not shown)-----	8
-	660-458	Dust Cover (not shown) -----	1

\* Available as extra send and charge items, for lifting presser foot and pressure plate using a knee press.

NUMERICAL INDEX OF PARTS

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
WO3	25	12538	35	22653 D-4	23
WA9 A	39	12865	35	22657 D-12	23
18	27	12934 A	27	22704	35
22 KII	31	14077	29, 33	22726 L	29
25 CC	27	15037 A	33	22728 A	27
28	27	21101 II-4	39	22729 B	33
40-46	25, 29	21104 H	39	22729 D	31
50-774 Blk	29	21104 B-20	39	22729 E	31
51-103 Blk	23	21104 V	39	22738	33
51-228 Blk	25	21104 AA	39	22738 B	37
WR56	39	21113 F	39	22743	23, 33
CO67 E	25	21114	39	22747	37
CO67 F	27	21114 A	39	22747 B	25
69 S	39	21114 D-4	39	22764	29
69 FD	39	21114 H-4	39	22768 B	37
77	31	21114 S-4	39	22769 B	25
77 A	33	21114 T	39	22791 II	35
77 Q	25	21114 U	39	22806 A	35
87	27	21114 W	39	22810	39
87 U	25, 29, 31	21130 W-3	39	22847 B	35
J87 J	37	21227 BF	39	22892 B	33
88	29, 35	21388 Y	33	22894 C	31
88 A	27	21388 AU	39	22894 D	25
88 B	29	21662	39	22894 Y	33
90	23	21662 AH	39	22894 AD	23, 31
91 A	37	21663 A	39	28604 R	39
93	29	21663 E	39	29126 DF	31
94	29	21663 G	39	29477 GW	23
95	25, 33	21663 H	39	29477 JM	25
97	31	21663 J	39	29477 JN	25
97 A	25	21664	39	29477 KE	25
98	39	21664 C	39	29480 GX	33
116	39	21665	39	35751 D	33
138	23	22503 F	31	39151	31
161	29	22513	29	39198 D	27
161 A	29	22524	33	39501 D	23
258	25, 29	22528	29	39501 E	23
258 A	35, 39	22541	23	39501 K	23
376 A	35	22541 A	29	39501 DC	23
421 D-4	39	22557 A	39	39501 EC	23
421 D-5 3/4	39	22557 E	27	39505 L	37
421 D-8	39	22562 A	23, 31	39505 S	37
421 D-18	39	22564 G	31	39505 AD	37
421 D-34	39	22565	23, 31	39505 AN	37
SC468	39	22565 B	27	39505 AW	37
482 C	31	22565 F	23, 25, 27	39505 MM	37
605 A	35	22565 H	31	39508 A	31
627	35	22565 S	23, 31	39508 B	31
651 A-16	39	22566 B	35	39516-625	25
652-16	39	22569	23	39516-626	25
652-24	39	22569 B	23, 25, 27, 29, 35	39516-627	25
652 J-16	39	22569 C	23, 27, 29, 33	39520 B	37
652 J-24	39	22569 D	23, 35	39520 M	37
660-142	35	22569 G	29	39520 S	37
660-168	39	22569 K	23	39520 T	37
660-202	25	22571 E	23	39520 AD	37
660-206	31	22580 A	33	39520 AT	37
660-207	29	22585 A	33	39521 C	25
660-240	39	22586 R	23	39521 D	25
660-243	23	22587 J	33	39524 C-3/32	37
660-264	39	22587 M	25	39524 C-1/8	37
660-268	25	22588 A	33	39524 S	37
660-443	25	22596 E	29	39524 T	37
660-458	39	22596 G	25	39524 W	37
666-94	25	22597 E	33, 35	39524 AT	37
666-255	31	22650 CB-4	39	39525	33
667 B-12	25	22650 CE-6	39	39525 A	33
667 D-8	23	22651 CD-4	39	39525 F	33
1025 L	31	22651 CD-5	39	39525 M	33
6042 A	33	22653 B-12	25, 33	39525 N	33
8372 A	27, 35			39526 S	37
9271	39			39526 T	37

NUMERICAL INDEX OF PARTS

<u>Part No.</u>	<u>Page No.</u>	<u>Part No.</u>	<u>Page No.</u>	<u>Part No.</u>	<u>Page No.</u>
39526 U.....	37	39544.....	31	39578 P.....	27
39526 AD.....	37	39544 B.....	31	39578 W.....	23
39526 AL.....	37	39544 D.....	31	39580 A.....	33
39526 AN.....	37	39544 J.....	31	39582 F.....	23
39526 MM.....	37	39544 L.....	25	39582 V.....	23
39530.....	37	39544 N.....	31	39582 W.....	23
39530 C.....	37	39544 S.....	31	39582 X.....	23
39530 F.....	37	39544 U.....	31	39582 Y.....	23
39530 G.....	37	39544 V.....	31	39582 AD.....	23
39530 P.....	37	39549.....	33	39582 AE.....	23
39531 H.....	33	39549 J.....	33	39582 AF.....	23
39531 J.....	33	39550 C.....	33	39582 AG.....	23
39531 K.....	33	39550 E.....	33	39582 AK.....	23
39531 L.....	33	39550 L.....	33	39590.....	25
39531 M.....	33	39550 M.....	33	39590 D.....	25
39531 N.....	33	39550 N.....	33	39590 G.....	25
39531 P.....	33	39551 A.....	29	39590 H.....	25
39531 R.....	33	39551 F.....	29	39590 J.....	25
39531 S.....	33	39551 G.....	29	39590 L.....	25
39532 A.....	23	39552.....	29	39590 N.....	25
39534 A.....	29	39552 C.....	29	39590 P.....	25
39534 B.....	27	39552 P.....	25	39590 R.....	25
39534 H.....	29	39552 R.....	29	39590 S.....	25
39535 D.....	27	39552 T.....	29	39590 T.....	25
39535 E.....	27	39552 U.....	25	39591 A.....	25
39535 G.....	29	39555.....	35	39591 B.....	25
39535 H.....	23	39555 A.....	35	39591 H.....	25
39535 J.....	27	39555 B.....	35	39591 K.....	25
39536 E.....	27	39555 C.....	35	39591 L.....	25
39536 F.....	29	39555 D.....	35	39592 Z.....	35
39536 G.....	29	39555 E.....	25	39592 AA.....	35
39536 H.....	29	39555 F.....	35	39592 AB.....	35
39536 J.....	27	39555 N.....	25	39592 AC.....	35
39536 K.....	27	39556 A.....	23	39592 AD.....	35
39536 L.....	27	39556 F.....	35	39592 AF.....	35
39536 M.....	27	39556 H.....	35	39592 AG-3.....	35
39536 N-247.....	27	39556 K.....	35	39592 AG-5.....	35
39536 N-248.....	27	39557.....	23	39592 AH.....	35
39536 N-249.....	27	39557 A.....	23	39592 AJ.....	35
39536 P.....	27	39557 B.....	23	39592 AK.....	35
39536 R.....	27	39557 C.....	23	39592 AL.....	35
39536 S.....	27	39557 E.....	23	39592 AM.....	35
39536 U.....	27	39557 F.....	23	39592 AN.....	35
39536 V.....	27	39563 F.....	23	39592 AR-4.....	35
39536 W.....	27	39563 G.....	29	39592 AR-5.....	35
39536 X.....	27	39563 H.....	35	39592 AR-8.....	35
39536 Y.....	27	39563 W.....	23	39593 C.....	23
39536 AB.....	27	39568 A.....	29	39593 D.....	23
39536 AC.....	27	39568 B.....	35	39593 H.....	23
39536 AD.....	29, 39	39568 D.....	35	39594 G.....	23
39536 AF.....	29	39568 E.....	35	39594 H.....	23
39536 AH.....	27	39568 G.....	23	39594 N.....	25, 29, 31
39536 AJ.....	27	39568 J.....	23	39594 R.....	23
39538.....	29	39568 L.....	35	39595.....	23
39540 B-4.....	29	39568 R.....	35	39597 A.....	37
39540 B-6.....	29	39568 Y.....	29	39597 S.....	37
39540 B-12.....	27	39570.....	33	39597 T.....	37
39540 B-14.....	27	39570 J.....	33	39597 AD.....	37
39540 B-16.....	27	39571 B.....	33	39597 AT.....	37
39540 C.....	29	39571 C.....	33	39636.....	27
39541 A.....	25	39571 D.....	33	39636 A.....	27
39543.....	31	39571 F.....	33	39636 B.....	27
39543 A.....	31	39572.....	33	39636 C.....	27
39543 E.....	31	39572 A.....	33	39636 D.....	27
39543 K.....	31	39573 A.....	25, 33	39636 E.....	27
39543 M.....	31	39573 E.....	33	43137 E.....	39
39543 P.....	31	39573 H.....	33	43139 A.....	27, 33
39543 S.....	31	39573 J.....	33	43243 N.....	25
39543 T.....	31	39573 K.....	25	53634 C.....	27, 29
39543 U.....	31	39573 AA.....	25	55235 D.....	33
39543 W.....	31	39578 K.....	23	55235 E.....	33
39543 X.....	31	39578 M.....	27	61351 K-625.....	29

Helpful, authoritative information on the most efficient types of equipment for making virtually any machine sewed article is available from Union Special's Sales Promotion Department. Among the many interesting, illustrated bulletins that are available without obligation are the following:



- No. 240, "Men's, Women's, Children's Footwear"
- No. 249, "Rainwear"
- No. 250, "Men's Dress Shirts"
- No. 251, "Service Shirts and Pants"
- No. 252, "Men's Shorts and Pajamas"
- No. 253, "Overalls, Coveralls, and Dungarees"
- No. 254, "Men's Knit Underwear"
- No. 256, "Knit Outerwear"
- No. 259, "Men's Sports Shirts"
- No. 260, "Work Gloves"
- No. 262, "Cotton, Burlap, Jute, and Multiwall Paper Bags"
- No. 263, "Men's Clothing"
- No. 264, "Men's Women's, Children's Jackets"
- No. 265, "Women's Wear"
- No. 266, "Women's Wear And High Fashion"
- No. 267, "Corsets, Girdles, Brassieres"
- No. 268, "Children's Wear"
- No. 269, "Mattresses, Slip Covers, Furniture Upholstery"
- No. 271, "Awnings, Canopies, Tents, Tarps"
- No. 273, "Curtains & Drapes"
- No. 610, "Klipp-it"
- No. 710, "MCS ForMation Unit"
- No. 730, "MCS Automatic Dual Underfront Shirt Hemmer"
- No. 740, "MCS Automatic Rib-Knit Cuff Machine"
- No. 750, "Fusing Presses"
- No. 1100, "Lewis Blindstitch, Chainstitch, Lockstitch, Machines"
- No. 1105, "Button Sewers—Ticket Tackers"
- "Columbia Blindstitch, Saddle Stitch, and Tie Closing Machines"
- No. 1500, "Alteration Department Machines"

 **Union Special**<sup>®</sup>  
FINEST QUALITY  
**CORPORATION**

**HERE ARE HELPFUL  
BULLETINS and CATALOGS  
TO HELP YOU SOLVE  
SEWING PROBLEMS**



# BOOST PRODUCTION WITH THESE WORK AIDS FROM UNION SPECIAL




**PNEUMATIC CHAIN-CUTTER**—for use on conventional Class 39500 and 39600 is a durable scissor-action mechanism that makes a clean positive cut. Style 2899 A-1



**PNEUMATIC FOOT LIFTER**—The air-operated foot lifter for use on Class 39500 machines allows the operator to raise the foot simply by knee-touching an actuating switch.




**AIR FABRIC UNCURLER**—This unit, designed for Class 39500 machines, uses air jets to remove curls from top and bottom plies of flat knit materials as fabric passes through sewing area. Style 2899 B-1

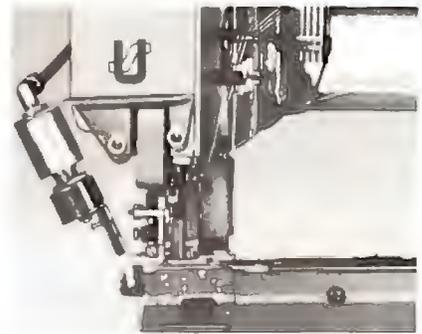


**CHAIN CUTTER**—The above photo shows the small pneumatic chain cutter that is available for installation as an accessory unit on Class 36200 Flatseamers. Style 2899A-6




**KNIFE GRINDER** sharpens straight or angle type knives, is simple and easy to operate, eliminates defective garments caused by dull knives.

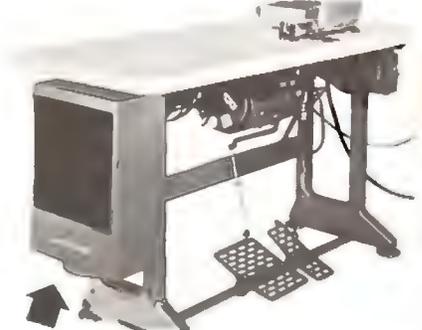

**HEAT DISPELLER**—Union Special's auxiliary unit (arrow) is an effective means for reducing oil temperature where heavy duty service requires it. Style 2899 E-1

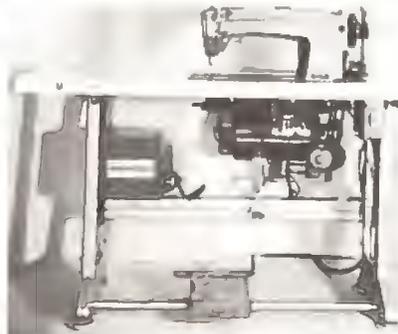

**AMCO ELECTRONIC NEEDLE POSITIONERS** eliminate the necessity of reaching for the hand-wheel to move the needle up or down . . . this allows the operator to keep both hands on the work, insuring better control, uniform quality and increased production.

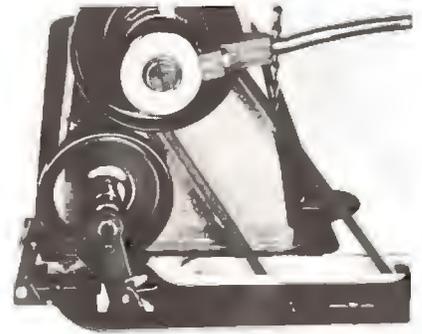

**U** *Union Special*<sup>®</sup>  
FINEST QUALITY  
CORPORATION



*Union Special*  
INDUSTRIAL SEWING MACHINES

UNION SPECIAL maintains sales and service facilities throughout the world. These offices will aid you in the selection of the right sewing equipment for your particular operation. Union Special representatives and service men are factory trained and are able to serve your needs promptly and efficiently. Whatever your location, there is a Union Special Representative to serve you. Check with him today.

**ATLANTA, GA.**

**BOSTON, MASS.**

**CHICAGO, ILL.**

**DALLAS, TEXAS**

**LOS ANGELES, CAL.**

**NEW YORK, N. Y.**

**PHILADELPHIA, PA.**

**MONTREAL, CANADA**

**TORONTO, CANADA**

**BRUSSELS, BELGIUM**

**LEICESTER, ENGLAND**

**LONDON, ENGLAND**

**PARIS, FRANCE**

**STUTT GART, GERMANY**

Representatives and distributors in all important industrial cities throughout the world.

*Union Special*

**CORPORATION**

**400 N. FRANKLIN ST., CHICAGO, ILL. 60610**