



THREADING AND OILING DIAGRAM
FOR STYLES 56300 E,F,C,N,R,U,X,AH and AL

The oil has been drained from the machine before shipping and the reservoir must be filled before starting to operate. Maintain oil level in "OPERATE" position and add oil when needle is to the black line located to the left of the "OPERATE" zone marked "LOW". The machine is automatically lubricated and no oiling other than keeping the main reservoir filled is necessary. For further lubricating instructions refer to paragraph on "LUBRICATION" and "RECOMMENDED OIL" on page 14.

Thread machine in accordance with the threading diagram above for Styles 56300 E,F,G,N,R,U,X,AH or AL; or threading diagram Fig. 1 on page 12 for any other styles covered by this instruction.