


# INDUSTRIAL SEWING MACHINE

# ILLUSTRATED SPARE PARTS LIST FOR SAFETY STITCH MACHINE

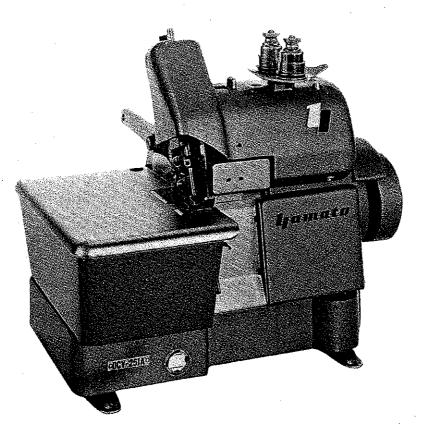


# MODEL

### DCY-251A DCY-251Y

From the library of: Superior Sewing Machine & Supply L


1.

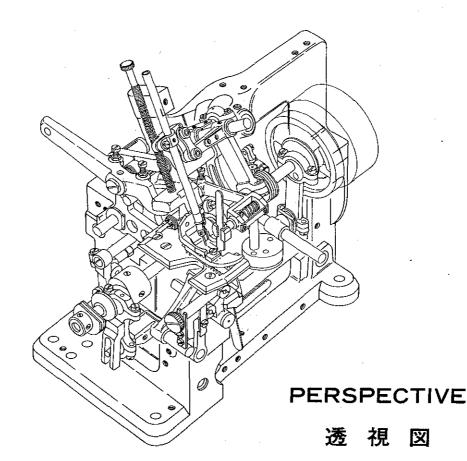

### CONTENTS

目 次

カバー関係(1)……1 **MISCELLANEOUS COVER** (1) MISCELLANEOUS COVER (2) カバー関係(2)……2 **MISCELLANEOUS THREAD EYELET** 糸道関係………3 **NEEDLE BAR DRIVING MECHANISM** 針棒機構………4 LOOPER DRIVING MECHANISM ルーパー機構………5 前ルーパー機構………6 FRONT LOOPER DRIVING MECHANISM PRESSER FOOT MECHANISM 押工機構……7 送り機構……8 FEED DRIVING MECHANISM TRIMMING KNIFE DRIVING MECHANISM メス機構………9 MISCELLANEOUS BUSHING & MAIN CRANKSHAFT ブッシュ,クランクシャフト関係……10 給油関係……11 **OIL LUBRICATING SYSTEM** SUBCLASS ORGANIZATION PARTS サブクラス構成部品……12 アクセサリー……13 ACCESSORY 索 引……14 NUMERICAL INDEX

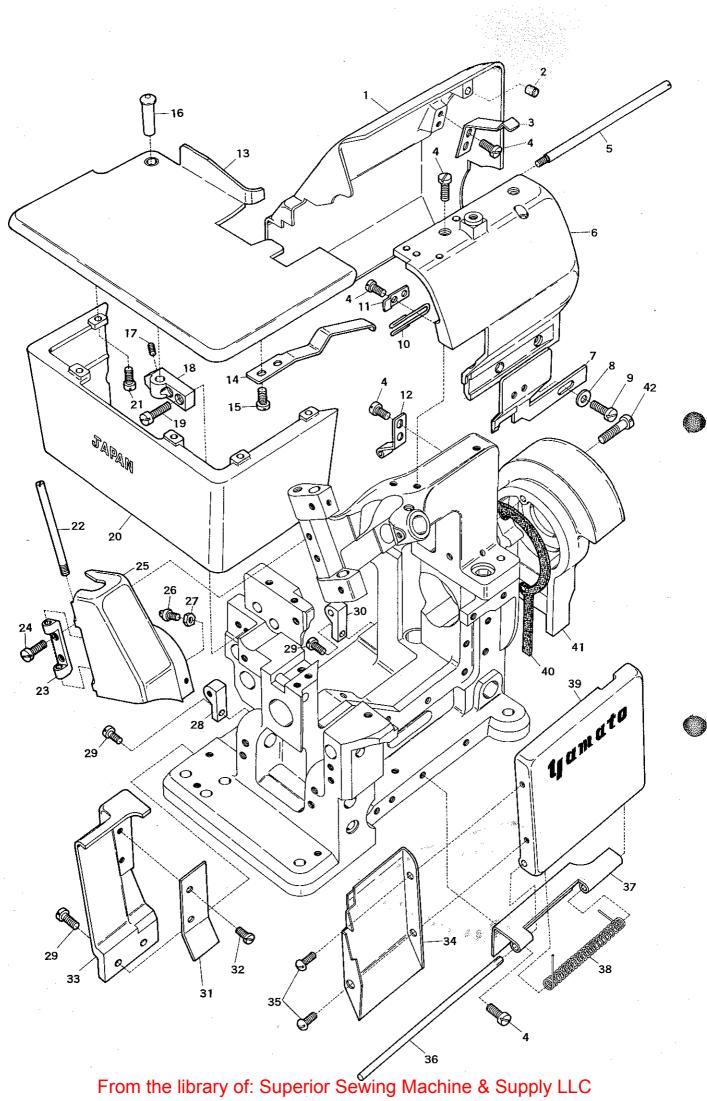


#### MISCELLANEOUS COVER(1)

カバー関係(1)

A	mt.	
к	eq.	


Ref. No.	Parts <u>No.</u>	Description		名	Amt Req
1	38214	Rear Cover (Open)	後開キカ/	۲	1
2	38221	Rear Cover Rubber Plug	」」「」」「」」「」」「」」「」」」		1
3	38234	Rear Cover (Open) Latch Spring	後開キカ/	バーバネー	1
4	1175	Screws for 38234, 38217, 38256, 38204	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・		
5	37772	Rear Cover Hinge Pin	後開キカ/	パーピン・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	····· 1
6	38217	Arm Front Cover			
7	38225	Chip Guard (Upper)			
8	541	Washer for 38225			
9	1156	Screw for 38225			
10	38254	Needle Bar Cover Latch Spring	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	- バネー・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
11	38256	Needle Bar Cover Latch Spring Seat		- バネ押エ	1
12	37774	Rear Cover Latch Spring	後開キカノ	バーバネ掛ケ	····· 1
13	38208	Cloth Plate			
14	38232	Cloth Plate Latch Spring	大カバー/	べえ	1
15	4358	Screws for 38232			
16	38212	Cloth Plate Hinge Pin	大カバーも	ニンジピン	1
17	9209	Screw for 38212			
<b>18</b>	38211	Cloth Plate Hinge Bracket	大カバーと	ニンジ台	1
19	7311	Screws for 38211		ニンジ台止ネジ・・・・・・・・・・	2
20	38213	Cloth Plate Frame	横カバー…		1
21	4352	Screw for 38213			
22	37617	Needle Bar Connecting Link Cover Pin	針棒カバ-	- ビン	1
23	37616	Needle Bar Connecting Link Cover Bracket	針棒カバ-	- 取付台	1
24	7616	Screws for 37616	針棒カバ-	- 取付台止ネジ・・・・・・・・・・	······ 2
25	38216	Needle Bar Cover			
26	38255	Needle Bar Cover Latch Plug			
27	322	Nut for 38255			
28	37771	Rear Cover Hinge (Left)	後開キカノ	バーヒンジ(ネジ穴付)…	······ 1
29	7609	Screws for 37770, 37771, 38237	止ネジ		
<b>30</b> ·	37770	Rear Cover Hinge (Right)	後開キカノ	ベーヒンジ(ピン穴付)…	1
31	38 238	Rear Cover Oil Shield			
32	5036	Screw for 38238			
33	38237	Rear Cover	······後カバー··		······ 1
34	38247	Chip Guard (Lower)			
. 35	5133	Screws for 38247	切屑落シホ	反止 ネ ジーーーーー	····· 2
36	38205	Front Cover Hinge Pin	前開キカ/	バービン	······ 1
37	38204	Front Cover Hinge			
<b>3</b> 8	37607	Front Cover Restoring Spring-	前開キカノ	ヾ― ノヾネ・・・・・	1
39	38203	Front Cover	前開キカ/	۲	····· 1
40	38227	Front Looper Connecting Rod Cover Gasket	縦ロッドカ	カバーパッキン	1
41	38226	Front Looper Connecting Rod Cover			
42	9303	Screw for 38226	縦ロッドフ	カバー止ネジ	

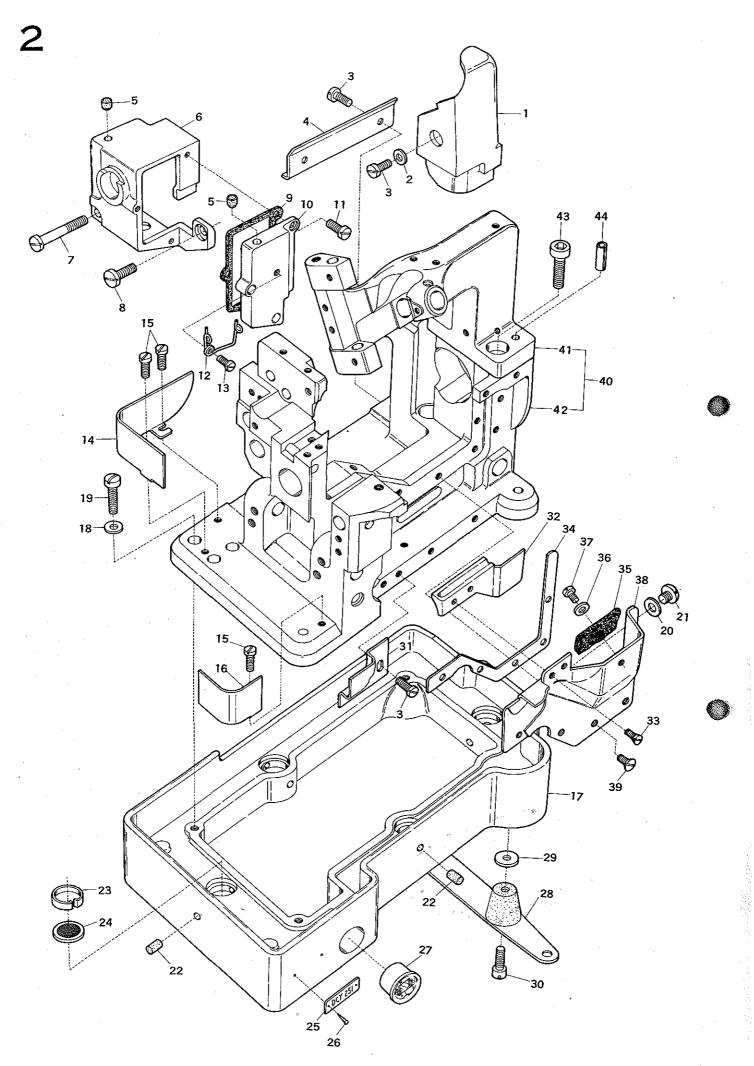

#### MISCELLANEOUS COVER (2)

カバー関係(2)


Ref. No.	Parts <u>No.</u>	Description	品名	Amt. Req.
1	37622	Front Cover (Fix)	前カバー	1
2	541	Washer for 37622	」座金	1
3	1175	Screws for 37622, 38229, 38207	止ネジ	
4	38229	Rear Oil Shield	ベッド油除ケベッド油除ケ	1
5	38221	Looper Connecting Rod Cover Rubber Plug		
6	38219	Looper Connecting Rod Cover	小ロットカバー	1
7	4633	Screw for 38219	小ロットカバー止ネジ	1
8	9930	Screw for 38219	小ロットカバー止ネジ	1
9	38222	Looper Connecting Rod Cover Plate Gasket		1
10	38220	Looper Connecting Rod Cover Plate	小ロットカバー蓋	······ 1
11	1186	Screws for 38220	小口ットカバー蓋止ネジ	
12	38239	Front Looper Thread Guide	前ルーパー糸道(大)	······ 1
13	1196	Screw for 38239	前ルーパー糸道(大)止ネジ	1
14	37626	Angle Cover (Large)	角カバー(大)	······ 1
15	1208	Screws for 37626, 37627		····· 4
16	37627	Angle Cover (Small)	角カバー(小)	1
17	38344	Base	·····ベース······ベース·····	1
18	562	Washers for 38344	·····································	
19	7763	Screws for 38344	・・・・・・・・ベース止ネジ・・・・・・・・・・・・・・・・・・・・・・	
20	578	Washer for 38344	······································	1
21	7678	Screw for 38344	ベース止ネジベース止ネジ	1
22	751	Plugs for 38344	結栓結栓	4
23	37681	Round Oil Filter Screen Clamp	·····································	6
24	37680	Round Oil Filter Screen	·····································	6
25		Model Indicate Plate	型式板型式板	1
26	726	Rivets for Model Indicate Plate	·················型式板止メ鋲····································	······ 2
. 27	37679	Oil Sight Gauge	·····オイルゲージ······オイルゲージ·····	1
28	37540	Base Rubber Cushion	ベースゴム座	
29	568	Washers for 37540	座金	······ 4
30	5083	Screws for 37540	ベースゴム座止ネジ <del></del>	
31	38207	Front Looper Holder Cover		1
32	38240	Front Oil Shield (Upper)	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
. 33	1613	Screws for 38240		
34	37620	Front Oil Shield Gasket	・・・・・前カバーパッキン・・・・・・・・・・・	······ 1
35	37692	Front Oil Shield Felt	・・・・・・・・・・前カバーフェルト・・・・・・・・・・・	······ 1
36	531	Washer for 37692		
37	7618	Screw for 37692	・・・・・・前カバーフェルト止ネジ・・・・・・	
38	37619	Front Oil Shield (Lower)	前カバー	······ 1
39	7619	Screws for 37619		
40	38200	Machine Frame Complete Set	ベット(組)	1
41	38201	Arm		
42	38202	Machine Frame		
43	9091	Screws for 38201		
44	710	Pin for 38201		

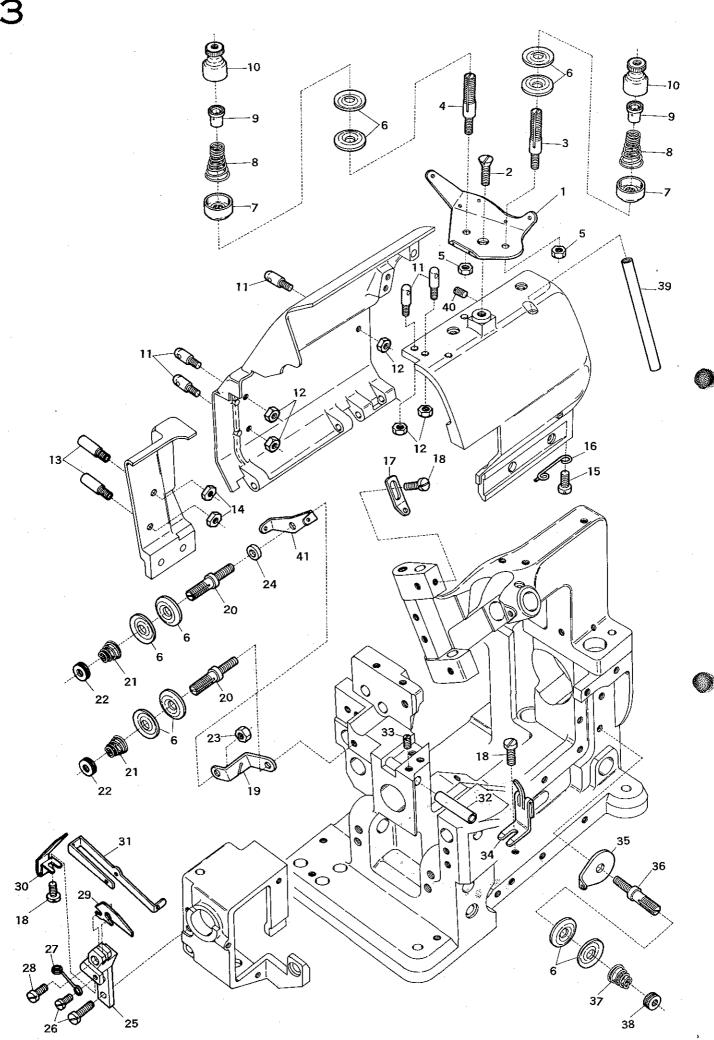

#### MISCELLANEOUS THREAD EYELET

糸道関係

	Ref. No.	Parts No.	Description	品 名	$\frac{Amt.}{Req.}$
	1	37748	Tension Disc Eyelet for Needle Thread		
		1732	Screw for 37748		<u>1</u>
	2 3	7904	Tension Post for Double Chain Stitch		
	5 4	7905	Tension Post for Overseam	∽	
		340	Nuts for 37748		
	5 6		Tension Disc		
		31111	Thread Tension Retainer		
	7	37635	Needle Thread Tension Spring		
	8	37633	Tension Spring Bushing		2
	9	37631	Tension Spring Bushing Thread Tension Spring Cap		2
	10	37634			
	11	38361	Thread Guide		5
	12	331	Nuts for 38361	・・・・・ナット・・・・	5
	13	38236	Front Looper Threading Tubes	·······糸道□金······	2
	14	341	Nuts for 38236	·····・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	2
	15	/37788 今	Upper Looper Thread Eyelet	・・・・アームカバー下糸道・・・・・ア	······ 1
	16	L 1196-	Screw for 37788	アームカバー下糸道止ネジ	······ 1
-	17	37101	Needle Thread Eyelet	上糸道,	······ 1
	18	4358	Screws for 37101, 37104, 38077	止ネジ	
000	19	38073	Tension Disc Eyelet Bracket	糸調子台(後)糸調子台(後)	······ 1
	20	1817	Tension Posts		2
	21	37115	Looper Thread Tension Spring	渦巻バネ (極細)	2
	22	56	Adjusting Nuts	調節ツマミ	
	23	340	Nuts for Tension Post		
	24	543	Washer for Tension Post	••••••座金·•••••	
	25	38293	Front Looper Thread Take-up Eyelet Bracket	二又糸道台	1
	26	7405	Screws for 38293	二又糸道台止ネジ	
	27	38230	Front Looper Thread Eyelet	前ルーパー糸通(小)	····· 1
	28	1227	Screws for 38230, 38079	·····································	
	29	38079	Front Looper Thread Cast-off		······ 1
	30	38077	Front Looper Thread Take-up Eyelet Spring	ニ又糸道バネ	····· 1
	31	38294	Front Looper Thread Take-up Eyelet		
	32	37103	Lower Looper Threading Tube	へべ這 	
	33	3435	Screw for 37103	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	····· 1
•	34	37104	Upper Looper Thread Hook		
	35	37104	Tension Disc Eyelet for Upper Looper Thread		
			Tension Post for Upper Looper Thread	·····································	
۲	36 37	7817 37114	Upper Looper Thread Tension Spring	おりれたの丁 ロ 	
	38	55	Adjusting Nut Arm Front Cover Threading Tube		
	39	37787	Arm Front Cover Threading Tube Screw for 37787		······································
	40	3434	•		
	41	38074	Tension Disc Eyelet for Front Looper Thread	······ルーパー糸道······	1

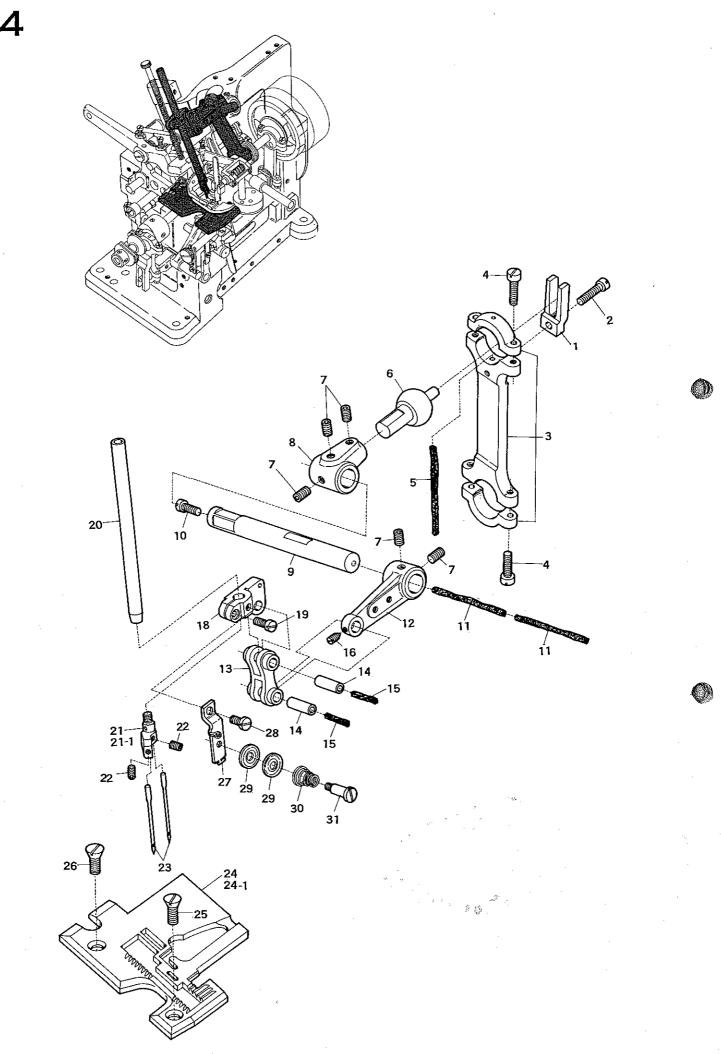

#### NEEDLE BAR DRIVING MECHANISM

Ref. No.

24-1


針棒機構

Parts No.	Description	品名	Amt. Req.
37130	Needle Bar Connecting Rod Guide Fork	······振り止メ·······振り止メ···················	<b>1</b>
1170	Screw for 37130		
38120	Needle Bar Connecting Rod		
7311	Screws for 38120	大口ッド止ネジ	4
<u> </u>	Felt for 38120	油芯	1
37132	Needle Bar Driving Crank Ball Stud	球(穴付キ)	······ 1
3635	Screws for 37132, 37127, 37150		
37127	Needle Bar		
37128	Needle Bar Driving Crankshaft	針棒クランク軸	
7128	Screw for 37128	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	····· 1
291	Felts for 37128	油芯	
37150	Needle Bar Driving Crank (Front)	針棒前クランク	······ 1
90321	Needle Bar Connection Link	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	······ 1
90320	Needle Bar Connection Link Pin	針棒リンクピン	
282	Felts for 90320	油芯	
3311	Screws for 90320	針棒リンクピン止ネジ	
4313	Screws for 90320	針棒リンクビン止ネジ	2
37151	Needle Bar Connecting Bracket	·······針棒抱キ·····	······ 1
1186	Screw for 37151	針棒抱キ止ネジ	1
37372	Needle Bar	⋯⋯⋯⋯翁†棒·⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯⋯	1
38101	Needle Holder for DCY-251A	······	1
38011	Needle Holder for DCY-251Y	針止 メ 丫	······ 1
3637	Screws for Needle Holder	······-針止ネジ······	
	Needles		2
38352	Throat Plate for DCY-251A	·······針板A·····	
38241	Throat Plate for DCY-251Y	┅┅┅ः針板丫·····	1

Needle Bar Thread Retainer Bracket 小小調子台

Needle Bar Thread Retainer Spring …………小調子バネ………小調子バネ


Screw for 37109 小小小調子バネ止ネジーーーーー 1

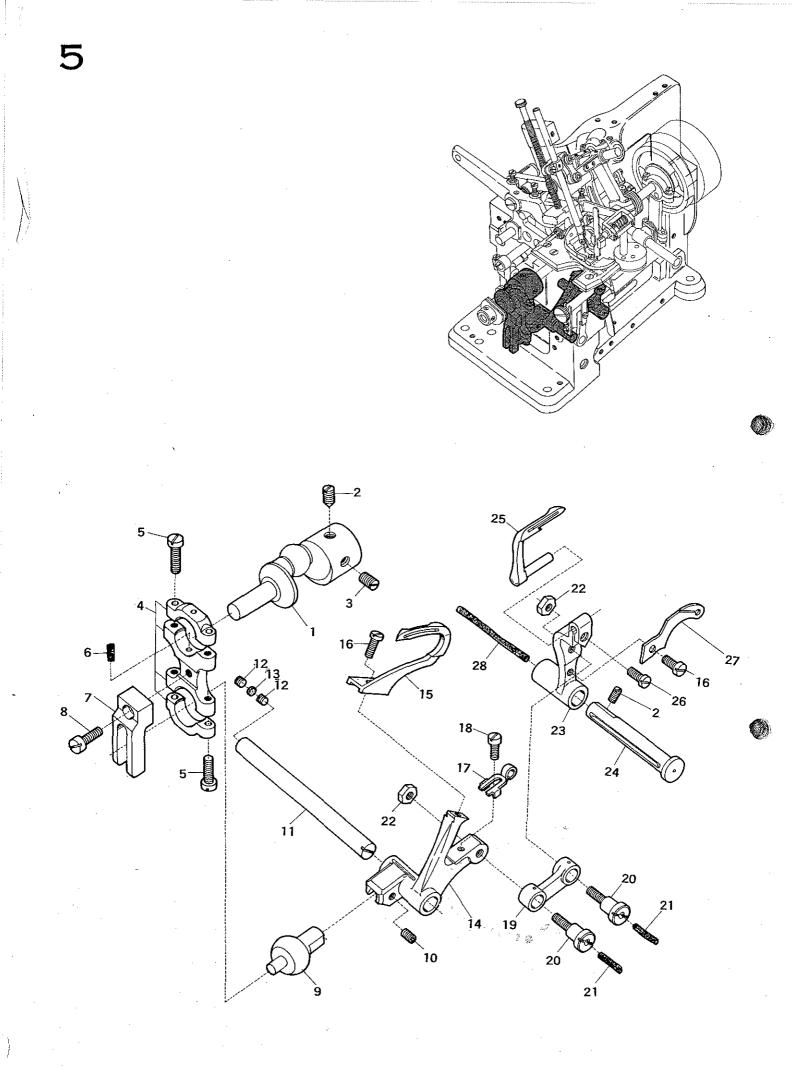

#### LOOPER DRIVING MECHANISM

ルーパー機構

Ref. No.	Part No.	<u>Description</u> 品名 Red	
1	38291	Looper Driving Crankshaft	
2	2022	Screw for 38291, 37649	
3	2368	Screw for 38291	
4	37311	Looper Connecting Rod	
5	7311	Screws for 37311	
6	<u> </u>	Felt	
7	37130	Looper Connecting Rod Guide Fork振り止メ振り止メ	
8	1170	Screw for 37130	
9	37121	Driving Lever Ball Stud	
10	3635	Screw for 37121	
11	37647	Upper Looper Shaft	
12	1457	Screws for 37647	
13	925	Plug for 37647	
14	37304	Upper Looper Holder Arm	
15	37301	Upper Looper	
16	1196	Screw for 37301, 37308 2	
17	37307	Upper Looper Thread Pull-off 1111 1111 1111 1111 1111 1111 1111	
<b>18</b>	4 <u>2</u> 37	Screw for 37307	
<b>V</b> 19	37315	Lower Looper Connection Link $1 > 7 > 7 > 7 > 7 > 7 > 7 > 7 > 7 > 7 > $	
20	1335	Screws for 37315	
21	290	Felts for 37315	
22	18	Nuts for 373152	
23	37648	Lower Looper Holder Arm	
24	37649	Lower Looper Shaft	
25	37302	Lower Looper	
26	7302	Screw for 37302	
27	37308	Upper Looper Thread Pull-off	
28		Felt for 37649	

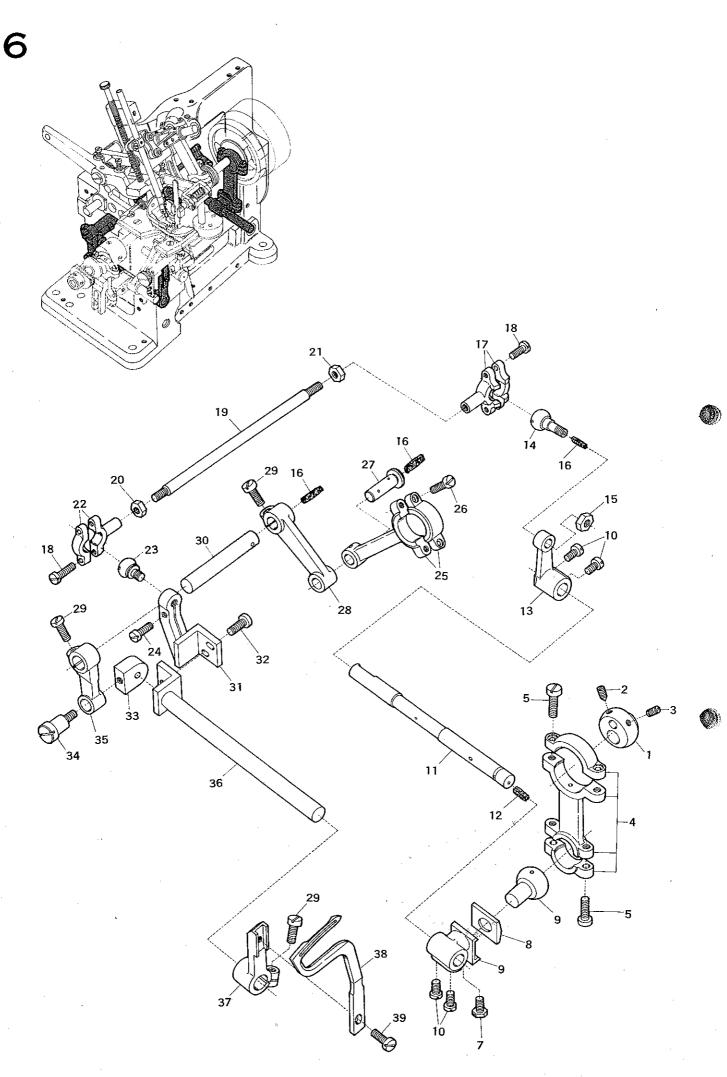


,

#### FRONT LOOPER DRIVING MECHANISM

前ルーパー機構


Ref. <u>No.</u>	Parts	Description		名	Amt. Req.
1	38024	Front Looper Driving Eccentric		ン	1
2	3436	Screw for 38024	球エキセ	ン止ネジーーーー	1
3	9209	Screw for 38024		ン止ネジ・・・・・	
4	38269	Front Looper Connecting Rod	ルーパー	ロット (組)	1
- 5	9608	Screws for 38269	·····ルーンペー	ロット (組) 止ネシ	; <b>4</b>
6	38272	Front Looper Connecting Rod Ball Stud		クランク球	
7	7121	Screw for 38272	ルーパー	ク ランク球止ネジー	
8	38029	Front Looper Connecting Rod Spacer			
9	38030	Front Looper Connecting Rod Lever	ルーパー	- クランク	
10	9508	Screws for 38030, 38275		······	
11	38273	Front Looper Driving Shaft (Right)	ルーパー	クランク軸・・・・・・・・・	····· 1
12	730	Felt			
13	38275	Front Looper Driving Lever (Right)	ルーパー	クランク軸腕	······ 1
14	38277	Front Looper Ball Stud (Right)	小球(長	)	
15	18	Nut for 38277	小球(長	)止ネジ・・・・・	······ 1
16	720	Felt for 38277, 38285, 38287	******油芯******		
17	38019	Front Looper Ball Joint (Right)	₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩	(大)	1
18	4357	Screws for 38019, 38020	横口ット、	止キジ	4
19	38037	Front Looper Ball Joint Connection	横口ット	連絡桿	1
20	335	Nut	·····・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・		1
21	336	Nut			
22	38020	Front Looper Ball Joint (Left)	横口ット	(小)	······ 1
23	38040	Front Looper Ball Stud (Left)		)	
.24	1174	Screw for 38040		)止ネジ・・・・・	
25	38056	Front Looper Oscillating Rod	······ルーパー	ロット (組)	····· 1
26	2043	Screws for 38056	ルーパー	ロット(組)止ネシ	ž 2
27	38285	Front Looper Oscillating Rod Pin	ルーパー	ロットピン	1
28	38052	Front Looper Oscillating Lever (Left)	後ピン腕	(/J\) ······	
29	4437	Screws for 38052, 38286, 38290			
30	38287	Front Looper Oscillating Shaft	······J/ /*	後ピン	
31	38041	Front Looper Driving Lever (Left)	前ルーパ		1
32	5037	Screws for 38041		ー軸腕止ネジ	2
33	38289	Front Looper Slide Block	滑り子		1
34	6059	Screw for 38289	滑り子止	ネジーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーー	1
35	38286	Front Looper Oscillating Lever (Right)	後ビン腕	(大)	1
36	38280	Front Looper Driving Shaft (Left)		軸	
37	38290	Front Looper Holder Arm			
38	38059	Front Looper	前ルーパ		
39	4351	Screw for 38059	前ルーバ	∽止ネジ	1

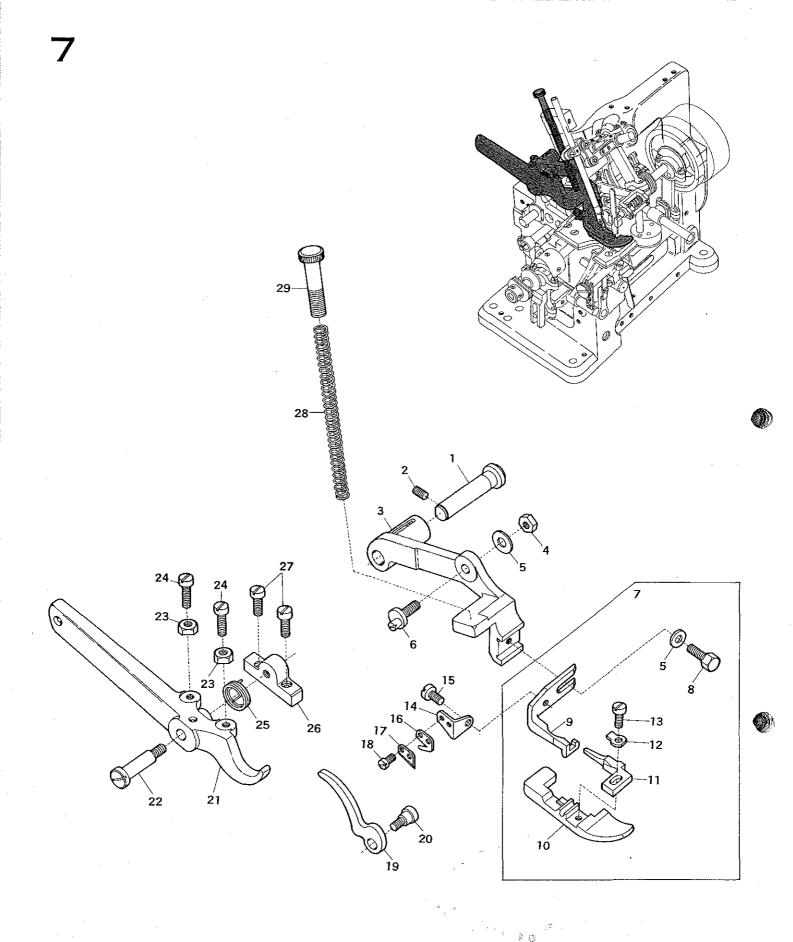

#### PRESSER FOOT MECHANISM

押エ機構


Ref.	Parts		Amt.
<u>No.</u>	<u>No.</u>	<u>Description</u> 品名	Req.
	07550		
1	37552	Presser Arm Hinge Stud	
2	3434	Screw for 37552	
3 4	37140	Presser Arm	
	340	<i>Nut for 37140</i>	
5	554	Washer for 37140,38120	
6	7143	Eccentric Screw Stud	
.7	38120	Presser Foot Complete Set	
8	2308	Screw for 38120	
9	38111	Presser Foot Holder	1
10	38121	Presser Foot	1
11	38114	Presser Foot Stitch Tongue	
12	30619	Presser Foot Hinge Spring押エヒンジバネーーーーー	
13	5036	Screw for 30619	····· 1
14	38333		
15	9730	Chain Cutting Knife Holder Bracket	1
16	30692	Chain Cutting Knife (Small) ···································	
17	30691	Chain Cutting Knife (Large) ····································	1
18	7616	Screws for 30691チェンカッター止ネジーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーー	
19	37144	Foot Lifter Hand Lever	
20	2214	Screw for 37144	
21	38251	Foot Lifter Lever	1
22	2285	Foot Lifter Lever Screw for 38251	
23	334	Nuts for 38251	
-		Nuts 707 38251	
24	2133		
25	37147	Foot Lifter Lever Spring	
26	37145	Foot Lifter Lever Bracket	
27	7311	Screws for 37145	
28	37141	Presser Spring 押工バネーーーー	······································
29	2371	Screw for 37141押工バネ止ネジ	T

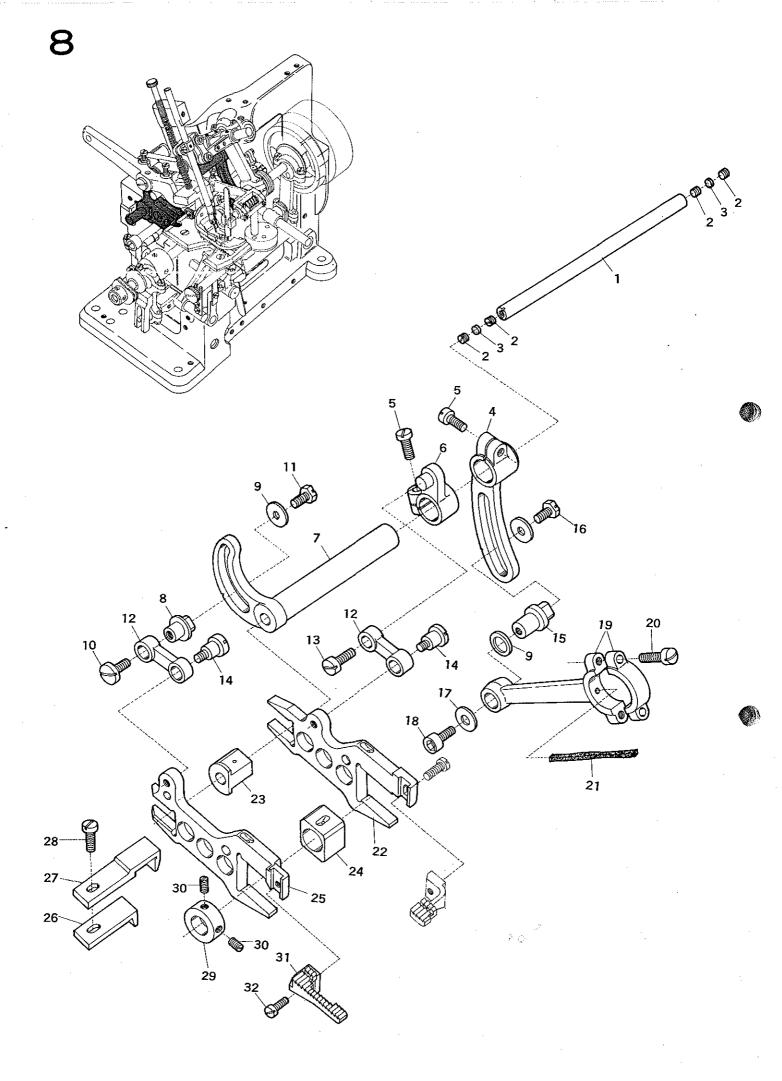

#### FEED DRIVING MECHANISM


送リ機構

Ref. No.	Parts No.	Description		名	Amt. Req.
1	37857	Feed Bar Shaft	··········送り台シ	ャフトーーーーーー	······ 1
2	1457	Screws for 37857			
-3	925	Feed Bar Shaft Gasket			
4	37652	Feed Regulator			
5	1156	Screws for 37652, 38315			
6	38315	Main Feed Bar Driving Lever	送りロッ	クシャフト腕	1
7	38314	Differential Feed Rocker			
8	38319	Feed Bar Driving Connection Pin	前送リリ	ンクビン・・・・・	
9	551	Washer for 38318, 38319			
10	4479	Screw for 38319	送りリン	クピン止ネジ	1
11	5540	Screw for 38319	前送口口、	ソクピン止ネジ	
12	38318	Feed Bar Driving Connection			
13	6058	Screws for 38318	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	ィ クゖネジ·····	2
14	6257	Screw for 38318			
15	38064	Feed Dog Driving Connecting Rod Pin			
16	5540	Screw for 38064	送りロッ	トビン止ネジーーー	1
17	555	Washer for 38064			
18	5028	Screw for 38064			
19	38311	Feed Dog Driving Connecting Rod	送りロッ	ト (組)	I
20	2043	Screw for 38311			
21	283	Felt for 38311			
22	38317	Main Feed Bar			
23	38149	Feed Bar Guide Block			
$24^{-2}$	37869	Feed Lift Block			
25	38316	Diffential Feed Bar			
26	37874	Feed Bar Guide (Left)			
27	37873	Feed Bar Guide (Right)			
28	5046	Screw for 37873	送り取付#	台案内止ネジ	
29	37870	Feed Lift Block Collar			
30	9526	Screws for 37870	駒止カラー	- 止ネジ・・・・・	
31	38322	Plain Feed Dog		******	
32	1175	Screw for 38322			
					~

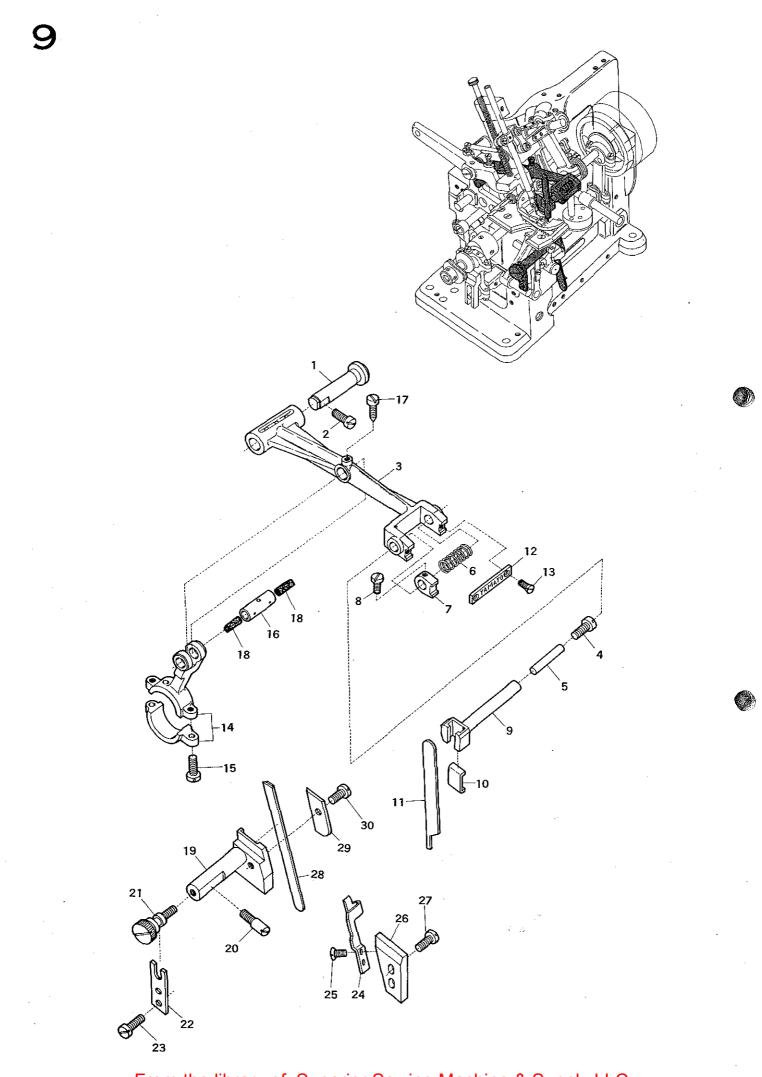

#### TRIMMING KNIFE DRIVING MECHANISM メス機構

Ref. Vo.	Parts No.	Description	品	名	Amt. Req.
1	37552	Upper Knife Driving Arm Stud			
2	4435	Screw for 37552			
3 4	38331	Upper Knife Driving Arm Stud			
4	1132	Screw for 38331			
5	37560	Upper Knife Clamp Pin			
6	37558	Upper Knife Holder Spring			
7	37554	Upper Knife Holder Guide			
8	1227	Screw for 37554			
9	37510	Upper Knife Holder			
10	37512	Upper Knife Clamp	上メス押	シーーーー ・	1
11	37514	Upper Knife			
12	37553	Upper Knife Holder Guide Plate			
13	1613	Screws for 37553	上メス案	内板止ネジ・・・・・・	
14	37883	Upper Knife Driving Connecting Rod	上メスロ	ット (組)	······ 1
15	1174	Screws for 37883			
16	37876	Upper Knife Driving Connecting Rod Pin	上メスロ	ットビン・・・・	····· 1
17	1176	Screw for 37876		ットピン止ネジ…	1
18	290	Felts for 37876			
19	30423	Lower Knife Holder			
20	6818	Screw for 30423	下メス台.	止ネジーーーーー	1
21	6441	Adjust Screw for 30423			
22	30424	Lower Knife Holder Regulating Plate			
23	4440	Screw for 30424			
24	38067	Needle Guard			
25	1613	Screws for 38067			
26	30425	Lower Knife Holder Locking Plate			
27	1175	Screws for 30425			
28	37538	Lower Knife			
29	30422	Lower Knife Clamp		<u> </u>	
30	4353	Screw fow 30422	下メス押	工止ネジ	

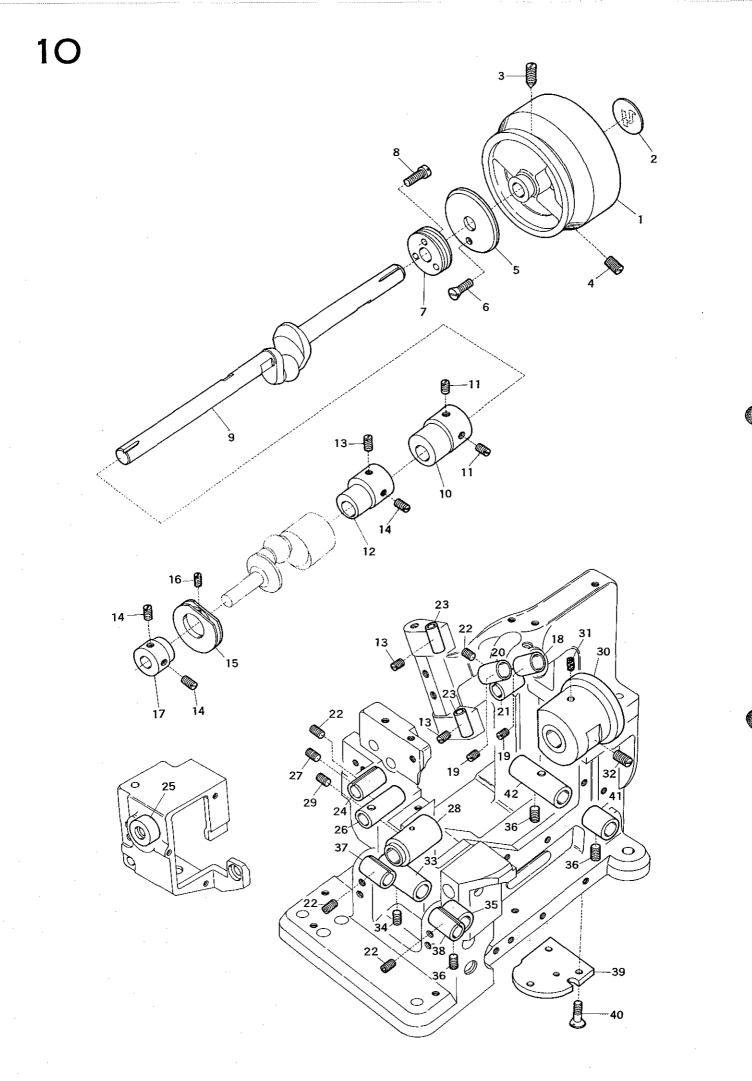

MISCELLANEOUS BUSHING & MAIN CRANKSHAFT

ブッシュ、クランクシャフト関係

品

名


Amt. Req.

Ref.

No.

Pulleyブーリー1Hand Whe el Markハンドホイルマーク1Screwsfor 38260ブーリー決メネジ1Screw for 38260ブーリー上ネジ1Crankshaft Oil Shield Ring油除ケ円板1Screw for 38265油除ケ円板1Oil Pump Driving Worm Gearウォーム1Screws for 38282ウォーム上ネジ1Main Crankshaftクランクシャフト1Feed Driving and Front Looper Oscillating Eccentric前後エキセン上ネジ2Screws for 37856, 37049山ネジ3Screw for 37856, 38292山ネジ3Front Looper Thread Take-up前糸調子カム1Screws for 38072前糸調子カム1

15	38072	Front Looper Thread Take-up
16	3637	Screws for 38072····································
17	38292	Front Looper Thread Take-up Bushing
18	37133	Needle Bar Drining Bushing (Front)
919	3434	Screws for 37133, 371 34
20	37134	Needle Bar Driving Crank Bushing(Rear)
21	37858	Feed Bar Shaft Bushing(Right)
22	3635	Screws for 37858, 37654, 37409 ······ 4
23	37049	Needle Bar Bushings
24	37654	Feed Bar Shaft Bushing(Left)
25	38223	Crank Shaft Bushing(Left) ····································
26	38288	Front Looper Driving Shaft Bushing
27	3631	Screw for 38288 ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・
28	37645	Crank Shaft Bushing(Middle) ······· 1
29	2022	Screw for 37645
30	38300	Crank Shaft Bushing(Right)1
31	294	Felt for 38300
32	3639	Screw for 38300
33	38274	Front Looper Driving Shaft Bushing(Rear Right) ルーパークランク軸ブッシュ(長) 1
34	9503	Screw for 38274
35	37043	Front Looper Driving Shaft Bushing
<u> </u>	7209	Screws for 38043, 38276
37	38654	Upper Looper Shaft Bushing(Rear)(Common to Ref. No.24)割ブッシュ(穴アリ) 1
<b>~</b> 38	37409	Upper Looper Shaft Bushing(Front)割ブッシュ(穴ナシ)
39	38228	Bottom Plate
40	7619	Screws for 38228··································
41	380 43	Front Looper Driving Shaft Bushing(Common to Ref.No.35)ルーバークランク軸ブッシュ(短) $1$
42	38276	Front Looper Driving Shaft Bushing(Rear Left) $\dots \dots \dots$

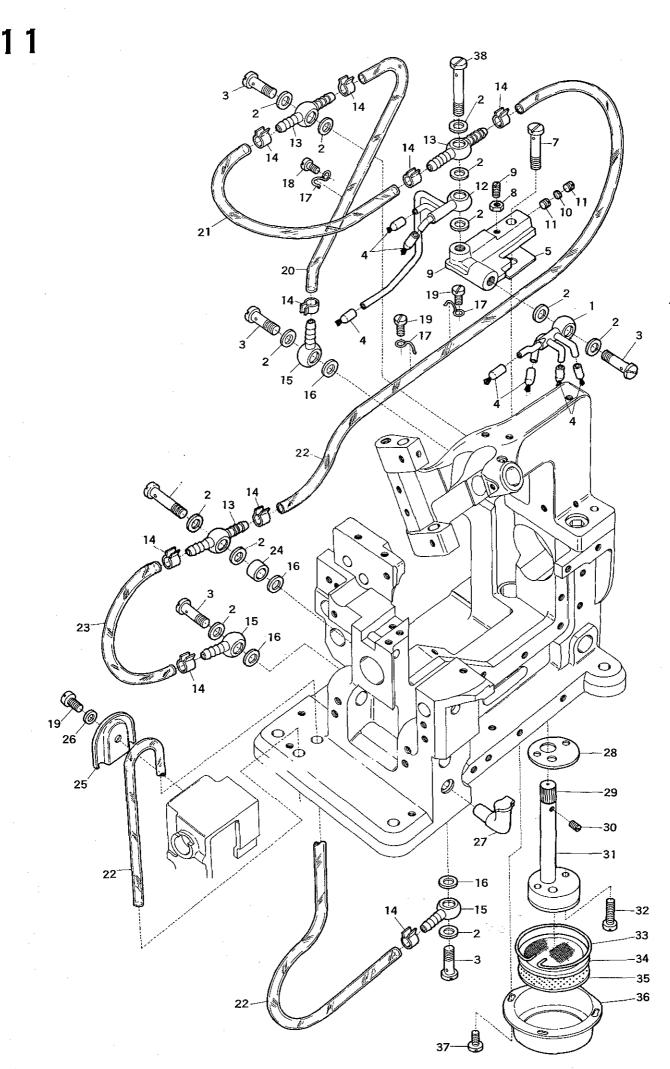


#### OIL LUBRICATING SYSTEM

給油関係

11

Ref. No.	Parts <u>No.</u>	Description	品名	Amt. Req.
1	38341	Oil Focal Point (Long)	·······注油管継手(長)	1
2	567	Washers for 38341, 38342, 37668, 37669, 37691	·····································	13
3	7668	Oil Tube Fitting End Bolt(Short)	管継手ボルト(短)管継手ボルト(短)	
4	37697	Oil Focal Point Cap		
5	37667	Oil Tube Joint Holder Gasket	・管継手取付台パッキン	1
6	37666	Oil Tube Joint Holder	···········管継手取付台········	······ 1
7	7666	Oil Tube Fitting End Bolt (Middle)	管継手ボルト(中)	2
8	340	Nut for 37666	·····ナット·····	1
9	9209	Screw for 37666	止ネジ	1
10	925	Rubber Plug for 37666	······結栓······	······ 1
11	1457	Screws for 37666		
12	38342	Oil Focal Point (Short)		
13	37668	Oil Tube Fitting Two Way End		
14	37675	Oil Tube Clamp	四口百松子	
15	37669	Oil Tube Fitting One Way End		
16	566	Washers for 37669	「こちをだけ	
. 17	37677	Oil Tube Holder		
18	1196	Screw for 37677		
19	4358	Screws for 37677, 38340	ハイマスキルキン 	
20	4350	Oil Tube (158mm)	エネン ビニールバイブ (158ミリ)	
21		Oil Tube (70mm)		
22	<del></del> ,	Oil Tube (270mm)		
23			ビニールパイプ(85ミリ)	
24	37691	Oil Tube Joint Ring		······ 1
25	38340	Oil Tube U Shape Holder		······ 1 ·
26	548	Washer for 38340		
27	37685	Oil Cap		
28	37659	Oil Pump Gasket	・・・・・オイルポンプパッキン・・・・・オ	1
29	37660	Oil Pump Driving Worm Gear	····・ウォームギャー····・・	······ 1
30	3410	Screw for 37660	ウォームギャー止ネジ	1
31	37684	Oil Pump Complete Set	ギャーポンプ(組)	1
32	7658	Screws for 37684		
33	38176	Pump Filter Screen Clamp	ボンブ沪過網押エ	1
34	38175	Pump Filter Screen (Fine Mesh)	ポンプ沪過網(細目)	······ 1
35	38174	Pump Filter Screen (Coarse Mesh)	ポンプ沪過網(祖目)	
36	38178	Pump Fitler Case		
37	1208	Screws for 38178		
38	7667	Oil Tube Fitting End Bolt(Long)		
90	/00/	Ver LUCE LEVERS LINE LOUG LOUS		L.

12

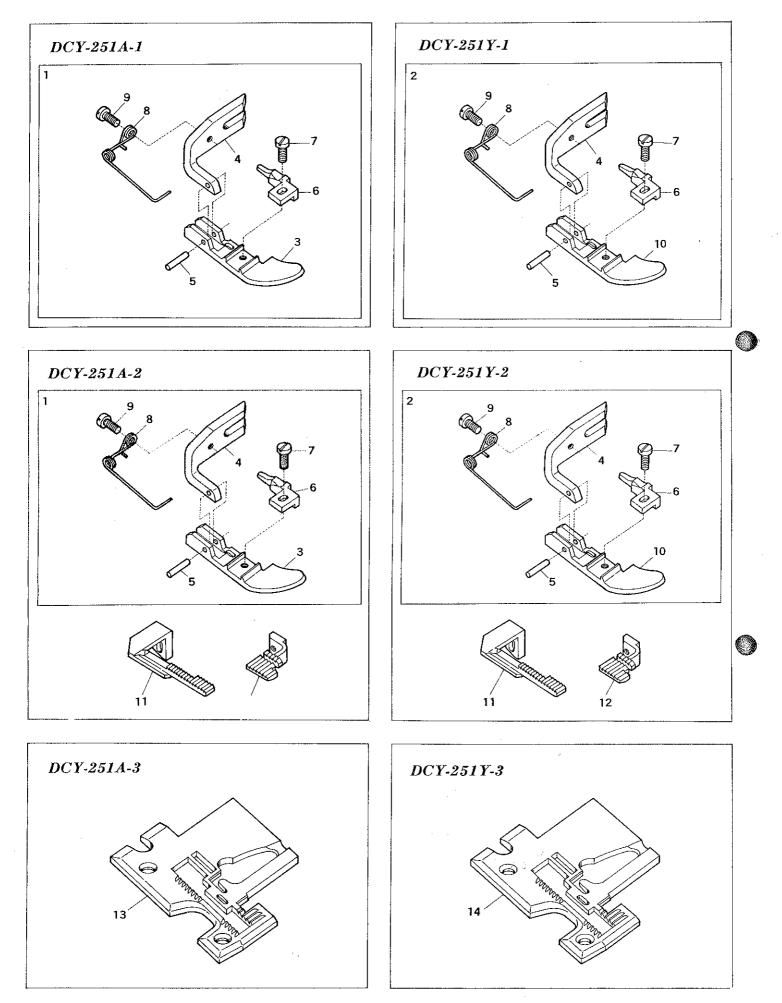


#### SUBCLASS ORGANIZATION PARTS

サブクラス構成部品 12

Ref. <u>No.</u>	Parts <u>No.</u>	Description 品名 Amt. Req.
1	38106	Presser Foot Complete Set for DCY-251A-1,-2押工 (組)(DCY-251A-1,-2) 1
2	38017	Presser Foot Complete Set for DCY-251Y-1,-2
3	38103	Presser Foot for DCY-251A-1,-2
4	38013	Presser Foot Holder
5	37096	$Presser \ Foot \ Pin$
6	38016	Presser Foot Stitch Tongue
. 7	1228	Screw for 38016
8	38014	Presser Foot Spring
9	1196	Screw for 38014
10	38015	Presser Foot for DCY-251Y-1,-2 #I (下)(DCY-251Ý-1,-2)1
11	38320	Differential Feed Dog 1
12	38321	Main Feed Dog後送リーーーーーーーーーーーーーーーーーーーーーーーーーーーーーーー
13	38353	Throat Plate for DCY-251A-3
14	38352	Throat Plate for DCY-251Y-3

#### From the library of: Superior Sewing Machine & Supply LLC

S. P. S. Strange of Strange

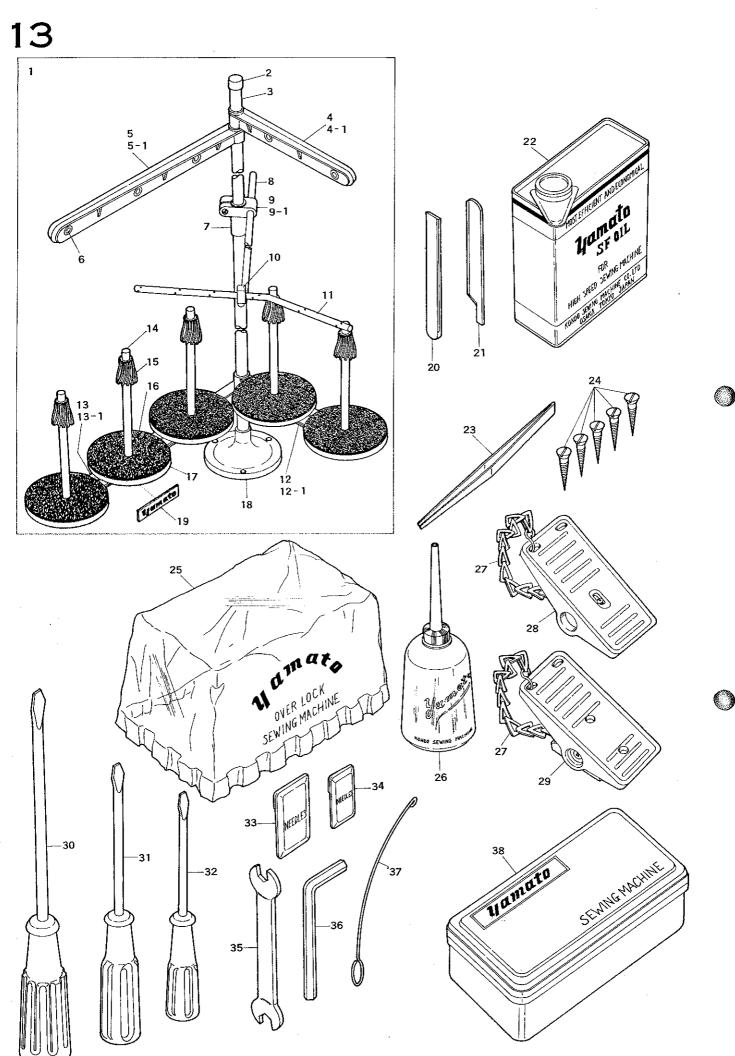

#### ACCESSORY

#### アクセサリー

13

Ref. No.	Parts No.	Description		名	Amt. Req.
7	00002				Exp't. 国内
1	99003	Thread Stand 5 Spool Type Complete Set	」の本糸用糸	≷立〔祖〕 づ	······································
2	99013				
· 5 4	99011	Clum Pipe			
	99021	Thread Hanger (2 Spool Type) Complete Set	スレッド/	ヽンガー (2本糸	
4-1	99022	Thread Hanger (2 Spool Type)			
5	99026	Thread Hanger (3 Spool Type) Complete Set	・・・・・スレッドハ	、ンカー (3本糸	(組) 1・1
5-1	99027	Thread Hanger (3 Spool Type)	・・・・・・スレッド/	ヽンガー (3本	
6	99023	Thread Bushing			
7	99012	Culm Socket			
8	99030	Thread Guide Bar	糸案内支工	_棒······	······ 1 • 1
9	99028	Thread Guide Holder Complete Set			
9-1	99029	Thread Guide Holder	糸案内ホル	ダー・・・・・・・・	······ 1 · 1
10	99031	Thread Guide Bar Bracket	支工棒接点	Į	······ 1 · 1 É
11	99032	Thread Guide			1 • 1
12	99014	Spool Holder (2 Spool Type) Complete Set	・・・・・スプールホ	・ルダー (2本糸	用)(組) 1・1
12-1	99015	Spool Holder (2 Spool Type)	ーー・スプールホ	・ルダー (2本	糸用) 1・1
13	99024	Spool Holder (3 Spool Type) Complete Set	スプールホ	:ルダー(3本糸	用)(組) 1 - 1
3 13−1	99025	Spool Holder (3 Spool Type)	・・・・・スプールホ	ルダー (3本	糸用) 1・1
<b>9</b> 14	99017	Spool Pin	スプール軸	]	
15	99020	Spool Cushion			
16	99018	Spool Mat		· K	
17	99019	Spool Seat Disc			
18	99010	Thread Stand Base			
19	99016	Name Plate			
20	30421	Lower Knife			
20	38332	Upper Knife			
21	37933	Oil			
23	37909	Thread Tweezers			
24	6902	Wood Screws			
24	37936	Machine Cover			
26	37932	Oiler			
27	37912	Chain			
28	37907	Pedal Complete Set	ペダル(維	1)	······ 1 •
29	37911	Pedal Complete Set			
30	37901	Screw Driver (Large)			
31	37902	Screw Driver (Medium)			
32	37903	Screw Driver (Small)			
<b>3</b> 3		Needle (DM $\times$ 13)			····· 10 · 10
34		Needle $(DC \times 1)$	•••••••金十•••••••		····· 10 · 10
35	37915	Wrench	両口スパナ	• • • • • • • • • • • • • • • • • • • •	····· 1 · 1
36	37916	Arren Wrench	・・・・・キーレンチ		····· 1 • 1
37	37931	Threading Wire	·······糸通シ······		····· 1 • 1
38	37913	Attachment Box			
			,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		

	14	1		. •		IND	)EX					
	Parts No.	Page No.	Ref. No.	Parts <u>No.</u>	Page No.	Pef. No.	Parts No.	Page No.	Ref. No.	Parts No.	Page No.	Ref. <u>No.</u>
	18	5	22	1186	4	19	4353	9	30	9209	11	9
	18	6	15	1196	2	13	4357	6	18	9303	1	42
	55	3	38	1196	3	16	4358	1	15	9503	10	34
	56	3	22	1196	5	16	4358	3	18	9508	6	10
	282	4	15	1196	11	18	4358	11	19	9526	8	30
	283	8	21	1196	12	9	4435	9	2	9608	6	5
	290	5	21	1208	2	15	4437	6	29	9624	10	8
	290	9	18	1208	11	37	4440	9	23	9730	7	15
	291	4	11	1227	3	28	4479	8	10	9930	2	8
	294	10	31	1227	4	28	4633	2	7	$30421 \\ 30422$	13 9	20 29
	322 331	1 3	27 12	1227 1228	9 12	8 7	5028 5036	8 1	18 32	30422 30423	9	29 19
	334	3 7	12 23	1335	12 5	20	5036	1 7	32 13	30423 30424	9	22
	335	6	20 20	1457	5	12	5037	6	32	30425	9	26
	336	6	21	1457	8	2	5046	8	28	30619	7	12
	340	3	5	1457	10	13	5083	2	30	30691	7	17
	340	3	23	1457	11	11	5133	1	35	30692	7	16
	340	7	4	1613	2	33	5343	4	26	31111	3	6
i	340	11	8	1613	9	13	5540	8	11	37049	10	23
	341	3	14	1613	9	25	5540	8	16	37096	12	5
	531	2	36	1613	10	6	6058	8	13	37101	3	17
	541	1	8	1732	3	2	6059	- 6	34	37103	3	32
	541	2	2	1732	4	25	6257	8	14	37104	3	34
	543	3	24	1817	3	20	6441	9	21	37106	3	35
	548	11	26	2022	5	2	6818	9	20	37108	4	29 30
	551	8	9	2022	10	29	6902	13 6	24 7	37109 37114	4 3	30
	554	7 8	5 17	2043 2043	6 8	26 20	7121 7128	6 4	10	37114	3	21
	555 562	8 2	17	2043	8 7	20 24	7123	4 7	6	37121	5	9
	566	11	16	2133	7	24	7302	5	26	37127	4	8
	567	11	2	2285	7	22	7311	1	19	37128	4	9
	568	2	29	2308	7	8	7311	4	4	37130	4	1
	578	2	20	2368	5	3	7311	5	5	37130	5	7
	710	2	44	2371	7	29	7311	7	27	37132	4	6
	720	6	16	3311	4	16	7405	3	26	37133	10	18
	726	2	26	3410	11	30	7609	1	29	37134	10	20
	730	6	12	3433	10	14	7616	1	24	37140	7	3
	751	2	22	3434	3	40	7616	7	18	37141	7	28
	925	5	13	3434	7	2	7618	2	37	37144	7	19
	925	8	3	3434	10	19	7619	2	39	37145	7	26
	925	11	10	3435	3	33	7619	10	40	37147	7	25 12
	989	10	2	3436	6	2 3	7650 7658	10 11	11 32	37150 37151	4 4	12
	1092	4	31	3594 3595	10 10	4	7658 7666	11	52 7	37301	- 5	15
	1132 1156	9 1	4 9	3631 3631	10 10	4 27	7667	11	38	37301	5	25
	1156	8	5	3635	4	7	7668	11	3	37304	5	14
	1130 1170	4	2	3635		10	7678	2	21	37307	5	17
	1170	± 5	8	3635	10	22	7763	2	19	37308	5	27
	1174	6	24	3637	4	22	7817	3	36	37311	5	4
	1174	9	15	3637	10	16	7904	3	3	37315	5	19
	1175	1	4	3639	10	32	7905	3	4	37372	4	20
	1175	2	3	4237	5	18	9091	2	43	37409	10	38
	1175	9	27	4313	4	17	9209	1	17	37510	9	9
	1176	9	17	4351	6	39	9209	6	3	37512	9	10
	1186	2	11 1	4352	1	21	9209	10	36	37514	9	11

# INDEX

						IND	ΈX					14
	Parts <u>No.</u>	Page No.	Ref. <u>No.</u>	Parts <u>No.</u>	Page No.	Ref. <u>No.</u>	Parts <u>No.</u>	Page <u>No.</u>	Ref. <u>No.</u>	Parts No.	Page <u>No.</u>	Ref. <u>No.</u>
	37538	.9	28	37873	8	27	38175	11	34	38286	6	35
i	37540	2	28	37874	8	26	38176	11	33	38287	6	30
	37552	7	1	37876	9	16	38178	11	36	38288	10	26
	37552	9	1	37883	9	14	38200	2	40	38289	<b>6</b> .	33
	37553	9	12	37901	13	30	38201	2	41	38290	6	37
	37554	9	7	37902	13	31	38202	2	42	38291	5	1
	37558	9	6	37903	13	32	38203	1	39	38292	10	17
	37560	9	5	37907	13	28	38204	1	37	38293	3	25
	37607	1	38	37909	13	23	38205	1	36	38294	3	31
	37616	1	23	37911	13	29	38207	2	31	38296	10	9
	37617	1	22	37912	13	27	38208	1	13	38300	- 10	30
	37619	2	38	37913	13	38	38211	1	18	38311	8	19
	37620	2	34	37915	13	35	38212	1	16	38314	8	7
	37622	2	1	37916	13	36	38213	1	20	38315	8	6
l	37626	2	14	37931	13	37	38214	- 1	1	38316	8	25
	37627	2	16	37932	13	26	38216	1	25	38317	8	22
	37631	3	9	37933	13	22	38217	1	6	38318	8 8	12
	37633	3	8	37936	13	25	38219	2 2	6 10	38319 38320	8 12	8 11
୍	37634	3 3	10 7	38011 38013	4 12	21-1	38220 38221	2 1	2	38320 38321	12 12	12
	37635 37645	3 10	28	38013	12 12	4 8	38221	2	5	38322	8	31
	37645 37647	5	28 11	38014 38015	12 12	10	38221	2	9	38331	9	3
	37648	5	23	38015	12	6	38223	10	25	38332	13	21
	37649	5	20 24	38017	12	2	38225	10	7	38333	7	14
	37652	8	4	38019	6	17	38226	1	41	38340	11	25
	37654	10	24	38020	ő	22	38227	1	40	38341	11	1
l	37654	10	37	38024	6	1	38228	10	39	38342	11	12
	37659	11	28	38029	6	8	38229	2	4	38344	2	17
	37660	11	29	38030	6	9	38230	3	27	38352	4	24
÷.	37666	11	6	38037	6	19	38232	1	14	38352	12	14
	37667	11	5	38040	6	23	38234	1	3	38353	12	13
ļ	37668	11	13	38041	6	31	38236	3	13	38361	3	11
	37669	11	15	38043	10	35	38237	1	33	90320	4	14
	37675	11	14	38043	10	41	38238	1	31	90321	4	13
	37677	11	17	38052	6	28	38239	2	12	99003	13	1
~3 <b>8</b> 0	37679	2	27	38056	6	25	38240	2	32	99010	13	18
	37680	2	24	38059	6	38	38241	4	-1	99011	13	3
-	37681	2	23	38064	8	15	38247	1	34	99012	13	7
	37684	11	31	38067	9	24	38251	7	21	99013	13	2
	37685	11	27	38072	10	15 10	38254	1	10	99014	13	12
[	37691	11	24 25	38073	3	19	38255	1	26	99015 99016	13	12-1
	37692	2	35	38074	3	41	38256	1	11 1	99016 99017	13 13	19 14
	37697	11 3	4	38077 38079	3	30 29	38260 38265	10 10	5	99018	13	14
	37748 37770	3 1	1 30	38079 38081	3 4	29 27	38265 38269	10 6	3 4	99019	13	10
	37771	1	28	38101	4 4	21	38272	6		99020	13 13	15
	37772	1	5	38103	12	3	38273	6	11	99021	13	4
	37774	1	12	38105	12	1	38273 38274	10	33	99022	13	4-1
	37787	3	39	38111	7	9	38275	6	13	99023	13	6
Ì	37788	3	15	38114	7	11	38276	10	42	99024	13	13
	37856	10	12	38120	4	3	38277	6	14	99025	13	13-1
ļ	37857	8	1	38120	7	7	38280	6	36	99026	13	5
	37858	10	21	38121	7	10	38281	10	10	99027	13	5-1
	37869	8	24	38149	8	23	38282	10	7	99028	13	9
ļ	37870	. 8	29	38174	11	35	38285	6	27	99029	13	9-1

14				]	IND	<u>)EX</u>					
Parts No.	Page No.	Ref. No.	Parts No.	Page No.	Ref. No.	Parts <u>No.</u>	Page No.	Ref. No.	Parts <u>No.</u>	Page <u>No.</u>	Ref. No.
99030	13	8	1								
99031	13	10									
99032	13	11									