

IRON AND BOILER UNIT **SAPPORO®**

INSTRUCTIONS FOR USE AND INSTALLATION OF MODEL SP-8



JACOBSON PRODUCTS

From the library of: Superior Sewing Machine & Supply LLC

P.O. BOX 24200
ST. LOUIS, MO USA 63130

IRON AND BOILER UNIT **SAPPORO**®

INSTRUCTIONS FOR USE

1. LET COOL, IF NECESSARY, AND UNSCREW THE CAP, FILL THE BOILER AND PLUG THE BOILER INTO 120 VOLT GROUNDED ELECTRIC RECEPTACLE.
2. TURN ON IRON AND BOILER ON/OFF SWITCHES.
3. AFTER ABOUT TEN MINUTES, THE STEAM READY LIGHT BETWEEN THE TWO ON/OFF SWITCHES WILL LIGHT INDICATING THAT YOUR STEAM SUPPLY IS READY. THIS LIGHT WILL CONTINUE TO GO OFF AND ON AS YOU USE THE STEAM FROM THE IRON.
 - A. TURN THE TEMPERATURE DIAL ON THE IRON TO THE FABRIC YOU ARE IRONING.
 - B. PRESS THE THUMB SWITCH FOR STEAM TO RELEASE FROM THE IRON
 - C. WHEN THE BOILER RUNS OUT OF WATER THE STEAM READY LIGHT REMAINS ON BUT NO MORE STEAM WILL COME OUT OF THE IRON. TO RESUME IRONING IT WILL BE NECESSARY TO WAIT 20 TO 25 MINUTES FOR THE BOILER TO COOL BEFORE YOU CAN FILL IT WITH WATER AGAIN.
4. AFTER MANY YEARS OF EXPERIENCE, WE HAVE DETERMINED:
 - A. WHEN FILLING WITH WATER: USE NORMAL TAP WATER, WITHOUT ADDING OTHER LIQUIDS AND POUR IT SLOWLY THROUGH THE FUNNEL. ANY SCALE WILL DEPOSIT ON THE BOTTOM, SO TAKE CARE NEVER TO TURN THE BOILER OVER FOR ANY REASON, OTHERWISE THE SCALE ON THE BOTTOM WILL CLOG THE STEAM HOLES AND STAIN THE FABRIC. IF THIS PROCEDURE IS DONE CORRECTLY, IT WILL ONLY BE NECESSARY TO CLEAN THE BOILER AFTER SEVERAL YEARS TO REMOVE THE SCALE ON THE BOTTOM.
 - B. WHILE YOU ARE WAITING FOR THE STEAM TO BE READY, AFTER ABOUT THREE MINUTES YOU CAN USE THE IRON FOR DRY IRONING.
 - C. THE DIAL ON THE IRON INDICATES THE IRONING TEMPERATURE WITH TWO POSITIONS:
DRY: THE IRON HEATS AT A LOW TEMPERATURE OF ABOUT 60°C AND IRONS WITHOUT STEAM;
STEAM: THE IRON CONTINUES HEATING AND THERE IS A STEADY SUPPLY OF STEAM.
5. WHEN THE DIAL IS SET AT THE POSITION BETWEEN LINEN AND COTTON, IT REACHES THE HIGHEST TEMPERATURE, ABOUT 170°C. THERE IS A STEADY SUPPLY OF STEAM THOUGH IT IS HARD TO SEE BECAUSE OF THE EXCESSIVE HEAT.
 - A. NEVER LEAVE THE IRON ON WHEN YOU ARE NOT USING IT.
 - B. WHEN YOU FILL THE BOILER, UNPLUG IT FROM THE ELECTRIC RECEPTACLE.
 - C. DURING THE FIRST FEW HOURS OF USE, THE IRON MAY EMIT AN ODOR THAT WILL SOON DISAPPEAR. IT IS DUE TO THE NORMALIZATION OF THE MATERIALS USED FOR ITS MANUFACTURE AND WILL NOT DAMAGE THE IRON.
 - D. NEVER POINT THE STEAM JET AT PEOPLE, ANIMALS OR ELECTRICAL DEVICES IN THE ROOM, PLUGS, SWITCHES OR THE IRON ITSELF.
 - E. TO CLEAN THE OUTSIDE, USE A DRY CLOTH.
 - F. WHEN YOU SWITCH ON THE IRON AND FOR THE FIRST TWO TO THREE MINUTES AFTER YOU START IRONING, THE DIAL SHOULD BE SET ON THE TEMPERATURE "WOOL". LATER, YOU CAN SET IT HIGH TO IRON COTTON OR LINEN.
 - G. DO NOT TAKE THE CAP OFF THE TANK WHILE YOU ARE IRONING AND ALWAYS MAKE SURE FIRST THAT NO STEAM IS COMING OUT OF THE IRON.
 - H. THE CAP (A2800), THE SAFETY THERMOSTAT (A1516), THE POWER CABLE (A1000) MUST BE REPLACED USING ONLY ORIGINAL SPARE PARTS BY PERSONNEL IN AUTHORIZED SERVICE CENTERS.


THE BEST IRONING TEMPERATURES FOR DIFFERENT FABRICS ARE MARKED BY THE FOLLOWING SYMBOLS:

- POLY / RAYON
- SILK / WOOL
- COTTON / LINEN

VOLTAGE: 120V
IRON POWER: 900W
BOILER POWER: 1000W
BOILER CAPACITY: 1.8L

IRON AND BOILER UNIT [®]

PARTS FOR SP-8 BOILER

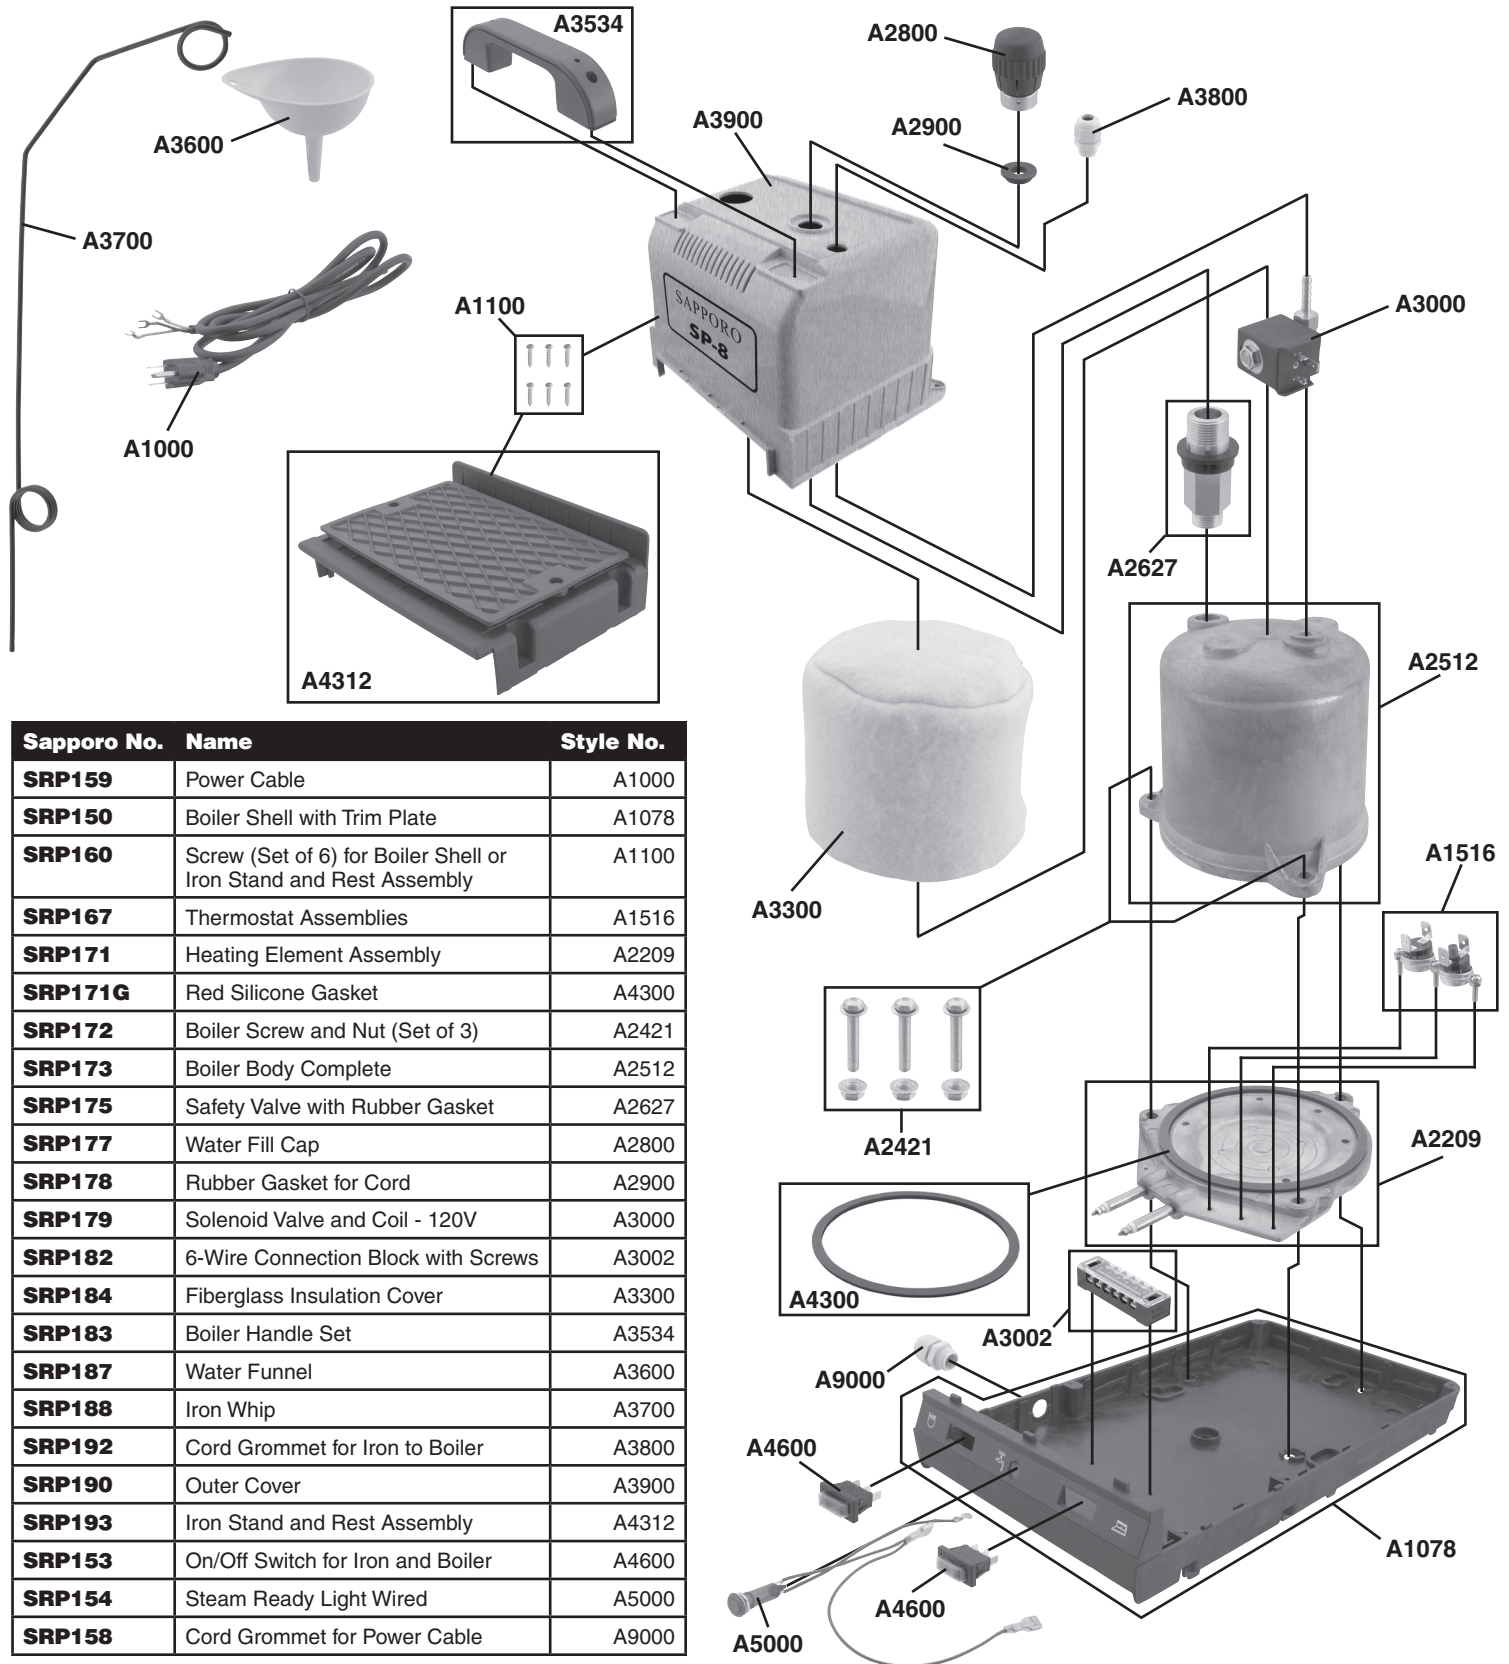

Sapporo No.	Name	Style No.
SRP159	Power Cable	A1000
SRP150	Boiler Shell with Trim Plate	A1078
SRP160	Screw (Set of 6) for Boiler Shell or Iron Stand and Rest Assembly	A1100
SRP167	Thermostat Assemblies	A1516
SRP171	Heating Element Assembly	A2209
SRP171G	Red Silicone Gasket	A4300
SRP172	Boiler Screw and Nut (Set of 3)	A2421
SRP173	Boiler Body Complete	A2512
SRP175	Safety Valve with Rubber Gasket	A2627
SRP177	Water Fill Cap	A2800
SRP178	Rubber Gasket for Cord	A2900
SRP179	Solenoid Valve and Coil - 120V	A3000
SRP182	6-Wire Connection Block with Screws	A3002
SRP184	Fiberglass Insulation Cover	A3300
SRP183	Boiler Handle Set	A3534
SRP187	Water Funnel	A3600
SRP188	Iron Whip	A3700
SRP192	Cord Grommet for Iron to Boiler	A3800
SRP190	Outer Cover	A3900
SRP193	Iron Stand and Rest Assembly	A4312
SRP153	On/Off Switch for Iron and Boiler	A4600
SRP154	Steam Ready Light Wired	A5000
SRP158	Cord Grommet for Power Cable	A9000


JACOBSON PRODUCTS

From the library of: Superior Sewing Machine & Supply LLC

P.O. BOX 24200
ST. LOUIS, MO USA 63130

STEAM ELECTRIC IRON SAPPORO®

PARTS LIST FOR MODEL SP-2007

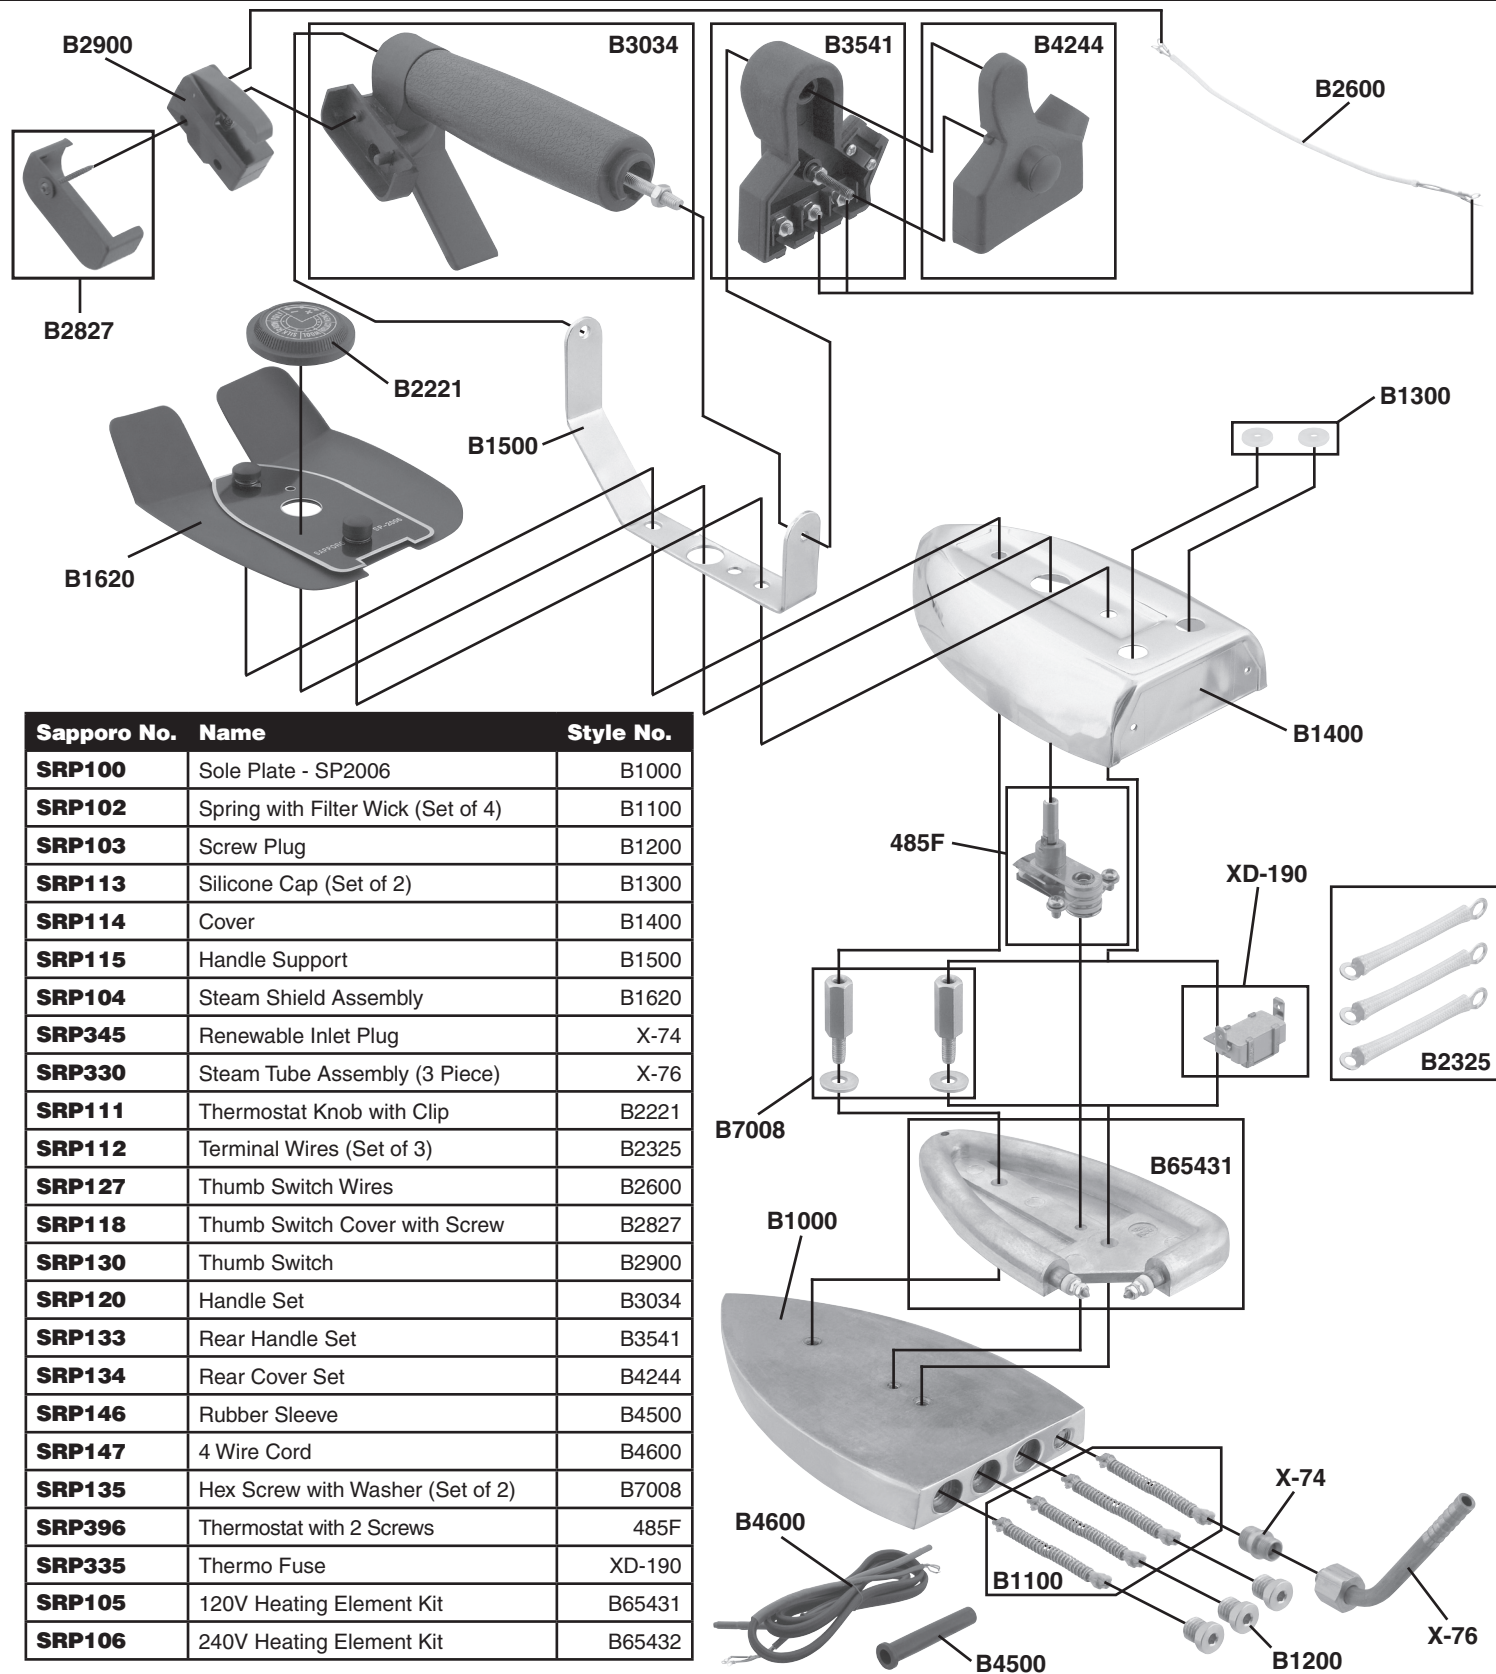

Sapporo No.	Name	Style No.
SRP100	Sole Plate - SP2006	B1000
SRP102	Spring with Filter Wick (Set of 4)	B1100
SRP103	Screw Plug	B1200
SRP113	Silicone Cap (Set of 2)	B1300
SRP114	Cover	B1400
SRP115	Handle Support	B1500
SRP104	Steam Shield Assembly	B1620
SRP345	Renewable Inlet Plug	X-74
SRP330	Steam Tube Assembly (3 Piece)	X-76
SRP111	Thermostat Knob with Clip	B2221
SRP112	Terminal Wires (Set of 3)	B2325
SRP127	Thumb Switch Wires	B2600
SRP118	Thumb Switch Cover with Screw	B2827
SRP130	Thumb Switch	B2900
SRP120	Handle Set	B3034
SRP133	Rear Handle Set	B3541
SRP134	Rear Cover Set	B4244
SRP146	Rubber Sleeve	B4500
SRP147	4 Wire Cord	B4600
SRP135	Hex Screw with Washer (Set of 2)	B7008
SRP396	Thermostat with 2 Screws	485F
SRP335	Thermo Fuse	XD-190
SRP105	120V Heating Element Kit	B65431
SRP106	240V Heating Element Kit	B65432

JACOBSON PRODUCTS

From the library of: Superior Sewing Machine & Supply LLC

P.O. BOX 24200
ST. LOUIS, MO USA 63130