



- 1-Shaft
- 2-Nut
- 3-Motor Pulley
- 4-Front Cover
- 5-Motor Casing
- 6-Motor Fuse
- 7-Electronic Controllet
- 8-On/off Power Switch
- 9-Speed Adjustment Knob
- 10-Ckntrol Box Cover
- 11-Speed Adjusting Arm
- 12-Spring
- 13-Pin
- 14-Brake Arm of Force
- 15-Brake Cork
- 16-Back Cover
- 17-Nut
- 18-L Shape Tilt Bolt

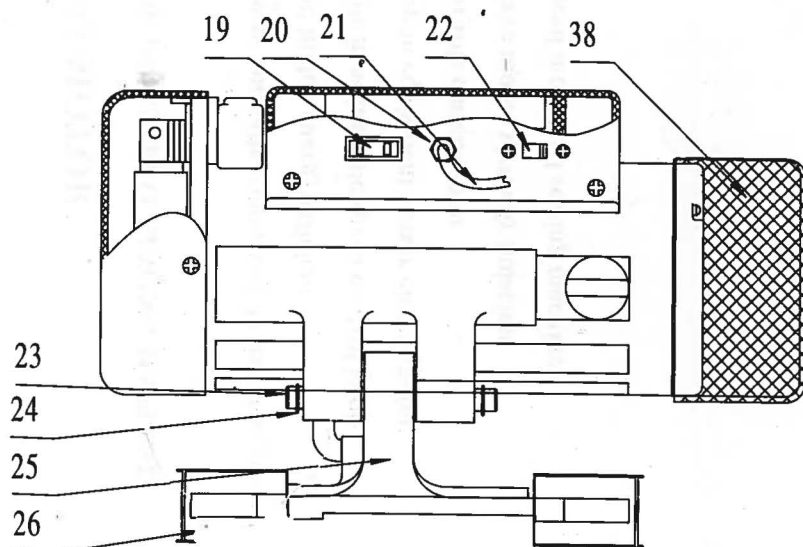

- 19-Light Socket
- 20-Terminal Block
- 21-Electrical Wire
- 22-Rotation Switch
- 23-Column Pin
- 24-Lock Washer
- 25-Mounting Bracket
- 26-Rubber Feet
- 27-Bearing
- 28-Fan Blade
- 29-Carbon Brush
- 30-Brush Holder
- 31-Brush Holder Cover
- 32-Magnetic Block
- 33-Rotoe
- 34-End Cover
- 35-Brake Pulley
- 36-Bolt
- 37-Key
- 38-Belt Cover

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OF WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

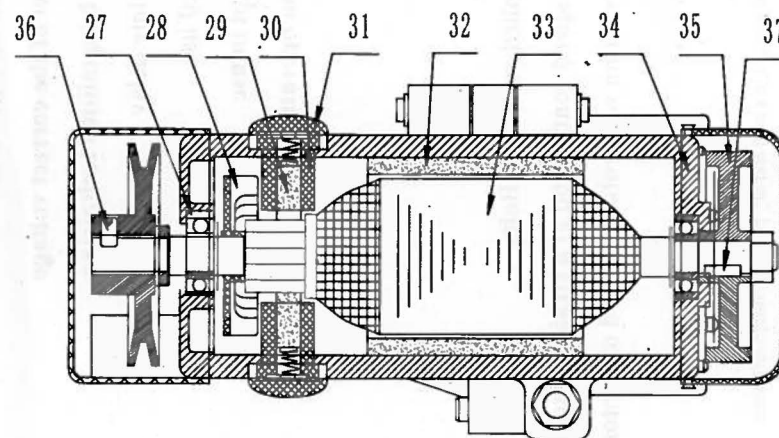

NOTE Some parts are listed and shown for illustration purpose only and might not be available individually as replacement parts