


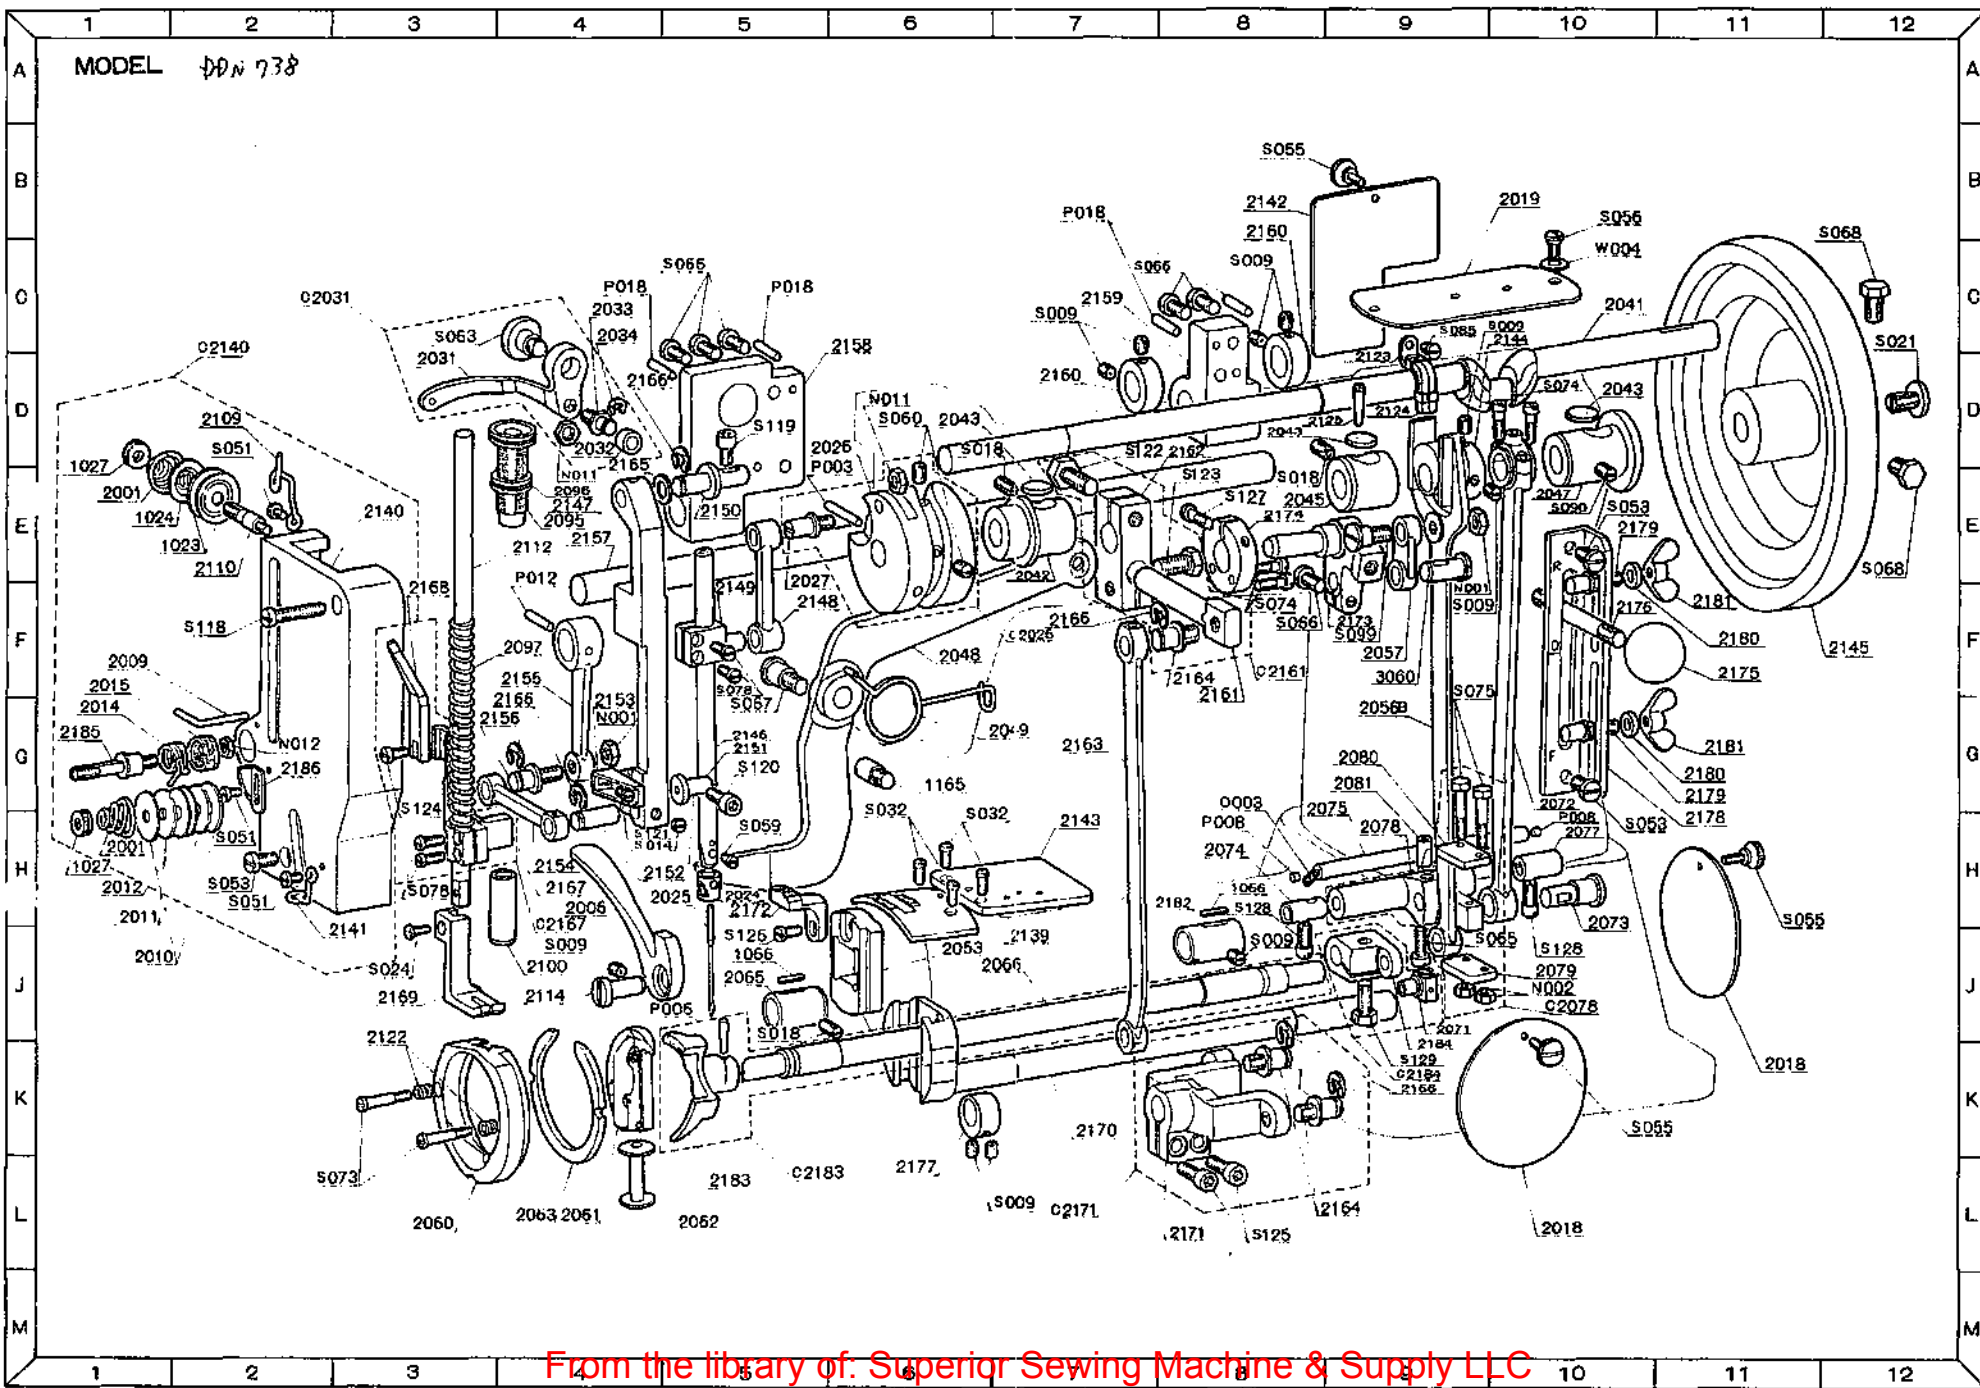

Part No.	Description	Amt. Req.	Part No.	Description	Amt. Req.	Part No.	Description	Amt. Req.		
1023	Thread tension disc	E2	2	2142	Side plate (A)	B8	1	S060	Screw 1/4 -40 L=10 D6	2
1024	Thread tension disc presser	E1	1	2143	Bed slide	H7	1	S063	Hinge screw D=10.7 H=9.0 C3	1
1027	Thread tension nut	E1,H1	2	2144	Feed drive eccentric cam	C10	1	S065	Screw 3/16-32 L=15 J10	1
1066	Oil felt	J5,H8	2	2145	Balance wheel	F12	1	S066	Screw 15/64-28 L=14 C5,F8,C8	6
1165	Lifter lifting lever stopper	G6	1	2146	Needle bar	G5	1	S067	Hinge screw D=11.11 H=13.5 G5	1
				2147	Needle bar frame	E4	1	S068	Screw 5/16-24 L=13 B12,E12	2
2001	Thread tension spring	E1,H1	2	2148	Needle bar connecting link	F5	1	S073	Hinge screw D=5.0 H=18.0 L3	2
2008	Hand lifter lever	H4	1	2149	Needle bar connection	F5	1	S074	Screw 3/16-28 L=15.5 F8,D10	4
2009	Slack thread guide	F1	1	2150	Needle bar frame hinge pin	E5	1	S075	Screw 11/64-40 L=24.0 F9	2
2010	Tension wheel felt supporting plate	J1	2	2151	Needle bar frame guide pin	G5	1	S078	Screw 3/16-28 L=12.0 H3,F5	4
2011	Tension wheel felt	H1	2	2152	Needle bar frame stud	H4	1	S085	Screw 11/64-40 L=7.0 C9	1
2012	Tension wheel	H1	1	2153	Needle bar frame guide	G4	1	S090	Screw 15/64-28 L=10.5 E10	1
2014	Take-up spring (A)	G1	1	2154	Needle bar frame driving link	H4	1	S099	Hinge screw D=9.53 H=8 F9	1
2015	Take-up spring (B)	F1	1	2155	Needle bar frame rock shaft front crank	F4	1	S118	Screw 15/64-28 L=30.0 F2	1
2018	Side plate (B)	L10,K11	2	2156	Needle bar frame rock shaft front crank stud	G4	1	S119	Screw M6 L=10 D5	1
2019	Arm cap	B10	1					S120	Screw M6 L=16 G5	1
2024	Needle bar thread guide	H5	1	2157	Needle bar frame rock shaft	E4	1	S121	Screw 11/64-40 L=7 H4	1
2025	Needle (DD x 1 #25)	H5	1	2158	Needle bar frame rock shaft front bushing	C6	1	S122	Screw 5/16-18 L=24.0 D7	1
2026	Take-up cam	D6	1					S123	Screw 5/16-18 L=18.0 E8	1
2027	Needle bar crank	F5	1	2159	Needle bar frame rock shaft rear bushing	C7	1	S124	Screw 3/16-28 L=10.0 G3	1
2028	Thread take-up lever	D3	1					S125	Screw M6 L=20 L8	2
2029	Thread take-up lever roller	D4	1	2160	Thrust collar	D7,B8	2	S126	Screw 11/64-40 L=10.5 J5	1
2033	Thread take-up lever roller stud	C4	1	2161	Needle bar frame rock shaft rear crank B	F8	1	S127	Screw 3/16-32 L=18 E8	1
2034	Thread take-up lever roller washer	C4	1	2162	Needle bar frame rock shaft rear crank A	D8	1	S128	Screw 15/64-28 L=11.5 H8,J10	2
2041	Main shaft	C10	1	2163	Needle bar frame driving rod	G7	1	S129	Screw 9/32-28 L=16.0 K9	1
2042	Main shaft front bushing	E7	1	2164	Needle bar frame driving rod stud	L9,F8	3			
2043	Oil felt	D6,D8,D10	3	2165	Needle bar frame hinge pin washer	E4	1	N001	Nut 9/32-28 G4,F9	2
2045	Main shaft intermediate bushing	E8	1	2166	Snap ring	G4,D4,F7,K9	6	N002	Nut 11/64-40 J10	2
2047	Main shaft rear bushing	E10	1	2167	Presser bar guide bracket	H4	1	N011	Nut 9/32-28 E4,D6	2
2048	Lifter lifting lever	F6	1	2168	Tension releasing plate	F3	1	N012	Nut 15/64-28 G2	1
2049	Lifter lifting lever spring	G7	1	2169	Presser foot	J3	1			
2053	Feed bar	J6	1	2170	Feed rock shaft	K7	1	W004	Washer 7x15x0.4 C10	1
2056B	Feed forked connection	G9	1	2171	Feed rock shaft crank	L8	1			
2057	Feed connecting link	F9	1	2172	Feed dog	H5	1	P003	Tapered pin 4x32 E6	1
2060	Shuttle race body	L3	1	2173	Feed regulator	F9	1	P006	Tapered pin 4x17 J5	1
2061	Shuttle hook	L4	1	2174	Feed regulator supporting plate	E8	1	P008	Plug H8,H10	2
2062	Bobbin	L5	1	2175	Reverse feed control knob	F11	1	P012	Tapered pin 4x24 F4	1
2063	Ring	L4	1	2176	Reverse feed control lever	F10	1	P018	Tapered pin 4x22 C4,C5,B7	4
2065	Hook driving shaft front bushing	J5	1	2177	Feed rock shaft thrust collar	L6	1			
2066	Hook driving shaft	J7	1	2178	Feed regulator scale plate	H11	1	Q003	Oil wick G8	1
2071	Hook driving shaft crank slide block	J9	1	2179	Reverse feed control lever adjusting screw	E10,G11	2	C2026	Take-up cam asm F7	(1)
2072	Crank connecting rod	G10	1					C2031	Thread take-up lever asm C3	(1)
2073	Crank connecting rod pin	H10	1	2180	Reverse feed control lever adjusting screw washer	F11,G11	1	C2078	Oscillating rock shaft asm J10	(1)
2074	Oscillating rock shaft hinge pin front bushing	H8	1	2181	Reverse feed control lever adjusting thumb nut	F11,G11	2	C2140	Face plate asm D2	(1)
2075	Oscillating rock shaft hinge pin	G9	1					C2161	Needle bar frame rock shaft rear crank asm F8	(1)
2077	Oscillating rock shaft hinge pin rear bushing	H10	1	2182	Hook driving shaft rear bushing	H8	1			
2078	Oscillating rock shaft	H9	1	2183	Shuttle driver	L5	1	C2167	Presser bar guide bracket asm H4	(1)
2079	Oscillating rock shaft side plate (B)	J10	1	2184	Hook driving shaft crank	K9	1	C2171	Feed rock shaft crank asm L7	(1)
2080	Oscillating rock shaft side plate (A)	G9	1	2185	Tension wheel stud	G1	1	C2183	Shuttle driver asm L5	(1)
2081	Crank connecting rod pin wedge	G9	1	2186	Take-up spring support plate	G2	1	C2184	Hook driving shaft crank asm K9	(1)
2095	Presser spring regulator	E4	1							
2096	Presser spring regulator nut	E4	1	3060	Feed regulator connecting link hinge pin	F9	1			
2097	Presser spring	F4	1							
2100	Presser bar bushing	J4	1	S009	Screw 15/64-28 L=7.0 J4,L7,C7,C8,G10,F9,J8	10				
2109	Thread eyelet	D2	1							
2110	Tension stud	E2	1	S014	Screw 15/64-28 L=4.0 H5	1				
2112	Presser bar	E4	1	S018	Screw 15/64-28 L=15.0 J5,D6,E8	3				
2114	Hand lifter lever stud	J4	1	S021	Hand wheel end screw	G12	1			
2122	Spring	K3	2	S024	Screw 9/64-40 L=10.5 J3	1				
2123	Oil felt holder	D9	1	S032	Screw 3/16-28 L=9.0 H5	4				
2124	Oil felt	D9	1	S051	Screw 9/64-40 L=6.8 D2,H2	3				
2125	Oil pipe	D9	1	S053	Screw 15/64-28 L=12.0 H2,E10,H10	3				
2139	Throat plate	J7	1	S055	Screw 9/64-40 L=12.0 B8,H11,K10	3				
2140	Face plate	E3	1	S056	Hinge screw D=6.30 H=2.4 B10	1				
2141	Face plate thread guide	J3	1	S059	Screw 11/64-40 L=6.5 H5	1				

索引

品番	品名	数量	品番	品名	数量	品番	品名	数量			
1023	糸調子皿	E 2	2	2145	ハズミ車	F12	1	S090	ネジ 15/64-28 L-10.5	E10	1
1024	糸調子皿押エ	E 1	1	2146	針棒	G 5	1	S099	段ネジ D-9.53 H-8	F 9	1
1027	糸調子ナット	E 1, H 1	2	2147	針棒揺動台	E 4	1	S118	ネジ 15/64-28 L-30.0	F 2	1
1066	メタルフェルト	J 5, H 8	2	2148	針棒クランクロット	F 5	1	S119	ネジ M 6 L-10	D 5	1
1065	壁止ゲ同り止メネジ	G 6	1	2149	針棒抱き	F 5	1	S120	ネジ M 5 L-16	G 5	1
				2150	針棒揺動台軸	E 5	1	S121	ネジ 11/64-40 L-7	H 4	1
2001	糸調子バネ (B)	E 1, H 1	2	2151	針棒揺動台受け	G 5	1	S122	ネジ 5/16-18 L 24.0	D 7	1
2006	押エ上ケレバー	H 4	1	2152	針棒揺動台ピン	H 4	1	S123	ネジ 5/16-18 L 18.0	E 8	1
2009	大糸カケ	F 1	1	2153	針棒揺動台案内	G 4	1	S124	ネジ 3/16-28 L 10.0	G 3	1
2010	糸調子車フェルト押エ板	J 1	2	2154	前部腕連結リンク	H 4	1	S125	ネジ M 6 L-20	L 8	2
2011	糸調子車フェルト	H 1	2	2155	中軸前部腕	F 4	1	S126	ネジ 11/64-40 L 10.5	J 5	1
2012	糸調子車	H 1	1	2156	前部腕軸	G 4	1	S127	ネジ 3/16-32 L 18	E 8	1
2014	糸取りバネ (A)	G 1	1	2157	中軸	E 4	1	S128	ネジ 15/64-28 L 11.5	H 8, J10	2
2015	糸取りバネ (B)	F 1	1	2158	中軸前メタル	G 6	1	S129	ネジ 5/32-28 L 16.0	K 9	1
2018	窓板 (B)	L10, K11	2	2159	中軸後メタル	C 7	1				
2019	天板	B10	1	2160	中軸スラスト受け	D 7, B 8	2	N001	ナット 9/32-28	G 4, F 9	2
2024	針棒系カケ	H 5	1	2161	中軸後部腕 (B)	F 8	1	N002	ナット 11/64-40	J10	2
2025	針 (DDX) #25	H 5	1	2162	中軸後部腕 (A)	D 8	1	N011	ナット 9/32-28	E 4, D 6	2
2026	天秤カム	D 6	1	2163	針棒揺動ロック	G 7	1	N012	ナット 15/64-28	G 2	1
2027	針棒クランクロット軸	F 5	1	2164	針棒揺動ロック軸	L 9, F 8	3				
2031	天秤	D 3	1	2165	針棒揺動台軸座金	E 4	1	W004	座金 7×15×0.4	C10	1
2032	天秤コロ	D 4	1	2166	Eリング	G 4, D 4, F 7, K 9	6				
2033	天秤コロ軸	C 4	1	2167	押エ持抱き	H 4	1	P003	テーパーピン 4×32	E 6	1
2034	天秤コロ軸Eリング	C 4	1	2168	糸ユルメ板	F 3	1	P006	テーパーピン 4×17	J 5	1
2041	土軸	C10	1	2169	押エ	J 3	1	P008	止栓	H 8, H10	2
2042	土軸前メタル	E 7	1	2170	水平送り軸	K 7	1	P012	テーパーピン 4×24	F 4	1
2043	土軸メタルフェルト	D 6, D 8, D10	3	2171	水平送り腕	L 8	1	P018	テーパーピン 4×22	C 4, C 5, B 7	4
2045	土軸中メタル	E 8	1	2172	送り	H 5	1				
2047	土軸後メタル	E10	1	2173	送り調節台	F 9	1	Q003	油心	G 8	1
2048	横桿	F 6	1	2174	送り調節台受板	E 8	1				
2049	横桿バネ	G 7	1	2175	送りレバー握り	F11	1	C2026	天秤カム (組)	F 7	(1)
2053	送り台	J 6	1	2176	送りレバー	F10	1	C2031	天秤 (組)	C 3	(1)
2056	ニスロック			2177	水平送り軸スラスト受け	L 6	1	C2078	大振り子 (組)	J10	(1)
2057	ニスリング	F 9	1	2178	送りレバー窓板	H11	1	C2140	面板 (組)	D 2	(1)
2060	大釜	L 3	1	2179	送り調節ネジ	E10, G11	2	C2161	中軸後部腕 (組)	F 8	(1)
2061	中釜	L 4	1	2180	送り調節ネジ座金	F11, G11	1	C2167	押エ持抱き (組)	H 4	(1)
2062	ホビン	L 5	1	2181	送り調節ネジ蝶ナット	F11, G11	2	C2171	水平送り腕 (組)	L 7	(1)
2063	三日月 (B)	L 4	1	2182	下軸後メタル	H 8	1	C2183	トンビ (組)	L 5	(1)
2065	下軸前メタル	J 5	1	2183	トンビ	L 5	1	C2184	小振り子 (組)	K 9	(1)
2066	下軸	J 7	1	2184	小振り子	K 9	1				
2071	小振り子角玉	J 9	1	2185	糸調子車軸	G 1	1				
2072	立ロック	G10	1	2186	糸取りバネ受板	G 2	1				
2073	立ロック連結軸	H10	1								
2074	大振り子軸前メタル	H 8	1								
2075	大振り子軸	G 9	1	3060	ニスリング軸	F 9	1				
2077	大振り子軸後メタル	H10	1	S009	ネジ 15/64-28 L-7.0						
2078	大振り子	H 9	1		J4, L7, G7, C8, C10, F9, J 8		10				
2079	大振り子側板 (B)	J10	1	S014	ネジ 15/64-28 L-4.0	H 5	1				
2080	大振り子側板 (A)	G 9	1	S018	ネジ 15/64-28 L-15.0 J 5, D 6, E 8		3				
2081	立ロック連結軸止ピン	G 9	1	S021	ハズミ車押シトゲネジ	C12	1				
2095	押エ調節ネジ	E 4	1	S024	ネジ 9/64-40 L-10.5	J 3	1				
2096	押エ調節ネジナット	E 4	1	S032	ネジ 3/16-28 L-9.0	H 6	4				
2097	押エ調節バネ	F 4	1	S051	ネジ 9/64-40 L-6.8 D 2, H 2		3				
2100	押エ持下メタル	J 4	1	S053	ネジ 15/64-28 L-12.0 H 2, E10, H10		3				
2109	糸調子案内	D 2	1	S055	ネジ 9/64-40 L-12.0 B 8, H11, K10		3				
2110	糸調子棒	E 2	1	S056	段ネジ D-6.30 H-2.4	B10	1				
2112	押エ棒	E 4	1	S059	ネジ 11/64-40 L-6.5	H 5	1				
2114	押エ上ケレバー軸	J 4	1	S060	ネジ 1/4-40 L-10	D 6	2				
2122	大釜バネ	K 3	2	S063	段ネジ D-10.7 H-9.0	C 3	1				
2123	ニスロックフェルト支エ	D 9	1	S065	ネジ 3/16-32 L-15	J10	1				
2124	ニスロックフェルト	D 9	1	S066	ネジ 15/64-28 L-14 C 5, F 8, C 8		6				
2125	オイルパイプ	D 9	1	S067	段ネジ D-11.11 H-13.5	G 5	1				
2139	針板	J 7	1	S068	ネジ 5/16-24 L-13 B12, E12		2				
2140	面板	E 3	1	S073	段ネジ D-5.0 H-18.0	L 3	2				
2141	面板糸掛	J 3	1	S074	ネジ 3/16-28 L-15.5 F 8, D10		4				
2142	窓板 (A)	B 8	1	S075	ネジ 11/64-40 L-24.0	F 9	2				
2143	滑り板	H 7	1	S078	ネジ 3/16-28 L-12.0 H 3, F 5		4				
2144	送り偏心カム	C10	1	S085	ネジ 11/64-40 L-7.0	G 9	1				