

Pfaff 1241 Subclass



Unterklassen-Ausstattung
Subclass parts
Composition des sous-classes
Composición de las subclases

Subclass Organization

Notation de las subclases

 
Unterklasse Subclasse Sous-classe Subclase	Ausführung Model Version Tipo de máquina	Nadelstange Needle bar Barre à aiguille Barra de aguja	Stoffschieber Feed dog Griffe Transportador	Stichplatte Needle plate Plaque à aiguille Placa de aguja	Nähfuß Presser foot Pied presseur Pie prensatejas	Fingerschutz Finger guard Protège-débris Salvadedos	Zwischenstück Extension piece Pièce intermédiaire Pieza intermedia	Lineal Edge guide Guide-droit Guía recta
-2/01 12 = 2-6 mm	BN 80 CN 80	91-009678-91	91-047996-04	91-058682-04	91-057100-03 12/2		91-055918-91	91-053620-91
-2/01 -900/16;/56 12 = 2-6 mm	BN 80 B/CN 80 CN 80	91-009678-91	91-047996-04	91-058870-04	91-057100-03 12/2		91-055918-91	91-053620-91
-2/21 12 = 2-6 mm	BN 80 CN 80	91-009678-91	91-047996-04	91-058682-04	91-057100-03 12/2		91-055918-91	
-2/21 -900/16;/56 12 = 2-6 mm	BN 80 CN 80	91-009678-91	91-047996-04	91-058870-04	91-057100-03 12/2		91-055918-91	
-6/01	CN DN	91-009678-91	91-047013-04	91-048025-05	91-040349-03	91-046864-25		
-6/01 -900/16;/56	CN	91-009678-91	91-047935-04	91-058882-05	91-040349-03	91-046864-25		
-6/01	CN 8 DN 8	91-009678-91	91-047013-04	91-058494-04	91-057097-93		91-055918-91	
-6/01 -900/16;/56	CN 8	91-009678-91	91-047935-04	91-058882-05	91-057097-93		91-055918-91	
-6/01	CN 10 DN 10	91-710484-92	91-047374-04	91-048901-04	91-054559-04	91-046866-25		
-6/01 -900/16;/56	CN 10	91-710484-92	91-047370-04	91-058883-05	91-057094-03		91-055918-91	
-944/01	CN DN	91-009678-91	91-040417-04	91-041332-04	91-051255-93	91-009492-91		
-944/01 -900/16;/56	CN	91-009678-91	91-059006-04	91-058881-05	91-051255-93	91-009492-91		
-944/01	CN 8 DN 8	91-009678-91	91-040417-04	91-491675-04	91-051255-93	91-009492-91		
-944/01 -900/16;/56	CN 8	91-009678-91	91-059006-04	91-058881-05	91-051255-93	91-009492-91		

4 = Ausführung angeben
= Indicate model
= Préciser la version
= Indiquese el tipo de máquina


12 = Absteppbreite
= Stitching margin
= Relarge de couture
= Margen de costura

12/2 = Absteppbreite bei Bestellung angeben
= Indicate stitching margin on order
= Indiquer le relarge de couture à la commande
= Indiquese el margen de costura en los pedidos

Unterklassen-Übersicht / Table of subclasses / Table des sous-classes / Tabla de subclasses

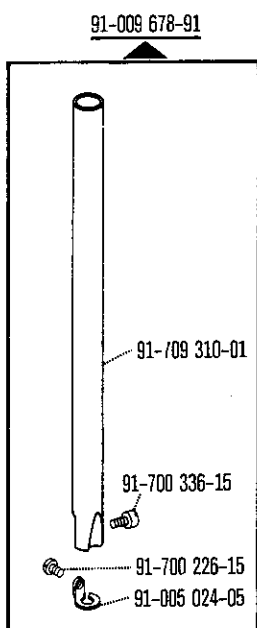

 -2/01
-2/01-900/16;/56
-2/21
-2/21-900/16;/56
-6/01
-6/01-900/16;/56
-944/01
-944/01-900/16;/56

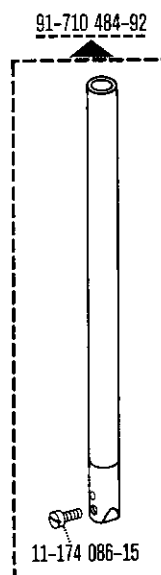


-6/01
-6/01-900/16;/56

91-040 417-04



-944/01

 91-047 013-04

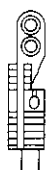

-6/01

91-047 370-04



-6/01-900/16;/56

91-047 374-04



 
-6/01

91-047 935-04



-6/01-900/16;/56

91-047 996-04

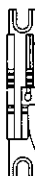

-2/01
-2/01-900/16;/56
-2/21
-2/21-900/16;/56

91-059 006-04



-944/01-900/16;/56

 
91-041 332-04



91-048 025-05



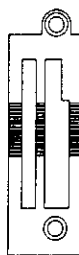

91-048 901-04



91-058 494-04



<p>91-058 682-04 </p>  <p>-2/01 -2/21</p>	<p>91-058 870-04 </p>  <p>-2/01 -2/21</p>	<p>91-058 881-05</p>  <p>-944/01-900/16;/56</p>	<p>91-058 882-05</p>  <p>-6/01-900/16;/56</p>
<p>91-058 883-05</p>  <p>-6/01-900/16;/56</p>	<p>91-491 675-04 </p>  <p>-944/01</p>		
<p>91-040 349-03 </p>  <p>-6/01 -6/01-900/16;/56</p>	<p>91-051 255-93 </p>  <p>-944/01 -944/01-900/16;/56</p>	<p>91-054 559-04 </p>  <p>-6/01</p>	<p>91-057 094-03 </p>  <p>-6/01-900/16;/56</p>
<p>91-057 097-03 </p>  <p>-6/01 -6/01-900/16;/56</p>	<p>91-057 100-03  </p>  <p>-2/01 -2/01-900/16;/56 -2/21 -2/21-900/16;/56</p>	<p>91-009 492-91</p> 	
<p>91-046 864-25</p>  <p>-6/01 -6/01-900/16;/56</p>	<p>91-046 866-25</p>  <p>-6/01</p>	<p>-944/01 -944/01-900/16;/56</p>	