


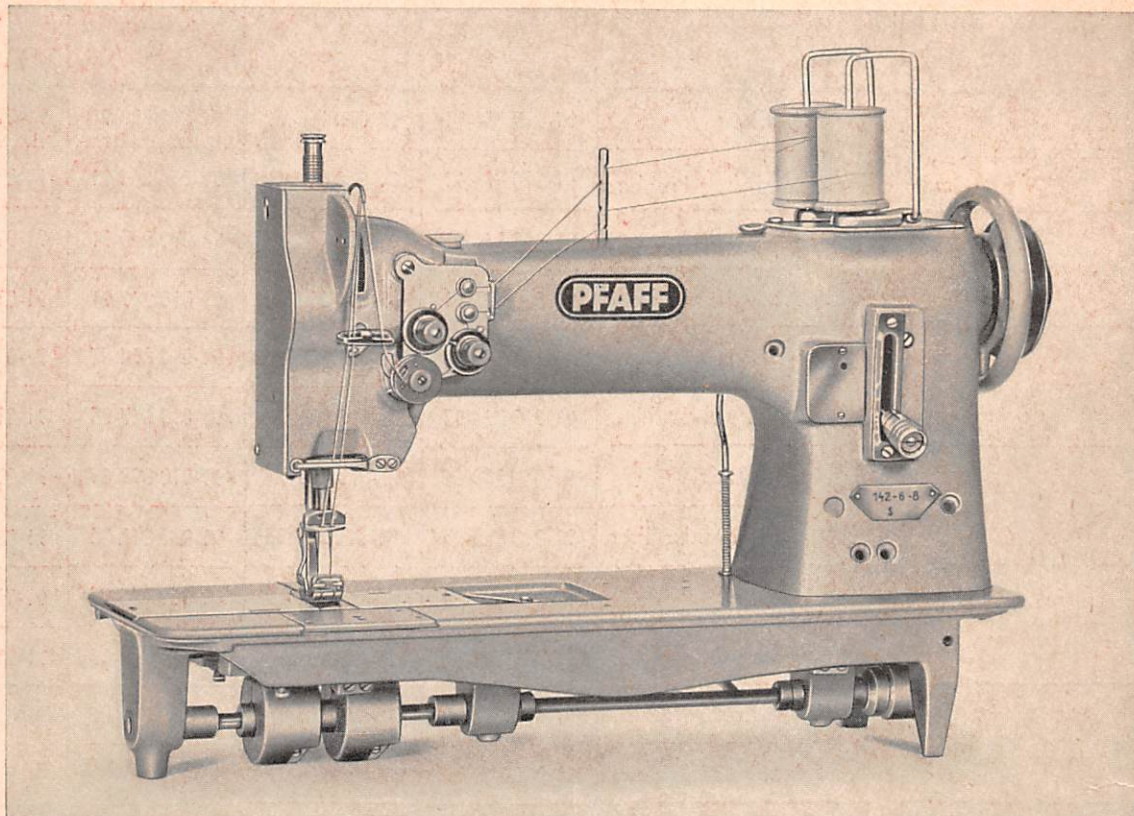

Two-Needle Flat-Bed Sewing Machines

- **PFAFF 142-6** Two-needle, flat-bed sewing machine equipped with compound feed, bevel-gear-driven vertical rotary hook, sleeve take-up, mechanical tension release and forward-reverse feed control.
- PFAFF 142-131** Same as Pfaff 142-6, but equipped with vertical trimmer driven by an eccentric from the arm and making one cutting stroke per stitch.
- PFAFF 142-200** Same as Pfaff 142-6, but equipped with swing-away needle holder.

Component Parts of the Pfaff 142 in Models A, B, C and D

Part Name	Part Number and Model			
	A	B	C	D
Hook, w/ bobbin case, complete	fabric	91-010 165-91	91-010 165-91	91-010 896-91
	leather and rubber	91-010 896-91	91-010 896-91	91-010 850-91
Hook, complete	fabric	91-010 164-91	91-010 164-91	91-010 895-91
	leather and rubber	91-010 895-91	91-010 895-91	91-010 849-91
Hook	fabric	91-010 161-05	91-010 161-05	91-010 894-05
	leather and rubber	91-010 894-05	91-010 894-05	91-010 847-05
Hook gib	fabric	91-010 178-05	91-010 178-05	91-010 893-05
	leather and rubber	91-010 893-05	91-010 893-05	91-010 848-05
Hook washer	fabric	91-010 167-05	91-010 167-05	91-010 167-05
	leather and rubber	91-010 167-05	91-010 167-05	91-010 853-05
Bobbin case, complete	fabric	91-010 160-91	91-010 160-91	91-010 160-91
	leather and rubber	91-010 160-91	91-010 160-91	91-011 499-91
Bobbin case base, complete		91-010 157-01	91-010 157-01	91-010 157-01
Bobbin case cap, complete	fabric	91-010 159-91	91-010 159-91	91-010 159-91
	leather and rubber	91-010 159-91	91-010 159-91	91-011 498-91

Take-up Lever Components of the Pfaff 142-131 in Models A, B and C

Part Name	Part Number and Model		
	A	B	C
Take-up lever, complete	91-010 719-91	91-010 719-91	91-010 720-91
Take-up lever	91-010 173-05	91-010 173-05	91-010 174-05
Take-up lever driving stud	91-008 009-05	91-008 009-05	91-015 527-05
Needle bar connecting stud	91-010 703-92	91-010 703-92	91-010 703-92

**Component Parts
of the PFAFF 142
in Models A, B, C and D**

Component Parts of the Pfaff 142 in Models A, B, C and D

(For the take-up levers of the Pfaff 142-131,
please refer to the table at the end of this listing).

Part Name		Part Number and Model			
		A	B	C	D
Take-up lever, complete	fabric	91-010 235-91	91-010 235-91	91-010 236-91	91-009 651-91
	leather	91-010 237-91	91-010 237-91	91-009 651-91	91-009 651-91
Take-up lever	fabric	91-010 173-05	91-010 173-05	91-010 174-05	91-015 526-05
	leather	91-010 837-05	91-010 837-05	91-015 526-05	91-015 526-05
Take-up lever driving stud		91-008 009-05	91-008 009-05	91-015 527-05	91-015 527-05
Needle bar connecting stud		91-010 006-92	91-010 006-92	91-010 006-92	91-010 006-92
Presser bar spring, outer		91-006 525-05	91-006 525-05	91-010 633-05	
Presser bar lifter		91-010 734-15	91-010 734-15	91-010 888-15	91-010 888-15
Thread tension, complete		91-010 188-91	91-010 188-91	91-010 189-91	91-010 189-91
Tension spring		91-010 183-05	91-010 183-05	91-010 184-05	91-010 184-05
Thread check spring		91-010 179-05	91-010 179-05	91-015 519-05	91-015 519-05
Balance wheel (Standard version)		91-009 388-92	91-009 388-92	91-009 389-92	91-015 652-92
Balance wheel, complete (Standard version)		91-010 133-91	91-010 133-91	91-010 172-91	
Lifting lever		91-010 737-45	91-010 737-45	91-010 737-45	91-010 606-45
Feed regulator, complete		5 1/2 s.p.i.		4 s.p.i.	
		91-009 810-91	91-009 810-91	91-009 361-91	91-009 361-91

Front Parts

91-010 823-45



91-000 073-35




91-000 172-35



91-010 175-35



91-010 817-91

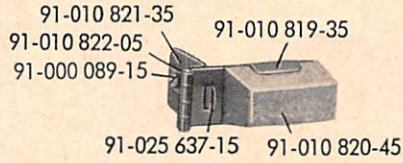

91-010 821-35

91-010 819-35

91-010 822-05

91-000 089-15

91-025 637-15

91-010 820-45



91-010 027-35

91-010 028-35



91-000 172-35



91-000 507-15

91-006 526-05

91-006 525-05

91-008 021-11



91-000 237-15



91-000 510-15



91-019 846-92

91-009 118-01

91-000 073-35

91-051 642-03



91-009 119-05



91-061 005-05



91-000 152-15



91-010 104-05

91-010 008-45



91-715 538-93

91-015 537-05

91-010 009-05

91-000 062-15



91-000 641-15

91-700 868-15

91-715 536-04



91-000 469-15

91-010 734-15

91-000 568-15

91-003 100-05

91-010 731-15

91-010 728-15

91-010 729-05

91-010 732-05



91-010 752-15




91-010 730-15

91-000 019-15


91-046 864-25



91-010 235-91

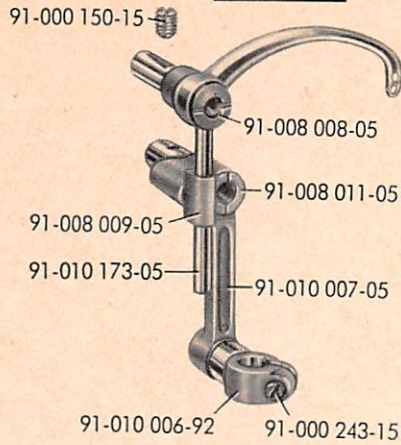


91-010 237-91

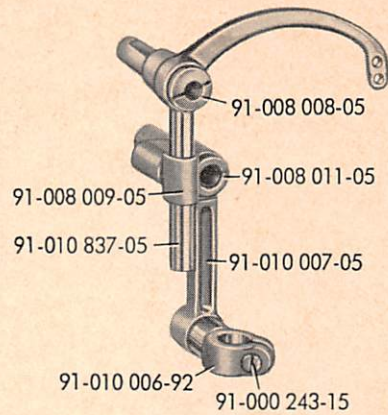

91-009 148-05



 91-008 064-05





91-019 676-05



91-006 783-05



91-010 188-91

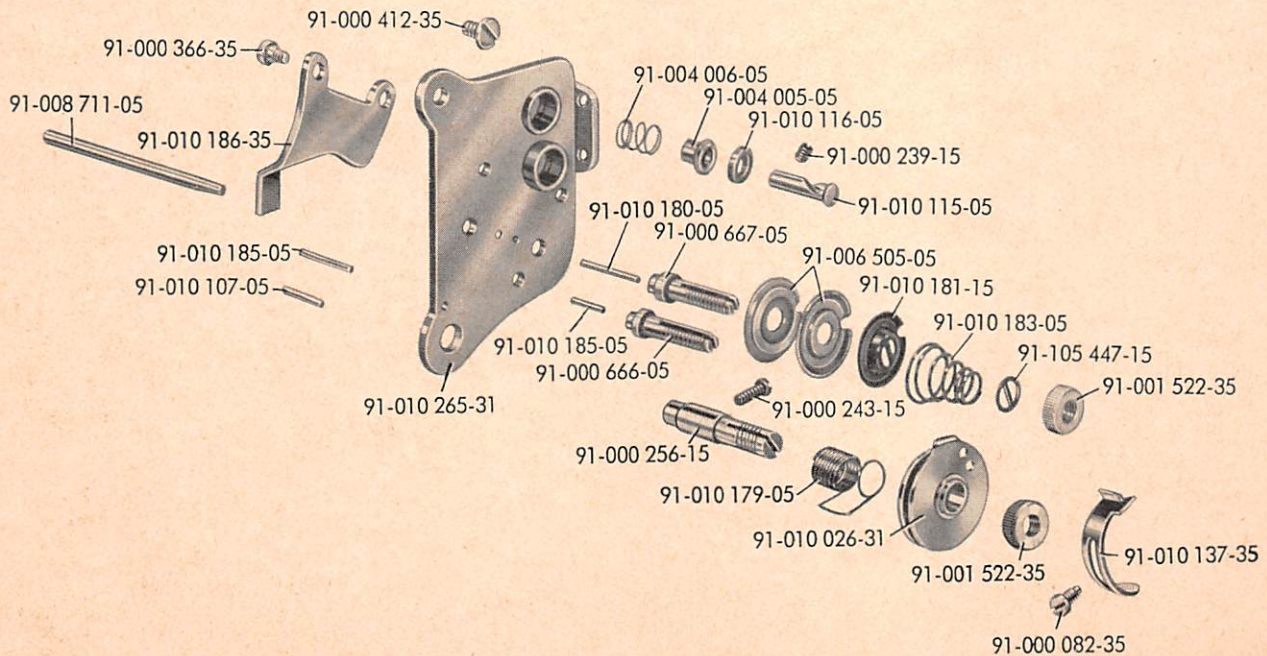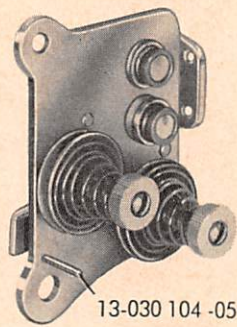


N = Needle Gauge


13-030 104-05 (101 765)	Guide pin for No. 91-010 026-31	91-010 179-05	Thread check spring (Models A & B)
91-000 019-15	Hinge screw for No. 91-010 730-15	91-010 180-05	Tension release pin for No. 91-000 667-05
91-000 062-15	Fastening screw for No. 91-010 009-05	91-010 181-15	Tension release washer
91-000 073-35	Fastening screw for Nos. 91-010 823-45; 91-040 791-04 (not ill.); 91-051 642-03	91-010 183-05	Tension spring (Models A & B)
91-000 082-35	Fastening screw for No. 91-010 137-35	91-010 185-05	Tension release pin for No. 91-000 666-05 and position pin for lower tension
91-000 089-15	Fastening screw for Nos. 91-008 064-05; 91-010 817-91	91-010 186-35	Tension release plate
91-000 150-15	Fastening screw for No. 91-008 008-05	91-010 188-91	Thread tension (Models A & B), complete, consisting of Nos. 13-030 104-05; 91-000 239-15; 91-000 366-35; 91-000 666-05; 91-000 667-05; 91-001 522-35; 91-004 005-05; 91-004 006-05; 91-006 505-05; 91-010 107-05; 91-010 115-05; 91-010 116-05; 91-010 180-05; 91-010 181-15; 91-010 183-05; 91-010 185-05; 91-010 186-35; 91-010 265-31; 91-105 447-15
91-000 152-15	Fastening screw for No. 91-010 104-05	91-010 235-91	Take-up lever (Models A & B fabric), complete, consisting of Nos. 91-008 008-05; 91-008 009-05; 91-008 011-05; 91-010 006-92; 91-010 007-05; 91-010 173-05
91-000 172-35	Fastening screw for Nos. 91-010 027-35; 91-010 028-35; 91-010 175-35	91-010 237-91	Take-up lever (Models A & B, leather), complete, consisting of Nos. 91-008 008-05; 91-008 009-05; 91-008 011-05; 91-010 006-92; 91-010 007-05; 91-010 837-05
91-000 237-15	Fastening screw for No. 91-008 021-11	91-010 265-31	Tension bracket for No. 91-010 188-91
91-000 239-15	Fastening screw for No. 91-010 115-05	91-010 728-15	Pressure spring receptacle for No. 91-010 731-15
91-000 243-15	Fastening screw for Nos. 91-000 256-15; 91-010 006-92	91-010 729-05	Tension release plunger for No. 91-010 731-15
91-000 256-15	Tension stud for No. 91-010 026-31	91-010 730-15	Tension release lever for No. 91-010 731-15
91-000 366-35	Fastening screw for No. 91-010 186-35	★ 91-010 731-15	Lifting bracket guide for No. 91-010 729-05
91-000 412-35	Fastening screw for No. 91-010 188-91	91-010 732-05	Plunger for No. 91-003 100-05
91-000 469-15	Hinge screw for No. 91-010 734-15	★ 91-010 734-15	Presser bar lifter (Models A & B)
91-000 507-15	Pressure regulating thumb screw (Models A, B & C)	91-010 752-15	Stop for No. 91-010 730-15
91-000 510-15	Fastening screw for No. 91-019 846-92	91-010 817-91	Thread lubricator (Models A, B, C & D, leather, and Model D, fabric), complete, consisting of Nos. 91-010 819-35; 91-010 820-45; 91-010 821-35; 91-010 822-05
★ 91-000 568-15	Fastening screw for Nos. 91-010 728-15; 91-010 731-15	91-010 819-35	Oil pad holder for No. 91-010 817-91
91-000 641-15	Fastening screw for No. 91-715 536-04	91-010 820-45	Oil pad for No. 91-010 819-35
91-000 666-05	Tension stud, upper	91-010 821-35	Hinge for No. 91-010 817-91
91-000 667-05	Tension stud, lower	91-010 822-05	Hinge pin for No. 91-010 821-35
91-001 522-35	Nut for Nos. 91-000 256-15; 91-000 666-05; 91-000 667-05	91-010 823-45	Face plate
91-003 100-05	Pressure spring for No. 91-010 728-15	91-010 837-05	Take-up lever (Models A & B, leather) for No. 91-010 237-91
91-004 005-05	Thread retainer sleeve	91-015 537-05	Needle bar for No. 91-715 538-93
91-004 006-05	Pressure spring for No. 91-004 005-05	91-019 676-05	Oil wick, 20 mm long, for No. 91-008 009-05
91-006 505-05	Tension disc	★ 91-019 846-92	Presser bar lifting bracket, w/ set screw No. 91-000 510-15
91-006 525-05	Presser bar spring, outer (Models A & B)	91-025 637-15	Leaf spring for No. 91-010 817-91
91-006 526-05	Washer for No. 91-006 525-05	91-046 864-25	Finger guard
91-006 783-05	Cotton wick, 100 mm long, for No. 91-008 008-05	91-051 642-03 x N	Presser foot, hinged (Subcl. -6/1) No. 91-040 791-04 x N Presser foot, rigid (Subcl. -6/1)
91-008 008-05	Hinge stud		Orders should specify type desired
91-008 009-05	Driving stud (Models A & B) for Nos. 91-010 173-05; 91-010 837-05	91-061 005-05	Presser bar spring, inner
91-008 011-05	Hinge stud for No. 91-010 007-05	91-105 447-15	Washer for No. 91-010 183-05
91-008 021-11	Lifting bracket link for No. 91-019 846-92	91-700 868-15	Needle set screw
91-008 064-05	Take-up lever oil pad	91-715 536-04 x N	Needle holder (Subcl. -6/1)
★ 91-008 711-05	Tension release plunger for No. 91-010 188-91	91-715 538-93 x N	Needle bar, complete, consisting of Nos. 91-000 641-15; 91-015 537-05; 91-700 868-15; 91-715 536-04 (Subcl. -6/1)
91-009 118-01	Presser bar (Models A, B & C)		
91-009 119-05	Presser bar spring stop pin for No. 91-061 005-05		
91-009 148-05	Oil wick, 60 mm long, for No. 91-008 011-05		
91-010 006-92	Needle bar connecting stud, w/ binding screws No. 91-000 243-15		
91-010 007-05	Needle bar connecting link		
91-010 008-45	Needle bar frame		
91-010 009-05	Position bracket for No. 91-010 008-45		
91-010 026-31	Thread controller disc		
91-010 027-35	Thread guide, back section		
91-010 028-35	Thread guide, front section		
91-010 104-05	Hinge stud for No. 91-010 008-45		
91-010 107-05	Position pin for upper tension		
91-010 115-05	Thread retainer stud		
91-010 116-05	Thread retainer stud collar		
91-010 137-35	Stop for No. 91-010 179-05		
91-010 173-05	Take-up lever (Models A & B, fabric) for No. 91-010 235-91		
91-010 175-35	Thread guide, upper		



Arm Parts

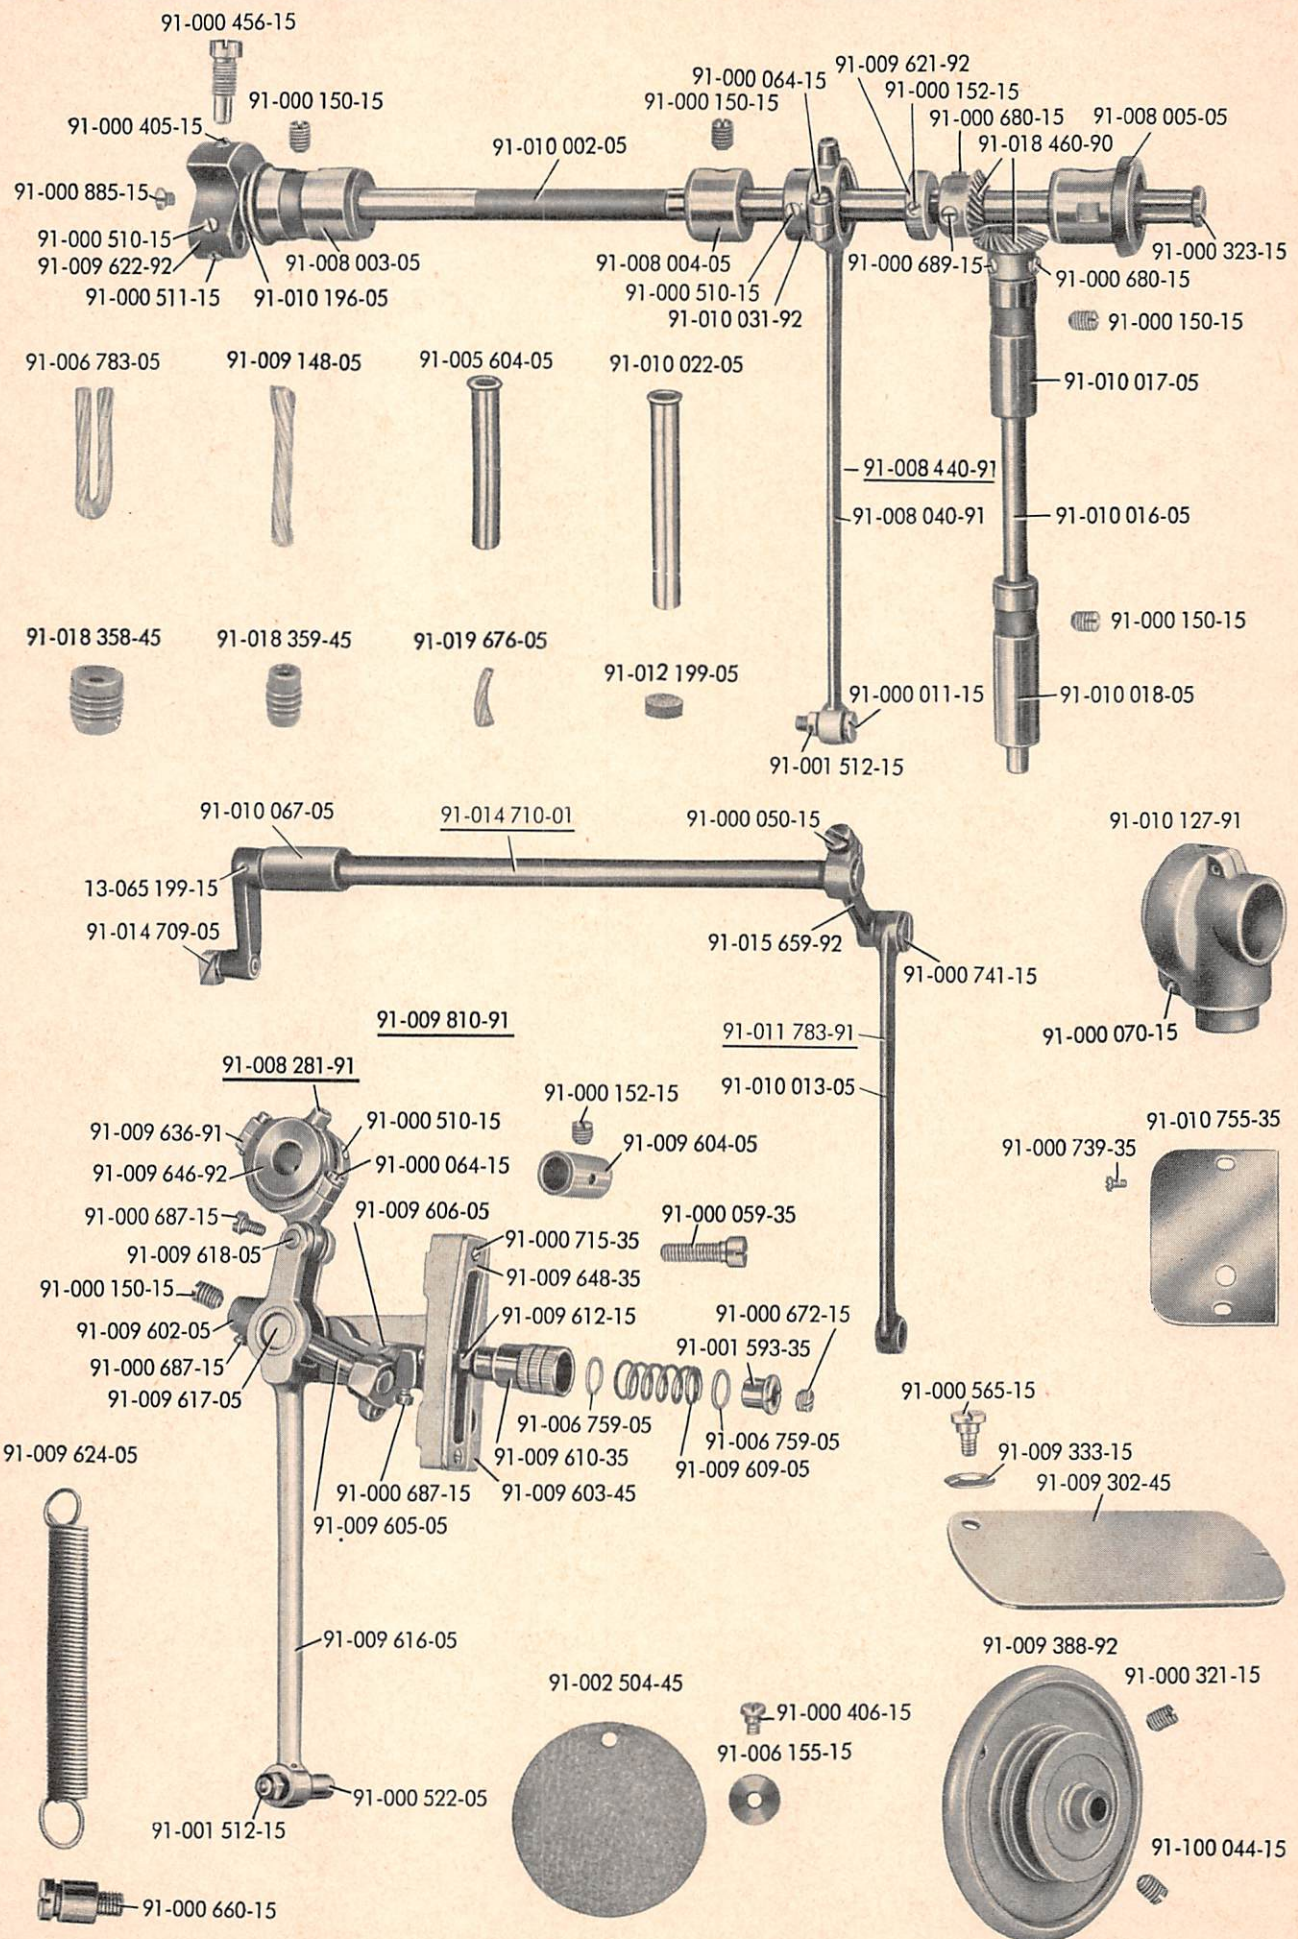

★ 13-065 199-15 (1974)	Positioning pin for No. 91-014 710-01	91-009 388-92	Balance wheel (Models A & B), w/ set screws Nos. 91-000 321-15; 91-100 044-15 (Standard version)
91-000 011-15	Hinge screw for No. 91-008 440-91	91-009 602-05	Feed regulator
91-000 050-15	Binding screw for No. 91-015 659-92	91-009 603-45	Feed regulator bearing bracket
★ 91-000 059-35	Fastening screw for No. 91-009 603-45	91-009 604-05	Feed regulator bearing bracket bushing for No. 91-009 603-45
91-000 064-15	Fastening screw for Nos. 91-008 040-91; 91-009 636-91	91-009 605-05	Feed regulator stud
91-000 070-15	Fastening screw for No. 91-010 127-91	91-009 606-05	Feed regulator lever stud
91-000 150-15	Fastening screw for Nos. 91-008 003-05; 91-008 004-05; 91-010 017-05; 91-010 018-05 and end screw for No. 91-009 605-05	91-009 609-05	Retaining spring
91-000 152-15	Fastening screw for Nos. 91-009 604-05; 91-009 621-92	91-009 610-35	Feed regulator knob
91-000 321-15	Fastening screw for No. 91-009 388-92	91-009 612-15	Feed regulator lever stud guide
91-000 323-15	End screw, rear, for No. 91-010 002-05	91-009 616-05	Feed driving connection
91-000 405-15	Fastening screw for No. 91-009 622-92	91-009 617-05	Feed regulator hinge stud
★ 91-000 406-15	Fastening screw for No. 91-002 504-45	91-009 618-05	Hinge stud for No. 91-009 616-05
91-000 456-15	Fastening screw for No. 91-009 622-92	91-009 621-92	Collar for No. 91-010 127-91, w/ set screw No. 91-000 152-15
91-000 510-15	Fastening screw for Nos. 91-008 011-05 (see p. I); 91-009 646-92; 91-010 031-92	91-009 622-92	Needle bar crank, w/ set screws Nos. 91-000 405-15; 91-000 510-15; 91-000 511-15
91-000 511-15	Fastening screw for No. 91-008 011-05 (see p. I)	91-009 624-05	Tension spring
91-000 522-05	Hinge screw for Nos. 91-009 616-05; 91-010 013-05	91-009 636-91	Feed driving eccentric sleeve, w/ set screw No. 91-000 064-15
91-000 565-15	Fastening screw for No. 91-009 302-45	91-009 646-92	Feed driving eccentric (5 $\frac{1}{2}$ s.p.i.), w/ set screw No. 91-000 510-15
91-000 660-15	Spring suspension screw for No. 91-009 624-05	★ 91-009 648-35 91-009 810-91	Feed regulator index plate Feed regulator (5 $\frac{1}{2}$ s.p.i.), complete, consisting of Nos. 91-000 150-15; 91-000 152-15; 91-000 522-05; 91-000 672-15; 91-000 687-15; 91-000 715-35; 91-001 512-15; 91-001 593-35; 91-006 759-05; 91-008 281-91 compl.; 91-009 602-05; 91-009 603-45; 91-009 604-05; 91-009 605-05; 91-009 606-05; 91-009 609-05; 91-009 610-35; 91-009 612-15; 91-009 616-05; 91-009 617-05; 91-009 618-05; 91-009 648-35
91-000 672-15	End screw for No. 91-001 593-35	91-010 002-05	Arm shaft
91-000 680-15	Fastening screw, pointed, for No. 91-018 460-90	91-010 013-05	Needle bar frame shaft connection
91-000 687-15	Fastening screw for Nos. 91-009 605-05; 91-009 606-05; 91-009 618-05	91-010 016-05	Vertical shaft
91-000 689-15	Fastening screw, blunt, for No. 91-018 460-90	91-010 017-05	Vertical shaft bushing, upper
91-000 715-35	Fastening screw for No. 91-009 648-35	91-010 018-05	Vertical shaft bushing, lower
★ 91-000 739-35	Fastening screw for No. 91-010 755-35	91-010 022-05	Oil tube, 56 mm long, for No. 91-010 044-05 (see p. III)
91-000 741-15	Hinge screw for Nos. 91-010 013-05; 91-015 659-92	91-010 031-92	Feed lifting eccentric, w/ set screw No. 91-000 510-15
91-000 885-15	End screw, front, for No. 91-010 002-05	91-010 067-05	Needle bar frame shaft bushing
91-001 512-15	Nut for Nos. 91-000 011-15; 91-000 522-05	91-010 127-91	Bevel gear case, w/ set screw No. 91-000 070-15
91-001 593-35	Nut for No. 91-009 610-35	91-010 196-05	Friction washer for No. 91-008 003-05
91-002 504-45	Arm cover, rear	★ 91-010 755-35 91-011 783-91	Arm cover, front Needle bar frame shaft connection, complete, consisting of Nos. 91-000 741-15; 91-010 013-05; 91-015 659-92
91-005 604-05	Oil tube, 48 mm long, for No. 91-010 018-05	91-012 199-05	Oil pad for Nos. 91-008 003-05; 91-008 005-05
★ 91-006 155-15	Spring washer for Nos. 91-000 406-15; 91-002 504-45	★ 91-014 709-05 91-014 710-01	Slide block for No. 91-014 710-01 Needle bar frame shaft, w/ needle bar frame shaft crank, front and w/ No. 13-065 199-15 Positioning pin No. 91-014 709-05 Slide block
91-006 759-05	Washer for No. 91-009 609-05	91-015 659-92	Needle bar frame shaft crank, rear, w/ set screw No. 91-000 050-15
91-006 783-05	Cotton wick, 100 mm long, for No. 91-009 605-05	★ 91-018 358-45 ★ 91-018 359-45 91-018 460-90	Oil cup for No. 91-008 003-05 Oil cup for No. 91-008 004-05 Bevel gear assembly, w/ set screw, pointed, No. 91-000 680-15 set screw, blunt, No. 91-000 689-15
★ 91-008 003-05	Arm shaft bushing, front	91-019 676-05	Cotton wick, 20 mm long, for No. 91-008 040-91; 91-009 636-91
91-008 004-05	Arm shaft bushing, center	91-100 044-15	Fastening screw for No. 91-009 388-92
91-008 005-05	Arm shaft bushing, rear	91-010 001-45	Arm (not ill.)
91-008 040-91	Feed lifting connection, w/ set screw No. 91-000 064-15		
91-008 281-91	Feed driving eccentric sleeve (5 $\frac{1}{2}$ s.p.i.), complete, consisting of Nos. 91-009 636-91; 91-009 646-92		
91-008 440-91	Feed lifting connection, complete, consisting of Nos. 91-000 011-15; 91-001 512-15; 91-008 040-91; 91-010 031-92		
91-009 148-05	Oil wick, 60 mm long, for No. 91-008 440-91		
91-009 302-45	Top cover		
91-009 333-15	Spring washer for No. 91-000 565-15		

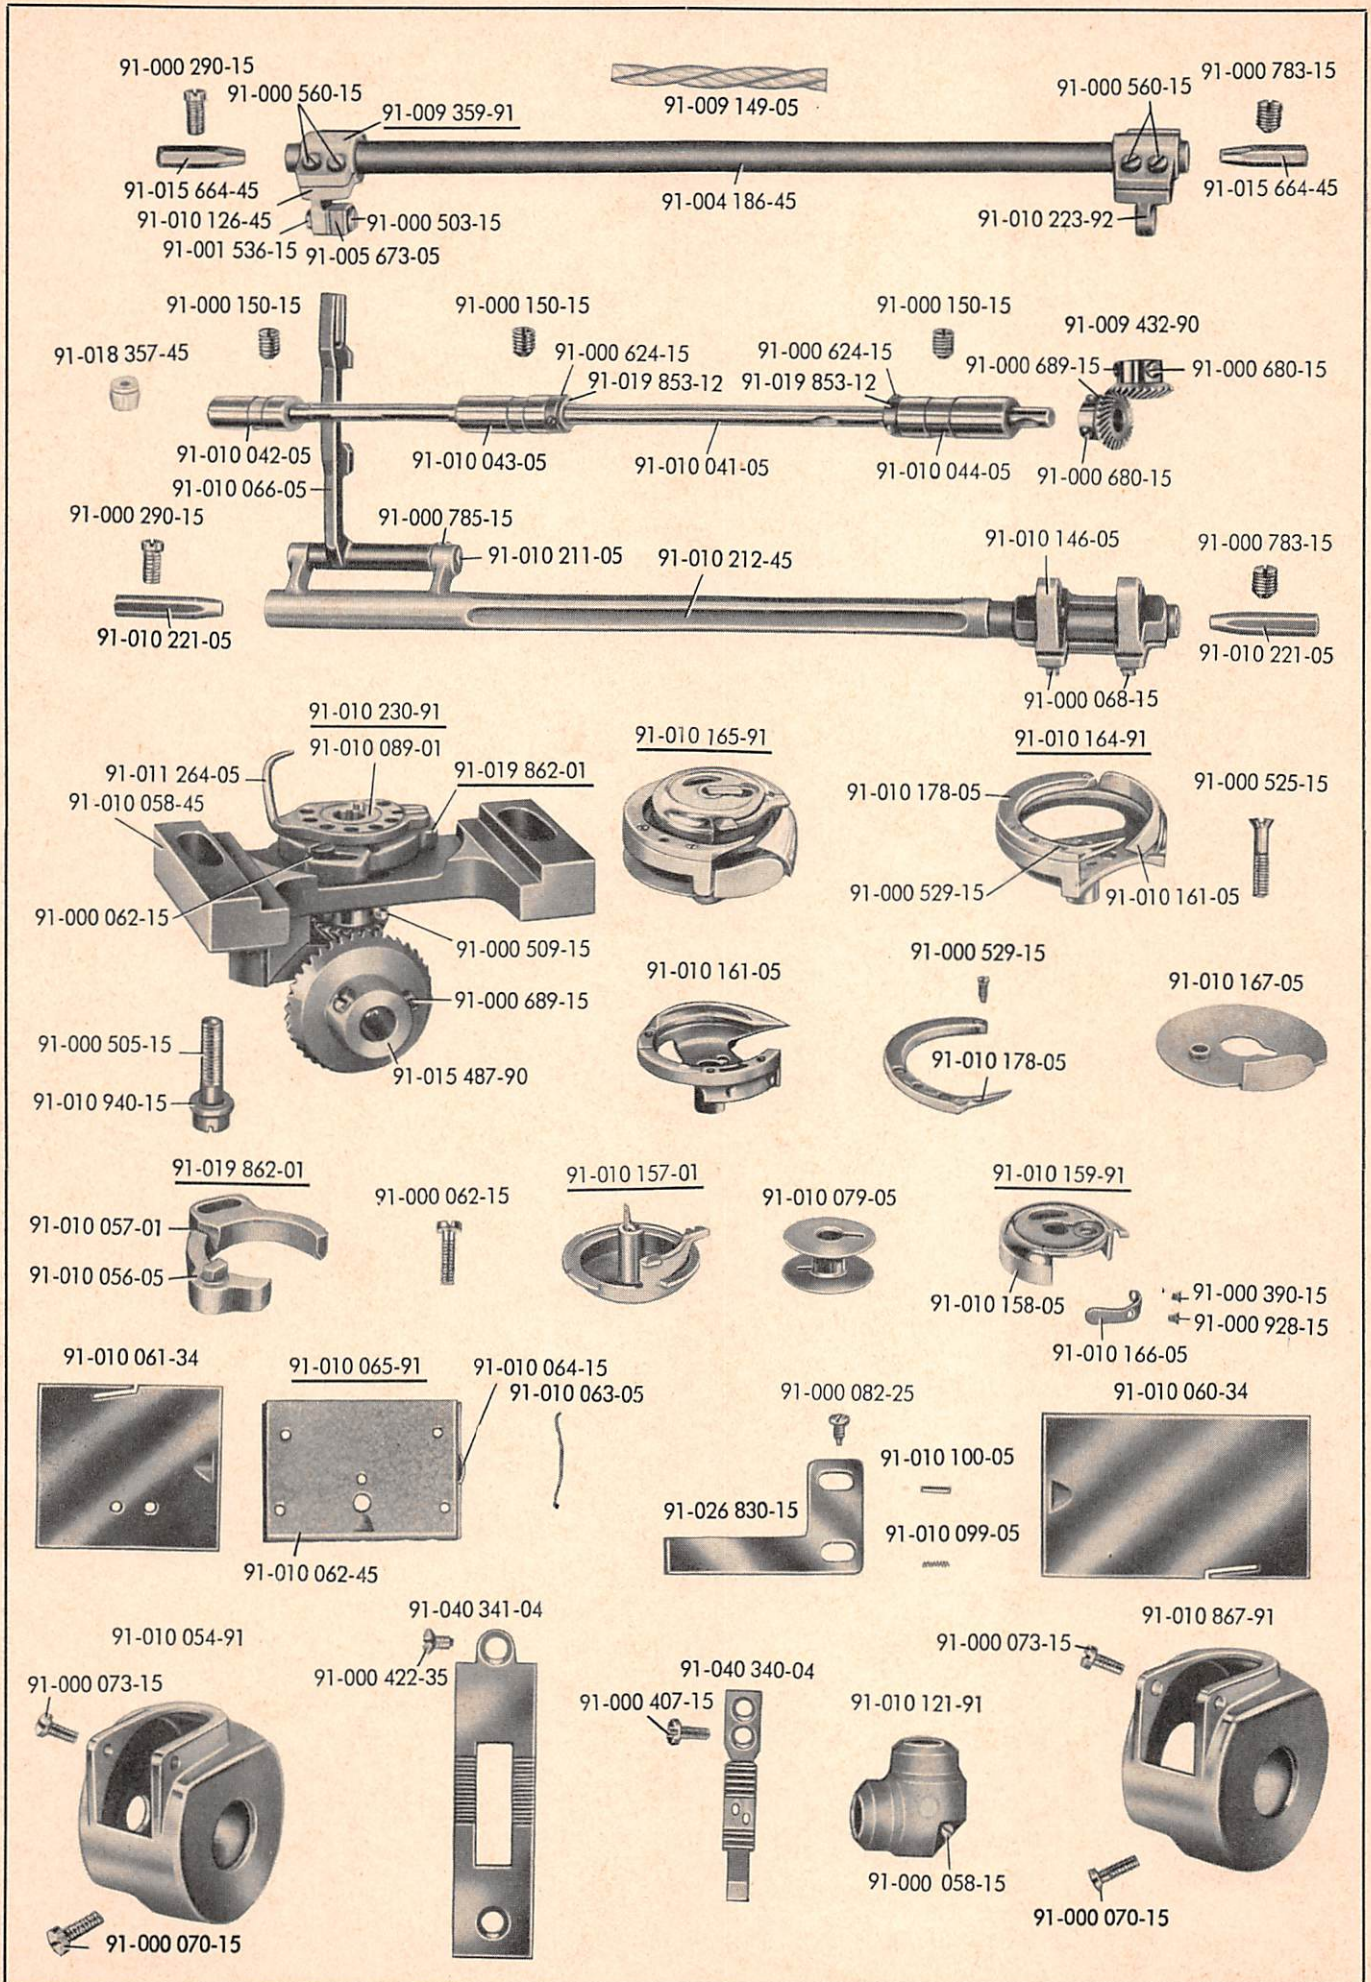




Bedplate Parts

N = Needle Gauge

91-000 058-15	Fastening screw for No. 91-010 121-91	91-010 043-05	Hook drive shaft bushing, center
91-000 062-15	Fastening screw for No. 91-010 057-01	91-010 044-05	Hook drive shaft bushing, rear
91-000 068-15	Binding screw for No. 91-010 146-05	91-010 054-91	Bevel gear case, lower, front, w/ set screw No. 91-000 070-15 (for machines fitted for a needle gauge of 3.2 mm and up)
91-000 070-15	Fastening screw for Nos. 91-010 054-91; 91-010 867-91	91-010 056-05	Bobbin case lever slide for No. 91-010 057-01
91-000 073-15	Fastening screw for Nos. 91-010 054-91; 91-010 867-91	91-010 057-01	Bobbin case lever fulcrum
91-000 082-25	Fastening screw for No. 91-026 830-15	91-010 058-45	Hook saddle, left No. 91-010 059-45 Hook saddle, right (not ill.)
91-000 150-15	Fastening screw for Nos. 91-010 042-05; 91-010 043-05; 91-010 044-05	91-010 060-34 x N	Bed slide, front
91-000 290-15	Fastening screw for Nos. 91-010 221-05; 91-015 664-45	91-010 061-34 x N	Bed slide, rear
91-000 390-15	Fastening screw for No. 91-010 166-05	91-010 062-45	Bed slide, center
91-000 407-15	Fastening screw for No. 91-040 340-04	91-010 063-05	Retaining spring for No. 91-010 065-91
91-000 422-35	Fastening screw for No. 91-040 341-04	91-010 064-15	Friction slide for No. 91-010 065-91
91-000 503-15	Hinge screw for No. 91-005 673-05	91-010 065-91	Bed slide, center, complete, consisting of Nos. 91-010 062-45; 91-010 063-05; 91-010 064-15
91-000 505-15	Fastening screw for Nos. 91-010 058-45; 91-010 059-45	91-010 066-05	Feed bar
91-000 509-15	Fastening screw for No. 91-015 487-90	91-010 079-05	Bobbin
91-000 525-15	Fastening screw for No. 91-010 161-05	91-010 089-01	Hook shaft, w/ driving pin No. 91-010 088-05
91-000 529-15	Fastening screw for Nos. 91-010 178-05; 91-010 893-05 (see p. 6)	91-010 099-05	Pressure spring for No. 91-010 061-34
91-000 560-15	Binding screw for Nos. 91-010 126-45; 91-010 223-92	91-010 100-05	Guide pin for No. 91-010 099-05
91-000 624-15	Fastening screw for No. 91-019 853-12	91-010 121-91	Bevel gear case, lower, rear, w/ set screw No. 91-000 058-15
91-000 680-15	Fastening screw, pointed, for No. 91-009 432-90	91-010 126-45	Feed lifting shaft crank, front
91-000 689-15	Fastening screw, blunt, for Nos. 91-009 432-90; 91-015 487-90	91-010 146-05	Feed rock shaft crank
91-000 783-15	Fastening screw for Nos. 91-010 221-05; 91-015 664-45	91-010 157-01	Bobbin case base, complete, consisting of No. 91-010 070-05 Latch No. 91-010 071-05 Hinge pin No. 91-010 072-05 Pressure spring No. 91-010 073-05 Plunger No. 91-010 156-05 Bobbin case cap
91-000 785-15	Fastening screw for No. 91-010 211-05	91-010 158-05	Bobbin case cap
91-000 928-15	Regulating screw for No. 91-010 166-05	91-010 159-91	Bobbin case cap, complete, consisting of Nos. 91-000 390-15; 91-000 928-15; 91-010 158-05; 91-010 166-05
91-001 536-15	Nut for No. 91-000 503-15	91-010 161-05	Hook (Models A & B, fabric)
★ 91-004 186-45	Feed lifting shaft	91-010 164-91	Hook (Models A & B, fabric), complete, consisting of Nos. 91-000 529-15; 91-010 161-05; 91-010 167-05; 91-010 178-05 (For Models A & B, leather, see No. 91-010 895-91)
91-005 673-05	Slide block for No. 91-010 126-45	91-010 165-91	Hook, w/ bobbin case (Models A & B, fabric), complete, consisting of Nos. 91-010 157-01; 91-010 159-91; 91-010 164-91 (For Models A & B, leather, see No. 91-010 896-91)
91-009 149-05	Oil wick for Nos. 91-004 186-45; 91-010 212-45		
91-009 359-91	Feed lifting shaft crank, complete, consisting of Nos. 91-000 503-15; 91-000 560-15; 91-001 536-15; 91-005 673-05; 91-010 126-45		
91-009 432-90	Bevel gear assembly, w/ set screws Nos. 91-000 680-15; 91-000 689-15		
91-010 041-05	Hook drive shaft		
91-010 042-05	Hook drive shaft bushing, front, up to N = 40 mm No. 91-009 565-05 Hook drive shaft bushing (for N = 40-52 mm) No. 91-010 222-05 Hook drive shaft bushing (for N = over 52 mm)		

91-010 166-05	Tension spring	<u>91-010 896-91</u>	Hook (Models A & B, leather, and Model C, fabric) (not ill.), complete, consisting of Nos. 91-010 157-01 compl.; 91-010 159-91 compl.; 91-010 895-91 compl.
91-010 167-05	Hook washer for No. 91-010 164-91	91-010 940-15	Washer for No. 91-000 505-15
91-010 178-05	Hook gib (Models A & B, fabric) No. 91-010 893-05 Hook gib (Models A & B, leather)	91-011 264-05	Bobbin case lever
91-010 211-05	Feed bar hinge stud	91-015 487-90	Bevel gear assembly, w/ set screw No. 91-000 509-15 and set screw No. 91-000 689-15
91-010 212-45	Feed rock shaft	★ 91-015 664-45	Center stud for No. 91-004 186-45
91-010 221-05	Center stud for No. 91-010 212-45	★ 91-018 357-45	Oil cup for Nos. 91-010 042-05; 91-010 043-05
91-010 223-92	Feed lifting shaft crank, rear, w/ binding screw No. 91-000 560-15	91-019 853-12	Set collar for No. 91-010 041-05, w/ set screw No. 91-000 624-15
<u>91-010 230-91</u>	Hook saddle, left, complete, consisting of Nos. 91-000 062-15; 91-010 058-45; 91-010 089-01; 91-011 264-05; 91-015 487-90; 91-019 862-01 (Hook saddle, right, see No. 91-010 231-91)	<u>91-019 862-01</u>	Bobbin case lever fulcrum, complete, consisting of Nos. 91-010 056-05; 91-010 057-01
<u>91-010 231-91</u>	Hook saddle, right, complete, (not ill.) Same components as No. 91-010 230-91, complete, but fitted with hook saddle No. 91-010 059-45	91-026 830-15	Flat retaining spring for No. 91-010 061-34
91-010 867-91	Bevel gear case, lower, front, w/ set screw No. 91-000 070-15 (for machines fitted for a needle gauge up to 3.2 mm)	91-040 340-04 x N	Feed dog
<u>91-010 895-91</u>	Hook (Models A & B, leather, and Model C, fabric), not ill., complete, consisting of No. 91-000 529-15 Fastening screw No. 91-010 167-05 Hook washer No. 91-010 893-05 Hook gib No. 91-010 894-05 Hook	91-040 341-04 x N	Needle plate
		91-010 040-45	Bedplate (not ill.)

Accessory Parts

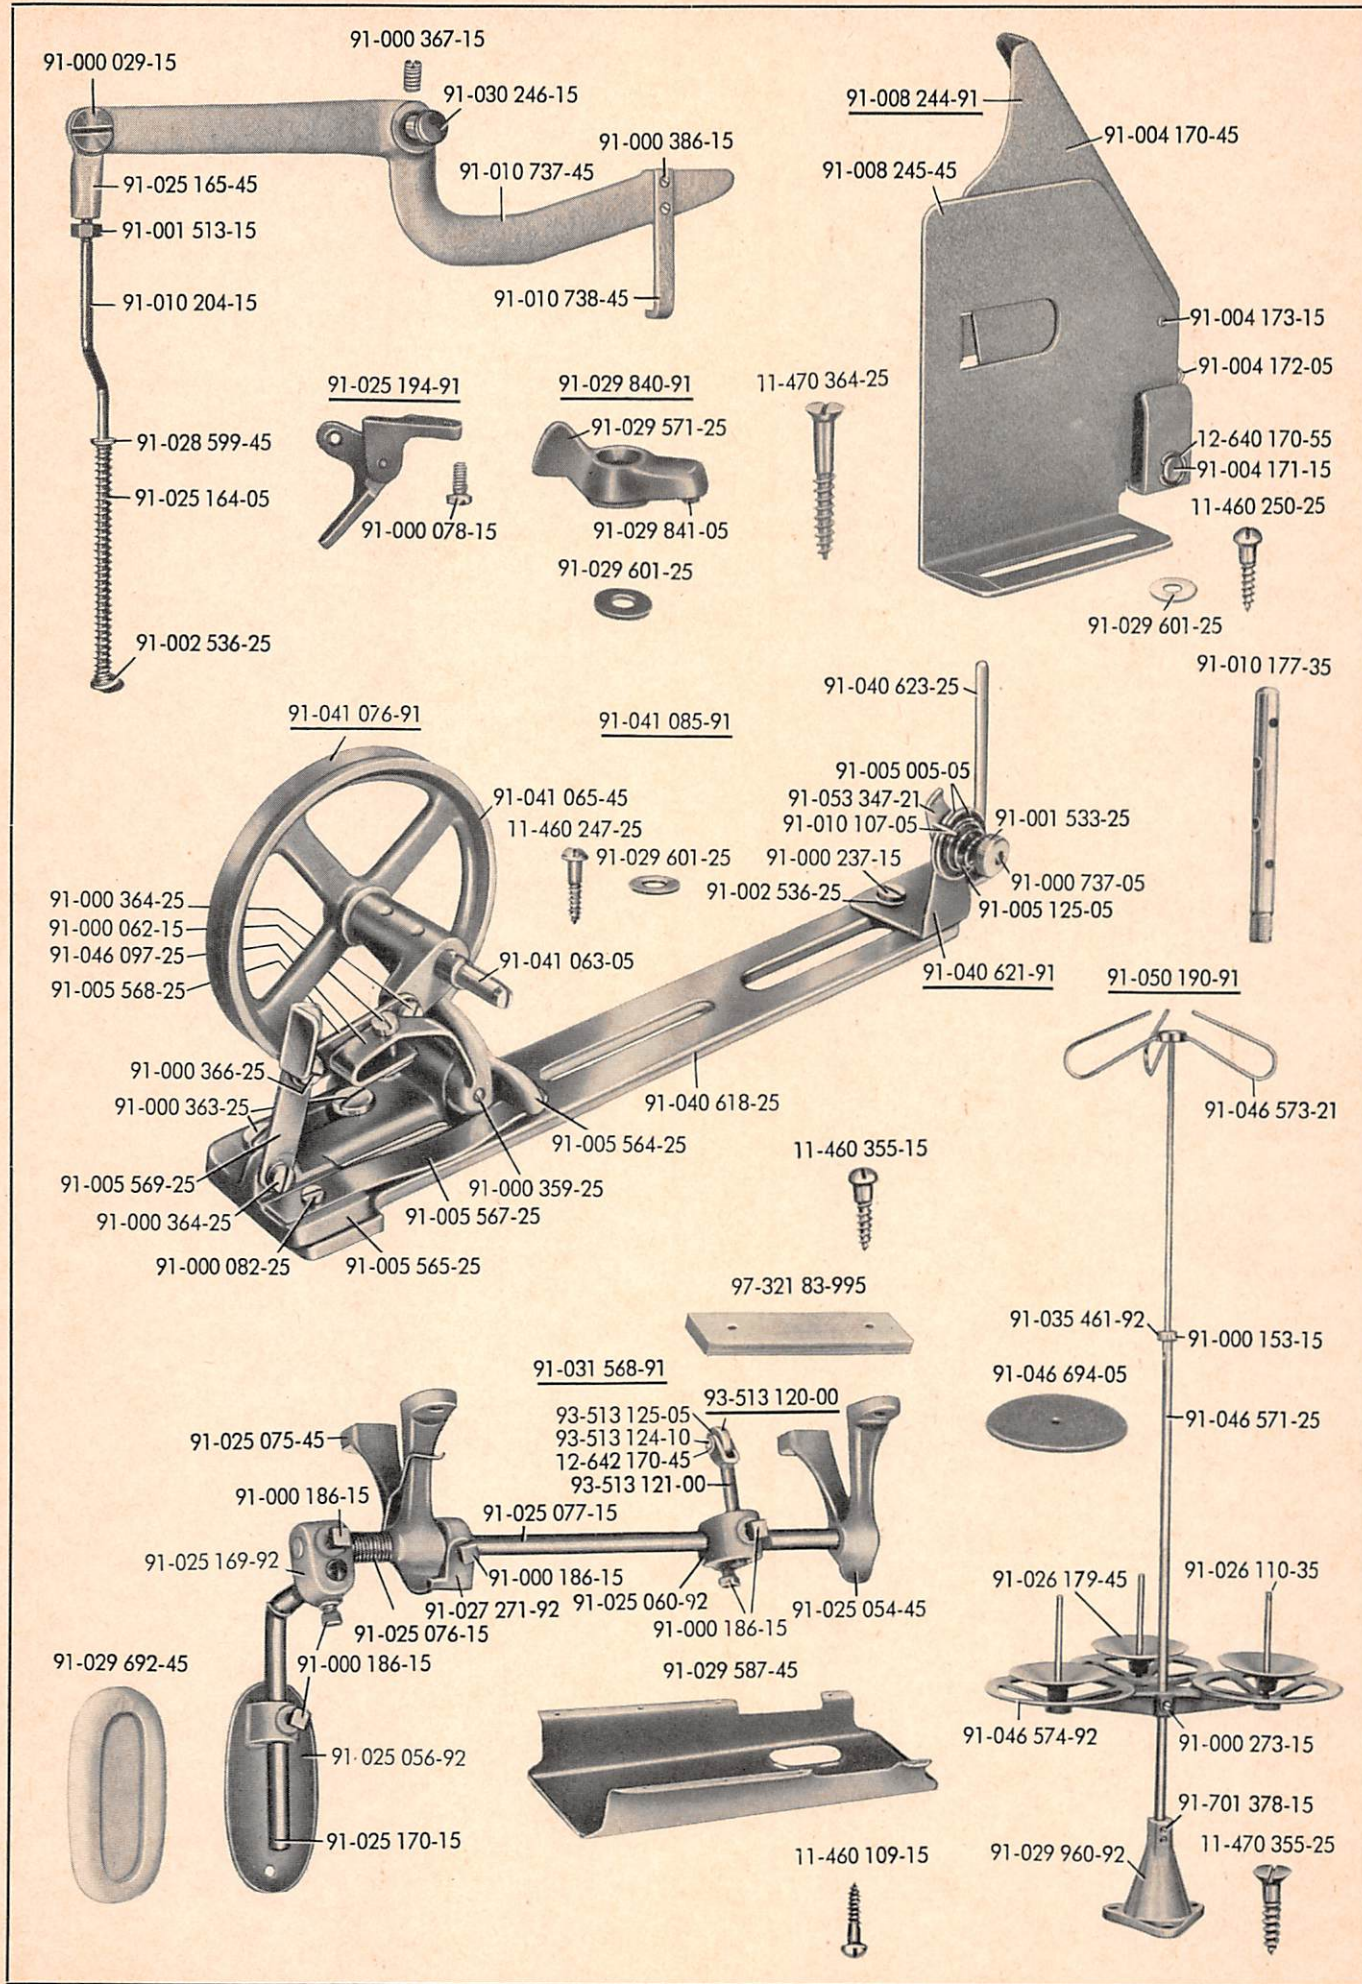


11-460 109-15 (1 435)	Wood screw for No. 91-029 587-45	91-005 567-25	Bobbin winder frame spring
11-460 247-25 (1 416)	Wood screw for No. 91-041 085-91	91-005 568-25	Bobbin winder stop latch trip lever for Nos. 91-005 564-25; 91-005 569-25
11-460 250-25 (1 459)	Wood screw for No. 91-008 244-91	91-005 569-25	Bobbin winder thumb lever for No. 91-005 568-25
11-460 355-15 (1 473)	Wood screw for No. 91-031 568-91	<u>91-008 244-91</u>	Belt guard (Models A, B & C), complete, consisting of Nos. 12-640 170-55; 91-004 170-45; 91-004 171-15; 91-004 172-05; 91-004 173-15; 91-008 245-45
11-470 355-25 (1 417)	Wood screw for No. 91-050 190-91	91-008 245-45	Belt guard bracket
11-470 364-25 (1 426)	Wood screw for No. 91-029 840-91	91-010 107-05	Position pin for No. 91-005 005-05
12-640 170-55 (50 077)	Slip washer for No. 91-004 171-15	91-010 177-35	Thread guide
12-642 170-45 (28 599)	Slip washer for No. 93-513 120-00	91-010 204-15	Lifting lever connecting rod (Models A & B)
91-000 029-15	Hinge screw for No. 91-025 165-45	★ 91-010 737-45	Lifting lever (Models A, B & C)
91-000 062-15	Set screw for No. 91-046 097-25	91-010 738-45	Lifting lever lifting bracket for No. 91-010 737-45
91-000 078-15	Fastening screw for No. 91-025 194-91	91-025 054-45	Rock shaft hanger, rear, for No. 91-025 077-15
91-000 082-25	Fastening screw for No. 91-005 567-25	91-025 056-92	Knee plate, w/ set screw No. 91-000 186-15
★ 91-000 153-15	Fastening screw for No. 91-035 461-92	91-025 060-92	Rock shaft lifting bracket, w/ set screw No. 91-000 186-15
91-000 186-15	Fastening screw for Nos. 91-025 056-92; 91-025 060-92; 91-025 169-92; 91-027 271-92	91-025 075-45	Rock shaft hanger, front, for No. 91-025 077-15
91-000 237-15	Fastening screw for No. 91-040 621-91	91-025 076-15	Torsion spring for No. 91-025 170-15
★ 91-000 273-15	Fastening screw for No. 91-046 574-92	91-025 077-15	Knee lifter rock shaft for No. 91-031 568-91
91-000 359-25	Hinge screw for Nos. 91-005 564-25; 91-005 565-25	91-025 164-05	Pressure spring for No. 91-010 204-15
91-000 363-25	Fastening screw for No. 91-041 076-91	91-025 165-45	Lifting lever connecting rod joint for No. 91-010 204-15
91-000 364-25	Fastening screw for Nos. 91-005 568-25; 91-005 569-25	91-025 169-92	Knee plate arm bracket, w/ set screw No. 91-000 186-15
91-000 366-25	Hinge screw for Nos. 91-005 568-25; 91-005 569-25	91-025 170-15	Knee plate arm for No. 91-025 169-92
91-000 367-15	Fastening screw for No. 91-030 246-15	<u>91-025 194-91</u>	Bell crank bracket (Models A & B), complete, consisting of No. 13-052 256-15 Hinge pin No. 91-025 184-45 Bearing bracket No. 91-025 190-45 Bell crank
91-000 386-15	Fastening screw for No. 91-010 738-45	91-026 110-35	Spool pin
91-000 737-05	Tension stud for No. 91-040 621-91	91-026 179-45	Spool disc
91-001 513-15	Nut for No. 91-010 204-15	91-027 271-92	Stop dog for No. 91-025 077-15, w/ set screw No. 91-000 186-15
91-001 533-25	Nut	★ 91-028 599-45	Circlip for No. 91-010 204-15
91-002 536-25	Washer for Nos. 91-000 237-15; 91-025 164-05	91-029 571-25	Catch for No. 91-029 840-91
91-004 170-45	Belt guard	91-029 587-45	Oil drip pan
91-004 171-15	Hinge stud for Nos. 91-004 170-45; 91-008 245-45	91-029 601-25	Washer for Nos. 11-460 247-25; 11-460 250-25; 11-470 364-25
91-004 172-05	Torsion spring for No. 91-004 170-45	91-029 692-45	Rubber pad cover for No. 91-025 056-92
91-004 173-15	Guide stud for No. 91-004 170-45	<u>91-029 840-91</u>	Catch, complete, consisting of Nos. 91-029 571-25; 91-029 841-05
91-005 005-05	Tension disc		
91-005 125-05	Tension spring		
91-005 564-25	Bobbin winder frame		
91-005 565-25	Bobbin winder frame base		

91-029 841-05	Leather for No. 91-029 840-91	91-041 085-91	Bobbin winder, table model, complete, consisting of Nos. 91-000 237-25; 91-000 363-25; 91-002 536-25; 91-040 618-25; 91-040 621-91; 91-041 076-91
91-029 960-92	Thread unwinder base, w/ set screw No. 91-701 378-15	91-046 097-25	Bobbin winder stop latch
91-030 246-15	Hinge stud for No. 91-010 737-45	91-046 571-25	Spool rest rod for No. 91-050 190-91
91-031 568-91	Knee lifter, complete, consisting of Nos. 91-025 054-45; 91-025 056-92; 91-025 060-92; 91-025 075-45; 91-025 076-15; 91-025 077-15; 91-025 169-92; 91-025 170-15; 91-027 271-92; 93-513 120-00	91-046 573-21	Thread guide
91-035 461-92	Set collar, w/ set screw No. 91-046 571-25, for No. 91-000 153-15	91-046 574-92	Spool rest, w/ set screw No. 91-000 273-15
91-040 618-25	Bobbin winder base	91-046 694-05	Spool pin washer (foam rubber) for No. 91-026 179-45
91-040 621-91	Bobbin winder tension bracket, complete, consisting of Nos. 91-000 737-05; 91-001 533-25; 91-005 005-05; 91-005 125-05; 91-040 623-25; 91-053 347-21	91-050 190-91	Thread unwinder, complete, consisting of Nos. 91-026 110-35; 91-026 179-45; 91-029 960-92; 91-035 461-92; 91-046 571-25; 91-046 573-21; 91-046 574-92; 91-046 694-05
91-040 623-25	Spool pin for No. 91-040 621-91	91-053 347-21	Bobbin winder tension bracket, w/ No. 91-010 107-05 Position pin No. 91-040 619-05 Bobbin winder tension bracket
91-041 063-05	Bobbin winder spindle	91-701 378-15	Fastening screw for No. 91-029 960-92
91-041 065-45	Bobbin winder pulley	93-513 120-00	Lifting bracket extension, complete, consisting of Nos. 12-642 170-45; 93-513 121-00; 93-513 124-10; 93-513 125-05
91-041 076-91	Bobbin winder, complete, consisting of Nos. 91-000 062-15; 91-000 082-25; 91-000 359-25; 91-000 364-25; 91-000 366-25; 91-005 564-25; 91-005 565-25; 91-005 567-25; 91-005 568-25; 91-005 569-25; 91-041 063-05; 91-041 065-45; 91-046 097-25	93-513 121-00	Lifting bracket extension for No. 93-513 120-00
		93-513 124-10	Roller stud for No. 93-513 125-05
		93-513 125-05	Roller for No. 93-513 120-00
		97-321 83-995	Knee-lifter spacer, wood, for No. 91-031 568-91

V

**Complementary Parts
PFAFF 142-6 C; D**

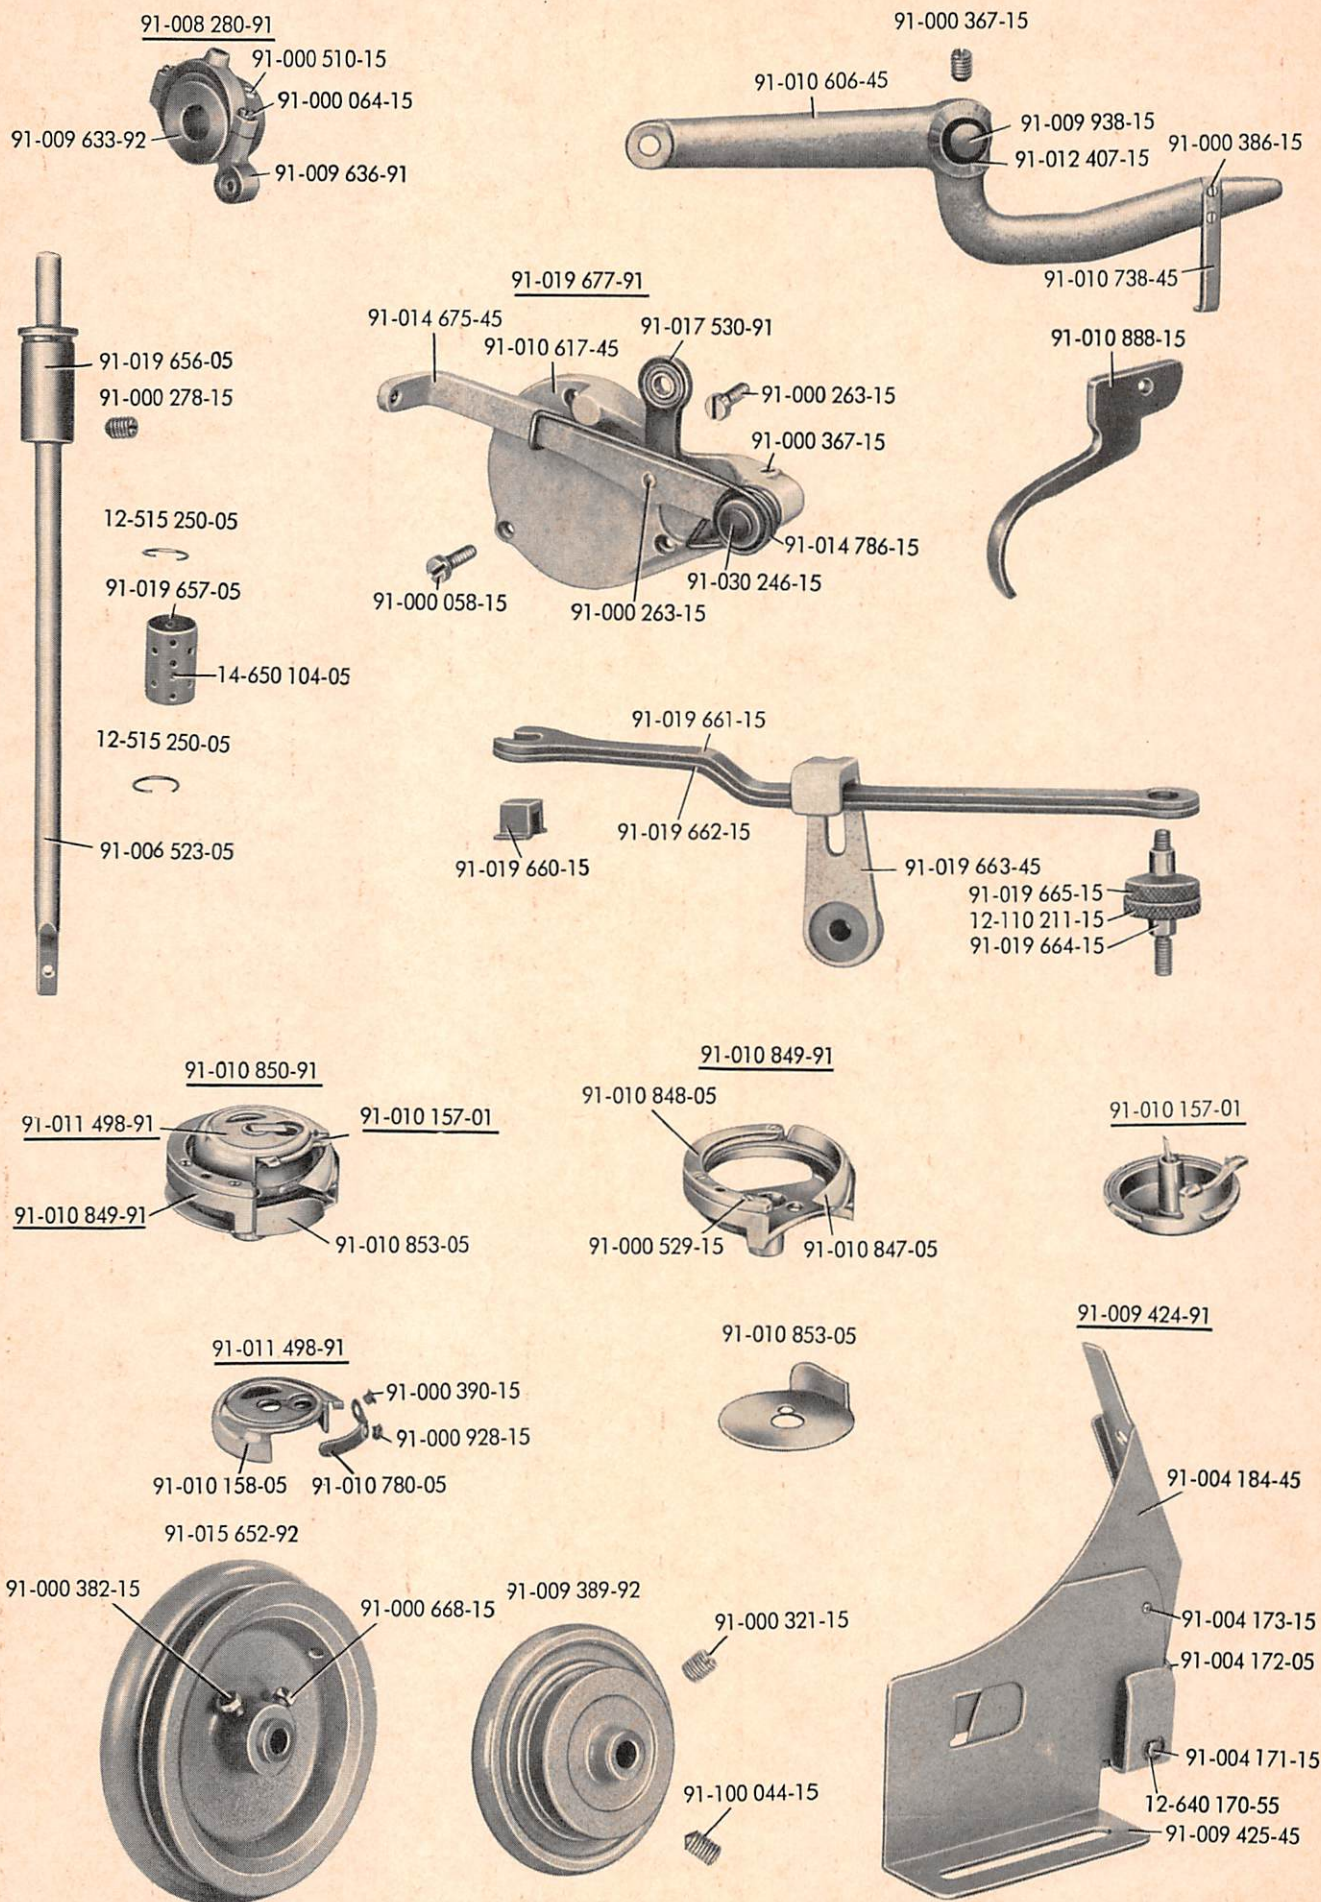

PFAFF[®]**Part Number Change**

Section v/1

142

To be filed with page:


26

Change No.:

Date:

Oct. 13, 1966

New Illustration

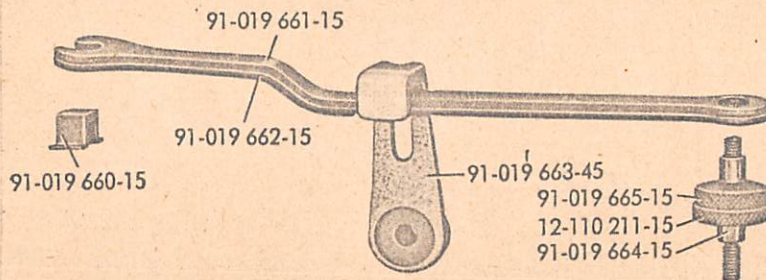



Remarks:

The old illustration (on p. 26 of the Pfaff 142 Spare Parts Catalogue) is to be replaced by the new one.

From the library of: Superior Sewing Machine & Supply LLC

12-110 211-15 (701 701)	Jam nut for No. 91-019 664-15	91-010 157-01	Bobbin case base, complete, consisting of No. 91-010 070-05 Latch No. 91-010 071-05 Hinge pin No. 91-010 072-05 Pressure spring No. 91-010 073-05 Plunger No. 91-010 156-05 Bobbin case base
12-515 250-05 (19 659)	Circlip for No. 91-019 656-05	91-010 158-05	Bobbin case cap
12-640 170-55 (50 077)	Slip washer for No. 91-004 171-15	91-010 606-45	Lifting lever (Model D)
14-650 104-05 (19 658)	Balls, $\frac{1}{16}$ " (24 ea) for No. 91-019 657-05	91-010 617-45	Arm cover, rear
91-000 058-15	Fastening screw for No. 91-010 617-45	91-010 738-45	Lifting lever lifting bracket for No. 91-010 606-45
91-000 064-15	Fastening screw for No. 91-009 636-91	91-010 780-05	Tension spring for No. 91-011 498-91
91-000 263-15	Hinge screw for No. 91-017 530-91	91-010 847-05	Hook (Model C, leather; Model D, fabric and leather)
91-000 278-15	Fastening screw for No. 91-019 656-05	91-010 848-05	Hook gib (w/ o point) for No. 91-010 849-91
91-000 321-15	Fastening screw for No. 91-009 389-92	91-010 849-91	Hook, (Model C, leather; Model D, fabric and leather), consisting of Nos. 91-000 529-15; 91-010 847-05; 91-010 848-05; 91-010 853-05 (For Model C, fabric, see No. 91-010 895-91, p. III)
91-000 367-15	Fastening screw for Nos. 91-009 938-15; 91-030 246-15	91-010 850-91	Hook, w/ bobbin case (Model C, leather; Model D, fabric and leather), complete, consisting of Nos. 91-010 157-01; 91-010 849-91; 91-011 498-91 (For Model C, fabric, see No. 91-010 896-91, p. III)
91-000 382-15	Fastening screw for No. 91-015 652-92	91-010 853-05	Hook washer for No. 91-010 849-91
91-000 386-15	Fastening screw for No. 91-010 738-45	91-010 888-15	Presser bar lifter
91-000 390-15	Fastening screw for No. 91-010 780-05	91-011 498-91	Bobbin case cap (Model C, leather; Model D, fabric and leather), complete, consisting of Nos. 91-000 390-15; 91-000 928-15; 91-010 158-05; 91-010 780-05 (For Model C, fabric, see No. 91-010 159-91, p. III)
91-000 510-15	Fastening screw for No. 91-009 633-92	91-012 407-15	Washer for No. 91-009 938-15
91-000 529-15	Fastening screw for No. 91-010 848-05	91-014 675-45	Connection lever for No. 91-017 530-91
91-000 668-15	Fastening screw for No. 91-015 652-92	91-014 786-15	Torsion spring for No. 91-014 675-45
91-000 928-15	Regulating screw for No. 91-010 780-05	91-015 652-92	Balance wheel (Model D), w/ set screws No. 91-000 382-15 and No. 91-000 668-15
91-004 171-15	Hinge stud for Nos. 91-004 184-45; 91-009 425-45	91-017 530-91	Ball joint connection, complete, consisting of No. 91-017 531-45 Connection No. 91-020 346-01 Ball joint
91-004 172-05	Torsion spring for No. 91-004 184-45	91-019 656-05	Presser bar bushing (Model D), for No. 91-006 523-05
91-004 173-15	Guide stud for No. 91-004 184-45	91-019 657-05	Ball retainer ring for No. 91-019 656-05
91-004 184-45	Belt guard for No. 91-009 424-91	91-019 660-15	Leaf spring bracket (Model D)
91-006 523-05	Presser bar (Model D)	91-019 661-15	Presser bar leaf spring, upper (Model D)
91-008 280-91	Feed driving eccentric sleeve for No. 91-009 361-91, complete, (6.0 mm stitch length), consisting of Nos. 91-009 633-92; 91-009 636-91	91-019 662-15	Presser bar leaf spring, lower (Model D)
91-009 361-91	Feed regulator (6.0 mm stitch length), complete Same components as No. 91-009 810-91, but fitted with feed driving eccentric sleeve No. 91-008 280-91 (not ill.)	91-019 663-45	Leaf spring guide bracket (Model D)
91-009 389-92	Balance wheel (Model C), w/ set screws Nos. 91-000 321-15 and 91-100 044-15 (Standard version)	91-019 664-15	Stud, threaded, for No. 91-019 665-15
91-009 424-91	Belt guard, complete (Model D), consisting of Nos. 12-640 170-55; 91-004 171-15; 91-004 172-05; 91-004 173-15; 91-004 184-45; 91-009 425-45	91-019 665-15	Pressure regulating thumb nut (Model D)
91-009 425-45	Belt guard bracket for No. 91-009 424-91	91-019 677-91	Lifting lever link assembly, complete, consisting of Nos. 91-000 263-15; 91-000 367-15; 91-010 617-45; 91-014 675-45; 91-014 786-15; 91-017 530-91; 91-030 246-15
91-009 633-92	Feed driving eccentric (6.0 mm sticht length), w/ set screw No. 91-000 510-15	91-030 246-15	Hinge stud (Model C), for No. 91-014 675-45
91-009 636-91	Feed driving eccentric sleeve, w/ set screw No. 91-000 064-15	91-100 044-15	Fastening screw for No. 91-009 389-92
91-009 938-15	Hinge stud for No. 91-010 606-45		

**Complementary Parts
PFAFF 142-6 C; D
PFAFF 142-200**

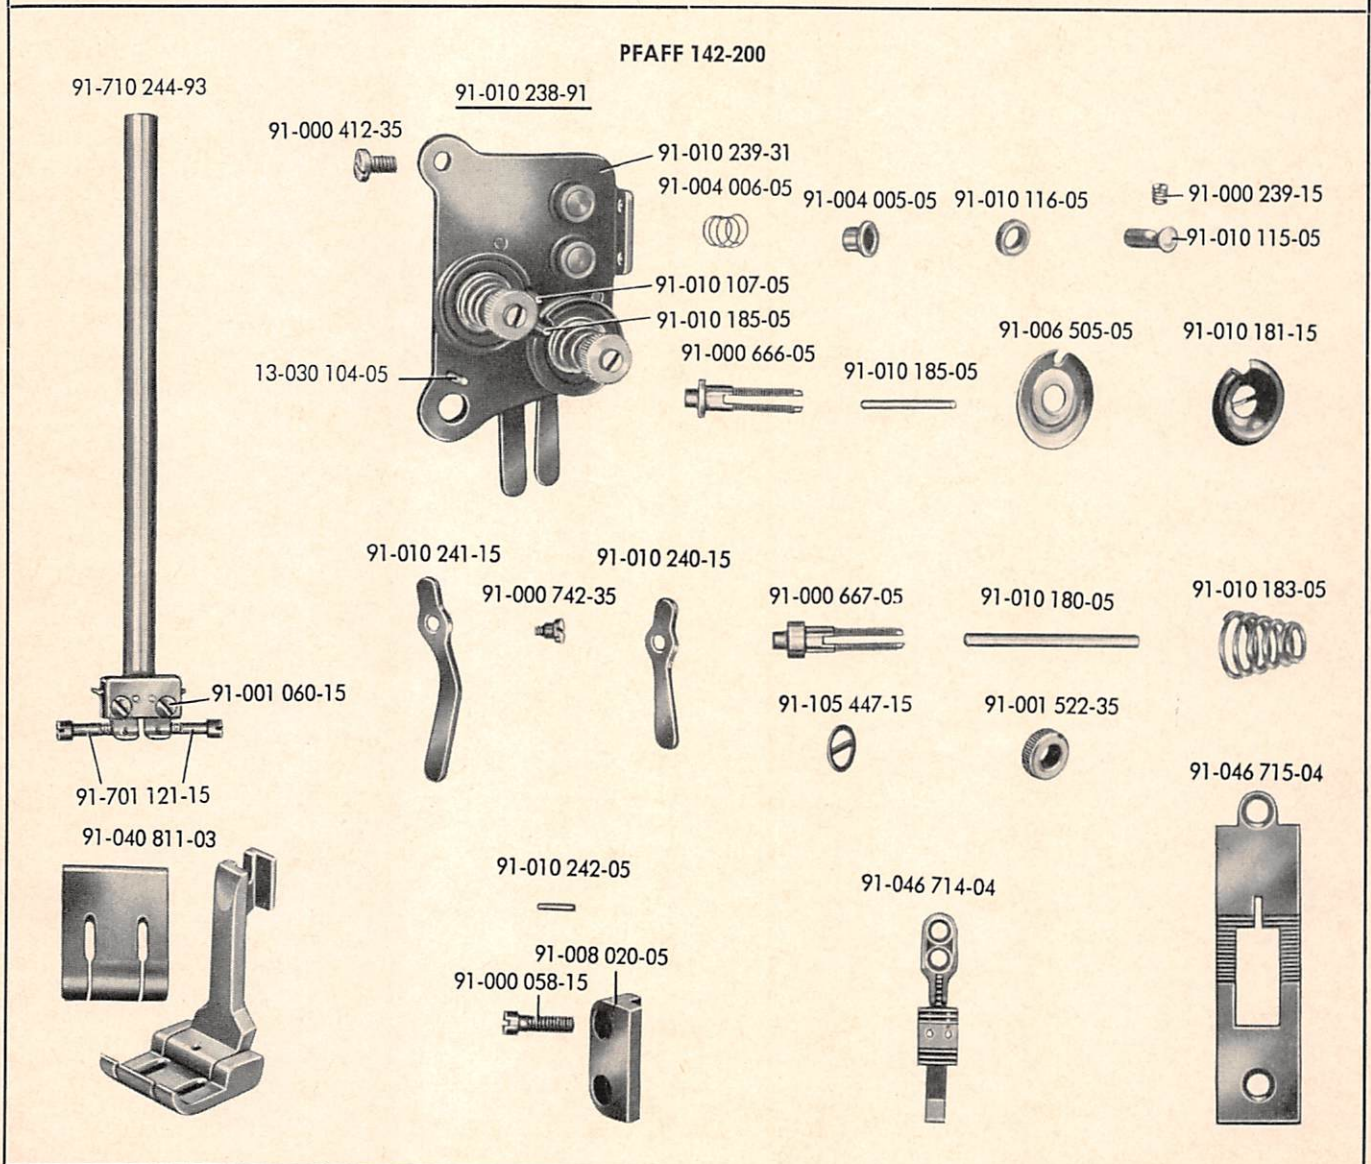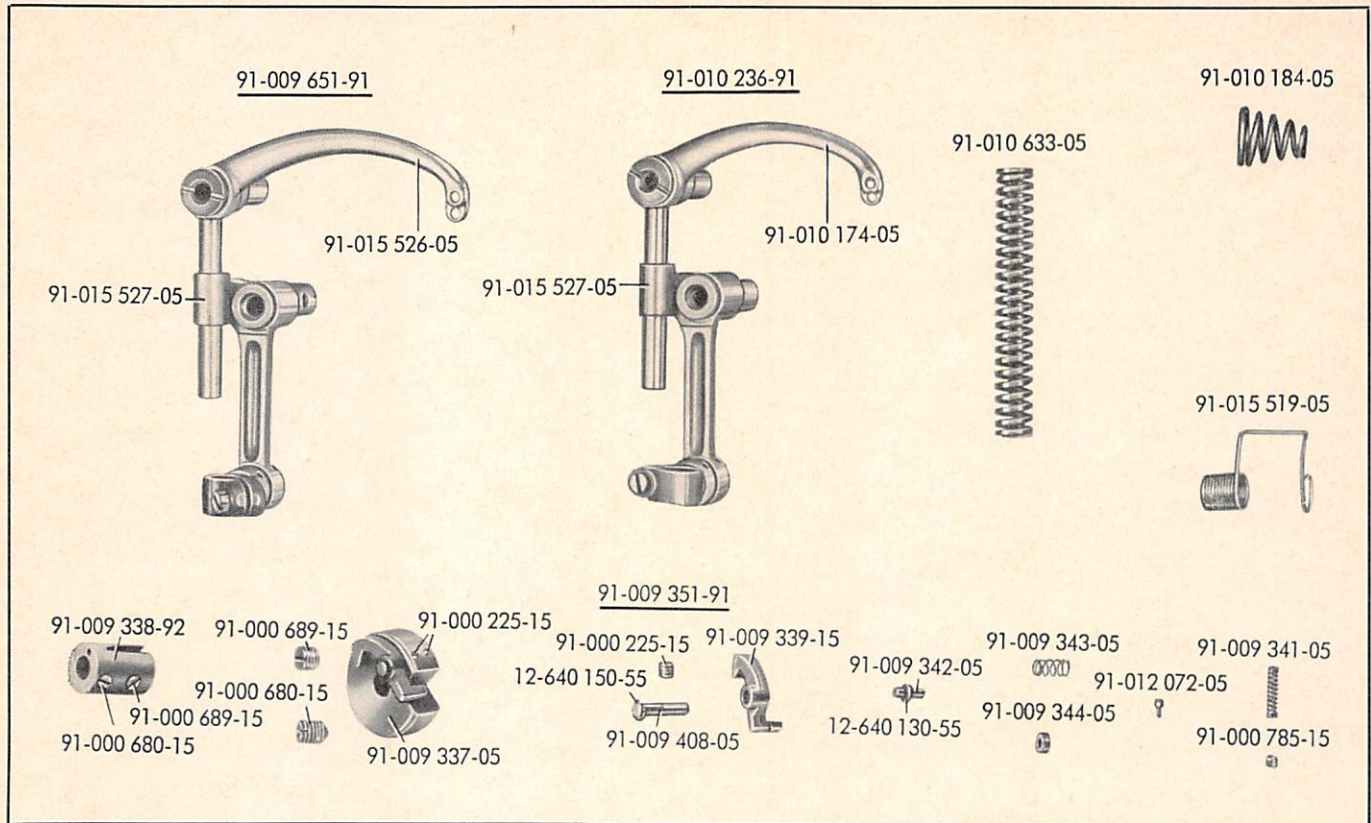


12-640 130-55 (23 033)	Slip washer for No. 91-009 342-05	91-009 408-05	Hinge stud for No. 91-009 339-15
12-640 150-55 (20 565)	Slip washer for No. 91-009 408-05	91-009 651-91	Take-up lever (Model C, leather; Model D, leather and fabric), complete Same components as No. 91-010 235-91, complete (see p. I), but fitted with take-up lever No. 91-015 526-05 and driving stud No. 91-015 527-05
91-000 225-15	Fastening screw for No. 91-009 408-05	91-010 174-05	Take-up lever (Model C, fabric)
91-000 680-15	Fastening screw, pointed, for Nos. 91-009 337-05; 91-009 338-92	91-010 184-05	Tension spring
91-000 689-15	Fastening screw, blunt, for Nos. 91-009 337-05; 91-009 338-92	91-010 236-91	Take-up lever (Model C, fabric) Same components as No. 91-009 651-91, complete, but fitted with take-up lever No. 91-010 174-05
91-000 785-15	End screw for No. 91-009 341-05	91-010 633-05	Presser bar spring, outer (Model C)
91-009 337-05	Clutch collar	91-012 072-05	Plunger for No. 91-009 339-15
91-009 338-92	Clutch bushing, w/ set screws Nos. 91-000 680-15; 91-000 689-15	91-015 519-05	Thread check spring
91-009 339-15	Clutch latch	91-015 526-05	Take-up lever (Model C, leather; Model D, leather and fabric)
91-009 341-05	Pressure spring for No. 91-012 072-05	91-015 527-05	Driving stud for Nos. 91-009 651-91; 91-010 236-91
91-009 342-05	Clutch disengaging pin for No. 91-009 337-05		
91-009 343-05	Pressure spring for No. 91-009 342-05		
91-009 344-05	Screw cap bushing for No. 91-009 343-05		
91-009 351-91	Safety clutch, complete, consisting of Nos. 12-640 130-55; 12-640 150-55; 91-000 225-15; 91-000 680-15; 91-000 689-15; 91-000 785-15; 91-009 337-05; 91-009 339-15; 91-009 341-05; 91-009 342-05; 91-009 343-05; 91-009 344-05; 91-009 408-05; 91-012 072-05		

Organizational Parts for Pfaff 142-200 (for standard parts please refer to the Pfaff 142-6)

N = Needle Gauge

13-030 104-05 (101 765)	Guide pin for No. 91-010 026-31 (see p. I)	91-010 185-05	Tension release pin for No. 91-000 666-05 and position pin for lower tension
91-000 058-15	Fastening screw for No. 91-008 020-05	91-010 238-91	Thread tension, w/ separate hand release, complete, consisting of Nos. 13-030 104-05; 91-000 239-15; 91-000 666-05; 91-000 667-05; 91-000 742-35; 91-001 522-35; 91-004 005-05; 91-004 006-05; 91-006 505-05; 91-010 107-05; 91-010 115-05; 91-010 116-05; 91-010 180-05; 91-010 181-15; 91-010 183-05; 91-010 185-05; 91-010 239-31; 91-010 240-15; 91-010 241-15; 91-010 242-05; 91-105 447-15
91-000 239-15	Fastening screw for No. 91-010 115-05	91-010 239-31	Tension bracket
91-000 412-35	Fastening screw for No. 91-010 238-91	91-010 240-15	Tension release lever, right
91-000 666-05	Tension stud, upper	91-010 241-15	Tension release lever, left
91-000 667-05	Tension stud, lower	91-010 242-05	Position pin for Nos. 91-010 240-15; 91-010 241-15
91-000 742-35	Hinge screw for Nos. 91-010 240-15; 91-010 241-15	91-040 811-03 x N	Presser foot, hinged
91-001 060-15	Hinge screw for No. 91-710 244-93	91-046 714-04 x N	Feed dog
91-001 522-35	Nut for Nos. 91-000 666-05; 91-000 667-05	91-046 715-04 x N	Needle plate
91-004 005-05	Thread retainer sleeve	91-105 447-15	Washer for No. 91-010 183-05
91-004 006-05	Pressure spring for No. 91-004 005-05	91-701 121-15	Needle set screw
91-006 505-05	Tension disc	91-710 244-93 x N	Needle bar, w/ No. 91-001 060-15 Hinge screw No. 91-701 121-15 Needle set screw
91-008 020-05	Position bracket guide		
91-010 107-05	Position pin for upper tension		
91-010 115-05	Thread retainer stud		
91-010 116-05	Thread retainer stud collar		
91-010 180-05	Tension release pin for No. 91-000 667-05		
91-010 181-15	Tension release washer		
91-010 183-05	Tension spring		


**Complementary Parts
PFAFF 142-131/1**

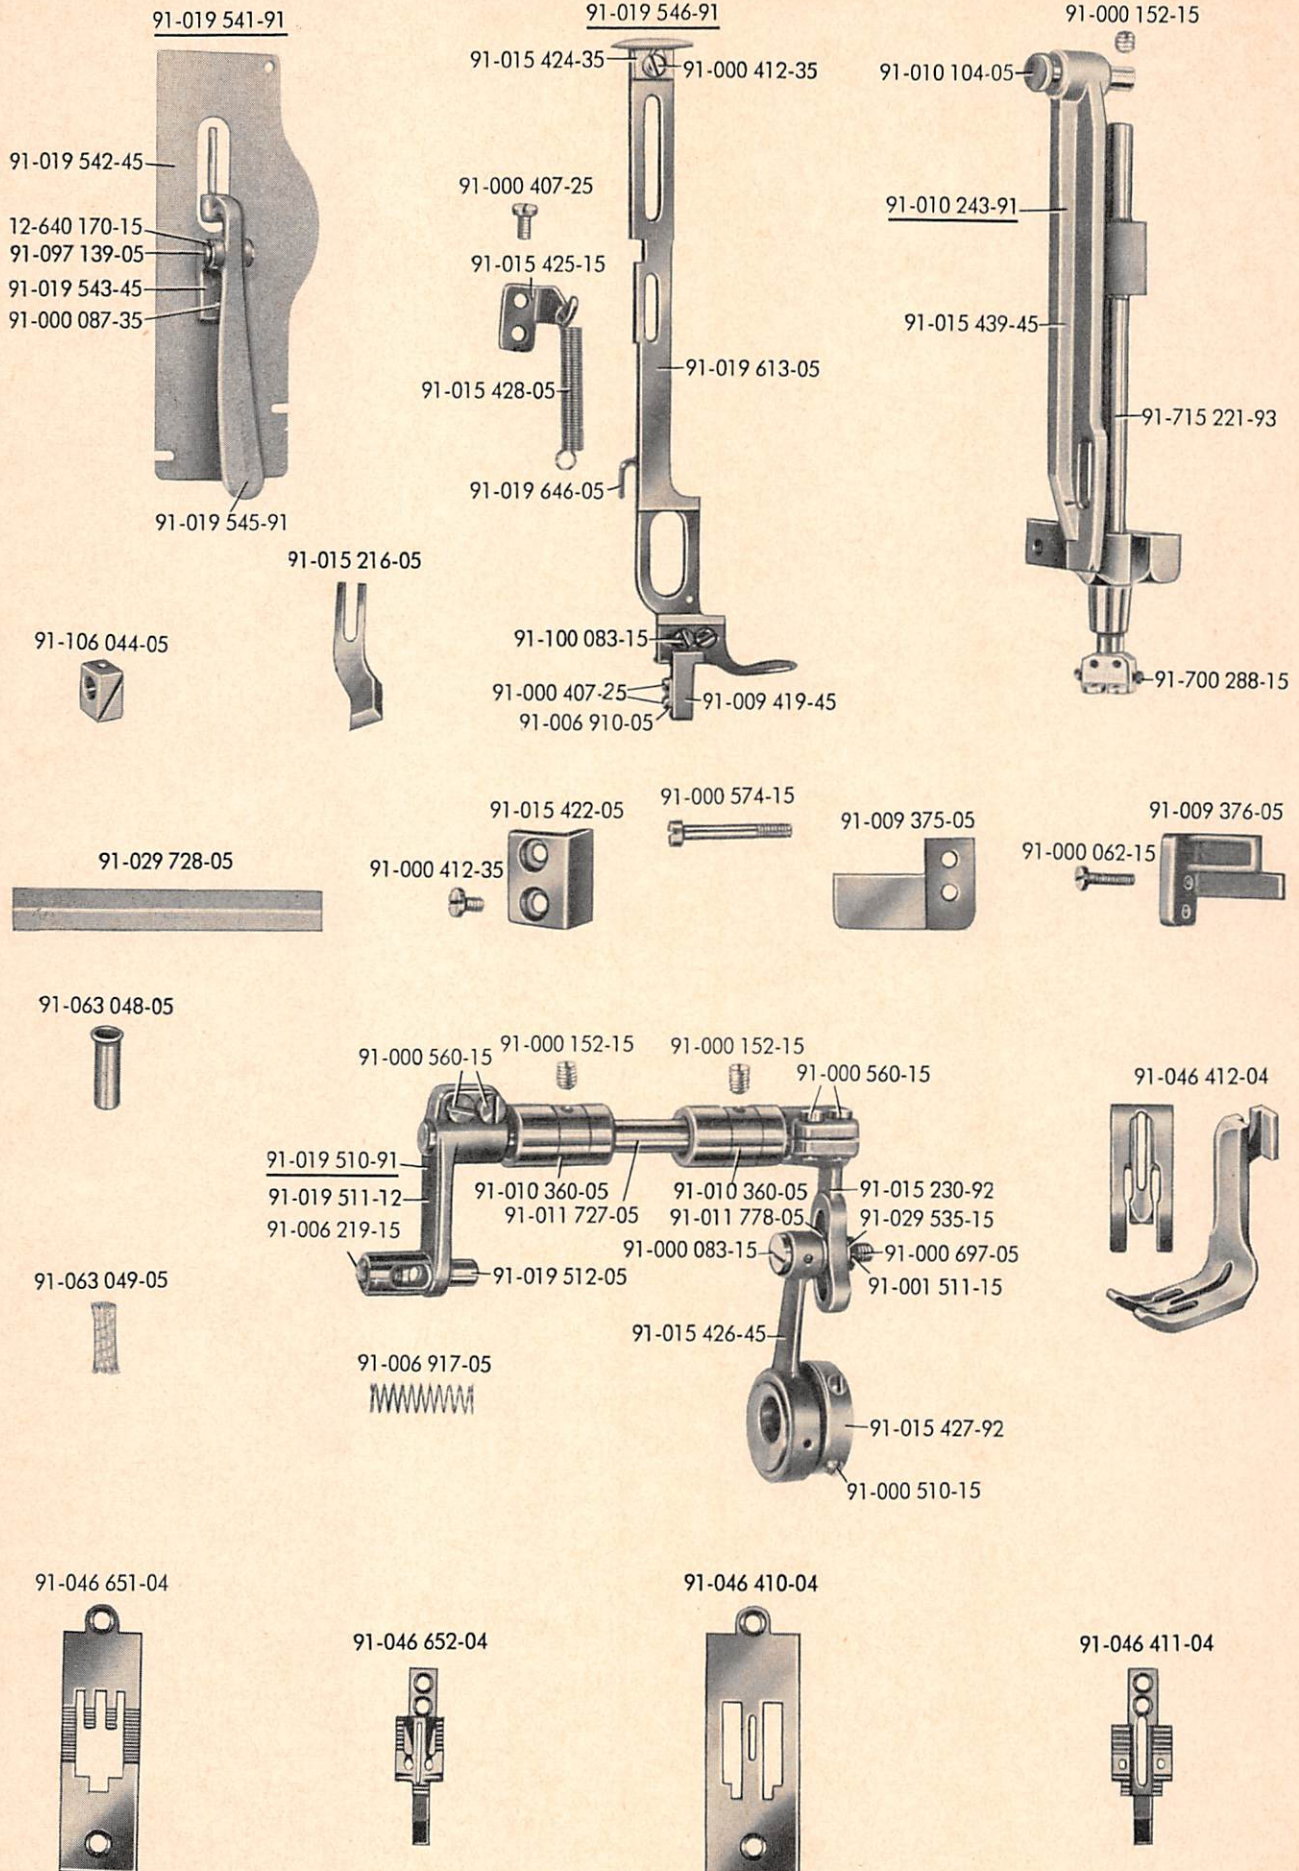

N = Needle Gauge

12-640 170-15 (50 077)	Slip washer for No. 91-097 139-05	91-015 428-05	Tension spring for No. 91-019 613-05
91-000 062-15	Fastening screw for No. 91-009 376-05	91-015 439-45	Needle bar frame
91-000 083-15	End screw for No. 91-000 697-05	91-019 510-91	Knife driving shaft crank, complete, consisting of Nos. 91-006 219-15; 91-006 917-05; 91-019 511-12; 91-019 512-05
91-000 087-35	Fastening screw for No. 91-019 543-45	91-019 511-12	Knife driving shaft crank, w/ set screw No. 91-000 560-15
91-000 152-15	Fastening screw for Nos. 91-010 104-05; 91-010 360-05	91-019 512-05	Drop-in pin for No. 91-019 511-12
91-000 407-25	Fastening screw for Nos. 91-015 216-05; 91-015 425-15	91-019 541-91	Face plate for No. 91-019 510-91, complete, consisting of Nos. 91-000 087-35; 91-019 542-45; 91-019 543-45; 91-097 139-05; 12-640 170-15
91-000 412-35	Fastening screw for Nos. 91-015 422-05; 91-015 424-35	91-019 542-45	Face plate
91-000 510-15	Fastening screw for No. 91-015 427-92	91-019 543-45	Bearing bracket for No. 91-019 541-91
91-000 560-15	Binding screw for Nos. 91-015 230-92; 91-019 511-12	91-019 545-91	Knife disengaging lever, w/ hinge pin No. 91-001 993-05
91-000 574-15	Fastening screw for No. 91-009 375-05	91-019 546-91	Knife bar, complete, consisting of Nos. 91-000 407-25; 91-000 412-35; 91-009 419-45; 91-006 910-05; 91-015 424-35; 91-019 613-05; 91-019 646-05; 91-100 083-15
91-000 697-05	Hinge bolt for No. 91-015 230-92	91-019 613-05	Knife bar
91-001 511-15	Nut for No. 91-000 697-05	91-019 646-05	Suspension hook for No. 91-019 613-05
91-006 219-15	Washer for No. 91-019 512-05	91-029 535-15	Washer for No. 91-000 697-05
91-006 910-05	Spacer for No. 91-009 419-45	91-029 728-05	Knife grinder, triangular
91-006 917-05	Pressure spring for No. 91-019 512-05	91-046 410-04 x N	Needle plate (for needle gauges exceeding 8 mm)
91-009 375-05	Position bracket for No. 91-019 613-05	91-046 411-04 x N	Feed dog (for needle gauges exceeding 8 mm)
91-009 376-05	Position bracket for No. 91-015 439-45	91-046 412-04 x N	Presser foot
91-009 419-45	Knife holder for No. 91-019 613-05	91-046 651-04 x N	Needle plate (for needle gauges from 5.6–7.6 mm)
91-010 104-05	Hinge stud for No. 91-015 439-45	91-046 652-04 x N	Feed dog (for needle gauges from 5.6–7.6 mm)
91-010 243-91	Needle bar frame, complete, consisting of Nos. 91-010 104-05; 91-015 439-45	91-063 048-05	Oil tube for No. 91-015 427-92
91-010 360-05	Bearing bushing for No. 91-011 727-05	91-063 049-05	Oil wick for No. 91-063 048-05
91-011 727-05	Knife driving shaft	91-097 139-05	Fulcrum stud for Nos. 91-019 543-45; 91-019 545-91
91-011 778-05	Washer for No. 91-000 697-05	91-100 083-15	Fastening screw for No. 91-009 419-45
91-015 216-05	Knife	91-106 044-05	Slide block for No. 91-009 645-05 (see p. II)
91-015 230-92	Knife driving shaft crank, adjustable, w/ set screw No. 91-000 560-15	91-700 288-15	Needle set screw
91-015 422-05	Position bracket for No. 91-019 613-05	91-715 221-93	Needle bar (for needle gauges from 4.4–26 mm)
91-015 424-35	Knife bar engaging plate for No. 91-019 613-05	91-015 430-45	Arm (not ill.)
91-015 425-15	Suspension hook for No. 91-015 428-05		
91-015 426-45	Knife driving eccentric connection for No. 91-015 427-92		
91-015 427-92	Knife driving eccentric, w/ set screw No. 91-000 510-15		

**Complementary Parts
PFAFF 142-131/8-263/2**

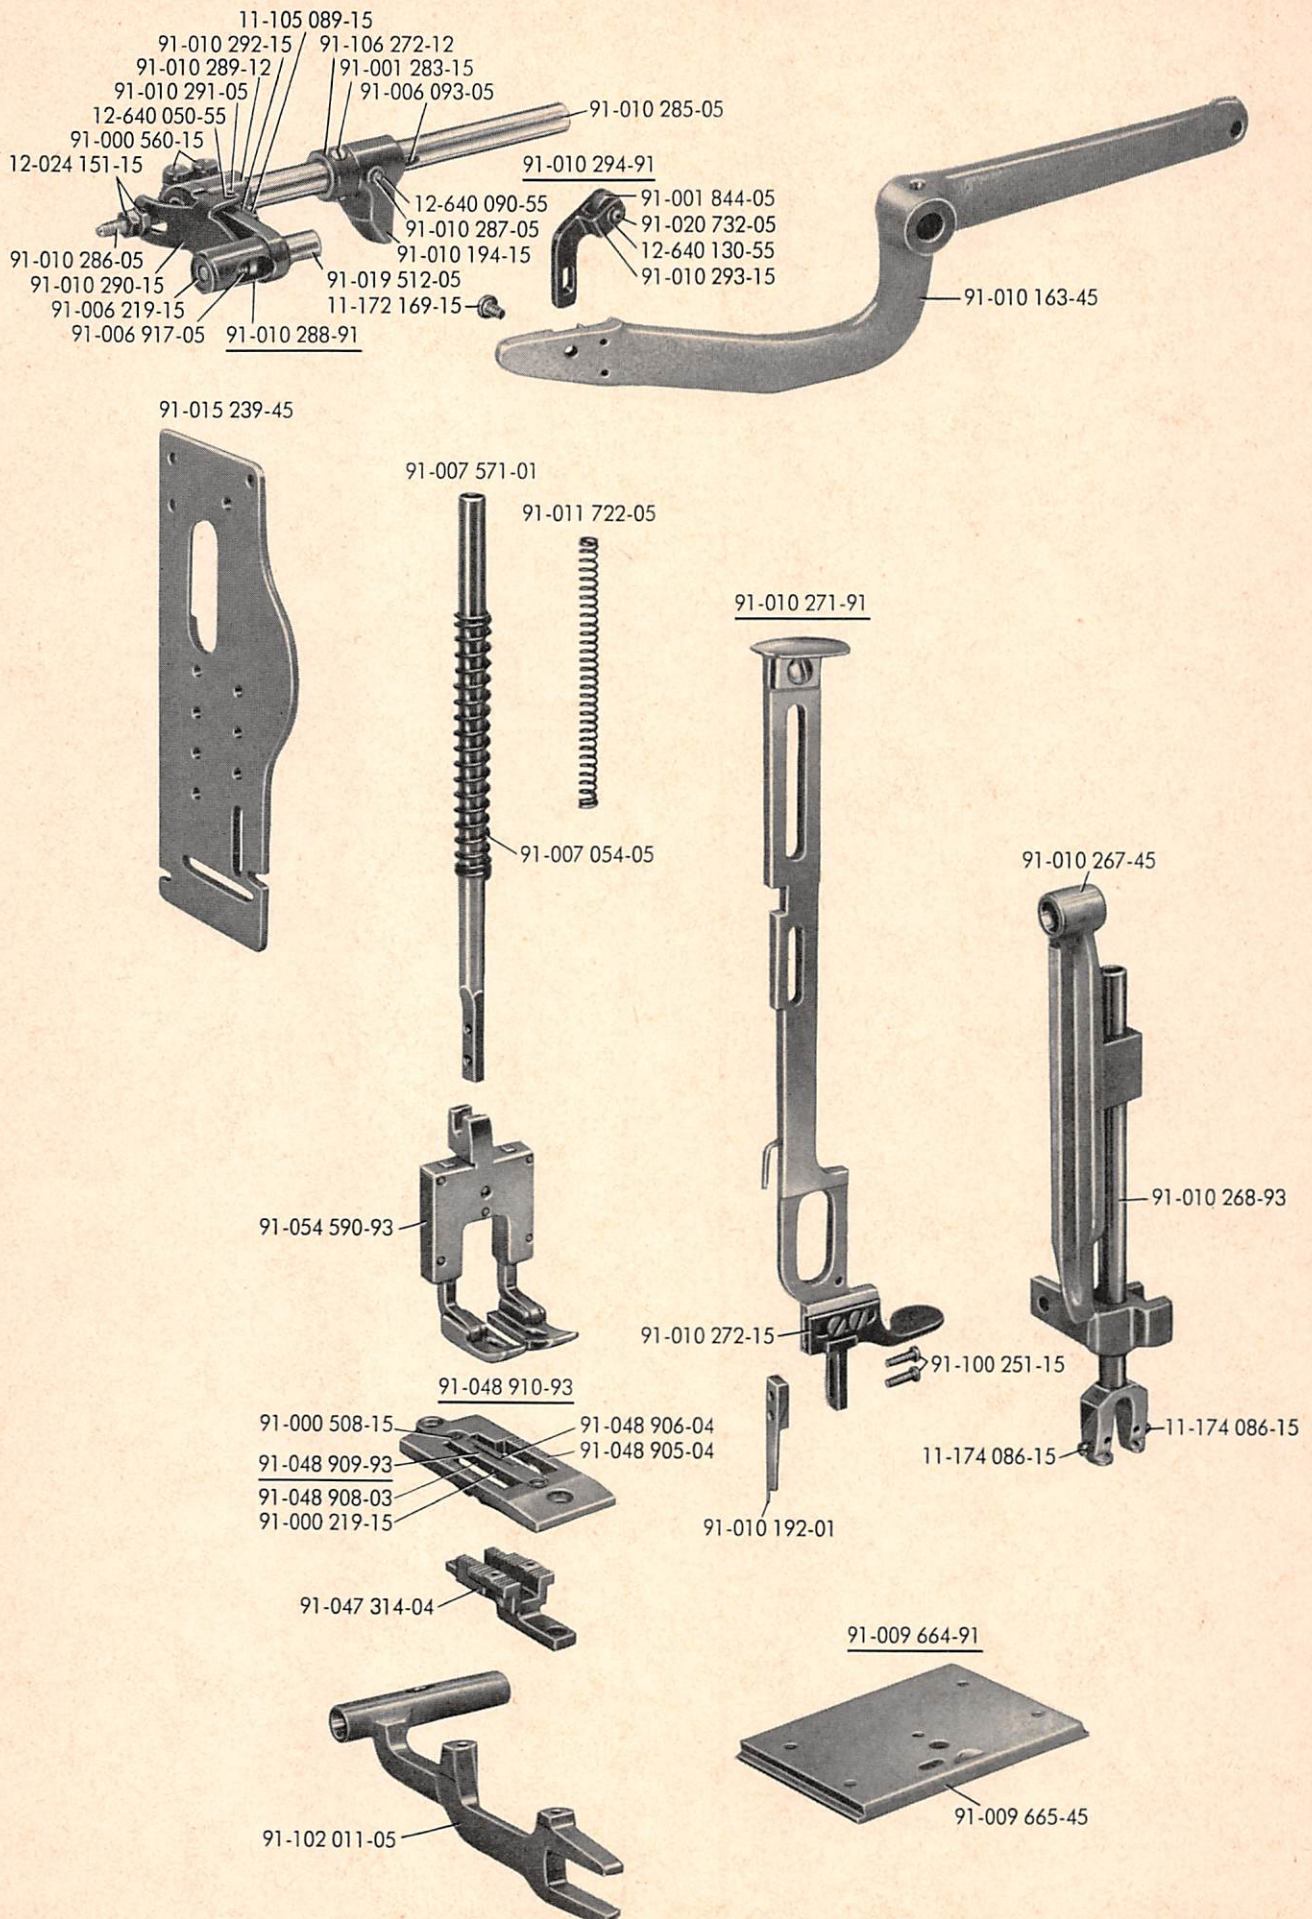





N = Needle Gauge

11-105 089-15 (701 256)	Fastening screw for No. 91-010 292-15	91-010 272-15	Knife holder bracket for No. 91-010 271-91
11-172 169-15 (700 681)	Fastening screw for No. 91-010 294-91	91-010 285-05	Knife driving shaft
11-174 086-15	Needle set screw	91-010 286-05	Knife disengaging rod
12-024 151-15 (701 643)	Nut for No. 91-010 286-05	91-010 287-05	Guide pin for No. 91-010 194-15
12-640 050-55 (006 795)	Slip washer for No. 91-010 291-05	91-010 288-91	Knife driving shaft crank, complete, consisting of Nos. 11-105 089-15; 12-640 050-55; 91-006 219-15; 91-006 917-05; 91-010 289-12; 91-010 290-15; 91-010 291-05; 91-010 292-15; 91-019 512-05
12-640 090-55 (053 155)	Slip washer for No. 91-010 287-05	91-010 289-12	Knife driving shaft crank, w/ binding screws No. 91-000 560-15
12-640 130-55 (023 033)	Slip washer for No. 91-020 732-05	91-010 290-15	Drop-in pin release lever for No. 91-010 288-91
91-000 219-15	Fastening screw for No. 91-048 909-93	91-010 291-05	Hinge pin for No. 91-010 290-15
91-000 508-15	Fastening screw for No. 91-048 908-03	91-010 292-15	Bracket for No. 91-010 291-05
91-000 560-15	Binding screw for No. 91-010 289-12	91-010 293-15	Roller fork
91-001 283-15	Fastening screw for No. 91-106 272-12	91-010 294-91	Roller fork, complete, consisting of Nos. 12-640 130-55; 91-001 844-05; 91-010 293-15; 91-020 732-05
91-001 844-05	Roller for No. 91-020 732-05	91-011 722-05	Presser bar spring, inner
91-006 093-05	Pressure spring for No. 91-010 286-05	91-015 239-45	Face plate
91-006 219-15	Washer for No. 91-010 289-12	91-019 512-05	Drop-in pin for No. 91-010 288-91
91-006 917-05	Pressure spring for No. 91-019 512-05	91-020 732-05	Fulcrum stud for No. 91-010 293-15
91-007 054-05	Presser bar spring, outer (Models A & B) No. 91-010 633-05 Presser bar spring, outer (not ill.) (Model C)	91-047 314-04 x N	Feed dog
91-007 571-01	Presser bar	91-048 905-04 x N	Needle plate
91-009 664-91	Bed slide, center, complete, Same components as No. 91-010 065-91 (see section III), but incorporating bed slide No. 91-009 665-45	91-048 906-04 x N	Knife follower spring block for No. 91-048 908-03
91-009 665-45	Bed slide, center	91-048 908-03 x N	Needle plate insert for No. 91-048 909-93
91-010 163-45	Lifting lever	91-048 909-93 x N	Needle plate insert, complete, consisting of Nos. 91-000 219-15; 91-048 906-04; 91-048 908-03
91-010 192-01	Knife	91-048 910-93 x N	Needle plate, complete, consisting of Nos. 91-000 508-15; 91-048 905-04; 91-048 909-93
91-010 194-15	Knife disengaging cam	91-054 590-93 x N	Compensating presser foot, hinged
91-010 267-45	Needle bar frame	91-100 251-15	Fastening screw for No. 91-010 192-01
91-010 268-93 x N	Needle bar, w/ needle set screws No. 11-174 086-15	91-102 011-05	Feed bar
91-010 271-91	Knife bar, complete Same components as No. 91-019 546-91 (see section VII) but incorporating No. 91-010 272-15 Knife holder yet without No. 91-000 407-25 Fastening screw for No. 91-006 910-05 Washer No. 91-006 910-05 Washer (in lieu of No. 91-009 419-45)	91-106 272-12	Set collar, w/ set screws No. 91-001 283-15
		91-000 521-25	Fastening screw for No. 91-053 732-93 (not ill.)
		91-053 732-93 x N	Piping attachment (not ill.)

**Foot-Operated Reverse-
Feed Mechanism**

Special Parts

Obsolete Parts

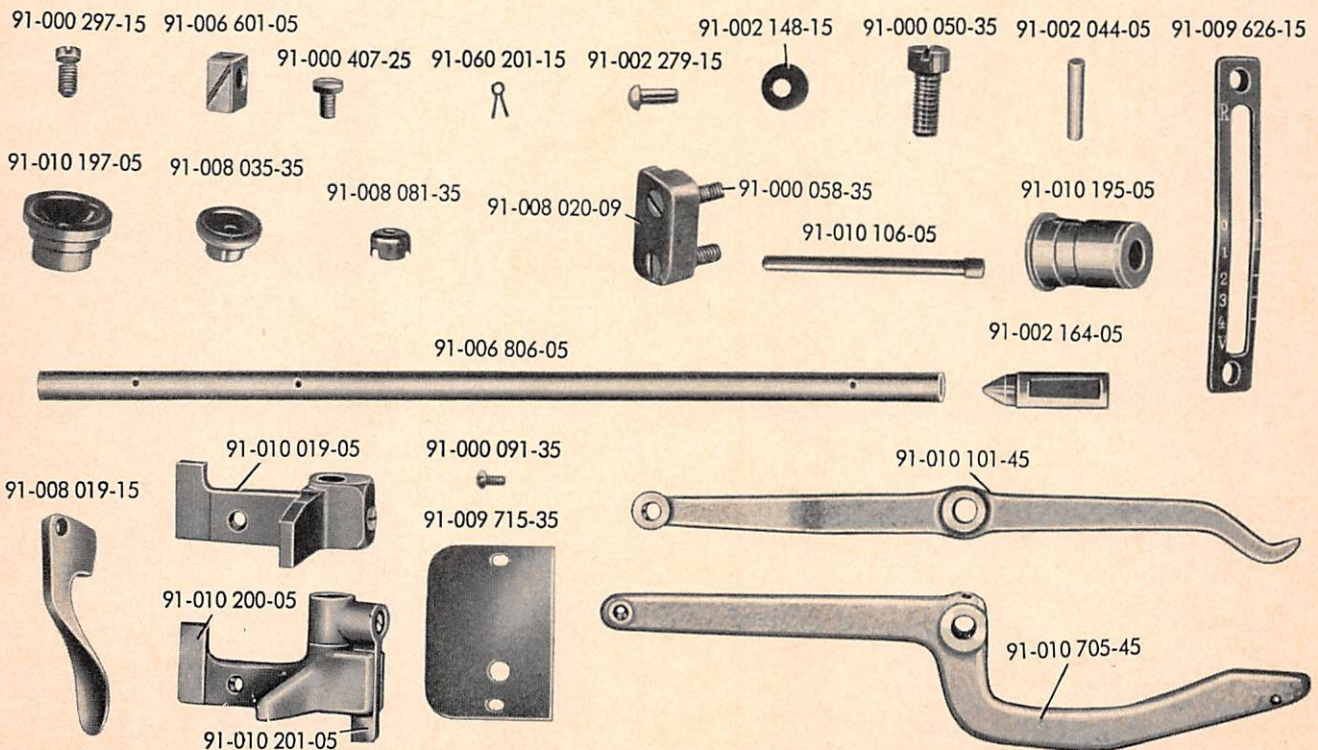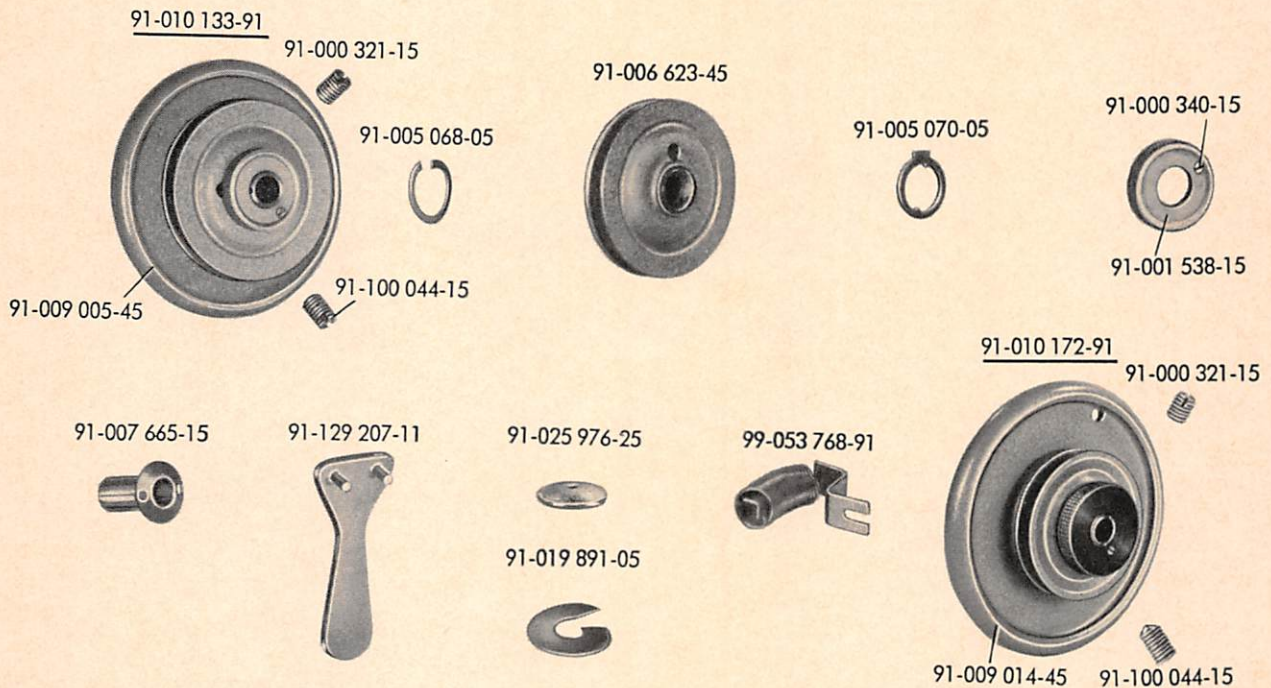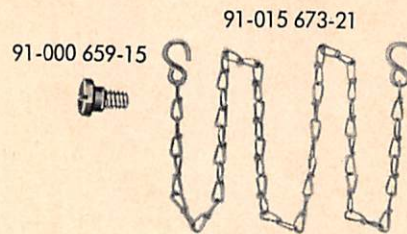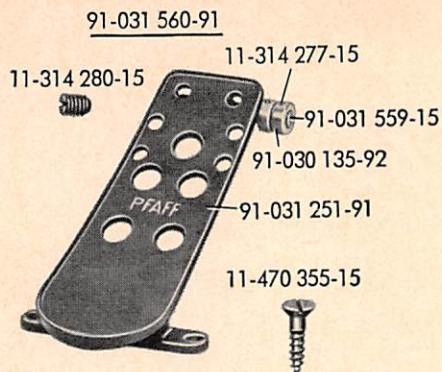

Organizational Parts for Foot-Operated Reverse-Feed Control (treadle on right)

11-314 277-15 (700 152)	Fastening screw for No. 91-030 135-92	91-030 135-92	Set collar, w/ set screw No. 11-314 277-15
11-314 280-15 (700 150)	Fastening screw for No. 91-031 559-15	91-031 251-91	Treadle
11-470 355-15 (1 417)	Wood screw for No. 91-031 560-91	91-031 559-15	Chain suspension stud
91-000 659-15	Fastening screw for No. 91-015 673-21 (on side of feed regulator)	91-031 560-91	Treadle, complete, consisting of Nos. 11-314 280-15; 91-030 135-92; 91-031 251-91; 91-031 559-15
91-015 673-21	Chain		

Special Parts

91-000 321-15	Fastening screw for Nos. 91-009 005-45; 91-009 014-45	91-010 133-91	Balance wheel (Models A & B), complete, consisting of Nos. 91-000 340-15; 91-001 538-15; 91-005 068-05; 91-005 070-05; 91-006 623-45; 91-009 005-45
91-000 340-15	Stop screw for No. 91-001 538-15		
91-001 538-15	Stop motion nut for No. 91-006 623-45		
91-005 068-05	Spring washer for Nos. 91-009 005-45; 91-009 014-45	91-010 172-91	Balance wheel (Model C), complete, consisting of Nos. 91-000 340-15; 91-001 538-15; 91-005 068-05; 91-005 070-05; 91-006 623-45; 91-009 014-45
91-005 070-05	Balance wheel friction washer for No. 91-006 623-45		
91-006 623-45	Pulley for Nos. 91-009 005-45; 91-009 014-45	91-019 891-05	Bobbin friction washer
91-007 665-15	Lock nut for Nos. 91-009 606-05; 91-009 610-35 (see p. II) in place of Nos. 91-000 672-15; 91-001 593-35; 91-006 759-05; 91-009 609-05)	91-025 976-25	Spool cap for No. 91-026 179-45 (see p. IV)
91-009 005-45	Balance wheel for No. 91-010 133-91	91-100 044-15	Fastening screw for Nos. 91-009 005-45; 91-009 014-45
91-009 014-45	Balance wheel for No. 91-010 172-91	91-129 207-11	Pin spanner for No. 91-007 665-15
		99-053 768-91	Thread cutter

Obsolete Parts

The number in parenthesis marked with an asterisk is no additional order number, but is merely indicated in order to facilitate looking up the obsolete part. Orders for these parts should specify the bold-faced part number.

(★ 91-000 059-35)	91-000 050-35	Fastening screw for No. 91-009 603-45 (6.74 mm O.D.) (see p. II)
(★ 91-000 568-15)	91-000 058-35	Fastening screw for No. 91-008 020-09
(★ 91-000 739-35)	91-000 091-35	Fastening screw for No. 91-009 715-35 (2.6 mm O.D.)
(★ 91-000 273-15)	91-000 297-15	Fastening screw for No. 91-046 574-92 (5.95 mm O.D.)
(★ 91-000 153-15)	91-000 407-25	Fastening screw (fillister head screw) for No. 91-046 571-25 (see p. IV)
(★ 13-065 199-15)	91-002 044-05	Positioning pin (taper pin) for No. 91-009 645-05 (see p. II)
(★ 91-006 155-15)	91-002 148-15	Spring washer for No. 91-002 279-15
(★ 91-015 664-45)	91-002 164-05	Center stud (60° point angle) for No. 91-006 806-05
(★ 91-000 406-15)	91-002 279-15	Positioning pin for No. 91-002 504-45 (see p. II)
(★ 91-014 709-05)	91-006 601-05	Slide block (Width = 9.84 mm) for No. 91-009 645-05 (see p. II)

(★ 91-004 186-45)	91-006 806-05	Feed lifting shaft for No. 91-002 164-05 (can be replaced by No. 91-004 186-45) (see p. III) in conjunction with No. 91-015 664-45
(★ 91-010 734-15)	91-008 019-15	Presser bar lifter
(★ 91-010 731-15)	91-008 020-09	Lifting bracket guide
(★ 91-018 359-45)	91-008 035-35	Oil cup for No. 91-008 004-05 (see p. II)
(★ 91-018 357-45)	91-008 081-35	Oil cup for No. 91-010 042-05; 91-010 043-05 (see p. III)
(★ 91-009 648-35)	91-009 626-15	Feed regulator index plate
(★ 91-010 755-35)	91-009 715-35	Armcover, front
(★ 91-019 846-92)	91-010 019-05	Presser bar lifting bracket (replaced by Nos. 91-010 200-05; 91-010 201-05)
(★ 91-010 737-45)	91-010 101-45	Lifting lever for Pfaff machines 142-6 and 142-200
(★ 91-008 711-05)	91-010 106-05	Tension release plunger (55 mm long)
(★ 91-008 003-05)	91-010 195-05	Arm shaft bushing (29 mm O.D.)
(★ 91-018 358-45)	91-010 197-05	Oil cup for arm shaft front bushing
(★ 91-019 846-92)	91-010 200-05	Presser bar lifting bracket
(★ 91-019 846-92)	91-010 201-05	Presser bar guide collar for No. 91-010 200-05
(★ 91-010 737-45)	91-010 705-45	Lifting lever for Pfaff 142-131
(★ 91-028 599-45)	91-060 201-15	Cotter pin for lifting lever connection

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números

Nr./no./No.	Fig.	Nr./no./No.	Fig.	Nr./no./No.	Fig.	Nr./no./No.	Fig.	Nr./no./No.	Fig.
11-105 089-15 (701 256)	VIII	+ 91-000 050-35	IX	91-000 278-15	V	91-000 529-15	V	91-001 538-15	IX
11-172 169-15 (700 681)	VIII	91-000 058-15	III	91-000 290-15	III	91-000 560-15	III	91-001 593-35	II
11-174 086-15	VIII	91-000 058-15	V	+ 91-000 297-15	IX	91-000 560-15	VII	91-001 809-05	II
11-314 277-15 (700 152)	IX	91-000 058-15	VI	91-000 321-15	II	91-000 560-15	VIII	91-001 844-05	VIII
11-314 280-15 (700 150)	IX	+ 91-000 058-35	IX	91-000 321-15	V	91-000 565-15	II	+ 91-002 044-05	IX
11-460 109-15 (1 435)	IV	91-000 059-35	II	91-000 321-15	IX	91-000 568-15	I	+ 91-002 148-15	IX
11-460 247-25 (1 416)	IV	91-000 062-15	I	91-000 323-15	II	91-000 574-15	VII	+ 91-002 164-05	IX
11-460 250-25 (1 459)	IV	91-000 062-15	III	91-000 340-15	IX	91-000 624-15	III	+ 91-002 279-15	IX
11-460 355-15 (1 473)	IV	91-000 062-15	IV	91-000 359-25	IV	91-000 641-15	I	91-002 504-45	II
11-470 355-15 (1 417)	IX	91-000 062-15	VII	91-000 363-25	IV	91-000 659-15	IX	91-002 536-25	IV
11-470 355-25 (1 417)	IV	91-000 064-15	II	91-000 364-25	IV	91-000 660-15	II	91-003 100-05	I
11-470 364-25 (1 426)	IV	91-000 064-15	V	91-000 366-25	IV	91-000 666-05	I	91-004 005-05	I
12-024 151-15 (701 643)	VIII	91-000 068-15	III	91-000 366-35	I	91-000 666-05	VI	91-004 005-05	VI
12-110 211-15 (701 701)	V	91-000 070-15	II	91-000 367-15	IV	91-000 667-05	I	91-004 006-05	I
12-515 250-05 (19 659)	V	91-000 070-15	III	91-000 367-15	V	91-000 667-05	VI	91-004 006-05	VI
12-640 050-55 (6 795)	VIII	91-000 073-15	III	91-000 382-15	V	91-000 668-15	V	91-004 170-45	IV
12-640 090-55 (53 155)	VIII	91-000 073-35	I	91-000 386-15	IV	91-000 672-15	II	91-004 171-15	IV
12-640 130-55 (23 033)	VI	91-000 078-15	IV	91-000 386-15	V	91-000 680-15	II	91-004 171-15	V
12-640 130-55 (23 033)	VIII	91-000 082-25	III	91-000 390-15	III	91-000 680-15	III	91-004 172-05	IV
12-640 150-55 (20 565)	VI	91-000 082-25	IV	91-000 390-15	V	91-000 680-15	VI	91-004 172-05	V
12-640 170-15 (50 077)	VII	91-000 082-35	I	91-000 405-15	II	91-000 687-15	II	91-004 173-15	IV
12-640 170-55 (50 077)	IV	91-000 083-15	VII	91-000 406-15	II	91-000 689-15	II	91-004 173-15	V
12-640 170-55 (50 077)	V	91-000 087-35	VII	91-000 407-15	III	91-000 689-15	III	91-004 184-45	V
12-642 170-45 (28 599)	IV	91-000 089-15	I	91-000 407-25	VII	91-000 689-15	VI	91-004 186-45	III
13-030 104-05 (101 765)	I	+ 91-000 091-35	IX	+ 91-000 407-25	IX	91-000 697-05	VII	91-005 005-05	IV
13-030 104-05 (101 765)	VI	91-000 150-15	I	91-000 412-35	I	91-000 715-35	II	91-005 068-05	IX
13-065 199-15 (1 974)	II	91-000 150-15	II	91-000 412-35	VI	91-000 737-05	IV	91-005 070-05	IX
14-650 104-05 (19 658)	V	91-000 150-15	III	91-000 412-35	VII	91-000 739-35	II	91-005 125-05	IV
91-000 011-15	II	91-000 152-15	I	91-000 422-35	III	91-000 741-15	II	91-005 564-25	IV
91-000 019-15	I	91-000 152-15	II	91-000 456-15	II	91-000 742-35	VI	91-005 565-25	IV
91-000 029-15	IV	91-000 152-15	VII	91-000 469-15	I	91-000 783-15	III	91-005 567-25	IV
91-000 050-15	II	91-000 153-15	IV	91-000 503-15	III	91-000 785-15	III	91-005 568-25	IV
		91-000 172-35	I	91-000 505-15	III	91-000 785-15	VI	91-005 569-25	IV
		91-000 186-15	IV	91-000 507-15	I	91-000 885-15	II	91-005 604-05	II
		91-000 219-15	VIII	91-000 508-15	VIII	91-000 928-15	III	91-005 673-05	III
		91-000 225-15	VI	91-000 509-15	III	91-000 928-15	V	91-006 093-05	VIII
		91-000 237-15	I	91-000 510-15	I	91-001 060-15	VI	91-006 155-15	II
		91-000 237-15	IV	91-000 510-15	II	91-001 283-15	VIII	91-006 219-15	VII
		91-000 239-15	I	91-000 510-15	V	91-001 511-15	VII	91-006 219-15	VIII
		91-000 239-15	VI	91-000 511-15	VII	91-001 512-15	II	91-006 505-05	I
		91-000 243-15	I	91-000 511-15	II	91-001 513-15	IV	91-006 505-05	VI
		91-000 256-15	I	91-000 521-25	VIII	91-001 522-35	I	91-006 523-05	V
		91-000 263-15	V	91-000 522-05	II	91-001 522-35	VI	91-006 525-05	I
		91-000 273-15	IV	91-000 525-15	III	91-001 533-25	IV	91-006 526-05	I
				91-000 529-15	III	91-001 536-15	III	+ 91-006 601-05	IX

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números

Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.
91-006 623-45	IX	91-009 342-05	VI	91-010 002-05	II	91-010 115-05	I	+91-010 200-05	IX
91-006 759-05	II	91-009 343-05	VI	91-010 006-92	I	91-010 115-05	VI	+91-010 201-05	IX
91-006 783-05	I	91-009 344-05	VI	91-010 007-05	I	91-010 116-05	I	91-010 204-15	IV
91-006 783-05	II	91-009 351-91	VI	91-010 008-45	I	91-010 116-05	VI	91-010 211-05	III
+91-006 806-05	IX	91-009 359-91	III	91-010 009-05	I	91-010 121-91	III	91-010 212-45	III
91-006 910-05	VII	91-009 361-91	V	91-010 013-05	II	91-010 126-45	III	91-010 221-05	III
91-006 917-05	VII	91-009 375-05	VII	91-010 016-05	II	91-010 127-91	II	91-010 223-92	III
91-006 917-05	VIII	91-009 376-05	VII	91-010 017-05	II	91-010 133-91	IX	91-010 230-91	III
91-007 054-05	VIII	91-009 388-92	II	91-010 018-05	II	91-010 137-35	I	91-010 231-91	III
91-007 571-01	VIII	91-009 389-92	V	+91-010 019-05	IX	91-010 146-05	III	91-010 235-91	I
91-007 665-15	IX	91-009 408-05	VI	91-010 022-05	II	91-010 157-01	III	91-010 236-91	VI
91-008 003-05	II	91-009 419-45	VII	91-010 026-31	I	91-010 157-01	V	91-010 237-91	I
91-008 004-05	II	91-009 424-91	V	91-010 027-35	I	91-010 158-05	III	91-010 238-91	VI
91-008 005-05	II	91-009 425-45	V	91-010 028-35	I	91-010 158-05	V	91-010 239-31	VI
91-008 008-05	I	91-009 432-90	III	91-010 031-92	II	91-010 159-91	III	91-010 240-15	VI
91-008 009-05	I	91-009 602-05	II	91-010 040-45	III	91-010 161-05	III	91-010 241-15	VI
91-008 011-05	I	91-009 603-45	II	91-010 041-05	III	91-010 163-45	VIII	91-010 242-05	VI
+91-008 019-15	IX	91-009 604-05	II	91-010 042-05	III	91-010 164-91	III	91-010 243-91	VII
91-008 020-05	VI	91-009 605-05	II	91-010 043-05	III	91-010 165-91	III	91-010 265-31	I
+91-008 020-09	IX	91-009 606-05	II	91-010 044-05	III	91-010 166-05	III	91-010 267-45	VIII
91-008 021-11	I	91-009 609-05	II	91-010 054-91	III	91-010 167-05	III	91-010 268-93	VIII
+91-008 035-35	IX	91-009 610-35	II	91-010 056-05	III	91-010 172-91	IX	91-010 271-91	VIII
91-008 040-91	II	91-009 612-15	II	91-010 057-01	III	91-010 173-05	I	91-010 272-15	VIII
91-008 064-05	I	91-009 616-05	II	91-010 058-45	III	91-010 174-05	VI	91-010 285-05	VIII
+91-008 081-35	IX	91-009 617-05	II	91-010 059-45	III	91-010 175-35	I	91-010 286-05	VIII
91-008 244-91	IV	91-009 618-05	II	91-010 060-34	III	91-010 177-35	IV	91-010 287-05	VIII
91-008 245-45	IV	91-009 621-92	II	91-010 061-34	III	91-010 178-05	III	91-010 288-91	VIII
91-008 280-91	V	91-009 622-92	II	91-010 062-45	III	91-010 179-05	I	91-010 289-12	VIII
91-008 281-91	II	91-009 624-05	II	91-010 063-05	III	91-010 180-05	I	91-010 290-15	VIII
91-008 440-91	II	+91-009 626-15	IX	91-010 064-15	III	91-010 180-05	VI	91-010 291-05	VIII
91-008 711-05	I	91-009 633-92	V	91-010 065-91	III	91-010 181-15	I	91-010 292-15	VIII
91-009 005-45	IX	91-009 636-91	II	91-010 066-05	III	91-010 181-15	VI	91-010 293-15	VIII
91-009 014-45	IX	91-009 636-91	V	91-010 067-05	II	91-010 183-05	I	91-010 294-91	VIII
91-009 118-01	I	91-009 644-05	II	91-010 079-05	III	91-010 183-05	VI	91-010 320-91	VII
91-009 119-05	I	91-009 645-05	II	91-010 089-01	III	91-010 184-05	VI	91-010 360-05	VII
91-009 148-05	I	91-009 646-92	II	91-010 099-05	III	91-010 185-05	I	91-010 606-45	V
91-009 148-05	II	91-009 648-35	II	91-010 100-05	III	91-010 185-05	VI	91-010 617-45	V
91-009 149-05	III	91-009 651-91	VI	+91-010 101-45	IX	91-010 186-35	I	91-010 633-05	VI
91-009 302-45	II	91-009 664-91	VIII	91-010 104-05	I	91-010 188-91	I	+91-010 705-45	IX
91-009 333-15	II	91-009 665-45	VIII	91-010 104-05	VII	91-010 192-01	VIII	91-010 728-15	I
91-009 337-05	VI	+91-009 715-35	IX	+91-010 106-05	IX	91-010 194-15	VIII	91-010 729-05	I
91-009 338-92	VI	91-009 810-91	II	91-010 107-05	I	+91-010 195-05	IX	91-010 730-15	I
91-009 339-15	VI	91-009 938-15	V	91-010 107-05	IV	91-010 196-05	II	91-010 731-15	I
91-009 341-05	VI	91-010 001-45	II	91-010 107-05	VI	+91-010 197-05	IX	91-010 732-05	I

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números

Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.
91-010 734-15	I	91-015 430-45	VII	91-025 056-92	IV	91-046 097-25	IV	91-710 244-93	VI
91-010 737-45	IV	91-015 439-45	VII	91-025 060-92	IV	91-046 410-04	VII	91-715 221-93	VII
91-010 738-45	IV	91-015 487-90	III	91-025 075-45	IV	91-046 411-04	VII	91-715 536-04	I
91-010 738-45	V	91-015 519-05	VI	91-025 076-15	IV	91-046 412-04	VII	91-715 538-93	I
91-010 752-15	I	91-015 526-05	VI	91-025 077-15	IV	91-046 571-25	IV	93-513 120-00	IV
91-010 755-35	II	91-015 527-05	VI	91-025 164-05	IV	91-046 573-21	IV	93-513 121-00	IV
91-010 780-05	V	91-015 537-05	I	91-025 165-45	IV	91-046 574-92	IV	93-513 124-10	IV
91-010 817-91	I	91-015 652-92	V	91-025 169-92	IV	91-046 651-04	VII	93-513 125-05	IV
91-010 819-35	I	91-015 659-92	II	91-025 170-15	IV	91-046 652-04	VII	97-321 83-995	IV
91-010 820-45	I	91-015 664-45	III	91-025 194-91	IV	91-046 694-05	IV	99-053 768-91	IX
91-010 821-35	I	91-015 673-21	IX	91-025 637-15	I	91-046 714-04	VI		
91-010 822-05	I	91-017 530-91	V	91-025 976-25	IX	91-046 715-04	VI		
91-010 823-45	I	91-018 357-45	III	91-026 110-35	IV	91-046 864-25	I		
91-010 837-05	I	91-018 358-45	II	91-026 179-45	IV	91-047 314-04	VIII		
91-010 847-05	V	91-018 359-45	II	91-026 830-15	III	91-048 905-04	VIII		
91-010 848-05	V	91-018 460-90	II	91-027 271-92	IV	91-048 906-04	VIII		
91-010 849-91	V	91-019 510-91	VII	91-028 599-45	IV	91-048 908-03	VIII		
91-010 850-91	V	91-019 511-12	VII	91-029 535-15	VII	91-048 909-93	VIII		
91-010 853-05	V	91-019 512-05	VII	91-029 571-25	IV	91-048 910-93	VIII		
91-010 867-91	III	91-019 512-05	VIII	91-029 587-45	IV	91-050 190-91	IV		
91-010 888-15	V	91-019 541-91	VII	91-029 601-25	IV	91-051 642-03	I		
91-010 895-91	III	91-019 542-45	VII	91-029 692-45	IV	91-053 347-21	IV		
91-010 896-91	III	91-019 543-45	VII	91-029 728-05	VII	91-053 732-93	VIII		
91-010 940-15	III	91-019 545-91	VII	91-029 840-91	IV	91-054 590-93	VIII		
91-011 264-05	III	91-019 546-91	VII	91-029 841-05	IV	+ 91-060 201-15	IX		
91-011 498-91	V	91-019 613-05	VII	91-029 960-92	IV	91-061 005-05	I		
91-011 722-05	VIII	91-019 646-05	VII	91-030 135-92	IX	91-063 048-05	VII		
91-011 727-05	VII	91-019 656-05	V	91-030 246-15	IV	91-063 049-05	VII		
91-011 778-05	VII	91-019 657-05	V	91-030 246-15	V	91-097 139-05	VII		
91-012 072-05	VI	91-019 660-15	V	91-031 251-91	IX	91-100 044-15	II		
91-012 199-05	II	91-019 661-15	V	91-031 559-15	IX	91-100 044-15	V		
91-012 407-15	V	91-019 662-15	V	91-031 560-91	IX	91-100 044-15	IX		
91-014 675-45	V	91-019 663-45	V	91-031 568-91	IV	91-100 083-15	VII		
91-014 709-05	II	91-019 664-15	V	91-035 461-92	IV	91-100 251-15	VIII		
91-014 786-15	V	91-019 665-15	V	91-040 340-04	III	91-102 011-05	VIII		
91-015 216-05	VII	91-019 676-05	I	91-040 341-04	III	91-105 447-15	I		
91-015 230-92	VII	91-019 676-05	II	91-040 618-25	IV	91-105 447-15	VI		
91-015 239-45	VIII	91-019 677-91	V	91-040 621-91	IV	91-106 044-05	VII		
91-015 422-05	VII	91-019 846-92	I	91-040 623-25	IV	91-106 272-12	VIII		
91-015 424-35	VII	91-019 853-12	III	91-040 811-03	VI	91-129 207-11	IX		
91-015 425-15	VII	91-019 862-01	III	91-041 063-05	IV	91-700 288-15	VII		
91-015 426-45	VII	91-019 891-05	IX	91-041 065-45	IV	91-700 868-15	I		
91-015 427-92	VII	91-020 732-05	VIII	91-041 076-91	IV	91-701 121-15	VI		
91-015 428-05	VII	91-025 054-45	IV	91-041 085-91	IV	91-701 378-15	IV		







Part Number Change

Section VII/1
142

To be filed with page: 35

Change No.:

Date: Jan. 20, 67

Old Parts

New Parts

91-010 719-91 Take-up lever, complete (Models A;B)
Same components as No.91-010 235-91
(see page I), but incorporating
No.91-010 703-92 Needle bar
connecting stud

91-010 720-91 Take-up lever, complete (Model C)
Same components as No.91-010 719-91,
but incorporating
No.91-010 174-05 Take-up lever
No.91-015 527-05 Driving stud

Remarks:

From the library of: Superior Sewing Machine & Supply LLC