

TABLE OF CONTENTS

THREAD TENSION	3-2
TRIMMING	3-4
UPPER THREAD TAKE UP	3-6
WRAPPING ARM	3-8
WRAPPING ARM MOTOR	3-10
WRAPPING AND KNOTTING MAIN DEVICE	3-12
THREAD GUIDE	3-14
ASSEMBLY OF MAIN COVER	3-16
BASE PLATE	3-18
ELECTRONIC PARTS & SENSOR	3-20
PCB BOARDS & LCD & PANNEL	3-22
MOTOR DRIVER DIP SWITCH CONTROL	3-24


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-1

THREAD TENSION

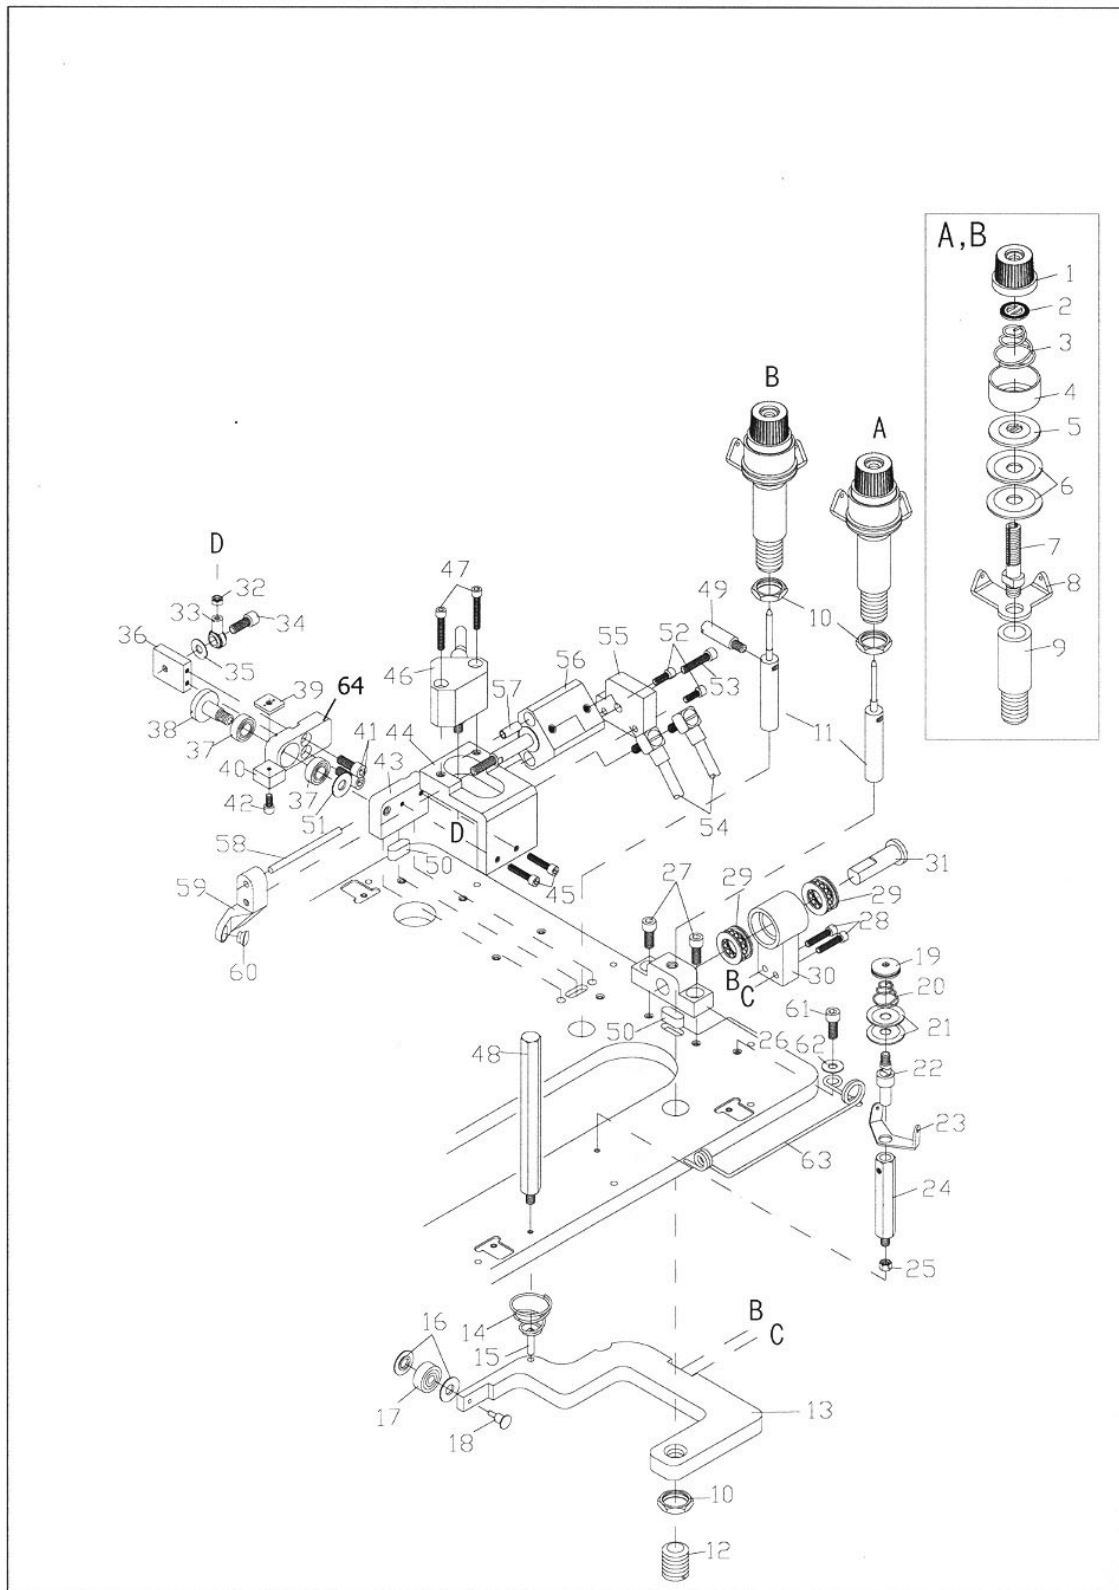

Revised 11/2006

THREAD TENSION

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	TT001	CONTROLLING KNOB	33	TT033	PUSHING DEVICE
2	TT002	WASHER	34	TT034	FIXING BOLT
3	TT003	SPRING	35	TT035	WASHER
4	TT004	SPRING STAND	36	TT036	
5	TT005	WASHER	37	TT037	BEARING
6	TT006	PRESSER	38	TT038	FIXING BOLT
7	TT007	SHAFT	39	TT039	
8	TT008	THREAD GUIDE	40	TT040	
9	TT009	THREAD GUIDE PILLAR	41	TT041	FIXING BOLT
10	TT010	NUT	42	TT042	FIXING BOLT
11	TT011	PILLAR	43	TT043	BRACKET
12	TT012	HEADLESS FIXING BOLT	44	TT044	CYLINDER BRACKET
13	TT013	LEVER	45	TT045	FIXING BOLT
14	TT014	SPRING	46	TT046	AIR CYLINDER
15	TT015	SPRING STAND	47	TT047	FIXING BOLT
16	TT016	WASHER	48	TT048	PILLAR
17	TT017	BEARING	49	TT049	FIXING BOLT
18	TT018	FIXING BOLT	50	TT050	KEY
19	TT019	CONTROLLING KNOB	51	TT051	WASHER
20	TT020	SPRING	52	TT052	FIXING BOLT
21	TT021	PRESSER	53	TT053	FIXING BOLT
22	TT022	SHAFT	54	TT054	NIPPLE
23	TT023	THREAD GUIDE	55	TT055	CYLINDER BRACKET
24	TT024	MAIN STAND	56	TT056	AIR CYLINDER
25	TT025	NUT	57	TT057	BUSHING
26	TT026	THREAD TENSION ASS'Y STAND	58	TT058	HOLDING PIN
27	TT027	FIXING BOLT	59	TT059	
28	TT028	FIXING BOLT	60	TT060	FIXING BOLT
29	TT029	BEARING	61	TT061	FIXING BOLT
30	TT030	BEARING HOLDER	62	TT062	WASHER
31	TT031	HOLDING PIN	63	TT063	SPRING
32	TT032	NUT	64	TT064	


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-3

TRIMMING

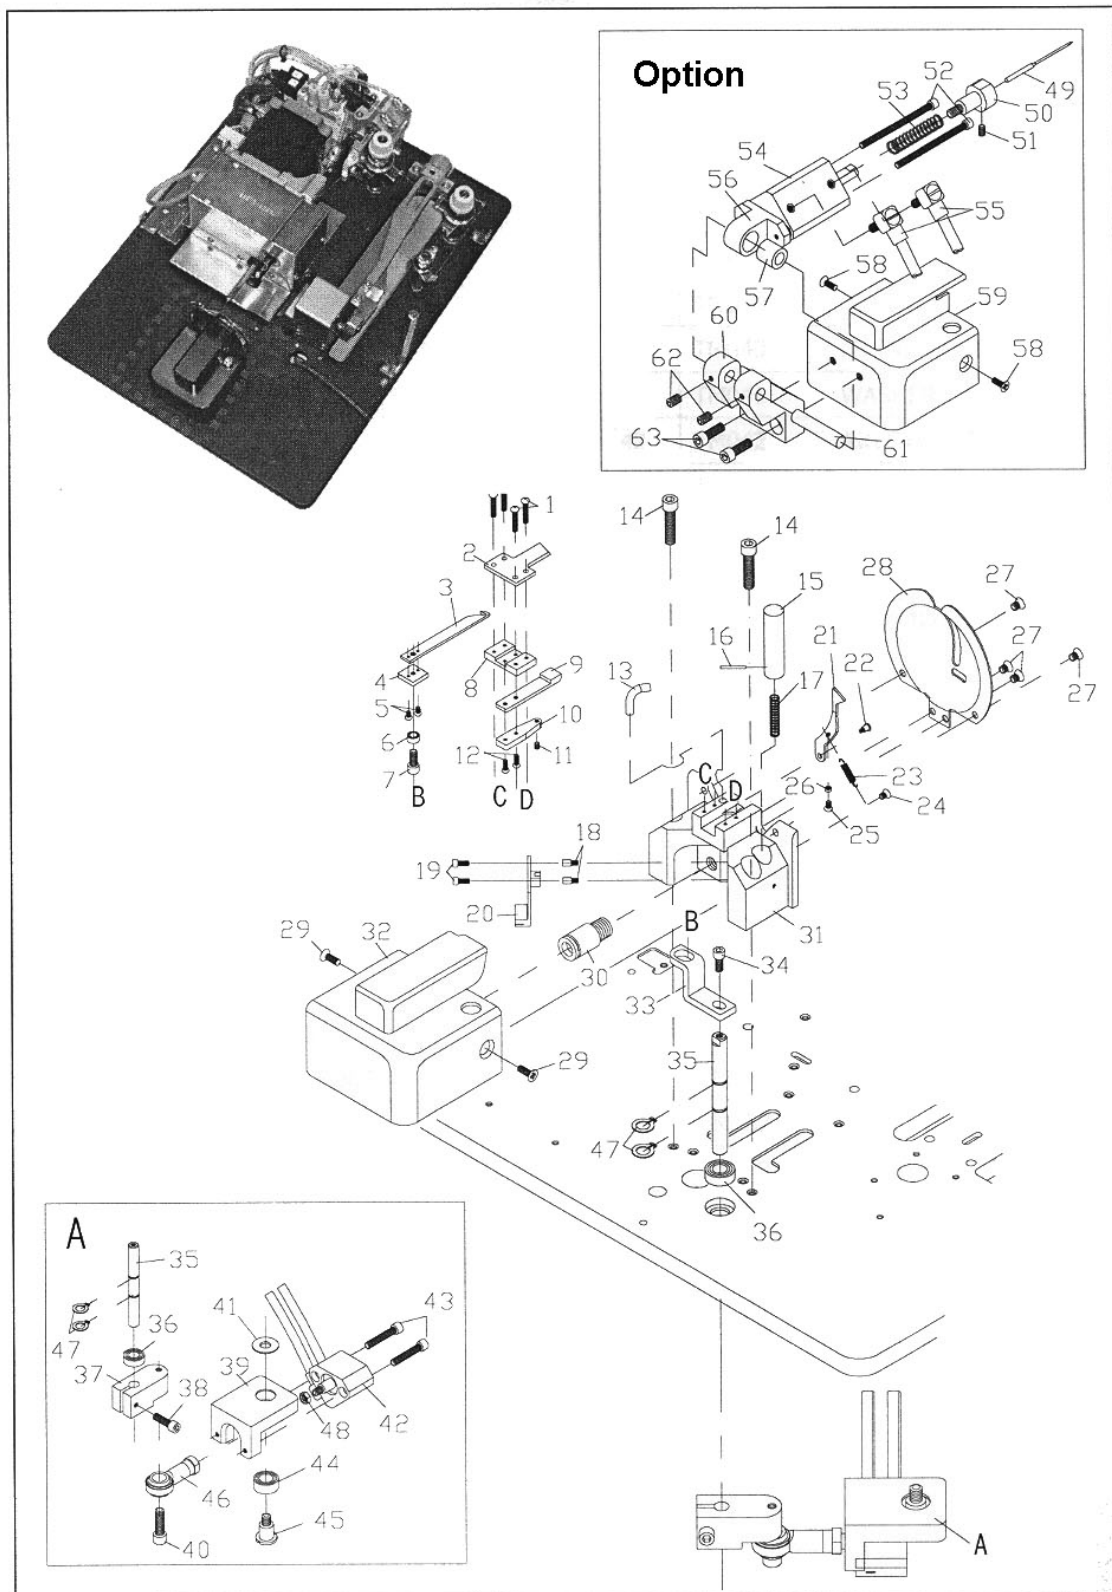

Revised 11/2006

TRIMMING

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	TM001	FIXING BOLT	33	TM033	PUSHING DEVICE
2	TM002	KNIFE ASS'Y 1	34	TM034	FIXING BOLT
3	TM003	KNIFE	35	TM035	PUSHING DEVICE PILLAR
4	TM004	KNIFE ASS'Y 2	36	TM036	BEARING
5	TM005	FIXING BOLT	37	TM037	PILLAR HOLDER
6	TM006	BEARING	38	TM038	FIXING BOLT
7	TM007	FIXING BOLT	39	TM039	AIR CYLINDER COVER
8	TM008	KNIFE ASS'Y 3	40	TM040	FIXING BOLT
9	TM009	KNIFE ASS'Y 4	41	TM041	WASHER
10	TM010	KNIFE ASS'Y 5	42	TM042	AIR CYLINDER
11	TM011	HEADLESS FIXING BOLT	43	TM043	FIXING BOLT
12	TM012	HEADLESS FIXING BOLT	44	TM044	BEARING
13	TM013	AIR PIPE	45	TM045	HOLDING PIN
14	TM014	FIXING BOLT	46	TM046	FLEXIBLE HOOK
15	TM015	SWITCH	47	TM047	RING
16	TM016	SENSOR PIN	48	TM048	NUT
17	TM017	SPRING	49	TM049	NEEDLE
18	TM018	FIXING BOLT	50	TM050	NEEDLE BAR
19	TM019	FIXING BOLT	51	TM051	FIXING BOLT
20	TM020	KNIFE ASS'Y 6	52	TM052	FIXING BOLT
21	TM021	BUTTON KEEPER	53	TM053	SPRING
22	TM022	FIXING BOLT	54	TM054	AIR CYLINDER
23	TM023	SPRING	55	TM055	NIPPLE
24	TM024	FIXING BOLT	56	TM056	FIXING BRACKET
25	TM025	FIXING BOLT	57	TM057	BUSHING
26	TM026	NUT	58	TM058	FIXING BOLT
27	TM027	FIXING BOLT	59	TM059	BUTTON BRACKET
28	TM028	PLATE	60	TM060	CYLINDER HOLDER
29	TM029	FIXING BOLT	61	TM061	HOLDING PIN
30	TM030	AIR NIPPLE	62	TM062	HEADLESS FIXING BOLT
31	TM031	KNIFE ASS'Y STAND	63	TM063	FIXING BOLT
32	TM032	KNIFE ASS'Y COVER			


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-5

UPPER THREAD TAKE UP

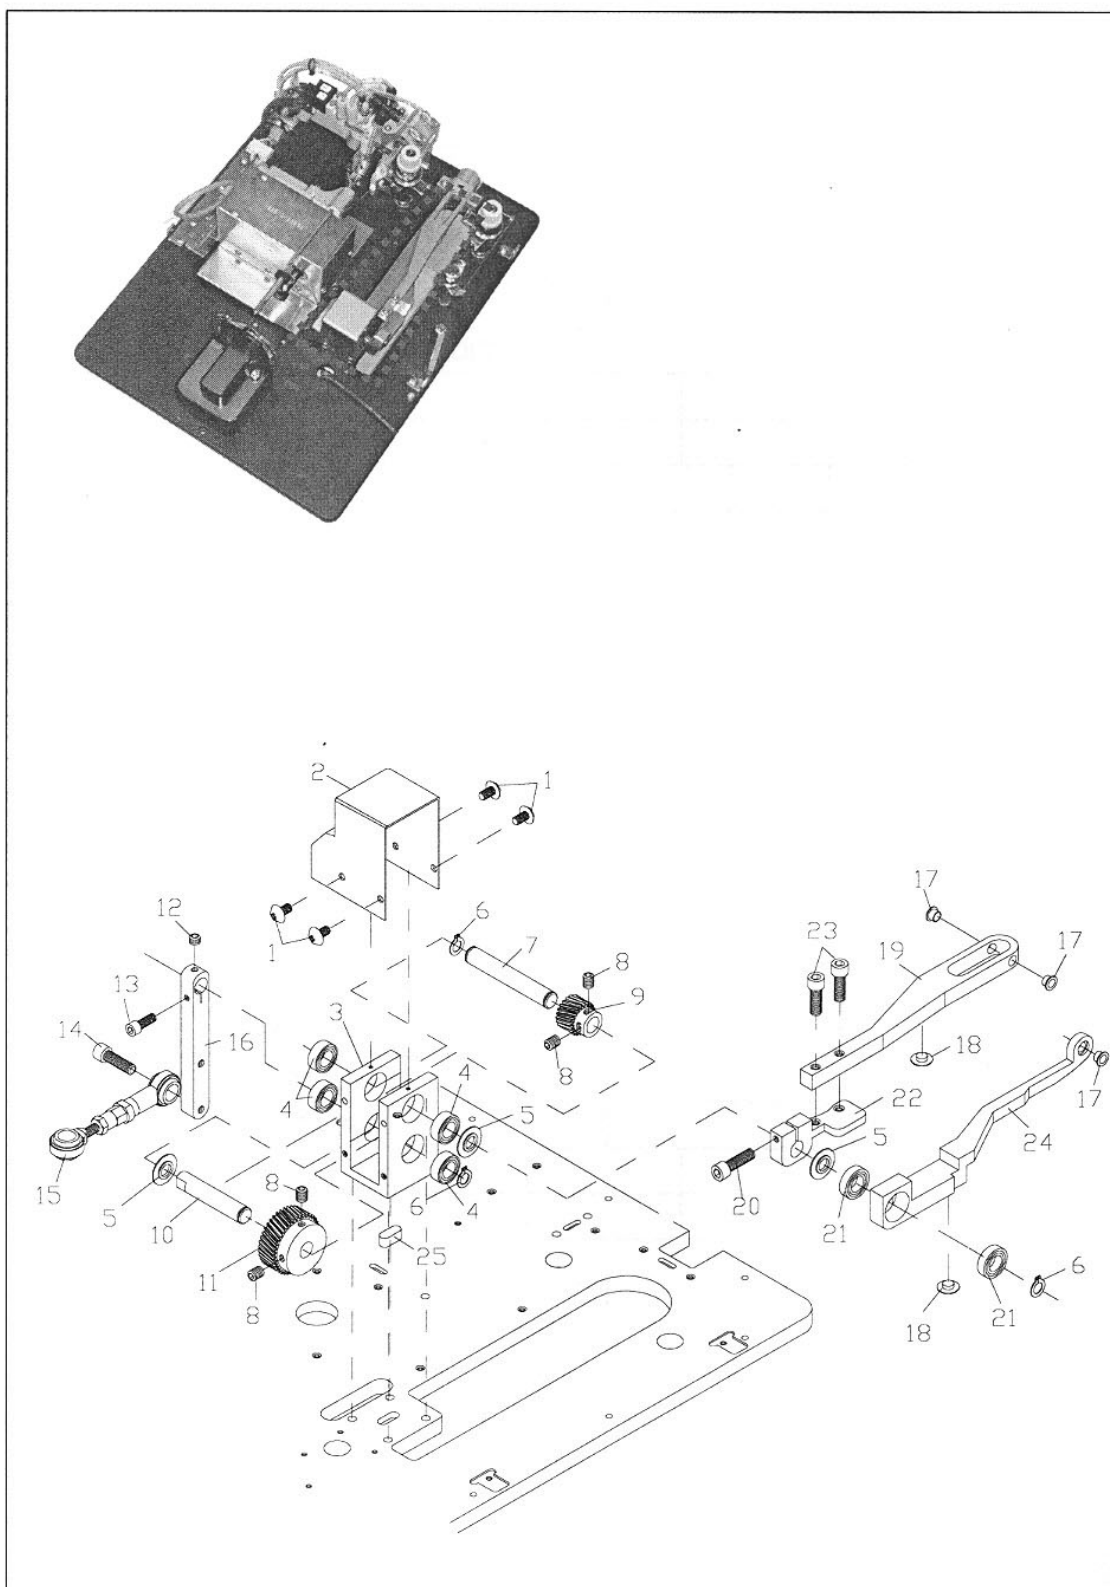

Revised 11/2006

UPPER THREAD TAKE UP

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	UU001	FIXING BOLT			
2	UU002	GEAR BOX COVER			
3	UU003	GEAR BOX			
4	UU004	BEARING			
5	UU005	WASHER			
6	UU006	RING			
7	UU007	GEAR SHAFT			
8	UU008	HEADLESS FIXING BOLT			
9	UU009	GEAR			
10	UU010	GEAR SHAFT			
11	UU011	GEAR			
12	UU012	HEADLESS FIXING BOLT			
13	UU013	FIXING BOLT			
14	UU014	FIXING BOLT			
15	UU015	FLEXIBLE HOOK ASS'Y			
16	UU016	PILLAR			
17	UU017	SMOOTHER			
18	UU018	RUBBER CAP			
19	UU019	THREAD TAKE UP LEVER 1			
20	UU020	FIXING BOLT			
21	UU021	BEARING			
22	UU022	THREAD TAKE UP LEVER STAND			
23	UU023	FIXING BOLT			
24	UU024	THREAD TAKE UP LEVER 2			
25	UU025	FIXING DEVICE			


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-7

WRAPPING ARM

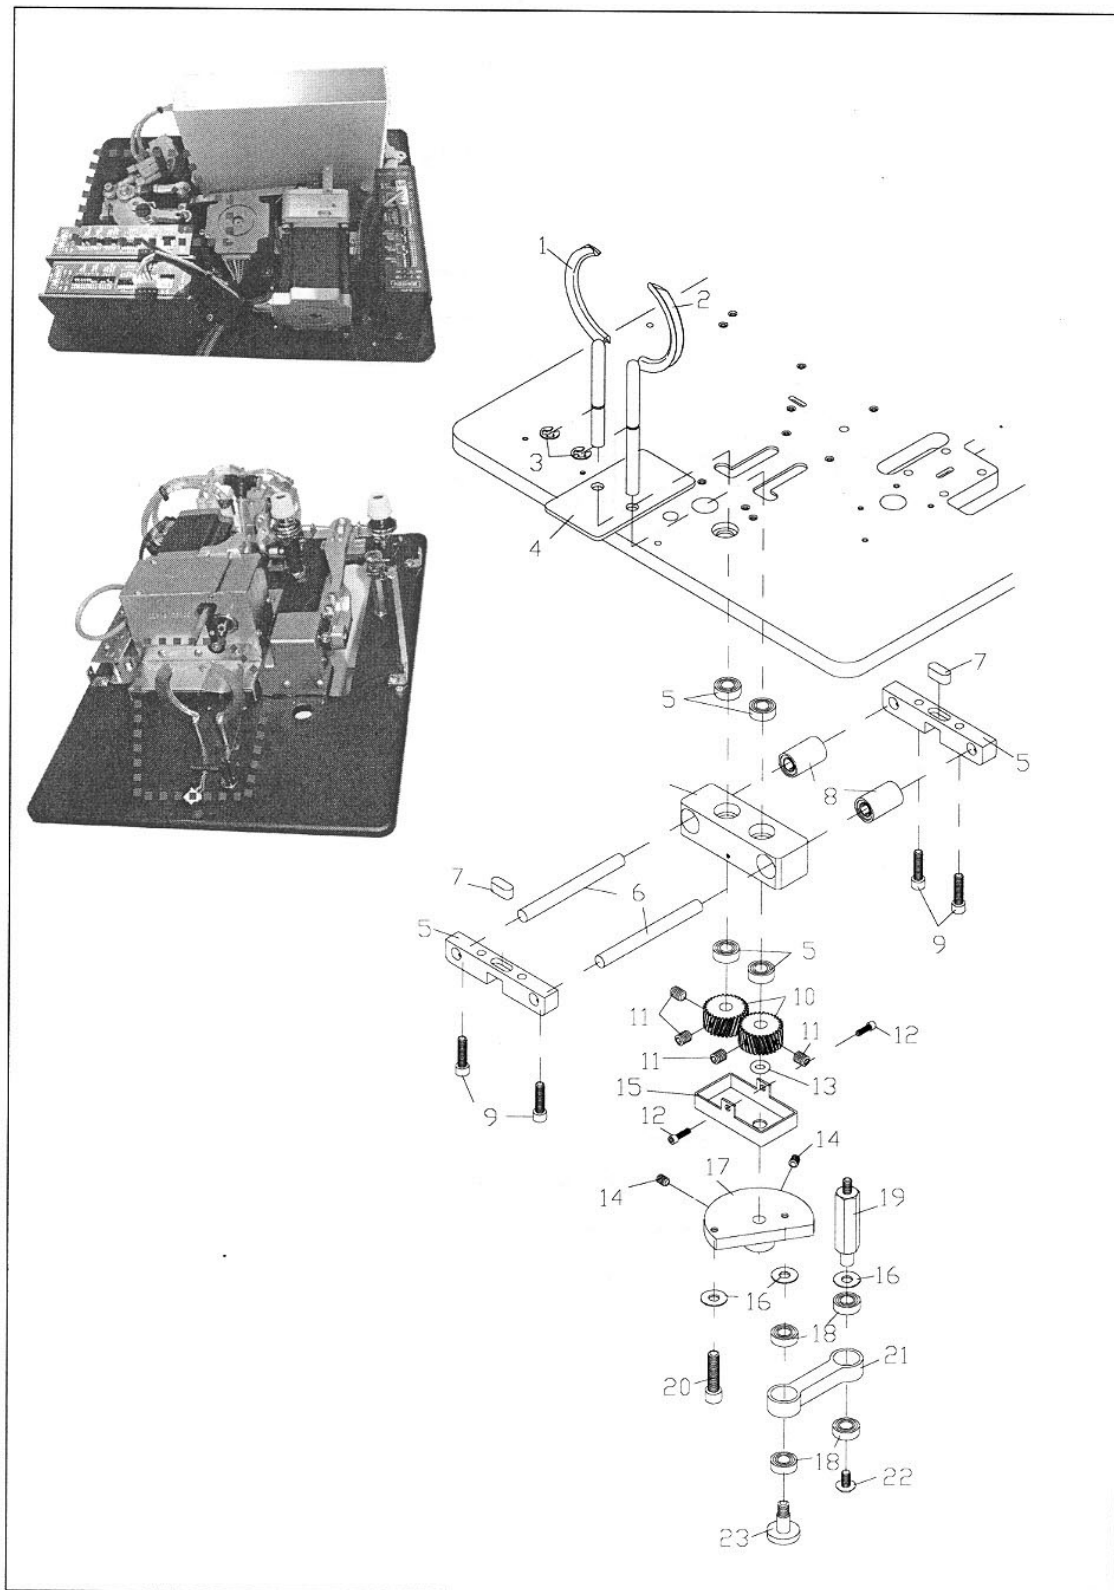

Revised 11/2006

WRAPPING ARM

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	WA001	LEFT WRAPPING ARM			
2	WA002	RIGHT WRAPPING ARM			
3	WA003	RING			
4	WA004	WRAPPING ARM BASE			
5	WA005	BEARING			
6	WA006	HOLDING PIN			
7	WA007	FIXING DEVICE			
8	WA008	BEARING			
9	WA009	FIXING BOLT			
10	WA010	GEAR			
11	WA011	HEADLESS FIXING BOLT			
12	WA012	FIXING BOLT			
13	WA013	RING			
14	WA014	HEADLESS FIXING BOLT			
15	WA015	GEAR BOX			
16	WA016	WASHER			
17	WA017	CAM			
18	WA018	BEARING			
19	WA019	PILLAR			
20	WA020	FIXING BOLT			
21	WA021	ARM			
22	WA022	FIXING BOLT			
23	WA023	HOLDING PIN			


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-9

WRAPPING ARM MOTOR

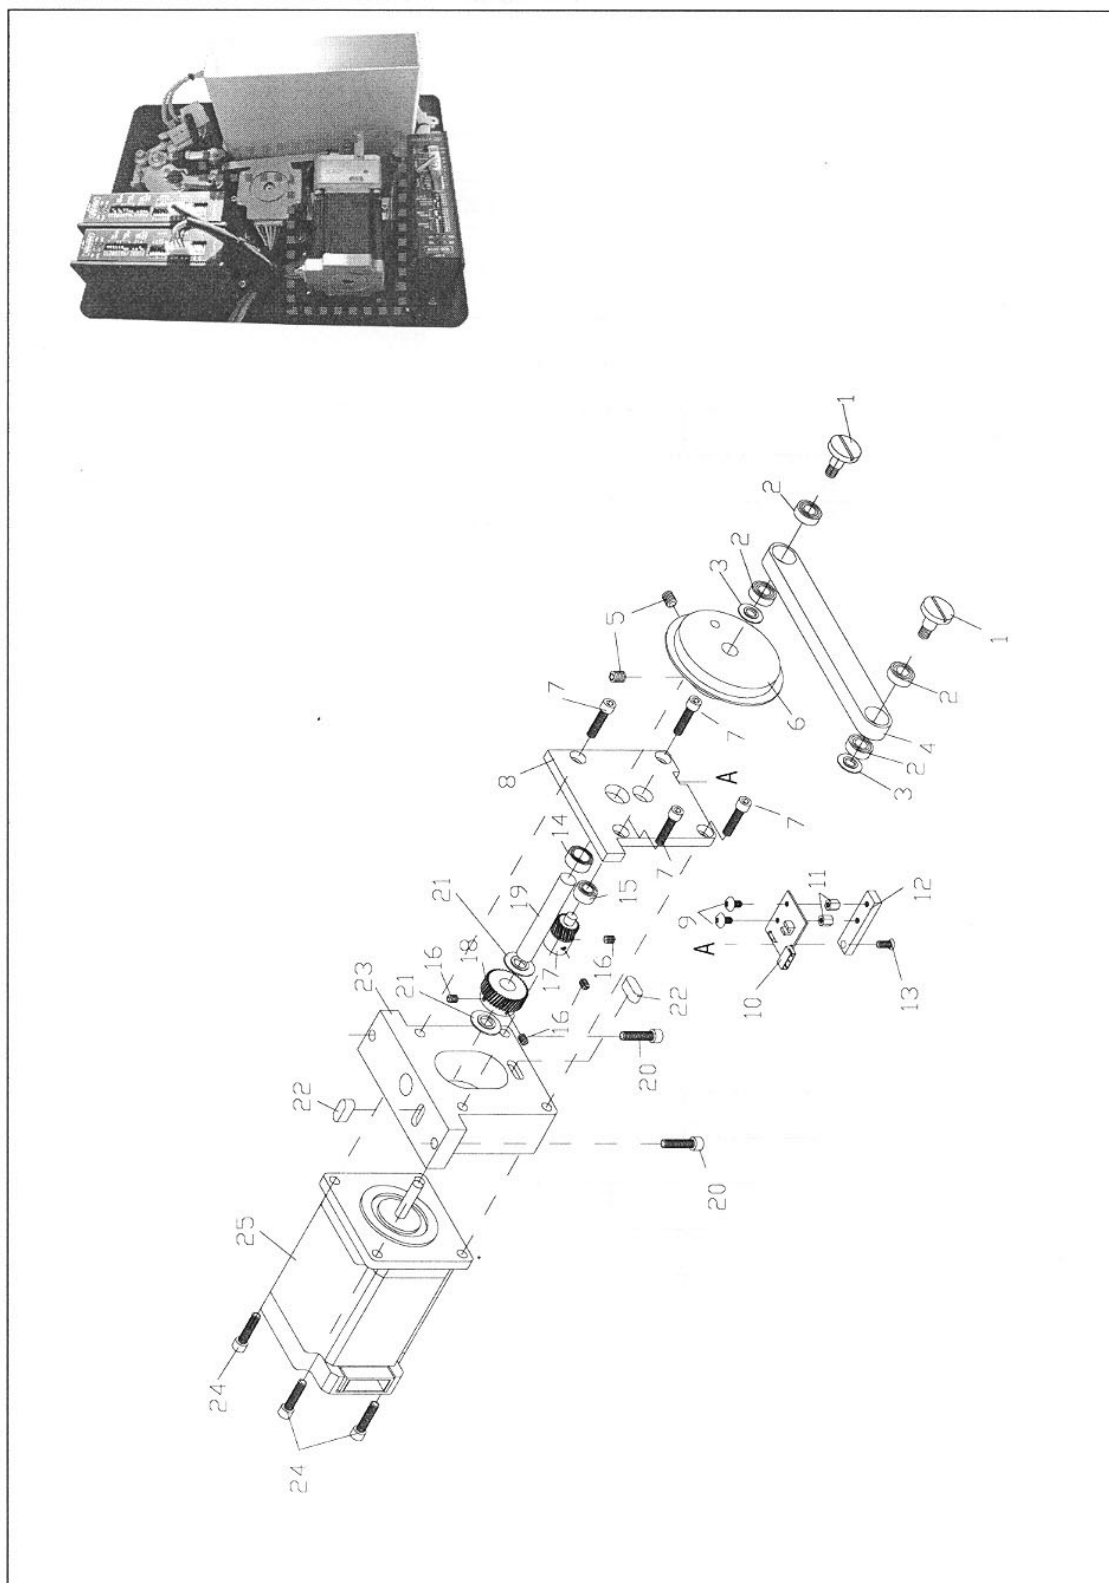

Revised 11/2006

WRAPPING ARM MOTOR

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	WM001	HOLDING PIN			
2	WM002	BEARING			
3	WM003	WASHER			
4	WM004	ARM			
5	WM005	HEADLESS FIXING BOLT			
6	WM006	CAM			
7	WM007	FIXING BOLT			
8	WM008	GEAR BOX COVER			
9	WM009	FIXING BOLT			
10	WM010	SENSOR BOARD			
11	WM011	FIXING BOLT			
12	WM012	SENSOR BOARD STAND			
13	WM013	FIXING BOLT			
14	WM014	BEARING			
15	WM015	BEARING			
16	WM016	HEADLESS FIXING BOLT			
17	WM017	GEAR			
18	WM018	GEAR			
19	WM019	GEAR SHAFT			
20	WM020	FIXING BOLT			
21	WM021	WASHER			
22	WM022	FIXING DEVICE			
23	WM023	GEAR BOX			
24	WM024	FIXING BOLT			
25	WM025	MOTOR			


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-11

WRAPPING AND KNOTTING MAIN DEVICE

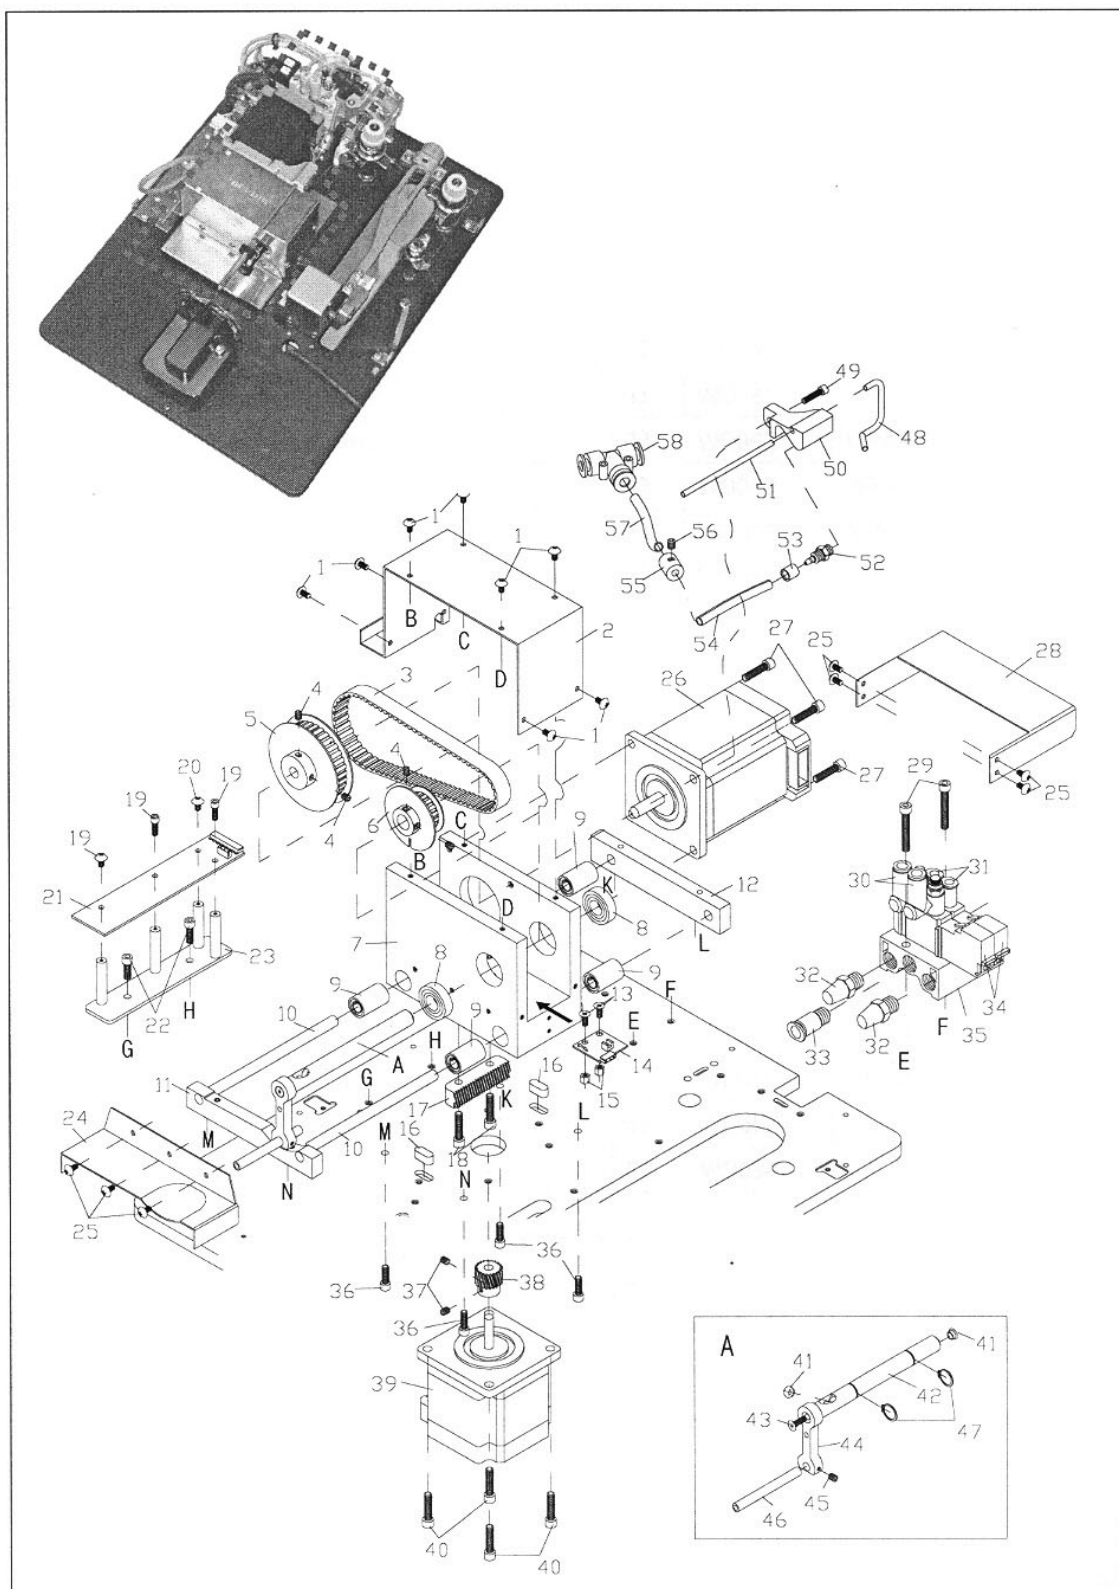

Revised 11/2006

WRAPPING AND KNOTTING MAIN DEVICE

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	WD001	FIXING BOLT	33	WD033	AIR NIPPLE
2	WD002	BELT BOX COVER	34	WD034	DETECTOR
3	WD003	BELT	35	WD035	STAND
4	WD004	HEADLESS FIXING BOLT	36	WD036	FIXING BOLT
5	WD005	BELT GEAR	37	WD037	HEADLESS FIXING BOLT
6	WD006	BELT GEAR	38	WD038	GEAR
7	WD007	BELT BOX	39	WD039	MOTOR
8	WD008	BEARING	40	WD040	FIXING BOLT
9	WD009	BEARING	41	WD041	SMOOTHER
10	WD010	HOLDING PIN	42	WD042	WRAPPING ARM
11	WD011	PIN HOLDER 1	43	WD043	WRAPPING DEVICE 1
12	WD012	PIN HOLDER 2	44	WD044	ARM
13	WD013	FIXING BOLT	45	WD045	HEADLESS FIXING BOLT
14	WD014	SENSOR BOARD 1	46	WD046	WRAPPING DEVICE 2
15	WD015	FIXING NUT	47	WD047	RING
16	WD016	FIXING DEVICE	48	WD048	AIR PIN
17	WD017	GEAR	49	WD049	FIXING BOLT
18	WD018	FIXING BOLT	50	WD050	THREAD BRACKET
19	WD019	FIXING BOLT	51	WD051	AIR PIN
20	WD020	FIXING BOLT	52	WD052	AIR NIPPLE
21	WD021	SENSOR BOARD 2	53	WD053	AIR NIPPLE
22	WD022	FIXING BOLT	54	WD054	AIR HOSE
23	WD023	SENSOR BOARD STAND	55	WD055	AIR HOSE CONTROLLER
24	WD024	PIN HOLDER 1 COVER	56	WD056	HEADLESS FIXING BOLT
25	WD025	FIXING BOLT	57	WD057	AIR HOSE
26	WD026	MOTOR	58	WD058	AIR NIPPLE
27	WD027	FIXING BOLT			
28	WD028	PIN HOLDER 2 COVER			
29	WD029	FIXING BOLT			
30	WD030	AIR NIPPLE			
31	WD031	AIR NIPPLE			
32	WD032	FILTER			


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-13

THREAD GUIDE

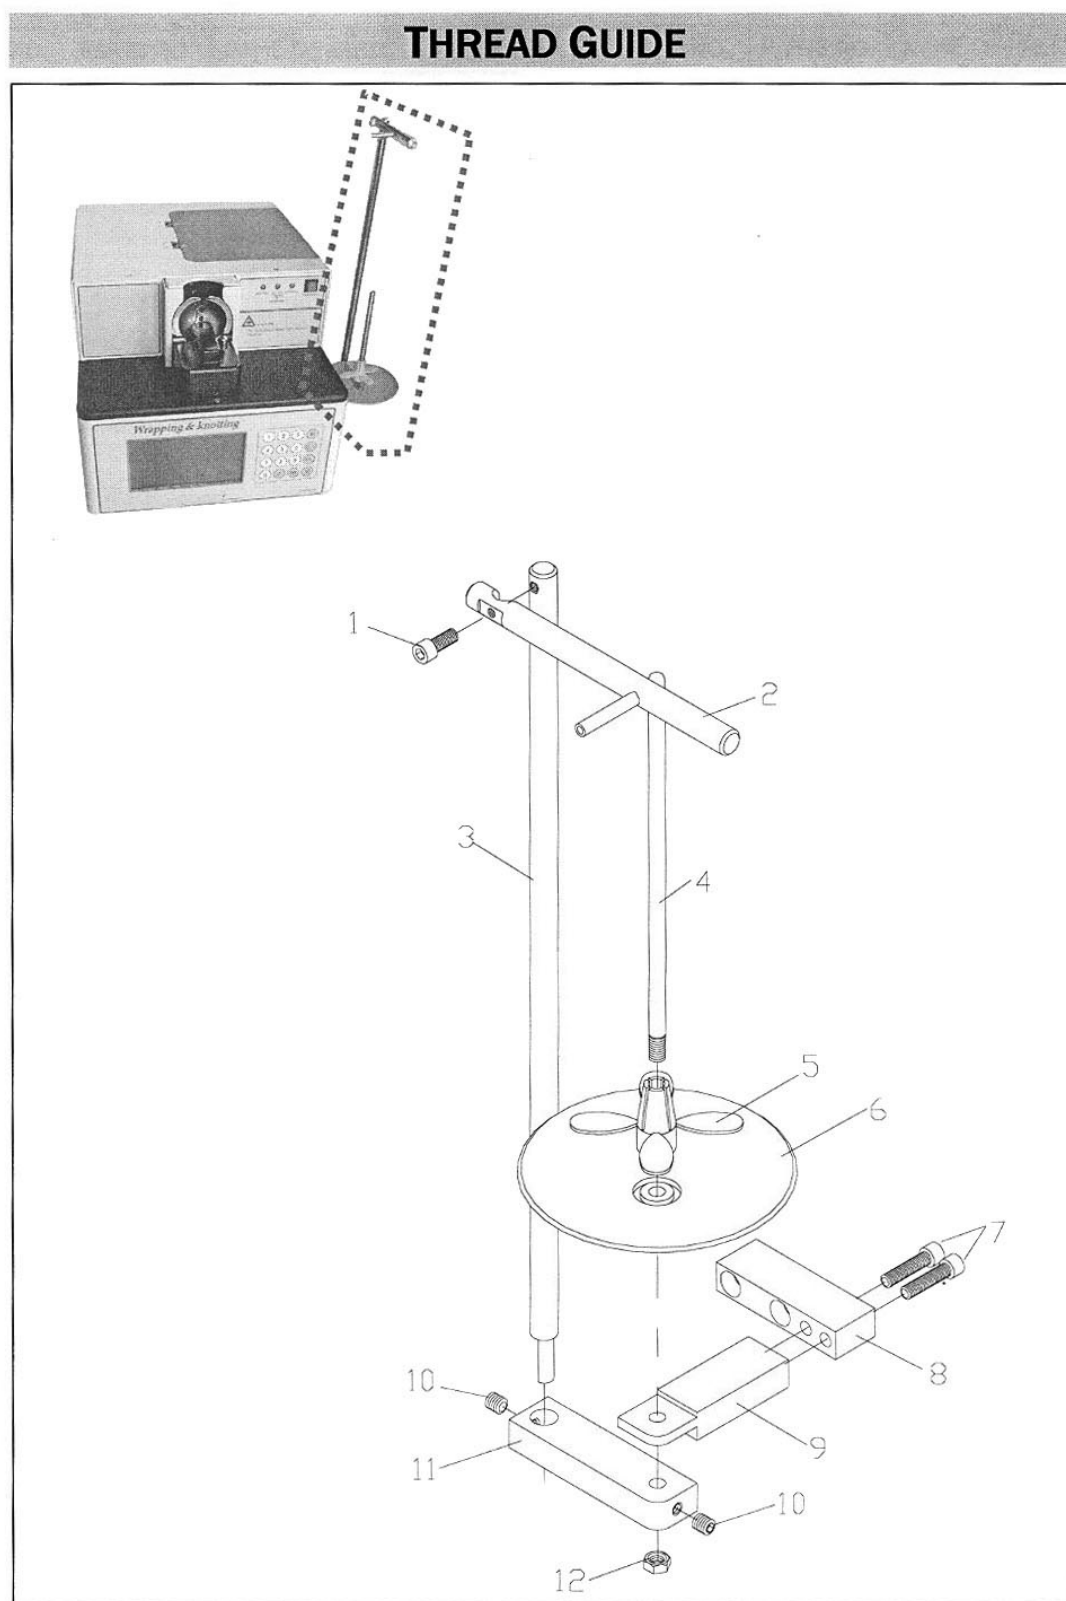

Revised 11/2006

THREAD GUIDE

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	TG001	THREAD GUIDE			
2	TG002	FIXING BOLT			
3	TG003	THREAD GUIDE PILLAR			
4	TG004	THREAD FIXING DEVICE			
5	TG005	THREAD STAND			
6	TG006	HEADLESS FIXING BOLT			
7	TG007	THREAD GUIDE STAND BASE			
8	TG008	NUT			
9	TG009	THREAD STAND ASS'Y FIXING DEVICE			
10	TG010	THREAD STAND ASS'Y FIXING DEVICE			
11	TG011	FIXING BOLT			
12	TG012	THREAD STAND PILLAR			


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-15

ASSEMBLY OF MAIN COVER

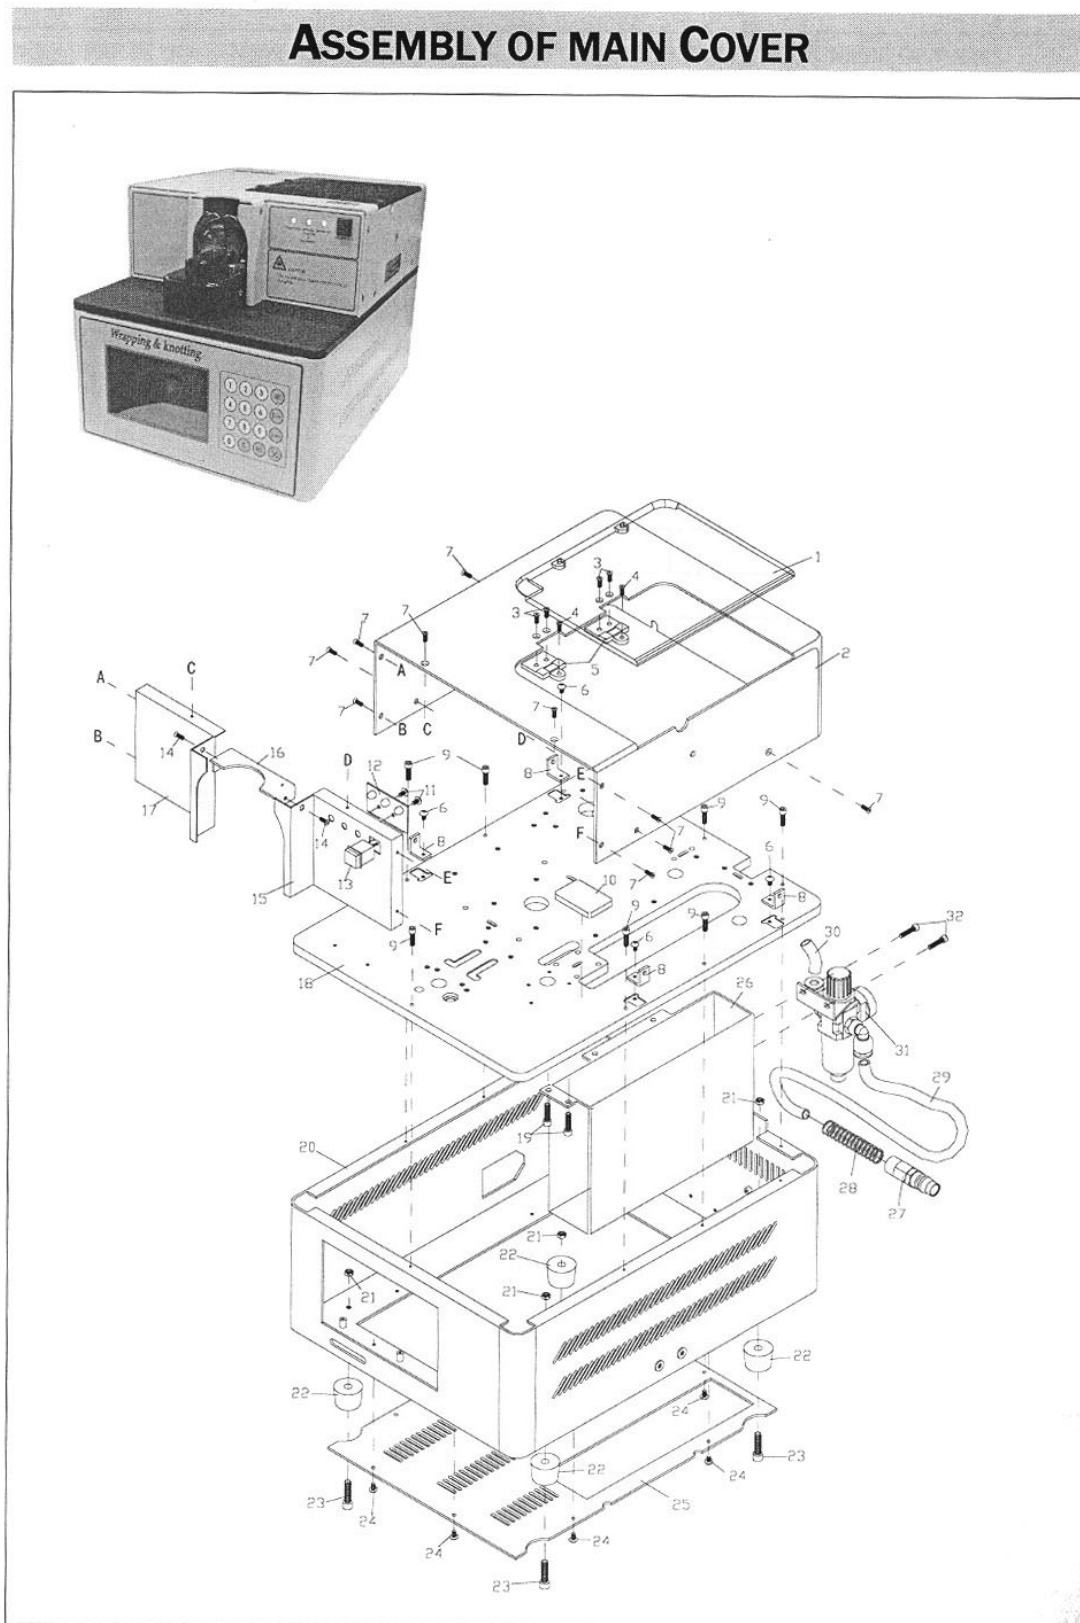

Revised 11/2006

ASSEMBLY OF MAIN COVER

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	AC001	COVER			
2	AC002	MAIN COVER			
3	AC003	FIXING BOLT			
4	AC004	FIXING BOLT			
5	AC005	HINGE			
6	AC006	FIXING BOLT			
7	AC007	FIXING BOLT			
8	AC008	FIXING DEVICE			
9	AC009	FIXING BOLT			
10	AC010	FIXING DEVICE			
11	AC011	FIXING BOLT			
12	AC012	MOTOR LAMPS			
13	AC013	EMERGENCY SWITCH			
14	AC014	FIXING BOLT			
15	AC015	FRONT RIGHT COVER			
16	AC016	PLATE SAFETY DEVICE			
17	AC017	FRONT LEFT COVER			
18	AC018	MAIN BASE			
19	AC019	FIXING BOLT			
20	AC020	BODY			
21	AC021	NUT			
22	AC022	RUBBER STAND			
23	AC023	FIXING BOLT			
24	AC024	FIXING BOLT			
25	AC025	BOTTOM COVER			
26	AC026	LEVER BOX			
27	AC027	AIR NIPPLE			
28	AC028	AIR HOSE MOUTH SPRING			
29	AC029	AIR HOSE			
30	AC030	AIR HOSE			
31	AC031	AIR FILTER			
32	AC032	FIXING BOLT			


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-17

BASE PLATE

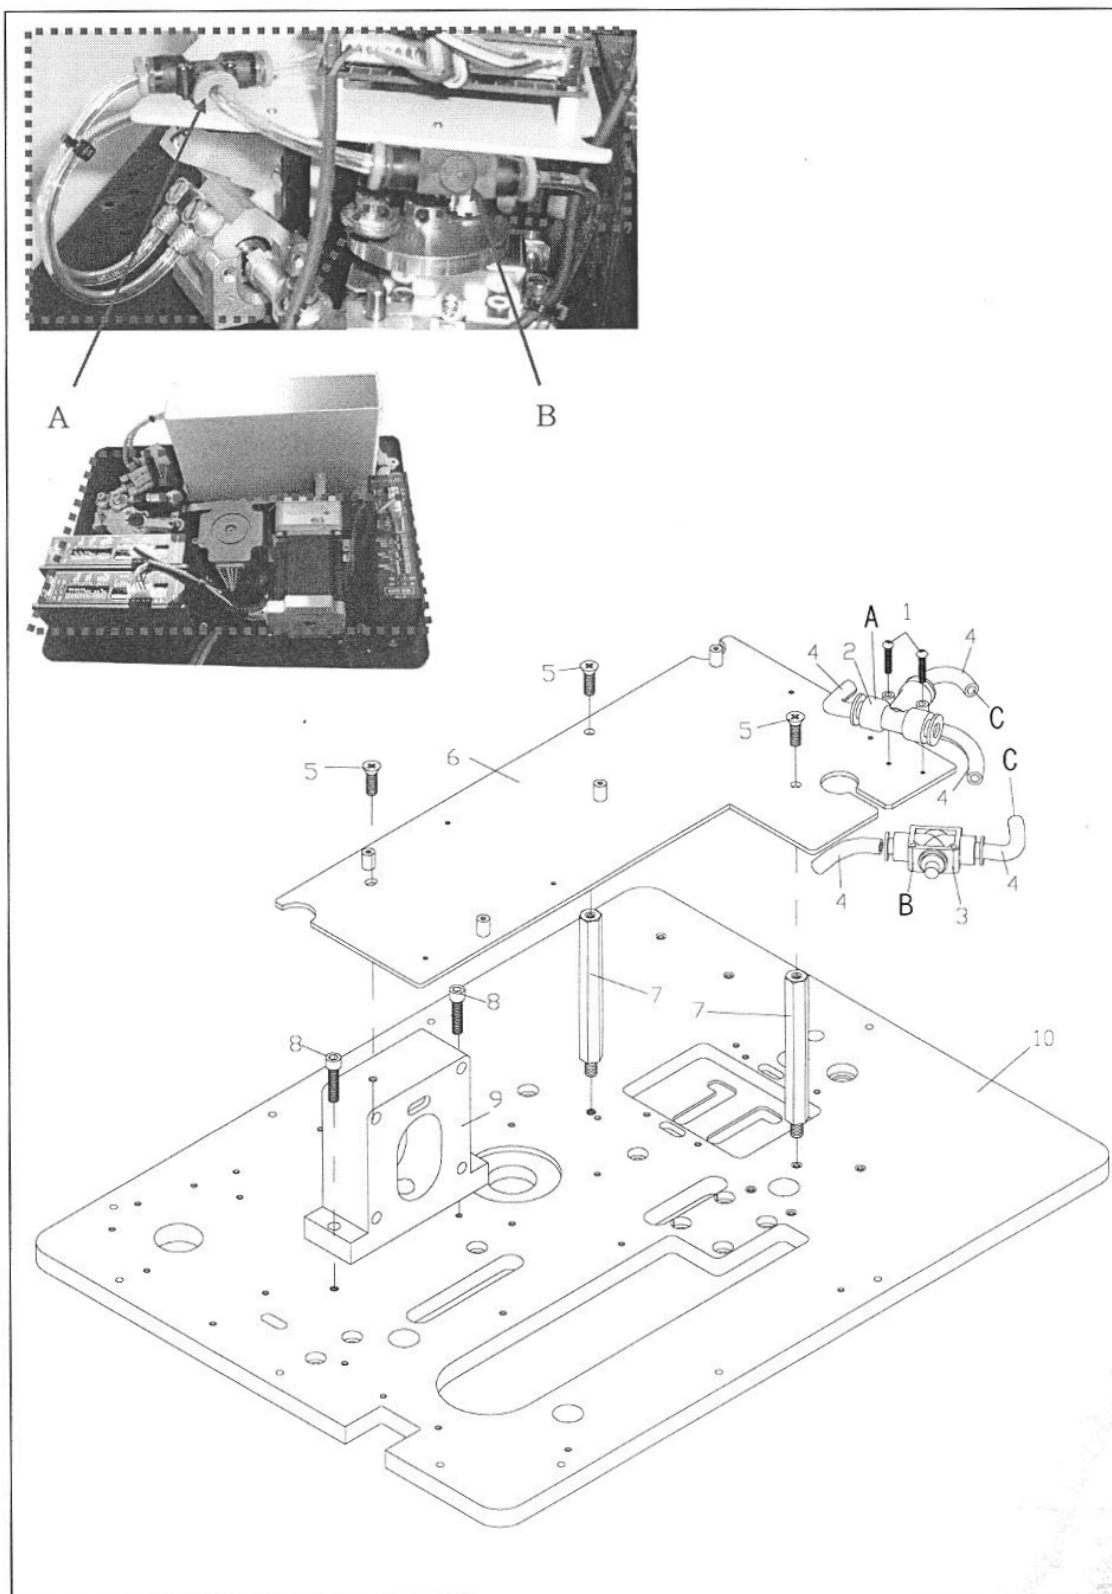

Revised 11/2006

BASE PLATE

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	BP001	FIXING BOLT			
2	BP002	AIR NIPPLE			
3	BP003	AIR NIPPLE			
4	BP004	HOSE			
5	BP005	FIXING BOLT			
6	BP006	PCB BOARD BASE			
7	BP007	PILLAR			
8	BP008	FIXING BOLT			
9	BP009	GEAR BOX			
10	BP010	MAIN BASE			

Revised 11/2006


e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-19

ELECTRONIC PARTS & SENSOR

ELECTRONIC PARTS & SENSOR

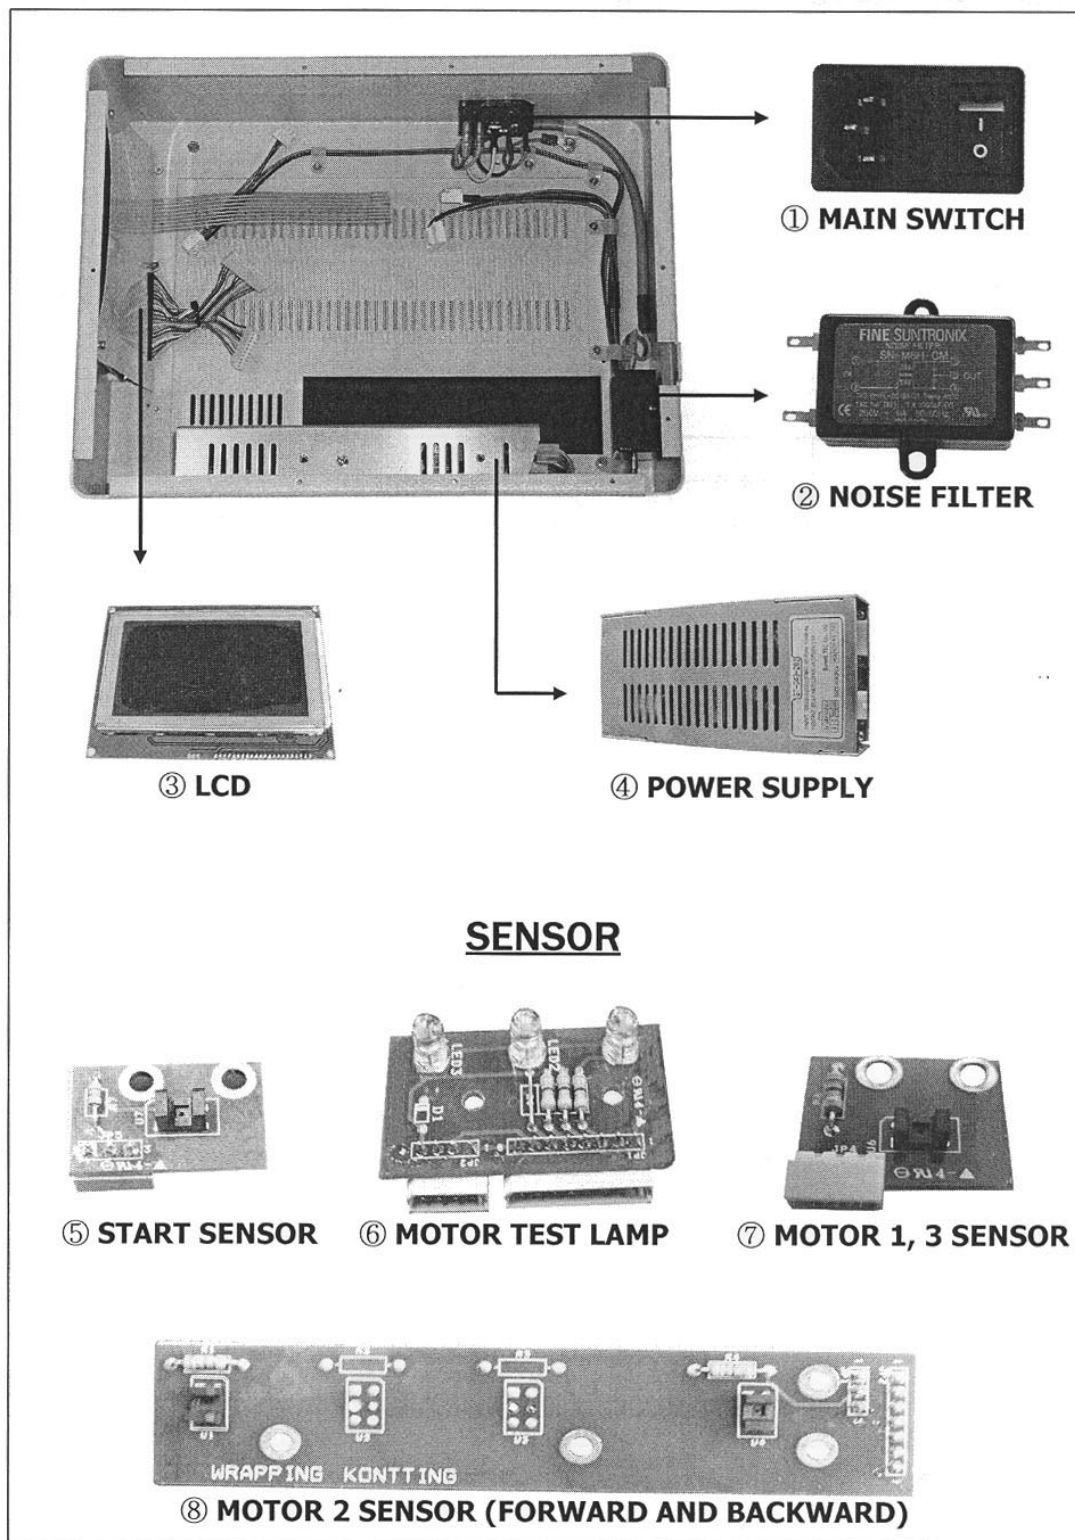

Revised 11/2006

ELECTRONIC PARTS & SENSOR

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	EP001	MAIN SWITCH			
2	EP002	NOISE FILTER			
3	EP003	LCD			
4	EP004	POWER SUPPLY			
5	EP005	START SENSOR			
6	EP006	MOTOR TEST LAMP			
7	EP007	MOTOR 1, 3 SENSOR			
8	EP008	MOTOR 2 SENSOR			


Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-21

PCB BOARDS & LCD & PANNEL

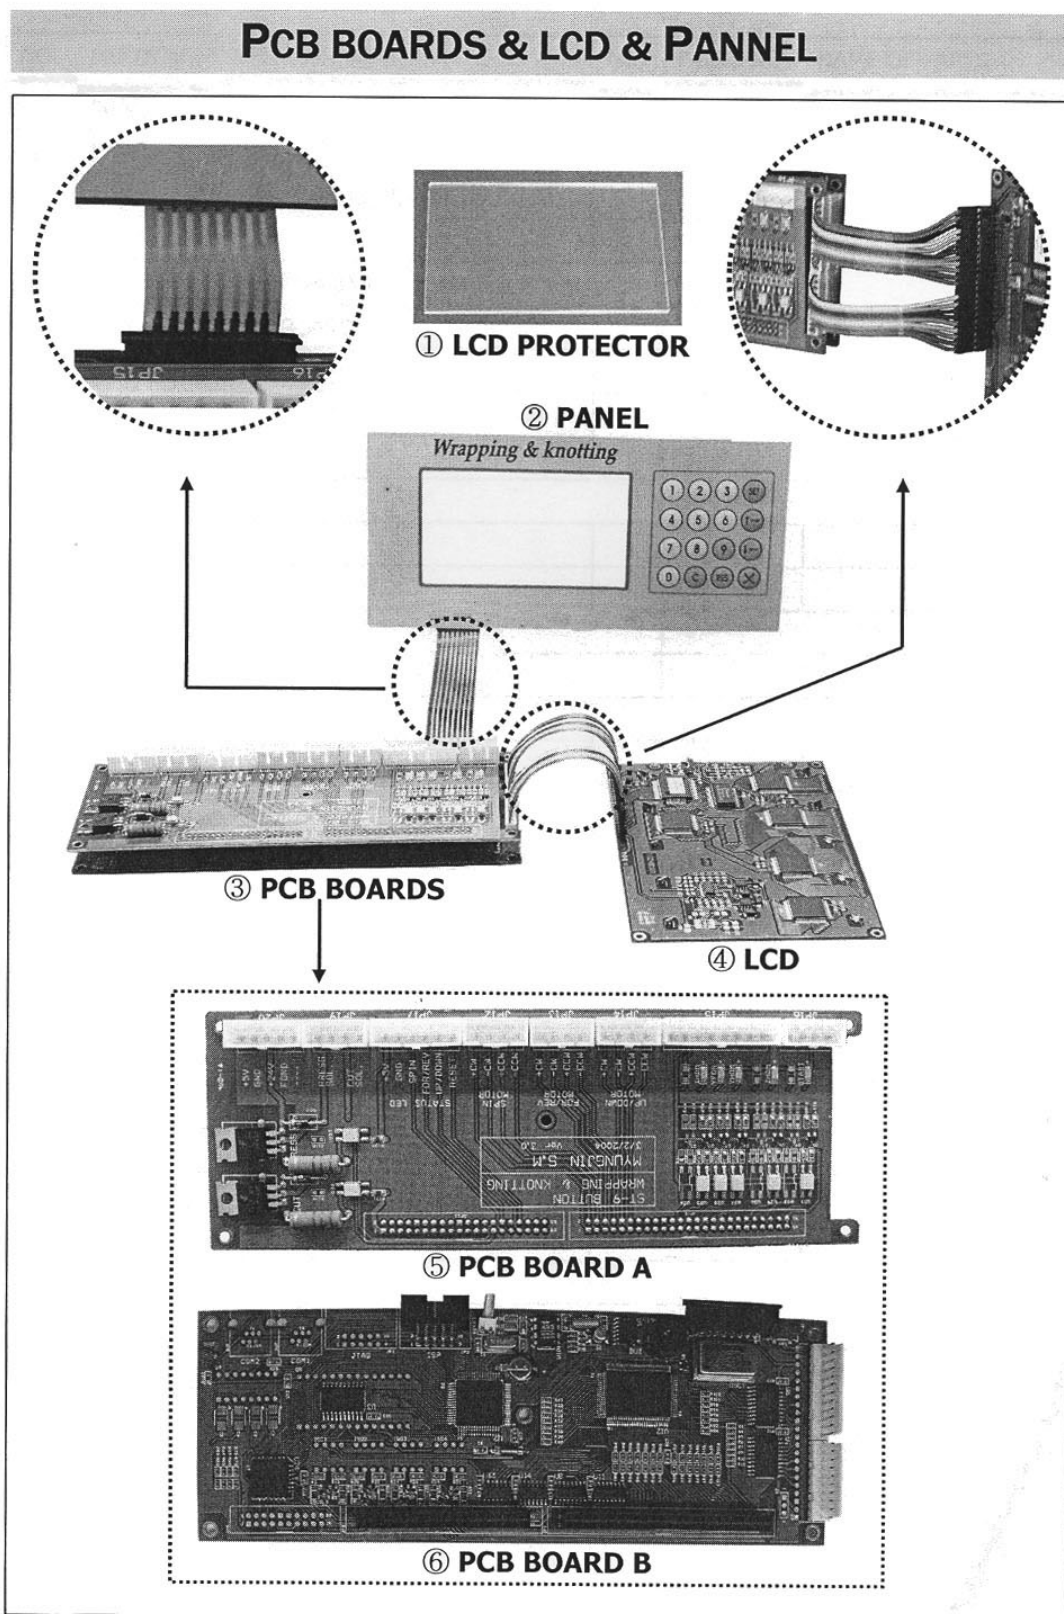

Revised 11/2006

PCB BOARDS & LCD & PANNEL

NO.	PARTS NO.	NAME OF PARTS	NO.	PARTS NO.	NAME OF PARTS
1	PP001	LCD PROTECTOR			
2	PP002	PANNEL			
3	PP003	PCB BOARDS(ASSEMBLY A & B)			
4	PP004	LCD			
5	PP005	PCB BOARD A			
6	PP006	PCB BOARD B			

Revised 11/2006

e-mail: service@amfreece.cz; parts@amfreece.cz; website: www.amfreece.com

Phones: +420 582 309 146 (Service), +420 582 309 286 (Spare Parts); Fax: +420 582 360 606

3-23

MOTOR DRIVER DIP SWITCH CONTROL

