


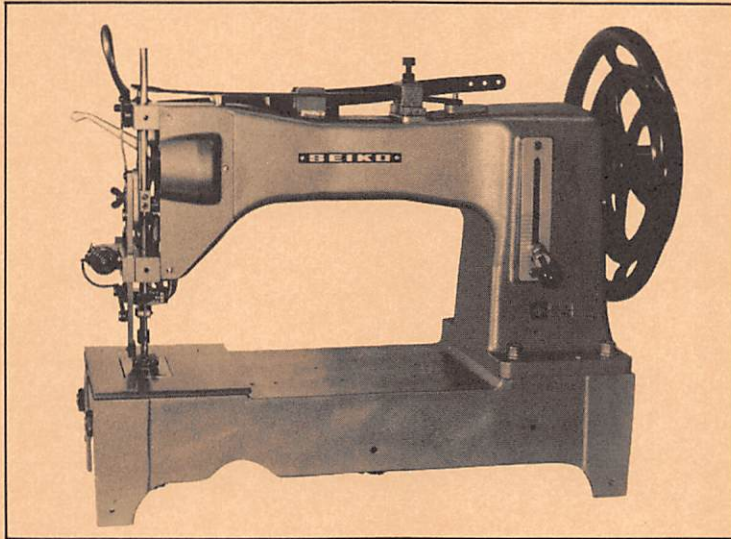

SEIKO


SLH-2B

Operator's Guide





HOW TO SET HANDWHEEL

Remove two screws and take off bushing, and set handwheel with the two screws.

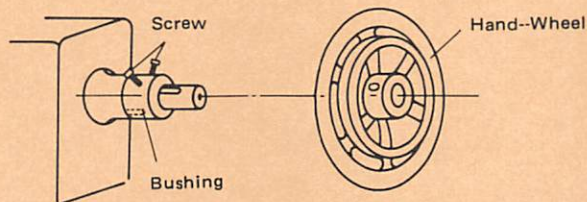

LUBRICATION


Use white spindle oil. When starting the machine initially and after kept for a long time without using at all, oil sufficiently to respective necessary parts before starting operation, pre-running and with severe use. Oil frequently each necessary parts during operation.

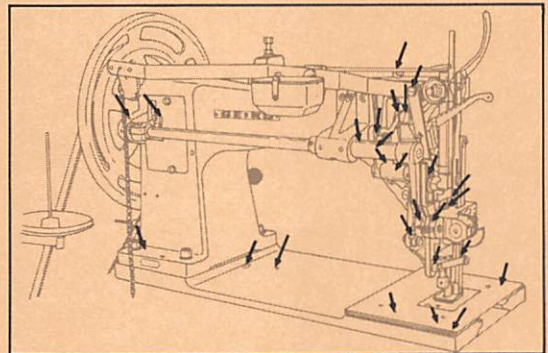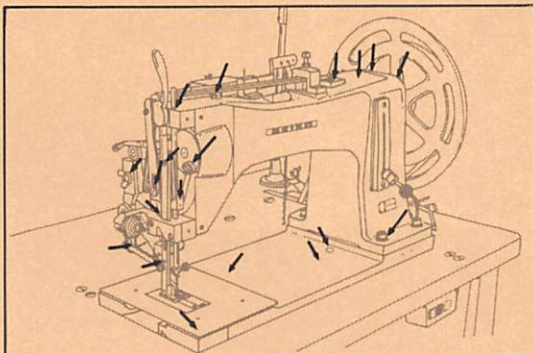

From the library of: Superior Sewing Machine & Supply LLC


HOW TO SET THE NEEDLE

- * Move needle bar to HIGHEST point.
Loosen needle set screw.
- * Insert needle up as far as possible,
setting its long groove towards the left.
- * Tighten needle set screw securely.



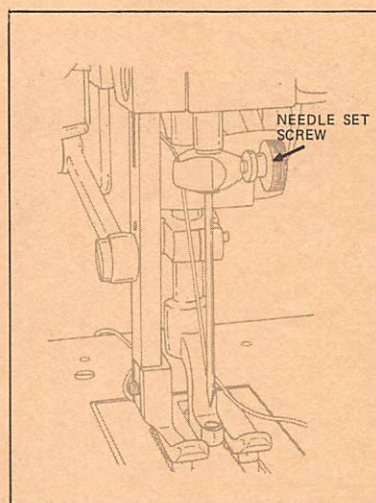


WINDING THE BOBBIN



- * Set bobbin winder as shown
- B: Adjustment of center position
- C: Adjustment of winding amount

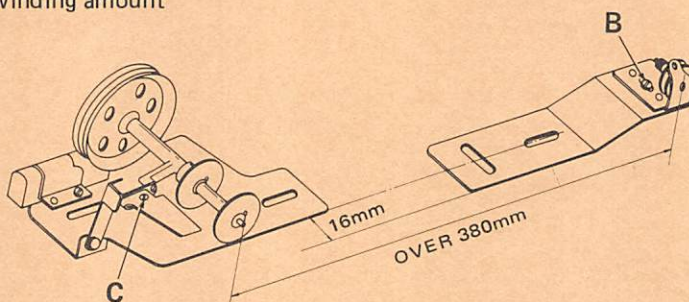




INSERTING & REMOVING THE BOBBIN

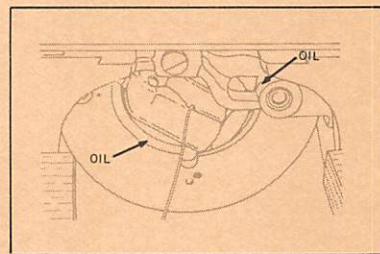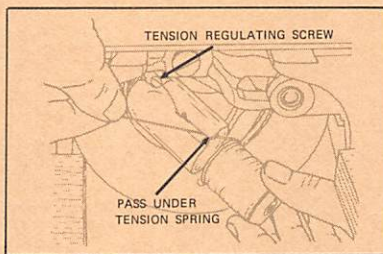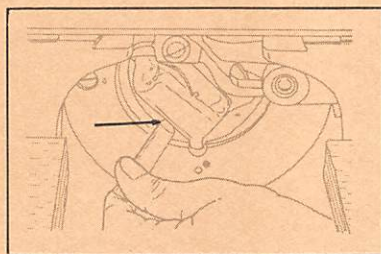


THREADING NEEDLE

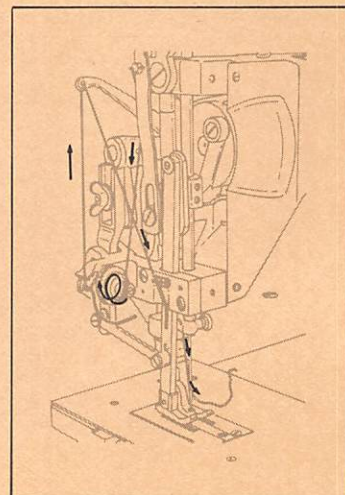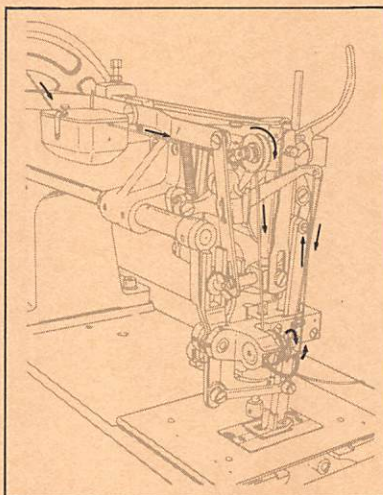

THREAD TENSIONS

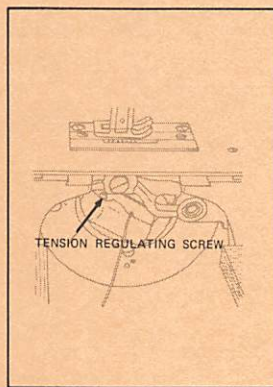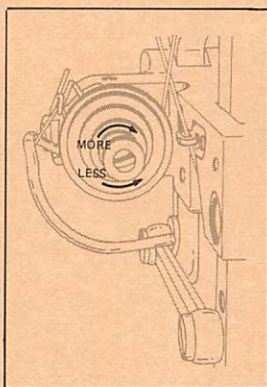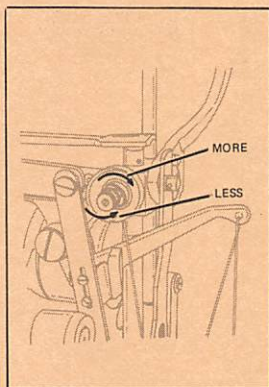

ADJUSTMENT OF FOOT PRESSURE

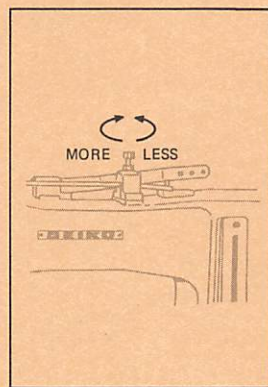


MORE TENSION . . . turn to right

LESS TENSION . . . turn to left


SUITABLE TENSION . . . determined by type of material being sewn

ADJUSTMENT OF STITCH LENGTH

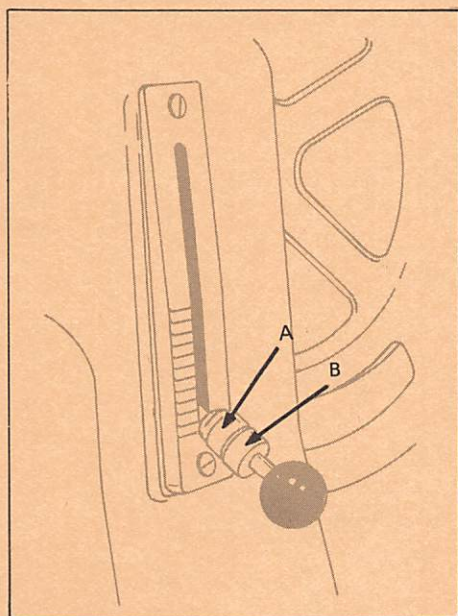



Adjust Stitch length by serrated nut (A)
and tighten nut (B) against nut (A)

ADJUSTMENT OF ALTERNATING PRESSER AND UPPER FEED

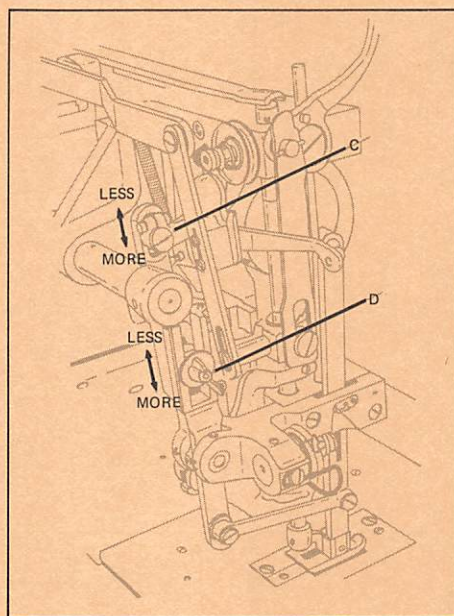

C . . . adjustment of alternating presser

D . . . adjustment of feeding amount of outer foot

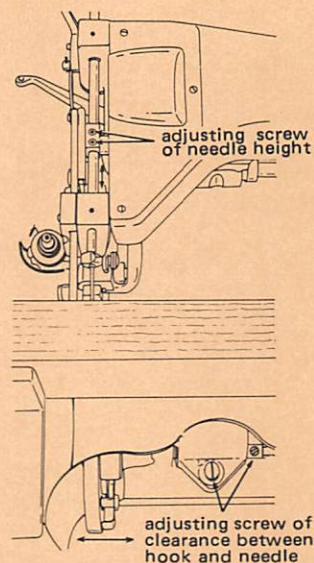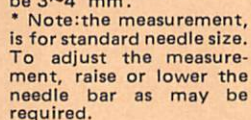

Cable Address: "SEIKOSEWMCO" TOKYO