




★ THE SINGER COMPANY

A Trademark of
THE SINGER COMPANY




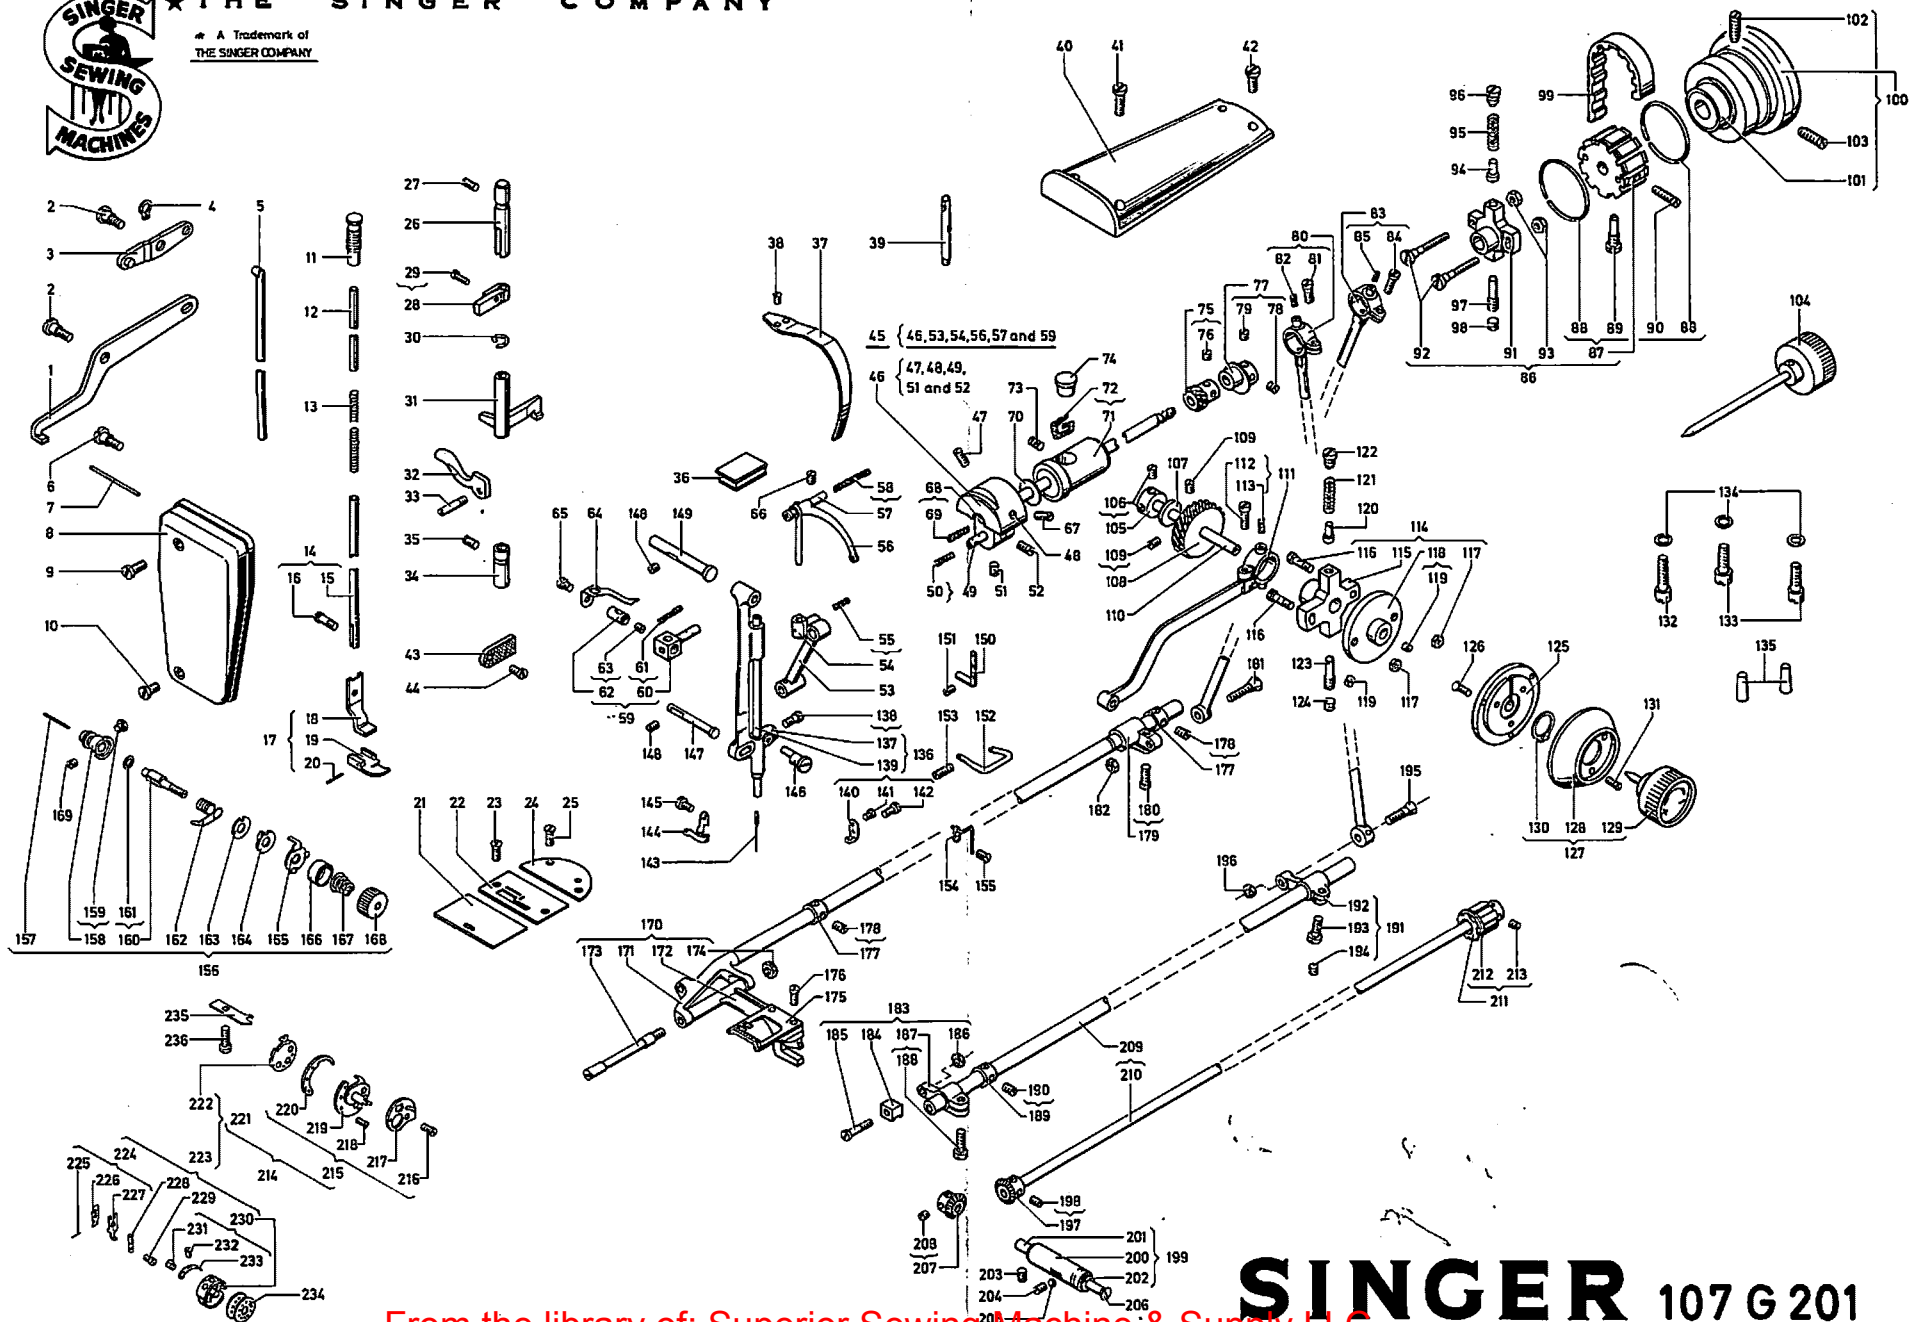


SINGER 107 G 201

From the library of: Superior Sewing Machine & Supply LLC

Copyright © 1966 by THE SINGER COMPANY Form 30-311 G (466) Printed in WESTERN GERMANY

Accessories
FOR
107 G 201

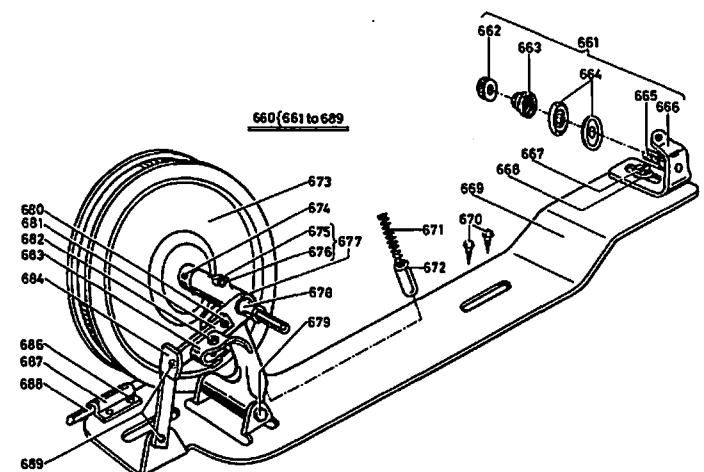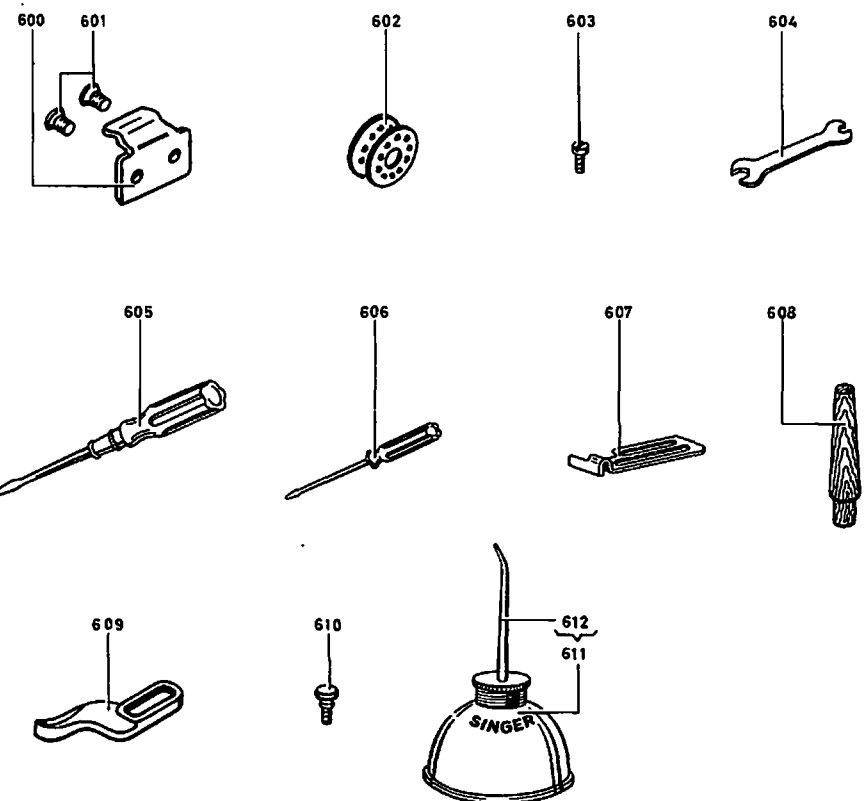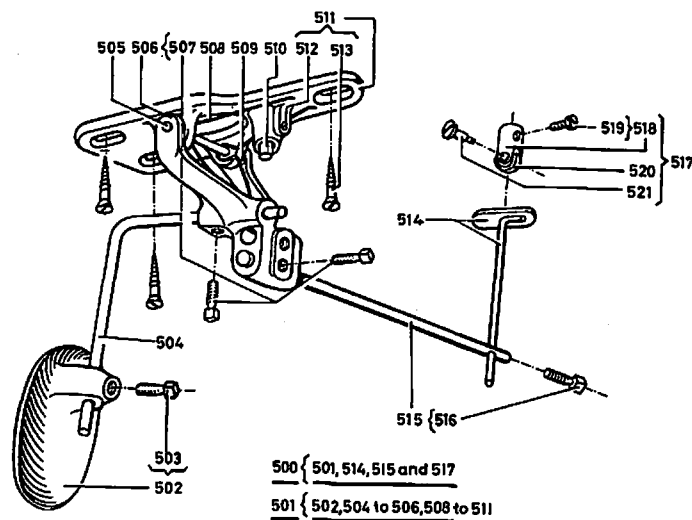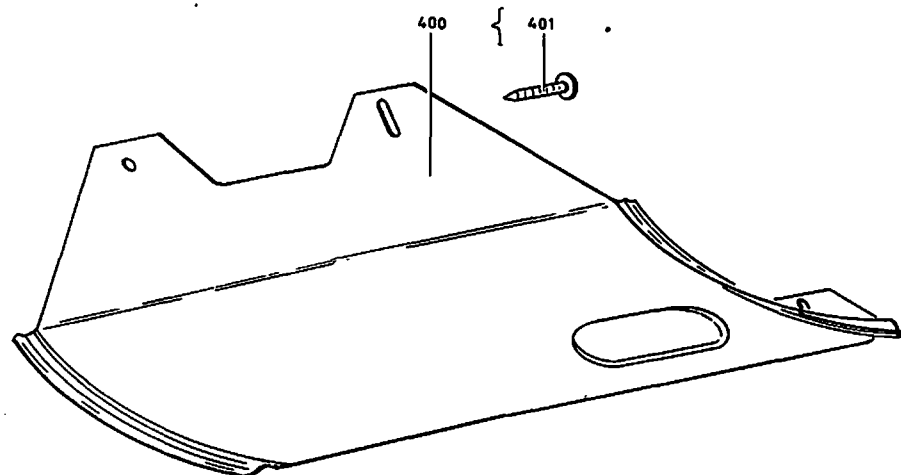

List of Parts 107 G 2

Illustr. Ref. No.	Part No.	Name	Components	Illustr. Ref. No.	Part No.	Name	Components
1	508158	Knee Lifter Lifting Lever		45	210883	Needle Bar Crank Cpl.	202399, 202400,
2	200262-850	Knee Lifter Lifting Lever Hinge Screw (2)					210543, 210585,
3	508159	Knee Lifter Connection Lever					210725, 244059
4	502830	Knee Lifter Connection Lever Lifting Rod Grip		46	210725	Needle Bar Crank with	200335, 200374,
		Ring					200383, 200432,
5	508161	Knee Lifter Connection Lever Lifting Rod					202333
6	200260-850	Presser Bar Lifting Releasing Lever Bracket		47	200335-850	Needle Bar Crank Set Screw	
		Guide Screw		48	200432-850	Needle Bar Crank Position Screw	
7	508182	Tension Release Plunger		49	202333	Needle Bar Connection Link Stud with	202299
8	508154	Face Plate		50	202299	Needle Bar Connection Link Stud Oil	
9	1186-850	Face Plate Screw				Packing (Wick)	
10	164-850	Face Plate Screw		51	200383-850	Needle Bar Connecting Link Stud Set Screw	
11	200492-850	Presser Bar Thumb Screw (Pressure Regulating)		52	200374-833	Needle Bar Connecting Link Stud Set Screw	
12	202346	Presser Bar Spring Stop Rod		53	210543	Needle Bar Connecting Link	
13	202343	Presser Bar Spring (Light)		54	202399	Take-up Lever Driving Stud with	244071
14	202335	Presser Bar Cpl.	200074, 244033	55	244071	Take-up Lever Driving Stud Oil Packing (Wick)	
15	244033	Presser Bar (Hollow)		56	244059	Take-up Lever	
16	200074-850	Presser Foot Screw		57	202400	Take-up Lever Hinge Stud with	202423
17	210562	Presser Foot (Hinged) Cpl.	203027, 210620, 230795	58	202423	Take-up Lever Hinge Stud Oil Packing (Wick)	
				59	210585	Needle Bar Connecting Stud with	210544, 210882
18	210620	Presser Foot Shank		60	210544	Needle Bar Connecting Stud with	202299
19	203027	Presser Foot Plate		61	202299	Needle Bar Connecting Stud Oil Packing (Wick)	
20	230795	Presser Foot Hinge Pin		62	210882	Needle Bar Connecting Stud Swivel with	200387
21	210616	Bed Slide (Front)		63	200387-833	Needle Bar Set Screw	
22	210596	Throat Plate, 53 Needle Hole, for Needle		64	210591	Take-up (Auxiliary)	
		Sizes 12 and 13		65	200132-850	Take-up (Auxiliary) Screw	
23	200577-833	Throat Plate Screw (2)		66	200383-850	Take-up Lever Hinge Stud Set Screw	
24	210505	Bed Plate (Back)		67	200388-850	Needle Bar Crank Lock Screw	
25	200577-833	Bed Plate (Back) Screw (2)		68	202249	Arm Shaft with	224392
26	202337	Pressure Bar Position Guide		69	224392	Arm Shaft Oil Packing (Wick)	
27	200352-833	Pressure Bar Position Guide Set Screw		70	203172	Needle Bar Crank Friction Washer	
28	202338	Pressure Bar Position Guide Lever with	200086	71	207080	Arm Shaft Bushing (Front) with	202244
29	200086-833	Pressure Bar Position Guide Lever Pinch Screw		72	202244	Arm Shaft Bushing (Front) Oil Packing (Wick)	
30	206608	Pressure Bar Lifting Releasing Lever Bracket		73	200341-850	Arm Shaft Bushing (Front) Set Screw	
		Spring		74	508167	Arm Shaft Bushing (Front) Oil Packing Plug	
31	508157	Presser Bar Lifting Releasing Lever Bracket		75	210700	Needle Vibrator Pinion (Spiral) with	200382 (Two)
32	202554	Presser Bar Lifter		76	200382-833	Needle Vibrator Pinion Set Screw (2)	
33	200653-850	Presser Bar Lifter Hinge Screw		77	202307	Feed Lifting Connection Eccentric with	200382, 200437
34	207072	Presser Bar Bushing		78	200382-833	Feed Lifting Connection Eccentric Set Screw	
35	200352	Presser Bar Bushing Set Screw		79	200437-850	Feed Lifting Connection Eccentric Position Screw	
36	508168	Needle Bar Frame Cap		80	202306	Feed Lifting Connection with	200054, 203101
37	508169	Take-up Lever Guard		81	200054-850	Feed Lifting Connection Pinch Screw	
38	500350-850	Take-up Lever Guard Screw (2)		82	203101	Feed Lifting Connection Oil Packing (Wick)	
39	202412	Thread Guide (On Top of Arm)		83	202297	Feed Driving Connection with	200054, 203101
40	508153	Arm Cover (Top)		84	200054-850	Feed Driving Connection Pinch Screw	
41	1186-850	Arm Cover (Top) Screw (2)		85	203101	Feed Driving Connection Oil Packing (Wick)	
42	164-850	Arm Cover (Top) Screw (2)		86	203098	Feed Driving Eccentric Regulating Bracket Cpl.	Two 201014,
43	202401	Take-up Lever Oiling Felt					Two 201525,
44	200132-850	Take-up Lever Oiling Felt Screw					203300, 202635
							200327, 200602,
							Two 202253

Illustr. Ref. No.	Part No.	Name	Components	Illustr. Ref. No.	Part No.	Name	Components
87	202635	Arm Shaft Connection Belt Pulley with		120	202301	Needle Vibrator Eccentric Regulating Bracket	
88	202253	Arm Shaft Connection Belt Pulley Spring		121	202595	Needle Vibrator Eccentric Regulating Bracket	
89	200602-850	Arm Shaft Connection Belt Pulley Position Screw		122	200607-850	Needle Vibrator Eccentric Regulating Bracket	
90	200327-833	Arm Shaft Connection Belt Pulley Set Screw		123	200429-850	Needle Vibrator Regulating Screw	
91	202300	Feed Driving Eccentric Regulating Bracket		124	200383-850	Needle Vibrator Regulating Screw Check Screw	
92	201014-850	Feed Driving Eccentric Regulating Bracket Stop		125	508170	Needle Vibrator Gear Shaft Flange	
93	201525-805	Feed Driving Eccentric Regulating Bracket Stop		126	200566-850	Needle Vibrator Gear Shaft Flange Screw (3)	
94	202301	Feed Driving Eccentric Regulating Bracket Plunger		127	508171	Needle Vibrator Regulating Adjusting Cpl.	508172, 508173, 508174
95	202595	Feed Driving Eccentric Regulating Bracket Plunger		128	508172	Needle Vibrator Gear Shaft Flange Cover	
96	200607-850	Feed Driving Eccentric Regulating Bracket Plunger		129	508173	Bight Amplitude Adjusting Knob	
97	200429-850	Feed Driving Eccentric Regulating Screw		130	508174	Bight Amplitude Adjusting Knob Retainer	
98	200383-850	Feed Driving Eccentric Regulating Screw Check		131	500345-850	Needle Vibrator Gear Shaft Flange Cover Screw (3)	
99	224400	Arm Shaft Connection Belt (Reinforced Neoprene)		132	200004-805	Arm Screw	
100	508150	Machine Pulley with	141566, 141567, 272142	133	200010-805	Arm Screw (2)	
101	272142	Arm Shaft Ball Bearing (Back) (Double Shielded		134	202005	Arm Screw Washer (3)	
102	141566-833	Machine Pulley Position Screw		135	204235	Arm Position Pin (2)	
103	141567-833	Machine Pulley Set Screw		136	210542	Needle Bar Frame Cpl.	210546, 224317 200070
104	508155	Feed Regulating Spindle Insert		137	210546	Needle Bar Frame with	
105	210559	Needle Vibrator Gear Shaft Collar with	Two 200378	138	200070-850	Needle Bar Frame Pitman Eccentric Stud Set Screw	200125, 200175, 249270
106	200378-850	Needle Vibrator Gear Shaft Collar Set Screw (2)		139	224317	Needle Bar Cpl.	
107	203172	Needle Vibrator Gear Friction Washer		140	249270	Needle Bar Thread Guide	
108	210699	Needle Vibrator Gear (Spiral) with	Two 200382	141	200175-850	Needle Thread Guide Screw	
109	200382-833	Needle Vibrator Gear Set Screw (2)		142	200125-833	Needle Set Screw	
110	508164	Needle Vibrator Gear Shaft		143	Cat.		
111	210556	Needle Bar Frame Pitman with	200054, 202277	144	1901-12-2	Needle with Supplementary Shoulder	
112	200054-850	Needle Bar Frame Pitman Pinch Screw		145	224387	Thread Guide	
113	202277	Needle Bar Frame Pitman Oil Packing (Wick)		146	200172-850	Thread Guide Screw	
114	210550	Needle Vibrating Eccentric Regulating Bracket		147	210557	Needle Bar Frame Pitman Eccentric Stud	
		with	202300, 210552, Two 200256, Two 201525	148	210547	Needle Bar Frame Guide Stud	
115	202300	Needle Vibrator Eccentric Regulating Bracket		149	200334-833	Needle Bar Frame Hinge and Guide Stud Set	
116	200256-850	Needle Vibrator Eccentric Regulating Bracket		150	508163	Needle Bar Frame Hinge Stud	
117	201525-805	Needle Vibrator Eccentric Regulating Bracket		151	240034	Thread Retainer	
118	210552	Needle Vibrator Eccentric Regulating Bracket		152	51220-833	Thread Retainer Set Screw	
119	200383-850	Needle Vibrator Eccentric Regulating Bracket	Two 200383	153	508166	Thread Guide (Upper)	
		Flange Screw (2)		154	51220-833	Thread Guide (Upper) Screw	
				155	210593	Thread Guide (Lower)	
				156	200582-850	Thread Guide (Lower) Screw	
					508179	Tension Cpl.	202410, 223438, 244048, 244049, 263547, 263548, 263552, 350613, 500795, 508180

List of Parts 107 G 21

Illustr. Ref. No.	Part No.	Name	Components	Illustr. Ref. No.	Part No.	Name	Components
157	263548	Tension Releasing Pin		201	241397	Hook Shaft (Hollow)	
158	263552	Thread Controller Spring Regulator with	50305	202	350314-850	Hook Shaft Position Screw	
159	50305-850	Thread Stud Set Screw		203	200335-850	Hook Shaft Bushing Set Screw	
160	350613-806	Tension Stud with	263550	204	200363-833	Hook Shaft Bushing Set Screw	
161	263550	Tension Stud Washer		205	244084	Hook Shaft Bushing Set Screw Packing (Fiber)	
162	202410	Thread Controller Spring		206	200915-850	Hook Position Screw	
163	244048	Tension Disc (Back)		207	210614	Hook Driving Bevel Pinion (Steel) 24 Teeth with	Two 200378
164	244049	Tension Disc (Front)		208	200378-850	Hook Driving Bevel Pinion Set Screw (2)	
165	263547	Tension Release Washer		209	508183	Feed Lifting Rock Shaft (Hollow) with	210535
166	508180	Tension Spring Washer		210	210535	Hook Driving Bevel Pinion Shaft	
167	223438	Tension Spring		211	202661	Hook Driving Bevel Pinion Shaft Belt Pulley with	202324, Two 200378
168	500795	Tension Thumb Nut		212	202324	Hook Driving Bevel Pinion Shaft Belt Pulley	
169	140321-850	Thread Controller Spring Regulator Set Screw	210512, 200641, 201522, 202623	213	200378-850	Spring Flange	
170	210513	Feed Bar with		214	224443	Hook Driving Bevel Pinion Shaft Belt Pulley	
171	202623	Feed Driving Rock Shaft		215	224433	Set Screw (2)	
172	210512	Feed Bar				Hook and Bobbin Case Cpl.	224433, 224442
173	200641-803	Feed Bar Hinge Screw (Driving)				Hook with	224432, 200145, 210536, 210541, Three 200596
174	201522-805	Feed Bar Hinge Screw (Driving) Nut		216	200145-850	Hook Washer Needle Guard Screw	
175	210516	Feed Dog		217	210541	Hook Washer Needle Guard	
176	200106-850	Feed Dog Screw (2)	Two each 200383	218	200596-850	Hook Gib Screw (3)	
177	202625	Feed Driving Rock Shaft Stop Collar (2) with		219	224432	Hook (Sewing)	
178	200383-850	Feed Driving Rock Shaft Stop Collar		220	210536	Hook Gib	
179	202624	Feed Driving Connection Crank with	200038	221	224442	Bobbin Case Cpl.	210846, 224441
180	200038-850	Feed Driving Connection Crank Pinch Screw		222	210846	Bobbin Case Base	
181	200545-850	Feed Driving Connection Hinge Screw		223	224441	Bobbin Case Cap Cpl.	200964, 210736, 210914, 224440
182	201518-805	Feed Driving Connection Hinge Screw Nut	210514, 200253, 201531, 202276	224	210914	Bobbin Case Latch with	210913, 210734, 210735
183	210515	Feed Bar Slide Block Crank with		225	210735	Bobbin Case Latch Palcrum Pin	
184	202276	Feed Bar Slide Block		226	210734	Bobbin Case Latch Lever	
185	200253-850	Feed Bar Slide Block Hinge Screw		227	210913	Bobbin Case Latch	
186	201531-805	Feed Bar Slide Block Hinge Screw Nut	200035	228	210736	Bobbin Case Latch Spring	
187	210514	Feed Bar Slide Block Crank with		229	200964-833	Bobbin Case Latch Stop Screw	
188	200035-850	Feed Bar Slide Block Crank Pinch Screw	Two 200383	230	224440	Bobbin Case Cap with	200592, 201016, 263110
189	202625	Feed Lifting Rock Shaft Stop Collar with		231	200592-850	Bobbin Case Tension Spring Screw	
190	200383-850	Feed Lifting Rock Shaft Stop Collar Set Screw (2)	200050, 200378, 210645	232	201016-850	Bobbin Case Tension Spring Regulating Screw	
191	210589	Feed Lifting Connection Crank with		233	263110	Bobbin Case Tension Spring	
192	210645	Feed Lifting Connection Crank		234	263099	Bobbin	
193	200050-850	Feed Lifting Connection Crank Pinch Screw		235	210764	Bobbin Case Stop	
194	200378-850	Feed Lifting Connection Crank Set Screw	Two 200382	236	200076-850	Bobbin Case Stop Screw	
195	200545-850	Feed Lifting Connection Hinge Screw					
196	201518-805	Feed Lifting Connection Hinge Screw Nut					
197	210615	Hook Shaft Bevel Gear (Steel) 24 Teeth with	241336, 241397, 350314				
198	200382-833	Hook Shaft Bevel Gear Set Screw (2)					
199	241398	Hook Shaft Bushing with					
200	241336	Hook Shaft Bushing					

Illustr. Ref. No.	Part No.	Name	Components	Illustr. Ref. No.	Part No.	Name	Components
Accessories							
400	228212	Drip Pan (Short) with	Four 3/4 Inch Wire Nails	606	228476	Screwdriver (Bobbin Case)	
401	—	Drip Pan Wire Nails, 3/4 Inch Long (4)		607	231337	Cloth Guide	
500	228710	Knee Lifter Rock Lever Cpl.	228364, 228365, 228370, 228388, 228709 228707, 228363, 228367, 228386, 228455, 228713 350231 Two 350231	608	41400	Machine Rest Pin (Wood)	
501	228709	Knee Lifter Rock Lever Bracket with		609	226999	Guide (For Shoe Work)	
502	228364	Knee Lifter Rock Lever Knee Plate with		610	200459-850	Guide Thumb Screw	
503	350231	Knee Lifter Rock Lever Knee Plate Set Screw		611	120342	Oiler (Copper Plated) with	120343
504	228388	Knee Lifter Rock Lever Knee Plate Arm		612	120343	Oiler Spout (3 1/2 Inch)	
505	228363	Knee Lifter Rock Lever Hinge Pin		UNIVERSAL BOBBIN WINDER			
506	228713	Knee Lifter Rock Lever with		660	259462	Universal Bobbin Winder Cpl.	200056, 200082, 200113, 200299, 202478, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428, 259429, 259662, 259930 Two each 225459 and Wood Screw 13710, 201572, 225461, Two 2102
507	350231-803	Knee Lifter Rock Lever Extension Set Screw and Knee Lifter Rock Lever Knee Plate Arm Set Screw (2)		661	225462	Bobbin Winder Tension Bracket	
508	228455	Knee Lifter Rock Lever Position Spring		662	201572-819	Bobbin Winder Tension Stud Thumb Nut	
509	228386	Knee Lifter Rock Lever Spring		663	13710	Bobbin Winder Tension Spring	
510	228367	Knee Lifter Rock Lever Stop Stud		664	2102	Bobbin Winder Tension Disc (2)	
511	228707	Knee Lifter Rock Lever Bracket with		665	201499-819	Bobbin Winder Tension Stud	
512	200347-830	Knee Lifter Rock Lever Stop Stud Set Screw	200347, Three Wood Screws 7/8 Inch No. 12	666	225461	Bobbin Winder Tension Bracket with	201499
513	—	Wood Screw 7/8 Inch (Long) No. 12 (3)		667	200082-804	Bobbin Winder Tension Bracket Screw	
514	228365	Knee Lifter Rock Lever Rod		668	228026	Bobbin Winder Tension Bracket Screw Washer	
515	228370	Knee Lifter Rock Lever Extension with		669	259662	Bobbin Winder and Tension Bracket Base	
516	200530-803	Knee Lifter Rock Lever Rod Set Screw	200530	670	—	Bobbin Winder Wood Screw (3/4 Inch No. 12, RHB) (2)	
517	224413	Needle Vibrator Operating Rod Roller Cpl.	200270, 224411, 224412	671	225456	Bobbin Winder Frame Spring Plunger	
518	224412	Needle Vibrator Operating Rod Roller Bracket with	200113	672	225455	Bobbin Winder Frame Spring	
519	200113-850	Needle Vibrator Operating Rod Roller Bracket Set Screw		673	259930	Bobbin Winder Pulley with 457	
520	224411	Needle Vibrator Operating Rod Roller		674	457-830	Bobbin Winder Pulley Set Screw	
521	200270-850	Needle Vibrator Operating Rod Roller Hinge Screw		675	244071	Bobbin Winder Frame Oil Packing (Wick)	
600	210844	Bed Hinge Connection (2)		676	259660	Bobbin Winder Frame Oil Well Washer	
601	200060-850	Bed Hinge Connection Screw (4)		677	225453	Bobbin Winder Frame with	244071, 259660
602	263099	Bobbin (2)		678	225381	Bobbin Winder Spindle	
603	200157-850	Attachment Screw		679	225454	Bobbin Winder Frame Hinge Pin	
604	222554	Wrench (Steel)		680	200299-819	Bobbin Winder Stop Latch Trip Lever Hinge Screw	
605	225498	Screwdriver (7 1/4 Inch)		681	202478	Bobbin Winder Stop Latch Trip Lever	
				682	200056-805	Bobbin Winder Stop Latch Screw	
				683	225444	Bobbin Winder Stop Latch	
				684	225458	Bobbin Winder Stop Latch Thumb Screw	
				685	200113-806	Bobbin Winder Brake Clamp Screw	
				687	259429	Bobbin Winder Brake Clamp	
				688	259428	Bobbin Winder Brake (Leather)	
				689	225459	Bobbin Winder Stop Latch Thumb Lever Hinge Stud (2)	