

SINGER

107W35

Form 3184w
(159)
Printed In U.S.A.

LIST OF PARTS
SINGER** SEWING MACHINE
107w35

THE SINGER MANUFACTURING COMPANY

**A Trademark of THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case) must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

AL	Heat Treated for Toughness.
ALX	Heat Treated for Toughness and Black Oxide.
C	Hardened only.
D	Polished only.
E	Soft, Not polished.
F	Hardened and Polished.
X	Black Oxide, for Iron and Steel.
XC	Hardened and Black Oxide, for Iron and Steel.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series:

1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers.
1501 to 1800, 201501 to 201800 and 351501 to 351800 are Nut Numbers.
1801 to 2000, 201801 to 202000 and 351801 to 352000 are Roller Numbers.
2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering. These Plates are in Form 20500, Illustrations of Parts.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE
FOR
MACHINE NO.107w35
SINGLE NEEDLE. SHORT ARM. ZIG-ZAG.
DROP FEED. LOCK STITCH MACHINE.
PULLER FEED DEVICE.
TRANSVERSE HORIZONTAL AXIS HOOK.
MAXIMUM LENGTH OF STITCH 7 TO THE INCH.
FOR BINDING BLANKETS.

No.	Plate	Name
*210501	-----	Arm with 202135
203087	18930	Arm Cap
200278X	18930	Arm Cap Screw
202248	18930	Arm Cap Screw Washer
203089	18930	Arm Cap Spool Holder Base
203090	18930	Arm Cap Spool Holder Base 203089 with 200089X and 204296
200585X	18930	Arm Cap Spool Holder Base Screw
204296	18930	Arm Cap Spool Holder Wire
200079X	18930	Arm Cap Spool Holder Wire Hinge Screw
203088	18930	Arm Cap and Spool Holder complete, Nos. 203087, 203090 and two 200585X
204235	18929	Arm Position Pin (2)
200004E	18929	Arm Screw
200010E	18929	Arm Screw (2)
202005	18929	Arm Screw Washer (3)
202249	18930	Arm Shaft with 224392
240802	18938	Arm Shaft Bushing (back) with 202244
202244	18930	Arm Shaft Bushing (back) Oil Packing (wick)
200338C	18930	Arm Shaft Bushing (back) Set Screw
207080	18930	Arm Shaft Bushing (front) with 202244
202244	18930	Arm Shaft Bushing (front) Oil Packing (wick)
200502X	18930	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200341C	18930	Arm Shaft Bushing (front) Set Screw
224400	18929	Arm Shaft Connection Belt (reinforced neoprene)
202635	18929	Arm Shaft Connection Belt Pulley with 200327C, 200602C and two 202253
200602C	18929	Arm Shaft Connection Belt Pulley Position Screw
200327C	18929	Arm Shaft Connection Belt Pulley Set Screw
202253	18929	Arm Shaft Connection Belt Pulley Spring Flange
224392	18930	Arm Shaft Oil Packing (wick)

PARTS FOR MACHINE NO.107w35

No.	Plate	Name
*224487	-----	Bed
210505	18935	Bed Plate (back)
200577AL	18935	Bed Plate (back) Screw (2)
210616	16002	Bed Slide (front)
263099	16015	Bobbin
210846	16015	Bobbin Case Base
224440	18940	Bobbin Case Cap with 200592C, 201016C and 263110
224441	18940	Bobbin Case Cap complete, Nos. 200964C, 210736, 210914 and 224440
210913	16015	Bobbin Case Latch
210914	16015	Bobbin Case Latch 210913 with 210734 and 210735
210735	16015	Bobbin Case Latch Fulcrum Pin
210734	16015	Bobbin Case Latch Lever
210736	16015	Bobbin Case Latch Spring
200964C	16015	Bobbin Case Latch Stop Screw
210764	16827	Bobbin Case Stop
200076D	16827	Bobbin Case Stop Screw
263110	16015	Bobbin Case Tension Spring
201016C	17083	Bobbin Case Tension Spring Regulating Screw
200592C	16015	Bobbin Case Tension Spring Screw
224443	18940	Bobbin Case complete, Nos. 210846 and 224441
210681	18934	Face Plate
202135	18934	Face Plate Position Pin
200462X	18934	Face Plate Thumb Screw
210682	18934	Face Plate complete, Nos. 210681, 210684 and two 200137X
210512	16827	Feed Bar
210513	16827	Feed Bar 210512 with 200641C, 201522E and 202623
200641C	16827	Feed Bar Hinge Screw (driving)
201522E	16827	Feed Bar Hinge Screw Nut
202276	16827	Feed Bar Slide Block
210514	16827	Feed Bar Slide Block Crank with 200035E
210515	16827	Feed Bar Slide Block Crank 210514 with 200253C, 201531E and 202276
200035E	16827	Feed Bar Slide Block Crank Pinch Screw
200253C	16827	Feed Bar Slide Block Hinge Screw
201531E	16827	Feed Bar Slide Block Hinge Screw Nut
210516	16857	Feed Dog, for 224485
200106E	16857	Feed Dog Screw (2)
202297	18929	Feed Driving Connection with 200054E and 203101
202624	10760	Feed Driving Connection Crank with 200038C
200038C	10760	Feed Driving Connection Crank Pinch Screw
200545C	18929	Feed Driving Connection Hinge Screw
201518E	18929	Feed Driving Connection Hinge Screw Nut
203101	18929	Feed Driving Connection Oil Packing (wick)
200054E	18929	Feed Driving Connection Pinch Screw
224473	16850	Feed Driving Eccentric Regulating Bracket

PARTS FOR MACHINE NO.107w35

No.	Plate	Name
224474	16850	Feed Driving Eccentric Regulating Bracket 224473 with 202635, two each 201014C and 201525E
201014C	16850	Feed Driving Eccentric Regulating Bracket Hinge Screw
201525E	16850	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut
202301	16850	Feed Driving Eccentric Regulating Bracket Plunger
237523	16850	Feed Driving Eccentric Regulating Bracket Plunger Spring
200607C	16850	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
201014C	16850	Feed Driving Eccentric Regulating Bracket Stop Screw
201525E	16850	Feed Driving Eccentric Regulating Bracket Stop Screw Nut
200429F	16850	Feed Driving Eccentric Regulating Screw
200383C	16850	Feed Driving Eccentric Regulating Screw Check Screw
202623	16827	Feed Driving Rock Shaft
202625	16827	Feed Driving Rock Shaft Stop Collar with two 200383C (2)
200383C	16827	Feed Driving Rock Shaft Stop Collar Set Screw
202306	18929	Feed Lifting Connection with 200054E and 203101
*210645	-----	Feed Lifting Connection Crank
210589	16827	Feed Lifting Connection Crank 210645 with 200050C and 200378C
200050C	16827	Feed Lifting Connection Crank Pinch Screw
200378C	16827	Feed Lifting Connection Crank Set Screw
202307	18930	Feed Lifting Connection Eccentric with 200382ALX and 200437C
200437C	18930	Feed Lifting Connection Eccentric Position Screw
200382ALX	18930	Feed Lifting Connection Eccentric Set Screw
200545C	18929	Feed Lifting Connection Hinge Screw
201518E	18929	Feed Lifting Connection Hinge Screw Nut
203101	18929	Feed Lifting Connection Oil Packing (wick)
200054E	18929	Feed Lifting Connection Pinch Screw
210531	16827	Feed Lifting Rock Shaft (hollow) and Hook Driving Shaft Bearing
202625	16827	Feed Lifting Rock Shaft Stop Collar with two 200383C
200383C	16827	Feed Lifting Rock Shaft Stop Collar Set Screw
202310	18930	Feed Regulating Spindle with 202311, 202443 and 202619
*202311	-----	Feed Regulating Spindle Head
202443	18930	Feed Regulating Spindle Head Pin
202619	18930	Feed Regulating Spindle Head Position Pin
224475	16856	Foot Lifter Lifting Lever
224476	16856	Foot Lifter Lifting Lever Extension
200082D	16856	Foot Lifter Lifting Lever Extension Screw (2)
200242X	16856	Foot Lifter Lifting Lever Hinge Screw

PARTS FOR MACHINE NO.107w35

No.	Plate	Name
224486	16856	Foot Lifter Lifting Lever Rod
233361	16856	Foot Lifter Lifting Lever Spring
200273D	16856	Foot Lifter Lifting Lever Spring Screw
233390	16856	Foot Lifter Lifting Lever Washer
224432	18908	Hook (sewing) with 203101 and 263134
224433	18908	Hook 224432 with 200145C, 210536, 210541 and three 200596F
224443	18940	Hook and Bobbin Case complete, Nos.224433 and 224442
210614	16827	Hook Driving Bevel Pinion (steel) 24 teeth, with two 200378C
200378C	16827	Hook Driving Bevel Pinion Set Screw
210535	16827	Hook Driving Bevel Pinion Shaft
202661	16827	Hook Driving Bevel Pinion Shaft Belt Pulley with 202324 and two 200378C
200378C	16827	Hook Driving Bevel Pinion Shaft Belt Pulley Set Screw
202324	16827	Hook Driving Bevel Pinion Shaft Belt Pulley Spring Flange
210536	18908	Hook Gib
200596F	18908	Hook Gib Screw
203101	18908	Hook Oil Wick
263134	18908	Hook Oiling Felt
200915F	16827	Hook Position Screw
210537	16827	Hook Shaft (hollow)
210615	16827	Hook Shaft Bevel Gear (steel) 24 teeth, with two 200382ALX
200382ALX	16827	Hook Shaft Bevel Gear Set Screw
210539	16827	Hook Shaft Bushing
210621	16827	Hook Shaft Bushing 210539 with 210537 and 350314F
200335C	16827	Hook Shaft Bushing Set Screw
200363AL	16827	Hook Shaft Bushing Set Screw
244084	19103	Hook Shaft Bushing Set Screw Packing (fibre)
350314F	16827	Hook Shaft Position Screw
210541	18908	Hook Washer Needle Guard
200145C	18908	Hook Washer Needle Guard Screw
244090	18930	Machine Pulley (disc) (aluminum alloy casting) "V" belt groove (outside diam.of belt groove 2.9 in.) with 350540C and 350541C
350540C	18930	Machine Pulley Position Screw
350541C	18930	Machine Pulley Set Screw
224317	18932	Needle Bar with 200125ALX, 200175X and 249270
210543	18932	Needle Bar Connecting Link
202333	18932	Needle Bar Connecting Link Stud with 202299
202299	18932	Needle Bar Connecting Link Stud Oil Packing (wick)
200383C	18932	Needle Bar Connecting Link Stud Set Screw
200374AL	18932	Needle Bar Connecting Link Stud Set Screw
210544	18932	Needle Bar Connecting Stud with 202299

PARTS FOR MACHINE NO.107w35

No.	Plate	Name
210585	18932	Needle Bar Connecting Stud 210544 with 210882
202299	18932	Needle Bar Connecting Stud Oil Packing (wick)
210882	18932	Needle Bar Connecting Stud Swivel with 200387C
210725	18932	Needle Bar Crank with 200335C, 200374AL, 200383C, 200428C and 202333
203172	18932	Needle Bar Crank Friction Washer
200428C	18932	Needle Bar Crank Position Screw
200335C	18932	Needle Bar Crank Set Screw
210883	18932	Needle Bar Crank complete, Nos. 202399, 202400, 210543, 210585, 210725 and 244059
210546	18932	Needle Bar Frame with 200070C
210542	18932	Needle Bar Frame 210546 with 224317
210547	18932	Needle Bar Frame Guide Stud
200334C	18932	Needle Bar Frame Guide Stud Set Screw
210548	18932	Needle Bar Frame Hinge Stud
200334C	18932	Needle Bar Frame Hinge Stud Set Screw
210556	16828	Needle Bar Frame Pitman with 200054E and 202277
210557	16828	Needle Bar Frame Pitman Eccentric Stud
200070C	18932	Needle Bar Frame Pitman Eccentric Stud Set Screw
202277	16828	Needle Bar Frame Pitman Oil Packing (wick)
200054E	16828	Needle Bar Frame Pitman Pinch Screw
200387C	18932	Needle Bar Set Screw
249270	18932	Needle Bar Thread Guide
200175X	18932	Needle Bar Thread Guide Screw
200125ALX	18932	Needle Set Screw
202300	16828	Needle Vibrator Eccentric Regulating Bracket
210550	16828	Needle Vibrator Eccentric Regulating Bracket 202300 with 210552, two each 200256C and 201525E
210551	16828	Needle Vibrator Eccentric Regulating Bracket Cover Plate
200566D	16828	Needle Vibrator Eccentric Regulating Bracket Cover Plate Screw (4)
210552	16828	Needle Vibrator Eccentric Regulating Bracket Flange with two 200383C
200383C	16828	Needle Vibrator Eccentric Regulating Bracket Flange Screw
200256C	16828	Needle Vibrator Eccentric Regulating Bracket Hinge Screw
201525E	16828	Needle Vibrator Eccentric Regulating Bracket Hinge Screw Nut
202301	16828	Needle Vibrator Eccentric Regulating Bracket Plunger
202595	16828	Needle Vibrator Eccentric Regulating Bracket Plunger Spring
200607C	16828	Needle Vibrator Eccentric Regulating Bracket Plunger Spring Stop Screw
200256C	16828	Needle Vibrator Eccentric Regulating Bracket Stop Screw

PARTS FOR MACHINE NO.107w35

No.	Plate	Name
201525E	16828	Needle Vibrator Eccentric Regulating Bracket Stop Screw Nut
210699	16828	Needle Vibrator Gear (spiral) with two 200382ALX
203172	16828	Needle Vibrator Gear Friction Washer
200382ALX	16828	Needle Vibrator Gear Set Screw
210558	16828	Needle Vibrator Gear Shaft
210559	16828	Needle Vibrator Gear Shaft Collar with two 200378C
200378C	16828	Needle Vibrator Gear Shaft Collar Set Screw
210700	18930	Needle Vibrator Pinion (spiral) with two 200382ALX
200382ALX	18930	Needle Vibrator Pinion Set Screw
200429F	16828	Needle Vibrator Regulating Screw
200383C	16828	Needle Vibrator Regulating Screw Check Screw
233175	16828	Needle Vibrator Regulating Spindle with 210554
210554	16828	Needle Vibrator Regulating Spindle Spring (flat)
244033	16855	Presser Bar (hollow)
202335	16855	Presser Bar 244033 with 200074F
207072	16855	Presser Bar Bushing (lower)
200352AL	16855	Presser Bar Bushing (lower) Set Screw
224478	16855	Presser Bar Bushing (upper)
200475X	18923	Presser Bar Bushing (upper) Thumb Set Screw
244084	18923	Presser Bar Bushing (upper) Thumb Set Screw Packing (fibre)
237004	16855	Presser Bar Lifter
200653C	16855	Presser Bar Lifter Hinge Screw
210789	16855	Presser Bar Lifting Releasing Lever Bracket
200260E	16855	Presser Bar Lifting Releasing Lever Bracket Guide Screw
206608	16855	Presser Bar Lifting Releasing Lever Bracket Spring
202337	16855	Presser Bar Position Guide
202338	16855	Presser Bar Position Guide Lever with 200086ALX
200086ALX	16855	Presser Bar Position Guide Lever Pinch Screw
200352AL	16855	Presser Bar Position Guide Set Screw
202343	16855	Presser Bar Spring
236106	16855	Presser Bar Spring Stop Rod
201497E	16855	Presser Bar Thumb Screw (pressure regulating)
224479	16857	Presser Foot
200074F	19103	Presser Foot Screw
224488	18941	Puller Feed Clutch (brake)
224489	18941	Puller Feed Clutch (brake) 224488 with three 263574
224490	18941	Puller Feed Clutch Cap
201457C	18941	Puller Feed Clutch Cap Retaining Screw Stud
200337C	16851	Puller Feed Clutch Cap Retaining Screw Stud Screw
201531E	16851	Puller Feed Clutch Cap Retaining Screw Stud Screw Nut
200106E	18941	Puller Feed Clutch Cap Screw
224491	18941	Puller Feed Clutch (drive)

PARTS FOR MACHINE NO.107w35

No.	Plate	Name
224492	18941	Puller Feed Clutch (drive) 224491 with three 263574
268442	18941	Puller Feed Clutch (drive) Connection with 1036AL and 350636C
350636C	18941	Puller Feed Clutch (drive) Connection Pinch Screw
1036AL	18941	Puller Feed Clutch (drive) Connection Set Screw
224480	16851	Puller Feed Clutch Driving Connection
200919C	16851	Puller Feed Clutch Driving Connection Hinge Screw
201522E	16851	Puller Feed Clutch Driving Connection Hinge Screw Nut
237007	16851	Puller Feed Clutch Driving Crank with 200035E
201201F	16851	Puller Feed Clutch Driving Crank Hinge Screw
1518E	16851	Puller Feed Clutch Driving Crank Hinge Screw Nut
225585	16851	Puller Feed Clutch Driving Crank Hinge Screw Washer
200035E	16851	Puller Feed Clutch Driving Crank Pinch Screw
131717	18941	Puller Feed Clutch Roller
68152	18941	Puller Feed Clutch Roller Plunger
224494	18941	Puller Feed Clutch Roller Spring
263574	18941	Puller Feed Clutch Roller Wear Plate
224495	18941	Puller Feed Clutch Sleeve with two 50375F
50375F	18941	Puller Feed Clutch Sleeve Set Screw
131725	18941	Puller Feed Clutch Washer
224496	18941	Puller Feed Clutch complete, Nos.131725, 201457C, 224489, 224490, 224492, 224495, 268442, three 200106E, six each 68152, 131717 and 224494
237016	16851	Puller Feed Cover Plate
200570E	16851	Puller Feed Cover Plate Screw (2)
237075	18941	Puller Feed Roll (lower) (rubber faced) with 200374AL and 200396C
200396C	16851	Puller Feed Roll (lower) Position Screw
200374AL	16851	Puller Feed Roll (lower) Set Screw
224498	18941	Puller Feed Roll (lower) Shaft with 262715 and 350431E
237019	16851	Puller Feed Roll (lower) Shaft Bracket (2)
250397	16851	Puller Feed Roll (lower) Shaft Bracket Position Pin (4)
200039C	16851	Puller Feed Roll (lower) Shaft Bracket Screw (4)
205797	16851	Puller Feed Roll (lower) Shaft Collar with 200386C
200386C	16851	Puller Feed Roll (lower) Shaft Collar Set Screw
262715	18941	Puller Feed Roll (lower) Shaft Oil Packing (wick)
330431E	18941	Puller Feed Roll (lower) Shaft Oil Stop Screw
224483	16853	Puller Feed Roll (upper) (rubber faced)
237021	16853	Puller Feed Roll (upper) Bar
236111	16853	Puller Feed Roll (upper) Bar Bracket with 200347AL, 200352AL and 237015
200256D	16853	Puller Feed Roll (upper) Bar Bracket Screw
200352AL	16853	Puller Feed Roll (upper) Bar Bracket Set Screw
237023	16853	Puller Feed Roll (upper) Bar Bracket Support with 200054E
200054E	16853	Puller Feed Roll (upper) Bar Bracket Support Pinch Screw

PARTS FOR MACHINE NO.107w35

No.	Plate	Name
237037	16853	Puller Feed Roll (upper) Bar Lifter
200550C	16853	Puller Feed Roll (upper) Bar Lifter Hinge Screw
237015	16853	Puller Feed Roll (upper) Bar Lifter Stop Pin
224484	16853	Puller Feed Roll (upper) Bar Lifting Bracket with 200958C
200958C	16853	Puller Feed Roll (upper) Bar Lifting Bracket Set Screw
236112	16853	Puller Feed Roll (upper) Bar Position Guide
200347AL	16853	Puller Feed Roll (upper) Bar Position Guide Set Screw
236113	16853	Puller Feed Roll (upper) Bar Position Guide Lever with 200054E
200054E	16853	Puller Feed Roll (upper) Bar Position Guide Lever Pinch Screw
237026	16853	Puller Feed Roll (upper) Bar Spring
237027	16853	Puller Feed Roll (upper) Bar Spring Washer
201458D	16853	Puller Feed Roll (upper) Bar Thumb Screw
237028	16853	Puller Feed Roll (upper) Bracket with 200374AL, 200378C and 200396C
200396C	16853	Puller Feed Roll (upper) Bracket Position Screw
200374AL	16853	Puller Feed Roll (upper) Bracket Set Screw
237029	16853	Puller Feed Roll (upper) Hinge Stud
200378C	16853	Puller Feed Roll (upper) Hinge Stud Set Screw
210591	18932	Take-up (auxiliary) for Swivel
200132E	18932	Take-up (auxiliary) Screw
244059	18932	Take-up Lever
202399	18932	Take-up Lever Driving Stud with 244071
244071	17075	Take-up Lever Driving Stud Oil Packing (wick)
202400	18932	Take-up Lever Hinge Stud with 202423
202423	18932	Take-up Lever Hinge Stud Oil Packing (wick)
200383C	18932	Take-up Lever Hinge Stud Set Screw
202401	16846	Take-up Lever Oiling Felt
200132E	16846	Take-up Lever Oiling Felt Screw
244048	18933	Tension Disc (back)
244049	18933	Tension Disc (front)
202404	16846	Tension Release Plunger
244061	18933	Tension Release Washer
223438	18933	Tension Spring
263106	18933	Tension Spring Washer
200625F	18933	Tension Stud with 204925
200061ALX	18933	Tension Stud Set Screw
204925	18933	Tension Stud Washer
201572X	18933	Tension Thumb Nut
244062	18933	Tension complete, Nos. 200625F, 201572X, 202410, 223438, 244048, 244049, 244061 and 263106
202410	18933	Thread Controller Spring
241443	18933	Thread Controller Spring Stop

PARTS FOR MACHINE NO.107w35

No.	Plate	Name
200132E	18933	Thread Controller Spring Stop Screw
210593	18933	Thread Guide (lower)
224387	16818	Thread Guide
200172X	16818	Thread Guide Screw
202412	18930	Thread Guide (on top of Arm)
210592	18933	Thread Guide (upper)
200582X	18933	Thread Guide Screw (2)
240335	18933	Thread Retainer
210683	16856	Thread Retainer Bracket with 200397X
200137X	16856	Thread Retainer Bracket Screw
210684	16856	Thread Retainer Bracket complete, Nos. 210683, 210957, 210958, 210992 and 210993
210993	16856	Thread Retainer Sleeve
210992	16856	Thread Retainer Spring
210957	16856	Thread Retainer Stud
210958	16856	Thread Retainer Stud Collar
200368X	18933	Thread Retainer Stud Set Screw
200397X	16856	Thread Retainer Stud Set Screw
224485	16857	Throat Plate, 53 needle hole, for needle sizes 12 and 13, for 210516
200577AL	16857	Throat Plate Screw (2)

ACCESSORIES

No.	Plate	Name
200157X	18936	Attachment Screw
263099	16015	Bobbin (2)
228391	16859	Drip Pan with four wood screws 1/2 in., No. 5, R. H. B.
203058	16856	Foot Lifter Lifting Lever Rod Coupling with 200530C
200530C	16856	Foot Lifter Lifting Lever Rod Coupling Set Screw
41564	18450	Machine Rest Pin (wood) (4 in. long)
135x7	-----	Needles, six, size 16
120342	16783	Oiler (copper plated) with 120343
120343	16783	Oiler Spout, 3-1/2 in. long
228476	17118	Screw Driver (Bobbin Case)
225498	16783	Screw Driver (7-1/4 in. long)
225554	16783	Wrench (steel)
239352	19053	Wrench (3/16 in. Hex.)

BASE (WOOD)

228390	16859	Base Fastening Angle Piece
227369	16859	Machine Hinge Plate (left or right) with two wood screws 1-1/4 in., No. 14
225589	16859	Machine Rest on Cushion (leather)
228389	16859	Base (wood) with two each 225589, 227369, three each 228390, wood screws 1 in., No. 9 and six wood screws 3/4 in., No. 9

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR "V" BELT DRIVE

259428	17853	Bobbin Winder Brake (leather)
259429	17853	Bobbin Winder Brake Clamp

ACCESSORIES

No.	Plate	Name
200113F	17853	Bobbin Winder Brake Clamp Screw
225453	17853	Bobbin Winder Frame with 244071 and 259660
225454	17853	Bobbin Winder Frame Hinge Pin
244071	17853	Bobbin Winder Frame Oil Packing (wick)
259660	17853	Bobbin Winder Frame Oil Well Washer
225455	17853	Bobbin Winder Frame Spring
225456	17853	Bobbin Winder Frame Spring Plunger
259461	17853	Bobbin Winder Pulley with 200380C
200380C	17853	Bobbin Winder Pulley Set Screw
225381	17853	Bobbin Winder Spindle
225444	17853	Bobbin Winder Stop Latch
200056E	17853	Bobbin Winder Stop Latch Screw
225458	17853	Bobbin Winder Stop Latch Thumb Lever
225459	17853	Bobbin Winder Stop Latch Thumb Lever Hinge Stud
225459	17853	Bobbin Winder Stop Latch Thumb Lever Joint Stud
202478	17853	Bobbin Winder Stop Latch Trip Lever
200299X	17853	Bobbin Winder Stop Latch Trip Lever Hinge Screw
225461	17853	Bobbin Winder Tension Bracket with 201499X
200082D	17853	Bobbin Winder Tension Bracket Screw
228026	17853	Bobbin Winder Tension Bracket Screw Washer
2102	17853	Bobbin Winder Tension Disc
13710	17853	Bobbin Winder Tension Spring
201499X	17853	Bobbin Winder Tension Stud
201572X	17853	Bobbin Winder Tension Stud Thumb Nut
225462	17853	Bobbin Winder Tension Bracket complete, Nos. 13710, 201572X, 225461 and two 2102
259662	17853	Bobbin Winder and Tension Bracket Base
259462	17853	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200113F, 200299X, 202478, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428, 259429, 259461, 259662, two each 225459 and wood screws 3/4 in., No. 12, R.H.B.

Note: Bobbin Winder 259462 is furnished with this Machine unless Bobbin Winder 259431 is specified on order.

FOOT LIFTER

227952	17656	Foot Lifter Lever with 227954
228430	17656	Foot Lifter Lever Chain, 30 in. long, with 202784
227954	17656	Foot Lifter Lever Chain Hook (lower)
202784	17656	Foot Lifter Lever Chain Hook (upper)
225016	17656	Foot Lifter Lever Hinge Pin
227939	17656	Foot Lifter Lever Stand with two wood screws 1 in., No. 12

ACCESSORIES

228440	17656 Foot Lifter Lever complete, Nos. 225016, 227939, 227952 and 228430 (Other Foot Lifter parts are listed with parts of Machine Head)
--------	---

RIBBON LEADER

259494	16860 Ribbon Leader with 200838E
259495	16860 Ribbon Leader Bracket
200184B	16860 Ribbon Leader Screw
259496	16860 Ribbon Leader Tension Adjusting Slide with 200465F and 201601C
200465F	16860 Ribbon Leader Tension Adjusting Slide Adjusting Thumb Screw
201601C	16860 Ribbon Leader Tension Adjusting Slide Adjusting Thumb Screw Lock Nut
201557B	16860 Ribbon Leader Tension Adjusting Slide Thumb Nut
200838E	16860 Ribbon Leader Tension Adjusting Slide Thumb Nut Screw Stud
259497	16860 Ribbon Leader complete, Nos. 200184B, 201557B, 259494 to 259496 and two wood screws 3/4 in., No. 9, R. H. B.

RIBBON REEL

259498	16861 Ribbon Reel Adjusting Collar with 200119D
200119D	16861 Ribbon Reel Adjusting Collar Set Screw
226199	16861 Ribbon Reel Disc (6 in. diam.) with 225980
226198	16861 Ribbon Reel Disc (9 in. diam.) with 225980
225980	16861 Ribbon Reel Disc Base
259499	16861 Ribbon Reel Spindle
259658	16861 Ribbon Reel Spindle Base with 200383C
200383C	16861 Ribbon Reel Spindle Set Screw
227116	16861 Ribbon Reel Tension Collar
227210	16861 Ribbon Reel Tension Collar 227116 with 200731E and 227327
200731E	16861 Ribbon Reel Tension Collar Wing Screw
227327	16861 Ribbon Reel Tension Spring
259501	16861 Ribbon Reel complete (for bench) Nos. 226198, 226199, 227210, 259498, 259499, 259658 and three wood screws 7/8 in., No. 12