SINGER 108W21

Form 3126W (555) Printed In U.S.A.

LIST OF PARTS
SINGER* SEWING MACHINE
108w21

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case) must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A Hardened, Polished, Nickel Plated and Buffed.
- AL Heat Treated for Toughness.
- ALX Heat Treated for Toughness and Black Oxide.
- B Polished, Nickel Plated and Buffed.
- C Hardened only.
- D Polished only.
- E Soft, Not polished.
- F Hardened and Polished.
- J Nickel Plated only.
- R Merlized.
- X Black Oxide, for Iron and Steel.
- XC Hardened and Black Oxide, for Iron and Steel.
- Y Black Nickel Plated only.
- Z Chromium Plated.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series:

1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers.

1501 to 1800, 201501 to 201800 and 350501 to 351800 are Nut Numbers.

1801 to 2000, 201801 to 202000 and 350801 to 352000 are Roller Numbers.

2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS

FOR

MACHINE NO.108w21

UNISON FEED

FOR BINDING SHOE TONGUES, BUTTON STRAPS

DRESS SHIELDS, ETC.

No.	Plate	Name
*208521		Arm with 202135
203091	13481	Arm Cap
200278X	13481	
202248	13481	
203089	13481	Arm Cap Spool Holder Base
203090	13481	Arm Cap Spool Holder Base 203089 with 200079X and 204296
200585X	13481	Arm Cap Spool Holder Base Screw
204296	13481	Arm Cap Spool Holder Wire
200079X	13481	Arm Cap Spool Holder Wire Hinge Screw
203092	13481	Arm Cap and Spool Holder complete, Nos. 203090, 203091 and two 200585X
204235	13487	Arm Position Pin (2)
200010E	13487	
202005	13487	Arm Screw Washer (3)
208523	13481	Arm Shaft
240802	13481	Arm Shaft Bushing (back) with 202244
202244	13481	Arm Shaft Bushing (back) Oil Packing (wick)
200338C	13481	Arm Shaft Bushing (back) Set Screw
207080	13481	Arm Shaft Bushing (front) with 202244
202244	13481	Arm Shaft Bushing (front) Oil Packing (wick)
200502X	13481	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200338C	13481	
224513	13482	
224514	13482	,
		and two 202253
200602C	13482	
200327C	13482	4
202253	13482	7 1 6 6
208573	13481	
200335C	13481	
*224701		
224702	13487	Bed (cylinder) End Cover
233320	13454	
233302		Bed Plate 233320 with 200074X, 200305B, 200319D,
		200952X, 201492F, 206840, 208125, 226467, 233303 to 233305 and 233321
200157E	131.56	Bed Plate Screw (2)
233303	13456	
201492F	13456	Binder Adjusting Lever Hinge Screw
2012/21	* 2 * 2 0	2 made 11ajabing Devel minge below

No.	Plate	Name
226467	13456	Binder Adjusting Lever Hinge Screw Washer
233304	13456	Binder Adjusting Slide
233305	13456	Binder Adjusting Slide Friction Spring
202090	13457	Binder Adjusting Slide Friction Spring Position Pin
200074X	11672	Binder Adjusting Slide Friction Spring Screw
208125	13456	Binder Adjusting Slide Link
200305B	13456	Binder Adjusting Slide Link Hinge Screw (long)
200952X	13457	Binder Adjusting Slide Link Hinge Screw (short)
233321	13459	Binder Tension Spring
200319D	13459	Binder Tension Spring Screw
206840	13457	Binder Tension Spring Screw Washer
202265	13491	Bobbin
*202806		Bobbin Case
202267	13491	Bobbin Case Latch
*202056		Bobbin Case Latch Pin
202269	13491	Bobbin Case Latch Plunger
202270	13491	Bobbin Case Latch Spring
202716	13491	Bobbin Case Tension Spring
200984C	13491	Bobbin Case Tension Spring Regulating Screw
200594C	13491	Bobbin Case Tension Spring Screw
202533	13491	Bobbin Case complete, Nos. 200594C, 200984C, 202056,
200707		202267, 202269, 202270, 202716 and 202806
208535	13487	Face Plate
202135	13487	Face Plate Position Pin
200462X	13487	Face Plate Thumb Screw
208538	13482	Feed Driving Connection (bronze) with 202277
202277 208539	13482 13482	Feed Driving Connection Oil Packing (wick)
224530	13482	Feed Driving Connection Stud (eccentric) with 224530 Feed Driving Connection Stud Oil Packing (wick)
200362C	13482	Feed Driving Connection Stud Off Facking (wick)
208331	13482	Feed Driving Eccentric Regulating Bracket
224515	13482	Feed Driving Eccentric Regulating Bracket 208331 with.
	13101	224514, two each 201014C and 201525E
201014C	13482	Feed Driving Eccentric Regulating Bracket Hinge Screw
201525E	13482	Feed Driving Eccentric Regulating Bracket Hinge Screw
		Nut
202301	13482	Feed Driving Eccentric Regulating Bracket Plunger
202595	13482	Feed Driving Eccentric Regulating Bracket Plunger
		Spring
200607C	13482	Feed Driving Eccentric Regulating Bracket Plunger
0-1-1-		Spring Stop Screw
201014C	13482	Feed Driving Eccentric Regulating Bracket Stop Screw
201525E	13482	Feed Driving Eccentric Regulating Bracket Stop Screw
900190F	121.00	Nut
200429F	13482	Feed Driving Eccentric Regulating Screw
200383C	13482	Feed Driving Eccentric Regulating Screw Check Screw
208540 *202311	13481	Feed Regulating Spindle with 202311, 202443 and 202619 Feed Regulating Spindle Head
202443	13481	Feed Regulating Spindle Head Pin
202443	13481	Feed Regulating Spindle Head Position Pin
224709	13487	Foot Lifter Lifting Lever
200262X	13487	Foot Lifter Lifting Lever Hinge Screw
		<u> </u>

No.	Plate	Name
244086		Hook (sewing) with 203101 and two 462AL
244087		
244088		Hook and Bobbin Case complete, Nos. 202533 and 244087
206852	13491	
200614C	13491	Hook Gib Hinge Screw
200596F	13491	Hook Gib Screw
203101	13491	
462AL	13491	Hook Set Screw
244200	13491	Hook Shaft
202321	13482	Hook Shaft Bushing (back)
200346C	13482	
202322	13482	
200346C	13482	
224516	13482	
201018C	13482	Hook Shaft Connection Belt Pulley Set Screw
202324	13482	Hook Shaft Connection Belt Pulley Spring Flange
224392	13482	
244014	13375	
200145C	13491	
208545		Lifting Bell Crank
208546	13484	G
208547	13484	
202277	13484	
201012C	13484	G
200374C	13484	
200996C	13484	
233306	13456	
200074F	13485	
244090	18913	
2505105		belt groove (outside diam.of belt groove 2.9 in.) with 350540C and 350541C
350540C	18913	
350541C	18913	
208526		Needle Bar with 200141F
208549	13487	Needle Bar and Needle Plate Carrier Frame with 200362C, 200997C and 208550
224741	13487	
210983	13487	Position Pin
200054E	13487	Needle Bar and Needle Plate Carrier Frame Hinge Plate Screw (4)
350308C	13487	
200998C	13487	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud
208550	13487	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Bushing (split)
200997C	13487	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Bushing Position Screw
202277	13487	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Oil Packing (wick)
208551	13484	Needle Bar Connecting Link

```
No.
              Plate
                                      Name
208552
              13484 Needle Bar Connecting Stud with 200086C and 202330
              13484 Needle Bar Connecting Stud Oil Packing (wick)
202330
              13484 Needle Bar Connecting Stud Pinch Screw
200086C
208553
              13484 Needle Bar Crank with 200335C, 200374C, 200428C and
                       201012C
208582
              13484 Needle Bar Crank 208553 with 200996C, 202398, 202400,
                       208545 to 208547, 208551, 208552, 208555, 208557,
                       208562 and 208563
              13484 Needle Bar Crank Friction Washer
203172
              13484 Needle Bar Crank Position Screw
200428C
200335C
              13484 Needle Bar Crank Set Screw
              13489 Needle Plate, 50 needle hole, for needle sizes 14 and 15
224704
201387F
              13489 Needle Plate Screw
              13482 Needle Plate Slide Plate (adjustable)
224705
              13451 Needle Plate Slide Plate Screw
200054E
200141F
              13484 Needle Set Screw
224527
              13482 Oil Leader (brass) (for back hook shaft bearing)
              13485 Presser Bar with 200074F
208566
208567
              13485 Presser Bar Bushing
200352C
              13485 Presser Bar Bushing Set Screw
208313
              13485 Presser Bar Lifter
              13485 Presser Bar Lifter Hinge Screw
200653C
208555
              13484 Presser Bar Lifting Bracket with 200054E
200975F
              13485 Presser Bar Lifting Bracket Guide Screw
              13482 Presser Bar Lifting Bracket Pinch Screw
200054E
208556
              13485 Presser Bar Spring
200494X
              13485 Presser Bar Thumb Screw (pressure regulating)
              13485 Presser Bar Thumb Screw Thumb Set Screw
200475X
244084
              17050 Presser Bar Thumb Screw Thumb Set Screw Packing
202397
              13484
                     Take-up (auxiliary)
200842E
              13484 Take-up (auxiliary) Screw
202398
              13484 Take-up Lever
208557
              13484 Take-up Lever Driving Stud with 202277
202277
              13484 Take-up Lever Driving Stud Oil Packing (wick)
202400
              13484 Take-up Lever Hinge Stud with 202423
202423
              13484 Take-up Lever Hinge Stud Oil Packing (wick)
200383C
              13484 Take-up Lever Hinge Stud Set Screw
              13484
208558
                     Take-up Lever Oil Guard with 223655 and 224572
200161X
              13484 Take-up Lever Oil Guard Screw
              13485 Take-up Lever Oil Leader
208568
233710
                     Take-up Lever Oil Leader Packing (wick)
              13484 Take-up Lever Oiling Felt
223655
              13484 Take-up Lever Oiling Felt Rivet
224572
244048
              13486 Tension Disc (back)
              13486 Tension Disc (front)
13485 Tension Release Plunger
244049
202404
              13451 Tension Release Slide
233709
208560
              13485 Tension Release Slide Spring
244061
              13486 Tension Release Washer
202407
              13486 Tension Spring
263106
              13486 Tension Spring Washer
```

No.	Plate	Name
200625F	13486	Tension Stud with 204925
200061C	13486	Tension Stud Set Screw
204925	13486	Tension Stud Washer
201572X	13486	Tension Thumb Nut
244062	13486	Tension complete, Nos. 200625F, 201572X, 202407, 202410, 244048, 244049, 244061 and 263106
202410	13486	
202411	10252	Thread Controller Spring Stop
200132E	13486	
208574	13486	
202412	13481	
202415		Thread Guide
200582X		Thread Guide Screw
200397X	13486	
200366X	13486	Thread Retainer Stud Set Screw
240335	18912	Thread Retainer
233308		Throat Plate
200577AL	13487	Throat Plate Screw (2)
208562		Vibrating Presser Bar
208563	13484	Vibrating Presser Bar Connecting Link
202277		Vibrating Presser Bar Oil Packing (wick)
233307	13456	Vibrating Presser Foot, 46 needle hole, with 201015F
201015F	13489	Vibrating Presser Foot Pinch Screw

ACCESSORIES

No.	Plate	Name
202265	11671	Bobbin (2)
228476	18287	Screw Driver (Bobbin Case)
51078		Machine Bolt (4)
6055		Machine Bolt Washer (4)
135×1		Needles, six, size 16
120342		Oiler with 120343
120343	12345	Oiler Spout, 3-1/2 in.long
225498	12345	Screw Driver (7-1/4 in.long)
225554	12345	Wrench (steel)

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR "V" BELT DRIVE

259428	18312	Brake (leather)
259429	18312	•
200113F	18312	*
225453	18312	
225454	18312	Frame Hinge Pin
202277	18312	Frame Oil Packing (wick)
259660		Frame Oil Well Washer
225455		Frame Spring
225456		Frame Spring Plunger
259461		
200380C	18312	•
225381	18312	•
225444	18312	±
2000 56 E	18312	Stop Latch Screw
225458	18312	Stop Latch Thumb Lever
225459	18312	Stop Latch Thumb Lever Hinge Stud
225459	18312	Stop Latch Thumb Lever Joint Stud
202478	18312	Stop Latch Trip Lever
200299X	18312	Stop Latch Trip Lever Hinge Screw
225461		<u> </u>
200082D		Tension Bracket Screw

BOBBIN WINDER

No.	Plate	Name
228026	18312	Tension Bracket Screw Washer
2102	18312	Tension Disc
13710	18312	Tension Spring
201499X	18312	Tension Stud
2015 72 X	18312	Tension Stud Thumb Nut
225462	18312	Bobbin Winder Tension Bracket complete, Nos. 13710,
		201572X, 225461 and two 2102
259662	18312	Bobbin Winder and Tension Bracket Base
259462	18312	Universal Bobbin Winder complete, Nos. 200056E,
		200082D, 200113F, 200299X, 202478, 225381, 225444,
		225453 to 225456, 225458, 225462, 228026, 259428,
		259429, 259461, 259662, two each 225459 and wood
		screws 3/4 in., No. 12, R. H. B.

TREADLE, SINGLE FOOT (right)

228424	10797	Treadle with 200526C
228425	10797	Treadle Chain, 38 in. long with 202784
202784	13457	Treadle Chain Hook
200526C	13457	Treadle Set Screw
228426	13457	Treadle Shaft
228427	13457	Treadle Spring
228428	10797	Treadle Stand with two wood screws 7/8 in., No. 12
228429		
		228428

BINDERS

233309	13459	Binder Base with 233310 and 350115E
233310	13459	Binder Base Position Pin
201493D	13459	Binder Base Thumb Screw
233311	13459	Binder Guide (lower)
201566B	13459	Binder Guide (lower) Thumb Nut
233312	13459	Binder Guide (lower) Thumb Nut Washer
233313	13459	
350115E	13457	Binder Guide (upper) Screw Stud
201560D	13459	Binder Guide (upper) Thumb Nut
233315		Binder complete, for hat binding, for binding from
		5/16 to $1-1/4$ in. wide (adjustable) Nos. 201493D,
		201560D, 201566B, 233309, 233311 to 233313 and
		233322
233316	13459	Binder Base with 233310

BINDERS

No.	Plate	Name
233310	13459	Binder Base Position Pin
201493D	13459	Binder Base Thumb Screw
233317	13459	Binder Guide (lower)
233322	13457	Binder Guide (lower) Index Washer
233318	13459	Binder Guide (upper)
201560D	13459	Binder Guide Thumb Nut
233319		Binder complete, for binding hats with binding "wide
		under" or "wide over" (adjustable) for binding from
		1/2 to $1-1/4$ in.wide, Nos. 201493D, 201560D and
		233316 to 233318