

SINGER

111W103

MACHINE NO. 111w103

2-21-61

240545

MACHINE NO. 111w103

*240173	Arm with 202135
240069	Arm Cap with 244071
244071	Arm Cap Oil Wick
200278X	Arm Cap Screw
202248	Arm Cap Screw Washer
204235	Arm Position Pin (2)
200004E	Arm Screw (3)
202005	Arm Screw Washer (3)
240102	Arm Shaft with 200357E and 224392
240802	Arm Shaft Bushing (back) with 202244
202244	Arm Shaft Bushing (back) Oil Packing (wick)
200338C	Arm Shaft Bushing (back) Set Screw
207080	Arm Shaft Bushing (front) with 202244
202244	Arm Shaft Bushing (front) Oil Packing (wick)
200502X	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200338C	Arm Shaft Bushing (front) Set Screw
224103	Arm Shaft Connection Belt
224104	Arm Shaft Connection Belt Pulley with 200327C, 200602C and two 202253
200602E	Arm Shaft Connection Belt Pulley Position Screw
200327C	Arm Shaft Connection Belt Pulley Set Screw
202253	Arm Shaft Connection Belt Pulley Spring Flange
224113	Arm Shaft Connection Belt Timing Collar with 200113F
200113F	Arm Shaft Connection Belt Timing Collar Set Screw
224139	Arm Shaft Connection Belt Timing Plate
200164X	Arm Shaft Connection Belt Timing Plate Screw (2)

MACHINE NO. 111w103

224392	Arm Shaft Oil Packing (wick)
200357E	Arm Shaft Oil Packing Thumb Screw
*240103	Bed
54897	Bed Oil Cup
240003	Bed Slide (back)
223811	Bed Slide (back) Stop
223812	Bed Slide (back) Stop Spring
240004	Bed Slide (front)
203470	Bobbin
*233764	Bobbin Case
203648	Bobbin Case Latch
*202056	Bobbin Case Latch Pin
203473	Bobbin Case Latch Plunger
203474	Bobbin Case Latch Spring
241674	Bobbin Case Oiling Felt
241675	Bobbin Case Oiling Felt Retainer
350405C	Bobbin Case Oiling Felt Retainer Screw
224004	Bobbin Case Opener
224005	Bobbin Case Opener Lever with 201349C, 201542C and 203101
201349C	Bobbin Case Opener Lever Driving Screw Stud
201542C	Bobbin Case Opener Lever Driving Screw Stud Nut
203101	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick)
265088	Bobbin Case Opener Lever Hinge Stud with 202277
202277	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)

MACHINE NO. 111w103

200364C	Bobbin Case Opener Lever Hinge Stud Set Screw
223623	Bobbin Case Opener Lever Link
200118D	Bobbin Case Opener Screw
203214	Bobbin Case Tension Spring
200984C	Bobbin Case Tension Spring Regulating Screw
200594C	Bobbin Case Tension Spring Screw
203216	Bobbin Case Washer (cloth)
233765	Bobbin Case complete, Nos. 200594C, 200984C, 202056, 203214, 203216, 203473, 203474, 203648, 233764, 241674, 241675 and two 350405C
240179	Face Plate with 201650X and 350432XC
202135	Face Plate Position Pin
200473X	Face Plate Thumb Screw
240037	Feed Bar
240038	Feed Bar 240037 with 224052, 225837 and 350197E
350393C	Feed Bar Hinge Screw (driving)
201518E	Feed Bar Hinge Screw Nut
240112	Feed Dog, 40 needle hole, for needle sizes 20 and 22
200106E	Feed Dog Screw (2)
237565	Feed Driving Connection with 200049D and 202330
201171C	Feed Driving Connection Hinge Screw
201517E	Feed Driving Connection Hinge Screw Nut
202277	Feed Driving Connection Hinge Screw Oil Packing (wick)
202330	Feed Driving Connection Oil Packing (wick)
200049D	Feed Driving Connection Pinch Screw
237521	Feed Driving Eccentric Regulating Bracket

MACHINE NO. 111w103

237043	Feed Driving Eccentric Regulating Bracket 237521 with 224108 two each 200256C and 201535E
224108	Feed Driving Eccentric Regulating Bracket Flange with 200383C and 200437C
200437C	Feed Driving Eccentric Regulating Bracket Flange Position Screw
200383C	Feed Driving Eccentric Regulating Bracket Flange Set Screw
200256C	Feed Driving Eccentric Regulating Bracket Hinge Screw
201525E	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut
202301	Feed Driving Eccentric Regulating Bracket Plunger
237523	Feed Driving Eccentric Regulating Bracket Plunger Spring
200607C	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
200256C	Feed Driving Eccentric Regulating Bracket Stop Screw
201525E	Feed Driving Eccentric Regulating Bracket Stop Screw Nut
200429C	Feed Driving Eccentric Regulating Screw
200383C	Feed Driving Eccentric Regulating Screw Check Screw
223650	Feed Driving Rock Shaft
240031	Feed Driving Rock Shaft 223650 with 201518E, 240038 and 350393C
223655	Feed Driving Rock Shaft Crank with 200019E
200019E	Feed Driving Rock Shaft Crank Pinch Screw
202625	Feed Driving Rock Shaft Stop Collar with two 200383C (2)
200383C	Feed Driving Rock Shaft Stop Collar Set Screw
224154	Feed Lifting Cam with 201220C
224052	Feed Lifting Cam Fork with 200173D and 223655
350197E	Feed Lifting Cam Fork Screw

MACHINE NO. 111w103

225837	Feed Lifting Cam Fork Screw Washer
223655	Feed Lifting Cam Oiling Felt
200173D	Feed Lifting Cam Oiling Felt Screw
201220C	Feed Lifting Cam Set Screw
224122	Feed Regulating Spindle with 202311, 202443 and 202619
*202311	Feed Regulating Spindle Head
202443	Feed Regulating Spindle Head Pin
202619	Feed Regulating Spindle Head Position Pin
*240041	Hook (sewing)
240042	Hook 240041 with 203525, 224025, two each 200590X and 201253F
240207	Hook and Bobbin Case complete, Nos. 233765 and 240042
224019	Hook Bushing (lower) (bronze)
200364C	Hook Bushing (lower) Set Screw
224020	Hook Bushing (upper) (bronze)
200446C	Hook Bushing (upper) Position Screw
223867	Hook Driving Gear (spiral) with 200362C and 201222C
201222C	Hook Driving Gear Position Screw
200362C	Hook Driving Gear Set Screw
240167	Hook Driving Pinion (spiral) with 200382C and 201220C
200382C	Hook Driving Pinion Set Screw
201220C	Hook Driving Pinion Set Screw
224022	Hook Driving Pinion Thrust Washer
240017	Hook Driving Shaft
224111	Hook Driving Shaft Bushing (back) with 202244
202244	Hook Driving Shaft Bushing Oil Packing (wick)

MACHINE NO. 111w103

237529	Hook Driving Shaft Bushing (front)
200327C	Hook Driving Shaft Bushing Set Screw (2)
*240045	Hook Driving Shaft Connection Belt Pulley with 202253 and 240049
*240046	Hook Driving Shaft Connection Belt Pulley Driving Flange with two 201254C
240047	Hook Driving Shaft Connection Belt Pulley Driving Flange Locking Plunger
240048	Hook Driving Shaft Connection Belt Pulley Driving Flange Locking Plunger Spring
240049	Hook Driving Shaft Connection Belt Pulley Driving Flange Locking Plunger Spring Socket
201254C	Hook Driving Shaft Connection Belt Pulley Driving Flange Set Screw
240050	Hook Driving Shaft Connection Belt Pulley Safety Clutch complete, Nos. 240045 and 240048
202253	Hook Driving Shaft Connection Belt Pulley Spring Flange
203525	Hook Gib
201253F	Hook Gib Screw
223850	Hook Saddle with 200009E
224024	Hook Saddle 223850 with 200364C, 200446C, 224019 and 224020
223681	Hook Saddle Bearing
200335C	Hook Saddle Bearing Set Screw
240018	Hook Saddle Oil Guard
240019	Hook Saddle Oil Guard Felt
200160D	Hook Saddle Oil Guard Screw (2)
200009E	Hook Saddle Pinch Screw
200006E	Hook Saddle Screw
225585	Hook Saddle Screw Washer

MACHINE NO. 111w103

240177	Hook Saddle complete, Nos. 200118D, 200364C, 223623, 224004, 224005, 224022, 224024, 240167, 240207 and 265088
224025	Hook Washer
200590X	Hook Washer Screw
237837	Knee Lifter Connection Lever
200262X	Knee Lifter Connection Lever Hinge Screw
223684	Knee Lifter Connection Lever Lifting Rod with 202302
202302	Knee Lifter Connection Lever Lifting Rod Cotter Pin
206628	Knee Lifter Connection Lever Lifting Rod Spring
227227	Knee Lifter Connection Lever Lifting Rod Spring Collar with 200113F
200113F	Knee Lifter Connection Lever Lifting Rod Spring Collar Set Screw
240175	Knee Lifter Lifting Lever
200262X	Knee Lifter Lifting Lever Hinge Screw
208545	Lifting Bell Crank
200996C	Lifting Bell Crank Cap Screw
240125	Lifting Bell Crank Link
350172C	Lifting Bell Crank Link Screw Stud
201524E	Lifting Bell Crank Link Screw Stud Nut
240160	Lifting Eccentric with 200382C and 200398C
240126	Lifting Eccentric Connection
240171	Lifting Eccentric Connection Crank with 200029E and 210933
210933	Lifting Eccentric Connection Crank Oil Packing (wick)
200029E	Lifting Eccentric Connection Crank Pinch Screw
200398C	Lifting Eccentric Position Screw

MACHINE NO. 111w103

200382C	Lifting Eccentric Set Screw
240135	Lifting Presser Foot, for cording and general upholstery
200074	Lifting Presser Foot Screw
240136	Lifting Rock Shaft with 201524E and 350172C
240174	Lifting Rock Shaft Bushing (2)
241561	Machine Pulley (disc) (belt groove 2-3/4 in. diam.) with 200382C and 200335C
200328C	Machine Pulley Position Screw
200335C	Machine Pulley Set Screw
240169	Needle Bar with 200125F, 200175D and 240170
202552	Needle Bar Connecting Link
264718	Needle Bar Connecting Link Oil Guard
200161D	Needle Bar Connecting Link Oil Guard Screw
202333	Needle Bar Connecting Link Stud with 202254
202254	Needle Bar Connecting Link Stud Oil Packing (wick)
200374C	Needle Bar Connecting Link Stud Set Screw
200383C	Needle Bar Connecting Link Stud Set Screw
208552	Needle Bar Connecting Stud with 200086C and 202330
202330	Needle Bar Connecting Stud Oil Packing (wick)
200086C	Needle Bar Connecting Stud Pinch Screw
202692	Needle Bar Crank with 200335C, 200374C, 200383C, 200428C and 202333
240178	Needle Bar Crank 202692 with 202399, 202400, 202552, 208552 and 241518
203172	Needle Bar Crank Friction Washer
200428C	Needle Bar Crank Position Screw
200335C	Needle Bar Crank Set Screw

MACHINE NO. 111w103

240138	Needle Bar Rock Frame
210910	Needle Bar Rock Frame Hinge Stud with 202277
202277	Needle Bar Rock Frame Hinge Stud Oil Packing (wick)
200347C	Needle Bar Rock Frame Hinge Stud Set Screw
202666	Needle Bar Rock Frame Position Bracket
200098F	Needle Bar Rock Frame Position Bracket Screw
223690	Needle Bar Rock Frame Rock Shaft
223691	Needle Bar Rock Frame Rock Shaft 223690 with 200387C and 210920
223692	Needle Bar Rock Frame Rock Shaft Crank with 200029E
223693	Needle Bar Rock Frame Rock Shaft Crank Connection with 202277
200833C	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw
201522E	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw Nut
202277	Needle Bar Rock Frame Rock Shaft Crank Connection Oil Packing (wick)
200029E	Needle Bar Rock Frame Rock Shaft Crank Pinch Screw
202668	Needle Bar Rock Frame Slide Block
210920	Needle Bar Rock Frame Slide Block 202668 with 201141C
201141C	Needle Bar Rock Frame Slide Block Stud
200387C	Needle Bar Rock Frame Slide Block Stud Set Screw
240170	Needle Bar Thread Guide
200175D	Needle Bar Thread Guide Screw
200125F	Needle Set Screw
208566	Presser Bar with 200074F
241535	Presser Bar Bushing (lower)

MACHINE NO. 111w103

207072	Presser Bar Bushing (upper)
200352C	Presser Bar Bushing Set Screw (2)
202554	Presser Bar Lifter
200653C	Presser Bar Lifter Hinge Screw
208555	Presser Bar Lifting Bracket with 200054E
200975F	Presser Bar Lifting Bracket Guide Screw
200054E	Presser Bar Lifting Bracket Pinch Screw
202337	Presser Bar Position Guide
202338	Presser Bar Position Guide Lever with 200086F
200086F	Presser Bar Position Guide Lever Pinch Screw
200352C	Presser Bar Position Guide Set Screw
237836	Presser Bar Spring (flat)
210949	Presser Bar Spring Bracket with 200086C
200086C	Presser Bar Spring Bracket Pinch Screw
201410F	Presser Bar Spring Regulating Screw
200948F	Presser Bar Spring Support Screw
241518	Take-up Lever
202399	Take-up Lever Driving Stud with 202277
202277	Take-up Lever Driving Stud Oil Packing (wick)
202400	Take-up Lever Hinge Stud with 202423
202423	Take-up Lever Hinge Stud Oil Packing (wick)
200363C	Take-up Lever Hinge Stud Set Screw
240023	Tension Bracket with 201224X and 236060
200159F	Tension Bracket Screw
234047	Tension Bracket Screw Socket

MACHINE NO. 111w103

200368X	Tension Bracket Screw Socket Set Screw
240024	Tension Bracket complete, Nos. 13710, 200978X, 201199F, 204271, 223703, 223704, 223706, 237174, 240023, two each 200309E, 201572X and 244048
244048	Tension Disc
236060	Tension Disc Position Pin
223703	Tension Release Lever
235576	Tension Release Lever Rod
200309E	Tension Release Lever Screw
223704	Tension Release Plunger
240141	Tension Release Slide
240142	Tension Release Slide Spring
204271	Tension Release Washer
13710	Tension Spring
201224X	Tension Stud
201572X	Tension Thumb Nut
223706	Thread Controller Disc
200978X	Thread Controller Disc Screw
237174	Thread Controller Spring
242117	Thread Controller Spring Stop
200132E	Thread Controller Spring Stop Screw
201199F	Thread Controller Stud with 204925
200061C	Thread Controller Stud Set Screw
201572X	Thread Controller Stud Thumb Nut
204925	Thread Controller Stud Washer
202412	Thread Guide
224040	Thread Guide

MACHINE NO. 111w103

210955	Thread Guide (upper)
200582X	Thread Guide Screw (3)
241755	Thread Lubricator Oil Pad (felt)
237845	Thread Lubricator Oil Pad Holder
240439	Thread Lubricator Oil Pad Retainer
241758	Thread Lubricator Oil Reservoir
241759	Thread Lubricator Oil Wick
350432XC	Thread Lubricator Screw
201650X	Thread Lubricator Screw Nut
241838	Thread Lubricator Screw Washer
237846	Thread Lubricator complete, Nos. 214838, 237845, 240439, 241755, 241758 and 241759
240034	Thread Retainer
200355X	Thread Retainer Set Screw
240145	Throat Plate
691F	Throat Plate Screw (2)
208562	Vibrating Presser Bar
208563	Vibrating Presser Bar Connecting Link
202277	Vibrating Presser Bar Oil Packing (wick)
240158	Vibrating Presser Foot, 40 needle hole, with 201015F
201015F	Vibrating Presser Foot Pinch Screw

ACCESSORIES

FOR

MACHINE NO. 111w103

200157X	Attachment Screw
200861D	Bed Slide (back) Locking Thumb Screw
203470	Bobbin (5)
225497	Bobbin Case Screw Driver
231337	Cloth Guide
200861D	Cloth Guide Thumb Screw
135x17	Needles six size 24
224121	Drip Pan
12361	Machine Hinge Connection (2)
41400	Machine Rest Pin (wood)
120342	Oiler
225498	Screw Driver complete
225554	Wrench
225382	Bobbin Winder complete
228298	Knee Lifter Rock Lever complete