

LIST OF PARTS



MACHINES

Nos. 114-22 to 114-24

THE SINGER MANUFACTURING COMPANY

INDEX

	PAGE
ATTACHMENTS AND ACCESSORIES	41
MACHINE No. 114-22	7
" " 114-23	18
" " 114-24	29
NUMERICAL LIST OF PARTS	47
OBSOLETE PARTS	45
PROTECTOR	41
STAND	42
STARTING LEVER AND FOOT LIFTER PARTS	42
TABLE BELT GUIDE	43
THREAD UNWINDER	44
TRIMMINGS FOR TABLE 5380	44

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated
- C. Hardened only.
- D. Polished only.
- E. Soft, not Polished.
- F. Hardened and Polished.
- G.
- H. Blued.
- J. Plated only.
- K. Hardened and Plated.
- L. Brass or Gilt.
- M. Oxidized.
- F. Japanned.
- R. Parkerized.

These letters **MUST BE USED** *when* they appear in the list, and **AFTER** the number *as* in the list.


In this series

- 1 to 1500 and 50001 to 51500 are Screw Numbers.
- 1501 to 1800 are Nut Numbers.
- 1801 to 2000 are Roller Numbers.
- 2001 to 50000 and 52001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE FOR

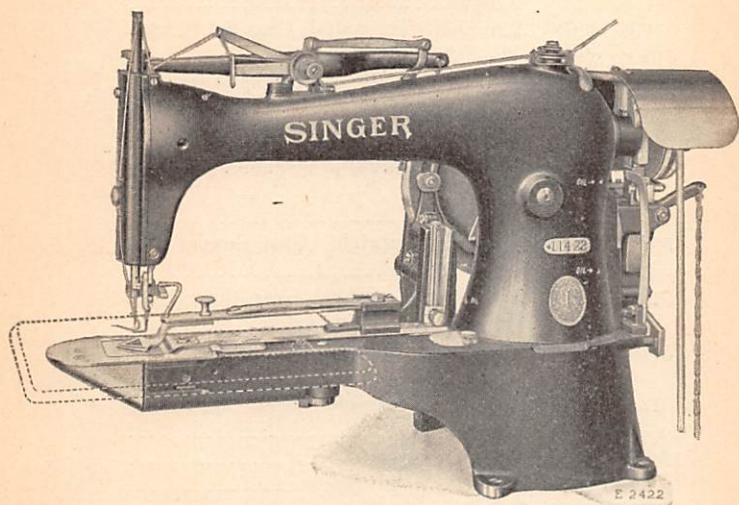

MACHINE No. 114-22

FOR TACKING PAPER TICKETS ON CLOTHING TO DISTINGUISH LOT, COLOR, SIZE, ETC., WHILE IN PROCESS OF MANUFACTURE. MAKES A TRIANGULAR SHAPED TACK CONSISTING OF FOURTEEN STITCHES $\frac{5}{8}$ INCH ACROSS THE BASE AND $\frac{3}{8}$ INCH FROM THE APEX TO THE BASE. THE LONG STITCH IN THE CENTRE OF THE BASE OF THE TRIANGLE INDICATES THE PLACE AT WHICH TO START TO UNRAVEL THE THREAD FOR DETACHING THE TICKET.

SUPERSEDES 114-20 MACHINE.

OBSOLETE

NO.	PLATE	NAME
*59701	—	Arm with 4449, 59767 and two 164E....
16532	6976	" Dowel Pin.....
4448	6976	" Oil Tube for intermediate bearing .
56015	6976	" " " " oiling 59705 and 59706
880E	6998	" Screw.....
59702	6975	" Shaft (horizontal).....
17703	6981	" " " Bushing (back) .
50333C	6998	" " " " "
		Adjusting Screw.....

NO.	PLATE	NAME
1520E	6994	Arm Shaft (horizontal) Bushing (back)
		Adjusting Screw Nut.....
*4449	—	Arm Shaft (horizontal) Bushing (front).
59703	6976	" " " Gear with two
		1036c.....
1036c	6976	Arm Shaft (horizontal) Gear Set Screw.
59704	6976	" " (upright).....
59705	6976	" " " Bushing (lower)...
448c	6992	" " " " " Set
		Screw.....
59706	6976	Arm Shaft (upright) Bushing (upper)...
448c	6992	" " " " " Set
		Screw.....
59707	6976	Arm Shaft (upright) Gear (lower) with
		two 1253c.....
1253c	6976	Arm Shaft (upright) Gear (lower) Set
		Screw.....
59708	6976	Arm Shaft (upright) Gear (upper) with
		two 1253c.....
1253c	6976	Arm Shaft (upright) Gear (upper) Set
		Screw.....
124674	7020	Arm Side Cover.....
190D	6990	" " " Screw.....
18498	6975	Belt Cover.....
59795	6977	" " Bracket with 184E and 59796.
184E	6998	" " " Screw Stud.....
59796	7019	" " " Stud.....
217D	6998	" " " Screw.....
39222	6977	" Shifter.....
39223	6976	" " Clamp.....
1255D	6976	" " " Screw.....
62174	7026	Clamp with 1220E and 17928.....
62258	7026	" Arm with 17714.....
62259	—	" " 62258 with 62260 and two
		201D.....
17710	7026	Clamp Arm Hinge Plate.....
1176J	7026	" " " " Screw.....
62260	7026	" " Hook.....
201D	7026	" " " Screw.....
59710	6979	" Lifter.....
176D	7009	" " Screw.....
17928	7000	" Position Stud.....
17712	7001	" Pressure Spring.....
17713	7026	" " " Bracket.....
1177D	7026	" " " " Screw..
17714	7026	" " " Guide Block....
1178J	7026	" " " Screw.....

NO.	PLATE	NAME
1220E	7000	Clamp Screw Stud.....
1656J	7000	" Thumb Nut.....
62262	—	Clamp complete, Nos. 1656J, 62174 and 62259.....
*62101	—	Cloth Plate.....
62102	6980	" " Guide Block (left).....
742F	6980	" " " " " Screw.....
1547D	6980	" " " " " S c r e w Nut.....
62103	6980	Cloth Plate Guide Block (right).....
3021	6980	" " " " " R i v e t
190D	6990	" " Screw.....
62104	6980	" " Stop.....
26770	6980	" " " Rivet.....
62105	6975	Cloth Plate-complete, Nos. 742F, 1547D, 26770, 62101 to 62104 and two 3021..
*62178	—	Cylinder.....
62189	7032	" Bottom Cover.....
62108	6981	" End Cover.....
62190	—	" " " 62108 with 1034D, 62111 to 62113, 62185, 62189 and four 1477D.....
62185	6980	Cylinder End Cover Bracket.....
62111	6980	" " " " Hinge Pin..
1477D	6980	" " " " Screw.....
62112	6980	" " " Hinge.....
1477D	6980	" " " " Screw.....
62113	6980	" " " Spring.....
1034D	6980	" " " " Screw.....
62114	6980	" Top Cover.....
286D	6980	" " " Thumb Screw.....
59711	6981	Face Plate.....
59712	—	Face Plate complete, Nos. 208D, 9544, 9545, 59711 and two each 229D, 2107 and 9543.....
164D	6990	Face Plate Screw.....
2107	6980	" " Thread Guard.....
229D	7027	" " " " Screw.....
9543	6980	" " " Nipper Disc.....
9544	6980	" " " " " Cover..
208D	6980	" " " " " " " Screw.....
9545	6980	Face Plate Thread Nipper Disc Spring..
62115	6982	Feed Across Connection Adjusting Stud
1649C	6982	" " " " " " Nut (left hand thread).....

NO.	PLATE	NAME
1650c	6982	Feed Across Connection Adjusting Stud Nut (right hand thread).....
63940	—	Feed Across Connecting (lever end) with 42076 and two 896E.....
63941	7027	Feed Across Connection (lever end) 63940 with 55381.....
55381	7027	Feed Across Connecting (lever end) Ball Stud.....
1185c	6982	Feed Across Connection (lever end) Ball Stud Set Screw.....
63942	—	Feed Across Connection (regulator end) with 42076 and two 896E.....
63943	7027	Feed Across Connection (regulator end) 63942 with 63944.....
63944	7027	Feed Across Connection (regulator end) Ball Stud.....
*42076	—	Feed Across Connection Cap.....
896E	7027	" " " " Screw.....
62147	7002	" " Lever with 1185c and 1952.
17737	7004	" " " Hinge Stud.....
160D	6998	" " " " Clamping Screw.....
62149	7001	Feed Across Lever Plate with 62153....
62150	7001	" " " " Cover.....
1094F	6985	" " " " Screw.....
55300	6985	" " " " Steady Pin....
1952	7027	" " " Roller and Stud.....
62151	7002	" " Regulator.....
50599D	7027	" " " Adjusting Screw Stud.....
1676c	6982	Feed Across Regulator Adjusting Screw Stud Nut.....
46244	7027	Feed Across Regulator Adjusting Screw Stud Nut Washer (fibre).....
17738	6982	Feed Across Regulator Adjusting Screw Stud Nut Washer (steel).....
1188D	6998	Feed Across Regulator Hinge Screw....
62152	7001	" " " Link.....
1189E	7001	" " " " Screw Stud
62153	7001	" " " " Stud.....
62284	7030	" Cam with two 1192c and three each 190D, 208D, 227D, 17874 and 62138.....
18415	6987	Feed Cam Driving Worm with 1441c and 1442c.....
1442c	6987	Feed Cam Driving Worm Position Screw.
1441c	6987	" " " " Set Screw.....

NO.	PLATE	NAME
17797	6977	Feed Cam Driving Worm Wheel with 453c.....
3012	7019	Feed Cam Driving Worm Wheel Pin.
453c	6987	" " " " " Set Screw.....
18384	7019	Feed Cam Pin.....
1192c	6987	" " Set Screw.....
62155	7002	" " Shaft.....
1653c	6999	" " " Nut.....
39358	7004	" Plate.....
*18445	6989	" " Carrier Bar.....
62156	—	" " " " 18445 with 934J, 1094F, 1195E, 17743, 18368, 62149, 62150, two 55300 and four 17806.....
59730	6987	Feed Plate Carrier Bar Pivot Block.....
50306c	6987	" " " " " Screw
18368	6987	" " " " Plate.....
934J	6987	" " " " " Screw.....
1654c	7027	" " Nut.....
17806	7027	" " Position Stud.....
1195E	7027	" " Screw Stud.....
62157	7002	" Regulator with 1953.....
62148	7002	" " Bracket with 39310 and three 160D.....
*39310	—	Feed Regulator Bracket Cap.....
160D	6998	" " " " " Screw.....
8589	7019	" " " Dowel Pin.....
1177D	7026	" " " Screw.....
17744	6987	" " Hinge Stud.....
17743	6987	" " Post.....
1953	7019	" " Roller and Screw Stud with 1655c and 14017.....
1655c	6985	Feed Regulator Roller and Screw Stud Nut.....
14017	6985	Feed Regulator Roller and Screw Stud Nut Washer.....
1190c	6987	Feed Regulator Stop Screw.....
39313	7004	" " Swivel.....
1191D	6987	" " Thumb Screw.....
59731	6990	Knife.....
62124	6975	" Bar with 62130 and two 3021....
62125	6990	" " Cap.....
164D	6990	" " " Screw.....
62126	6990	Knife Bar Connection with 17917.....
190D	6990	" " " Screw.....
17915	6990	" " " Slide Block.....

NO.	PLATE	NAME
17917	—	Knife Bar Connection Slide Block 17915 with 17916.....
17916	6990	Knife Bar Connection Slide Block Stud.
59734	6990	" " Driving Lever with 223F and 59735.....
1382F	6998	Knife Bar Driving Lever Hinge Screw
1681C	6999	" " " " " "
		Nut.....
59735	6990	Knife Bar Driving Lever Lock Stud
223F	6990	" " " " " "
		Screw.....
62127	6990	Knife Bar Guide.....
1235F	6990	" " " Screw.....
8734	7015	" " Retaining Spring.....
62192	7015	" " " Bracket....
62128	6990	" Holder with 59739.....
62129	6990	" " Cap with 59739.....
691F	6990	" " " Screw.....
59739	6990	" " " Stud.....
62130	6990	" " Connection.....
3021	6980	" " " Rivet.....
59739	6990	" " Stud.....
236F	6990	" Screw.....
62179	7015	Looper with 34418.....
*59742	—	" Collar.....
59743	6991	" Driving Shaft.....
62131	6991	" " " Bushing.....
52045	6992	" " " " Packing (cotton).....
1148c	7015	Looper Driving Shaft Bushing Set Screw
59745	6991	" " " Collar with two 465c.....
465c	6991	Looper Driving Shaft Collar Set Screw .
59746	6991	" " " Coupling with two 50150c.....
50150c	6991	Looper Driving Shaft Coupling Set Screw
59707	6976	" " " Gear with two 1253c.....
59747	6992	Looper Driving Shaft Gear Cover.....
190D	6990	" " " " " Screw .
1253c	6976	" " " " Set Screw....
59748	6991	" " " Universal Joint....
50150c	6991	" Set Screw.....
62158	7002	" Shaft with 50150c and 59742....
59745	6991	" " Collar with two 465c.....
465c	6991	" " " Set Screw.....
59746	6991	" " Coupling with two 50150c.

NO.	PLATE	NAME
50150c	6991	Looper Shaft Coupling Set Screw.....
59750	6991	" " Eccentric with two 624c...
62132	6991	" " " Connection with 59752 and two 171E.....
*59752	—	Looper Shaft Eccentric Connection Cap.
171E	6991	" " " " "
		Screw.....
62133	6991	Looper Shaft Eccentric Connection Stud (eccentric).....
1095F	6991	Looper Shaft Eccentric Connection Stud Cap Screw.....
1259c	6991	Looper Shaft Eccentric Connection Stud Set Screw.....
624c	6991	Looper Shaft Eccentric Set Screw.....
62134	6991	" " Slide Block.....
62135	6991	" " " " Cap.....
1186c	6991	" " " " " Screw....
34418	6991	" Washer.....
59756	6989	Needle Bar with 1072F.....
*39203	6992	" " Connecting Link.....
62283	—	" " " " 39203 with 377c, 1518E and 2052.....
377c	6992	Needle Bar Connecting Link Hinge Screw
1518E	6992	" " " " " "
		Nut.....
2052	6992	Needle Bar Connecting Stud with 155c.
155c	6992	" " " " Set Screw.
59757	6992	" " Crank Wheel with 448c and 1293c.....
1293c	6992	Needle Bar Crank Wheel Position Screw
448c	6992	" " " " Set Screw.....
59758	6993	" Guard.....
59759	6993	" " Cam with two 465c.....
465c	6991	" " " Set Screw.....
2273	7027	" " Pin.....
59760	6989	" " Shaft.....
59761	6993	" " " Collar with two 465c
465c	6991	" " " " Set Screw..
59762	6993	" " " Crank with 51812 and two 465c.....
51812	6993	Needle Guard Shaft Crank Roller and Stud.....
465c	6991	Needle Guard Shaft Crank Set Screw...
59763	6993	" " " End Bearing
59764	6989	" " " " "
		Bracket.....


NO.	PLATE	NAME
2022	7027	Needle Guard Shaft End Bearing Bracket Dowel Pin.....
965D	6993	Needle Guard Shaft End Bearing Bracket Screw.....
1480H	6993	Needle Guard Shaft End Bearing Cap Screw.....
59765	6993	Needle Guard Shaft Spring.....
59766	6993	" " " " Collar with 624c.....
624c	6991	Needle Guard Shaft Spring Collar Set Screw.....
233D	6995	Needle Guard Shaft Spring Screw.....
1072F	6993	" Set Screw.....
2058	6989	Presser Bar.....
17841	6992	" " Collar with two 196F.....
196F	6992	" " " Set Screw.....
17842	6992	" " Guide Bracket with 453c...
453C	6987	" " " " Set Screw ..
17843	6981	" " Lifting Lever.....
59767	6996	" " " " Bracket.....
164E	6990	" " " " " Screw
1201D	7006	" " " " Hinge Screw..
17845	7032	" " " " Rod.....
17846	—	" " " " " Chain...
8414	6989	" " Spring.....
17941	6977	Pulley (loose) 2 $\frac{7}{8}$ in. diam.....
17848	6977	" " Bushing.....
2269	6994	" " " Position Pin....
1202D	6998	" " Cap Screw.....
17942	6977	" (tight) 2 $\frac{7}{8}$ in. diam., with 2269..
2022	7027	" " Pin.....
17955	—	Pulleys complete, Nos. 1202D, 1206C, 17848, 17854, 17941 and 17942.....
17853	6994	Starting Lever.....
1262C	6998	" " Hinge Screw.....
1662C	6999	" " " " Nut.....
17886	7032	" " Pitman.....
17854	6994	Stop Cam.....
17855	6994	" " Interlocking Rod.....
124697	—	" " " " Case.....
62136	6977	" " " " " 124697 with 59771 and two 193D.....
62159	—	Stop Cam Interlocking Rod Case 62136 with 1318D, 17855, 17863, 17864, 39222, 39223 and two 1255D.....
59769	6977	Stop Cam Interlocking Rod Case Bracket

NO.	PLATE	NAME
62186	—	Stop Cam Interlocking Rod Case Bracket complete, Nos. 1182E, 1196C, 1204E, 1254C, 1262C, 1508E, 1662C, 17853, 17859, 17861, 17862, 17872, 17873, 59769, 62159 and two 898D.....
62137	—	Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186D
21828	6976	Stop Cam Interlocking Rod Case Bracket Dowel Pin.....
50372D	7015	Stop Cam Interlocking Rod Case Bracket Screw.....
1204E	6998	Stop Cam Interlocking Rod Case Hinge Screw.....
17859	6977	Stop Cam Interlocking Rod Case Socket Joint.....
898D	6998	Stop Cam Interlocking Rod Case Socket Joint Cap Screw.....
39343	6981	Stop Cam Interlocking Rod Case Spring (flat).....
430C	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw.....
1520E	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut.....
39344	6994	Stop Cam Interlocking Rod Case Spring Bracket with 430C and 1520E.....
1186D	6991	Stop Cam Interlocking Rod Case Spring Bracket Screw.....
17861	6994	Stop Cam Interlocking Rod Case Stop Stud.....
1254C	6998	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing.....
1508E	6999	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut.....
17862	6994	Stop Cam Interlocking Rod Case Stop Stud Spring.....
59771	6994	Stop Cam Interlocking Rod Case Wear- ing Block.....
193D	7027	Stop Cam Interlocking Rod Case Wear- ing Block Screw.....
17863	6994	Stop Cam Interlocking Rod Spring.....
17864	6994	" " " " " Stop.....
1318D	6994	" " " " " Screw.
3012	7019	" " Pin.....
1206C	6994	" " Screw.....
2102	6995	Tension Disc.....
1560C	6995	" Regulating Thumb Nut.....
50148C	6995	" Screw Stud.....

NO.	PLATE	NAME
42336	6995	Tension Spring.....
13915	6995	" " Bushing.....
10145	6995	" Thread Guide.....
59772	6995	Thread Eyelet (head of arm).....
233D	6995	" " " " " Set Screw.
1743D	6979	" Nipper Adjusting Thumb Nut..
59773	6995	" " Body.....
624C	6991	" " " Set Screw.....
59774	6995	" " Cam with two 50150c...
50150C	6991	" " " Set Screw.....
2921	6995	" " Disc.....
12162	6995	" " " Guide Pin.....
62169	6979	" " " Spring.....
59775	6995	" " Eyelet.....
1527D	6995	" " Lock Nut.....
59776	6995	" " Stud with 13538.....
13538	6995	" " " Position Pin.....
13539	6995	" " " Roller.....
13540	6995	" " " " Pin.....
2026	6995	" " " Spring.....
59777	—	Thread Nipper Stud complete, Nos. 13539, 13540 and 59776.....
59778	—	Thread Nipper complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921.....
62138	6987	Thread Pull-off Cam.....
208D	6980	" " " Screw (long).....
227D	7015	" " " " (short).....
59780	6996	" " Driving Lever.....
1196C	6998	" " " " H i n g e Screw.....
59781	6996	Thread Pull-off Driving Lever Spring...
59782	6996	" " Lever.....
59783	6996	" " " Bushing.....
1445H	6996	Thread Pull-off Lever Bushing Screw...
59784	6996	" " " Connection.....
50116D	6996	" " " " Hinge Screw (driving lever end).....
50111D	6996	Thread Pull-off Lever Connection Hinge Screw (lever end).....
59785	6996	Thread Pull-off Regulator.....
62170	—	" Take-up Body with 62172.....
42808	6979	" " Roller.....
62171	6979	" " " Cap.....
337D	6979	" " " " Screw.....
62172	6979	" " " Pin.....

NO.	PLATE	NAME
62173	6979	Thread Take-up complete, Nos. 337D, 42808, 62170 and 62171.....
691F	6990	Thread Take-up Screw.....
39452	6979	" Wiper Body.....
39453	6979	" " " Finger.....
330D	6979	" " " " Screw.....
1207D	6979	" " " Hinge Screw.....
59787	6979	" " " Support.....
641C	6979	" " " " Set Screw.
39455	6979	" " " Wire.....
39456	6979	" " " " Clamp.....
1302D	6979	" " " " " Screw.
62139	6997	Throat Plate.....
59799	6997	" " Needle Guard.....
208E	6980	" " " " Screw.....
691F	6990	" " Screw.....
59790	6997	" " Thread Retainer.....
206E	7024	" " " " Screw...
17872	6994	Trip Lever.....
1196C	6998	" " Hinge Screw.....
17873	6994	" " Spring.....
1182E	7027	" " " Screw.....
17874	6987	Tripping Point.....
190D	6990	" " Screw.....

LIST OF PARTS COMPLETE FOR

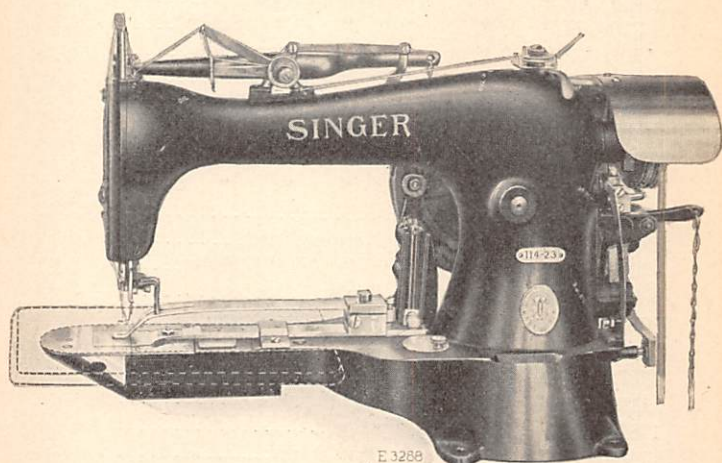

MACHINE No. 114-23

FOR TACKING PAPER TICKETS ON CLOTHING. MAKES SIX
CROSS STITCHES, INCLUDING THE FASTENING STITCH.
THE WORK HOLDING CLAMP VIBRATES UP THE ARM
INSTEAD OF ACROSS.

NO.	PLATE	NAME
*62295	—	Arm with 4449, 124606 and two 164E...
16532	6976	" Dowel Pin.....
4448	6976	" Oil Tube for intermediate bearing .
56015	6976	" " " " oiling 59705 and 59706
880E	6998	" Screw.....
59702	6975	" Shaft (horizontal).....
17703	6981	" " " Bushing (back) .
50333C	6998	" " " " "
		Adjusting Screw.....
1520E	6994	Arm Shaft (horizontal) Bushing (back)
		Adjusting Screw Nut.....
*4449	—	Arm Shaft (horizontal) Bushing (front) .
59703	6976	" " " Gear with two
		1036c.....

NO.	PLATE	NAME
1036C	6976	Arm Shaft (horizontal) Gear Set Screw .
59704	6976	“ “ (upright).....
59705	6976	“ “ “ Bushing (lower)...
448C	6992	“ “ “ “ “ Set Screw.....
59706	6976	Arm Shaft (upright) Bushing (upper)...
448C	6992	“ “ “ “ “ Set Screw.....
59707	6976	Arm Shaft (upright) Gear (lower) with two 1253C.....
1253C	6976	Arm Shaft (upright) Gear (lower) Set Screw.....
59708	6976	Arm Shaft (upright) Gear (upper) with two 1253C.....
1253C	6976	Arm Shaft (upright) Gear (upper) Set Screw.....
124674	7020	Arm Side Cover.....
190D	6990	“ “ “ Screw.....
18498	6975	Belt Cover.....
59795	6977	“ “ Bracket with 184E and 59796
184E	6998	“ “ “ Screw Stud.....
59796	7019	“ “ “ Stud.....
217D	6998	“ “ Screw.....
39222	6977	“ Shifter.....
39223	6976	“ “ Clamp.....
1255D	6976	“ “ “ Screw.....
124646	7029	Clamp with 1220E and 17928.....
17927	7029	“ Arm with 17714 and 63788.....
17710	7026	“ “ Hinge Plate.....
1176J	7026	“ “ “ “ Screw.....
63788	7015	“ “ Hook.....
59710	6979	“ Lifter.....
176D	7009	“ “ Screw.....
124677	7019	“ Locking Device Latch with 704J.
704J	7019	“ “ “ “ Clamping Screw.....
124678	7020	Clamp Locking Device Latch Shaft
124679	7019	“ “ “ “ “ Crank.....
124680	7019	Clamp Locking Device Latch Shaft Crank Connection.....
1282C	7019	Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (lower)
1282C	7019	Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (upper)
2269	6994	Clamp Locking Device Latch Shaft Crank Pin.....

NO.	PLATE	NAME
17928	7000	Clamp Position Stud.....
17712	7001	" Pressure Spring.....
17713	7026	" " " Bracket.....
1177D	7026	" " " " Screw..
17714	7026	" " " Guide Block....
1178J	7026	" " " Screw.....
1220E	7000	" Screw Stud.....
1656J	7000	" Thumb Nut.....
124647	—	Clamp complete, Nos. 1656J, 17927 and 124646.....
*62101	—	Cloth Plate.....
62102	6980	" " Guide Block (left).....
742F	6980	" " " " " S c r e w
1547D	6980	" " " " " "
		Nut.....
62103	6980	Cloth Plate Guide Block (right).....
3021	6980	" " " " " Rivet..
190D	6990	" " Screw.....
62104	6980	" " Stop.....
26770	6980	" " Rivet.....
62105	6975	Cloth Plate complete, Nos. 742F, 1547D, 26770, 62101 to 62104 and two 3021.
*62177	—	Cylinder.....
62189	7032	" Bottom Cover.....
62108	6981	" End Cover.....
62190	—	" " " 62108 with 1034D, 62111 to 62113, 62185, 62189 and four 1477D.....
62185	6980	Cylinder End Cover Bracket.....
62111	6980	" " " " " Hinge Pin.
1477D	6980	" " " " " Screw.....
62112	6980	" " " " " Hinge.....
1477D	6980	" " " " " Screw.....
62113	6980	" " " " " Spring.....
1034D	6980	" " " " " Screw.....
62114	6980	" Top Cover.....
286D	6980	" " " Thumb Screw.....
59711	6981	Face Plate.....
59712	—	Face Plate complete, Nos. 208D, 9544, 9545, 59711 and two each 229D, 2107 and 9543.....
164D	6990	Face Plate Screw.....
2107	6980	" " Thread Guard.....
229D	7027	" " " " " Screw.....
9543	6980	" " " " " Nipper Disc.....
9544	6980	" " " " " Cover..

NO.	PLATE	NAME
208D	6980	Face Plate Thread Nipper Disc Cover Screw.....
9545	6980	Face Plate Thread Nipper Disc Spring .
124648	7031	Feed Cam with two 1192c, six each 190D, 17874, 124652 and twelve 335J.....
18415	6987	Feed Cam Driving Worm with 1441c and 1442c.....
1442c	6987	Feed Cam Driving Worm Position Screw
1441c	6987	" " " " Set Screw....
17797	6977	" " " " Wheel with 453c.....
3012	7019	Feed Cam Driving Worm Wheel Pin
453c	6987	" " " " " Set Screw.....
18384	7019	Feed Cam Pin.....
1192c	6987	" " Set Screw.....
59728	6989	" " Shaft.....
1653c	6999	" " " Nut.....
124649	7029	" Plate.....
*18445	6989	Feed Plate Carrier Bar.....
62123	—	" " " " 18445 with 934J, 1094F, 1195E, 17743, 18368, 62118, 62119, two 55300 and four 17806.....
124650	7032	Feed Plate Carrier Bar Guide.....
190J	6990	" " " " " Screw....
59730	6987	" " " " Pivot Block
50306c	6987	" " " " " " Screw.....
18368	6987	Feed Plate Carrier Bar Plate.....
934J	6987	" " " " " Screw....
62118	6985	" " " " Position Plate with 17741.....
62119	6985	Feed Plate Carrier Bar Position Plate Cover.....
1094F	6985	Feed Plate Carrier Bar Position Plate Screw.....
55300	6985	Feed Plate Carrier Bar Position Plate Steady Pin.....
17741	6985	Feed Plate Carrier Bar Position Plate Stud.....
1654c	7027	Feed Plate Nut.....
17806	7027	" " Position Stud.....
1195E	7027	" " Screw Stud.....
17742	7032	" Regulator with 1953.....
124651	7032	" " Bracket with 17732 and two 160D.....

NO.	PLATE	NAME
*17732	—	Feed Regulator Bracket Cap.....
160D	6998	“ “ “ “ Screw.....
8589	7019	“ “ “ Dowel Pin.....
1177D	7026	“ “ “ Screw.....
17744	6987	“ “ Hinge Stud.....
17743	6987	“ “ Post.....
1953	7019	“ “ Roller and Screw Stud with 1655c and 14017.....
1655c	6985	Feed Regulator Roller and Screw Stud Nut.....
14017	6985	Feed Regulator Roller and Screw Stud Nut Washer.....
1190c	6987	Feed Regulator Stop Screw.....
17745	6987	“ “ Swivel.....
1191D	6987	“ “ Thumb Screw.....
59731	6990	Knife.....
62124	6975	“ Bar with 62130 and two 3021....
62125	6990	“ “ Cap.....
164D	6990	“ “ “ Screw.....
62126	6990	“ “ Connection with 17917.....
190D	6990	“ “ “ Screw.....
17915	6990	“ “ “ Slide Block.....
17917	—	“ “ “ “ “ 17915 with 17916.....
17916	6990	Knife Bar Connection Slide Block Stud.
59734	6990	“ “ Driving Lever with 223F and 59735.....
1382F	6998	Knife Bar Driving Lever Hinge Screw
1681c	6999	“ “ “ “ “ “ Nut.....
59735	6990	Knife Bar Driving Lever Lock Stud
223F	6990	“ “ “ “ “ “ Screw.....
62127	6990	Knife Bar Guide.....
1235F	6990	“ “ “ Screw.....
8734	7015	“ “ Retaining Spring.....
62192	7015	“ “ “ “ Bracket....
62128	6990	“ Holder with 59739.....
62129	6990	“ “ Cap with 59739.....
691F	6990	“ “ “ Screw.....
59739	6990	“ “ “ Stud.....
62130	6990	“ “ Connection.....
3021	6980	“ “ “ Rivet.....
59739	6990	“ “ Stud.....
236F	6990	“ Screw.....
62298	7027	Looper with 34418.....
*59742	—	“ Collar.....

NO.	PLATE	NAME
59743	6991	Looper Driving Shaft.....
62131	6991	" " " Bushing.....
52045	6992	" " " " Packing (cotton).....
1148c	7015	Looper Driving Shaft Bushing Set Screw
59745	6991	" " " Collar with two 465c.....
465c	6991	Looper Driving Shaft Collar Set Screw..
59746	6991	" " " Coupling with two 50150c.....
50150c	6991	Looper Driving Shaft Coupling Set Screw
59707	6976	" " " Gear with two 1253c.....
59747	6992	Looper Driving Shaft Gear Cover.....
190D	6990	" " " " " Screw.
1253c	6976	" " " " " Set Screw....
59748	6991	" " " Universal Joint....
50150c	6991	" Set Screw.....
59749	6989	" Shaft with 50150c and 59742...
62197	7015	" " Ball with two 624c.....
62132	6991	" " " Connection with 59752 and two 171E.....
*59752	—	Looper Shaft Ball Connection Cap
171E	6991	" " " " " " Screw.....
62133	6991	Looper Shaft Ball Connection Stud (eccentric).....
1095F	6991	Looper Shaft Ball Connection Stud Cap Screw.....
1259c	6991	Looper Shaft Ball Connection Stud Set Screw.....
624c	6991	Looper Shaft Ball Set Screw.....
59745	6991	" " Collar with two 465c.....
465c	6991	" " " Set Screw.....
59746	6991	" " Coupling with two 50150c.
50150c	6991	" " " Set Screw.....
62134	6991	" " Slide Block.....
62135	6991	" " " " Cap.....
1186c	6991	" " " " " Screw....
34418	6991	" Washer.....
62299	7020	Needle Bar with 1072F.....
*39203	6992	" " Connecting Link.....
62283	—	" " " " 39203 with 377C, 1518E and 2052.....
377c	6992	Needle Bar Connecting Link Hinge Screw.....

NO.	PLATE	NAME
1518E	6992	Needle Bar Connecting Link Hinge Screw Nut.....
2052	6992	Needle Bar Connecting Stud with 155c.
155c	6992	" " " " Set Screw.
59757	6992	" " Crank Wheel with 448c and 1293c.....
1293c	6992	Needle Bar Crank Wheel Position Screw
448c	6992	" " " " Set Screw.....
124603	7019	" " Thread Retainer Bracket with 460c.....
460c	7019	Needle Bar Thread Retainer Bracket Set Screw.....
42348	7019	Needle Bar Thread Retainer Disc (inside).....
10106	7019	Needle Bar Thread Retainer Disc (outside).....
10107	7019	Needle Bar Thread Retainer Disc Spring
93c	7019	" " " " " "
		Screw.....
124604	7019	Needle Bar Thread Retainer Thread Guide.....
124605	—	Needle Bar Thread Retainer complete, Nos. 93c, 10106, 10107, 42348, 124603 and 124604.....
62300	7019	Needle Guard.....
124601	7019	" " Cam with two 465c.....
465c	6991	" " " Set Screw.....
2273	7027	" " Pin.....
59760	6989	" " Shaft.....
59761	6993	" " " Collar with two 465c
465c	6991	" " " Set Screw...
124602	7019	" " " Crank with 51812 and two 465c.....
51812	6993	Needle Guard Shaft Crank Roller and Stud.....
465c	6991	Needle Guard Shaft Crank Set Screw...
59763	6993	" " " End Bearing
59764	6989	" " " " "
		Bracket.....
2022	7027	Needle Guard Shaft End Bearing Bracket Dowel Pin.....
965D	6993	Needle Guard Shaft End Bearing Bracket Screw.....
1480H	6993	Needle Guard Shaft End Bearing Cap Screw.....
59765	6993	Needle Guard Shaft Spring.....


NO.	PLATE	NAME
59766	6993	Needle Guard Shaft Spring Collar with 624c.....
624c	6991	Needle Guard Shaft Spring Collar Set Screw.....
233D	6995	Needle Guard Shaft Spring Screw.....
1072F	6993	" Set Screw.....
2058	6989	Presser Bar.....
17841	6992	" " Collar with two 196f.....
196f	6992	" " " Set Screw.....
17842	6992	" " Guide Bracket with 453c...
453c	6987	" " " " Set Screw...
124681	7020	" " Lifting Lever.....
124606	7020	" " " " Bracket.....
164E	6990	" " " " " Screw
1201D	7006	" " " " Hinge Screw..
17845	7032	" " " " Rod.....
17846	—	" " " " Chain...
8414	6989	" " Spring.....
17941	6977	Pulley (loose) 2 $\frac{7}{8}$ in. diam.....
17848	6977	" " Bushing.....
2269	6994	" " " Position Pin....
1202D	6998	" " Cap Screw.....
17942	6977	" (tight) 2 $\frac{7}{8}$ in. diam, with 2269..
2022	7027	" " Pin.....
17955	—	Pulleys complete, Nos. 1202D, 1206c, 17848, 17854, 17941 and 17942
17853	6994	Starting Lever.....
1262c	6998	" " Hinge Screw.....
1662c	6999	" " " " Nut.....
17886	7032	" " Pitman.....
17854	6994	Stop Cam.....
17855	6994	" " Interlocking Rod.....
124697	—	" " " " Case.....
62136	6977	" " " " " 124697 with 59771 and two 193D.....
62159	—	Stop Cam Interlocking Rod Case 62136 with 1318D, 17855, 17863, 17864, 39222, 39223 and two 1255D.....
59769	6977	Stop Cam Interlocking Rod Case Bracket
62186	—	Stop Cam Interlocking Rod Case Bracket complete, Nos. 1182E, 1196c, 1204E, 1254c, 1262c, 1508E, 1662c, 17853, 17859, 17861, 17862, 17872, 17873, 59769, 62159 and two 898D.....
62137	—	Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186D

NO.	PLATE	NAME
21828	6976	Stop Cam Interlocking Rod Case Bracket Dowel Pin
50372D	7015	Stop Cam Interlocking Rod Case Bracket Screw
1204E	6998	Stop Cam Interlocking Rod Case Hinge Screw
17859	6977	Stop Cam Interlocking Rod Case Socket Joint
898D	6998	Stop Cam Interlocking Rod Case Socket Joint Cap Screw
39343	6981	Stop Cam Interlocking Rod Case Spring (flat)
430C	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw
1520E	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut
39344	6994	Stop Cam Interlocking Rod Case Spring Bracket with 430c and 1520E
1186D	6991	Stop Cam Interlocking Rod Case Spring Bracket Screw
17861	6994	Stop Cam Interlocking Rod Case Stop Stud
1254C	6998	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing
1508E	6999	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut
17862	6994	Stop Cam Interlocking Rod Case Stop Stud Spring
59771	6994	Stop Cam Interlocking Rod Case Wearing Block
193D	7027	Stop Cam Interlocking Rod Case Wearing Block Screw
17863	6994	Stop Cam Interlocking Rod Spring
17864	6994	" " " " Stop
1318D	6994	" " " " Screw
3012	7019	" " Pin
1206C	6994	" " Screw
2102	6995	Tension Disc
1560C	6995	" Regulating Thumb Nut
50148C	6995	" Screw Stud
42336	6995	" Spring
13915	6995	" " Bushing
10145	6995	" Thread Guide
124609	7027	Thread Controller Sleeve
124607	7027	" " Spring
124608	7027	" " " Collar with 1477F

NO.	PLATE	NAME
1477F	6980	Thread Controller Spring Collar Set Screw.....
124610	7027	Thread Controller Stud with 56549 and 124631.....
*124631	—	Thread Controller Stud Collar.....
56549	—	" " " " Pin.....
457C	7027	" " " Set Screw.....
124611	—	Thread Controller complete, Nos. 124607 to 124610.....
*124612	—	Thread Nipper (lower) Blade.....
*124613	—	" " " " Carrier with 124619.....
124614	7028	Thread Nipper (lower) Blade Carrier 124613 with 124612 and two 6037....
665J	7028	Thread Nipper (lower) Blade Carrier Cap Screw.....
124615	7028	Thread Nipper (lower) Blade Carrier Hinge Stud.....
6037	7028	Thread Nipper (lower) Blade Rivet....
124652	7032	" " " Cam.....
335J	7027	" " " " Screw.....
124653	7020	" " " Connection.....
124618	7028	" " " " Ex- tension.....
99K	7028	Thread Nipper (lower) Connection Ex- tension Hinge Screw.....
206J	7024	Thread Nipper (lower) Connection Ex- tension Screw.....
124619	7028	Thread Nipper (lower) Connection Hinge Stud.....
124620	7020	Thread Nipper (lower) Driving Arm....
8554	7019	" " " " " Pin
124621	7020	" " " Lever with 237K...
8554	7019	" " " " Pin.....
237K	7009	" " " " Set Screw...
124623	7020	" " " " Shaft.....
*124682	7020	" " " " " Bracket
1177J	7026	" " " " " " Screw.....
1743D	6979	Thread Nipper (upper) Adjusting Thumb Nut.....
59773	6995	Thread Nipper (upper) Body.....
624C	6991	" " " " Set Screw
59774	6995	" " " Cam with two 50150C.....

NO.	PLATE	NAME
50150c	6991	Thread Nipper (upper) Cam Set Screw..
2921	6995	" " " Disc.....
12162	6995	" " " " Guide Pin.
62169	6979	" " " " Spring....
59775	6995	" " " Eyelet.....
1527D	6995	" " " Lock Nut.....
59776	6995	" " " Stud with 13538.
13538	6995	" " " " Position Pin
13539	6995	" " " " Roller.....
13540	6995	" " " " " Pin..
2026	6995	" " " " Spring....
59777	—	Thread Nipper (upper) Stud complete, Nos. 13539, 13540 and 59776.....
59778	—	Thread Nipper (upper) complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921.....
124625	—	Thread Take-up Body with 62172.....
42808	6979	" " Roller.....
62171	6979	" " " Cap.....
337D	6979	" " " " Screw.....
62172	6979	" " " Pin.....
124626	7019	Thread Take-up complete, Nos. 337D, 42808, 62171 and 124625.....
691F	6990	Thread Take-up Screw.....
39452	6979	" Wiper Body.....
39453	6979	" " " Finger.....
330D	6979	" " " " Screw.....
1207D	6979	" " " Hinge Screw.....
59787	6979	" " " Support.....
641C	6979	" " " " Set Screw.
39455	6979	" " " Wire.....
39456	6979	" " " " Clamp.....
1302D	6979	" " " " " Screw.
124627	7024	Throat Plate with 124615.....
124628	7024	" " Needle Guard.....
208E	6980	" " " " Screw.....
691F	6990	" " Screw.....
17872	6994	Trip Lever.....
1196C	6998	" " Hinge Screw.....
17873	6994	" " Spring.....
1182E	7027	" " " Screw.....
17874	6987	Tripping Point.....
190D	6990	" " Screw.....

LIST OF PARTS COMPLETE FOR

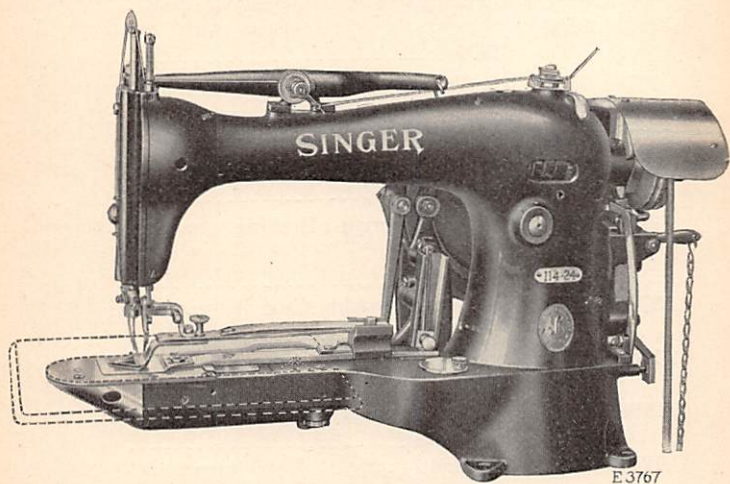

MACHINE No. 114-24

FOR TACKING PAPER TICKETS ON CLOTHING TO DISTINGUISH LOT, COLOR, SIZE, ETC., WHILE IN THE PROCESS OF MANUFACTURE. MAKES A TRIANGULAR SHAPE TACK, CONSISTING OF THIRTEEN STITCHES, $\frac{5}{8}$ IN. ACROSS THE BASE AND $\frac{3}{8}$ IN. FROM THE APEX TO THE BASE. FITTED WITH IMPROVED THREAD CONTROLLING MECHANISM AND THREAD NIPPING DEVICE TO HOLD THE END OF THE THREAD UNTIL THE FIRST STITCH IS MADE; ALSO AN IMPROVED THREAD CUTTER THAT LEAVES A LONG END TO UNRAVEL THE THREAD IN DETACHING THE TICKET. SUPERSEDES 114-22 MACHINE.

NO.	PLATE	NAME
*62295	—	Arm with 4449, 124606 and two 164E...
16532	6976	" Dowel Pin.....
4448	6976	" Oil Tube for intermediate bearing .
56015	6976	" " " oiling 59705 and 59706
880E	6998	" Screw.....
59702	6975	" Shaft (horizontal).....
17703	6981	" " " Bushing (back)

NO.	PLATE	NAME
50333c	6998	Arm Shaft (horizontal) Bushing (back) Adjusting Screw.....
1520E	6994	Arm Shaft (horizontal) Bushing (back) Adjusting Screw Nut.....
*4449	—	Arm Shaft (horizontal) Bushing (front).
59703	6976	" " " Gear with two 1036c.....
1036c	6976	Arm Shaft (horizontal) Gear Set Screw.
59704	6976	" " (upright).....
59705	6976	" " " Bushing (lower)...
448c	6992	" " " " " Set Screw.....
59706	6976	Arm Shaft (upright) Bushing (upper)...
448c	6992	" " " " " Set Screw.....
59707	6976	Arm Shaft (upright) Gear (lower) with two 1253c.....
1253c	6976	Arm Shaft (upright) Gear (lower) Set Screw.....
59708	6976	Arm Shaft (upright) Gear (upper) with two 1253c.....
1253c	6976	Arm Shaft (upright) Gear (upper) Set Screw.....
124674	7020	Arm Side Cover.....
190D	6990	" " " Screw.....
18498	6975	Belt Cover.....
59795	6977	" " Bracket with 184E and 59796.
184E	6998	" " " Screw Stud.....
59796	7019	" " " Stud.....
217D	6998	" " Screw.....
39222	6977	" Shifter.....
39223	6976	" " Clamp.....
1255D	6976	" " " Screw.....
62174	7026	Clamp with 1220E and 17928.....
62258	7026	" Arm with 17714.....
62259	—	Clamp Arm 62258 with 62260 and two 201D.....
17710	7026	Clamp Arm Hinge Plate.....
1176J	7026	" " " " Screw.....
62260	7026	" " Hook.....
201D	7026	" " " Screw.....
62261	7026	" Lifter.....
176D	7009	" " Screw.....
124677	7019	" Locking Device Latch with 704J.
704J	7019	" " " " Clamping Screw.....

NO.	PLATE	NAME
124678	7020	Clamp Locking Device Latch Shaft
124679	7019	" " " "
		Crank.....
124680	7019	Clamp Locking Device Latch Shaft
		Crank Connection.....
1282c	7019	Clamp Locking Device Latch Shaft
		Crank Connection Hinge Screw (lower)
1282c	7019	Clamp Locking Device Latch Shaft
		Crank Connection Hinge Screw (upper)
2269	6994	Clamp Locking Device Latch Shaft
		Crank Pin.....
17928	7000	Clamp Position Stud.....
17712	7001	" Pressure Spring.....
17713	7026	" " " Bracket.....
1177D	7026	" " " " Screw.....
17714	7026	" " " Guide Block....
1178J	7026	" " " Screw.....
1220E	7000	" Screw Stud.....
1656J	7000	" Thumb Nut.....
62262	—	Clamp complete, Nos. 1656J, 62174 and 62259.....
*62101	—	Cloth Plate.....
62102	6980	" " Guide Block (left).....
742F	6980	" " " " " S c r e w
1547D	6980	" " " " " "
		Nut.....
62103	6980	Cloth Plate Guide Block (right).....
3021	6980	" " " " " Rivet..
190D	6990	" " Screw.....
62104	6980	" " Stop.....
26770	6980	" " " Rivet.....
62105	6975	Cloth Plate complete, Nos. 742F, 1547D, 26770, 62101 to 62104 and two 3021..
*62178	—	Cylinder.....
62189	7032	" Bottom Cover.....
62108	6981	" End Cover.....
62190	—	" " " 62108 with 1034D, 62111 to 62113, 62185, 62189 and four 1477D.....
62185	6980	Cylinder End Cover Bracket.....
62111	6980	" " " " Hinge Pin.
1477D	6980	" " " " Screw.....
62112	6980	" " " Hinge.....
1477D	6980	" " " " Screw.....
62113	6980	" " " Spring.....
1034D	6980	" " " " Screw.....
62114	6980	" Top Cover.....

NO.	PLATE	NAME
286D	6980	Cylinder Top Cover Thumb Screw.....
59711	6981	Face Plate.....
59712	—	Face Plate complete, Nos. 208D, 9544, 9545, 59711 and two each 229D, 2107 and 9543.....
164D	6990	Face Plate Screw.....
2107	6980	“ “ Thread Guard.....
229D	7027	“ “ “ “ Screw.....
9543	6980	“ “ “ Nipper Disc.....
9544	6980	“ “ “ “ “ Cover..
208D	6980	Face Plate Thread Nipper Disc Cover Screw.....
9545	6980	Face Plate Thread Nipper Disc Spring..
62115	6982	Feed Across Connection Adjusting Stud.
1649C	6982	“ “ “ “ “ Nut (left hand thread).....
1650C	6982	Feed Across Connection Adjusting Stud Nut (right hand thread).....
63940	—	Feed Across Connection (lever end) with 42076 and two 896E.....
63941	7027	Feed Across Connection (lever end) 63940 with 55381.....
55381	7027	Feed Across Connection (lever end) Ball Stud.....
1185C	6982	Feed Across Connection (lever end) Ball Stud Set Screw.....
63942	—	Feed Across Connection (regulator end) with 42076 and two 896E.....
63943	7027	Feed Across Connection (regulator end) 63942 with 63944.....
63944	7027	Feed Across Connection (regulator end) Ball Stud.....
*42076	—	Feed Across Connection Cap.....
896E	7027	“ “ “ “ Screw.....
62147	7002	“ “ Lever with 1185C and 1952.
17737	7004	“ “ “ Hinge Stud.....
160D	6998	“ “ “ “ “ Clamping Screw.....
62149	7001	Feed Across Lever Plate with 62153....
124660	7028	“ “ “ “ Cover.....
1094F	6985	“ “ “ “ Screw.....
55300	6985	“ “ “ “ Steady Pin....
1952	7027	“ “ “ Roller and Stud.....
62151	7002	“ “ Regulator.....
50599D	7027	“ “ “ Adjusting Screw Stud.....

NO.	PLATE	NAME
1676c	6982	Feed Across Regulator Adjusting Screw Stud Nut.....
46244	7027	Feed Across Regulator Adjusting Screw Stud Nut Washer (fibre).....
17738	6982	Feed Across Regulator Adjusting Screw Stud Nut Washer (steel).....
1188d	6998	Feed Across Regulator Hinge Screw....
62152	7001	" " " Link.....
1189E	7001	" " " " Screw Stud.
62153	7001	" " " " Stud.....
124661	7031	" Cam with two 1192c, three each 190d, 17874, 124616, 124622 and twelve 335J.....
18415	6987	Feed Cam Driving Worm with 1441c and 1442c.....
1442c	6987	Feed Cam Driving Worm Position Screw
1441c	6987	" " " " Set Screw....
17797	6977	" " " " Wheel with 453c.....
3012	7019	Feed Cam Driving Worm Wheel Pin
453c	6987	" " " " " Set Screw.....
18384	7019	Feed Cam Pin.....
1192c	6987	" " Set Screw.....
62155	7002	" " Shaft.....
1653c	6999	" " " Nut.....
62176	7028	" Plate.....
*18445	6989	" " Carrier Bar.....
124662	—	" " " " 18445 with 934J, 1094F, 1195E, 17743, 18368, 62149, 124660, two 55300 and four 17806....
59730	6987	Feed Plate Carrier Bar Pivot Block
50306c	6987	" " " " " " " Screw.....
18368	6987	Feed Plate Carrier Bar Plate.....
934J	6987	" " " " " Screw....
1654c	7027	" " Nut.....
17806	7027	" " Position Stud.....
1195E	7027	" " Screw Stud.....
62157	7002	" Regulator with 1953.....
62148	7002	" " Bracket with 39310 and three 160d.....
*39310	—	Feed Regulator Bracket Cap.....
160d	6998	" " " " Screw.....
8589	7019	" " " Dowel Pin....
1177d	7026	" " " Screw.....
17744	6987	" " Hinge Stud.....

NO.	PLATE	NAME
17743	6987	Feed Regulator Post.....
1953	7019	“ “ Roller and Screw Stud with 1655c and 14017.....
1655c	6985	Feed Regulator Roller and Screw Stud Nut.....
14017	6985	Feed Regulator Roller and Screw Stud Nut Washer.....
1190c	6987	Feed Regulator Stop Screw.....
39313	7004	“ “ Swivel.....
1191D	6987	“ “ Thumb Screw.....
124684	7028	Knife.....
208D	6980	“ Screw.....
17718	6979	“ “ Washer.....
124666	7027	Looper with 34418 and 124675.....
*59742	—	“ Collar.....
59743	6991	“ Driving Shaft.....
62131	6991	“ “ “ Bushing.....
52045	6992	“ “ “ “ Packing (cotton).....
1148c	7015	Looper Driving Shaft Bushing Set Screw
59745	6991	“ “ “ Collar with two 465c.....
465c	6991	Looper Driving Shaft Collar Set Screw..
59746	6991	“ “ “ Coupling with two 50150c.....
50150c	6991	Looper Driving Shaft Coupling Set Screw
59707	6976	“ “ “ Gear with two 1253c.....
59747	6992	Looper Driving Shaft Gear Cover.....
190D	6990	“ “ “ “ “ Screw
1253c	6976	“ “ “ “ Set Screw...
59748	6991	“ “ “ Universal Joint...
50150c	6991	“ Set Screw.....
62158	7002	“ Shaft with 50150c and 59742....
59745	6991	“ “ Collar with two 465c.....
465c	6991	“ “ “ Set Screw.....
59746	6991	“ “ Coupling with two 50150c.
50150c	6991	“ “ Set Screw.....
59750	6991	“ “ Eccentric with two 624c..
62132	6991	“ “ “ Connection with 59752 and two 171E.....
*59752	—	Looper Shaft Eccentric Connection Cap
171E	6991	“ “ “ “ “ Screw.....
62133	6991	Looper Shaft Eccentric Connection Stud (eccentric).....

NO.	PLATE	NAME
1095F	6991	Looper Shaft Eccentric Connection Stud Cap Screw.....
1259C	6991	Looper Shaft Eccentric Connection Stud Set Screw.....
624C	6991	Looper Shaft Eccentric Set Screw.....
62134	6991	" " Slide Block.....
62135	6991	" " " " Cap.....
1186C	6991	" " " " " Screw....
124675	7027	" Thread Retaining Pin.....
34418	6991	" Washer.....
59756	6989	Needle Bar with 1072F.....
*39203	6992	" " Connecting Link.....
62283	—	" " " " 39203 with 377C, 1518E and 2052.....
377C	6992	Needle Bar Connecting Link Hinge Screw.....
1518E	6992	Needle Bar Connecting Link Hinge Screw Nut.....
2052	6992	Needle Bar Connecting Stud with 155c.
155C	6992	" " " " Set Screw.
59757	6992	" " Crank Wheel with 448c and 1293c.....
1293C	6992	Needle Bar Crank Wheel Position Screw
448C	6992	" " " " Set Screw.....
124603	7019	" " Thread Retainer Bracket with 460c.....
460C	7019	Needle Bar Thread Retainer Bracket Set Screw.....
42348	7019	Needle Bar Thread Retainer Disc (inside)
10106	7019	" " " " " (out- side).....
10107	7019	Needle Bar Thread Retainer Disc Spring
93C	7019	" " " " " " " Screw.....
124604	7019	Needle Bar Thread Retainer Thread Guide.....
124605	—	Needle Bar Thread Retainer complete, Nos. 93c, 10106, 10107, 42348, 124603 and 124604.....
62300	7019	Needle Guard.....
59759	6993	" " Cam with two 465c.....
465C	6991	" " " Set Screw.....
2273	7027	" " Pin.....
59760	6989	" " Shaft.....
59761	6993	" " " Collar with two 465c
465C	6991	" " " " Set Screw...

NO.	PLATE	NAME
59762	6993	Needle Guard Shaft Crank with 51812 and two 465c.....
51812	6993	Needle Guard Shaft Crank Roller and Stud.....
465c	6991	Needle Guard Shaft Crank Set Screw...
59763	6993	" " " End Bearing
59764	6989	" " " " "
		Bracket.....
2022	7027	Needle Guard Shaft End Bearing Bracket Dowel Pin.....
965D	6993	Needle Guard Shaft End Bearing Bracket Screw.....
1480H	6993	Needle Guard Shaft End Bearing Cap Screw.....
59765	6993	Needle Guard Shaft Spring.....
59766	6993	" " " " Collar with 624c.....
624c	6991	Needle Guard Shaft Spring Collar Set Screw.....
233D	6995	Needle Guard Shaft Spring Screw.....
1072F	6993	" Set Screw.....
2058	6989	Presser Bar.....
17841	6992	" " Collar with two 196F.....
196F	6992	" " " Set Screw.....
17842	6992	" " Guide Bracket with 453c...
453c	6987	" " " " Set Screw...
124681	7020	" " Lifting Lever.....
124606	7020	" " " " Bracket.....
164E	6990	" " " " " Screw
1201D	7006	" " " " Hinge Screw..
17845	7032	" " " " Rod.....
17846	—	" " " " " Chain...
8414	6989	" " Spring.....
17941	6977	Pulley (loose) 2 $\frac{7}{8}$ in. diam.....
17848	6977	" " Bushing.....
2269	6994	" " " Position Pin....
1202D	6998	" " Cap Screw.....
17942	6977	" (tight) 2 $\frac{7}{8}$ in. diam., with 2269.
2022	7027	" " Pin.....
17955	—	Pulleys complete, Nos. 1202D, 1206C, 17848, 17854, 17941 and 17942.....
17853	6994	Starting Lever.....
1262c	6998	" " Hinge Screw.....
1662c	6999	" " " Nut.....
17886	7032	" " Pitman.....
17854	6994	Stop Cam.....
17855	6994	" " Interlocking Rod.....

NO.	PLATE	NAME
124697	—	Stop Cam Interlocking Rod Case
62136	6977	“ “ “ “ “ 124697 with 59771 and two 193d.....
62159	—	Stop Cam Interlocking Rod Case 62136 with 1318d, 17855, 17863, 17864, 39222, 39223 and two 1255d.....
59769	6977	Stop Cam Interlocking Rod Case Bracket
62186	—	Stop Cam Interlocking Rod Case Bracket complete, Nos. 1182E, 1196c, 1204E, 1254c, 1262c, 1508E, 1662c, 17853, 17859, 17861, 17862, 17872, 17873, 59769, 62159 and two 898d.....
62137	—	Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186d
21828	6976	Stop Cam Interlocking Rod Case Bracket Dowel Pin.....
50372d	7015	Stop Cam Interlocking Rod Case Bracket Screw.....
1204E	6998	Stop Cam Interlocking Rod Case Hinge Screw.....
17859	6977	Stop Cam Interlocking Rod Case Socket Joint.....
898d	6998	Stop Cam Interlocking Rod Case Socket Joint Cap Screw.....
39343	6981	Stop Cam Interlocking Rod Case Spring (flat).....
430c	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw.....
1520E	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut.....
39344	6994	Stop Cam Interlocking Rod Case Spring Bracket with 430c and 1520E.....
1186d	6991	Stop Cam Interlocking Rod Case Spring Bracket Screw.....
17861	6994	Stop Cam Interlocking Rod Case Stop Stud.....
1254c	6998	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing.....
1508E	6999	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut.....
17862	6994	Stop Cam Interlocking Rod Case Stop Stud Spring.....
59771	6994	Stop Cam Interlocking Rod Case Wear- ing Block.....
193d	7027	Stop Cam Interlocking Rod Case Wear- ing Block Screw.....

NO.	PLATE	NAME
17863	6994	Stop Cam Interlocking Rod Spring.....
17864	6994	" " " " Stop.....
1318D	6994	" " " " " Screw.
3012	7019	" " Pin.....
1206C	6994	" " Screw.....
2102	6995	Tension Disc.....
1560C	6995	" Regulating Thumb Nut.....
50148C	6995	" Screw Stud.....
42336	6995	" Spring.....
13915	6995	" " Bushing.....
10145	6995	" Thread Guide.....
124609	7027	Thread Controller Sleeve.....
124607	7027	" " Spring.....
124608	7027	" " " Collar with 1477F.....
1477F	6980	Thread Controller Spring Collar Set Screw.....
124610	7027	Thread Controller Stud with 56549 and 124631.....
*124631	—	Thread Controller Stud Collar.....
56549	—	" " " " Pin.....
457C	7027	" " " Set Screw.....
124611	—	Thread Controller complete, Nos. 124607 to 124610.....
*124612	—	Thread Nipper (lower) Blade.....
*124613	—	" " " " Carrier with 124619.....
124614	7028	Thread Nipper (lower) Blade Carrier 124613 with 124612 and two 6037....
665J	7028	Thread Nipper (lower) Blade Carrier Cap Screw.....
124615	7028	Thread Nipper (lower) Blade Carrier Hinge Stud.....
6037	7028	Thread Nipper (lower) Blade Rivet....
124616	7020	" " " Cam.....
335J	7027	" " " " Screw.....
124653	7020	" " " Connection.....
124618	7028	" " " " Ex- tension.....
99K	7028	Thread Nipper (lower) Connection Ex- tension Hinge Screw.....
206J	7024	Thread Nipper (lower) Connection Ex- tension Screw.....
124619	7028	Thread Nipper (lower) Connection Hinge Stud.....
124620	7020	Thread Nipper (lower) Driving Arm....
8554	7019	" " " " " Pin.

NO.	PLATE	NAME
124621	7020	Thread Nipper (lower) Lever with 237K...
124622	7020	" " " " Guide.....
335J	7027	" " " " " Screw..
8554	7019	" " " " Pin.....
237K	7009	" " " " Set Screw...
124623	7020	" " " " Shaft.....
*124682	7020	" " " " " Bracket
1177J	7026	" " " " " "
		Screw
1743D	6979	Thread Nipper (upper) Adjusting Thumb Nut.....
59773	6995	Thread Nipper (upper) Body.....
624C	6991	" " " " Set Screw
59774	6995	" " " " Cam with two 50150C.....
50150C	6991	Thread Nipper (upper) Cam Set Screw..
2921	6995	" " " " Disc.....
12162	6995	" " " " Guide Pin .
62169	6979	" " " " Spring.....
59775	6995	" " " " Eyelet.....
1527D	6995	" " " " Lock Nut.....
59776	6995	" " " " Stud with 13538.
13538	6995	" " " " Position Pin
13539	6995	" " " " Roller
13540	6995	" " " " " Pin.
2026	6995	" " " " Spring....
59777	—	Thread Nipper (upper) Stud complete, Nos. 13539, 13540 and 59776.....
59778	—	Thread Nipper (upper) complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921.....
124685	7028	Thread Pull-off.....
62124	6975	" " Bar with 62130 and two 3021.....
62125	6990	Thread Pull-off Bar Cap.....
164D	6990	" " " " Screw.....
62126	6990	" " " Connection with 17917.....
190D	6990	Thread Pull-off Bar Connection Screw..
17915	6990	" " " " Slide Block.....
17917	—	Thread Pull-off Bar Connection Slide Block 17915 with 17916.....
17916	6990	Thread Pull-off Bar Connection Slide Block Stud.....
59734	6990	Thread Pull-off Bar Driving Lever with 223F and 59735.....

NO.	PLATE	NAME
1382F	6998	Thread Pull-off Bar Driving Lever Hinge Screw.....
1681c	6999	Thread Pull-off Bar Driving Lever Hinge Screw Nut.....
59735	6990	Thread Pull-off Bar Driving Lever Lock Stud.....
223F	6990	Thread Pull-off Bar Driving Lever Lock Stud Screw.....
124686	7028	Thread Pull-off Bar Guide and Knife Holder.....
1235F	6990	Thread Pull-off Bar Guide Screw.....
8734	7015	" " " Retaining Spring
62192	7015	" " " " "
		Bracket.....
62128	6990	Thread Pull-off Holder with 59739.....
62129	6990	" " " Cap with 59739.
691F	6990	" " " " Screw.....
59739	6990	" " " " Stud.....
62130	6990	" " " Connection.....
3021	6980	" " " " Rivet
59739	6990	" " " Stud.....
236F	6990	" " " Screw.....
124625	—	" Take-up Body with 62172.....
42808	6979	" " " Roller.....
62171	6979	" " " Cap.....
337D	6979	" " " " Screw.....
62172	6979	" " " Pin.....
124626	7019	Thread Take-up complete, Nos. 337D, 42808, 62171 and 124625.....
691F	6990	Thread Take-up Screw.....
39452	6979	" Wiper Body.....
39453	6979	" " " Finger.....
330D	6979	" " " " Screw.....
1207D	6979	" " " Hinge Screw.....
59787	6979	" " " Support.....
641c	6979	" " " " Set Screw.
39455	6979	" " " Wire.....
39456	6979	" " " " Clamp.....
1302D	6979	" " " " " Screw.
124627	7024	Throat Plate with 124615.....
59799	7024	" " " Needle Guard.....
208E	6980	" " " " Screw.....
691F	6990	" " " Screw.....
59790	7024	" " " Thread Retainer.....
206E	7024	" " " " " Screw...
17872	6994	Trip Lever.....
1196c	6998	" " " Hinge Screw.....

NO.	PLATE	NAME
17873	6994	Trip Lever Spring.....
1182E	7027	" " " Screw.....
17874	6987	Tripping Point.....
190D	6990	" " Screw.....

ATTACHMENTS AND ACCESSORIES

NO.	PLATE	NAME
18419	—	Cylinder Base Plate with two 453c.....
18420	7006	" " " Hinge Connection
18423	7006	" " " " "
		Hinge Pin.....
453c	6987	Cylinder Base Plate Hinge Connection Hinge Pin Set Screw.....
18424	7005	Cylinder Base Plate (hinged) complete, Nos. 18419, two each 18420, 18423, three wood screws 1¼ in. No. 12 and four 134D.....
134D	7006	Cylinder Base Plate Screw.....
120346	7007	Oiler (copper plated) with 120347.....
120347	7007	" Spout, 9 in. long.....
11831	7007	Screw Driver (large).....
26026	7007	" " (small).....
4822	7007	Wrench for 1547.....
10875	7007	" " 1518, 1520 and 1662.....
17905	7007	" " 1176, 1178, 1654, 1655 and 1681.....
25200	7007	Wrench for 1527.....
27662	7007	" " 1254 and 1508.....

PROTECTOR

NO.	PLATE	NAME
39489	7008	Arm with 39490.....
160c	7009	" Clamping Screw.....
39490	—	Blade.....
39491	7008	Bracket with two each 426c and 448c...
426c	7009	" Adjusting Screw.....
50351D	7009	" Screw.....
39492	7009	Crank with 160c.....
39493	7009	" Bracket with 1120c and two 454c
454c	7009	" " Set Screw.....
52598	7009	" Hinge Stud.....
1120c	7009	" " Set Screw.....
39494	7008	Rod.....
15261	7009	" Collar with 237F.....

PROTECTOR

NO.	PLATE	NAME
237F	7009	Rod Collar Set Screw.....
39495	7009	" Connection.....
176D	7009	" " Screw.....
1099F	7009	" Screw Stud.....
39496	7008	" Sleeve.....
448C	7009	" " Set Screw.....
39497	7009	" Spring.....
15261	7009	" " Collar with 237F.....
237F	7009	" " " Set Screw.....
63753	—	Protector (front of needle) Nos. 1099F, 39489, 39491 to 39494, 39496, 39497, 52598 and two 15261.....
39498	—	Protector (front of needle) complete, Nos. 39495, 63753 and two each 176D and 50351D.....

STARTING LEVER AND FOOT LIFTER PARTS

NO.	PLATE	NAME
17876	7005	Treadle with 443C.....
17877	7005	" Pitman Rod (lower).....
17878	7005	" " " (upper).....
17879	7005	" " " Clamp with two 161D.....
161D	6998	Treadle Pitman Rod Clamp Screw.....
17880	7005	Treadle Pitman complete, Nos. 17877 to 17879.....
17881	7006	Treadle Shaft.....
443C	7015	" " Set Screw.....
17882	7006	" Spring.....
17883	7005	" Stand.....
17884	—	Treadle complete, Nos. 17876, 17881 to 17883 and two wood screws 1 in. No. 10
17885	—	Treadle and Pitman complete, Nos. 17880 and 17884.....

STAND FOR ELECTRIC MOTOR

NO.	PLATE	NAME
46645	—	Belt, size $\frac{1}{4}$ in., length $45\frac{1}{2}$ in., with 25127.....
25127	7006	Belt Hook.....
46667	7033	Brace.....
748E	7006	" Screw.....

NO.	PLATE	NAME
46522	7033	Leg.
4881	7033	Motor Treadle.
46614	7033	" " Bracket (left)
1177E	7026	" " " " Screw.
46615	7033	" " " (right)
1177E	7026	" " " " Screw.
4879	7010	" " Chain Connecting Link.
4882	7010	" " Shaft.
4883	7010	" " Spring.
46616	7033	Motor Treadle complete, Nos. 4879, 4881 to 4883, 46614 and 46615.
4881	7033	Starting Treadle.
46614	7033	" " Bracket (left)
1177E	7026	" " " " Screw.
46615	7033	" " " (right)
1177E	7026	" " " " Screw.
4879	7010	" " Chain Connecting Link
4882	7010	" " Shaft.
4883	7010	" " Spring.
46616	7033	Starting Treadle complete, Nos. 4879, 4881 to 4883, 46614 and 46615.
46642	7033	Treadle Support.
46643	—	" " 46642 with two 46616 and four 1177E.
780E	6998	Treadle Support Bolt with 1600E.
1600E	6999	" " " Nut.
25086	7033	Wrench.
25286	—	Stand (iron work) complete, Nos. 25086, 46643, 46667, two each 780E, 46522 and four 748E.

TABLE BELT GUIDE

NO.	PLATE	NAME
39218	7005	Belt Guide with two 168E.
168E	6998	" " Set Screw.
17892	7005	Bracket with two 153E.
17893	7005	Pulley.
39219	7005	" Shaft (long) with 17896.
39220	7005	" " (short) with 17896.
17896	7006	" " Plug.
153E	6998	" " Set Screw.
39221	—	Table Belt Guide complete, Nos. 17892, 39219, 39220, two each 17893, 39218 and three wood screws 1¼ in. No. 12.

TRIMMINGS FOR TABLE 5380

NO.	PLATE	NAME
62281	7033	Machine Base with wood screw $1\frac{3}{4}$ in. No. 14, two each 694E, 62164, three each 1385E, 27253 and four 134D.....
1385E	7011	Machine Base Bolt with 1524E.....
1524E	7011	" " " Nut.....
27253	7011	" " " Washer.....
134D	7006	" " " Screw.....
5670	—	Presser Bar Lifting Lever Chain, length 26 in. to 35 in., with 56864 and 56865..
6439	—	Starting Lever Chain, length 36 in. to 45 in., with 56864 and 56865.....
NOTE: When ordering Nos. 5670 or 6439 give length required.		
56864	7007	Chain Hook (large.....
56865	7006	" " (small).....
62164	7011	Starting Lever Chain Pulley.....
694E	7011	" " " " " Screw.....
46644	7033	Table Support with three wood screws $1\frac{3}{4}$ in. No. 14.....
62165	7033	Table Work Clamp.....
20093	7033	" " " " Hanger with two wood screws 1 in. No. 10.....
62166	7011	Table Work Clamp Spring.....
62167	7010	" " " " " Arm with 361c.....
361c	7010	Table Work Clamp Spring Arm Set Screw.....
62168	7010	Table Work Clamp Spring Bracket with two wood screws 1 in. No. 10.....

THREAD UNWINDER

FOR ONE LARGE SPOOL OR ONE LARGE CONE OF THREAD

NO.	PLATE	NAME
27623	2836	Spool Pin.....
155c	6992	" " Set Screw.....
41526	2836	" Rest.....
60701	—	" " 41526 with 155c and 1149c..
41527	—	" " 60701 with 27623.....
1149c	6998	" " Set Screw.....
27940	2836	" Stand with 453c.....
41514	2836	" Weight, 4 in. diam., with 41515..
41515	7006	" " Centre Pin.....

NO.	PLACE	NAME
27739	2836	Thread Cone (wood).....
41630	2836	" Guard with 208E and 41569....
41569	7006	" " Eyelet.....
41637	2836	" " Rod (lower).....
41638	2836	" " " (upper).....
41639	2836	" " " Coupling with two 456c.....
456c	6998	Thread Guard Rod Coupling Set Screw
41640	—	Thread Guard Rod complete, 30 in. long, Nos. 41637 to 41639.....
453c	6987	Thread Guard Rod Set Screw.....
208E	6980	" " Screw.....
41529	2836	Thread Unwinder complete, Nos. 27739, 27940, 41514, 41527, 41630, 41640 and three wood screws 1 in. No. 12.....
60771	7006	Thread Guide.....
60772	—	" " 60771 with 41635.....
41635	7006	" " Bracket with 175D.....
175D	7006	" " " Set Screw.....
60773	—	Thread Unwinder with Thread Guide complete, Nos. 41529 and 60772.....

OBSOLETE PARTS

NO.	PLATE	NAME
*62144	—	Cylinder for 114-22 Machine.....
62145	7002	" Bottom Cover for 62146.....
62183	7020	" " " " 62184.....
62146	—	" End Cover 62108 with 1034D, 62110 to 62113, 62145 and two each 1345D and 1477D, for 114-22 Machine, use 62190.....
62184	—	Cylinder End Cover 62108 with 1034D, 62111 to 62113, 62183, 62185 and four 1477D, for 114-23 and 114-24 Machines, use 62190.....
62110	6980	Cylinder End Cover Bracket.....
1345D	7027	" " " " Screw.....
62116	6982	Feed Across Knuckle Joint.....
17728	6982	" " " " Connection
1184E	6982	" " " " "
		Hinge Screw.....
17730	6982	Feed Across Lever Ball Stud.....
17733	6982	" " " " Socket Bearing
17734	6982	" " " " "
		Block (two pieces).....

NO.	PLATE	NAME
145F	6982	Feed Across Lever Socket Bearing Block Set Screw.....
1528J	6982	Feed Across Lever Socket Bearing Block Set Screw Nut.....
1187E	6982	Feed Across Regulator Adjusting Screw Stud.....
17739	6982	Feed Across Regulator Adjusting Screw Stud Sleeve.....
124663	7028	Knife for 114-24 Machine.....
208D	6980	" Clamping Screw.....
124664	7028	" Holder with 208D, for 114-24 Machine.....
203D	7027	Knife Holder Screw for 124664.....
59741	6993	Looper with 34418, for 114-22 Machine, use 62162.....
62162	—	Looper with 34418, for 114-22 Machine, use 62179.....
124624	7032	Thread Nipper (lower) Lever Shaft Bracket for 114-23 and 114-24 Machines.....
124667	7028	Thread Pull-off for 114-24 Machine....
59789	6993	Throat Plate Needle Guard, use 59799..

NUMERICAL LIST OF PARTS
FOR
MACHINES
Nos. 114-22 to 114-24

NUMERICAL LIST OF PARTS

NO. PLATE	NAME
93C 7019	Needle Bar Thread Retainer Disc Spring Screw for 124605.....
99K 7028	Thread Nipper (lower) Connection Ex- tension Hinge Screw for 114-23 and 114-24 Machines.....
134D 7006	Cylinder Base Plate Screw for 18424....
134D 7006	Machine Base Screw for 62281.....
145F 6982	Feed Across Lever Socket Bearing Block Set Screw, obsolete.....
153E 6998	Table Belt Guide Pulley Shaft Set Screw for 17892.....
155c 6992	Needle Bar Connecting Stud Set Screw for 2052.....
155c 6992	Thread Unwinder Spool Pin Set Screw for 60701.....
160D 6998	Feed Across Lever Hinge Stud Clamping Screw for 62148.....
160D 6998	Feed Regulator Bracket Cap Screw for 62148 and 124651.....
160c 7009	Protector Arm Clamping Screw for 39492
161D 6998	Treadle Pitman Rod Clamp Screw for 17879.....
164D 6990	Face Plate Screw.....
164D 6990	Knife Bar Cap Screw for 114-22 and 114-23 Machines.....
164E 6990	Presser Bar Lifting Lever Bracket Screw for 59701 and 62295.....
164D 6990	Thread Pull-off Bar Cap Screw for 114-24 Machine.....
168E 6998	Table Belt Guide Set Screw for 39218...
171E 6991	Looper Shaft Ball Connection Cap Screw for 62132.....
171E 6991	Looper Shaft Eccentric Connection Cap Screw for 62132.....
175D 7006	Thread Unwinder Thread Guide Bracket Set Screw for 41635.....
176D 7009	Clamp Lifter Screw.....
176D 7009	Protector Rod Connection Screw for 39498.....
184E 6998	Belt Cover Bracket Screw Stud for 59795.
190D 6990	Arm Side Cover Screw.....
190D 6990	Cloth Plate Screw.....

NO.	PLATE	NAME
190J	6990	Feed Plate Carrier Bar Guide Screw for 114-23 Machine.....
190D	6990	Knife Bar Connection Screw for 114-22 and 114-23 Machines.....
190D	6990	Looper Driving Shaft Gear Cover Screw.
190D	6990	Thread Pull-off Bar Connection Screw for 114-24 Machine.....
190D	6990	Tripping Point Screw for 62284, 124648 and 124661.....
193D	7027	Stop Cam Interlocking Rod Case Wearing Block Screw for 62136.....
196F	6992	Presser Bar Collar Set Screw for 17841..
201D	7026	Clamp Arm Hook Screw for 62259.....
203D	7027	Knife Holder Screw for 124664, obsolete
206J	7024	Thread Nipper (lower) Connection Extension Screw for 114-23 and 114-24 Machines.....
206E	7024	Throat Plate Thread Retainer Screw for 114-22 and 114-24 Machines.....
208D	6980	Face Plate Thread Nipper Disc Cover Screw for 59712.....
208D	6980	Knife Clamping Screw for 124664, obsolete.....
208D	6980	Knife Screw for 114-24 Machine.....
208D	6980	Thread Pull-off Cam Screw (long) for 62284.....
208E	6980	Thread Unwinder Thread Guard Screw for 41630.....
208E	6980	Throat Plate Needle Guard Screw.....
217D	6998	Belt Cover Screw.....
223F	6990	Knife Bar Driving Lever Lock Stud Screw for 59734.....
223F	6990	Thread Pull-off Bar Driving Lever Lock Stud Screw for 59734.....
227D	7015	Thread Pull-off Cam Screw (short) for 62284.....
229D	7027	Face Plate Thread Guard Screw for 59712.....
233D	6995	Needle Guard Shaft Spring Screw.....
233D	6995	Thread Eyelet (head of arm) Set Screw for 114-22 Machine, obsolete
236F	6990	Knife Screw for 114-22 and 114-23 Machines.....
236F	6990	Thread Pull-off Screw for 114-24 Machine.....
237F	7009	Protector Rod Collar Set Screw for 15261

NUMERICAL LIST OF PARTS

49

NO.	PLATE	NAME
237F	7009	Protector Rod Spring Collar Set Screw for 15261.....
237K	7009	Thread Nipper (lower) Lever Set Screw for 124621.....
286D	6980	Cylinder Top Cover Thumb Screw.....
330D	6979	Thread Wiper Body Finger Screw.....
335J	7027	" Nipper (lower) Cam Screw for 124648 and 124661.....
335J	7027	Thread Nipper (lower) Lever Guide Screw for 124661.....
337D	6979	Thread Take-up Roller Cap Screw for 62173 and 124626.....
361c	7010	Table Work Clamp Spring Arm Set Screw for 62167.....
377c	6992	Needle Bar Connecting Link Hinge Screw for 62283.....
426c	7009	Protector Bracket Adjusting Screw for 39491.....
430c	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw for 39344.....
443c	7015	Treadle Shaft Set Screw for 17876.....
448c	6992	Arm Shaft (upright) Bushing (lower) Set Screw.....
448c	6992	Arm Shaft (upright) Bushing (upper) Set Screw.....
448c	6992	Needle Bar Crank Wheel Set Screw for 59757.....
448c	7009	Protector Rod Sleeve Set Screw for 39491
453c	6987	Cylinder Base Plate Hinge Connection Hinge Pin Set Screw for 18419.....
453c	6987	Feed Cam Driving Worm Wheel Set Screw for 17797.....
453c	6987	Presser Bar Guide Bracket Set Screw for 17842.....
453c	6987	Thread Unwinder Thread Guard Rod Set Screw for 27940.....
454c	7009	Protector Crank Bracket Set Screw for 39493.....
456c	6998	Thread Unwinder Thread Guard Rod Coupling Set Screw for 41639.....
457c	7027	Thread Controller Stud Set Screw for 114-23 and 114-24 Machines.....
460c	7019	Needle Bar Thread Retainer Bracket Set Screw for 124603.....
465c	6991	Looper Driving Shaft Collar Set Screw for 59745.....
465c	6991	Looper Shaft Collar Set Screw for 59745

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
465c	6991	Needle Guard Cam Set Screw for 59759 and 124601.....
465c	6991	Needle Guard Shaft Collar Set Screw for 59761.....
465c	6991	Needle Guard Shaft Crank Set Screw for 59762 and 124602.....
624c	6991	Looper Shaft Ball Set Screw for 62197...
624c	6991	“ “ Eccentric Set Screw for 59750.....
624c	6991	Needle Guard Shaft Spring Collar Set Screw for 59766.....
624c	6991	Thread Nipper (upper) Body Set Screw..
641c	6979	“ Wiper Body Support Set Screw..
665J	7028	“ Nipper (lower) Blade Carrier Cap Screw for 114-23 and 114-24 Machines.
691F	6990	Knife Holder Cap Screw for 114-22 and 114-23 Machines.....
691F	6990	Thread Pull-off Holder Cap Screw for 114-24 Machine.....
691F	6990	Thread Take-up Screw.....
691F	6990	Throat Plate Screw.....
694E	7011	Starting Lever Chain Pulley Screw for 62281.....
704J	7019	Clamp Locking Device Latch Clamping Screw for 124677.....
742F	6980	Cloth Plate Guide Block (left) Screw for 62105.....
748E	7006	Brace Screw for 25286.....
780E	6998	Treadle Support Bolt with 1600E, for 25286.....
880E	6998	Arm Screw.....
896E	7027	Feed Across Connection Cap Screw for 63940 and 63942.....
898D	6998	Stop Cam Interlocking Rod Case Socket Joint Cap Screw for 62186.....
934J	6987	Feed Plate Carrier Bar Plate Screw for 62123, 62156 and 124662.....
965D	6993	Needle Guard Shaft End Bearing Bracket Screw.....
1034D	6980	Cylinder End Cover Spring Screw for 62146, 62184 and 62190.....
1036c	6976	Arm Shaft (horizontal) Gear Set Screw for 59703.....
1072F	6993	Needle Set Screw for 59756 and 62299..
1094F	6985	Feed Across Lever Plate Screw for 62156 and 124662.....

NO.	PLATE	NAME
1094F	6985	Feed Plate Carrier Bar Position Plate Screw for 62123.....
1095F	6991	Looper Shaft Ball Connection Stud Cap Screw for 114-23 Machine.....
1095F	6991	Looper Shaft Eccentric Connection Stud Cap Screw for 114-22 and 114-24 Machines.....
1099F	7009	Protector Rod Screw Stud for 63753....
1120C	7009	“ Crank Hinge Stud Set Screw for 39493.....
1148C	7015	Looper Driving Shaft Bushing Set Screw
1149C	6998	Thread Unwinder Spool Rest Set Screw for 60701.....
1176J	7026	Clamp Arm Hinge Plate Screw.....
1177D	7026	“ Pressure Spring Bracket Screw..
1177D	7026	Feed Regulator Bracket Screw.....
1177E	7026	Motor Treadle Bracket (left) Screw for 46643.....
1177E	7026	Motor Treadle Bracket (right) Screw for 46643.....
1177E	7026	Starting Treadle Bracket (left) Screw for 46643.....
1177E	7026	Starting Treadle Bracket (right) Screw for 46643.....
1177J	7026	Thread Nipper (lower) Lever Shaft Bracket Screw for 114-23 and 114-24 Machines.....
1178J	7026	Clamp Pressure Spring Screw.....
1182E	7027	Trip Lever Spring Screw for 62186.....
1184E	6982	Feed Across Knuckle Joint Connection Hinge Screw, obsolete.....
1185C	6982	Feed Across Connection (lever end) Ball Stud Set Screw for 62147.....
1186C	6991	Looper Shaft Slide Block Cap Screw....
1186D	6991	Stop Cam Interlocking Rod Case Spring Bracket Screw for 62137.....
1187E	6982	Feed Across Regulator Adjusting Screw Stud, obsolete.....
1188D	6998	Feed Across Regulator Hinge Screw for 114-22 and 114-24 Machines.....
1189E	7001	Feed Across Regulator Link Screw Stud for 114-22 and 114-24 Machines.....
1190C	6987	Feed Regulator Stop Screw.....
1191D	6987	“ “ Thumb Screw.....
1192C	6987	“ Cam Set Screw for 62284, 124648 and 124661.....

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
1195E	7027	Feed Plate Screw Stud for 62123, 62156 and 124662.....
1196C	6998	Thread Pull-off Driving Lever Hinge Screw for 114-22 Machine, obsolete...
1196C	6998	Trip Lever Hinge Screw for 62186.....
1201D	7006	Presser Bar Lifting Lever Hinge Screw..
1202D	6998	Pulley (loose) Cap Screw for 17955.....
1204E	6998	Stop Cam Interlocking Rod Case Hinge Screw for 62186.....
1206C	6994	Stop Cam Screw for 17955.....
1207D	6979	Thread Wiper Body Hinge Screw.....
1220E	7000	Clamp Screw Stud for 62174 and 124646.
1235F	6990	Knife Bar Guide Screw for 114-22 and 114-23 Machines.....
1235F	6990	Thread Pull-off Bar Guide Screw for 114-24 Machine.....
1253C	6976	Arm Shaft (upright) Gear (lower) Set Screw for 59707.....
1253C	6976	Arm Shaft (upright) Gear (upper) Set Screw for 59708.....
1253C	6976	Looper Driving Shaft Gear Set Screw for 59707.....
1254C	6998	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing for 62186.....
1255D	6976	Belt Shifter Clamp Screw for 62159....
1259C	6991	Looper Shaft Ball Connection Stud Set Screw for 114-23 Machine.....
1259C	6991	Looper Shaft Eccentric Connection Stud Set Screw for 114-22 and 114-24 Machines.....
1262C	6998	Starting Lever Hinge Screw for 62186...
1282C	7019	Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (lower) for 114-23 and 114-24 Machines....
1282C	7019	Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (upper) for 114-23 and 114-24 Machines.....
1293C	6992	Needle Bar Crank Wheel Position Screw for 59757.....
1302D	6979	Thread Wiper Body Wire Clamp Screw.
1318D	6994	Stop Cam Interlocking Rod Stop Screw for 62159.....
1345D	7027	Cylinder End Cover Bracket Screw for 62146, obsolete.....
1382F	6998	Knife Bar Driving Lever Hinge Screw for 114-22 and 114-23 Machines.....

NUMERICAL LIST OF PARTS

53

NO.	PLATE	NAME
1382F	6998	Thread Pull-off Bar Driving Lever Hinge Screw for 114-24 Machine.....
1385E	7011	Machine Base Bolt with 1524E, for 62281.
1441c	6987	Feed Cam Driving Worm Set Screw for 18415.....
1442c	6987	Feed Cam Driving Worm Position Screw for 18415.....
1445H	6996	Thread Pull-off Lever Bushing Screw for 114-22 Machine, obsolete.....
1477D	6980	Cylinder End Cover Bracket Screw for 62184 and 62190.....
1477D	6980	Cylinder End Cover Hinge Screw for 62146, 62184 and 62190.....
1477F	6980	Thread Controller Spring Collar Set Screw for 124608.....
1480H	6993	Needle Guard Shaft End Bearing Cap Screw.....
1508E	6999	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut for 62186.....
1518E	6992	Needle Bar Connecting Link Hinge Screw Nut for 62283.....
1520E	6994	Arm Shaft (horizontal) Bushing (back) Adjusting Screw Nut.....
1520E	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut for 39344.....
1524E	7011	Machine Base Bolt Nut for 1385.....
1527D	6995	Thread Nipper (upper) Lock Nut for 59778.....
1528J	6982	Feed Across Lever Socket Bearing Block Set Screw Nut, obsolete.....
1547D	6980	Cloth Plate Guide Block (left) Screw Nut for 62105.....
1560c	6995	Tension Regulating Thumb Nut.....
1600E	6999	Treadle Support Bolt Nut for 780.....
1649c	6982	Feed Across Connection Adjusting Stud Nut (left hand thread) for 114-22 and 114-24 Machines.....
1650c	6982	Feed Across Connection Adjusting Stud Nut (right hand thread) for 114-22 and 114-24 Machines.....
1653c	6999	Feed Cam Shaft Nut.....
1654c	7027	" Plate Nut.....
1655c	6985	" Regulator Roller and Screw Stud Nut for 1953.....
1656J	7000	Clamp Thumb Nut for 62262 and 124647.

NO.	PLATE	NAME
1662c	6999	Starting Lever Hinge Screw Nut for 62186.....
1676c	6982	Feed Across Regulator Adjusting Screw Stud Nut for 114-22 and 114-24 Machines.....
1681c	6999	Knife Bar Driving Lever Hinge Screw Nut for 114-22 and 114-23 Machines..
1681c	6999	Thread Pull-off Bar Driving Lever Hinge Screw Nut for 114-24 Machine.....
1743d	6979	Thread Nipper (upper) Adjusting Thumb Nut for 59778.....
1952	7027	Feed Across Lever Roller and Stud for 62147.....
1953	7019	Feed Regulator Roller and Screw Stud with 1655c and 14017, for 17742 and 62157.....
2022	7027	Needle Guard Shaft End Bearing Bracket Dowel Pin.....
2022	7027	Pulley (tight) Pin.....
2026	6995	Thread Nipper (upper) Stud Spring for 59778.....
2052	6992	Needle Bar Connecting Stud with 155c, for 62283.....
2058	6989	Presser Bar.....
2102	6995	Tension Disc.....
2107	6980	Face Plate Thread Guard for 59712.....
2269	6994	Clamp Locking Device Latch Shaft Crank Pin for 114-23 and 114-24 Machines
2269	6994	Pulley (loose) Bushing Position Pin for 17942.....
2273	7027	Needle Guard Pin.....
2921	6995	Thread Nipper (upper) Disc for 59778.
3012	7019	Feed Cam Driving Worm Wheel Pin...
3012	7019	Stop Cam Pin.....
3021	6980	Cloth Plate Guide Block (right) Rivet for 62105.....
3021	6980	Knife Holder Connection Rivet for 62124
3021	6980	Thread Pull-off Holder Connection Rivet for 62124.....
4448	6976	Arm Oil Tube for intermediate bearing..
*4449	—	“ Shaft (horizontal) Bushing (front) for 59701 and 62295.....
4822	7007	Wrench for 1547 (Accessories).....
4879	7010	Motor Treadle Chain Connecting Link for 46616.....
4879	7010	Starting Treadle Chain Connecting Link for 46616.....

NO. PLATE

NAME

Nos. 4881 TO 4883 FOR 46616

4881	7033	Motor Treadle.....
4881	7033	Starting Treadle.....
4882	7010	Motor Treadle Shaft.....
4882	7010	Starting Treadle Shaft.....
4883	7010	Motor Treadle Spring.....
4883	7010	Starting Treadle Spring.....
5670	—	Presser Bar Lifting Lever Chain, length 26 in. to 35 in., with 56864 and 56865 (Trimings for Table 5380).....
6037	7028	Thread Nipper (lower) Blade Rivet for 124614.....
6439	—	Starting Lever Chain, length 36 in. to 45 in., with 56864 and 56865 (Trimings for Table 5380).....
8414	6989	Presser Bar Spring.....
8554	7019	Thread Nipper (lower) Driving Arm Pin for 114-23 and 114-24 Machines.....
8554	7019	Thread Nipper (lower) Lever Pin for 114-23 and 114-24 Machines.....
8589	7019	Feed Regulator Bracket Dowel Pin....
8734	7015	Knife Bar Retaining Spring for 114-22 and 114-23 Machines.....
8734	7015	Thread Pull-off Bar Retaining Spring for 114-24 Machine.....

Nos. 9543 TO 9545 FOR 59712

9543	6980	Face Plate Thread Nipper Disc.....
9544	6980	" " " " " Cover..
9545	6980	" " " " " Spring..
10106	7019	Needle Bar Thread Retainer Disc (out- side) for 124605.....
10107	7019	Needle Bar Thread Retainer Disc Spring for 124605.....
10145	6995	Tension Thread Guide.....
10875	7007	Wrench for 1518, 1520 and 1662 (Acces- sories).....
11831	7007	Screw Driver, large (Accessories).....
12162	6995	Thread Nipper (upper) Disc Guide Pin.
13538	6995	Thread Nipper (upper) Stud Position Pin for 59776.....
13539	6995	Thread Nipper (upper) Stud Roller for 59777.....
13540	6995	Thread Nipper (upper) Stud Roller Pin for 59777.....
13915	6995	Tension Spring Bushing.....

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
14017	6985	Feed Regulator Roller and Screw Stud Nut Washer for 1953.....
15261	7009	Protector Rod Collar with 237F, for 63753.....
15261	7009	Protector Rod Spring Collar with 237F, for 63753.....
16532	6976	Arm Dowel Pin.....
17703	6981	" Shaft (horizontal) Bushing (back)..
17710	7026	Clamp Arm Hinge Plate.....
17712	7001	" Pressure Spring.....
17713	7026	" " " Bracket.....
17714	7026	" " " Guide Block for 17927 and 62258.....
17718	6979	Knife Screw Washer for 114-24 Machine.
17728	6982	Feed Across Knuckle Joint Connection, obsolete.....
17730	6982	Feed Across Lever Ball Stud, obsolete..
*17732	—	" Regulator Bracket Cap for 124651.
17733	6982	" Across Lever Socket Bearing, obso- lete.....
17734	6982	Feed Across Lever Socket Bearing Block (two pieces) obsolete.....
17737	7004	Feed Across Lever Hinge Stud for 114-22 and 114-24 Machines.....
17738	6982	Feed Across Regulator Adjusting Screw Stud Nut Washer (steel) for 114-22 and 114-24 Machines.....
17739	6982	Feed Across Regulator Adjusting Screw Stud Sleeve, obsolete.....
17741	6985	Feed Plate Carrier Bar Position Plate Stud for 62118.....
17742	7032	Feed Regulator with 1953, for 114-23 Machine.....
17743	6987	Feed Regulator Post for 62123, 62156 and 124662.....
17744	6987	Feed Regulator Hinge Stud.....
17745	6987	" " Swivel for 114-23 Ma- chine.....
17797	6977	Feed Cam Driving Worm Wheel with 453c.....
17806	7027	Feed Plate Position Stud for 62123, 62156 and 124662.....
17841	6992	Presser Bar Collar with two 196F.....
17842	6992	" " Guide Bracket with 453c...
17843	6981	" " Lifting Lever for 114-22 Ma- chine, obsolete.....

NUMERICAL LIST OF PARTS

57

NO.	PLATE	NAME
17845	7032	Presser Bar Lifting Lever Rod.....
17846	—	“ “ “ “ “ Chain...
17848	6977	Pulley (loose) Bushing for 17955.....
17853	6994	Starting Lever for 62186.....
17854	6994	Stop Cam for 17955.....
17855	6994	“ “ Interlocking Rod for 62159...
17859	6977	“ “ “ “ Case Socket Joint for 62186.....
17861	6994	Stop Cam Interlocking Rod Case Stop Stud for 62186.....
17862	6994	Stop Cam Interlocking Rod Case Stop Stud Spring for 62186.....
17863	6994	Stop Cam Interlocking Rod Spring for 62159.....
17864	6994	Stop Cam Interlocking Rod Stop for 62159.....
17872	6994	Trip Lever for 62186.....
17873	6994	“ “ Spring for 62186.....
17874	6987	Tripping Point for 62284, 124648 and 124661.....
17876	7005	Treadle with 443c, for 17884.....

Nos. 17877 TO 17879 FOR 17880

17877	7005	Treadle Pitman Rod (lower).....
17878	7005	“ “ “ (upper).....
17879	7005	“ “ “ Clamp with two 161D.....
17880	7005	Treadle Pitman complete for 17885, Nos. 17877 to 17879.....

Nos. 17881 TO 17883 FOR 17884

17881	7006	Treadle Shaft.....
17882	7006	“ Spring.....
17883	7005	“ Stand.....
17884	—	Treadle complete for 17885, Nos. 17876, 17881 to 17883 and two wood screws 1 in. No. 10.....
17885	—	Treadle and Pitman complete, Nos. 17880 and 17884.....
17886	7032	Starting Lever Pitman.....
17892	7005	Table Belt Guide Bracket with two 153E, for 39221.....
17893	7005	Table Belt Guide Pulley for 39221.....
17896	7006	“ “ “ “ Shaft Plug for 39219 and 39220.....
17905	7007	Wrench for 1176, 1178, 1654, 1655 and 1681 (Accessories).....

NO.	PLATE	NAME
17915	6990	Knife Bar Connection Slide Block for 17917.....
17915	6990	Thread Pull-off Bar Connection Slide Block for 17917.....
17916	6990	Knife Bar Connection Slide Block Stud for 17917.....
17916	6990	Thread Pull-off Bar Connection Slide Block Stud for 17917.....
17917	—	Knife Bar Connection Slide Block 17915 with 17916, for 62126.....
17917	—	Thread Pull-off Bar Connection Slide Block 17915 with 17916, for 62126 ...
17927	7029	Clamp Arm with 17714 and 63788, for 124647.....
17928	7000	Clamp Position Stud for 62174 and 124646.....
17941	6977	Pulley (loose) $2\frac{7}{8}$ in. diam., for 17955..
17942	6977	" (tight) $2\frac{7}{8}$ in. diam., with 2269, for 17955.....
17955	—	Pulleys complete, Nos. 1202D, 1206c, 17848, 17854, 17941 and 17942.....
18368	6987	Feed Plate Carrier Bar Plate for 62123, 62156 and 124662.....
18384	7019	Feed Cam Pin.....
18415	6987	" " Driving Worm with 1441c and 1442c.....
18419	—	Cylinder Base Plate with two 453c, for 18424.....
18420	7006	Cylinder Base Plate Hinge Connection for 18424.....
18423	7006	Cylinder Base Plate Hinge Connection Hinge Pin for 18424.....
18424	7005	Cylinder Base Plate (hinged) complete, Nos. 18419, two each 18420, 18423, three wood screws $1\frac{1}{4}$ in. No. 12 and four 134D (Attachments and Accessories).....
*18445	6989	Feed Plate Carrier Bar for 62123, 62156 and 124662.....
18498	6975	Belt Cover.....
20093	7033	Table Work Clamp Hanger with two wood screws 1 in. No. 10 (Trimmings for Table 5380).....
21828	6976	Stop Cam Interlocking Rod Case Bracket Dowel Pin.....
25086	7033	Wrench for 25286.....
25127	7006	Belt Hook for 46645.....

NO.	PLATE	NAME
25200	7007	Wrench for 1527 (Accessories).....
25286	—	Stand (iron work) complete, for electric motor, Nos. 25086, 46643, 46667, two each 780E, 46522 and four 748E..
26026	7007	Screw Driver, small (Accessories).....
26770	6980	Cloth Plate Stop Rivet for 62105.....
27253	7011	Machine Base Bolt Washer for 62281...
27623	2836	Thread Unwinder Spool Pin for 41527..
27662	7007	Wrench for 1254 and 1508 (Accessories).
27739	2836	Thread Unwinder Thread Cone (wood) for 41529.....
27940	2836	Thread Unwinder Spool Stand with 453c, for 41529.....
34418	6991	Looper Washer for 59741, 62162, 62179, 62298 and 124666.....
*39203	6992	Needle Bar Connecting Link for 62283..

Nos. 39218 TO 39220 FOR 39221

39218	7005	Table Belt Guide with two 168E.....
39219	7005	“ “ “ Pulley Shaft (long) with 17896.....
39220	7005	Table Belt Guide Pulley Shaft (short) with 17896.....
39221	—	Table Belt Guide complete, Nos. 17892, 39219, 39220, two each 17893, 39218 and three wood screws 1¼ in. No. 12.
39222	6977	Belt Shifter for 62159.....
39223	6976	“ “ Clamp for 62159.....
*39310	—	Feed Regulator Bracket Cap for 62148..
39313	7004	“ “ Swivel for 114-22 and 114-24 Machines.....
39343	6981	Stop Cam Interlocking Rod Case Spring (flat) for 62137.....
39344	6994	Stop Cam Interlocking Rod Case Spring Bracket with 430c and 1520E, for 62137
39358	7004	Feed Plate for 114-22 Machine, obsolete
39452	6979	Thread Wiper Body.....
39453	6979	“ “ “ Finger.....
39455	6979	“ “ “ Wire.....
39456	6979	“ “ “ “ Clamp.....
39489	7008	Protector Arm with 39490, for 63753...
39490	—	“ Blade for 39489.....

Nos. 39491 TO 39494 FOR 63753

39491	7008	Protector Bracket with two each 426c and 448c.....
-------	------	--

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
39492	7009	Protector Crank with 160c.....
39493	7009	“ “ Bracket with 1120c and two 454c.....
39494	7008	Protector Rod.....
39495	7009	“ “ Connection for 39498....
39496	7008	“ “ Sleeve for 63753.....
39497	7009	“ “ Spring for 63753.....
39498	—	Protector (front of needle) complete, Nos. 39495, 63753 and two each 176d and 50351d.....
41514	2836	Thread Unwinder Spool Weight, 4 in. diam., with 41515, for 41529.....
41515	7006	Thread Unwinder Spool Weight Centre Pin for 41514.....
41526	2836	Thread Unwinder Spool Rest for 60701
41527	—	“ “ “ “ 60701 with 27623, for 41529.....
41529	2836	Thread Unwinder complete for 60773, Nos. 27739, 27940, 41514, 41527, 41630, 41640 and three wood screws 1 in. No. 12.....
41569	7006	Thread Unwinder Thread Guard Eyelet for 41630.....
41630	2836	Thread Unwinder Thread Guard with 208E and 41569, for 41529.....
41635	7006	Thread Unwinder Thread Guide Bracket with 175d, for 60772.....
Nos. 41637 to 41639 for 41640		
41637	2836	Thread Unwinder Thread Guard Rod (lower).....
41638	2836	Thread Unwinder Thread Guard Rod (upper).....
41639	2836	Thread Unwinder Thread Guard Rod Coupling with two 456c.....
41640	—	Thread Unwinder Thread Guard Rod complete, 30 in. long, for 41529, Nos. 41637 to 41639.....
*42076	—	Feed Across Connection Cap for 63940 and 63942.....
42336	6995	Tension Spring.....
42348	7019	Needle Bar Thread Retainer Disc (in- side) for 124605.....
42808	6979	Thread Take-up Roller for 62173 and 124626.....

NO.	PLATE	NAME
46244	7027	Feed Across Regulator Adjusting Screw Stud Nut Washer (fibre) for 114-22 and 114-24 Machines.....
46522	7033	Leg for 25286.....
46614	7033	Motor Treadle Bracket (left) for 46616.
46614	7033	Starting Treadle Bracket (left) for 46616.
46615	7033	Motor Treadle Bracket (right) for 46616.
46615	7033	Starting Treadle Bracket (right) for 46616.....
46616	7033	Motor Treadle complete for 46643, Nos. 4879, 4881 to 4883, 46614 and 46615..
46616	7033	Starting Treadle complete for 46643, Nos. 4879, 4881 to 4883, 46614 and 46615.....
46642	7033	Treadle Support for 46643.....
46643	—	“ “ 46642 with two 46616 and four 1177E, for 25286.....
46644	7033	Table Support with three wood screws 1¾ in. No. 14 (Trimings for Table 5380).....
46645	—	Belt, size ¼ in., length 45½ in., with 25127, for 25286.....
46667	7033	Brace for 25286.....
50111D	6996	Thread Pull-off Lever Connection Hinge Screw (lever end) for 114-22 Machine, obsolete.....
50116D	6996	Thread Pull-off Lever Connection Hinge Screw (driving lever end) for 114-22 Machine, obsolete.....
50148c	6995	Tension Screw Stud.....
50150c	6991	Looper Driving Shaft Coupling Set Screw for 59746.....
50150c	6991	Looper Set Screw for 59749 and 62158..
50150c	6991	“ Shaft Coupling Set Screw for 59746.....
50150c	6991	Thread Nipper (upper) Cam Set Screw for 59774.....
50306c	6987	Feed Plate Carrier Bar Pivot Block Screw.....
50333c	6998	Arm Shaft (horizontal) Bushing (back) Adjusting Screw.....
50351D	7009	Protector Bracket Screw for 39498.....
50372D	7015	Stop Cam Interlocking Rod Case Bracket Screw.....
50599D	7027	Feed Across Regulator Adjusting Screw Stud for 114-22 and 114-24 Machines.

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
51812	6993	Needle Guard Shaft Crank Roller and Stud for 59762 and 124602.....
52045	6992	Looper Driving Shaft Bushing Packing (cotton).....
52598	7009	Protector Crank Hinge Stud for 63753..
55300	6985	Feed Across Lever Plate Steady Pin for 62156 and 124662.....
55300	6985	Feed Plate Carrier Bar Position Plate Steady Pin for 62123
55381	7027	Feed Across Connection (lever end) Ball Stud for 63941.....
56015	6976	Arm Oil Tube for oiling 59705 and 59706.
56549	—	Thread Controller Stud and Collar Pin for 124610.....
56864	7007	Chain Hook (large) for 5670 and 6439..
56865	7006	“ “ (small) for 5670 and 6439..
*59701	—	Arm with 4449, 59767 and two 164E, for 114-22 Machine, obsolete
59702	6975	Arm Shaft (horizontal).....
59703	6976	“ “ “ Gear with two 1036c.....
59704	6976	Arm Shaft (upright).....
59705	6976	“ “ “ Bushing(lower)...
59706	6976	“ “ “ “ (upper)...
59707	6976	“ “ “ Gear (lower) with two 1253c.....
59707	6976	Looper Driving Shaft Gear with two 1253c.....
59708	6976	Arm Shaft (upright) Gear (upper) with two 1253c.....
59710	6979	Clamp Lifter for 114-22 and 114-23 Machines.....
59711	6981	Face Plate for 59712.....
59712	—	Face Plate complete, Nos. 208D, 9544, 9545, 59711 and two each 229D, 2107 and 9543.....
59728	6989	Feed Cam Shaft for 114-23 Machine...
59730	6987	Feed Plate Carrier Bar Pivot Block....
59731	6990	Knife for 114-22 and 114-23 Machines..
59734	6990	“ Bar Driving Lever with 223F and 59735, for 114-22 and 114-23 Machines.
59734	6990	Thread Pull-off Bar Driving Lever with 223F and 59735, for 114-24 Machine..
59735	6990	Knife Bar Driving Lever Lock Stud for 59734.....
59735	6990	Thread Pull-off Bar Driving Lever Lock Stud for 59734.....

NUMERICAL LIST OF PARTS

63

NO.	PLATE	NAME
59739	6990	Knife Holder Cap Stud for 62129.....
59739	6990	“ “ Stud for 62128.....
59739	6990	Thread Pull-off Holder Cap Stud for 62129.....
59739	6990	Thread Pull-off Holder Stud for 62128..
59741	6993	Looper with 34418, for 114-22 Machine, obsolete use 62162.....
*59742	—	Looper Collar for 59749 and 62158.....
59743	6991	“ Driving Shaft
59745	6991	“ “ “ Collar with two 465c.....
59745	6991	Looper Shaft Collar with two 465c.....
59746	6991	“ Driving Shaft Coupling with two 50150c.....
59746	6991	Looper Shaft Coupling with two 50150c
59747	6992	“ Driving Shaft Gear Cover.....
59748	6991	“ “ “ Universal Joint...
59749	6989	“ Shaft with 50150c and 59742, for 114-23 Machine.....
59750	6991	Looper Shaft Eccentric with two 624c, for 114-22 and 114-24 Machines.....
*59752	—	Looper Shaft Ball Connection Cap for 62132.....
*59752	—	Looper Shaft Eccentric Connection Cap for 62132.....
59756	6989	Needle Bar with 1072F, for 114-22 and 114-24 Machines.....
59757	6992	Needle Bar Crank Wheel with 448c and 1293c.....
59758	6993	Needle Guard for 114-22 Machine, obsolete.....
59759	6993	Needle Guard Cam with two 465c, for 114-22 and 114-24 Machines.....
59760	6989	Needle Guard Shaft.....
59761	6993	“ “ “ Collar with two 465c
59762	6993	“ “ “ Crank with 51812 and two 465c, for 114-22 and 114-24 Machines.....
59763	6993	Needle Guard Shaft End Bearing.....
59764	6989	“ “ “ “ “ Bracket
59765	6993	“ “ “ Spring.....
59766	6993	“ “ “ “ Collar with 624c.....
59767	6996	Presser Bar Lifting Lever Bracket for 59701.....
59769	6977	Stop Cam Interlocking Rod Case Bracket for 62186.....

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
59771	6994	Stop Cam Interlocking Rod Case Wearing Block for 62136.....
59772	6995	Thread Eyelet (head of arm) for 114-22 Machine, obsolete
59773	6995	Thread Nipper (upper) Body for 59778..
59774	6995	" " " Cam with two 50150c.....
59775	6995	Thread Nipper (upper) Eyelet for 59778
59776	6995	" " " Stud with 13538, for 59777.....
59777	—	Thread Nipper (upper) Stud complete for 59778, Nos. 13539, 13540 and 59776..
59778	—	Thread Nipper (upper) complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921.....

Nos. 59780 TO 59785 FOR 114-22 MACHINE, OBSOLETE

59780	6996	Thread Pull-off Driving Lever.....
59781	6996	" " " " Spring...
59782	6996	" " Lever.....
59783	6996	" " " Bushing.....
59784	6996	" " " Connection.....
59785	6996	" " Regulator.....
59787	6979	" Wiper Body Support.....
59789	6993	Throat Plate Needle Guard, obsolete, use 59799.....
59790	7024	Throat Plate Thread Retainer for 114-22 and 114-24 Machines.....
59795	6977	Belt Cover Bracket with 184E and 59796..
59796	7019	" " " Stud for 59795
59799	7024	Throat Plate Needle Guard for 114-22 and 114-24 Machines.....
60701	—	Thread Unwinder Spool Rest 41526 with 155c and 1149c, for 41527.....
60771	7006	Thread Unwinder Thread Guide for 60772.....
60772	—	Thread Unwinder Thread Guide 60771 with 41635, for 60773.....
60773	—	Thread Unwinder with Thread Guide complete, for one large spool or one large cone of thread, Nos. 41529 and 60772.....

Nos. 62101 TO 62104 FOR 62105

*62101	—	Cloth Plate.....
62102	6980	" " Guide Block (left).....
62103	6980	" " " " (right).....

NUMERICAL LIST OF PARTS

65

NO.	PLATE	NAME
62104	6980	Cloth Plate Stop.....
62105	6975	Cloth Plate complete, Nos. 742F, 1547D, 26770, 62101 to 62104 and two 3021..
62108	6981	Cylinder End Cover for 62146, 62184 and 62190.....
62110	6980	Cylinder End Cover Bracket for 62146, obsolete.....
Nos. 62111 TO 62113 FOR 62146, 62184 AND 62190		
62111	6980	Cylinder End Cover Bracket Hinge Pin..
62112	6980	" " " Hinge.....
62113	6980	" " " Spring.....
62114	6980	" Top Cover.....
62115	6982	Feed Across Connection Adjusting Stud for 114-22 and 114-24 Machines.....
62116	6982	Feed Across Knuckle Joint, obsolete....
62118	6985	" Plate Carrier Bar Position Plate with 17741, for 62123.....
62119	6985	Feed Plate Carrier Bar Position Plate Cover for 62123.....
62123	—	Feed Plate Carrier Bar 18445 with 934J, 1094F, 1195E, 17743, 18368, 62118, 62119, two 55300 and four 17806, for 114-23 Machines.....
62124	6975	Knife Bar with 62130 and two 3021, for 114-22 and 114-23 Machines.....
62124	6975	Thread Pull-off Bar with 62130 and two 3021, for 114-24 Machine.....
62125	6990	Knife Bar Cap for 114-22 and 114-23 Machines.....
62125	6990	Thread Pull-off Bar Cap for 114-24 Ma- chine.....
62126	6990	Knife Bar Connection with 17917, for 114-22 and 114-23 Machines.....
62126	6990	Thread Pull-off Bar Connection with 17917, for 114-24 Machine.....
62127	6990	Knife Bar Guide for 114-22 and 114-23 Machines.....
62128	6990	Knife Holder with 59739, for 114-22 and 114-23 Machines.....
62128	6990	Thread Pull-off Holder with 59739, for 114-24 Machine.....
62129	6990	Knife Holder Cap with 59739, for 114-22 and 114-23 Machines.....
62129	6990	Thread Pull-off Holder Cap with 59739, for 114-24 Machine.....
62130	6990	Knife Holder Connection for 62124.....

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
62130	6990	Thread Pull-off Holder Connection for 62124.....
62131	6991	Looper Driving Shaft Bushing.....
62132	6991	“ Shaft Ball Connection with 59752 and two 171E, for 114-23 Machine....
62132	6991	Looper Shaft Eccentric Connection with 59752 and two 171E, for 114-22 and 114-24 Machines.....
62133	6991	Looper Shaft Ball Connection Stud (eccentric) for 114-23 Machine.....
62133	6991	Looper Shaft Eccentric Connection Stud (eccentric) for 114-22 and 114-24 Machines.....
62134	6991	Looper Shaft Slide Block.....
62135	6991	“ “ “ “ Cap.....
62136	6977	Stop Cam Interlocking Rod Case 124697 with 59771 and two 193D, for 62159..
62137	—	Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186D
62138	6987	Thread Pull-off Cam for 62284.....
62139	6997	Throat Plate for 114-22 Machine, obsolete
*62144	—	Cylinder for 114-22 Machine, obsolete...
62145	7002	“ Bottom Cover for 62146, obsolete.....
62146	—	Cylinder End Cover 62108 with 1034D, 62110 to 62113, 62145 and two each 1345D and 1477D, for 114-22 Machine, obsolete, use 62190.....
62147	7002	Feed Across Lever with 1185C and 1952, for 114-22 and 114-24 Machines.....
62148	7002	Feed Regulator Bracket with 39310 and three 160D, for 114-22 and 114-24 Machines.....
62149	7001	Feed Across Lever Plate with 62153, for 62156 and 124662.....
62150	7001	Feed Across Lever Plate Cover for 62156
62151	7002	“ “ Regulator for 114-22 and 114-24 Machines.....
62152	7001	Feed Across Regulator Link for 114-22 and 114-24 Machines.....
62153	7001	Feed Across Regulator Link Stud for 62149.....
62155	7002	Feed Cam Shaft for 114-22 and 114-24 Machines.....

NO.	PLATE	NAME
62156	—	Feed Plate Carrier Bar 18445 with 934J, 1094F, 1195E, 17743, 18368, 62149, 62150, two 55300 and four 17806, for 114-22 Machine, obsolete.....
62157	7002	Feed Regulator with 1953, for 114-22 and 114-24 Machines.....
62158	7002	Looper Shaft with 50150c and 59742, for 114-22 and 114-24 Machines.....
62159	—	Stop Cam Interlocking Rod Case 62136 with 1318D, 17855, 17863, 17864, 39222, 39223 and two 1255D, for 62186
62162	—	Looper with 34418, for 114-22 Machine, obsolete, use 62179.....

Nos. 62164 TO 62168 FOR TRIMMINGS FOR
TABLE 5380.

62164	7011	Starting Lever Chain Pulley for 62281..
62165	7033	Table Work Clamp.....
62166	7011	" " " Spring.....
62167	7010	" " " " Arm with 361c.....
62168	7010	Table Work Clamp Spring Bracket with two wood screws 1 in. No. 10.....
62169	6979	Thread Nipper (upper) Disc Spring for 59778.....
62170	—	Thread Take-up Body with 62172, for 62173, obsolete.....
62171	6979	Thread Take-up Roller Cap for 62173 and 124626.....
62172	6979	Thread Take-up Roller Pin for 62170 and 124625.....
62173	6979	Thread Take-up complete for 114-22 Machine Nos. 337D, 42808, 62170 and 62171, obsolete.....
62174	7026	Clamp with 1220E and 17928, for 62262..
62176	7028	Feed Plate for 114-24 Machine.....
*62177	—	Cylinder for 114-23 Machine, obsolete..
*62178	—	" " 114-22 and 114-24 Machines
62179	7015	Looper with 34418, for 114-22 Machine obsolete
62183	7020	Cylinder Bottom Cover for 62184, obsolete
62184	—	" End Cover 62108 with 1034D, 62111 to 62113, 62183, 62185 and four 1477D, for 114-23 and 114-24 Machines, obsolete, use 62190.....
62185	6980	Cylinder End Cover Bracket for 62184 and 62190.....

NO.	PLATE	NAME
62186	—	Stop Cam Interlocking Rod Case Bracket complete for 62137, Nos. 1182E, 1196C, 1204E, 1254C, 1262C, 1508E, 1662C, 17853, 17859, 17861, 17862, 17872, 17873, 59769, 62159 and two 898E....
62189	7032	Cylinder Bottom Cover for 62190.....
62190	—	" End Cover 62108 with 1034D, 62111 to 62113, 62185, 62189 and four 1477D.....
62192	7015	Knife Bar Retaining Spring Bracket for 114-22 and 114-23 Machines.....
62192	7015	Thread Pull-off Bar Retaining Spring Bracket for 114-24 Machine.....
62197	7015	Looper Shaft Ball with two 624C, for 114-23 Machine.....
62258	7026	Clamp Arm with 17714, for 62259.....
62259	—	" " 62258 with 62260 and two 201D, for 62262.....
62260	7026	Clamp Arm Hook for 62259.....
62261	7026	" Lifter for 114-24 Machine.....
62262	—	Clamp complete for 114-22 and 114-24 Machines, Nos. 1656J, 62174 and 62259.....
62281	7033	Machine Base with wood screw $1\frac{3}{4}$ in. No. 14, two each 694E, 62164, three each 1385E, 27253 and four 134D (Trimings for Table 5380).....
62283	—	Needle Bar Connecting Link 39203 with 377C, 1518E and 2052.....
62284	7030	Feed Cam with two 1192C and three each 190D, 208D, 227D, 17874 and 62138, for 114-22 Machine, obsolete.....
*62295	—	Arm with 4449, 124606 and two 164E, for 114-23 and 114-24 Machines.....
62298	7027	Looper with 34418, for 114-23 Machine..
62299	7020	Needle Bar with 1072F, for 114-23 Machine.....
62300	7019	Needle Guard for 114-23 and 114-24 Machines.....
63753	—	Protector (front of needle) for 39498, Nos. 1099F, 39489, 39491 to 39494, 39496, 39497, 52598 and two 15261...
63788	7015	Clamp Arm Hook for 17927.....
63940	—	Feed Across Connection (lever end) with 42076 and two 896E, for 63941.....

NUMERICAL LIST OF PARTS

69

NO.	PLATE	NAME
63941	7027	Feed Across Connection (lever end) 63940 with 55381, for 114-22 and 114-24 Machines.....
63942	—	Feed Across Connection (regulator end) with 42076 and two 896e, for 63943..
63943	7027	Feed Across Connection (regulator end) 63942 with 63944, for 114-22 and 114-24 Machines.....
63944	7027	Feed Across Connection (regulator end) Ball Stud for 63943.....
120346	7007	Oiler (copper plated) with 120347 (Acces- sories).....
120347	7007	Oiler Spout, 9 in. long, for 120346.....
124601	7019	Needle Guard Cam with two 465c, for 114-23 Machine.....
124602	7019	Needle Guard Shaft Crank with 51812 and two 465c, for 114-23 Machine....
124603	7019	Needle Bar Thread Retainer Bracket with 460c, for 124605.....
124604	7019	Needle Bar Thread Retainer Thread Guide for 124605.....
124605	—	Needle Bar Thread Retainer complete for 114-23 and 114-24 Machines, Nos. 93c, 10106, 10107, 42348, 124603 and 124604.....
124606	7020	Presser Bar Lifting Lever Bracket for 62295.....
Nos. 124607 TO 124610 FOR 124611		
124607	7027	Thread Controller Spring.....
124608	7027	“ “ “ Collar with 1477f.....
124609	7027	Thread Controller Sleeve.....
124610	7027	“ “ Stud with 56549 and 124631.....
124611	—	Thread Controller complete for 114-23 and 114-24 Machines, Nos. 124607 to 124610.....
*124612	—	Thread Nipper (lower) Blade for 124614.
*124613	—	“ “ “ “ Carrier with 124619, for 124614.....
124614	7028	Thread Nipper (lower) Blade Carrier 124613 with 124612 and two 6037, for 114-23 and 114-24 Machines.....
124615	7028	Thread Nipper (lower) Blade Carrier Hinge Stud for 124627.....

NO.	PLATE	NAME
124616	7020	Thread Nipper (lower) Cam for 124661..
124618	7028	“ “ “ Connection Ex- tension for 114-23 and 114-24 Ma- chines.....
124619	7028	Thread Nipper (lower) Connection Hinge Stud for 124613.....
124620	7020	Thread Nipper (lower) Driving Arm for 114-23 and 114-24 Machines.....
124621	7020	Thread Nipper (lower) Lever with 237K, for 114-23 and 114-24 Machines.....
124622	7020	Thread Nipper (lower) Lever Guide for 124661.....
124623	7020	Thread Nipper (lower) Lever Shaft for 114-23 and 114-24 Machines.....
124624	7032	Thread Nipper (lower) Lever Shaft Bracket for 114-23 and 114-24 Ma- chines, obsolete.....
124625	—	Thread Take-up Body with 62172, for 124626.....
124626	7019	Thread Take-up complete for 114-23 and 114-24 Machines, Nos. 337D, 42808, 62171 and 124625.....
124627	7024	Throat Plate with 124615, for 114-23 and 114-24 Machines.....
124628	7024	Throat Plate Needle Guard for 114-23 Machine.....
*124631	—	Thread Controller Stud Collar for 124610
124646	7029	Clamp with 1220E and 17928, for 124647.
124647	—	Clamp complete for 114-23 Machine, Nos. 1656J, 17927 and 124646.....
124648	7031	Feed Cam with two 1192C, six each 190D, 17874, 124652 and twelve 335J, for 114-23 Machine.....
124649	7029	Feed Plate for 114-23 Machine.....
124650	7032	“ “ Carrier Bar Guide for 114-23 Machine.....
124651	7032	Feed Regulator Bracket with 17732 and two 160D, for 114-23 Machine.....
124652	7032	Thread Nipper (lower) Cam for 124648..
124653	7020	“ “ “ Connection for 114-23 and 114-24 Machines.....
124660	7028	Feed Across Lever Plate Cover for 124662
124661	7031	“ Cam with two 1192C, three each 190D, 17874, 124616, 124622 and twelve 335J, for 114-24 Machine.....

NUMERICAL LIST OF PARTS

71

NO.	PLATE	NAME
124662	—	Feed Plate Carrier Bar 18445 with 934J, 1094F, 1195E, 17743, 18368, 62149, 124660, two 55300 and four 17806, for 114-24 Machine.....
124663	7028	Knife for 114-24 Machine, obsolete.....
124664	7028	“ Holder with 208D, for 114-24 Ma- chine, obsolete.....
124666	7027	Looper with 34418 and 124675, for 114-24 Machine.....
124667	7028	Thread Pull-off for 114-24 Machine, obsolete.....
124674	7020	Arm Side Cover.....
124675	7027	Looper Thread Retaining Pin for 124666
Nos. 124677 TO 124680 FOR 114-23 AND 114-24 MACHINES		
124677	7019	Clamp Locking Device Latch with 704J..
124678	7020	“ “ “ “ Shaft.....
124679	7019	“ “ “ “ “ Crank
124680	7019	“ “ “ “ “ “ Connection.....
124681	7020	Presser Bar Lifting Lever for 114-23 and 114-24 Machines.....
*124682	7020	Thread Nipper (lower) Lever Shaft Bracket for 114-23 and 114-24 Ma- chines.....
124684	7028	Knife for 114-24 Machine.....
124685	7028	Thread Pull-off for 114-24 Machine.....
124686	7028	“ “ Bar Guide and Knife Holder for 114-24 Machine.....
124697	—	Stop Cam Interlocking Rod Case for 62136.....

ILLUSTRATIONS OF PARTS
FOR
MACHINES
Nos. 114-22 to 114-24

PLATE 2836—ONE-FOURTH SIZE


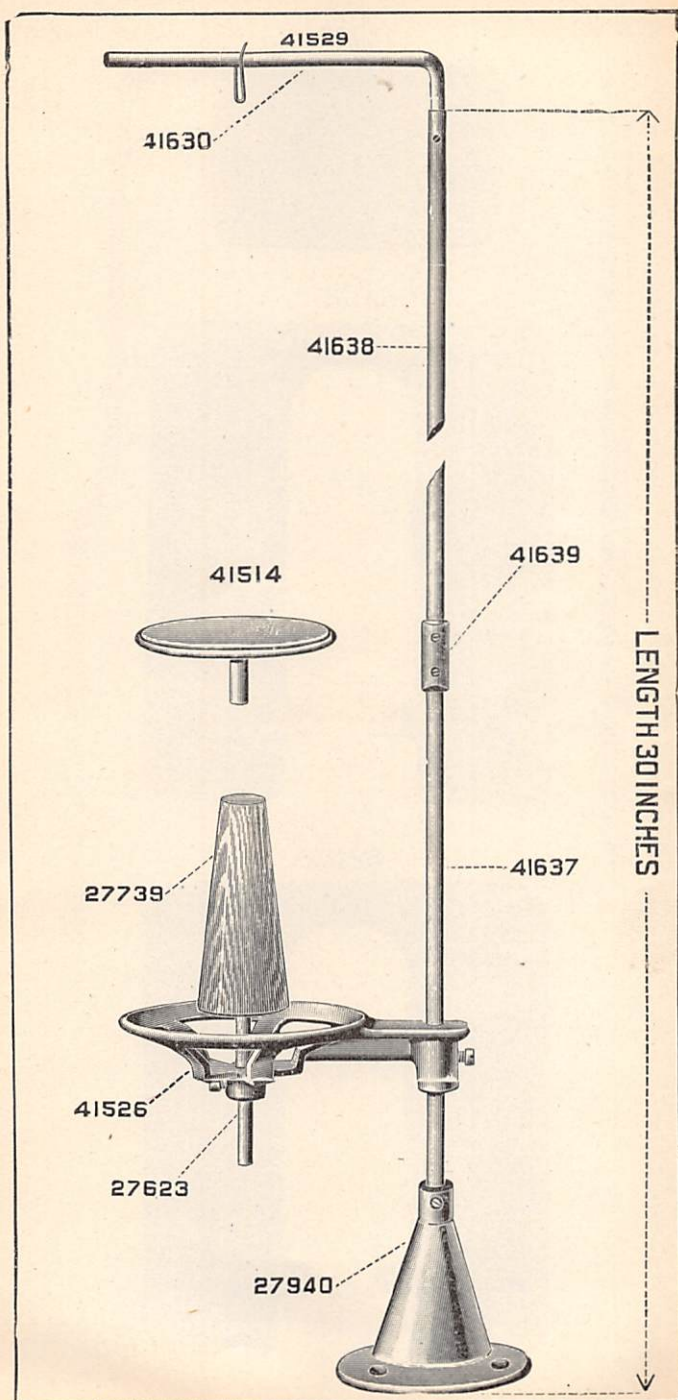


PLATE 6975—ONE-FOURTH SIZE

59702




18498

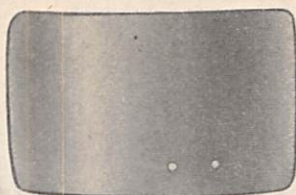

62124



62105

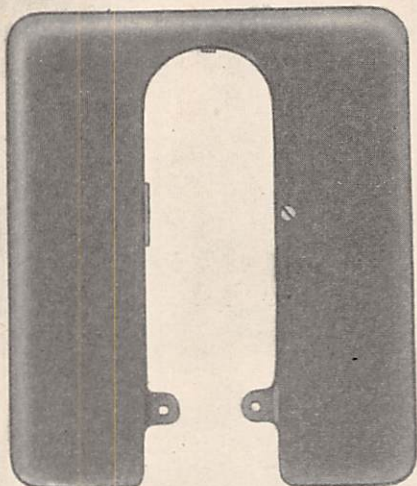

62182

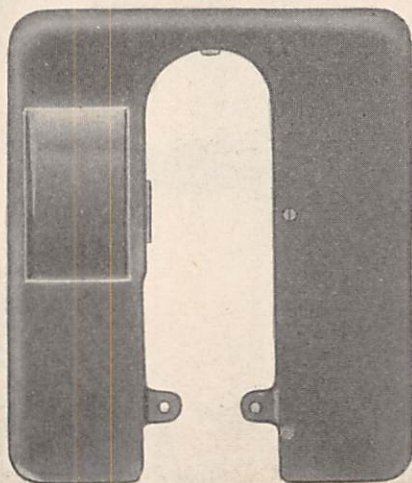


PLATE 6976—FULL SIZE


59704



59708



59703

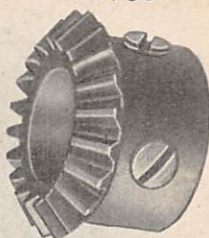

59706



1036



39223



1253



59705



4448



1255



56015



59707



16532




21828



PLATE 6977—ONE-HALF SIZE

59769

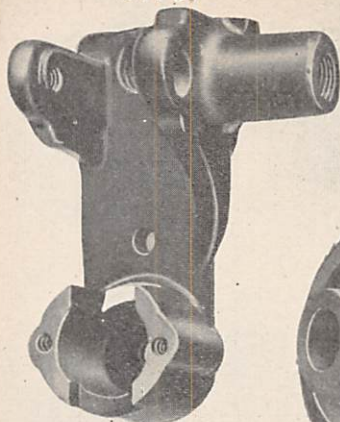

17859




62136




17797



59795

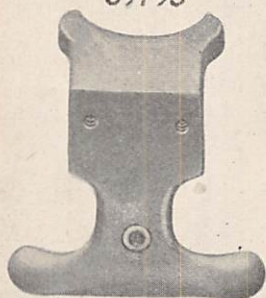


39222

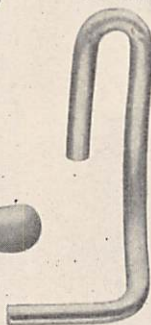

17848



17942

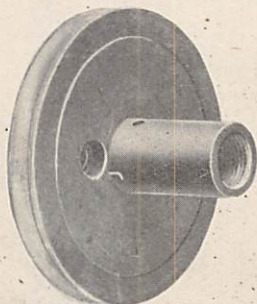

17941

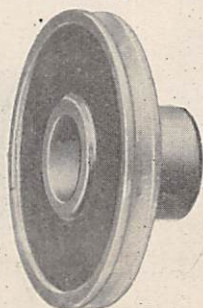


PLATE 6979—FULL SIZE

39248



1180




17717



17723



59710

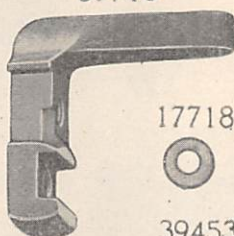

50237



17720



17718



330



39453



1183



59787



39452



39455



17711



641



1207



1302



39456



62173



62171



42808



1743



337



62172



62169



PLATE 6980—FULL SIZE

62102



3021



62103



62104



26770



1547



 
742



1477



62112



62111



62110



62113




1034



1345



62114

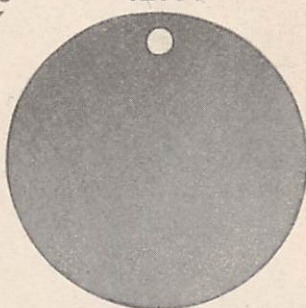

286



9544



9543



9545



2107



62185




208




PLATE 6981—ONE-HALF SIZE


59711

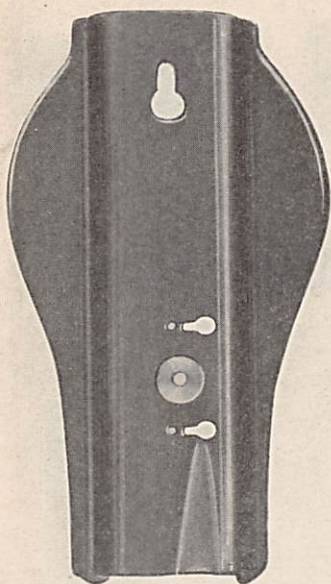


17843

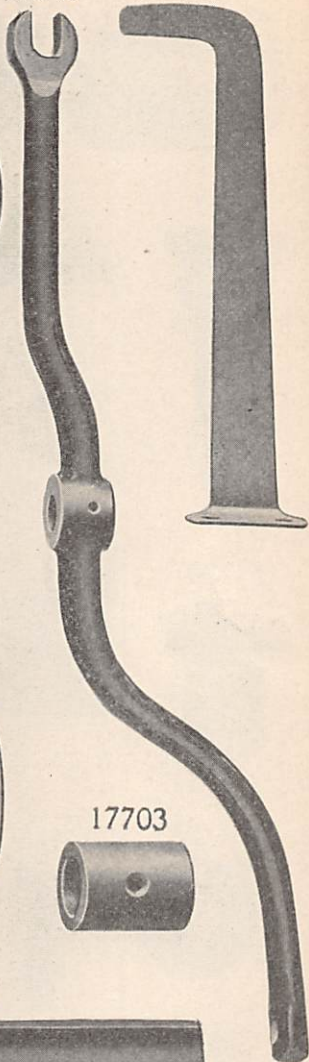

39343

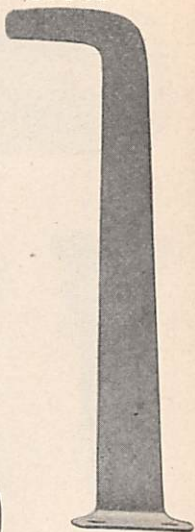

62108

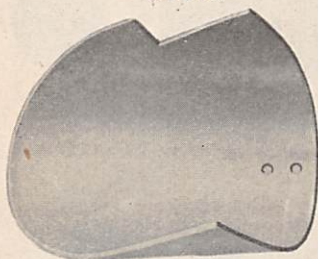

17703



62107


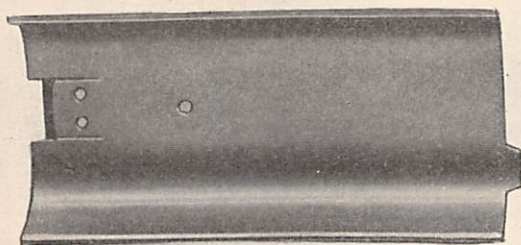


PLATE 6982—FULL SIZE


62116



1184

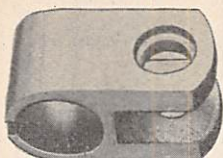

17728

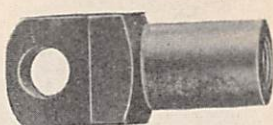

1187



62115



1650



1649



17730



17739



17734



17738



145



1185



1528



1676



17733


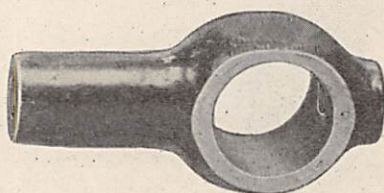


PLATE 6985—FULL SIZE




1094

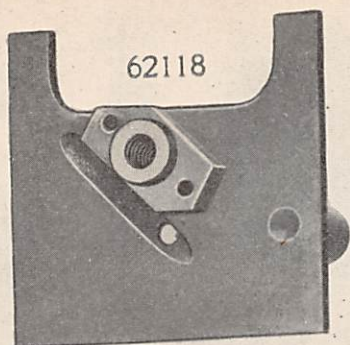

55300



62119

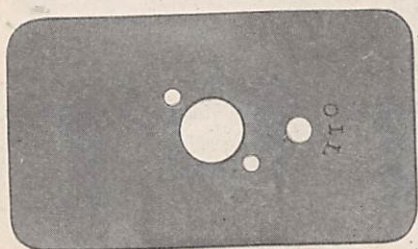


17741



50324



62121

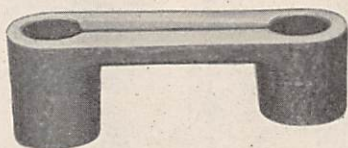

14017




1655



PLATE 6987—FULL SIZE

18415

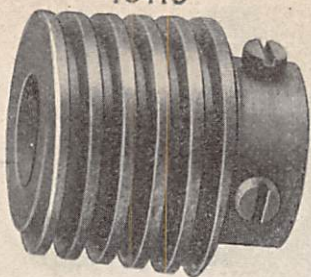

1442



1441



453



1192



59724



17743



1191



17744



17745



1190



59730




50306



934



18368

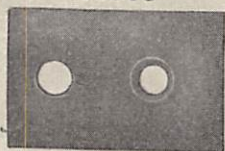

17874



62138



PLATE 6989—ONE-HALF SIZE

59760



59749



2058




59756



18445



59764

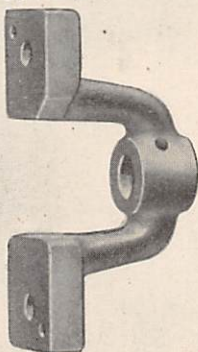

8414



59728



PLATE 6990—FULL SIZE


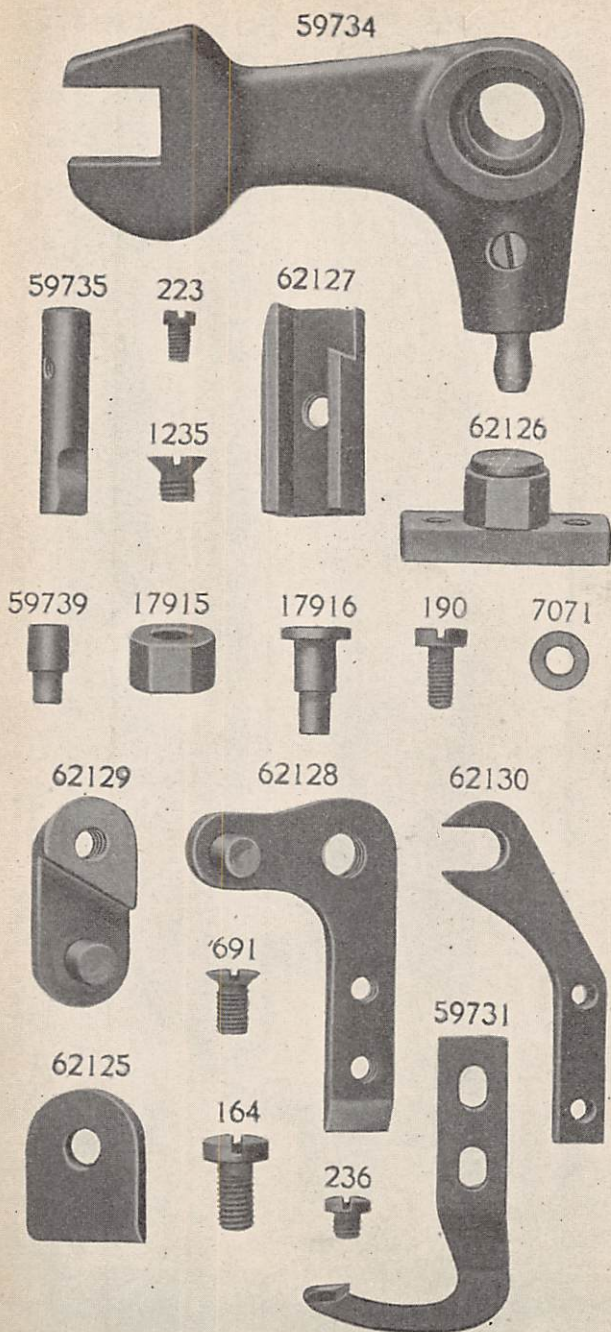


PLATE 6991—FULL SIZE

62162



624

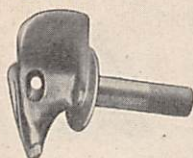


59750



34418



62134

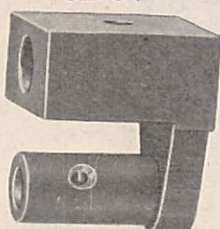

62132



 
1259



62133



62131



1095



447



171



59743



59748



59746



50150



 
465



59745



62135




1186



PLATE 6992—FULL SIZE

59757

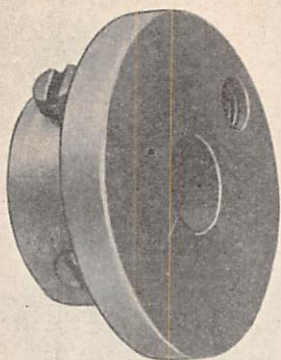

1293



17841



448



196



377



39203



2052



17842




155



1518



59747

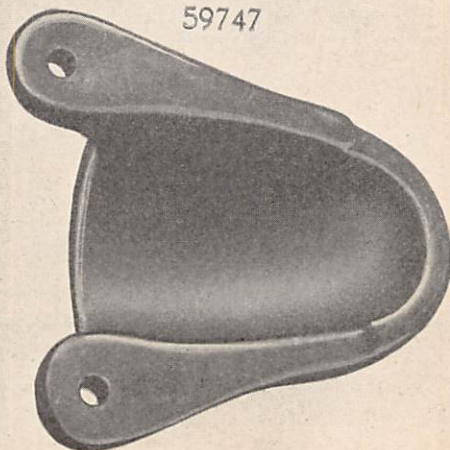

52045

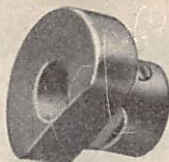


PLATE 6993—FULL SIZE

59758




59759



59761



59762

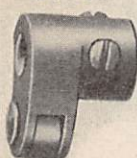

51812



 
59766




965



59765



59763

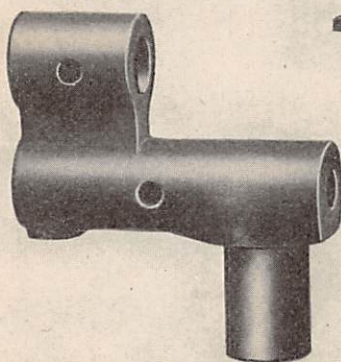


1480



1072



59789

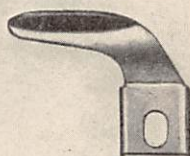

59786



59741



PLATE 6994—FULL SIZE


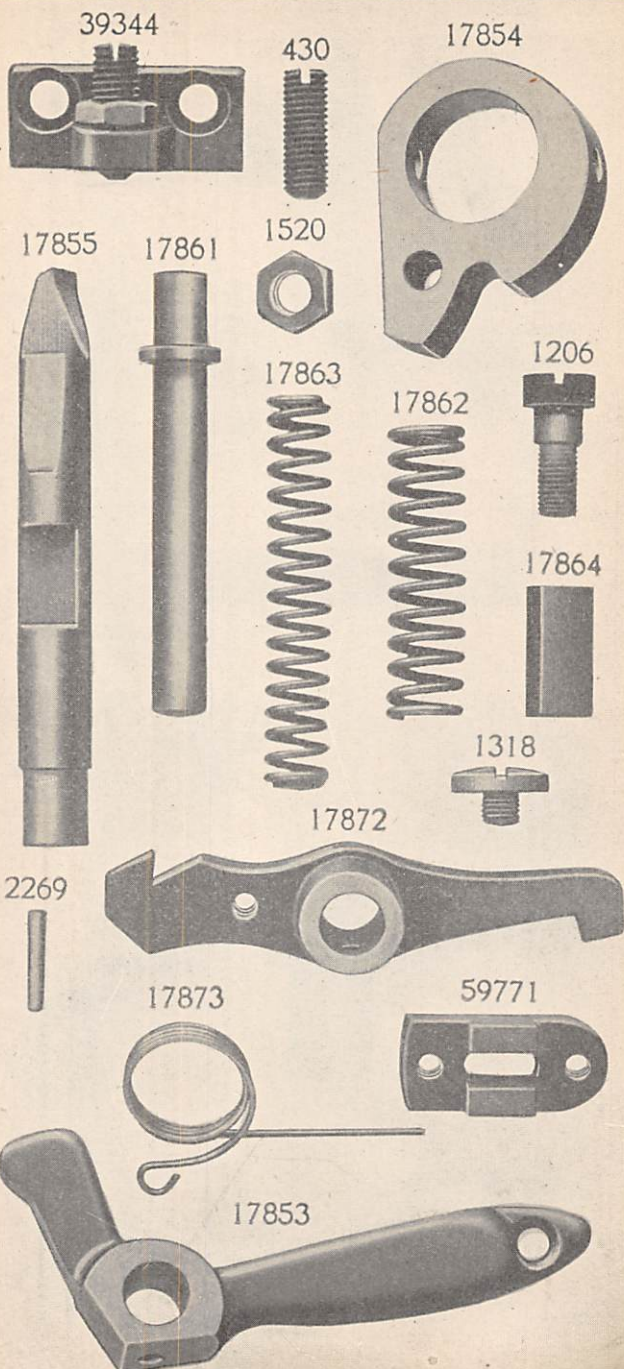


PLATE 6995—FULL SIZE

50148



2102

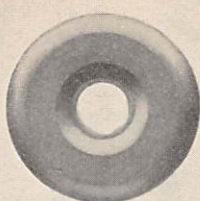

42336



1560



13915



59772



59776



2026



59773



10145




233



13538



2921

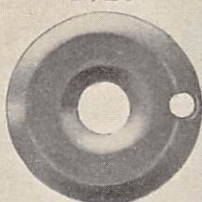

13540



59775



13539



59774



12162



1609



1527



PLATE 6996—FULL SIZE


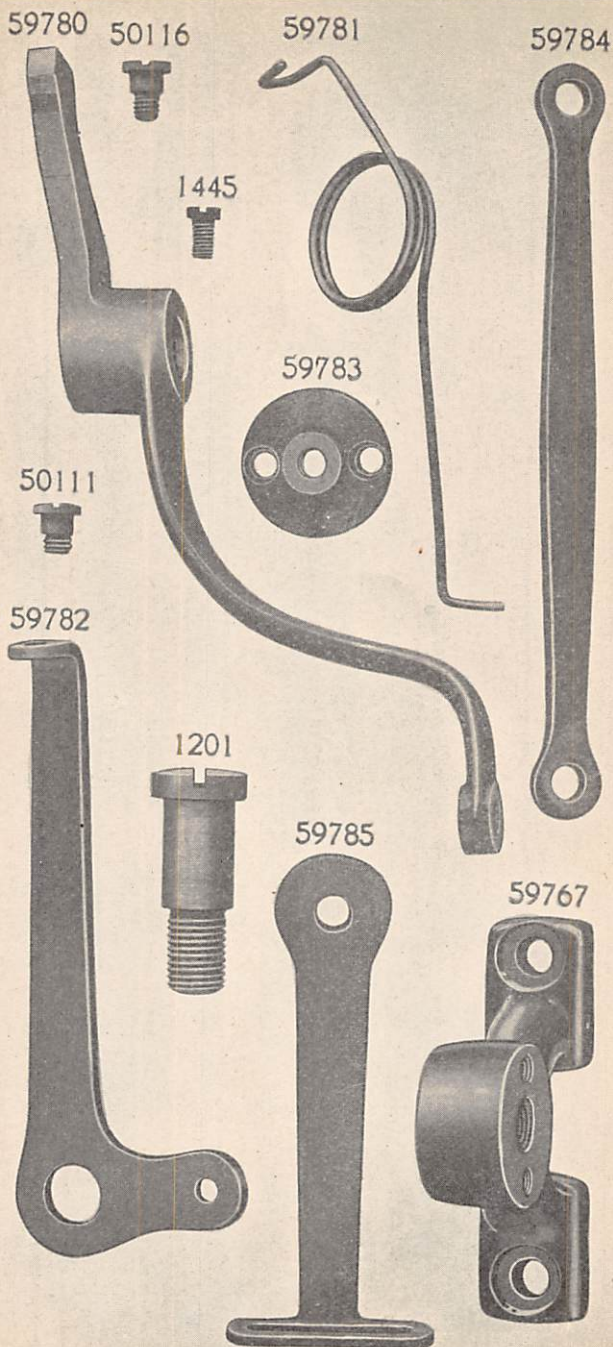


PLATE 6997—FULL SIZE

62139



59799

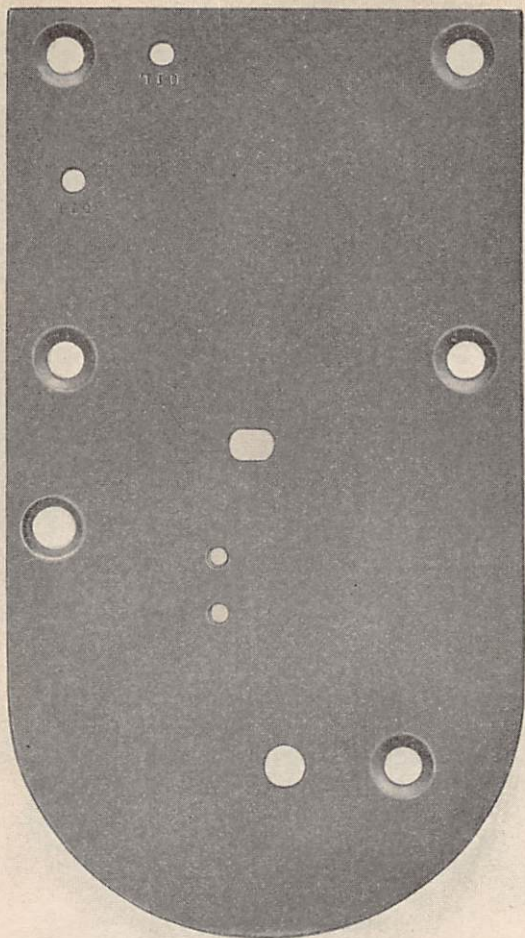

59790



1484



PLATE 6998—FULL SIZE


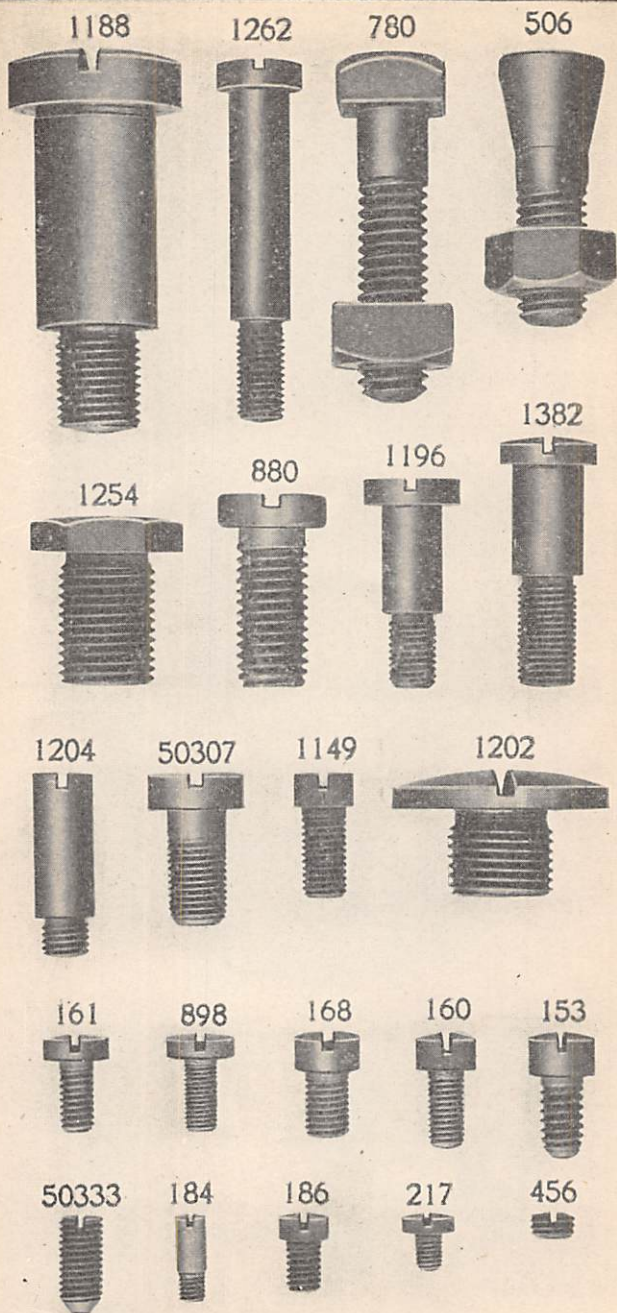


PLATE 6999—FULL SIZE

1653



1508

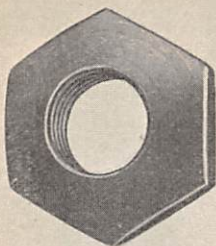

1600



1662



1681



1510



PLATE 7000—FULL SIZE


1220




1656



62141

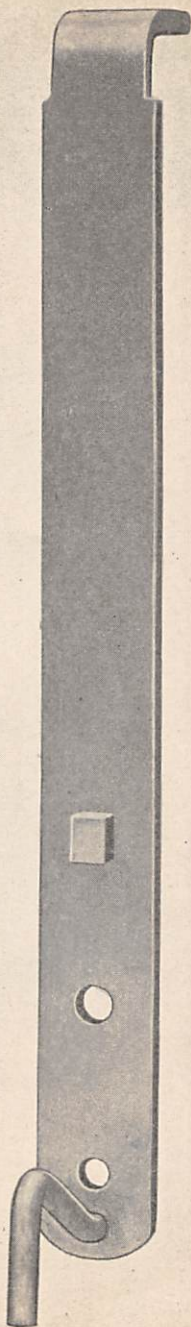

62140

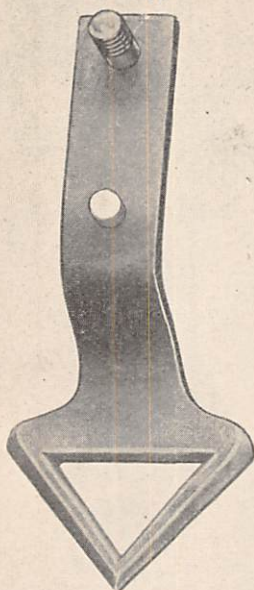

62142




17928



PLATE 7001—FULL SIZE

17712

62149

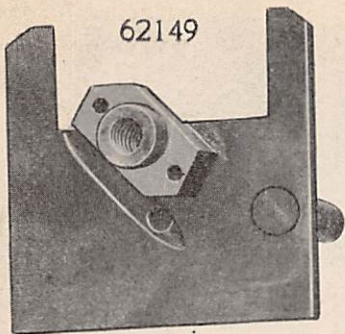


1189



62153



62152

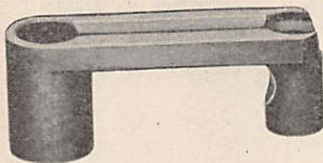

62150


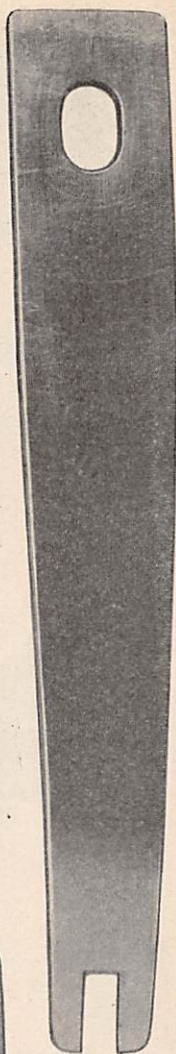


PLATE 7002—ONE-HALF SIZE

62145



62158

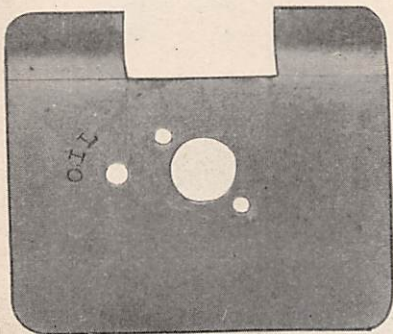


62157




62147



62148

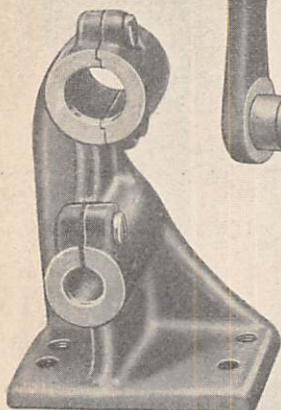

62151

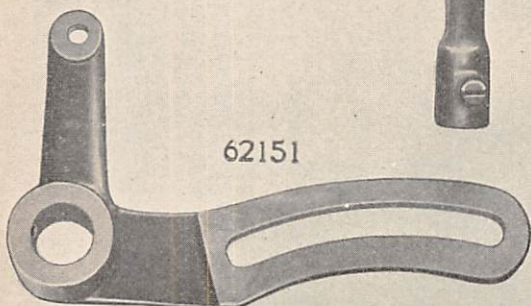


62155



PLATE 7004—FULL SIZE

39358

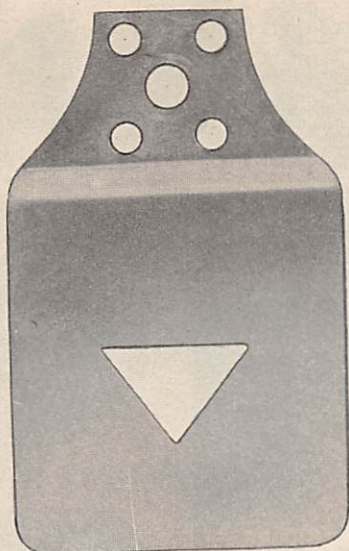

17737



39313



PLATE 7005—ONE-FOURTH SIZE

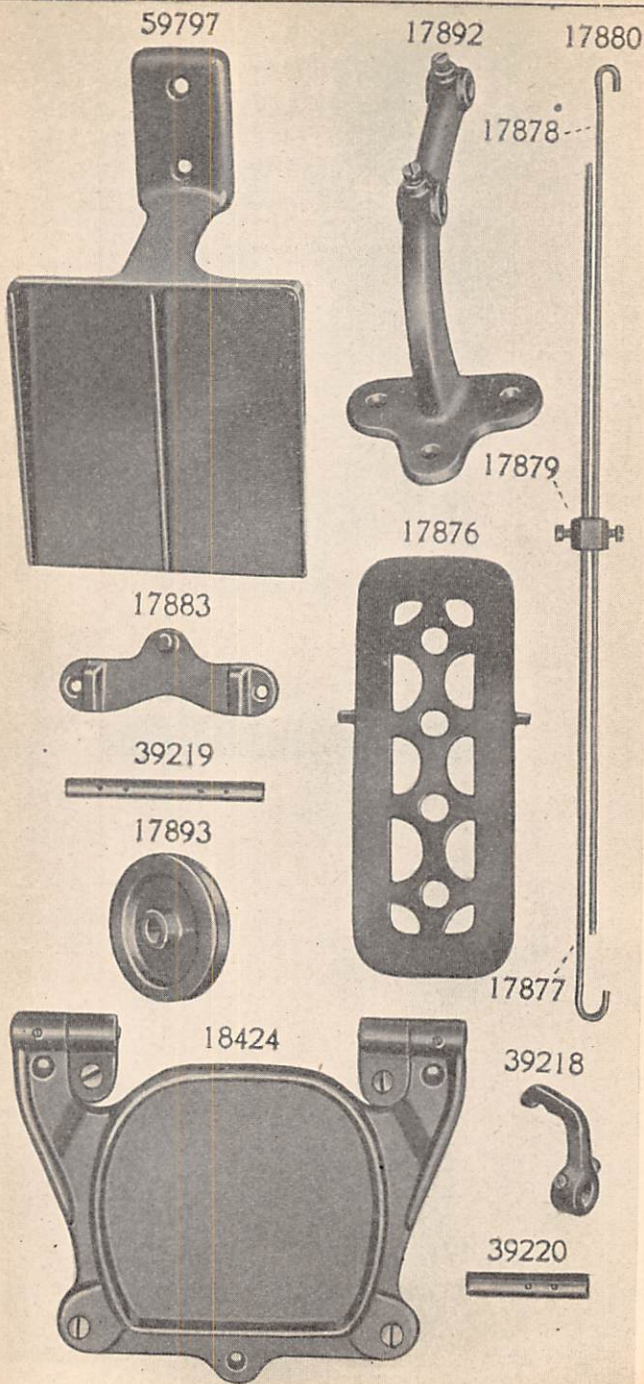


PLATE 7006—FULL SIZE

60771



17881




18423



17882



18420

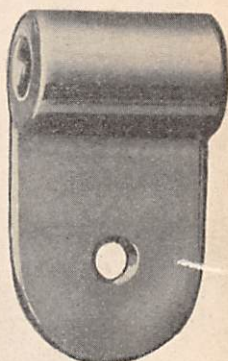

41515



17896



56865

41569



175



25127



748



41635



134



1201



PLATE 7007—ONE-HALF SIZE

 
4822



120346



10875



11831



26026



17905



120347



25200



27662




56864



PLATE 7008—ONE-HALF SIZE


39494

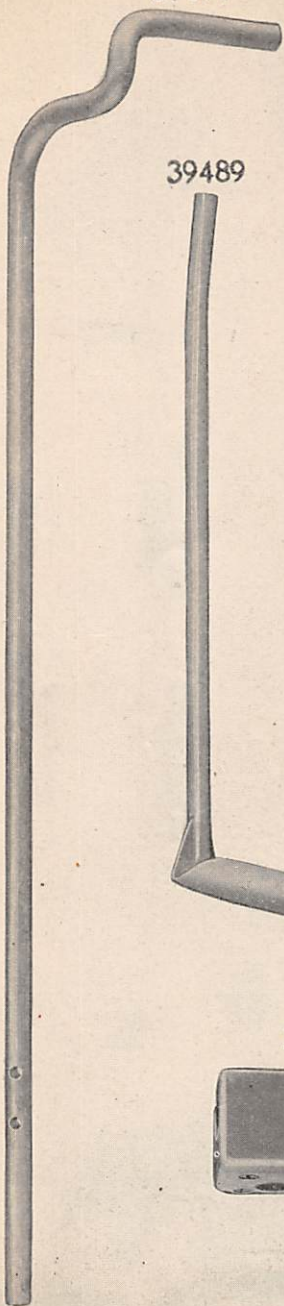

39496



39489

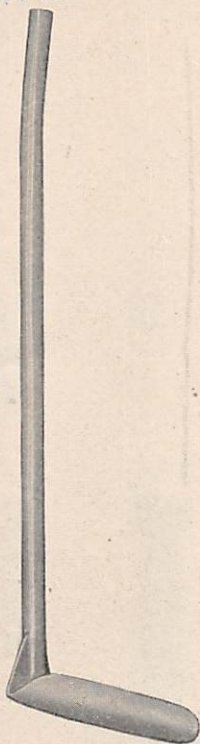

39491



PLATE 7009—FULL SIZE


39492



160



39495

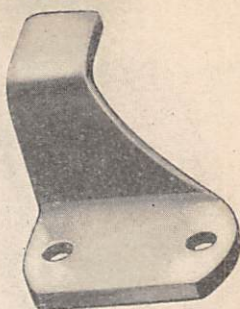

15261



237



52598



176



39497



50351



426



1099



454



448



1120



39493



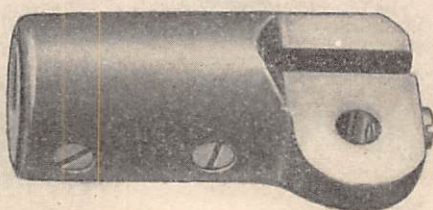


PLATE 7010—FULL SIZE

4883

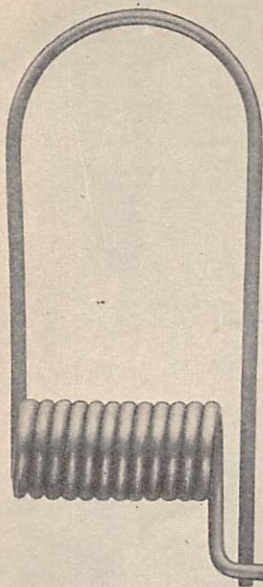

4879

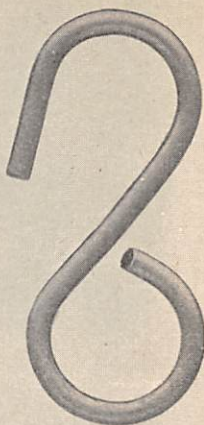


4882



62168



62167

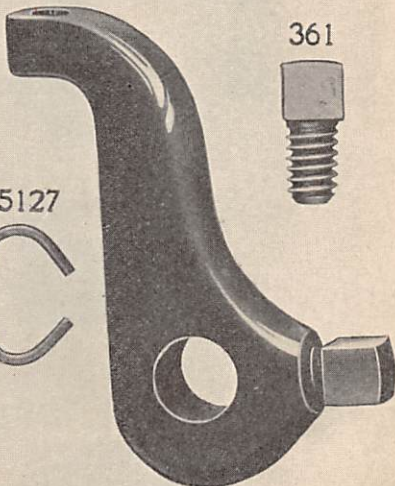

361




25127




PLATE 7011—FULL SIZE

62164

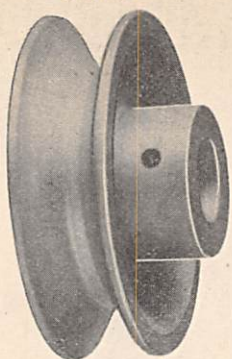

694

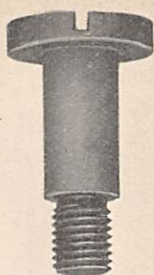

27253



1385



62166



134



1524



PLATE 7015—FULL SIZE


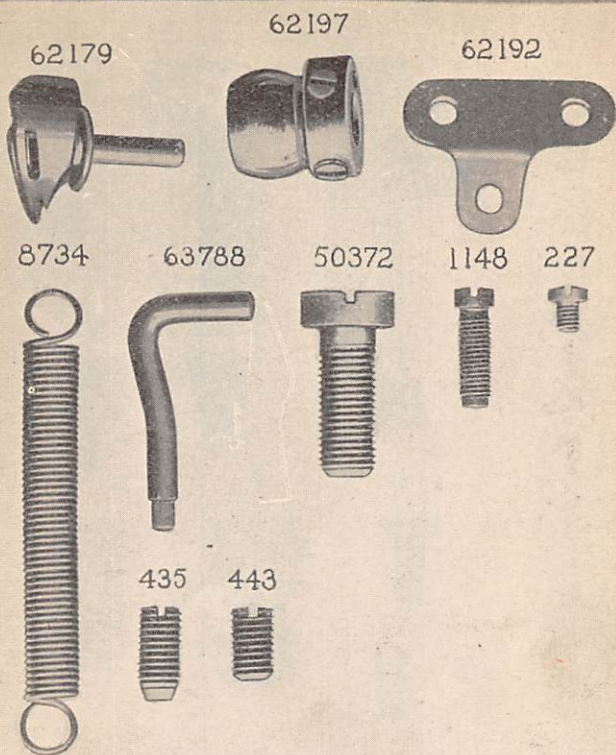


PLATE 7019—FULL SIZE

124680



124677

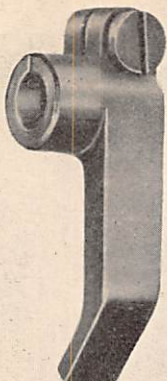

124679



17719



1282



1181



704



1953



59796



460



93



124603



10107



10106



42348




124604



62300



124601

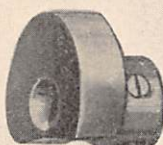

124602



18384



3012



8589



8554



124626



PLATE 7020—ONE-HALF SIZE

124678 62299 124630 124681

62183


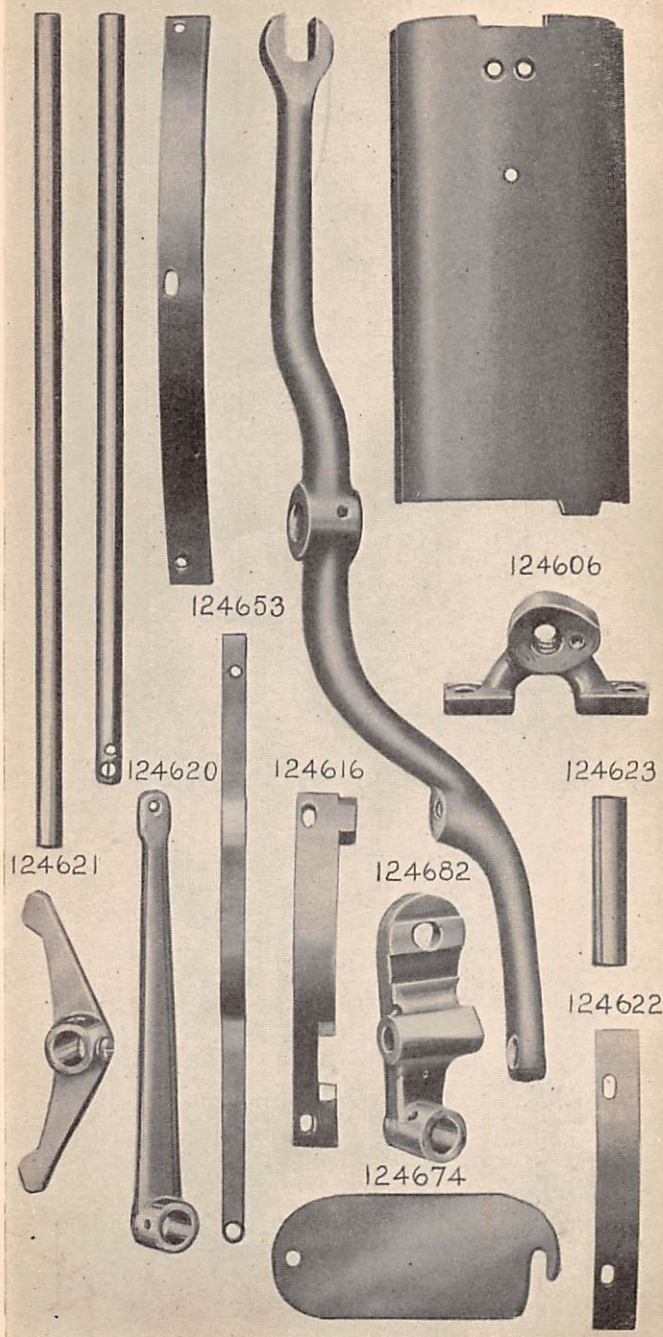


PLATE 7024—FULL SIZE

124627



124628

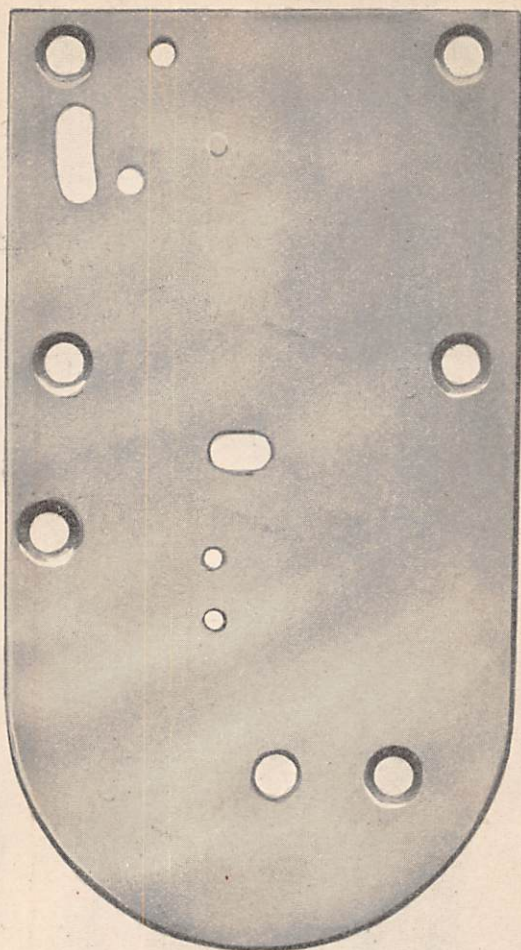

59790



59799



206



PLATE 7026—FULL SIZE

1178



62174



17710



62258



1176



17714



1177




201



62261



17713

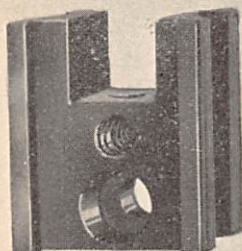

62260



PLATE 7027—FULL SIZE

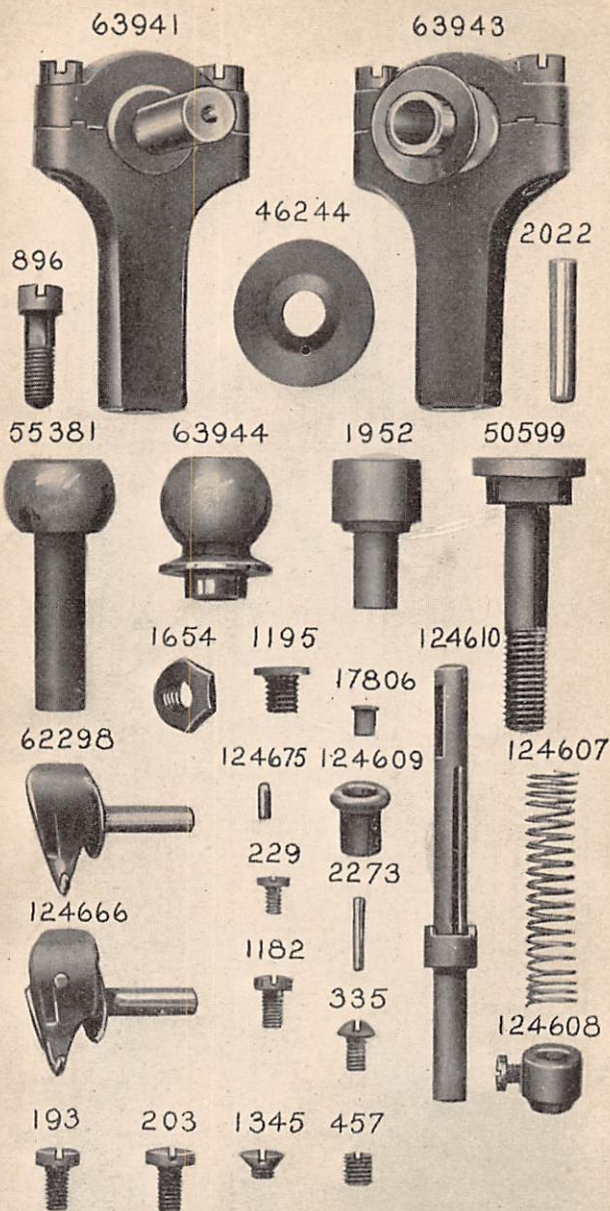


PLATE 7028—FULL SIZE

124684




124685



124686



124614

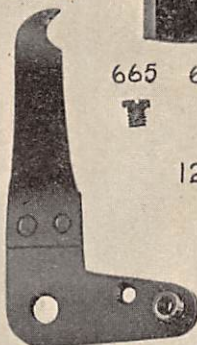

665



6037



124618



124615




124619



124663




124660

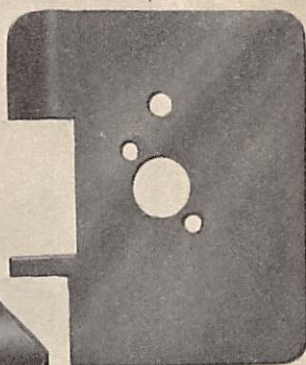

99



62176

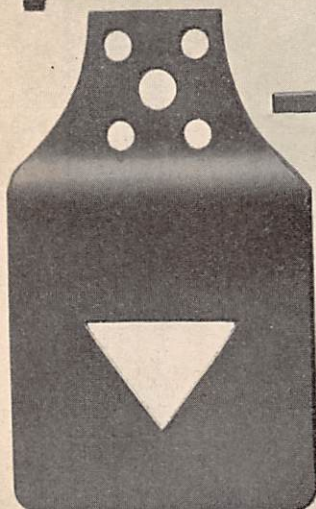

124667



124664

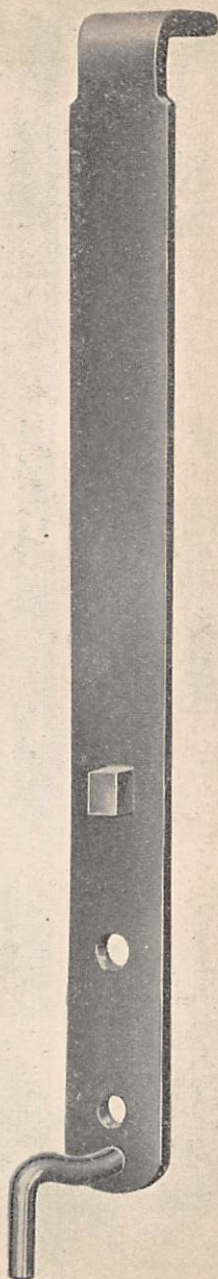


PLATE 7029—FULL SIZE

124646



17927



124649

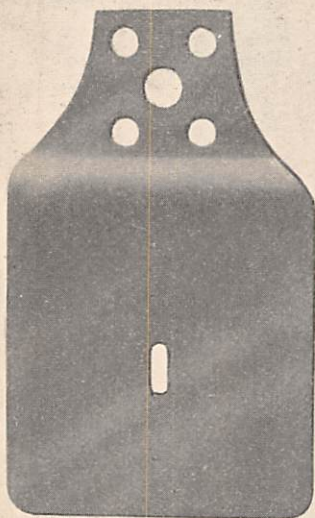


PLATE 7030—ONE-HALF SIZE

62284


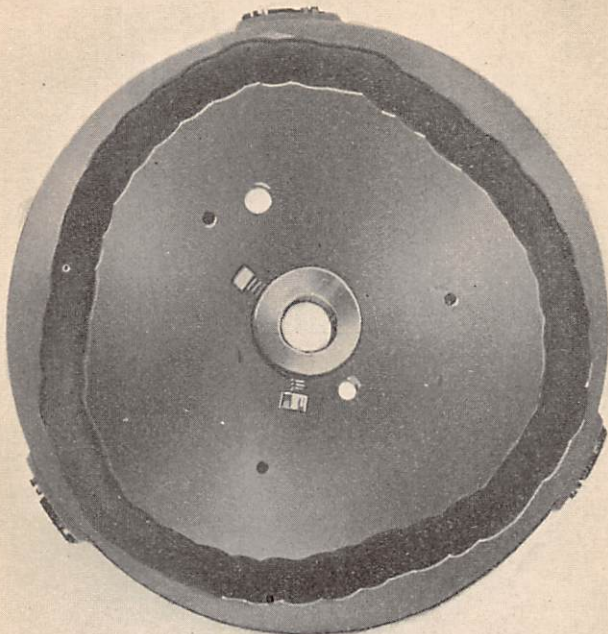


PLATE 7031—ONE-HALF SIZE

124648

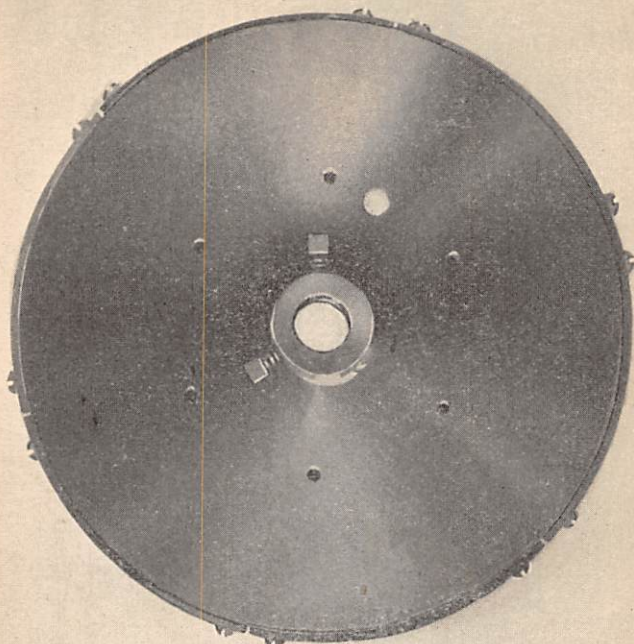

124661



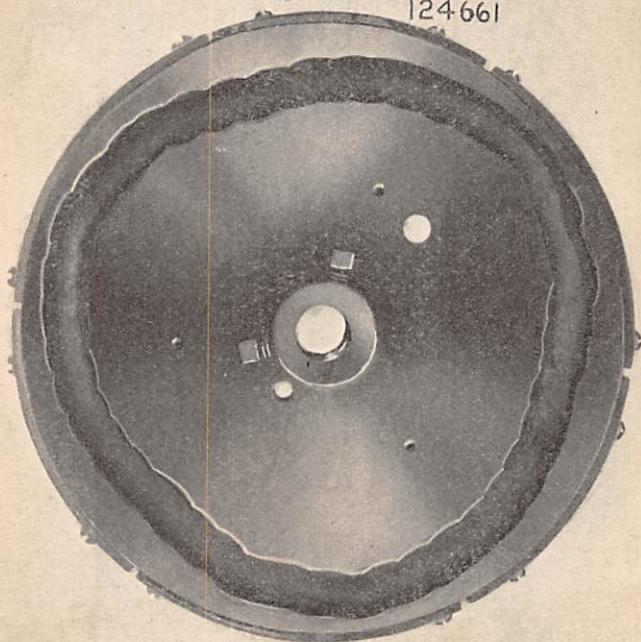


PLATE 7032—ONE-HALF SIZE

124651

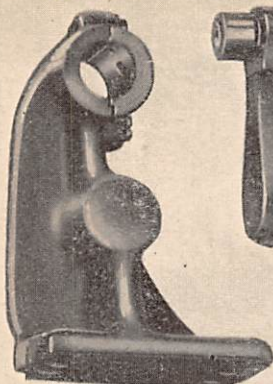

17742

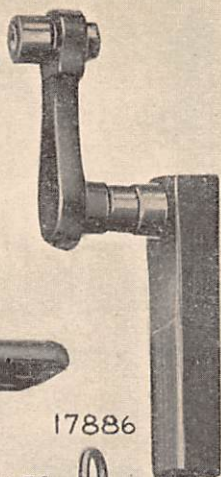

17845



17886



124650




124652



124624



62189

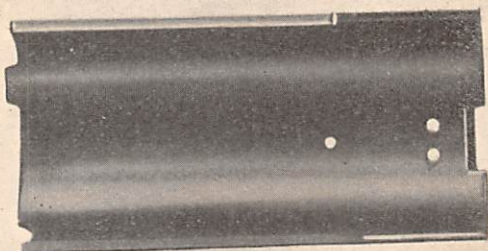

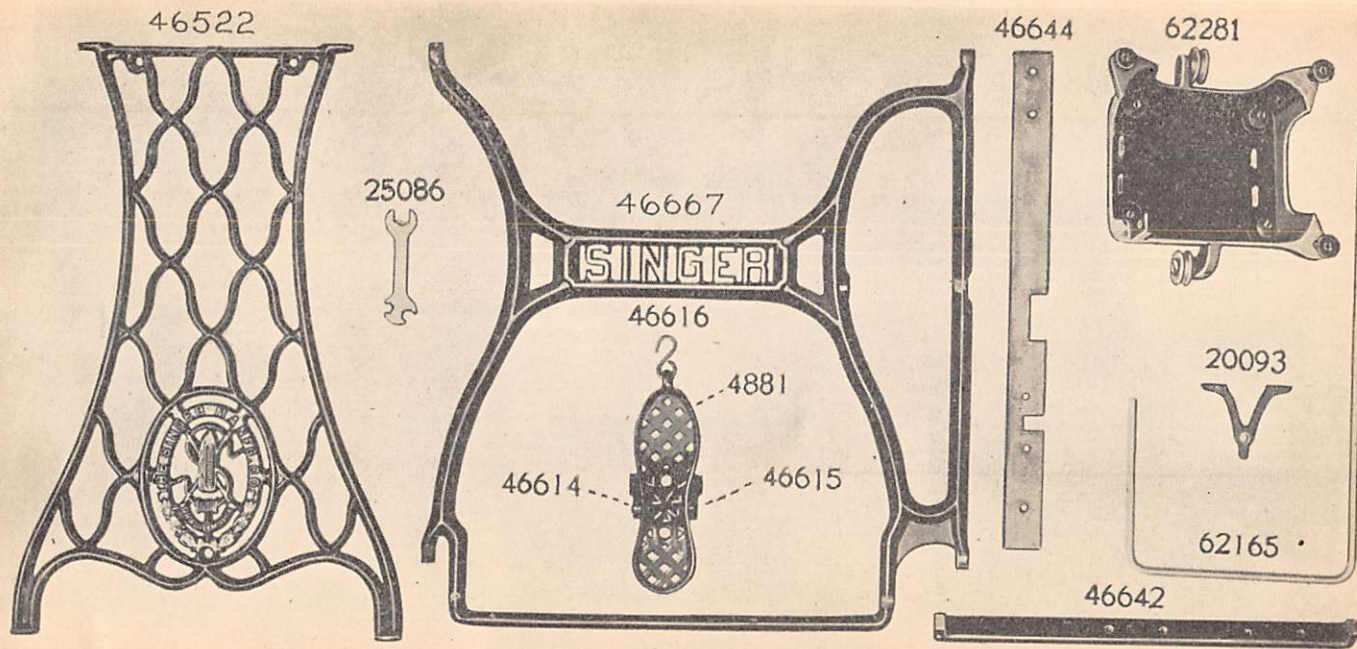


PLATE 7033—ONE-NINTH SIZE

From the library of: Superior Sewing Machine & Supply LLC

