

LIST OF PARTS



SINGER^{}**
MACHINES
Nos. 114-5 to 114-8

THE SINGER MANUFACTURING COMPANY

From the library of: Superior Sewing Machine & Supply LLC

^{**}A Trade Mark of THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 8428.

"TYPE D" OIL should be used when an oil is desired which will produce a minimum of stain on fabrics, even after a long period of storage.

Copyright, U. S. A., 1917, 1920, 1921 and 1922,
by The Singer Manufacturing Company
All Rights Reserved for all Countries

INDEX

	PAGE
ATTACHMENTS AND ACCESSORIES	33
MACHINE NO. 114-5	7
" " 114-6	19
" " 114-7	20
" " 114-8	33
NUMERICAL LIST OF PARTS	39
OBSOLETE PARTS	37
PROTECTOR	34
STAND	35
STARTING LEVER AND FOOT LIFTER PARTS	34
TABLE BELT GUIDE	36
THREAD UNWINDER	36

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number. which, although not stamped on the parts, must be used when ordering the combination

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated
- C. Hardened only.
- D. Polished only.
- E. Soft. not Polished.
- F. Hardened and Polished.
- G.
- H. Blued
- J. Plated only.
- K. Hardened and Plated.
- L. Brass or Gilt.
- M. Oxidized.
- P. Japanned.
- R. Parkerized.

These letters **MUST BE USED** *when* they appear in the list, and **AFTER** the number *as* in the list.

In this series

1 to 1500 and 50001 to 51500 are Screw Numbers.

1501 to 1800 are Nut Numbers.

1801 to 2000 are Roller Numbers.

2001 to 50000 and 52001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE

FOR

MACHINE No. 114-5

**FOR SEWING TWO OR FOUR-HOLE BUTTONS ON SHIRTS,
WAISTS AND UNDERWEAR. SMALL BUTTONS ONLY.
MAKES TWO PARALLEL BARS IN FOUR-HOLE BUTTONS.
MAKES FOURTEEN STITCHES, INCLUDING THE FASTEN-
ING STITCH; FITTED WITH IMPROVED THREAD CON-
TROLLING MECHANISM AND THREAD NIPPING DEVICE
TO HOLD THE END OF THE THREAD UNTIL THE
FIRST STITCH IS MADE.**

NO.	PLATE	NAME
*62295	—	Arm with 4449, 124606 and two 164E.....
16532	6976	" Dowel Pin.....
4448	6976	" Oil Tube, for intermediate bearing ...
56015	6976	" " " " oiling 59705 and 59706..
880E	6998	" Screw.....
59702	6975	" Shaft (horizontal).....
17703	6981	" " " Bushing (back)....
50333c	6998	" " " " " Ad- justing Screw
1520E	6994	Arm Shaft (horizontal) Bushing (back) Ad- justing Screw Nut.....
*4449	—	Arm Shaft (horizontal) Bushing (front)...
59703	6976	" " " Gear with two 1036c
1036c	6976	" " " Set Screw
59704	6976	" " (upright).....
59705	6976	" " " Bushing (lower)
435c	7015	" " " " " Set Screw.....
59706	6976	Arm Shaft (upright) Bushing (upper).....
448c	6992	" " " " " Set Screw.....
59707	6976	Arm Shaft (upright) Gear (lower) with two 1253c.....
1253c	6976	Arm Shaft (upright) Gear (lower) Set Screw.....
59708	6976	Arm Shaft (upright) Gear (upper) with two 1253c.....
1253c	6976	Arm Shaft (upright) Gear (upper) Set Screw
124674	7020	" Side Cover.....

NO.	PLATE	NAME
190D	6990	Arm Side Cover Screw.....
18498	6975	Belt Cover.....
59795	6977	“ “ Bracket with 184E and 59796..
184E	6998	“ “ “ Screw Stud.....
59796	7019	“ “ “ Stud.....
217D	6998	“ “ “ Screw.....
39222	6977	“ “ Shifter.....
39223	6976	“ “ “ Clamp.....
1255D	6976	“ “ “ “ Screw.....
39238	7017	Button Clamp (left) with 9311 and 17723..
39239	7017	“ “ “ (right) with 9311 and 17723
63927	7017	“ “ “ Arm with 17714 and 63788..
17710	6978	“ “ “ “ Hinge Plate.....
1176J	6978	“ “ “ “ “ Screw....
63788	7015	“ “ “ “ Hook.....
1175J	6978	“ “ “ “ Hinge Screw.....
59710	6979	“ “ “ “ Lifter.....
176D	7009	“ “ “ “ “ Screw.....
124677	7019	“ “ “ “ Locking Device Latch with 704J.....
704J	7019	Button Clamp Locking Device Latch Clamping Screw.....
124678	7020	Button Clamp Locking Device Latch Shaft
124679	7019	“ “ “ “ “ “ “ Crank.....
124680	7019	Button Clamp Locking Device Latch Shaft Crank Connection.....
1282c	7019	Button Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (lower) . .
1282c	7019	Button Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (upper) . .
2269	6994	Button Clamp Locking Device Latch Shaft Crank Pin.....
39241	6978	Button Clamp Pressure Spring.....
17713	6978	“ “ “ “ “ Bracket . . .
1177D	6978	“ “ “ “ “ “ Screw
17714	6978	“ “ “ “ “ Guide Block
1178J	6978	“ “ “ “ “ Screw
39242	6978	“ “ “ “ “ Spreader.....
17717	6979	“ “ “ “ “ Lever.....
50237K	6979	“ “ “ “ “ Hinge Screw
1180J	6979	“ “ “ “ “ Locking Thumb Screw.....
17718	6979	Button Clamp Spreader Lever Locking Thumb Screw Washer.....
1182J	6978	Button Clamp Spreader Screw.....
17719	7019	“ “ “ “ “ Spring.....

NO.	PLATE	NAME
1181J	7019	Button Clamp Spreader Spring Screw . . .
17720	6979	“ “ “ Steady Pin
39244	7017	“ “ Spring (left) for flat buttons
39245	7017	“ “ “ (right) for flat buttons
39246	6978	Button Clamp Spring (left) for stud back buttons
39247	6978	Button Clamp Spring (right) for stud back buttons
229J	6978	Button Clamp Spring Screw
9311	7017	“ “ “ Steady Pin
39248	6979	“ “ Stop with two 17720
1183J	6979	“ “ “ Screw
17723	6979	“ “ Stud
63928	7018	Button Clamp (universal) complete, for 10 to 50 line thin buttons, Nos. 1180J, 1181J, 1182J, 1183J, 17717 to 17719, 39238, 39239, 39242, 39244 or 39246, 39245 or 39247, 39248, 50237K, 63927 and two each 229J and 1175J
*62180	—	Cloth Plate with 62181
*62181	—	“ “ Button Tray
62102	6980	“ “ Guide Block (left)
742F	6980	“ “ “ “ “ Screw
1547D	6980	“ “ “ “ “ “ Nut
62103	6980	“ “ “ “ (right)
3021	6980	“ “ “ “ “ Rivet
190D	6990	“ “ Screw
62104	6980	“ “ Stop
26770	6980	“ “ “ Rivet
62182	6975	Cloth Plate complete, Nos. 742F, 1547D, 26770, 62102 to 62104, 62180 and two 3021
*62177	—	Cylinder
62183	7020	“ Bottom Cover
62108	6981	“ End Cover
62184	—	“ “ “ 62108 with 1 0 3 4 D, 62111 to 62113, 62183, 62185 and four 1477D
62185	6980	Cylinder End Cover Bracket
62111	6980	“ “ “ “ Hinge Pin
1477D	6980	“ “ “ “ Screw
62112	6980*	“ “ “ Hinge
1477D	6980	“ “ “ “ Screw
62113	6980	“ “ “ Spring
1034D	6980	“ “ “ “ Screw
62114	6980	“ Top Cover

NO.	PLATE	NAME
286D	6980	Cylinder Top Cover Thumb Screw.....
59711	6981	Face Plate.....
59712	—	Face Plate complete, Nos. 208D, 9544, 9545, 59711 and two each 229D, 2107 and 9543
164D	6990	Face Plate Screw.....
2107	6980	" " Thread Guard.....
229D	6978	" " " " Screw.....
9543	6980	" " " " Nipper Disc.....
9544	6980	" " " " " Cover....
208D	6980	" " " " " " Screw
9545	6980	" " " " " " Spring....
62115	6982	Feed Across Connection Adjusting Stud
1649c	6982	" " " " " "
		Nut (left).....
1650c	6982	Feed Across Connection Adjusting Stud
		Nut (right).....
62116	6982	Feed Across Knuckle Joint.....
17728	6982	" " " " " Connection
1184E	6982	" " " " " " Hinge
		Screw.....
59713	6984	Feed Across Lever with 1185c and 50150c.
17730	6982	" " " " Ball Stud.....
1185c	6982	" " " " " Set Screw...
59714	—	Feed Across Lever complete, Nos. 59713, 59715 and 59721.....
59715	6983	Feed Across Lever Extension with 1952 and 51814.....
59716	6983	Feed Across Lever Extension Disengaging Eccentric.....
59717	6983	Feed Across Lever Extension Disengaging Eccentric Connection.....
999D	6983	Feed Across Lever Extension Disengaging Eccentric Connection Hinge Screw.....
59718	6983	Feed Across Lever Extension Disengaging Eccentric Connection Spring.....
193D	6983	Feed Across Lever Extension Disengaging Eccentric Connection Spring Screw.....
238D	6983	Feed Across Lever Extension Disengaging Eccentric Connection Stop Screw.....
2273	6983	Feed Across Lever Extension Disengaging Eccentric Pin.....
59719	6983	Feed Across Lever Extension Disengaging Eccentric Shaft.....
59720	6983	Feed Across Lever Extension Disengaging Handle.....
2273	6983	Feed Across Lever Extension Disengaging Handle Pin.....

NO.	PLATE	NAME
51814	6983	Feed Across Lever Extension Guiding Roller and Screw Stud.....
59721	6983	Feed Across Lever Extension Hinge Pin
50150c	6991	" " " " " "
		Set Screw.....
59722	6984	Feed Across Lever Extension Position Arm
2022	6983	" " " " " "
		Pin.....
59723	6983	Feed Across Lever Extension Position Arm Support.....
1404b	6983	Feed Across Lever Extension Position Arm Support Screw.....
9525	6983	Feed Across Lever Extension Position Arm Support Screw Washer.....
1952	6983	Feed Across Lever Extension Roller and Stud.....
430c	6994	Feed Across Lever Extension Stop Screw
1520E	6994	" " " " " "
		Nut.....
59724	6987	Feed Across Lever Hinge Stud.....
160b	6998	" " " " " Clamping Screw.....
62118	6985	Feed Across Lever Plate with 17741.....
62119	6985	" " " " Cover.....
1094F	6985	" " " " Screw.....
55300	6985	" " " " Steady Pin.....
17733	6982	" " " " Socket Bearing.....
17734	6982	" " " " " Block (two pieces).....
145F	6982	Feed Across Lever Socket Bearing Block Set Screw.....
1528J	6982	Feed Across Lever Socket Bearing Block Set Screw Nut.....
62120	6984	Feed Across Regulator.....
1187E	6982	" " " " Adjusting Stud....
1676c	6982	" " " " " Nut
17738	6982	" " " " " " Washer.....
17739	6982	Feed Across Regulator Adjusting Stud Sleeve.....
1188b	6998	Feed Across Regulator Hinge Screw.....
62121	6985	" " " " Link.....
50324E	6985	" " " " " Screw Stud
1655E	6985	" " " " " " Nut.....
14017	6985	Feed Across Regulator Link Screw Stud Nut Washer.....

NO.	PLATE	NAME
17741	6985	Feed Across Regulator Link Stud.....
124644	7021	" Cam with two 1192c, three each 190p, 17874, 124616, 124622 and twelve 335j
18415	6987	Feed Cam Driving Worm with 1441c and 1442c.....
1442c	6987	Feed Cam Driving Worm Position Screw..
1441c	6987	" " " " Set Screw.....
17797	6977	" " " " Wheel with 453c
3012	7019	" " " " " Pin.....
453c	6987	" " " " " Set Screw
18384	7019	" " Pin.....
1192c	6987	" " Set Screw.....
59728	6989	" " Shaft.....
1653c	6999	" " " Nut.....
62297	7023	" Plate.....
124683	7023	" " for two-hole flat buttons.....
*18445	6989	" " Carrier Bar.....
62123	—	" " " " 18445 with 934d, 1094F, 1195E, 17743, 18368, 62118, 62119, two 55300 and four 17806.....
59730	6987	Feed Plate Carrier Bar Pivot Block.....
50306d	6987	" " " " " " Screw.
18368	6987	" " " " Plate.....
934d	6987	" " " " " Screw.....
1654c	7023	" " Nut.....
17806	7023	" " Position Stud.....
1195E	7023	" " Screw Stud.....
17742	6984	" Regulator with 1953.....
62117	6984	" " Bracket with 17732 and three 160p.....
*17732	—	Feed Regulator Bracket Cap.....
160d	6998	" " " " " Screw.....
8589	7019	" " " " Dowel Pin.....
1177d	6978	" " " " Screw.....
17744	6987	" " Hinge Stud.....
17743	6987	" " Post.....
1953	7019	" " Roller and Screw Stud with 1655c and 14017.....
1655c	6985	Feed Regulator Roller and Screw Stud Nut.....
14017	6985	Feed Regulator Roller and Screw Stud Nut Washer.....
1190c	6987	Feed Regulator Stop Screw.....
17745	6987	" " Swivel.....
1191d	6987	" " Thumb Screw.....
59731	6990	Knife.....
62124	6975	" Bar with 62130 and two 3021.....

NO.	PLATE	NAME
62125	6990	Knife Bar Cap.....
164D	6990	" " " Screw.....
62126	6990	" " Connection with 17917.....
190D	6990	" " " Screw.....
17915	6990	" " " Slide Block.....
17917	—	" " " " " 17915 with 17916.....
17916	6990	Knife Bar Connection Slide Block Stud...
59734	6990	" " Driving Lever with 223F and 59735.....
1382F	6998	Knife Bar Driving Lever Hinge Screw....
1681c	6999	" " " " " " Nut.
59735	6990	" " " " Lock Stud.....
223F	6990	" " " " " " Screw..
62127	6990	" " Guide.....
1235F	6990	" " " Screw.....
8734	7015	" " Retaining Spring.....
62192	7015	" " " " Bracket.....
62128	6990	" Holder with 59739.....
62129	6990	" " Cap with 59739.....
691F	6990	" " " Screw.....
59739	6990	" " " Stud.....
62130	6990	" " Connection.....
3021	6980	" " " Rivet.....
59739	6990	" " Stud.....
236F	6990	" Screw.....
62298	7023	Looper with 34418.....
*59742	—	" Collar.....
59743	6991	" Driving Shaft.....
62131	6991	" " " Bushing.....
52045	6992	" " " " Packing (cot- ton).....
1148c	7015	Looper Driving Shaft Bushing Set Screw..
59745	6991	" " " Collar with two 465c
465c	6991	" " " " Set Screw....
59746	6991	" " " Coupling with two 50150c.....
50150c	6991	Looper Driving Shaft Coupling Set Screw
59707	6976	" " " Gear with two 1253c
59747	6992	" " " " Cover.....
190D	6990	" " " " " Screw...
1253c	6976	" " " " Set Screw.....
59748	6991	" " " Universal Joint.....
50150c	6991	" Set Screw.....
59749	6989	" Shaft with 50150c and 59742.....
59745	6991	" " Collar with two 465c.....
465c	6991	" " " Set Screw.....

NO.	PLATE	NAME
59746	6991	Looper Shaft Coupling with two 50150c...
50150c	6991	" " " Set Screw.....
62197	7015	" " Ball with two 624c.....
62132	6991	" " Connection with 59752 and two 171E.....
*59752	—	Looper Shaft Ball Connection Cap.....
171E	6991	" " " " " Screw..
62133	6991	" " " " Stud (eccen- tric).....
1095F	6991	Looper Shaft Ball Connection Stud Cap Screw.....
1259c	6991	Looper Shaft Ball Connection Stud Set Screw.....
624c	6991	Looper Shaft Ball Set Screw.....
62134	6991	" " Slide Block.....
62135	6991	" " " " Cap.....
1186c	6991	" " " " " Screw.....
34418	6991	" Washer.....
62299	7020	Needle Bar with 1072F.....
39203	6992	" " Connecting Link.....
377c	6992	" " " " Hinge Screw
1518E	6992	" " " " " "
		Nut.....
2052	6992	Needle Bar Connecting Stud with 155c....
155c	6992	" " " " Set Screw...
59757	6992	" " Crank Wheel with 448c and 1293c.....
1293c	6992	Needle Bar Crank Wheel Position Screw..
448c	6992	" " " " Set Screw.....
124603	7019	" " Thread Retainer Bracket with 460c.....
460c	7019	Needle Bar Thread Retainer Bracket Set Screw.....
42348	7019	Needle Bar Thread Retainer Disc (inside).
10106	7019	" " " " " (outside)
10107	7019	" " " " " Spring
93c	7019	" " " " " "
		Screw.....
124604	7019	Needle Bar Thread Retainer Thread Guide
124605	—	Needle Bar Thread Retainer complete, Nos. 93c, 10106, 10107, 42348, 124603 and 124604
62300	7019	Needle Guard.....
124601	7019	" " Cam with two 465c.....
465c	6991	" " " Set Screw.....
2273	6983	" " Pin.....
59760	6989	" " Shaft.....


NO.	PLATE	NAME
59761	6993	Needle Guard Shaft Collar with two 465c.
465c	6991	" " " " Set Screw....
124602	7019	" " " Crank with 51812 and two 465c.....
51812	6993	Needle Guard Shaft Crank Roller and Stud
465c	6991	" " " " Set Screw.....
59763	6993	" " " End Bearing.....
59764	6989	" " " " Bracket
2022	6983	" " " " " "
		Dowel Pin.....
965D	6993	Needle Guard Shaft End Bearing Bracket Screw.....
1480H	6993	Needle Guard Shaft End Bearing Cap Screw.....
59765	6993	Needle Guard Shaft Spring.....
59766	6993	" " " " Collar with 624c.....
624c	6991	Needle Guard Shaft Spring Collar Set Screw.....
233D	6995	Needle Guard Shaft Spring Screw.....
1072F	6993	" Set Screw.....
2058	6989	Presser Bar.....
17841	6992	" " Collar with two 196F.....
196F	6992	" " " Set Screw.....
17842	6992	" " Guide Bracket with 453c.....
453c	6987	" " " " Set Screw.....
124681	7020	" " Lifting Lever.....
124606	7020	" " " " Bracket.....
164E	6990	" " " " " Screw...
1201D	7006	" " " " Hinge Screw....
17845	6984	" " " " Rod.....
17846	—	" " " " " Chain.....
8414	6989	" " Spring.....
17941	6977	Pulley (loose) 2 $\frac{1}{8}$ in. diam.....
17848	6977	" " Bushing.....
2269	6994	" " " Position Pin.....
1202D	6998	" " Cap Screw.....
17942	6977	" (tight) 2 $\frac{1}{8}$ in. diam., with 2269....
2022	6983	" " Pin.....
17955	—	Pulleys complete, Nos. 1202D, 1206C, 17848, 17854, 17941 and 17942.....
17853	6994	Starting Lever.....
1262C	6998	" " Hinge Screw.....
1662C	6999	" " " " Nut.....
17886	6984	" " Pitman.....
17854	6994	Stop Cam.....
17855	6994	" " Interlocking Rod.....

NO.	PLATE	NAME
62136	6977	Stop Cam Interlocking Rod Case with 59771 and two 193b.....
62159	—	Stop Cam Interlocking Rod Case 62136 with 1318b, 17855, 17863, 17864, 39222, 39223 and two 1255b.....
59769	6977	Stop Cam Interlocking Rod Case Bracket
62186	—	Stop Cam Interlocking Rod Case Bracket complete, Nos. 1182E, 1196c, 1204E, 1254c, 1262c, 1508E, 1662c, 17853, 17859, 17861, 17862, 17872, 17873, 59769, 62159 and two 898b.....
62137	—	Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186b
2182S	6976	Stop Cam Interlocking Rod Case Bracket Dowel Pin.....
50372b	7015	Stop Cam Interlocking Rod Case Bracket Screw.....
1204E	6998	Stop Cam Interlocking Rod Case Hinge Screw.....
17859	6977	Stop Cam Interlocking Rod Case Socket Joint.....
898b	6998	Stop Cam Interlocking Rod Case Socket Joint Cap Screw.....
39343	6981	Stop Cam Interlocking Rod Case Spring (flat).....
430c	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw.....
1520E	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut.....
39344	6994	Stop Cam Interlocking Rod Case Spring Bracket with 430c and 1520E.....
1186b	6991	Stop Cam Interlocking Rod Case Spring Bracket Screw.....
17861	6994	Stop Cam Interlocking Rod Case Stop Stud
1254c	6998	" " " " " " " "
		Screw Bushing.....
1508E	6999	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut.....
17862	6994	Stop Cam Interlocking Rod Case Stop Stud Spring.....
59771	6994	Stop Cam Interlocking Rod Case Wearing Block.....
193b	6983	Stop Cam Interlocking Rod Case Wearing Block Screw.....
17863	6994	Stop Cam Interlocking Rod Spring.....
17864	6994	" " " " Stop.....
1318b	6994	" " " " " Screw..

NO.	PLATE	NAME
3012	7019	Stop Cam Fin.....
1206c	6994	" " Screw.....
2102	6995	Tension Disc.....
1560c	6995	" Regulating Thumb Nut.....
50148c	6995	" Screw Stud.....
42336	6995	" Spring.....
13915	6995	" " Bushing.....
10145	6995	" Thread Guide.....
124609	7023	Thread Controller Sleeve.....
124607	7023	" " Spring.....
124608	7023	" " " Collar with 1477F
1477F	6980	" " " " Set Screw
124610	7023	" " Stud with 56549 and 124631.....
*124631	—	Thread Controller Stud Collar.....
56549	—	" " " " Pin.....
457c	7023	" " " Set Screw.....
124611	—	Thread Controller complete, Nos. 124607 to 124610.....
*124612	—	Thread Nipper (lower) Blade.....
*124613	—	" " " " Carrier with 124619.....
124614	7023	Thread Nipper (lower) Blade Carrier 124613 with 124612 and two 6037.....
665j	7023	Thread Nipper (lower) Blade Carrier Cap Screw.....
124615	7023	Thread Nipper (lower) Blade Carrier Hinge Stud.....
6037	7023	Thread Nipper (lower) Blade Rivet.....
124616	7020	" " " Cam.....
335j	7023	" " " " Screw.....
124653	7020	" " " Connection.....
124618	7023	" " " " " Exten- sion.....
99k	7023	Thread Nipper (lower) Connection Exten- sion Hinge Screw.....
206j	7024	Thread Nipper (lower) Connection Exten- sion Screw.....
124619	7023	Thread Nipper (lower) Connection Hinge Stud.....
124620	7020	Thread Nipper (lower) Driving Arm.....
8554	7019	" " " " " Pin..
124621	7020	" " " Lever with 237k...
124622	7020	" " " " Guide.....
335j	7023	" " " " " Screw.
8554	7019	" " " " " Pin.....
237k	7009	" " " " " Set Screw...

NO.	PLATE	NAME
124623	7020	Thread Nipper (lower) Lever Shaft
*124682	7020	" " " " " Bracket
1177J	6978	Thread Nipper (lower) Lever Shaft Bracket Screw
1743D	6979	Thread Nipper (upper) Adjusting Thumb Nut
59773	6995	Thread Nipper (upper) Body
624c	6991	" " " " Set Screw...
59774	6995	" " " Cam with two 50150c
50150c	6991	Thread Nipper (upper) Cam Set Screw....
2921	6995	" " " Disc
12162	6995	" " " Guide Pin....
62169	6979	" " " Spring
59775	6995	" " " Eyelet
1527D	6995	" " " Lock Nut
59776	6995	" " " Stud with 1353S...
1353S	6995	" " " Position Pin..
13539	6995	" " " Roller
13540	6995	" " " " Pin...
2026	6995	" " " Spring
59777	—	Thread Nipper (upper) Stud complete, Nos. 13539, 13540 and 59776
59778	—	Thread Nipper (upper) complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921
124625	—	Thread Take-up Body with 62172
42808	6979	" " Roller
62171	6979	" " " Cap
337D	6979	" " " Screw
62172	6979	" " " Pin
124626	7019	Thread Take-up complete, Nos. 337D, 42808, 62171 and 124625
691F	6990	Thread Take-up Screw
39452	6979	" Wiper Body
39453	6979	" " " Finger
330D	6979	" " " Screw
1207D	6979	" " " Hinge Screw
59787	6979	" " " Support
641c	6979	" " " Set Screw ..
39455	6979	" " " Wire
39456	6979	" " " Clamp
1302D	6979	" " " " Screw...
124627	7024	Throat Plate with 124615
124628	7024	" " Needle Guard
206D	7024	" " " Screw
691F	6990	" " Screw

NO.	PLATE	NAME
17872	6994	Trip Lever.....
1196c	6998	" " Hinge Screw.....
17873	6994	" " Spring.....
1182E	6978	" " " Screw.....
17874	6987	Tripping Point.....
190D	6990	" " " Screw.....

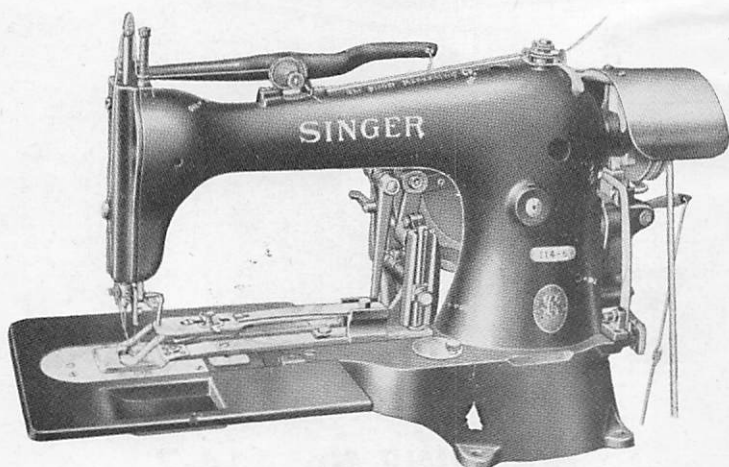


MACHINE No. 114-6

FOR SEWING TWO OR FOUR-HOLE BUTTONS ON SHIRTS, WAISTS AND UNDERWEAR. SMALL BUTTONS ONLY. MAKES TWO PARALLEL BARS IN FOUR-HOLE BUTTONS. MAKES TWENTY-ONE STITCHES, INCLUDING THE FASTENING STITCH; FITTED WITH IMPROVED THREAD CONTROLLING MECHANISM AND THREAD NIPPING DEVICE TO HOLD THE END OF THE THREAD UNTIL THE FIRST STITCH IS MADE.

This Machine is the same as 114-5 with the following exceptions:

NO.	PLATE	NAME
124645	7021	Feed Cam with two each 190D, 1192c, 17874, 124616, 124630 and ten 335J, in place of 124644.....
124630	7020	Thread Nipper (lower) Lever Guide, in place of 124622.....

LIST OF PARTS COMPLETE FOR

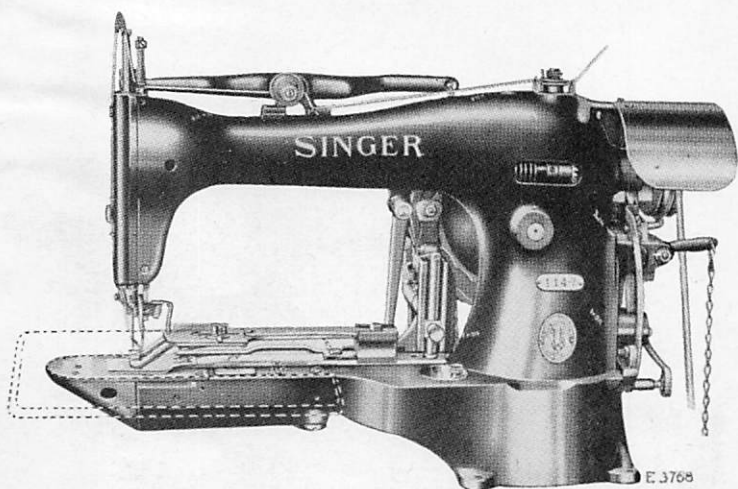

MACHINE No. 114-7

FOR SEWING TWO OR FOUR-HOLE BUTTONS ON SHIRTS, WAISTS AND UNDERWEAR. SMALL BUTTONS ONLY. MAKES CROSS STITCHES IN FOUR-HOLE BUTTONS AND AND CAN BE ADJUSTED FOR TWO-HOLE AND BAR BUTTONS. MAKES FOURTEEN STITCHES, INCLUDING THE FASTENING STITCH; FITTED WITH IMPROVED THREAD CONTROLLING MECHANISM AND THREAD NIPPING DEVICE TO HOLD THE END OF THE THREAD UNTIL THE FIRST STITCH IS MADE.

NO.	PLATE	NAME
*62295	—	Arm with 4449, 124606 and two 164E.....
16532	6976	“ Dowel Pin.....
4448	6976	“ Oil Tube for intermediate bearing....
56015	6976	“ “ “ oiling 59705 and 59706.
880E	6998	“ Screw.....
59702	6975	“ Shaft (horizontal).....
17703	6981	“ “ “ Bushing (back)....
50333C	6998	“ “ “ “ Ad-justing Screw.....

NO.	PLATE	NAME
1520E	6994	Arm Shaft (horizontal) Bushing (back) Adjusting Screw Nut.....
*4449	—	Arm Shaft (horizontal) Bushing (front)...
59703	6976	" " " Gear with two 1036c.....
1036c	6976	Arm Shaft (horizontal) Gear Set Screw....
59704	6976	" " (upright).....
59705	6976	" " " Bushing (lower)....
435c	7015	" " " " " Set Screw.....
59706	6976	Arm Shaft (upright) Bushing (upper)....
448c	6992	" " " " " Set Screw.....
59707	6976	Arm Shaft (upright) Gear (lower) with two 1253c.....
1253c	6976	Arm Shaft (upright) Gear (lower) Set Screw.....
59708	6976	Arm Shaft (upright) Gear (upper) with two 1253c.....
1253c	6976	Arm Shaft (upright) Gear (upper) Set Screw.....
124674	7020	Arm Side Cover
190D	6990	" " " Screw.....
18498	6975	Belt Cover.....
59795	6977	" " " Bracket with 184E and 59796..
184E	6998	" " " Screw Stud.....
59796	7019	" " " Stud.....
217D	6998	" " " Screw.....
39222	6977	" Shifter.....
39223	6976	" " " Clamp.....
1255D	6976	" " " Screw.....
39238	7017	Button Clamp (left) with 9311 and 17723
39239	7017	" " (right) with 9311 and 17723
63927	7017	" " " Arm with 17714 and 63788
17710	6978	" " " Hinge Plate.....
1176J	6978	" " " " " Screw....
63788	7015	" " " Hook.....
1175J	6978	" " " Hinge Screw.....
59710	6979	" " " Lifter.....
176D	7009	" " " Screw.....
124677	7019	" " " Locking Device Latch with 704J
704J	7019	Button Clamp Locking Device Latch Clamping Screw.....
124678	7020	Button Clamp Locking Device Latch Shaft.....

NO.	PLATE	NAME
124679	7019	Button Clamp Locking Device Latch Shaft Crank.....
124680	7019	Button Clamp Locking Device Latch Shaft Crank Connection.....
1282c	7019	Button Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (lower).....
1282c	7019	Button Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (upper)
2269	6994	Button Clamp Locking Device Latch Shaft Crank Pin.....
39241	6978	Button Clamp Pressure Spring.....
17713	6978	" " " " Bracket
1177d	6978	" " " " "
		Screw.....
17714	6978	Button Clamp Pressure Spring Guide Block
1178j	6978	" " " " Screw.....
39242	6978	" " Spreader.....
17717	6979	" " " Lever.....
50237k	6979	" " " " Hinge Screw
1180j	6979	" " " " Locking Thumb Screw.....
17718	6979	Button Clamp Spreader Lever Locking Thumb Screw Washer.....
1182j	6978	Button Clamp Spreader Screw.....
17719	7019	" " " Spring.....
1181j	7019	" " " " Screw.....
17720	6979	" " " Steady Pin.....
39244	7017	" " Spring (left) for flat buttons
39245	7017	" " " (right) for flat but- tons.....
39246	6978	Button Clamp Spring (left) for stud back buttons.....
39247	6978	Button Clamp Spring (right) for stud back buttons.....
229j	6978	Button Clamp Spring Screw.....
9311	7017	" " " Steady Pin.....
39248	6979	" " Stop with two 17720.....
1183j	6979	" " " Screw.....
17723	6979	" " Stud.....
63928	7018	Button Clamp (universal) complete, for 10 to 50 line thin buttons, Nos. 1180j 1181j, 1182j, 1183j, 17717 to 17719, 39238, 39239, 39242, 39244 or 39246, 39245 or 39247, 39248, 50237k, 63927 and two each 229j and 1175j.....
*62101	—	Cloth Plate.....

NO.	PLATE	NAME
62102	6980	Cloth Plate Guide Block (left)
742F	6980	" " " " " Screw
1547D	6980	" " " " " " Nut ..
62103	6980	" " " " (right)
3021	6980	" " " " " Rivet
190D	6990	" " Screw
62104	6980	" " Stop
26770	6980	" " " Rivet
62105	6975	Cloth Plate complete, Nos. 742F, 1547D, 26770, 62101 to 62104 and two 3021
*62177	—	Cylinder
62183	7020	" Bottom Cover
62108	6981	" End Cover
62184	—	" " " 62108 with 1034D, 62111 to 62113, 62183, 62185 and four 1477D
62185	6980	Cylinder End Cover Bracket
62111	6980	" " " " Hinge Pin ...
1477D	6980	" " " " Screw
62112	6980	" " " Hinge
1477D	6980	" " " " Screw
62113	6980	" " " Spring
1034D	6980	" " " " Screw
62114	6980	" Top Cover
286D	6980	" " " Thumb Screw
59711	6981	Face Plate
59712	—	Face Plate complete, Nos. 208D, 9544, 9545, 59711 and two each 229D, 2107 and 9543
164D	6990	Face Plate Screw
2107	6980	Face Plate Thread Guard
229D	6978	" " " " Screw
9543	6980	" " " Nipper Disc
9544	6980	" " " " " Cover
208D	6980	" " " " " " Screw
9545	6980	" " " " " Spring
62115	6982	Feed Across Connection Adjusting Stud
1649C	6982	" " " " " "
		Nut (left)
1650C	6982	Feed Across Connection Adjusting Stud
		Nut (right)
62116	6982	Feed Across Knuckle Joint
17728	6982	" " " " Connection
1184E	6982	" " " " " Hinge
		Screw
59713	6984	Feed Across Lever with 1185C and 50150C.
17730	6982	" " " Ball Stud
1185C	6982	" " " " " Set Screw

NO.	PLATE	NAME
59714	—	Feed Across Lever complete, Nos. 59713, 59715 and 59721.....
59715	6983	Feed Across Lever Extension with 1952 and 51814.....
59716	6983	Feed Across Lever Extension Disengaging Eccentric.....
59717	6983	Feed Across Lever Extension Disengaging Eccentric Connection.....
999b	6983	Feed Across Lever Extension Disengaging Eccentric Connection Hinge Screw.....
59718	6983	Feed Across Lever Extension Disengaging Eccentric Connection Spring.....
193b	6983	Feed Across Lever Extension Disengaging Eccentric Connection Spring Screw.....
238b	6983	Feed Across Lever Extension Disengaging Eccentric Connection Stop Screw.....
2273	6983	Feed Across Lever Extension Disengaging Eccentric Pin.....
59719	6983	Feed Across Lever Extension Disengaging Eccentric Shaft.....
59720	6983	Feed Across Lever Extension Disengaging Handle.....
2273	6983	Feed Across Lever Extension Disengaging Handle Pin.....
51814	6983	Feed Across Lever Extension Guiding Roller and Screw Stud.....
59721	6983	Feed Across Lever Extension Hinge Pin
50150c	6991	" " " " " "
		Set Screw.....
124689	7025	Feed Across Lever Extension Position Arm.....
2022	6983	Feed Across Lever Extension Position Arm Pin.....
59723	6983	Feed Across Lever Extension Position Arm Support.....
1404b	6983	Feed Across Lever Extension Position Arm Support Screw.....
9525	6983	Feed Across Lever Extension Position Arm Support Screw Washer.....
1952	6983	Feed Across Lever Extension Roller and Stud.....
430c	6994	Feed Across Lever Extension Stop Screw
1520E	6994	" " " " " "
		Nut.....
59724	6987	Feed Across Lever Hinge Stud.....
160b	6998	" " " " " Clamping
		Screw.....

NO.	PLATE	NAME
62118	6985	Feed Across Lever Plate with 17741.....
62119	6985	" " " " Cover.....
1094F	6985	" " " " Screw.....
55300	6985	" " " " Steady Pin.....
17733	6982	" " " " Socket Bearing.....
17734	6982	" " " " " Block (two pieces).....
145F	6982	Feed Across Lever Socket Bearing Block Set Screw.....
1528J	6982	Feed Across Lever Socket Bearing Block Set Screw Nut.....
62120	6984	Feed Across Regulator.....
1187E	6982	" " " " Adjusting Stud....
1676c	6982	" " " " " " Nut
17738	6982	" " " " " " " " Washer.....
17739	6982	Feed Across Regulator Adjusting Stud Sleeve.....
1188D	6998	Feed Across Regulator Hinge Screw.....
62121	6985	" " " " Link.....
50324E	6985	" " " " " Screw Stud ...
1655E	6985	" " " " " " " Nut
14017	6985	" " " " " " " " Washer.....
17741	6985	Feed Across Regulator Link Stud.....
124690	7022	" Cam with two 1192c, three each 190D, 17874, 124616, 124622 and twelve 335J
18415	6987	Feed Cam Driving Worm with 1441c and 1442c.....
1442c	6987	Feed Cam Driving Worm Position Screw..
1441c	6987	" " " " " Set Screw.....
17797	6977	" " " " " Wheel with 453c
3012	7019	" " " " " " Pin.....
453c	6987	" " " " " " Set Screw
18384	7019	" " " " " Pin.....
1192c	6987	" " " " " Set Screw.....
59728	6989	" " " " " Shaft.....
1653c	6999	" " " " " Nut.....
62297	7023	" " " " " Plate.....
124683	7023	" " " " " for two-hole flat buttons.....
*18445	6989	" " " " " Carrier Bar.....
62123	—	" " " " " 18445 with 934D, 1094F, 1195E, 17743, 18368, 62118, 62119, two 55300 and four 17806.....
59730	6987	Feed Plate Carrier Bar Pivot Block.....
50306D	6987	" " " " " " " Screw
18368	6987	" " " " " " " Plate.....

NO.	PLATE	NAME
934D	6987	Feed Plate Carrier Bar Plate Screw.....
1654C	7023	" " Nut.....
17806	7023	" " Position Stud.....
1195E	7023	" " Screw Stud.....
17742	6984	" Regulator with 1953.....
62117	6984	" " Bracket with 17732 and three 160D.....
*17732	—	Feed Regulator Bracket Cap.....
160D	6998	" " " " Screw.....
S589	7019	" " " Dowel Pin.....
1177D	6978	" " " Screw.....
17744	6987	" " Hinge Stud.....
17743	6987	" " Post.....
1953	7019	" " Roller and Screw Stud with 1655C and 14017.....
1655C	6985	Feed Regulator Roller and Screw Stud Nut.....
14017	6985	Feed Regulator Roller and Screw Stud Nut Washer.....
1190C	6987	Feed Regulator Stop Screw.....
17745	6987	" " Swivel.....
1191D	6987	" " Thumb Screw.....
59731	6990	Knife.....
62124	6975	" Bar with 62130 and two 3021.....
62125	6990	" " Cap.....
164D	6990	" " " Screw.....
62126	6990	" " Connection with 17917.....
190D	6990	" " " Screw.....
17915	6990	" " " Slide Block.....
17917	—	" " " " " 17915 with 17916.....
17916	6990	Knife Bar Connection Slide Block Stud ..
59734	6990	" " Driving Lever with 223F and 59735.....
1382F	6998	Knife Bar Driving Lever Hinge Screw....
1681C	6999	" " " " " " Nut
59735	6990	" " " " Lock Stud.....
223F	6990	" " " " " " Screw.....
62127	6990	" " Guide.....
1235F	6990	" " " Screw.....
8734	7015	" " Retaining Spring.....
62192	7015	" " " " Bracket.....
62128	6990	" Holder with 59739.....
62129	6990	" " Cap with 59739.....
691F	6990	" " " Screw.....
59739	6990	" " " Stud.....
62130	6990	" " Connection.....

NO.	PLATE	NAME
3021	6980	Knife Holder Connection Rivet.....
59739	6990	“ “ Stud.....
236F	6990	“ Screw.....
124666	7023	Looper with 34418 and 124675.....
*59742	—	“ Collar.....
59743	6991	“ Driving Shaft.....
62131	6991	“ “ “ Bushing.....
52045	6992	“ “ “ “ Packing (cotton).....
1148c	7015	Looper Driving Shaft Bushing Set Screw..
59745	6991	“ “ “ Collar with two 465c
465c	6991	“ “ “ “ Set Screw....
59746	6991	“ “ “ Coupling with two 50150c.....
50150c	6991	Looper Driving Shaft Coupling Set Screw.
59707	6976	“ “ “ Gear with two 1253c
59747	6992	“ “ “ “ Cover.....
190D	6990	“ “ “ “ “ Screw...
1253c	6976	“ “ “ “ Set Screw.....
59748	6991	“ “ “ Universal Joint.....
50150c	6991	“ Set Screw.....
59749	6989	“ Shaft with 50150c and 59742.....
59745	6991	“ “ Collar with two 465c.....
465c	6991	“ “ “ Set Screw.....
59746	6991	“ “ Coupling with two 50150c...
50150c	6991	“ “ “ Set Screw.....
59750	6991	“ “ Eccentric with two 624c....
62132	6991	“ “ “ Connection with 59752 and two 171E.....
*59752	—	Looper Shaft Eccentric Connection Cap
171E	6991	“ “ “ “ “ Screw.....
62133	6991	Looper Shaft Eccentric Connection Stud (eccentric).....
1095F	6991	Looper Shaft Eccentric Connection Stud Cap Screw.....
1259c	6991	Looper Shaft Eccentric Connection Stud Set Screw.....
624c	6991	Looper Shaft Eccentric Set Screw.....
62134	6991	“ “ Slide Block.....
62135	6991	“ “ “ “ Cap.....
1186c	6991	“ “ “ “ “ Screw.....
124675	7023	“ Thread Retaining Pin.....
34418	6991	“ Washer.....
59756	6989	Needle Bar with 1072F.....
39203	6992	“ “ Connecting Link.....
377c	6992	“ “ “ “ Hinge Screw

NO. PLATE	NAME
1518E 6992	Needle Bar Connecting Link Hinge Screw Nut.....
2052 6992	Needle Bar Connecting Stud with 155c....
155c 6992	" " " " Set Screw....
59757 6992	" " Crank Wheel with 448c and 1293c.....
1293c 6992	Needle Bar Crank Wheel Position Screw..
448c 6992	" " " " Set Screw.....
124603 7019	" " Thread Retainer Bracket with 460c.....
460c 7019	Needle Bar Thread Retainer Bracket Set Screw.....
42348 7019	Needle Bar Thread Retainer Disc (inside).
10106 7019	" " " " " (outside)
10107 7019	" " " " " Spring.
93c 7019	" " " " " " Screw.....
124604 7019	Needle Bar Thread Retainer Thread Guide
124605 —	Needle Bar Thread Retainer complete, Nos. 93c, 10106, 10107, 42348, 124603 and 124604.....
62300 7019	Needle Guard.....
59759 6993	" " Cam with two 465c.....
465c 6991	" " " Set Screw.....
2273 6983	" " Pin.....
59760 6989	" " Shaft.....
59761 6993	" " " Collar with two 465c.
465c 6991	" " " " Set Screw.....
59762 6993	" " " Crank with 51812 and two 465c.....
51812 6993	Needle Guard Shaft Crank Roller and Stud
465c 6991	" " " " Set Screw.....
59763 6993	" " " End Bearing.....
59764 6989	" " " " " Bracket
2022 6983	" " " " " " Dowel Pin.....
965D 6993	Needle Guard Shaft End Bearing Bracket Screw.....
1480H 6993	Needle Guard Shaft End Bearing Cap Screw.....
59765 6993	Needle Guard Shaft Spring.....
59766 6993	" " " " " Collar with 624c.....
624c 6991	Needle Guard Shaft Spring Collar Set Screw.....
233D 6995	Needle Guard Shaft Spring Screw.....
1072F 6993	" Set Screw.....

NO.	PLATE	NAME
2058	6989	Presser Bar.....
17841	6992	" " Collar with two 196f.....
196f	6992	" " " Set Screw.....
17842	6992	" " Guide Bracket with 453c.....
453c	6987	" " " " Set Screw.....
124681	7020	" " Lifting Lever.....
124606	7020	" " " " Bracket.....
164E	6990	" " " " " Screw...
1201d	7006	" " " " Hinge Screw....
17845	6984	" " " " Rod.....
17846	—	" " " " " Chain.....
8414	6989	" " Spring.....
17941	6977	Pulley (loose) 2 $\frac{1}{8}$ in. diam.....
17848	6977	" " Bushing.....
2269	6994	" " " Position Pin.....
1202d	6998	" " Cap Screw.....
17942	6977	" (tight) 2 $\frac{1}{8}$ in. diam., with 2269....
2022	6983	" " Pin.....
17955	—	Pulleys complete, Nos. 1202d, 1206c, 17848, 17854, 17941 and 17942.....
17853	6994	Starting Lever.....
1262c	6998	" " Hinge Screw.....
1662c	6999	" " " " Nut.....
17886	6984	" " Pitman.....
17854	6994	Stop Cam.....
17855	6994	" " Interlocking Rod.....
62136	6977	" " " " Case w i t h 59771 and two 193d.....
62159	—	Stop Cam Interlocking Rod Case 62136 with 1318d, 17855, 17863, 17864, 39222, 39223 and two 1255d.....
59769	6977	Stop Cam Interlocking Rod Case Bracket
62186	—	Stop Cam Interlocking Rod Case Bracket complete, Nos. 1182E, 1196c, 1204E, 1254c, 1262c, 1508E, 1662c, 17853, 17859 17861, 17862, 17872, 17873, 59769, 62159 and two 898d.....
62137	—	Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186d
21828	6976	Stop Cam Interlocking Rod Case Bracket Dowel Pin.....
50372d	7015	Stop Cam Interlocking Rod Case Bracket Screw.....
1204E	6998	Stop Cam Interlocking Rod Case Hinge Screw.....
17859	6977	Stop Cam Interlocking Rod Case Socket Joint.....

NO.	PLATE	NAME
898D	6998	Stop Cam Interlocking Rod Case Socket Joint Cap Screw.....
39343	6981	Stop Cam Interlocking Rod Case Spring (flat).....
430c	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw.....
1520E	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut.....
39344	6994	Stop Cam Interlocking Rod Case Spring Bracket with 430c and 1520E.....
1186D	6991	Stop Cam Interlocking Rod Case Spring Bracket Screw.....
17861	6994	Stop Cam Interlocking Rod Case Stop Stud
1254c	6998	" " " " " " "
		Screw Bushing.....
1508E	6999	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut.....
17862	6994	Stop Cam Interlocking Rod Case Stop Stud Spring.....
59771	6994	Stop Cam Interlocking Rod Case Wearing Block.....
193D	6983	Stop Cam Interlocking Rod Case Wearing Block Screw.....
17863	6994	Stop Cam Interlocking Rod Spring.....
17864	6994	" " " " Stop.....
1318D	6994	" " " " " Screw...
3012	7019	" " Pin.....
1206c	6994	" " Screw.....
2102	6995	Tension Disc.....
1560c	6995	" Regulating Thumb Nut.....
50148c	6995	" Screw Stud.....
42336	6995	" Spring.....
13915	6995	" " Bushing.....
10145	6995	" Thread Guide.....
124609	7023	Thread Controller Sleeve.....
124607	7023	" " Spring.....
124608	7023	" " " Collar with 1477F.....
1477F	6980	Thread Controller Spring Collar Set Screw
124610	7023	" " Stud with 56549 and 124631.....
*124631	—	Thread Controller Stud Collar.....
56549	—	" " " " Pin.....
457c	7023	" " " Set Screw.....
124611	—	Thread Controller complete, Nos. 124607 to 124610.....
*124612	—	Thread Nipper (lower) Blade.....

NO.	PLATE	NAME
*124613	—	Thread Nipper (lower) Blade Carrier with 124619.....
124614	7023	Thread Nipper (lower) Blade Carrier 124613 with 124612 and two 6037.....
665J	7023	Thread Nipper (lower) Blade Carrier Cap Screw.....
124615	7023	Thread Nipper (lower) Blade Carrier Hinge Stud.....
6037	7023	Thread Nipper (lower) Blade Rivet.....
124616	7020	" " " Cam.....
335J	7023	" " " " Screw.....
124653	7020	" " " Connection.....
124618	7023	" " " " " Extension.....
99K	7023	Thread Nipper (lower) Connection Extension Hinge Screw.....
206J	7024	Thread Nipper (lower) Connection Extension Screw.....
124619	7023	Thread Nipper (lower) Connection Hinge Stud.....
124620	7020	Thread Nipper (lower) Driving Arm.....
8554	7019	" " " " " Pin...
124621	7020	" " " " " Lever with 237K...
124622	7020	" " " " " Guide.....
335J	7023	" " " " " Screw.....
8554	7019	" " " " " Pin.....
237K	7009	" " " " " Set Screw...
124623	7020	" " " " " Shaft.....
*124682	7020	" " " " " " Bracket
1177J	6978	" " " " " " " Screw.....
1743D	6979	Thread Nipper (upper) Adjusting Thumb Nut.....
59773	6995	Thread Nipper (upper) Body.....
624C	6991	" " " " " Set Screw...
59774	6995	" " " " " Cam with two 50150c.....
50150C	6991	Thread Nipper (upper) Cam Set Screw....
2921	6995	" " " " " Disc.....
12162	6995	" " " " " Guide Pin....
62169	6979	" " " " " Spring.....
59775	6995	" " " " " Eyelet.....
1527D	6995	" " " " " Lock Nut.....
59776	6995	" " " " " Stud with 13538...
13538	6995	" " " " " Position Pin..
13539	6995	" " " " " Roller.....
13540	6995	" " " " " " Pin...

NO.	PLATE	NAME
2026	6995	Thread Nipper (upper) Stud Spring.....
59777	—	Thread Nipper (upper) Stud complete, Nos. 13539, 13540 and 59776.....
59778	—	Thread Nipper (upper) complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921.....
124625	—	Thread Take-up Body with 62172.....
42808	6979	“ “ Roller.....
62171	6979	“ “ “ Cap.....
337D	6979	“ “ “ “ Screw.....
62172	6979	“ “ “ “ Pin.....
124626	7019	Thread Take-up complete, Nos. 337D, 42808, 62171 and 124625.....
691F	6990	Thread Take-up Screw.....
39452	6979	“ “ Wiper Body.....
39453	6979	“ “ “ “ Finger.....
330D	6979	“ “ “ “ “ Screw.....
1207D	6979	“ “ “ “ Hinge Screw.....
59787	6979	“ “ “ “ Support.....
641C	6979	“ “ “ “ “ Set Screw....
39455	6979	“ “ “ “ Wire.....
39456	6979	“ “ “ “ “ Clamp.....
1302D	6979	“ “ “ “ “ “ Screw....
124627	7024	Throat Plate with 124615.....
59799	7024	“ “ “ “ Needle Guard.....
206D	7024	“ “ “ “ “ Screw.....
691F	6990	“ “ “ “ Screw.....
59790	7024	“ “ “ “ Thread Retainer.....
1477D	6980	“ “ “ “ “ “ Screw.....
17872	6994	Trip Lever.....
1196C	6998	“ “ “ “ Hinge Screw.....
17873	6994	“ “ “ “ Spring.....
1182E	6978	“ “ “ “ “ Screw.....
17874	6987	Tripping Point.....
190D	6990	“ “ “ “ Screw.....

MACHINE No. 114-8

FOR CLOTHING, SHIRTWAISTS, ETC. MAKES CROSS STITCHES IN FOUR-HOLE BUTTONS AND CAN BE ADJUSTED FOR TWO-HOLE AND BAR BUTTONS. MAKES TWENTY-ONE STITCHES, INCLUDING THE FASTENING STITCH; FITTED WITH IMPROVED THREAD CONTROLLING MECHANISM AND THREAD NIPPING DEVICE TO HOLD THE END OF THE THREAD UNTIL THE FIRST STITCH IS MADE.

This Machine is the same as 114-7 with the following exceptions:

NO.	PLATE	NAME
59722	6984	Feed Across Lever Extension Position Arm, in place of 124689.....
124688	7022	Feed Cam with two each 190b, 1192c, 17874, 124616, 124630 and ten 335j, in place of 124690.....
124630	7020	Thread Nipper (lower) Lever Guide, in place of 124622.....

ACCESSORIES

NO.	PLATE	NAME
59797	7005	Button Tray with two wood screws 1¼ in. No. 14.....
18419	—	Cylinder Base Plate with two 453c.....
18420	7006	" " " Hinge Connection....
18423	7006	" " " " "
		Hinge Pin.....
453c	6987	Cylinder Base Plate Hinge Connection Hinge Pin Set Screw.....
18424	7005	Cylinder Base Plate (hinged) complete, Nos. 18419, two each 18420, 18423, three wood screws 1¼ in. No. 12 and four 134b.....
134b	7006	Cylinder Base Plate Screw.....
36565	7007	Oiler (copper plated) with 36566.....
36566	7007	" Spout, 9 in. long, with 120117.....
120117	7025	" " Washer (leather).....
11831	7007	Screw Driver (large).....
26026	7007	" " (small).....
4822	7007	Wrench for 1528 and 1547.....
10875	7007	" " 1518, 1520, 1649, 1650 and 1662
17905	7007	" " 1176, 1178, 1654, 1655, 1676 and 1681.....
25200	7007	Wrench for 1527.....
27662	7007	" " 1254 and 1508.....

PROTECTOR

NO.	PLATE	NAME
39489	7008	Arm with 39490.....
160c	7009	" Clamping Screw.....
39490	—	Blade.....
39491	7008	Bracket with two each 426c and 448c....
426c	7009	" Adjusting Screw.....
50351D	7009	" Screw.....
39492	7009	Crank with 160c.....
39493	7009	" Bracket with 1120c and two 454c..
454c	7009	" " Set Screw.....
52598	7009	" Hinge Stud.....
1120c	7009	" " " Set Screw.....
39494	7008	Rod.....
15261	7009	" Collar with 237F.....
237F	7009	" " Set Screw.....
39495	7009	" Connection.....
176D	7009	" " Screw.....
1099F	7009	" Screw Stud.....
39496	7008	" Sleeve.....
448c	7009	" " Set Screw.....
39497	7009	" Spring.....
15261	7009	" " Collar with 237F.....
237F	7009	" " " Set Screw.....
63753	—	Protector (front of needle) Nos. 1099F, 39489, 39491 to 39494, 39496, 39497, 52598 and two 15261.....
39498	—	Protector (front of needle) complete, Nos. 39495, 63753 and two each 176D and 50351D.....

STARTING LEVER AND FOOT LIFTER PARTS

NO.	PLATE	NAME
17876	7005	Treadle with 443c.....
17877	7005	" Pitman Rod (lower).....
17878	7005	" " " (upper).....
17879	7005	" " " Clamp with two 161D
161D	6998	" " " " Screw.....
17880	7005	Treadle Pitman complete, Nos. 17877 to 17879.....
17881	7006	Treadle Shaft.....
443c	7015	" " Set Screw.....
17882	7006	" Spring.....
17883	7005	" Stand.....

NO.	PLATE	NAME
17884	—	Treadle complete, Nos. 17876, 17881 to 17883 and two wood screws 1 in. No. 10
17885	—	Treadle and Pitman complete, Nos. 17880 and 17884.....

STAND

FOR ELECTRIC MOTOR

NO.	PLATE	NAME
46645	—	Belt, size $\frac{1}{4}$ in., length 45 $\frac{1}{2}$ in., with 25127.....
25127	7006	Belt Hook.....
46667	7219	Brace.....
748E	7006	" Screw.....
46522	7219	Leg.....
4881	7219	Motor Treadle.....
46614	7219	" " Bracket (left).....
1177E	6978	" " " " Screw.....
46615	7219	" " " (right).....
1177E	6978	" " " " Screw.....
4879	7025	" " Chain Connecting Link....
4882	7025	" " Shaft.....
4883	7025	" " Spring.....
46616	7219	Motor Treadle complete, Nos. 4879, 4881 to 4883, 46614 and 46615.....
4881	7219	Starting Treadle.....
46614	7219	" " Bracket (left).....
1177E	6978	" " " " Screw.....
46615	7219	" " " (right).....
1177E	6978	" " " " Screw.....
4879	7025	" " Chain Connecting Link..
4882	7025	" " Shaft.....
4883	7025	" " Spring.....
46616	7219	Starting Treadle complete, Nos. 4879, 4881 to 4883, 46614 and 46615.....
46617	7219	Treadle Support.....
46618	—	" " 46617 with two 46616 and four 1177E.....
780E	6998	Treadle Support Bolt with 1600E.....
1600E	6999	" " " Nut.....
25086	7025	Wrench.....
25285	—	Stand (iron work) complete, Nos. 25086, 46618, 46667, two each 780E, 46522 and four 748E.....
5670	—	Presser Bar Lifting Lever Chain, length 26 in. to 35 in., with 56864 and 56865 ..

NO.	PLATE	NAME
6439	—	Starting Lever Chain, length 36 in. to 45 in., with 56864 and 56865

NOTE: When ordering 5670 or 6439 give length required

56864	7025	Chain Hook (large).....
56865	7006	" " (small).....

TABLE BELT GUIDE

NO.	PLATE	NAME
39218	7005	Belt Guide with two 168E.....
168E	6998	" " Set Screw.....
17892	7005	Bracket with two 153E.....
17893	7005	Pulley.....
39219	7005	" Shaft (long) with 17896.....
39220	7005	" " (short) with 17896.....
17896	7006	" " Plug.....
153E	6998	" " Set Screw.....
39221	—	Table Belt Guide complete, Nos. 17892, 39219, 39220, two each 17893, 39218 and three wood screws 1¼ in. No. 12...

THREAD UNWINDER

FOR ONE LARGE SPOOL OR ONE LARGE CONE
OF THREAD

NO.	PLATE	NAME
27623	2836	Spool Pin.....
155c	6992	" " Set Screw.....
41526	2836	" Rest.....
*60701	—	" " 41526 with 155c and 1149c..
41527	—	" " 60701 with 27623.....
1149c	6998	" " Set Screw.....
27940	2836	" Stand with 453c.....
41514	2836	" Weight, 4 in. diam., with 41515.....
41515	7006	" " Centre Pin.....
27739	2836	Thread Cone (wood).....
41630	2836	" Guard with 208e and 41569.....
41569	7006	" " Eyelet.....
41637	2836	" " Rod (lower).....
41638	2836	" " " (upper).....
41639	2836	" " " Coupling with two 456c
456c	6998	" " " " Set Screw...
41640	—	Thread Guard Rod complete, 30 in. long, Nos. 41637 to 41639.....

NO.	PLATE	NAME
453c	6987	Thread Guard Rod Set Screw
208E	6980	" " Screw.....
41529	2836	Thread Unwinder complete, Nos. 27739, 27940, 41514, 41527, 41630, 41640 and three wood screws 1 in. No. 12.....
60771	7006	Thread Guide.....
60772	—	" " 60771 with 41635.....
41635	7006	" " Bracket with 175D.....
175D	7006	" " " Set Screw.....
60773	—	Thread Unwinder with Thread Guide com- plete, Nos. 41529 and 60772.....

OBsolete PARTS

NO.	PLATE	NAME
59722	6984	Feed Across Lever Extension Position Arm for 114-7 Machine.....
124668	—	Feed Cam with two 1192c, three each 190D, 17874, 124669, 124670 and twelve 335J, for 114-7 Machine.....
124671	—	Feed Cam with two each 190D, 1192c, 17874, 124669, 124672 and eight 335J, for 114-8 Machine, use 124688.....
59758	6993	Needle Guard for 114-7 and 114-8 Ma- chines.....
17843	6981	Presser Bar Lifting Lever.....
124669	7025	Thread Nipper (lower) Cam for 124668 and 124671.....
124670	7025	Thread Nipper (lower) Lever Guide for 124668.....
124672	7025	Thread Nipper (lower) Lever Guide for 124671.....
124624	7025	Thread Nipper (lower) Lever Shaft Bracket

SINGER Needles should be used
in **SINGER** Machines
These Needles and their Containers
are marked with the
Company's Trade Mark "**SIMANCO.****"₁

Needles in Containers marked
"**FOR SINGER MACHINES**"
are **NOT SINGER** made needles.₂

SINGER Needles should be used
in **SINGER** Machines
These Needles and their Containers
are marked with the
Company's Trade Mark "**SIMANCO.****" ₁

Needles in Containers marked
"**FOR SINGER MACHINES**"
are **NOT SINGER** made needles. ₂

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
93c	7019	Needle Bar Thread Retainer Disc Spring Screw for 124605.....
99k	7023	Thread Nipper (lower) Connection Extension Hinge Screw.....
134d	7006	Cylinder Base Plate Screw for 18424..
145f	6982	Feed Across Lever Socket Bearing Block Set Screw.....
153e	6998	Table Belt Guide Pulley Shaft Set Screw for 17892.....
155c	6992	Needle Bar Connecting Stud Set Screw for 2052.....
155c	6992	Thread Unwinder Spool Pin Set Screw for 60701.....
160d	6998	Feed Across Lever Hinge Stud Clamping Screw.....
160d	6998	Feed Regulator Bracket Cap Screw for 62117.....
160c	7009	Protector Arm Clamping Screw for 39492
161d	6998	Treadle Pitman Rod Clamp Screw for 17879.....
164d	6990	Face Plate Screw.....
164d	6990	Knife Bar Cap Screw.....
164e	6990	Presser Bar Lifting Lever Bracket Screw for 62295.....
168e	6998	Table Belt Guide Set Screw for 39218....
171e	6991	Looper Shaft Ball Connection Cap Screw for 62132.....
171e	6991	Looper Shaft Eccentric Connection Cap Screw for 62132.....
175d	7006	Thread Unwinder Thread Guide Bracket Set Screw for 41635.....
176d	7009	Button Clamp Lifter Screw.....
176d	7009	Protector Rod Connection Screw for 39498
184e	6998	Belt Cover Bracket Screw Stud for 59795
190d	6990	Arm Side Cover Screw.....
190d	6990	Cloth Plate Screw.....
190d	6990	Knife Bar Connection Screw.....
190d	6990	Looper Driving Shaft Gear Cover Screw..
190d	6990	Tripping Point Screw for 124644, 124645, 124668, 124671, 124688 and 124690....
193d	6983	Feed Across Lever Extension Disengaging Eccentric Connection Spring Screw....

NO.	PLATE	NAME
193b	6983	Stop Cam Interlocking Rod Case Wearing Block Screw for 62136.....
196f	6992	Presser Bar Collar Set Screw for 17841..
206j	7024	Thread Nipper (lower) Connection Extension Screw.....
206b	7024	Throat Plate Needle Guard Screw.....
208b	6980	Face Plate Thread Nipper Disc Cover Screw for 59712.....
208E	6980	Thread Unwinder Thread Guard Screw for 41630.....
217b	6998	Belt Cover Screw.....
223f	6990	Knife Bar Driving Lever Lock Stud Screw for 59734.....
229j	6978	Button Clamp Spring Screw for 63928....
229b	6978	Face Plate Thread Guard Screw for 59712
233b	6995	Needle Guard Shaft Spring Screw.....
236f	6990	Knife Screw.....
237k	7009	Thread Nipper (lower) Lever Set Screw for 124621.....
237f	7009	Protector Rod Collar Set Screw for 15261
237f	7009	“ “ Spring Collar Set Screw for 15261.....
238b	6983	Feed Across Lever Extension Disengaging Eccentric Connection Stop Screw
286b	6980	Cylinder Top Cover Thumb Screw.....
330b	6979	Thread Wiper Body Finger Screw
335j	7023	“ Nipper (lower) Cam Screw for 124644, 124645, 124668, 124671, 124688 and 124690.....
335j	7023	Thread Nipper (lower) Lever Guide Screw for 124644, 124645, 124668, 124671, 124688 and 124690.....
337b	6979	Thread Take-up Roller Cap Screw for 124626.....
377c	6992	Needle Bar Connecting Link Hinge Screw
426c	7009	Protector Bracket Adjusting Screw for 39491.....
430c	6994	Feed Across Lever Extension Stop Screw
430c	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw for 39344.....
435c	7015	Arm Shaft (upright) Bushing (lower) Set Screw.....
443c	7015	Treadle Shaft Set Screw for 17876.....
448c	6992	Arm Shaft (upright) Bushing (upper) Set Screw.....
448c	6992	Needle Bar Crank Wheel Set Screw for 59757.....

NO.	PLATE	NAME
448c	7009	Protector Rod Sleeve Set Screw for 39491
453c	6987	Cylinder Base Plate Hinge Connection Hinge Pin Set Screw for 18419.....
453c	6987	Feed Cam Driving Worm Wheel Set Screw for 17797.....
453c	6987	Presser Bar Guide Bracket Set Screw for 17842.....
453c	6987	Thread Unwinder Thread Guard Rod Set Screw for 27940.....
454c	7009	Protector Crank Bracket Set Screw for 39493.....
456c	6998	Thread Unwinder Thread Guard Rod Coupling Set Screw for 41639.....
457c	7023	Thread Controller Stud Set Screw.....
460c	7019	Needle Bar Thread Retainer Bracket Set Screw for 124603.....
465c	6991	Looper Driving Shaft Collar Set Screw for 59745.....
465c	6991	Looper Shaft Collar Set Screw for 59745..
465c	6991	Needle Guard Cam Set Screw for 59759 and 124601.....
465c	6991	Needle Guard Shaft Collar Set Screw for 59761.....
465c	6991	Needle Guard Shaft Crank Set Screw for 59762 and 124602.....
624c	6991	Looper Shaft Ball Set Screw for 62197....
624c	6991	" " Eccentric Set Screw for 59750.....
624c	6991	Needle Guard Shaft Spring Collar Set Screw for 59766.....
624c	6991	Thread Nipper (upper) Body Set Screw...
641c	6979	" Wiper Body Support Set Screw....
665J	7023	" Nipper (lower) Blade Carrier Cap Screw.....
691F	6990	Knife Holder Cap Screw.....
691F	6990	Thread Take-up Screw.....
691F	6990	Throat Plate Screw.....
704J	7019	Button Clamp Locking Device Latch Clamping Screw for 124677.....
742F	6980	Cloth Plate Guide Block (left) Screw for 62105 and 62182.....
748E	7006	Brace Screw for 25285.....
780E	6998	Treadle Support Bolt with 1600E, for 25285
880E	6998	Arm Screw.....
898D	6998	Stop Cam Interlocking Rod Case Socket Joint Cap Screw for 62186.....

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
934D	6987	Feed Plate Carrier Bar Plate Screw for 62123.....
965D	6993	Needle Guard Shaft End Bearing Bracket Screw.....
999D	6983	Feed Across Lever Extension Disengaging Eccentric Connection Hinge Screw.....
1034D	6980	Cylinder End Cover Spring Screw for 62184
1036C	6976	Arm Shaft (horizontal) Gear Set Screw for 59703.....
1072F	6993	Needle Set Screw for 59756 and 62299....
1094F	6985	Feed Across Lever Plate Screw for 62123
1095F	6991	Looper Shaft Ball Connection Stud Cap Screw for 114-5 and 114-6 Machines....
1095F	6991	Looper Shaft Eccentric Connection Stud Cap Screw for 114-7 and 114-8 Machines
1099F	7009	Protector Rod Screw Stud for 63753.....
1120C	7009	" Crank Hinge Stud Set Screw for 39493.....
1148C	7015	Looper Driving Shaft Bushing Set Screw
1149C	6998	Thread Unwinder Spool Rest Set Screw for 60701.....
1175J	6978	Button Clamp Hinge Screw for 63928.....
1176J	6978	" " Arm Hinge Plate Screw....
1177D	6978	" " Pressure Spring Bracket Screw.....
1177D	6978	Feed Regulator Bracket Screw.....
1177E	6978	Motor Treadle Bracket (left) Screw for 46618.....
1177E	6978	Motor Treadle Bracket (right) Screw for 46618.....
1177E	6978	Starting Treadle Bracket (left) Screw for 46618.....
1177E	6978	Starting Treadle Bracket (right) Screw for 46618.....
1177J	6978	Thread Nipper (lower) Lever Shaft Bracket Screw.....
1178J	6978	Button Clamp Pressure Spring Screw.....
1180J	6979	" " Spreader Lever Locking Thumb Screw for 63928.....
1181J	7019	Button Clamp Spreader Spring Screw for 63928.....
1182J	6978	Button Clamp Spreader Screw for 63928..
1182E	6978	Trip Lever Spring Screw for 62186.....
1183J	6979	Button Clamp Stop Screw for 63928.....
1184E	6982	Feed Across Knuckle Joint Connection Hinge Screw.....

NO.	PLATE	NAME
1185c	6982	Feed Across Lever Ball Stud Set Screw for 59713.....
1186c	6991	Looper Shaft Slide Block Cap Screw.....
1186d	6991	Stop Cam Interlocking Rod Case Spring Bracket Screw for 62137.....
1187E	6982	Feed Across Regulator Adjusting Stud....
1188d	6998	" " " Hinge Screw.....
1190c	6987	" Regulator Stop Screw.....
1191d	6987	" " Thumb Screw.....
1192c	6987	" Cam Set Screw for 124644, 124645, 124668, 124671, 124688 and 124690.....
1195E	7023	Feed Plate Screw Stud for 62123.....
1196c	6998	Trip Lever Hinge Screw for 62186.....
1201d	7006	Presser Bar Lifting Lever Hinge Screw....
1202d	6998	Pulley (loose) Cap Screw for 17955.....
1204E	6998	Stop Cam Interlocking Rod Case Hinge Screw for 62186.....
1206c	6994	Stop Cam Screw for 17955.....
1207d	6979	Thread Wiper Body Hinge Screw.....
1235F	6990	Knife Bar Guide Screw.....
1253c	6976	Arm Shaft (upright) Gear (lower) Set Screw for 59707.....
1253c	6976	Arm Shaft (upright) Gear (upper) Set Screw for 59708.....
1253c	6976	Looper Driving Shaft Gear Set Screw for 59707.....
1254c	6998	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing for 62186.....
1255d	6976	Belt Shifter Clamp Screw for 62159.....
1259c	6991	Looper Shaft Ball Connection Stud Set Screw for 114-5 and 114-6 Machines....
1259c	6991	Looper Shaft Eccentric Connection Stud Set Screw for 114-7 and 114-8 Machines
1262c	6998	Starting Lever Hinge Screw for 62186....
1282c	7019	Button Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (lower)
1282c	7019	Button Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (upper)
1293c	6992	Needle Bar Crank Wheel Position Screw for 59757.....
1302d	6979	Thread Wiper Body Wire Clamp Screw..
1318d	6994	Stop Cam Interlocking Rod Stop Screw for 62159.....
1382F	6998	Knife Bar Driving Lever Hinge Screw....
1404d	6983	Feed Across Lever Extension Position Arm Support Screw.....

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
1441c	6987	Feed Cam Driving Worm Set Screw for 18415.....
1442c	6987	Feed Cam Driving Worm Position Screw for 18415.....
1477D	6980	Cylinder End Cover Bracket Screw for 62184.....
1477D	6980	Cylinder End Cover Hinge Screw for 62184
1477F	6980	Thread Controller Spring Collar Set Screw for 124608.....
1477D	6980	Throat Plate Thread Retainer Screw for 114-7 and 114-8 Machines.....
1480H	6993	Needle Guard Shaft End Bearing Cap Screw.....
1508E	6999	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut for 62186
1518E	6992	Needle Bar Connecting Link Hinge Screw Nut.....
1520E	6994	Arm Shaft (horizontal) Bushing (back) Adjusting Screw Nut.....
1520E	6994	Feed Across Lever Extension Stop Screw Nut.....
1520E	6994	Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut for 39344.....
1527D	6995	Thread Nipper (upper) Lock Nut for 59778
1528J	6982	Feed Across Lever Socket Bearing Block Set Screw Nut.....
1547D	6980	Cloth Plate Guide Block (left) Screw Nut for 62105 and 62182.....
1560c	6995	Tension Regulating Thumb Nut.....
1600E	6999	Treadle Support Bolt Nut for 780.....
1649c	6982	Feed Across Connection Adjusting Stud Nut (left).....
1650c	6982	Feed Across Connection Adjusting Stud Nut (right).....
1653c	6999	Feed Cam Shaft Nut.....
1654c	7023	" Plate Nut.....
1655E	6985	" Across Regulator Link Screw Stud Nut.....
1655c	6985	Feed Regulator Roller and Screw Stud Nut for 1953.....
1662c	6999	Starting Lever Hinge Screw Nut for 62186
1676c	6982	Feed Across Regulator Adjusting Stud Nut
1681c	6999	Knife Bar Driving Lever Hinge Screw Nut
1743D	6979	Thread Nipper (upper) Adjusting Thumb Nut for 59778.....
1952	6983	Feed Across Lever Extension Roller and Stud for 59715.....

NO.	PLATE	NAME
1953	7019	Feed Regulator Roller and Screw Stud with 1655c and 14017, for 17742
2022	6983	Feed Across Lever Extension Position Arm Pin
2022	6983	Needle Guard Shaft End Bearing Bracket Dowel Pin
2022	6983	Pulley (tight) Pin
2026	6995	Thread Nipper (upper) Stud Spring for 59778
2052	6992	Needle Bar Connecting Stud with 155c...
2058	6989	Presser Bar
2102	6995	Tension Disc
2107	6980	Face Plate Thread Guard for 59712
2269	6994	Button Clamp Locking Device Latch Shaft Crank Pin
2269	6994	Pulley (loose) Bushing Position Pin for 17942
2273	6983	Feed Across Lever Extension Disengaging Eccentric Pin
2273	6983	Feed Across Lever Extension Disengaging Handle Pin
2273	6983	Needle Guard Pin
2921	6995	Thread Nipper (upper) Disc for 59778
3012	7019	Feed Cam Driving Worm Wheel Pin
3012	7019	Stop Cam Pin
3021	6980	Cloth Plate Guide Block (right) Rivet for 62105 and 62182
3021	6980	Knife Holder Connection Rivet for 62124
4448	6976	Arm Oil Tube for intermediate bearing
*4449	—	" Shaft (horizontal) Bushing (front) for 62295
4822	7007	Wrench for 1528 and 1547 (Accessories)
4879	7025	Motor Treadle Chain Connection Link for 46616
4879	7025	Starting Treadle Chain Connecting Link for 46616
Nos. 4881 to 4883 for 46616		
4881	7219	Motor Treadle
4881	7219	Starting Treadle
4882	7025	Motor Treadle Shaft
4882	7025	Starting Treadle Shaft
4883	7025	Motor Treadle Spring
4883	7025	Starting Treadle Spring
5670	—	Presser Bar Lifting Lever Chain, length 26 in. to 35 in., with 56864 and 56865
6037	7023	Thread Nipper (lower) Blade Rivet for 124614

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
6439	—	Starting Lever Chain, length 36 in. to 45 in., with 56864 and 56865.....
8414	6989	Presser Bar Spring.....
8554	7019	Thread Nipper (lower) Driving Arm Pin..
8554	7019	“ “ “ Lever Pin.....
8589	7019	Feed Regulator Bracket Dowel Pin.....
8734	7015	Knife Bar Retaining Spring.....
9311	7017	Button Clamp Spring Steady Pin for 39238 and 39239.....
9525	6983	Feed Across Lever Extension Position Arm Support Screw Washer.....
Nos. 9543 to 9545 for 59712		
9543	6980	Face Plate Thread Nipper Disc.....
9544	6980	“ “ “ “ “ Cover....
9545	6980	“ “ “ “ “ Spring....
10106	7019	Needle Bar Thread Retainer Disc (outside) for 124605.....
10107	7019	Needle Bar Thread Retainer Disc Spring for 124605.....
10145	6995	Tension Thread Guide.....
10875	7007	Wrench for 1518, 1520, 1649, 1650 and 1662 (Accessories).....
11831	7007	Screw Driver, large (Accessories).....
12162	6995	Thread Nipper (upper) Disc Guide Pin....
13538	6995	“ “ “ Stud Position Pin for 59776.....
13539	6995	Thread Nipper (upper) Stud Roller for 59777.....
13540	6995	Thread Nipper (upper) Stud Roller Pin for 59777.....
13915	6995	Tension Spring Bushing.....
14017	6985	Feed Across Regulator Link Screw Stud Nut Washer.....
14017	6985	Feed Regulator Roller and Screw Stud Nut Washer for 1953.....
15261	7009	Protector Rod Collar with 237F, for 63753
15261	7009	“ “ Spring Collar with 237F, for 63753.....
16532	6976	Arm Dowel Pin.....
17703	6981	“ Shaft (horizontal) Bushing (back)...
17710	6978	Button Clamp Arm Hinge Plate.....
17713	6978	“ “ Pressure Spring Bracket...
17714	6978	“ “ “ “ Guide Block for 63927.....
Nos. 17717 to 17719 for 63928		
17717	6979	Button Clamp Spreader Lever.....

NO.	PLATE	NAME
17718	6979	Button Clamp Spreader Lever Locking Thumb Screw Washer.....
17719	7019	Button Clamp Spreader Spring.....
17720	6979	" " " Steady Pin for 39248.....
17723	6979	Button Clamp Stud for 39238 and 39239
17728	6982	Feed Across Knuckle Joint Connection....
17730	6982	" " Lever Ball Stud.....
*17732	—	" Regulator Bracket Cap for 62117....
17733	6982	" Across Lever Socket Bearing.....
17734	6982	" " " " " Block (two pieces).....
17738	6982	Feed Across Regulator Adjusting Stud Nut Washer.....
17739	6982	Feed Across Regulator Adjusting Stud Sleeve.....
17741	6985	Feed Across Regulator Link Stud for 62118.....
17742	6984	Feed Regulator with 1953.....
17743	6987	" " Post for 62123.....
17744	6987	" " Hinge Stud.....
17745	6987	" " Swivel.....
17797	6977	" Cam Driving Worm Wheel with 453c
17806	7023	" Plate Position Stud for 62123.....
17841	6992	Presser Bar Collar with two 196F.....
17842	6992	" " Guide Bracket with 453c.....
17843	6981	" " Lifting Lever, obsolete.....
17845	6984	" " " " Rod.....
17846	—	" " " " " Chain.....
17848	6977	Pulley (loose) Bushing for 17955.....
17853	6994	Starting Lever for 62186.....
17854	6994	Stop Cam for 17955.....
17855	6994	" " Interlocking Rod for 62159.....
17859	6977	" " " " Case Socket Joint for 62186.....
17861	6994	Stop Cam Interlocking Rod Case Stop Stud for 62186.....
17862	6994	Stop Cam Interlocking Rod Case Stop Stud Spring for 62186.....
17863	6994	Stop Cam Interlocking Rod Spring for 62159.....
17864	6994	Stop Cam Interlocking Rod Stop for 62159
17872	6994	Trip Lever for 62186.....
17873	6994	" " Spring for 62186.....
17874	6987	Tripping Point for 124644, 124645, 124668, 124671, 124688 and 124690.....
17876	7005	Treadle with 443c, for 17884.....

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
-----	-------	------

Nos. 17877 TO 17879 FOR 17880

17877	7005	Treadle Pitman Rod (lower).....
17878	7005	“ “ “ (upper).....
17879	7005	“ “ “ Clamp with two 161D
17880	7005	Treadle Pitman complete for 17885, Nos. 17877 to 17879.....

Nos. 17881 TO 17883 FOR 17884

17881	7006	Treadle Shaft.....
17882	7006	“ Spring.....
17883	7005	“ Stand.....
17884	—	Treadle complete for 17885, Nos. 17876, 17881 to 17883 and two wood screws 1 in. No. 10.....
17885	—	Starting Lever and Foot Lifter Treadle and Pitman complete, Nos. 17880 and 17884
17886	6984	Starting Lever Pitman.....
17892	7005	Table Belt Guide Bracket with two 153E, for 39221.....
17893	7005	Table Belt Guide Pulley for 39221.....
17896	7006	“ “ “ “ Shaft Plug for 39219 and 39220.....
17905	7007	Wrench for 1176, 1178, 1654, 1655, 1676 and 1681 (Accessories).....
17915	6990	Knife Bar Connection Slide Block for 17917.....
17916	6990	Knife Bar Connection Slide Block Stud for 17917.....
17917	—	Knife Bar Connection Slide Block 17915 with 17916, for 62126.....
17941	6977	Pulley (loose) 2 $\frac{7}{8}$ in. diam., for 17955....
17942	6977	“ (tight) 2 $\frac{7}{8}$ in. diam., with 2269, for 17955.....
17955	—	Pulleys complete, Nos. 1202D, 1206C, 17848, 17854, 17941 and 17942.....
18368	6987	Feed Plate Carrier Bar Plate for 62123....
18384	7019	“ Cam Pin.....
18415	6987	“ “ Driving Worm with 1441c and 1442c.....
18419	—	Cylinder Base Plate with two 453c, for 18424.....
18420	7006	Cylinder Base Plate Hinge Connection for 18424.....
18423	7006	Cylinder Base Plate Hinge Connection Hinge Pin for 18424.....

NO.	PLATE	NAME
18424	7005	Cylinder Base Plate (hinged) complete, Nos. 18419, two each 18420, 18423, three wood screws 1¼ in. No. 12 and four 134d (Accessories)
*18445	6989	Feed Plate Carrier Bar for 62123.....
18498	6975	Belt Cover.....
21828	6976	Stop Cam Interlocking Rod Case Bracket Dowel Pin.....
25086	7025	Wrench for 25285.....
25127	7006	Belt Hook for 46645.....
25200	7007	Wrench for 1527 (Accessories).....
25285	—	Stand (iron work) complete, for Electric Motor, Nos. 25086, 46618, 46667, two each 780e, 46522 and four 748e.....
26026	7007	Screw Driver, small (Accessories)
26770	6980	Cloth Plate Stop Rivet for 62105 and 62182
27623	2836	Thread Unwinder Spool Pin for 41527....
27662	7007	Wrench for 1254 and 1508 (Accessories)...
27739	2836	Thread Unwinder Thread Cone (wood) for 41529.....
27940	2836	Thread Unwinder Spool Stand with 453c, for 41529.....
34418	6991	Looper Washer for 62298 and 124666.....
36565	7007	Oiler (copper plated) with 36566 (Accessories)
36566	7007	Oiler Spout, 9 in. long, with 120117, for 36565.....
39203	6992	Needle Bar Connecting Link
Nos. 39218 to 39220 for 39221		
39218	7005	Table Belt Guide with two 168e.....
39219	7005	" " " Pulley Shaft (long) with 17896.....
39220	7005	Table Belt Guide Pulley Shaft (short) with 17896.....
39221	—	Table Belt Guide complete, Nos. 17892, 39219, 39220, two each 17893, 39218 and three wood screws 1¼ in. No. 12.....
39222	6977	Belt Shifter for 62159.....
39223	6976	" " Clamp for 62159.....
39238	7017	Button Clamp (left) with 9311 and 17723, for 63928.....
39239	7017	Button Clamp (right) with 9311 and 17723, for 63928.....
39241	6978	Button Clamp Pressure Spring.....
39242	6978	" " Spreader for 63928.....

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
Nos. 39244 TO 39248 FOR 63928		
39244	7017	Button Clamp Spring (left) for flat buttons
39245	7017	" " " (right) for flat buttons.....
39246	6978	Button Clamp Spring (left) for stud back buttons.....
39247	6978	Button Clamp Spring (right) for stud back buttons.....
39248	6979	Button Clamp Stop with two 17720.....
39343	6981	Stop Cam Interlocking Rod Case Spring (flat) for 62137.....
39344	6994	Stop Cam Interlocking Rod Case Spring Bracket with 430c and 1520E, for 62137
39452	6979	Thread Wiper Body.....
39453	6979	" " " Finger.....
39455	6979	" " " Wire.....
39456	6979	" " " " Clamp.....
39489	7008	Protector Arm with 39490, for 63753.....
39490	—	" Blade for 39489.....
Nos. 39491 TO 39494 FOR 63753		
39491	7008	Protector Bracket with two each 426c and 448c.....
39492	7009	Protector Crank with 160c.....
39493	7009	" " Bracket with 1120c and two 454c.....
39494	7008	Protector Rod.....
39495	7009	" " Connection for 39498.....
39496	7008	" " Sleeve for 63753.....
39497	7009	" " Spring for 63753.....
39498	—	Protector (front of needle) complete, Nos. 39495, 63753 and two each 176D and 50351D.....
41514	2836	Thread Unwinder Spool Weight, 4 in. diam., with 41515, for 41529.....
41515	7006	Thread Unwinder Spool Weight Centre Pin for 41514.....
41526	2836	Thread Unwinder Spool Rest for 60701....
41527	—	" " " " 60701 with 27623, for 41529.....
41529	2836	Thread Unwinder complete for 60773, Nos. 27739, 27940, 41514, 41527, 41630, 41640 and three wood screws 1 in. No. 12
41569	7006	Thread Unwinder Thread Guard Eyelet for 41630.....
41630	2836	Thread Unwinder Thread Guard with 208E and 41569, for 41529.....

NUMERICAL LIST OF PARTS

51

NO.	PLATE	NAME
41635	7006	Thread Unwinder Thread Guide Bracket with 175D, for 60772.....
Nos. 41637 to 41639 for 41640		
41637	2836	Thread Unwinder Thread Guard Rod (lower).....
41638	2836	Thread Unwinder Thread Guard Rod (upper).....
41639	2836	Thread Unwinder Thread Guard Rod Coupling with two 456c.....
41640	—	Thread Unwinder Thread Guard Rod complete, 30 in. long, for 41529, Nos. 41637 to 41639.....
42336	6995	Tension Spring.....
42348	7019	Needle Bar Thread Retainer Disc (inside) for 124605.....
42808	6979	Thread Take-up Roller for 124626.....
46522	7219	Leg for 25285.....
46614	7219	Motor Treadle Bracket (left) for 46616....
46614	7219	Starting Treadle Bracket (left) for 46616
46615	7219	Motor Treadle Bracket (right) for 46616
46615	7219	Starting Treadle Bracket (right) for 46616
46616	7219	Motor Treadle complete for 46618, Nos. 4879, 4881 to 4883, 46614 and 46615....
46616	7219	Starting Treadle complete for 46618, Nos. 4879, 4881 to 4883, 46614 and 46615....
46617	7219	Treadle Support for 46618.....
46618	—	“ “ 46617 with two 46616 and four 1177E, for 25285.....
46645	—	Belt, size ¼ in., length 45½ in., with 25127, for 25285.....
46667	7219	Brace for 25285.....
50148c	6995	Tension Screw Stud.....
50150c	6991	Feed Across Lever Extension Hinge Pin Set Screw for 59713.....
50150c	6991	Looper Driving Shaft Coupling Set Screw for 59746.....
50150c	6991	Looper Set Screw for 59749.....
50150c	6991	“ Shaft Coupling Set Screw for 59746
50150c	6991	Thread Nipper (upper) Cam Set Screw for 59774.....
50237K	6979	Button Clamp Spreader Lever Hinge Screw for 63928.....
50306D	6987	Feed Plate Carrier Bar Pivot Block Screw
50324E	6985	“ Across Regulator Link Screw Stud
50333c	6998	Arm Shaft (horizontal) Bushing (back) Adjusting Screw.....

NO.	PLATE	NAME
50351b	7009	Protector Bracket Screw for 39498.....
50372b	7015	Stop Cam Interlocking Rod Case Bracket Screw.....
51812	6993	Needle Guard Shaft Crank Roller and Stud for 59762 and 124602.....
51814	6983	Feed Across Lever Extension Guiding Roller and Screw Stud for 59715.....
52045	6992	Looper Driving Shaft Bushing Packing (cotton).....
52598	7009	Protector Crank Hinge Stud for 63753...
55300	6985	Feed Across Lever Plate Steady Pin for 62123.....
56015	6976	Arm Oil Tube for oiling 59705 and 59706..
56549	—	Thread Controller Stud Collar Pin for 124610.....
56864	7025	Chain Hook (large) for 5670 and 6439....
56865	7006	" " (small) for 5670 and 6439....
59702	6975	Arm Shaft (horizontal).....
59703	6976	" " " Gear with two 1036c.....
59704	6976	Arm Shaft (upright).....
59705	6976	" " " Bushing (lower)....
59706	6976	" " " " (upper)....
59707	6976	" " " Gear (lower) with two 1253c.....
59707	6976	Looper Driving Shaft Gear with two 1253c
59708	6976	Arm Shaft (upright) Gear (upper) with two 1253c.....
59710	6979	Button Clamp Lifter.....
59711	6981	Face Plate for 59712.....
59712	—	Face Plate complete, Nos. 208b, 9544, 9545, 59711 and two each 229b, 2107 and 9543
59713	6984	Feed Across Lever with 1185c and 50150c, for 59714.....
59714	—	Feed Across Lever complete, Nos. 59713, 59715 and 59721.....
59715	6983	Feed Across Lever Extension with 1952 and 51814, for 59714.....
59716	6983	Feed Across Lever Extension Disengaging Eccentric.....
59717	6983	Feed Across Lever Extension Disengaging Eccentric Connection.....
59718	6983	Feed Across Lever Extension Disengaging Eccentric Connection Spring.....
59719	6983	Feed Across Lever Extension Disengaging Eccentric Shaft.....

NO.	PLATE	NAME
59720	6983	Feed Across Lever Extension Disengaging Handle.....
59721	6983	Feed Across Lever Extension Hinge Pin for 59714.....
59722	6984	Feed Across Lever Extension Position Arm for 114-5, 114-6 and 114-8 Machines and obsolete for 114-7 Machine.....
59723	6983	Feed Across Lever Extension Position Arm Support.....
59724	6987	Feed Across Lever Hinge Stud.....
59728	6989	" Cam Shaft.....
59730	6987	" Plate Carrier Bar Pivot Block.....
59731	6990	Knife.....
59734	6990	" Bar Driving Lever with 223F and 59735.....
59735	6990	Knife Bar Driving Lever Lock Stud for 59734.....
59739	6990	Knife Holder Cap Stud for 62129.....
59739	6990	" " Stud for 62128.....
*59742	—	Looper Collar for 59749.....
59743	6991	" Driving Shaft.....
59745	6991	" " " Collar with two 465c.....
59745	6991	" Shaft Collar with two 465c.....
59746	6991	" Driving Shaft Coupling with two 50150c.....
59746	6991	Looper Shaft Coupling with two 50150c..
59747	6992	" Driving Shaft Gear Cover.....
59748	6991	" " Universal Joint.....
59749	6989	" Shaft with 50150c and 59742.....
59750	6991	" " Eccentric with two 624c, for 114-7 and 114-8 Machines.....
*59752	—	Looper Shaft Ball Connection Cap for 62132.....
*59752	—	Looper Shaft Eccentric Connection Cap for 62132.....
59756	6989	Needle Bar with 1072F, for 114-7 and 114-8 Machines.....
59757	6992	Needle Bar Crank Wheel with 448c and 1293c.....
59758	6993	Needle Guard for 114-7 and 114-8 Machines, obsolete.....
59759	6993	Needle Guard Cam with two 465c, for 114-7 and 114-8 Machines.....
59760	6989	Needle Guard Shaft.....
59761	6993	" " " Collar with two 465c.....
59762	6993	" " " Crank with 51812 and two 465c, for 114-7 and 114-8 Machines

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
59763	6993	Needle Guard Shaft End Bearing.....
59764	6989	" " " " " Bracket
59765	6993	" " " " Spring.....
59766	6993	" " " " Collar with 624c.....
59769	6977	Stop Cam Interlocking Rod Case Bracket for 62186.....
59771	6994	Stop Cam Interlocking Rod Case Wearing Block for 62136.....
59773	6995	Thread Nipper (upper) Body for 59778....
59774	6995	" " " " Cam with two 50150c.....
59775	6995	Thread Nipper (upper) Eyelet for 59778 ..
59776	6995	" " " " Stud with 13538, for 59777.....
59777	—	Thread Nipper (upper) Stud complete for 59778, Nos. 13539, 13540 and 59776....
59778	—	Thread Nipper (upper) complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921.....
59787	6979	Thread Wiper Body Support.....
59790	7024	Throat Plate Thread Retainer for 114-7 and 114-8 Machines.....
59795	6977	Belt Cover Bracket with 184E and 59796..
59796	7019	" " " " Stud for 59795.....
59797	7005	Button Tray with two wood screws 1¼ in. No. 14 (Accessories).....
59799	7024	Throat Plate Needle Guard for 114-7 and 114-8 Machines.....
*60701	—	Thread Unwinder Spool Rest 41526 with 155c and 1149c, for 41527.....
60771	7006	Thread Unwinder Thread Guide for 60772
60772	—	" " " " " 60771 with 41635, for 60773.....
60773	—	Thread Unwinder with Thread Guide complete, for one large spool or one large cone of thread, Nos. 41529 and 60772
*62101	—	Cloth Plate for 62105.....
Nos. 62102 TO 62104 FOR 62105 AND 62182		
62102	6980	Cloth Plate Guide Block (left).....
62103	6980	" " " " " (right).....
62104	6980	" " Stop.....
62105	6975	Cloth Plate complete for 114-7 and 114-8 Machines, Nos. 742F, 1547D, 26770, 62101 to 62104 and two 3021.....
62108	6981	Cylinder End Cover for 62184.....

NUMERICAL LIST OF PARTS

55

NO.	PLATE	NAME
Nos. 62111 to 62113 FOR 62184		
62111	6980	Cylinder End Cover Bracket Hinge Pin...
62112	6980	" " " Hinge.....
62113	6980	" " " Spring.....
62114	6980	" Top Cover.....
62115	6982	Feed Across Connection Adjusting Stud...
62116	6982	" " Knuckle Joint.....
62117	6984	" Regulator Bracket with 17732 and three 160d.....
62118	6985	Feed Across Lever Plate with 17741, for 62123.....
62119	6985	Feed Across Lever Plate Cover for 62123..
62120	6984	" " Regulator.....
62121	6985	" " " Link.....
62123	—	Feed Plate Carrier Bar 18445 with 934d, 1094f, 1195e, 17743, 18368, 62118, 62119, two 55300 and four 17806.....
62124	6975	Knife Bar with 62130 and two 3021.....
62125	6990	" " Cap.....
62126	6990	" " Connection with 17917.....
62127	6990	" " Guide.....
62128	6990	" Holder with 59739.....
62129	6990	" " Cap with 59739.....
62130	6990	" " Connection for 62124.....
62131	6991	Looper Driving Shaft Bushing.....
62132	6991	" Shaft Ball Connection with 59752 and two 171e, for 114-5 and 114-6 Machines.....
62132	6991	Looper Shaft Eccentric Connection with 59752 and two 171e, for 114-7 and 114-8 Machines.....
62133	6991	Looper Shaft Ball Connection Stud (eccentric) for 114-5 and 114-6 Machines.....
62133	6991	Looper Shaft Eccentric Connection Stud (eccentric) for 114-7 and 114-8 Machines
62134	6991	Looper Shaft Slide Block.....
62135	6991	" " " " Cap.....
62136	6977	Stop Cam Interlocking Rod Case with 59771 and two 193d, for 62159.....
62137	—	Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186d
62159	—	Stop Cam Interlocking Rod Case 62136 with 1318d, 17855, 17863, 17864, 39222, 39223, and two 1255d, for 62186.....
62169	6979	Thread Nipper (upper) Disc Spring for 59778.....

NO.	PLATE	NAME
62171	6979	Thread Take-up Roller Cap for 124626....
62172	6979	" " " Pin for 124625....
*62177	—	Cylinder.....
*62180	—	Cloth Plate with 62181, for 62182.....
*62181	—	" " Button Tray for 62180.....
62182	6975	Cloth Plate complete for 114-5 and 114-6 Machines, Nos. 742F, 1547D, 26770, 62102 to 62104, 62180 and two 3021 ...
62183	7020	Cylinder Bottom Cover.....
62184	—	" End Cover 62108 with 1034D, 62111 to 62113, 62183, 62185 and four 1477D.....
62185	6980	Cylinder End Cover Bracket for 62184....
62186	—	Stop Cam Interlocking Rod Case Bracket complete for 62137, Nos. 1182E, 1196c, 1204E, 1254c, 1262c, 1508E, 1662c, 17853, 17859, 17861, 17862, 17872, 17873, 59769, 62159 and two 898D.....
62192	7015	Knife Bar Retaining Spring Bracket.....
62197	7015	Looper Shaft Ball with two 624c, for 114-5 and 114-6 Machines.....
*62295	—	Arm with 4449, 124606 and two 164E....
62297	7023	Feed Plate.....
<u>62298</u>	7023	Looper with 34418, for 114-5 and 114-6 Machines.....
62299	7020	Needle Bar with 1072F, for 114-5 and 114-6 Machines.....
62300	7019	Needle Guard.....
63753	—	Protector (front of needle) Nos. 1099F, 39489, 39491 to 39494, 39496, 39497, 52598 and two 15261.....
63788	7015	Button Clamp Arm Hook for 63927.....
<u>63927</u>	7017	" " " with 17714 and 63788, for 63928.....
63928	7018	Button Clamp (universal) complete, for 10 to 50 line thin buttons, Nos. 1180J, 1181J, 1182J, 1183J, 17717 to 17719, 39238, 39239, 39242, 39244 or 39246, 39245 or 39247, 39248, 50237K, 63927 and two each 229J and 1175J.....
120117	7025	Oiler Spout Washer (leather) for 36566..
124601	7019	Needle Guard Cam with two 465c, for 114-5 and 114-6 Machines.....
124602	7019	Needle Guard Shaft Crank with 51812 and two 465c, for 114-5 and 114-6 Machines

NO.	PLATE	NAME
124603	7019	Needle Bar Thread Retainer Bracket with 460c, for 124605.....
124604	7019	Needle Bar Thread Retainer Thread Guide for 124605.....
124605	—	Needle Bar Thread Retainer complete, Nos. 93c, 10106, 10107, 42348, 124603 and 124604.....
124606	7020	Presser Bar Lifting Lever Bracket for 62295
Nos. 124607 to 124610 for 124611		
124607	7023	Thread Controller Spring.....
124608	7023	" " " Collar with 1477F
124609	7023	" " Sleeve.....
124610	7023	" " Stud with 56549 and 124631.....
124611	—	Thread Controller complete, Nos. 124607 to 124610.....
*124612	—	Thread Nipper (lower) Blade for 124614...
*124613	—	" " " " Carrier with 124619, for 124614.....
124614	7023	Thread Nipper (lower) Blade Carrier 124613 with 124612 and two 6037.....
124615	7023	Thread Nipper (lower) Blade Carrier Hinge Stud for 124627.....
124616	7020	Thread Nipper (lower) Cam for 124644, 124645, 124688 and 124690.....
124618	7023	Thread Nipper (lower) Connection Extension.....
124619	7023	Thread Nipper (lower) Connection Hinge Stud for 124613.....
124620	7020	Thread Nipper (lower) Driving Arm.....
124621	7020	" " " Lever with 237K...
124622	7020	" " " " Guide for 124644 and 124690.....
124623	7020	Thread Nipper (lower) Lever Shaft.....
124624	7025	" " " " " Bracket, obsolete.....
124625	—	Thread Take-up Body with 62172, for 124626.....
124626	7019	Thread Take-up complete, Nos. 337D, 42808, 62171 and 124625.....
124627	7024	Throat Plate with 124615.....
124628	7024	" " Needle Guard for 114-5 and 114-6 Machines.....
124630	7020	Thread Nipper (lower) Lever Guide for 124645 and 124688.....
*124631	—	Thread Controller Stud Collar for 124610

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME
124644	7021	Feed Cam with two 1192c, three each 190D, 17874, 124616, 124622 and twelve 335J, for 114-5 Machine.....
124645	7021	Feed Cam with two each 190D, 1192c, 17874, 124616, 124630 and ten 335J, for 114-6 Machine.....
124653	7020	Thread Nipper (lower) Connection.....
124666	7023	Looper with 34418 and 124675, for 114-7 and 114-8 Machines.....
124668	—	Feed Cam with two 1192c, three each 190D, 17874, 124669, 124670 and twelve 335J, for 114-7 Machine, obsolete.....
124669	7025	Thread Nipper (lower) Cam for 124668 and 124671, obsolete.....
124670	7025	Thread Nipper (lower) Lever Guide for 124668, obsolete.....
124671	—	Feed Cam with two each 190D, 1192c, 17874, 124669, 124672 and eight 335J, for 114-8 Machine, obsolete, use 124688
124672	7025	Thread Nipper (lower) Lever Guide for 124671, obsolete.....
124674	7020	Arm Side Cover
124675	7023	Looper Thread Retaining Pin for 124666
124677	7019	Button Clamp Locking Device Latch with 704J.....
124678	7020	Button Clamp Locking Device Latch Shaft
124679	7019	“ “ “ “ “ “ Crank.....
124680	7019	Button Clamp Locking Device Latch Shaft Crank Connection.....
124681	7020	Presser Bar Lifting Lever.....
*124682	7020	Thread Nipper (lower) Lever Shaft Bracket
124683	7023	Feed Plate for two-hole flat buttons.....
124688	7022	“ Cam with two each 190D, 1192c, 17874, 124616, 124630 and ten 335J, for 114-8 Machine.....
124689	7025	Feed Across Lever Extension Position Arm for 114-7 Machine.....
124690	7022	Feed Cam with two 1192c, three each 190D, 17874, 124616, 124622 and twelve 335J, for 114-7 Machine.....

PLATE 2836—ONE-FOURTH SIZE


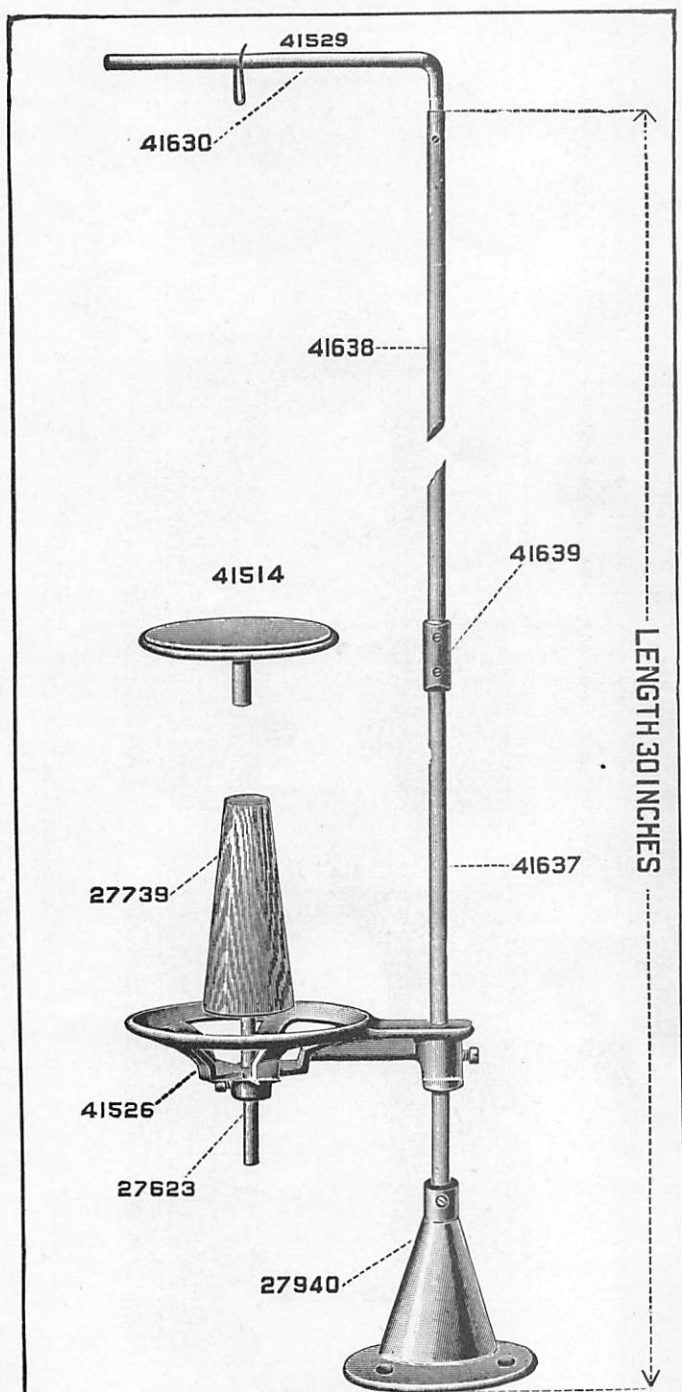


PLATE 6975—ONE-FOURTH SIZE

59702




18498

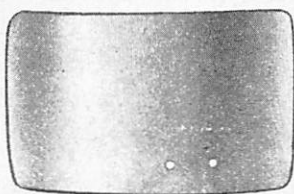

62124



62105

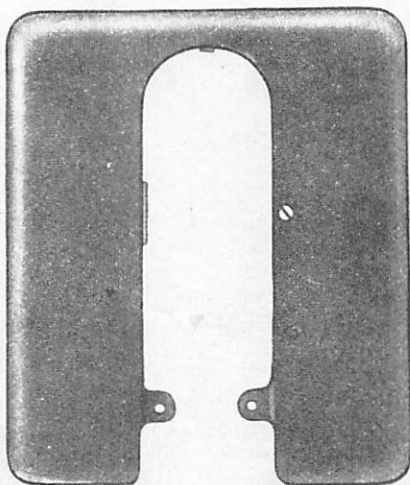

62182

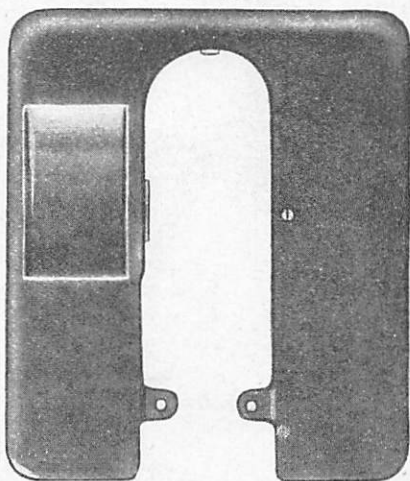


PLATE 6976--FULL SIZE


59704



59708



59703

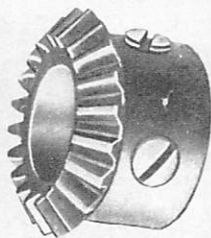

59706



1036



39223



1253



59705



4448



1255



56015



59707



16532




21828



PLATE 6977—ONE-HALF SIZE

59769

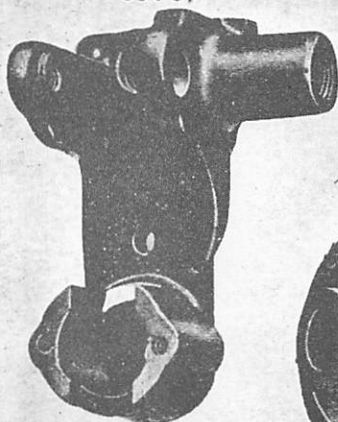

17859




62136




17797



59795

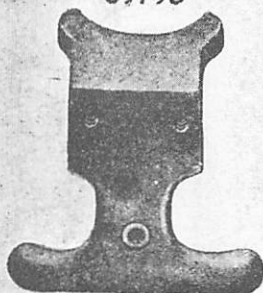


39222

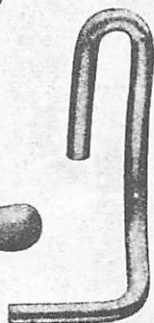

17848



17942

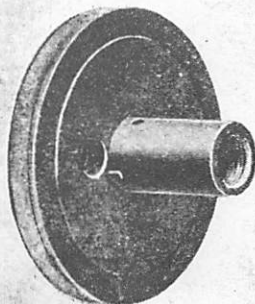

17941

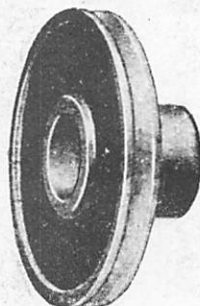


PLATE 6978—FULL SIZE

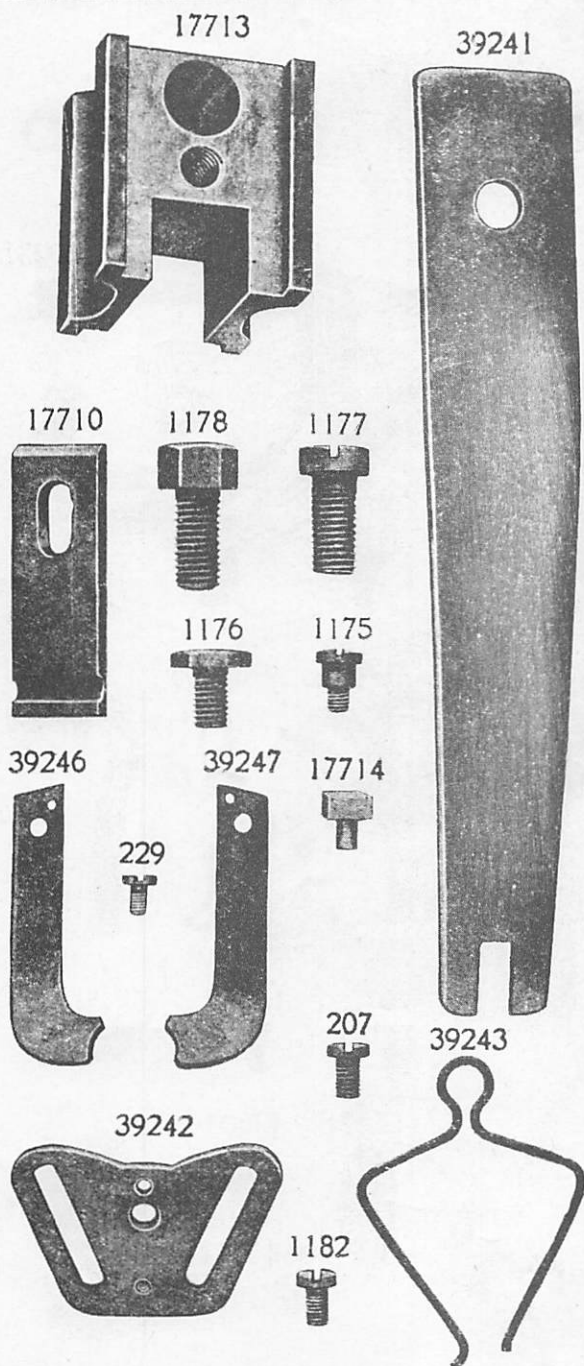


PLATE 6979—FULL SIZE

39248



1180




17717



17723



59710

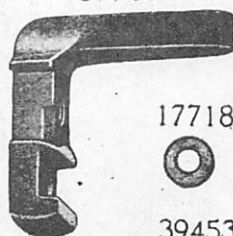

50237



17720



17718



330



39453



1183



59787



39452



39455



17711



641



1207



1302



39456



62173



62171



42808



1743



337



62172



62169



PLATE 6980—FULL SIZE



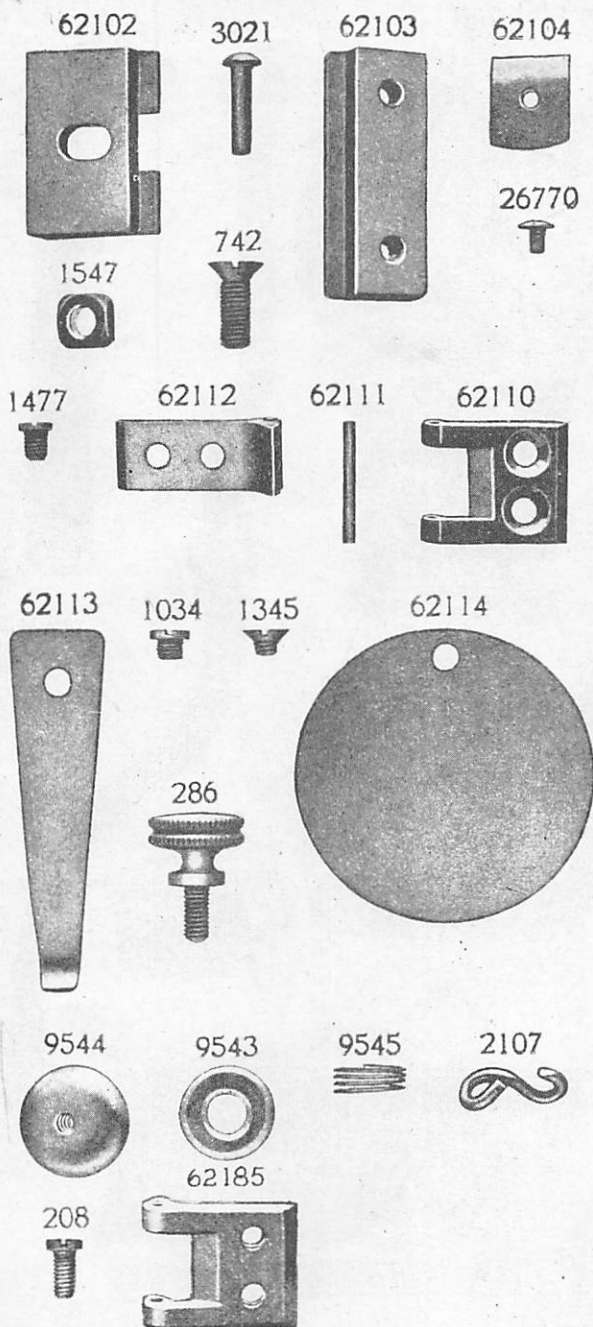


PLATE 6981—ONE-HALF SIZE


59711

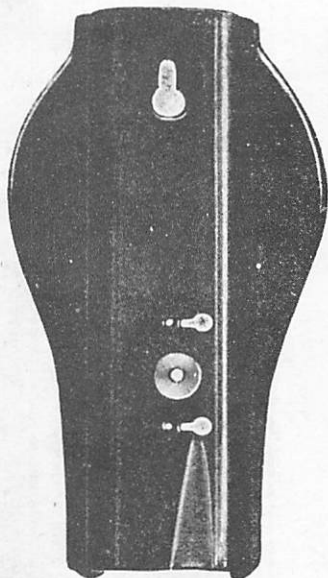


17843

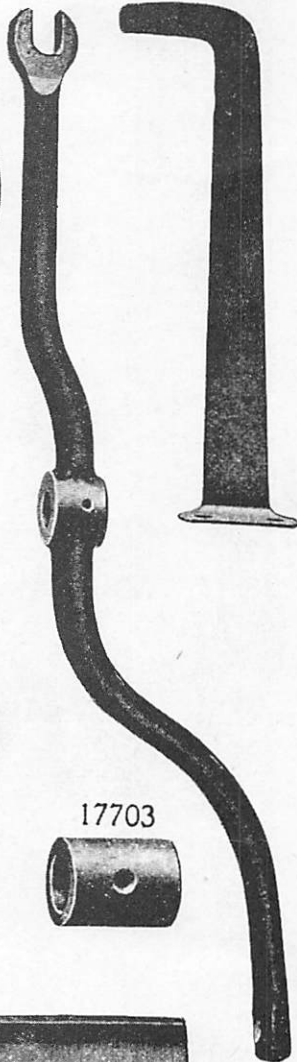

39343

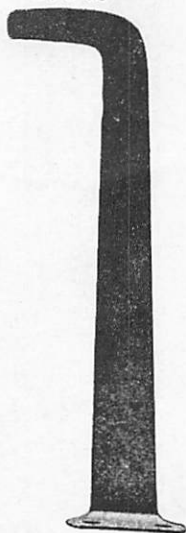

62108

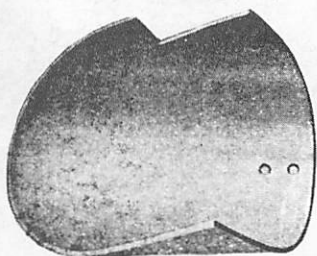

17703



62107

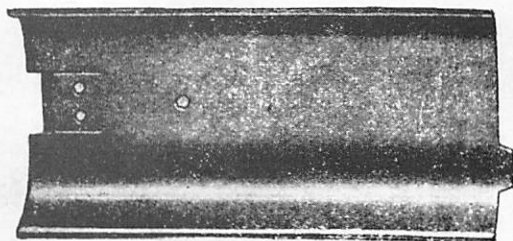


PLATE 6982—FULL SIZE

62116



1184



17728



1187



62115



1650



1649



17730



17739



17734



17738



145



1185



1528



1676



17733



PLATE 6983—FULL SIZE


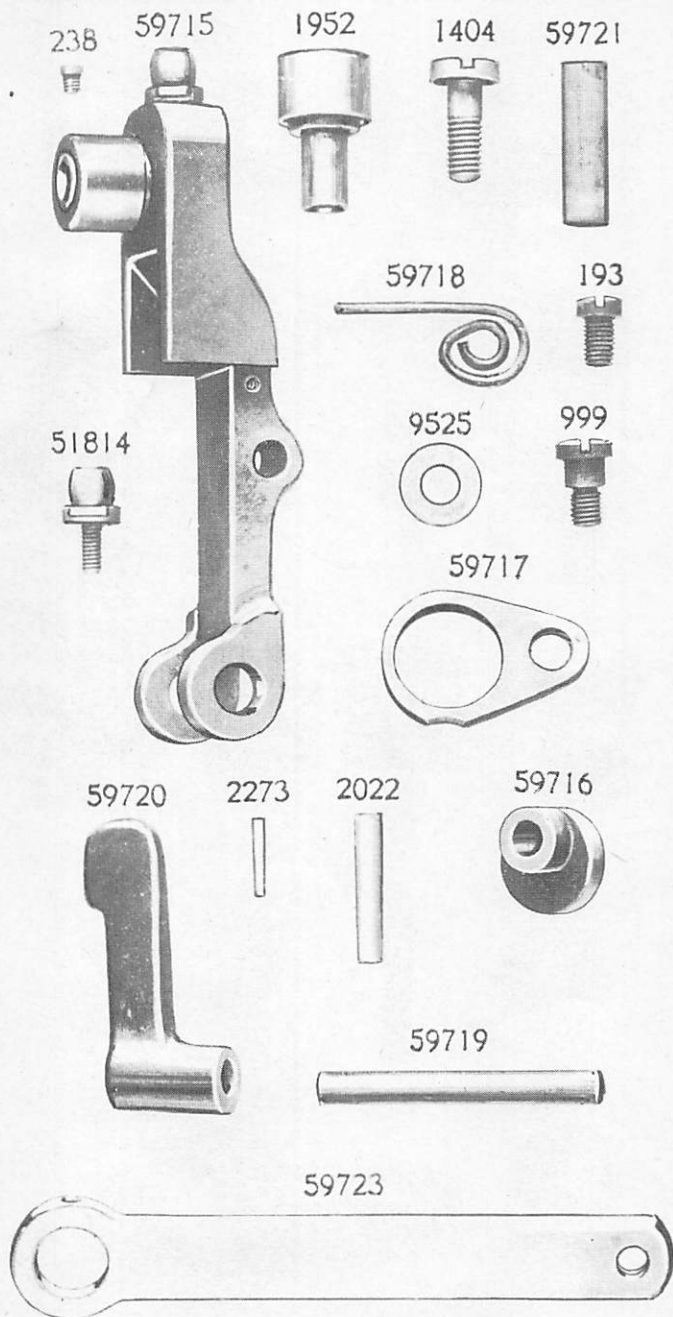


PLATE 6984—ONE-HALF SIZE

17845




62117

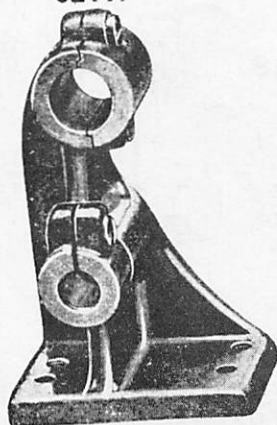

59713



17742

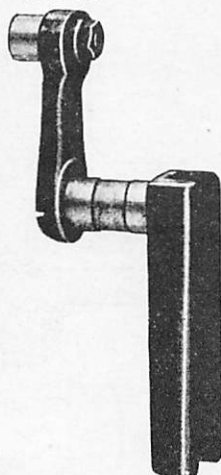

17886



59722



62120


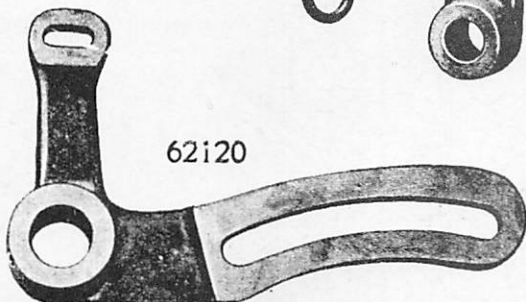


PLATE 6985—FULL SIZE




1094

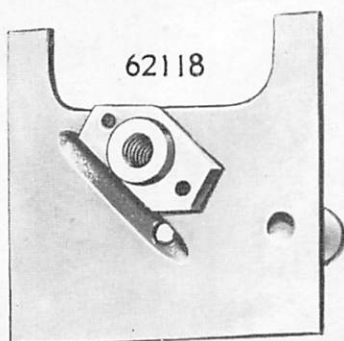

55300



62119

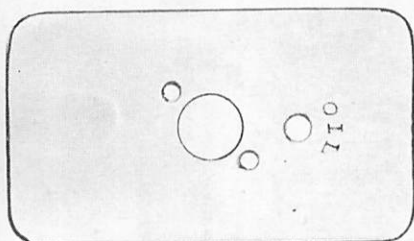


17741



50324



62121

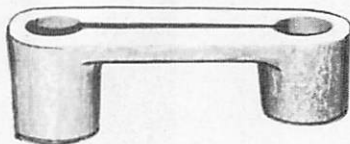

14017



1655



PLATE 6987—FULL SIZE

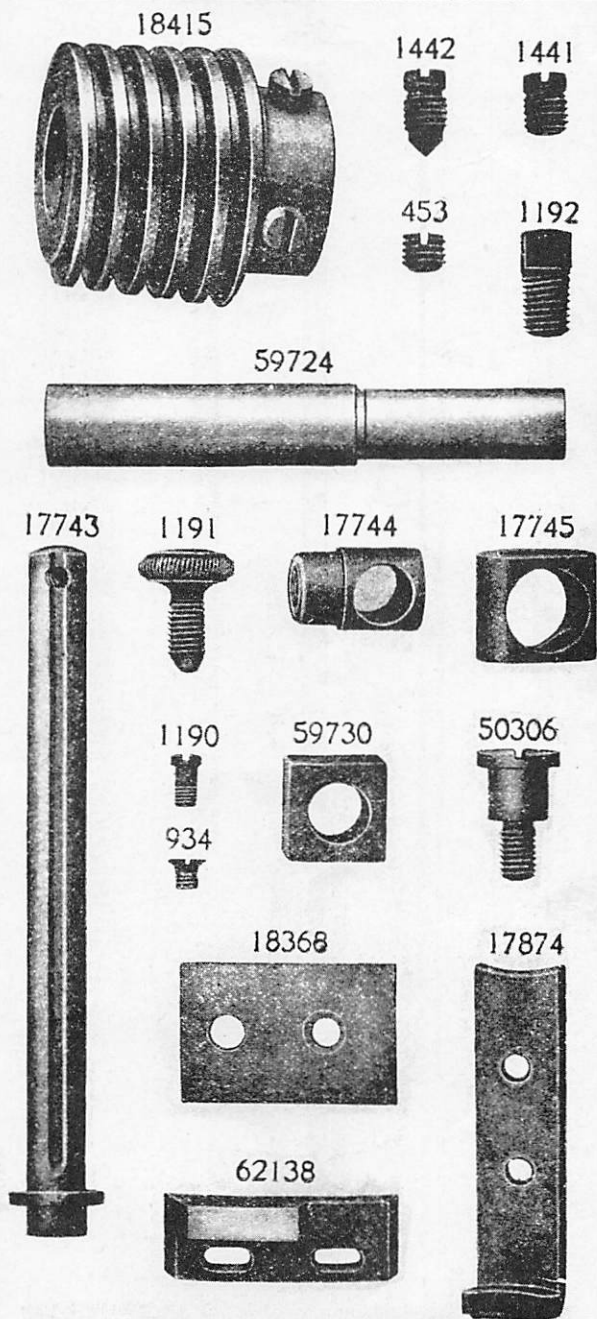


PLATE 6989—ONE-HALF SIZE

59760



59749



2058




59756



18445



59764

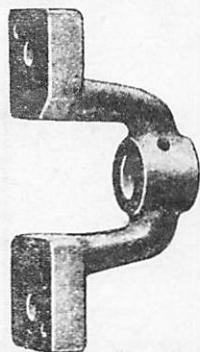

8414



59728

 


PLATE 6990—FULL SIZE


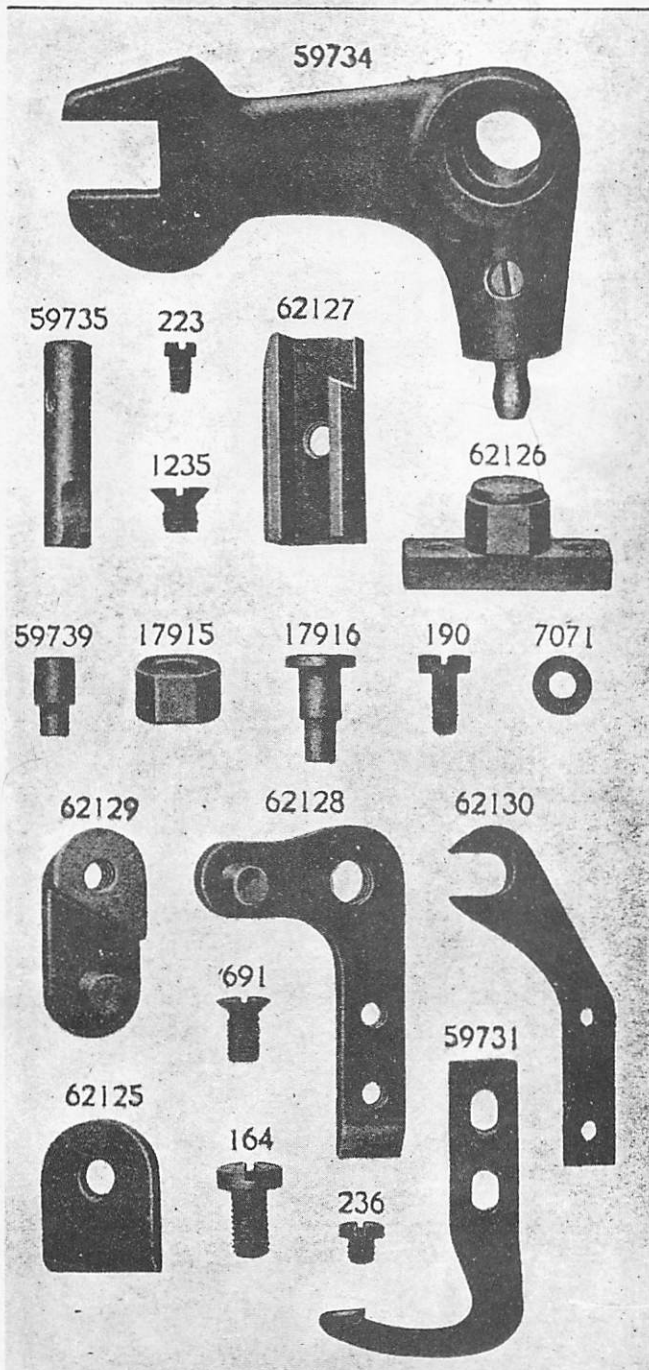


PLATE 6991—FULL SIZE


62162



624

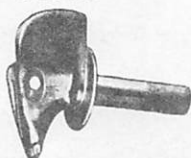


59750

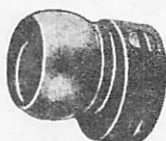


34418



62134

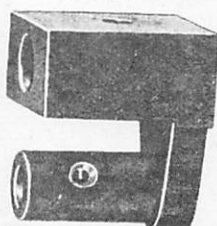

62132

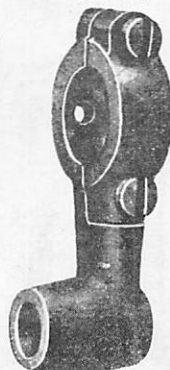

1259



62133



62131



1095



447



171



59743



59748



59746



50150



 
465



59745



62135




1186



PLATE 6992—FULL SIZE

59757

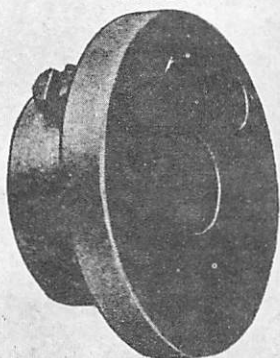

1293



17841



448



196



 
377



39203



2052



17842




155



1518



59747

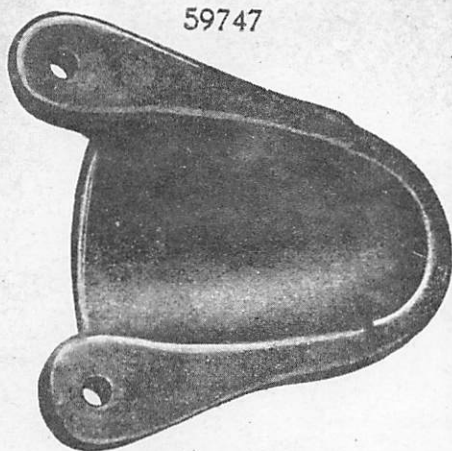


52045



PLATE 6993—FULL SIZE

59758

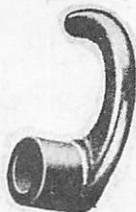

59759



59761



59762



51812



59766




965



59765



59763

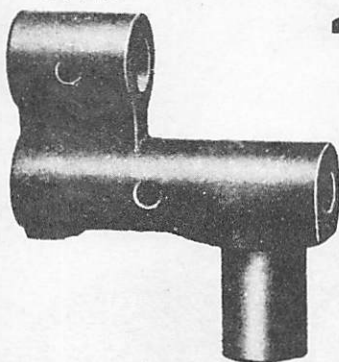


1480



1072



59789

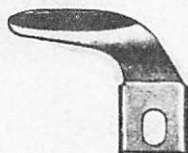

59786



59741



PLATE 6994—FULL SIZE

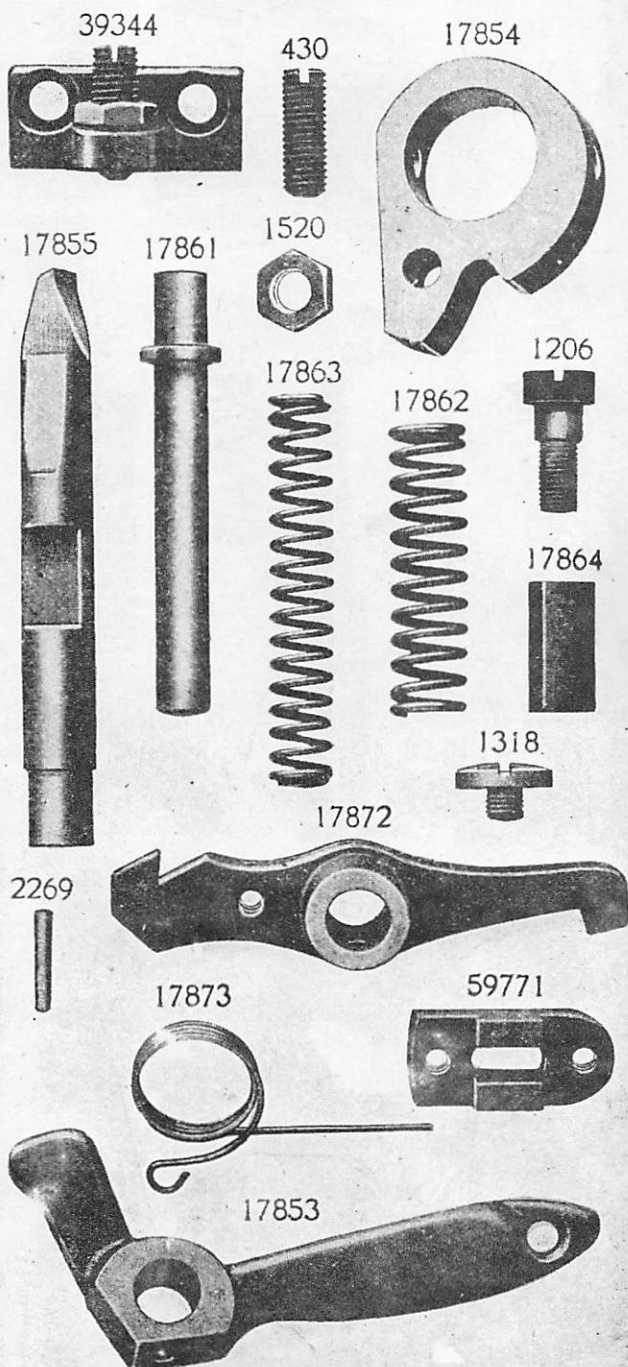


PLATE 6995—FULL SIZE

50148



2102



42336



1560



13915



59772



59776



2026



59773



10145



233




13538



2921



59775

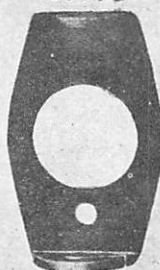


13540



13539



59774

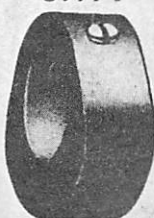

12162



1609



1527



PLATE 6998—FULL SIZE

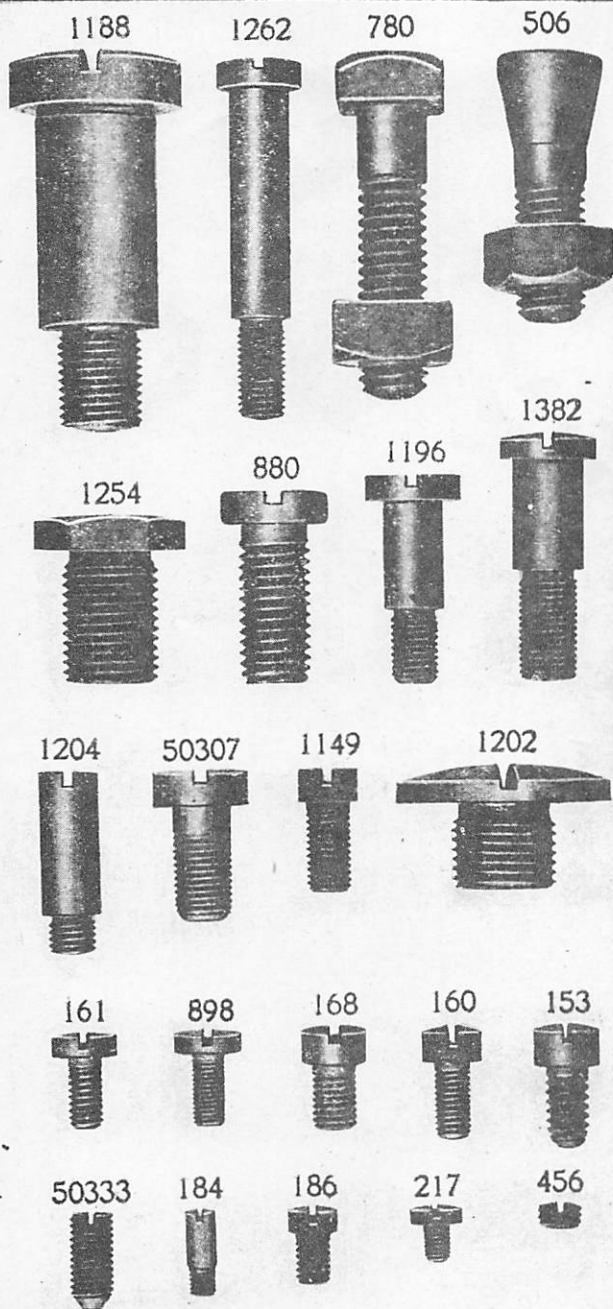


PLATE 6999—FULL SIZE

1653



1508



1600



1662



1681



1510



PLATE 7005—ONE-FOURTH SIZE

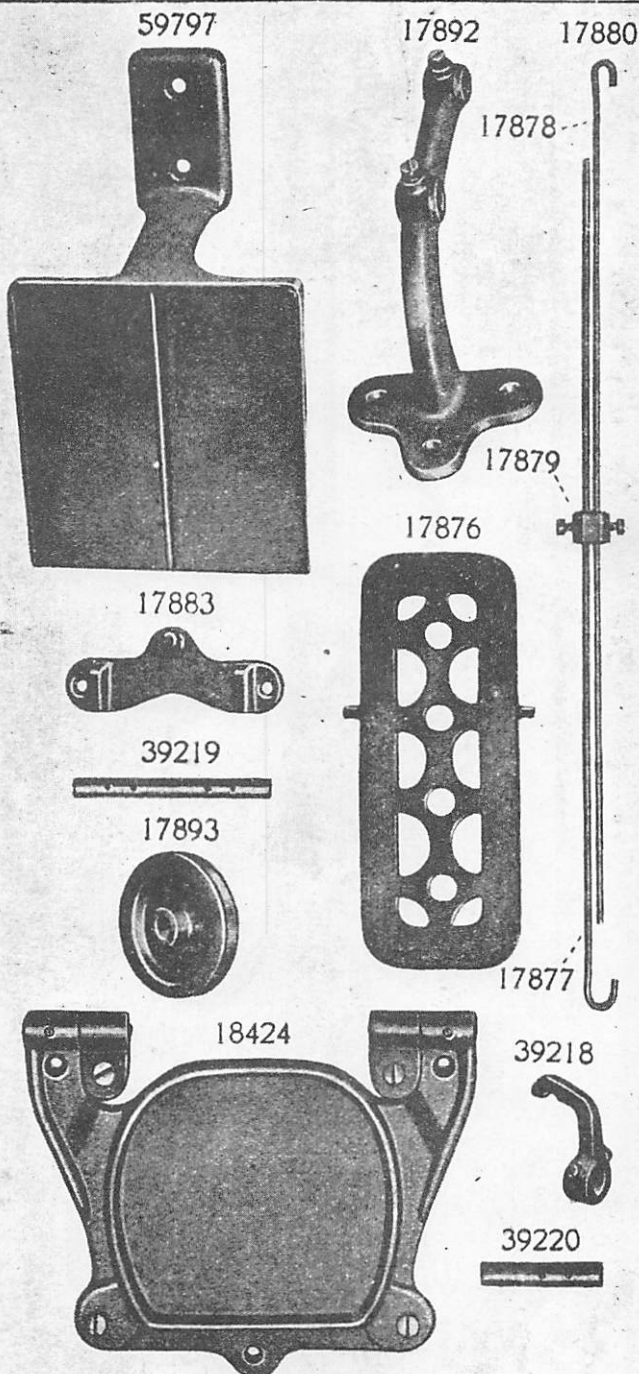


PLATE 7006--FULL SIZE

60771



17881




18423



17882



18420

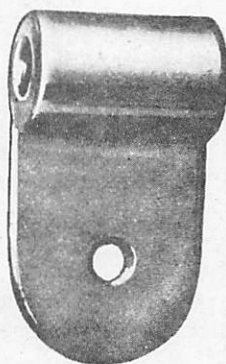

41515



17896



56865

41569



 
175




25127



748



41635

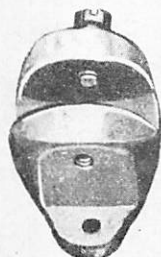

134



1201



PLATE 7007—ONE-HALF SIZE

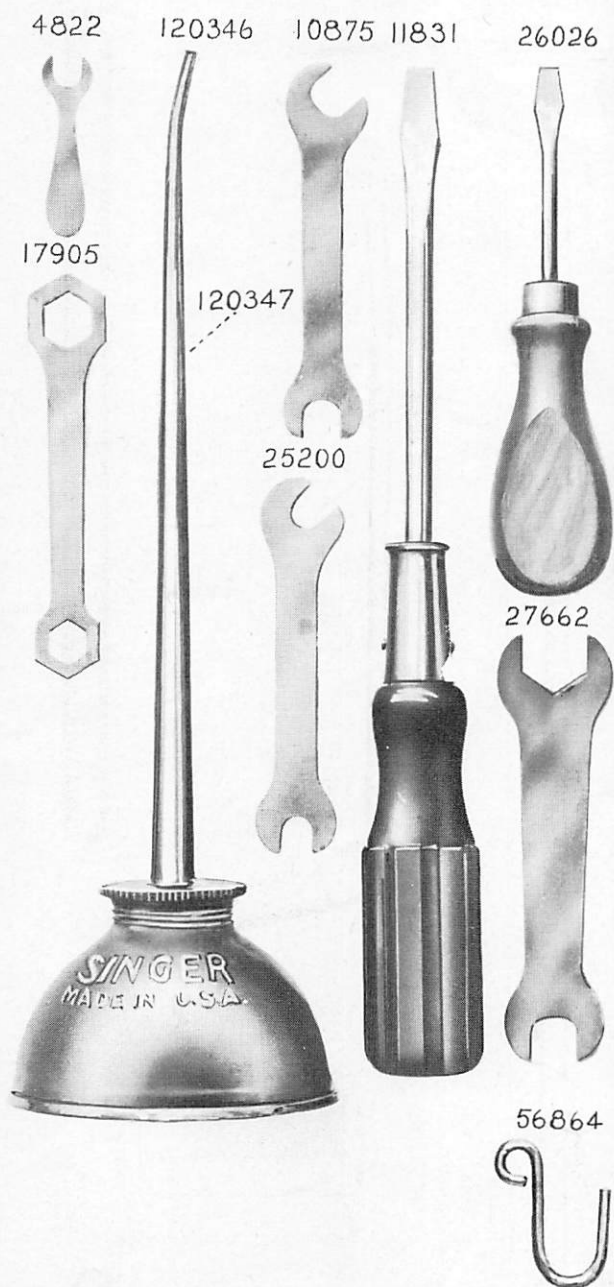


PLATE 7008—ONE-HALF SIZE


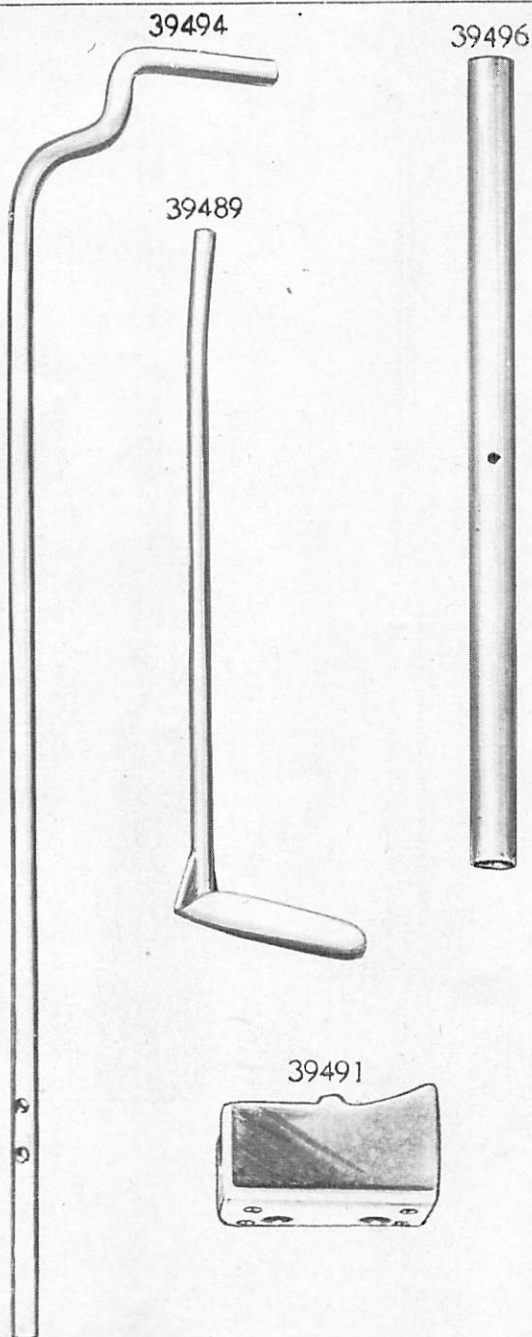


PLATE 7009--FULL SIZE


39492



160

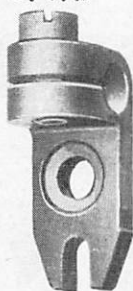

39495

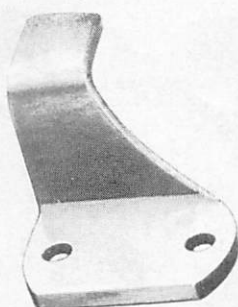

15261



237



52598



176



39497



50351



426



1099



454



448



1120



39493

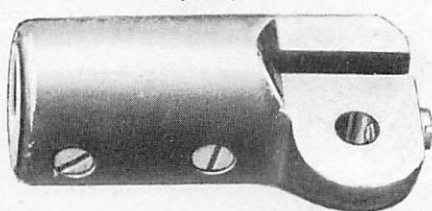


PLATE 7015—FULL SIZE


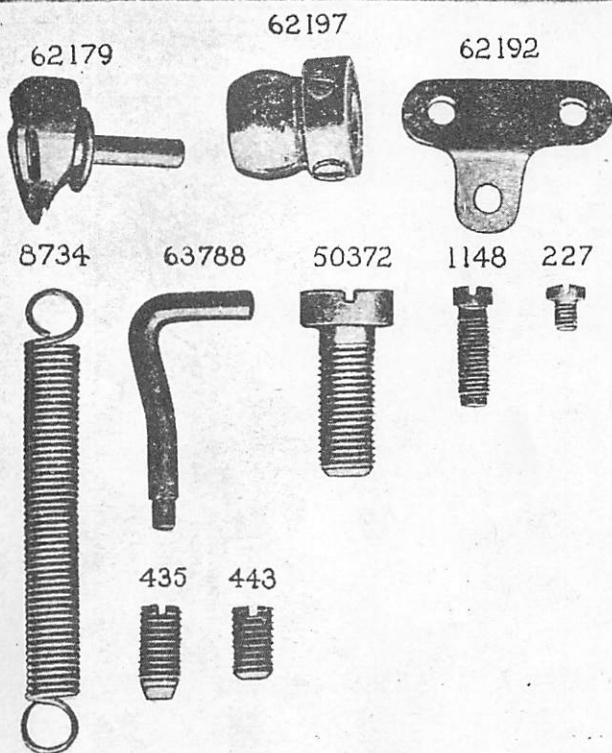


PLATE 7017—FULL SIZE

39238




63927

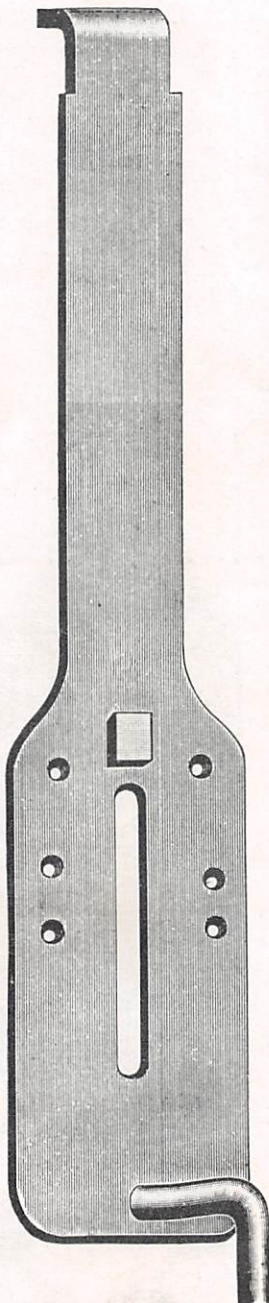

39239



39244

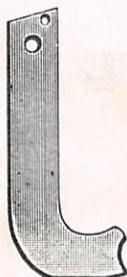

39245



9311



PLATE 7018—FULL SIZE


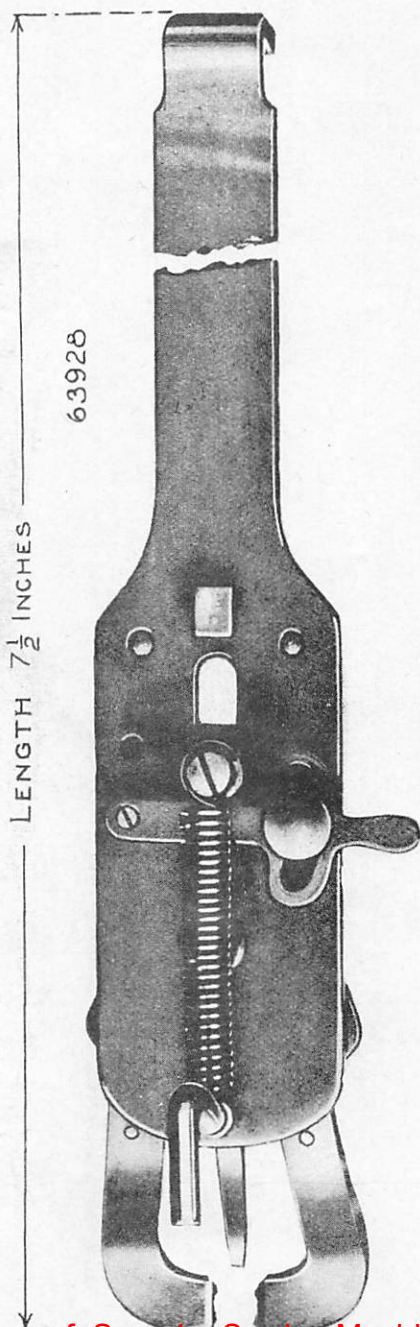


PLATE 7019—FULL SIZE

124680



124677

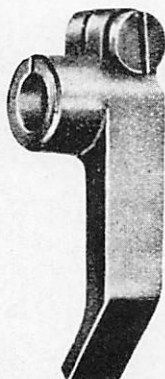

124679



17719



1282



1181



704



1953



59796



460



93



124603



10107



10106



42348




124604



62300



124601

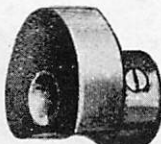

124602



18384



3012



8589



8554



124626



PLATE 7020—ONE-HALF SIZE

124678 62299 124630 124681

62183


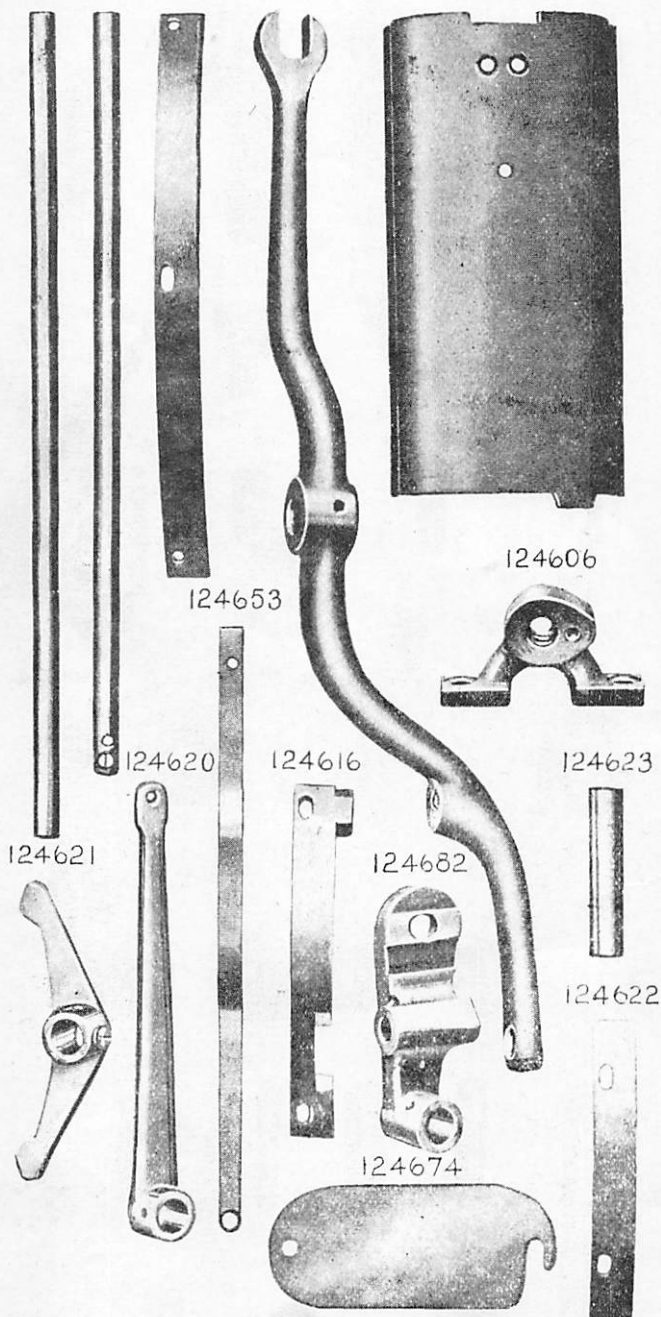


PLATE 7021-ONE-HALF SIZE

124644

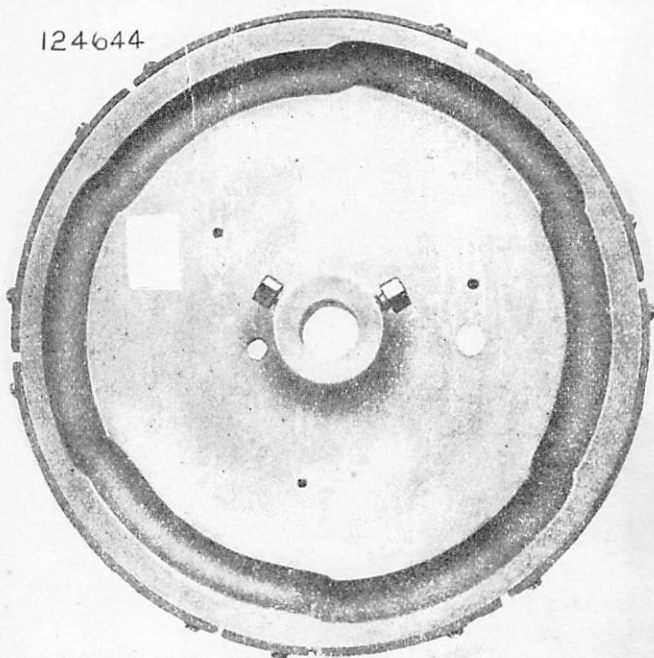

124645


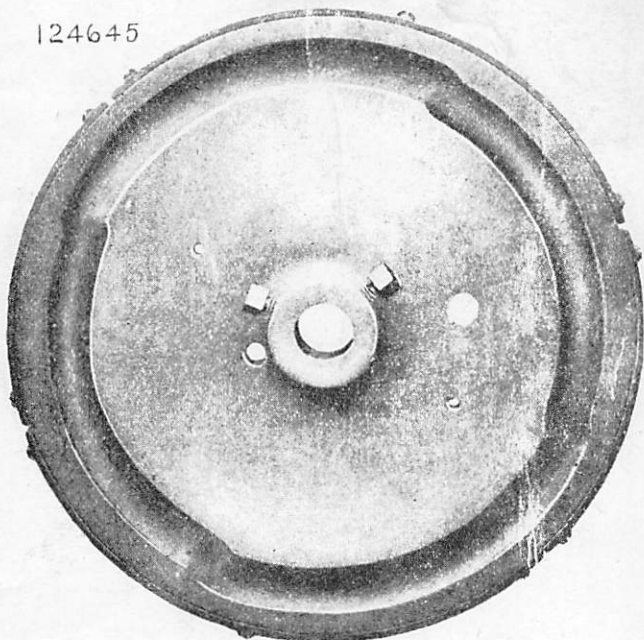


PLATE 7022-ONE-HALF SIZE

124688

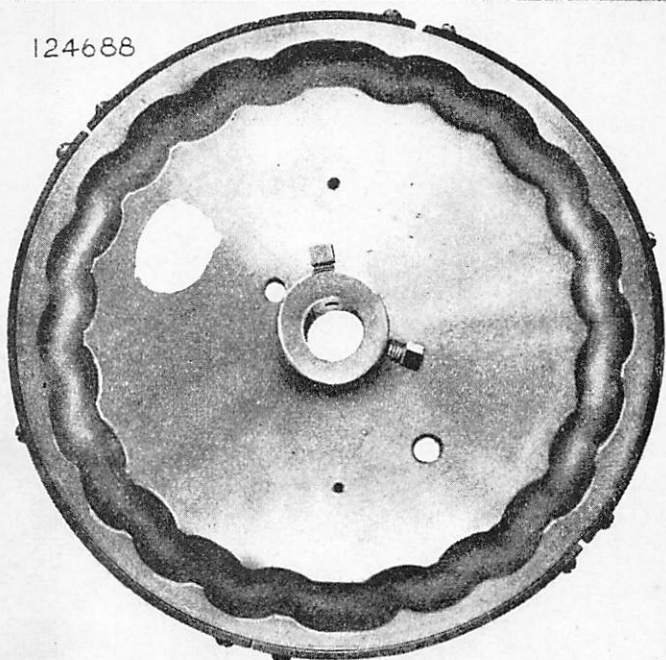

124690

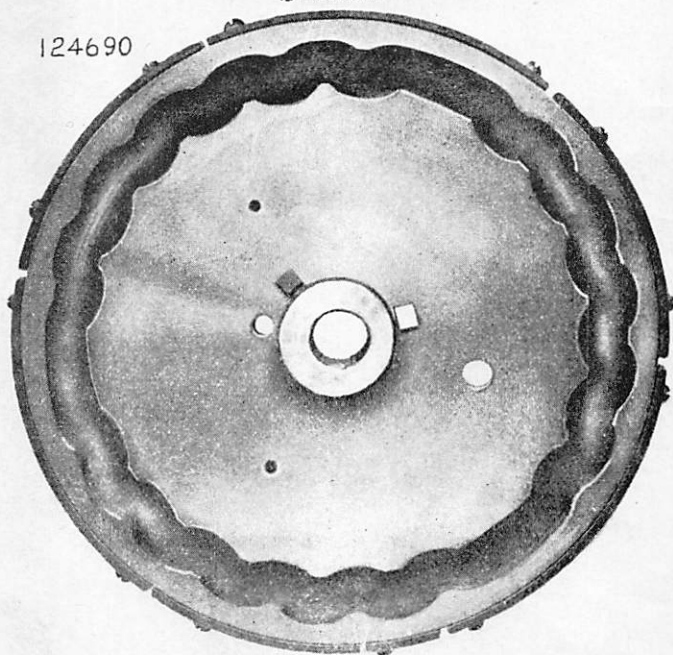


PLATE 7023—FULL SIZE


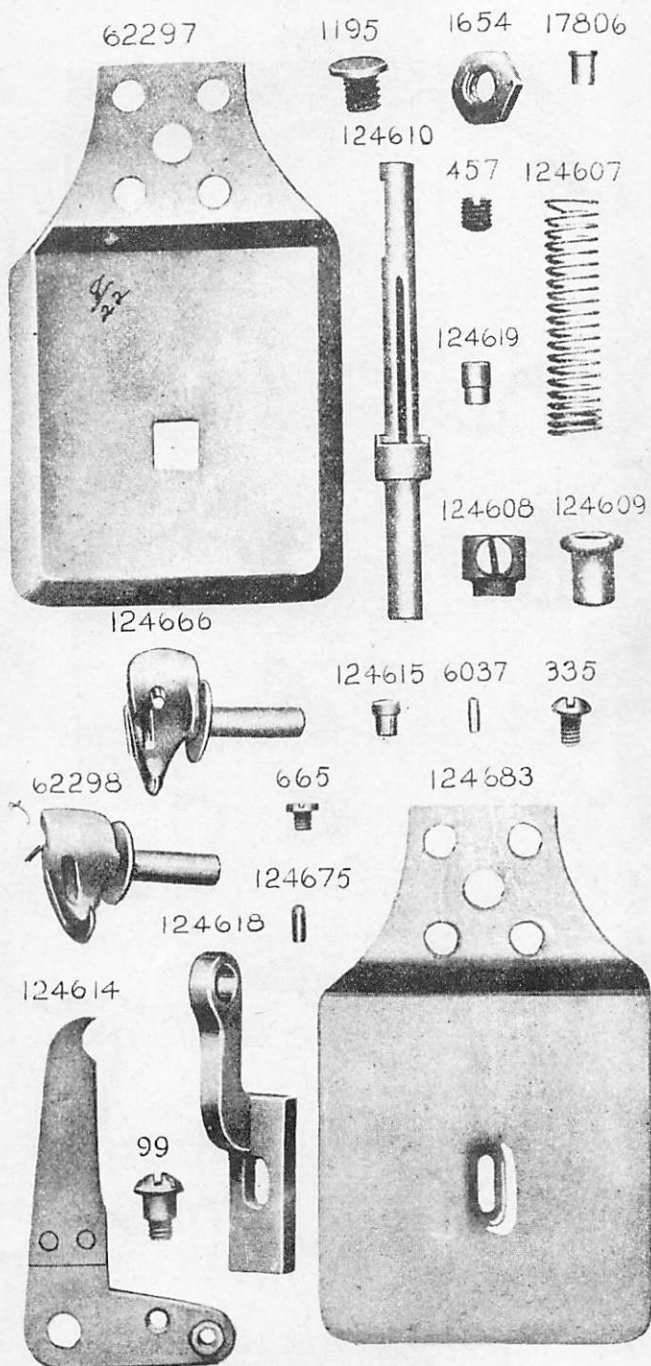


PLATE 7024—FULL SIZE

124627



124628

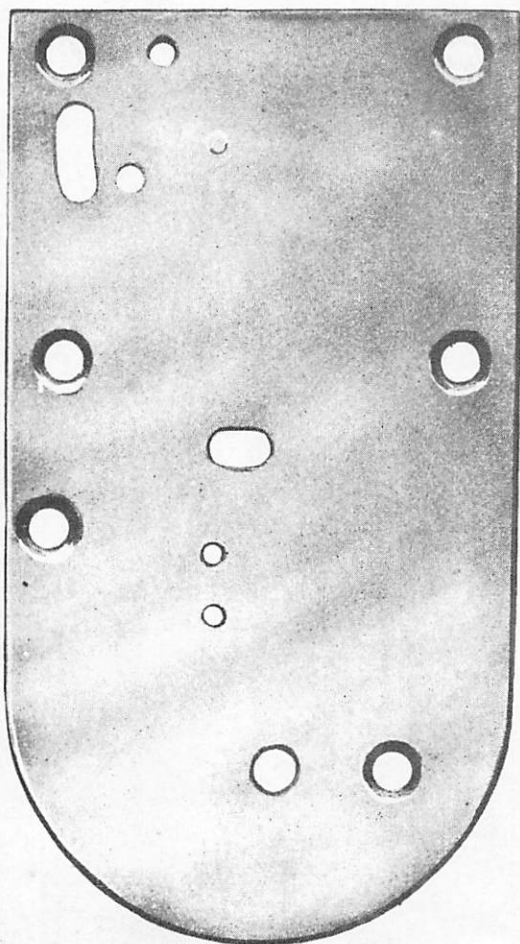

59790



59799




206



PLATE 7025—ONE-HALF SIZE

124689 124670 124672 124669 124624

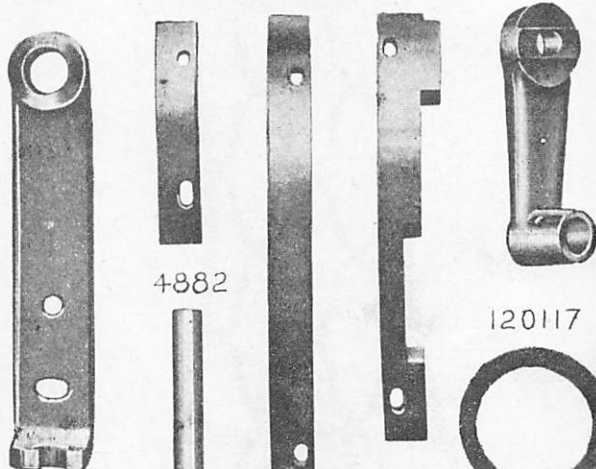

25086

4882

120117



4883

4879

56864

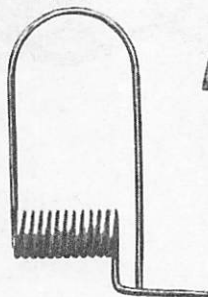


PLATE 7219—ONE-EIGHTH SIZE

