

# **SINGER**

## **116W2**

# PRICE LIST

OF

# PARTS



## MACHINE

## No. 116w2

THE SINGER MANUFACTURING COMPANY

## INDEX

---

|                               | PAGE |
|-------------------------------|------|
| ACCESSORIES.....              | 17   |
| BOBBIN WINDER.....            | 17   |
| MACHINE No. 116w2.....        | 7    |
| NUMERICAL LIST OF PARTS.....  | 23   |
| OBSOLETE PARTS.....           | 22   |
| STARTING TREADLE PARTS.....   | 19   |
| THREAD UNWINDER.....          | 18   |
| UNDER DRIVER TRANSMITTER..... | 20   |

# Instructions for Ordering

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.

 
202001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (\*) are furnished only when repairs are made at the factory.

## LIST OF PARTS COMPLETE FOR

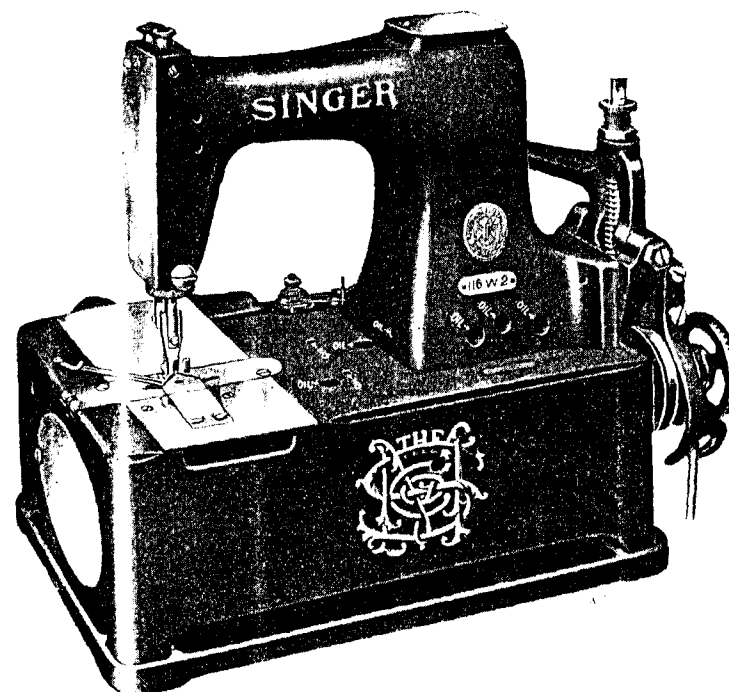

## MACHINE No. 116w2

Makes an Overcast Blind Stitch Over the Buttonhole Cord,  
Finishing the Cord or Gimp that Extends from Button-  
hole to Buttonhole, on Button Flies of Shocs.

Has Stop Motion.

| No.     | Plate | Name                     | Each |
|---------|-------|--------------------------|------|
| *233520 | —     | Arm with 202135 .....    | \$ — |
| 222803  | 12601 | " Cap .....              | 35   |
| 200278H | 12602 | " " Screw .....          | 05   |
| 202248H | 12602 | " " " Washer .....       | 05   |
| 204235  | 12602 | " Position Pin (2) ..... | 02   |
| 200963E | 12602 | " Screw (3) .....        | 06   |

| No.     | Plate | Name                                                                   | Each  |
|---------|-------|------------------------------------------------------------------------|-------|
| 222804  | 12601 | Balance Wheel with two 200347c .....                                   | \$ 75 |
| 200347c | 12321 | " " Set Screw .....                                                    | 03    |
| *233521 | —     | Bed with 202135 .....                                                  | —     |
| 203184  | 12621 | " Clamp .....                                                          | 50    |
| 200262n | 12613 | " " Hinge Screw .....                                                  | 10    |
| 200729n | 12621 | " " Thumb Screw .....                                                  | 20    |
| 202629  | 12621 | " " Washer .....                                                       | 10    |
| 222938  | 12621 | " " " .....                                                            | 10    |
| 222806  | 12601 | " End Cover Plate .....                                                | 60    |
| 200203n | 12602 | " " " " Hinge Screw .....                                              | 05    |
| 202248n | 12602 | " " " " " Washer .....                                                 | 05    |
| 202135  | 12602 | " " " " Stop Pin .....                                                 | 01    |
| 233513  | 12601 | " Plate (back) .....                                                   | 1 60  |
| 222810  | 12602 | " " " Latch Plunger .....                                              | 10    |
| 222953  | 12602 | " " " " Spring .....                                                   | 03    |
| 233514  | 12624 | " " (front) .....                                                      | 2 25  |
| 222810  | 12602 | " " " Latch Plunger .....                                              | 10    |
| 222953  | 12602 | " " " " Spring .....                                                   | 03    |
| 200357E | 12602 | " " " " " Stop Screw .....                                             | 03    |
| 222811  | 12602 | Bed Plate (front) Thrum Guide .....                                    | 30    |
| 200177b | 12602 | " " " " " Screw (2) .....                                              | 04    |
| 204178  | 12603 | Bobbin .....                                                           | 05    |
| 222916  | 12603 | " Case with 204181 .....                                               | 60    |
| 204181  | —     | " " Position Finger .....                                              | 01    |
| 204182  | 12603 | " " Tension Spring .....                                               | 10    |
| 200598F | 12603 | " " " " Adjusting Screw .....                                          | 02    |
| 200592F | 12603 | Bobbin Case Tension Spring Screw .....                                 | 02    |
| 222917  | 12603 | Bobbin Case complete, Nos. 200592F, 200598F, 204182 and 222916 .....   | 75    |
| 204251  | 12604 | Depressing Bar (hollow) with 200074F .....                             | 80    |
| 222813  | 12619 | " " Driving Connection with 202277 and two 200027E .....               | 1 50  |
| 222908  | 12602 | Depressing Bar Driving Connection Crank with 200038c and 200438c ..... | 25    |
| 200973c | 12602 | Depressing Bar Driving Connection Crank Hinge Screw .....              | 25    |
| 201515E | 12602 | Depressing Bar Driving Connection Crank Hinge Screw Nut .....          | 03    |
| 200038c | 12602 | Depressing Bar Driving Connection Crank Pinch Screw .....              | 05    |
| 200438c | 12621 | Depressing Bar Driving Connection Crank Position Screw .....           | 06    |
| 202277  | —     | Depressing Bar Driving Connection Oil Packing (wick) .....             | 01    |
| 200027E | 12602 | Depressing Bar Driving Connection Screw .....                          | 04    |
| 233501  | 12621 | " " " Eccentric .....                                                  | 2 25  |
| 210750  | 12621 | " " " " Position Pin .....                                             | 01    |

| No.     | Plate | Name                                                                         | Each  |
|---------|-------|------------------------------------------------------------------------------|-------|
| 200050c | 12605 | Depressing Bar Driving Eccentric Screw .....                                 | \$ 03 |
| 233522  | 12604 | " " " Shaft .....                                                            | 50    |
| 233523  | —     | " " " " 233522 with 40025 and 222817 .....                                   | 1 25  |
| 222815  | 12602 | Depressing Bar Driving Shaft Bushing (back) .....                            | 30    |
| 200335c | 12602 | Depressing Bar Driving Shaft Bushing (back) Set Screw .....                  | 04    |
| 222816  | 12605 | Depressing Bar Driving Shaft Bushing (front) .....                           | 35    |
| 200352c | 12613 | Depressing Bar Driving Shaft Bushing (front) Set Screw .....                 | 03    |
| 222817  | 12605 | Depressing Bar Driving Shaft Crank with 202277 .....                         | 75    |
| 202277  | —     | Depressing Bar Driving Shaft Crank Oil Packing (wick) .....                  | 01    |
| 40025   | 12605 | Depressing Bar Driving Shaft Crank Position Pin .....                        | 01    |
| 222818  | 12605 | Depressing Bar Lifting Collar with 200050c .....                             | 45    |
| 200050c | 12605 | Depressing Bar Lifting Collar Pinch Screw .....                              | 03    |
| 233518  | 12621 | Depressing Bar Lifting Sleeve with 202277 .....                              | 1 00  |
| 222820  | —     | Depressing Bar Lifting Sleeve Friction Washer (rawhide) (2) .....            | 05    |
| 233519  | 12621 | Depressing Bar Lifting Sleeve Link .....                                     | 60    |
| 202277  | —     | " " " " - Oil Packing (wick) .....                                           | 01    |
| 222822  | 12605 | Depressing Bar Position Guide with 200042F .....                             | 1 00  |
| 200042F | 12605 | Depressing Bar Position Guide Pinch Screw .....                              | 05    |
| 201169c | 12605 | Depressing Bar Screw Bushing (lower) .....                                   | 75    |
| 201170c | 12605 | " " " " " " Thumb Set Screw .....                                            | 12    |
| 202355  | 12605 | Depressing Bar Screw Bushing (lower) Thumb Set Screw Packing (brass) ..      | 01    |
| 201067B | 12606 | Depressing Bar Screw Bushing (upper) .....                                   | 20    |
| 200363c | 12605 | " " " " " " Set Screw .....                                                  | 03    |
| 202355  | 12605 | Depressing Bar Screw Bushing (upper) Set Screw Packing (brass) .....         | 01    |
| 222937  | 12621 | Depressing Bar Spring .....                                                  | 10    |
| 222939  | 12622 | " Blade .....                                                                | 30    |
| 200074F | 12605 | " " Screw .....                                                              | 03    |
| 222825  | 12619 | Driving Shaft with 200382c, 200386c, 200842b, 201142E and three 202423 ..... | 2 00  |
| 233502  | 12622 | Driving Shaft Bushing (back) with 202299 .....                               | 35    |

| No.     | Plate | Name                                                              | Each  |
|---------|-------|-------------------------------------------------------------------|-------|
| 202299  | —     | Driving Shaft Bushing (back) Oil Packing (wick) .....             | \$ 01 |
| 200363c | 12605 | Driving Shaft Bushing (back) Position Screw Check Screw .....     | 03    |
| 222827  | 12606 | Driving Shaft Bushing (front) .....                               | 30    |
| 200363c | 12605 | " " " " Position Screw Check Screw .....                          | 03    |
| 200019E | 12606 | Driving Shaft Bushing Clamp Screw (4) .....                       | 06    |
| 200441c | 12606 | " " " " Position Screw (2) .....                                  | 04    |
| 202423  | —     | " " Oil Packing (wick) (3) ..                                     | 01    |
| 201142E | 12606 | " " " Stop Screw .....                                            | 02    |
| 200382c | 12606 | " " " " " .....                                                   | 02    |
| 200386c | 12606 | " " " " " .....                                                   | 02    |
| 200842D | 12606 | " " " " " .....                                                   | 10    |
| 222830  | 12604 | Face Plate .....                                                  | 60    |
| 202135  | 12602 | " " Position Pin .....                                            | 01    |
| 200462B | 12606 | " " Thumb Screw .....                                             | 10    |
| 222831  | 12601 | Feed Bar with 222838 .....                                        | 1 00  |
| 201069c | 12606 | " " Hinge Screw Stud .....                                        | 40    |
| 201522E | 12606 | " " " " " Nut .....                                               | 03    |
| 222838  | —     | " " Lifting Stud .....                                            | 15    |
| 233503  | 12607 | " Dog .....                                                       | 1 20  |
| 201063E | 12606 | " " Screw (2) .....                                               | 02    |
| 233504  | 12624 | " Driving Eccentric .....                                         | 2 00  |
| 233505  | 12622 | " " " Bracket with 1299c and 200363c .....                        | 1 25  |
| 1299c   | 12602 | Feed Driving Eccentric Bracket Position Screw .....               | 03    |
| 200363c | 12605 | Feed Driving Eccentric Bracket Set Screw .....                    | 03    |
| 200913F | 12622 | Feed Driving Eccentric Fulcrum Screw .....                        | 05    |
| 201525E | 12622 | " " " " " Nut .....                                               | 03    |
| 223648  | 12622 | Feed Driving Eccentric Gib .....                                  | 05    |
| 200132E | 12618 | " " " " Screw (2) ..                                              | 02    |
| 222835  | 12619 | " " Rock Shaft .....                                              | 1 75  |
| 202305c | 12606 | " " " " Center (2) ....                                           | 06    |
| 200346c | 12606 | " " " " " Set Screw .....                                         | 03    |
| 233506  | 12624 | " " " " " Crank with 200019E ..                                   | 1 50  |
| 233507  | 12624 | " " " " " Connection with 202277 and two 200047E .....            | 1 50  |
| 200973c | 12602 | Feed Driving Rock Shaft Crank Connection Hinge Screw .....        | 25    |
| 201523E | 12622 | Feed Driving Rock Shaft Crank Connection Hinge Screw Nut .....    | 03    |
| 202277  | —     | Feed Driving Rock Shaft Crank Connection Oil Packing (wick) ..... | 01    |
| 200047E | 12622 | Feed Driving Rock Shaft Crank Connection Screw .....              | 03    |

| No.     | Plate | Name                                                                     | Each  |
|---------|-------|--------------------------------------------------------------------------|-------|
| 200019E | 12606 | Feed Driving Rock Shaft Crank Pinch Screw .....                          | \$ 06 |
| 222948  | 12623 | Feed Lifting Eccentric with 200374c and 200442c .....                    | 1 00  |
| 200442c | —     | Feed Lifting Eccentric Position Screw ..                                 | 04    |
| 200374c | 12623 | " " " " Set Screw .....                                                  | 02    |
| 222949  | 12623 | " " " " Strap .....                                                      | 1 25  |
| 201060D | 12606 | " " " " Cap Screw ..                                                     | 04    |
| 201250c | 12622 | " Regulating Lock Screw .....                                            | 03    |
| 223664  | 12622 | " " " " Friction Plate .....                                             | 06    |
| 222839  | 12603 | Hook (sewing) with 204217 .....                                          | 1 60  |
| 204217  | —     | " Bobbin Case Stud .....                                                 | 10    |
| 222840  | 12609 | " Bracket with 200379c, two 200380c and three 204234 .....               | 80    |
| 222841  | —     | Hook Bracket 222840 with 204226c, 222849, two each 201068D and 222850 .. | 1 50  |
| 200380c | 12381 | Hook Bracket Adjusting Screw (back) ..                                   | 02    |
| 200379c | 12603 | " " " " (front) ..                                                       | 02    |
| 222842  | 12610 | " " Base with 200386c .....                                              | 2 50  |
| 222843  | —     | " " " 222842 with 200576H, 201061H, 222844, 222872 and 222873 ..         | 4 00  |
| 222844  | 12603 | Hook Bracket Base Plate .....                                            | 20    |
| 200576H | 12603 | " " " " Screw (left) ..                                                  | 04    |
| 201061H | 12603 | " " " " " (right) ..                                                     | 04    |
| 205508  | 12603 | " " " " Position Pin (2) ..                                              | 02    |
| 200029c | 12603 | " " " " Screw (2) .....                                                  | 05    |
| 201064c | 12603 | " " " " Screw (back) .....                                               | 03    |
| 200085c | 12603 | " " " " (front) .....                                                    | 03    |
| 222845  | —     | Hook Bracket complete, Nos. 222839 and 222841 .....                      | 3 25  |
| 222846  | 12608 | Hook Driver with 204242 and 204243 ..                                    | 1 50  |
| 222847  | 12608 | " " Bevel Gear with two 200378c ..                                       | 75    |
| 200378c | 12602 | " " " " Set Screw .....                                                  | 02    |
| 204243  | 12603 | " " Pin .....                                                            | 01    |
| 204242  | 12603 | " " Washer .....                                                         | 01    |
| 222848  | 12608 | " Driving Bevel Gear Shaft .....                                         | 1 75  |
| 222963  | —     | " " Crank (left) with 200348c, 200382c and 201012c .....                 | 60    |
| 222964  | —     | Hook Driving Crank (right) with 200348c, 200382c and 200439c .....       | 60    |
| 204241  | 12603 | Hook Driving Crank Link .....                                            | 25    |
| 201012c | 12606 | " " " " Position Screw (left) .....                                      | 03    |

| No.     | Plate | Name                                                                | Each  |
|---------|-------|---------------------------------------------------------------------|-------|
| 200439c | 12606 | Hook Driving Crank Position Screw (right) .....                     | \$ 05 |
| 200348c | 12606 | Hook Driving Crank Set Screw .....                                  | 03    |
| 200382c | 12606 | " " " " " .....                                                     | 02    |
| 204226c | 12609 | " Race, .156 in. thick, 1.906 in. diameter .....                    | 40    |
| 222849  | 12609 | Hook Race Cap (steel) .....                                         | 15    |
| 222850  | 12606 | " " " Spring .....                                                  | 10    |
| 201068D | 12606 | " " " " Screw .....                                                 | 06    |
| 204234  | 12606 | " " Position Pin .....                                              | 01    |
| 222851  | 12608 | Needle Bar .....                                                    | 55    |
| 222852  | 12608 | " " Connecting Link .....                                           | 80    |
| 200101D | 12608 | " " " " Stop Screw .....                                            | 04    |
| 222853  | 12608 | " " " Stud with 200072c .....                                       | 50    |
| 200072c | 12608 | " " " " Pinch Screw .....                                           | 03    |
| 222854  | 12610 | " " Driving Connection with two 200046c .....                       | 1 25  |
| 222855  | 12608 | Needle Bar Driving Connection Crank with 200025c and 202277 .....   | 1 00  |
| 202277  | —     | Needle Bar Driving Connection Crank Oil Packing (wick) .....        | 01    |
| 200025c | 12608 | Needle Bar Driving Connection Crank Pinch Screw .....               | 05    |
| 200046c | 12611 | Needle Bar Driving Connection Screw .....                           | 03    |
| 222856  | 12611 | " " " Crank .....                                                   | 75    |
| 40025   | 12605 | " " " " Position Pin.. ..                                           | 01    |
| 222857  | 12610 | " " " Shaft .....                                                   | 50    |
| 222858  | —     | " " " " 222857 with 40025, 200101D, 222852, 222853 and 222856 ..... | 2 60  |
| 222859  | 12611 | Needle Bar Driving Shaft Bushing (back) .....                       | 30    |
| 222860  | 12611 | " " " " " (front) .....                                             | 35    |
| 200347c | 12321 | " " " " " Set Screw (2) .....                                       | 03    |
| 222861  | 12610 | Needle Bar Frame .....                                              | 1 00  |
| 222862  | 12611 | " " " Hinge Stud (eccentric) .....                                  | 60    |
| 200444c | 12622 | " " " " " Position Screw .....                                      | 04    |
| 200363c | 12605 | Needle Bar Frame Hinge Stud Set Screw .....                         | 03    |
| 222863  | 12610 | " " " Pitman .....                                                  | 75    |
| 222864  | —     | " " " " 222863 with 222865, 222919 and two 200098F .....            | 1 60  |
| 222865  | 12611 | Needle Bar Frame Pitman Connection (adjustable) .....               | 75    |
| 222919  | 12611 | Needle Bar Frame Pitman Connection Clamp Washer .....               | 05    |
| 201059c | 12611 | Needle Bar Frame Pitman Connection Hinge Screw .....                | 08    |
| 200098F | 12622 | Needle Bar Frame Pitman Connection Screw .....                      | 03    |

| No.     | Plate | Name                                                          | Each  |
|---------|-------|---------------------------------------------------------------|-------|
| 200235c | 12611 | Needle Bar Frame Pitman Hinge Screw .....                     | \$ 10 |
| *222866 | —     | " " " Support with 200363c .....                              | —     |
| 205510  | 12611 | " " " " Position Pin (2) .....                                | 03    |
| 200019c | 12606 | " " " " Screw (2) .....                                       | 06    |
| 222918  | 12610 | " " Guard .....                                               | 30    |
| 200030H | 12611 | " " " Screw .....                                             | 05    |
| 222867  | 12611 | " Clamp with 201092F .....                                    | 1 50  |
| 201092F | 12611 | " " Pinch Screw .....                                         | 08    |
| 200076D | 12611 | " " Screw .....                                               | 03    |
| 222868  | 12612 | " Guard .....                                                 | 1 00  |
| 201177D | 12611 | " " Screw .....                                               | 02    |
| 222930  | 12611 | " Stop .....                                                  | 30    |
| 222869  | 12612 | " Support .....                                               | 1 00  |
| 200334c | 12611 | " " Adjusting Screw .....                                     | 04    |
| 200351c | 12611 | " " " " Set Screw .....                                       | 03    |
| 222870  | 12612 | " " Cam with 200378c and 200403c .....                        | 1 00  |
| 200378c | 12602 | Needle Support Cam Set Screw .....                            | 02    |
| 200403c | 12612 | " " " " " .....                                               | 03    |
| 200651c | 12612 | " " Hinge Screw .....                                         | 05    |
| 222872  | 12612 | " " Lifting Bell Crank with 200334c, 200351c and 201882 ..... | 1 00  |
| 222873  | 12612 | Needle Support Lifting Bell Crank Hinge Pin .....             | 15    |
| 200386c | 12606 | Needle Support Lifting Bell Crank Hinge Pin Set Screw .....   | 02    |
| 201881  | —     | Needle Support Lifting Bell Crank Roller .....                | 15    |
| 201882  | 12622 | " " " " " " " 201881 with 200274D .....                       | 20    |
| 200274D | 12612 | Needle Support Lifting Bell Crank Roller Screw .....          | 06    |
| 222874  | 12612 | Needle Support Spring .....                                   | 05    |
| 222875  | 12612 | " Vibrating Cam with 1285c and 200347c .....                  | 1 50  |
| 204918  | 12612 | Needle Vibrating Cam Follower .....                           | 35    |
| 1285c   | 12612 | " " " Position Screw ..                                       | 04    |
| 200347c | 12321 | " " " Set Screw .....                                         | 03    |
| 222876  | 12610 | " " Lever .....                                               | 75    |
| 200224c | 12612 | " " Hinge Screw .....                                         | 12    |
| 204251  | 12604 | Presser Bar (hollow) with 200071F .....                       | 80    |
| 202336  | 12613 | " " Bushing .....                                             | 35    |
| 200352c | 12613 | " " " Set Screw .....                                         | 03    |
| 202339  | 12613 | " " Lifter .....                                              | 25    |
| 200653c | 12613 | " " " Hinge Screw .....                                       | 06    |
| 204253  | 12613 | " " Lifting Bracket with 200086c .....                        | 40    |
| 200086c | 12613 | " " " " Pinch Screw .....                                     | 03    |
| 213667  | 12613 | " " " " Position Guide with 200075D and 203551 .....          | 40    |
| 200075D | 12613 | Presser Bar Lifting Bracket Position Guide Screw .....        | 02    |

| No.     | Plate | Name                                                                     | Each  |
|---------|-------|--------------------------------------------------------------------------|-------|
| 203551  | 12613 | Presser Bar Lifting Bracket Position Guide Screw Bushing .....           | \$ 05 |
| 200362c | 12613 | Presser Bar Lifting Bracket Position Guide Set Screw .....               | 03    |
| 204258  | 12613 | Presser Bar Spring .....                                                 | 10    |
| 200494B | 12613 | " " Thumb Screw (pressure regulating) .....                              | 25    |
| 200363c | 12605 | Presser Bar Thumb Screw Set Screw .....                                  | 03    |
| 202355  | 12605 | " " " " " " " Packing (brass) .....                                      | 01    |
| 222928  | 12613 | Presser Foot .....                                                       | 2 00  |
| 222878  | 12619 | " " Lifting Lever .....                                                  | 25    |
| 222879  | 12613 | " " " " Connecting Link .....                                            | 50    |
| 201062F | 12613 | Presser Foot Lifting Lever Connecting Link Hinge Screw (2) .....         | 10    |
| 201533E | 12613 | Presser Foot Lifting Lever Connecting Link Hinge Screw Nut (upper) ..... | 03    |
| 200262H | 12613 | Presser Foot Lifting Lever Hinge Screw .....                             | 10    |
| 200074F | 12605 | " " Screw .....                                                          | 03    |
| 23497   | 12614 | Pulley (loose) .....                                                     | 1 75  |
| 40024   | 12614 | " (tight) .....                                                          | 2 50  |
| 40025   | 12605 | " " Pin .....                                                            | 01    |
| 222880  | 12614 | Starting Lever .....                                                     | 3 50  |
| 222881  | —     | " " 222880 with 913c, 1638E, 2022, 21650, 21651, 222889 and 222890 ..... | 5 25  |
| 222882  | 12614 | Starting Lever Belt Shifter .....                                        | 75    |
| 200019E | 12606 | " " " " Screw (2) .....                                                  | 06    |
| 222883  | 12614 | " " Bracket .....                                                        | 1 00  |
| 204235  | 12602 | " " " " Position Pin .....                                               | 02    |
| 200019E | 12606 | " " " " Screw (2) .....                                                  | 06    |
| 233517  | 12626 | " " Rod .....                                                            | 30    |
| 222886  | 12615 | " " " " Connecting Link .....                                            | 60    |
| 201062F | 12613 | " " " " " " Hinge Screw (2) .....                                        | 10    |
| 201533E | 12613 | Starting Lever Rod Connecting Link Hinge Screw Nut (lower) .....         | 03    |
| 233515  | 12625 | Starting Lever Rod Position Bracket .....                                | 30    |
| 200035D | 12615 | " " " " " " Screw (2) .....                                              | 05    |
| 222818  | 12605 | Starting Lever Rod Stop Collar with 200050c (2) .....                    | 45    |
| 200050c | 12605 | Starting Lever Rod Stop Collar Pinch Screw .....                         | 03    |
| 564c    | 12615 | Starting Lever Screw Center (2) .....                                    | 12    |
| 1508c   | 12615 | " " " " Nut (2) .....                                                    | 06    |
| 233516  | 12626 | " " Spring .....                                                         | 25    |
| 224385  | 12625 | " " Hook .....                                                           | 03    |
| 39628   | 12615 | Stop Cam with 39629 .....                                                | 1 50  |
| 222889  | 12616 | " " Interlocking Rod .....                                               | 50    |

| No.     | Plate | Name                                                                                       | Each  |
|---------|-------|--------------------------------------------------------------------------------------------|-------|
| 222890  | 12615 | Stop Cam Interlocking Rod Guide .....                                                      | \$ 75 |
| 2022    | —     | " " " " " " Position Pin .....                                                             | 01    |
| 21650   | —     | Stop Cam Interlocking Rod Guide Washer (rawhide) .....                                     | 02    |
| 21651   | 12615 | Stop Cam Interlocking Rod Spring .....                                                     | 10    |
| 913c    | 12617 | " " " " " " Regulating Thumb Screw .....                                                   | 40    |
| 1638E   | 12617 | Stop Cam Interlocking Rod Spring Regulating Thumb Screw Nut .....                          | 12    |
| 39629   | —     | Stop Cam Pin .....                                                                         | 15    |
| 23515   | 12617 | " " Spring (long) .....                                                                    | 08    |
| 23516   | 12617 | " " " (short) .....                                                                        | 05    |
| 222892  | 12616 | " " " " Cover with two 9780 .....                                                          | 50    |
| 9780    | 12617 | " " " " " " Position Pin .....                                                             | 01    |
| 997E    | 12617 | " " " " " " Screw (2) .....                                                                | 05    |
| 39637   | 12617 | " " " " " " Stop Block .....                                                               | 30    |
| 1349c   | 12617 | " " " " " " Screw .....                                                                    | 04    |
| 39638   | 12617 | " " " " " " Block .....                                                                    | 30    |
| 457c    | 12617 | " " " " " " Set Screw .....                                                                | 02    |
| 233524  | —     | Take-up Cam with 454c, 1285c, 200335c, and 210750 .....                                    | 1 50  |
| 1285c   | 12612 | Take-up Cam Position Screw .....                                                           | 01    |
| 454c    | 12623 | " " " " " " Check Screw .....                                                              | 02    |
| 200335c | 12602 | " " " " " " Set Screw .....                                                                | 04    |
| 222894  | —     | " " Lever with 201816 and 222103 .....                                                     | 1 10  |
| 222965  | —     | " " Bearing .....                                                                          | 30    |
| 201301c | —     | " " Hinge Screw .....                                                                      | 12    |
| 201623c | 12617 | " " " " " " Nut .....                                                                      | 15    |
| 222966  | —     | " " " " " " Washer .....                                                                   | 05    |
| 201816  | 12617 | " " " " " " Roller .....                                                                   | 12    |
| 222103  | —     | " " " " " " Cap .....                                                                      | 08    |
| 222932  | 12617 | " " " " " " Thread Retaining Spring .....                                                  | 10    |
| 201132b | 12617 | " " " " " " " " Screw .....                                                                | 05    |
| 222936  | —     | Take-up Lever complete, Nos. 201301c, 222894, 222932, 222965, 222966 and two 201132b ..... | 1 75  |
| 202402  | 12617 | Tension Disc (back) .....                                                                  | 05    |
| 202403  | 12617 | " " (front) .....                                                                          | 10    |
| 222818  | 12605 | " " Release Collar with 200050c .....                                                      | 45    |
| 200050c | 12605 | " " " " " " Pinch Screw .....                                                              | 03    |
| 233510  | 12624 | " " " " " " Lever .....                                                                    | 25    |
| 200262b | 12613 | " " " " " " Hinge Screw .....                                                              | 10    |
| 233511  | 12623 | " " " " " " Plunger .....                                                                  | 08    |
| 204271  | 12623 | " " " " " " Washer .....                                                                   | 05    |
| 202407  | 12617 | " " Spring .....                                                                           | 05    |
| 201249E | 12623 | " Stud with 204925 .....                                                                   | 15    |
| 200326c | 12617 | " " " " " " Set Screw .....                                                                | 05    |

| No.     | Plate | Name                                                                                                           | Each   |
|---------|-------|----------------------------------------------------------------------------------------------------------------|--------|
| 204925  | 12617 | Tension Stud Washer .....                                                                                      | \$ .01 |
| 201572B | 12617 | " Thumb Nut .....                                                                                              | .04    |
| 222895  | 12618 | " Washer .....                                                                                                 | 15     |
| 233512  | —     | Tension complete, Nos. 201249B, 201572B,<br>202402, 202403, 202407, 204271, 222895,<br>222907 and 233511 ..... | 75     |
| 222907  | 12618 | Thread Controller Spring. (Per 100 \$3.50)                                                                     | .05    |
| 202411  | 12618 | " " " Stop .....                                                                                               | .10    |
| 200132E | 12618 | " " " Screw ..                                                                                                 | .02    |
| 222933  | 12618 | " Cutter .....                                                                                                 | 15     |
| 200139D | 12623 | " " Screw .....                                                                                                | .02    |
| 222896  | 12618 | " Guide .....                                                                                                  | .05    |
| 222897  | 12618 | " " .....                                                                                                      | .02    |
| 222898  | 12618 | " " .....                                                                                                      | .02    |
| 222899  | 12618 | " Leader Bracket .....                                                                                         | .30    |
| 200576H | 12603 | " " " Screw .....                                                                                              | .04    |
| 202098  | 12618 | " " Roller .....                                                                                               | .05    |
| 222900  | 12618 | " " " Guard .....                                                                                              | .10    |
| 200581H | 12618 | " " " " Screw .....                                                                                            | .02    |
| 202084  | 12618 | " " " " Washer .....                                                                                           | .01    |
| 201065H | 12618 | " " " " Screw .....                                                                                            | .03    |
| 222901  | 12618 | Thread Leader complete, Nos. 200581H,<br>201065H, 202084, 202098, 222899 and<br>222900 .....                   | .50    |
| 210958  | 12623 | Thread Retainer Collar .....                                                                                   | .08    |
| 210993  | 12618 | " " Sleeve .....                                                                                               | .05    |
| 210992  | 12618 | " " Spring .....                                                                                               | .01    |
| 210957  | 12623 | " " Stud .....                                                                                                 | .12    |
| 200330C | 12618 | " " " Set Screw .....                                                                                          | .04    |
| 222954  | 12607 | Throat Plate .....                                                                                             | 6 50   |
| 222955  | —     | " " 222954 with 200651E, 201177D,<br>222868, 222869 and 222874 .....                                           | 8 50   |
| 200565E | 12618 | Throat Plate Screw (2) .....                                                                                   | .05    |

## ACCESSORIES

| No.     | Plate | Name                                                                         | Each        |
|---------|-------|------------------------------------------------------------------------------|-------------|
| 204178  | 12603 | Bobbin (5) .....                                                             | \$ .05      |
| 225497  | 10776 | " Case Screw Driver .....                                                    | .10         |
| 222952  | 12605 | Depressing Blade .....                                                       | .30         |
| 116 x 1 | —     | Needles, six, size 9 .....                                                   | Per doz. 20 |
| 222909  | —     | Bed Cushion (felt) .....                                                     | .05         |
| 222920  | —     | Drip Pan with four each 222909 and wood<br>screws 1 in., No. 13, P.H.B. .... | 1 25        |
| 36578   | 10776 | Oiler with 36579 .....                                                       | .10         |
| 36579   | 10776 | " Spout, 3 in. long .....                                                    | .06         |
| 225498  | 10776 | Screw Driver, 7½ in. long .....                                              | .15         |
| 222956  | —     | Thread Unwinder Spool Weight .....                                           | .20         |
| 222962  | —     | " " " " 222956<br>with 2455, 200011E, 202482, 202483 and<br>222961 .....     | .35         |
| 2455    | 12625 | Thread Unwinder Spool Weight Tension<br>Disc (lower) .....                   | .02         |
| 202482  | 12381 | Thread Unwinder Spool Weight Tension<br>Disc (upper) .....                   | .02         |
| 200011E | 12381 | Thread Unwinder Spool Weight Tension<br>Disc Screw .....                     | .05         |
| 202483  | 12381 | Thread Unwinder Spool Weight Tension<br>Disc Spring (brass) .....            | .01         |
| 222961  | 12625 | Thread Unwinder Spool Weight Thread<br>Guide .....                           | .05         |
| 225554  | 10776 | Wrench (steel) .....                                                         | .10         |
| 202511  | 12616 | " .....                                                                      | .06         |
| 25086   | 12616 | " .....                                                                      | .10         |

### BOBBIN WINDER

#### Swing Automatic, Left Hand.

|         |       |                                       |     |
|---------|-------|---------------------------------------|-----|
| 227149  | 11157 | Bobbin Winder Base (left) .....       | 15  |
| 227209  | 11157 | " " Frame (left) with 200125C .....   | 15  |
| 227152  | 12381 | " " " Hinge Pin .....                 | .02 |
| 227153  | 12381 | " " " Spring .....                    | .02 |
| 200125C | 12381 | " " " Stop Screw .....                | .02 |
| 227154  | 11157 | " " Pulley (large) with 200380C ..... | .20 |
| 200380C | 12381 | " " " Set Screw .....                 | .02 |
| 227156  | 12381 | " " Spindle .....                     | .15 |
| 227157  | 11157 | " " Stop Latch (left) .....           | .10 |
| 227159  | 12381 | " " " " Hinge Pin .....               | .02 |
| 227160  | 12381 | " " " " Spring .....                  | .01 |

| No.     | Plate | Name                                                                                                                                                                | Each  |
|---------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|
| 227048  | 11157 | Bobbin Winder complete (large pulley).<br>Nos. 227149, 227152 to 227154, 227156,<br>227157, 227159, 227160, 227209 and two<br>round head wood screws 1½ in., No. 14 | \$ 85 |
| 202480  | 11157 | Bobbin Winder Spool Holder Base with<br>200355H and 202484                                                                                                          | 15    |
| 202481  | 11157 | Bobbin Winder Spool Holder Base Spool<br>Pin                                                                                                                        | 05    |
| 202482  | 12381 | Bobbin Winder Spool Holder Tension<br>Disc (lower or upper)                                                                                                         | 02    |
| 200011E | 12381 | Bobbin Winder Spool Holder Tension<br>Disc Screw                                                                                                                    | 05    |
| 200355H | 12381 | Bobbin Winder Spool Holder Tension<br>Disc Screw Set Screw                                                                                                          | 03    |
| 202483  | 12381 | Bobbin Winder Spool Holder Tension<br>Disc Spring (brass)                                                                                                           | 01    |
| 202484  | 12381 | Bobbin Winder Spool Holder Tension<br>Disc Thread Guide                                                                                                             | 01    |
| 202485  | 11157 | Bobbin Winder Spool Holder complete,<br>Nos. 200011E, 202480, 202481, 202483,<br>two 202482 and one wood screw 1 in.,<br>No. 13H                                    | 35    |
| 227514  | —     | Bobbin Winder and Spool Holder com-<br>plete, Nos. 202485 and 227048                                                                                                | 1 20  |

## THREAD UNWINDER

|         |       |                                                                                                                               |      |
|---------|-------|-------------------------------------------------------------------------------------------------------------------------------|------|
| 202486  | —     | Spool Pin                                                                                                                     | 03   |
| 202487  | —     | " Rest                                                                                                                        | 25   |
| 202488  | 10278 | " " 202487 with 200363c, 200383c<br>and two 202486                                                                            | 35   |
| 202489  | 10278 | Spool Rest Rod                                                                                                                | 05   |
| 200383c | 12618 | " " " Set Screw                                                                                                               | 02   |
| 200383c | 12618 | " " " Set Screw                                                                                                               | 02   |
| 202490  | 10278 | " Stand with 200383c                                                                                                          | 20   |
| 202491  | 10278 | " Washer (steel)                                                                                                              | 02   |
| 202492  | 10278 | " Weight with 202493                                                                                                          | 25   |
| 202493  | —     | " " Center with 202793 and 203163                                                                                             | 10   |
| 203163  | —     | " " " Bushing                                                                                                                 | 03   |
| 202793  | 10278 | " " Thread Guide                                                                                                              | 05   |
| 202794  | 10278 | Thread Eyelet Rod                                                                                                             | 15   |
| 200363c | 12605 | " " " Set Screw                                                                                                               | 03   |
| 202795  | 10278 | Thread Unwinder complete, Nos. 202488<br>to 202490, 202794, two each 202491,<br>202492 and three wood screws ¾ in.,<br>No. 13 | 1 25 |

## STARTING TREADLE

| No.     | Plate | Name                                                                                 | Each  |
|---------|-------|--------------------------------------------------------------------------------------|-------|
| 222911  | 12616 | Starting Lever Operating Lever                                                       | \$ 75 |
| 222912  | 12616 | " " " " Bracket<br>with two wood screws 1 in., No. 13                                | 30    |
| 222913  | —     | Starting Lever Operating Lever Bracket<br>222912 with 200973H, 201515E and<br>222911 | 1 35  |
| 200973H | 12602 | Starting Lever Operating Lever Hinge<br>Screw                                        | 25    |
| 201515E | 12602 | Starting Lever Operating Lever Hinge<br>Screw Nut                                    | 03    |
| 222911  | 12616 | Starting Lever Operating Lever Rod, 4½<br>in. long, with 202456                      | 06    |
| *202456 | —     | Starting Lever Operating Lever Rod Cap<br>or Oil Guard                               | —     |
| 227976  | 12619 | Starting Treadle with 200540D                                                        | 45    |
| 227977  | 12619 | " " 227976 with 227602                                                               | 60    |
| 227602  | 12619 | " " Adjustable Connecting<br>Slide                                                   | 20    |
| 200540D | 12613 | Starting Treadle Adjustable Connecting<br>Slide Set Screw                            | 10    |
| 202468  | 12619 | Starting Treadle Pitman Rod (lower)                                                  | 05    |
| 204698  | 12619 | " " " " (upper)<br>with 202302                                                       | 08    |
| 204126  | 12321 | Starting Treadle Pitman Rod Clamp<br>with two 200530c                                | 20    |
| 200530c | 12321 | Starting Treadle Pitman Rod Clamp Set<br>Screw                                       | 05    |
| 202302  | 12321 | Starting Treadle Pitman Rod Cotter Pin                                               | 01    |
| 222934  | 12619 | " " Stand with five wood<br>screws 1 in., No. 13                                     | 65    |
| 222935  | —     | Starting Treadle Pitman complete, Nos.<br>202168, 204698 and two 204126              | 55    |
| 222927  | —     | Starting Treadle and Pitman complete,<br>Nos. 222926 and 222935                      | 1 80  |
| 222926  | —     | Starting Treadle and Stand complete,<br>Nos. 222934 and 227977                       | 1 25  |

## UNDER DRIVER TRANSMITTER

| No.     | Plate | Name                                                                                         | Each   |
|---------|-------|----------------------------------------------------------------------------------------------|--------|
| 204099  | 10416 | Cone Pulley (grooved), three speed, 4, 4½ and 5 in. belt diam., with 227194 and 227553 ..... | \$1 00 |
| 25362   | 12321 | Cone Pulley Ball, size ⅝ inch....Per 100                                                     | 80     |
| 204100  | 12321 | " " " Bearing Cup .....                                                                      | 12     |
| 204101  | 12321 | " " " Cap .....                                                                              | 02     |
| 204102  | 12321 | " " " Retaining Spring ....                                                                  | 05     |
| 227553  | 12322 | Cone Pulley Ball Cup complete, Nos. 204100 to 204102 and thirteen 25362 ..                   | 45     |
| 227194  | —     | Cone Pulley Counterbalance .....                                                             | 05     |
| 215591  | 12620 | Driving Pulley, 6 in. diam., with 204104 and 204105 .....                                    | 60     |
| 204104  | 10416 | Driving Pulley Friction Ring (leather) ..                                                    | 05     |
| 204105  | 12321 | " " " " Stop Pin ..                                                                          | 01     |
| 227742  | 12620 | " " Shaft (hollow) with 204109, 204110, 204112 and two 204111 .....                          | 55     |
| 204106  | 10416 | Driving Pulley Shaft 227742 with 204107, 204108 and eleven 25303 .....                       | 1 00   |
| 25303   | 12321 | Driving Pulley Shaft Ball, size ¼ inch .....                                                 | 1 00   |
| 204107  | 12321 | Driving Pulley Shaft Ball Cup .....                                                          | 10     |
| 204108  | 12321 | " " " " " Cap ....                                                                           | 02     |
| 204109  | —     | " " " Oil Plug .....                                                                         | 01     |
| 204110  | —     | " " " Oiling Leather ....                                                                    | 02     |
| 204111  | —     | " " " " " Pin (leather) .....                                                                | 01     |
| 204112  | 12322 | Driving Pulley Shaft Oiling Wick .....                                                       | 01     |
| 200524c | 12321 | " " " Set Screw .....                                                                        | 06     |
| 204113  | 12321 | " " " Thimble .....                                                                          | 10     |
| 204114  | 10416 | Frame with 200524c .....                                                                     | 80     |
| 204115  | 10416 | " Dress Guard with 200524c .....                                                             | 15     |
| 200524c | 12321 | " " " Set Screw .....                                                                        | 06     |
| 202499  | 12620 | Lever Brake with 200524c, 204122 and two 200363c .....                                       | 35     |
| 204122  | 12322 | Lever Brake Leather .....                                                                    | 05     |
| 200363c | 12605 | " " " Set Screw .....                                                                        | 03     |
| 200524c | 12321 | " " Set Screw .....                                                                          | 06     |
| 222931  | 12616 | " " Spring .....                                                                             | 05     |
| 222922  | 12620 | Starting Handle (compression) with 227746, two each 200524c and 202845 ..                    | 70     |
| 227746  | —     | Starting Handle (compression) Plate ....                                                     | 10     |
| 202845  | 12321 | " " " " Rivet .....                                                                          | 01     |
| 200524c | 12321 | " " Set Screw .....                                                                          | 06     |
| 206813  | —     | " " Compression Shaft .....                                                                  | 20     |

| No.     | Plate | Name                                                                                                                                                        | Each  |
|---------|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|
| 204119  | 10416 | Starting Handle Compression Shaft 206813 with 204120 .....                                                                                                  | \$ 30 |
| 204120  | 12618 | Starting Handle Compression Shaft Collar with 200363c .....                                                                                                 | 10    |
| 200363c | 12605 | Starting Handle Compression Shaft Collar Set Screw .....                                                                                                    | 03    |
| 222923  | 12620 | Under Driver Transmitter complete, Nos. 202499, 204099, 204106, 204113 to 204115, 204119, 215591, 222922, 222931 and three wood screws 1½ in., No. 15 ..... | 3 50  |

## OBSOLETE PARTS

| No.    | Plate | Name                                                                          | Each   |
|--------|-------|-------------------------------------------------------------------------------|--------|
| 233509 | 12624 | Take-up Cam with 454c, 1285c, 200335c<br>and 210750 .....                     | \$1 50 |
| 222959 | —     | Take-up Lever with 201816 and 222103 ..                                       | 1 10   |
| 222960 | 12616 | Take-up Lever complete, Nos. 201248c,<br>222932, 222959 and two 201132b ..... | 1 55   |

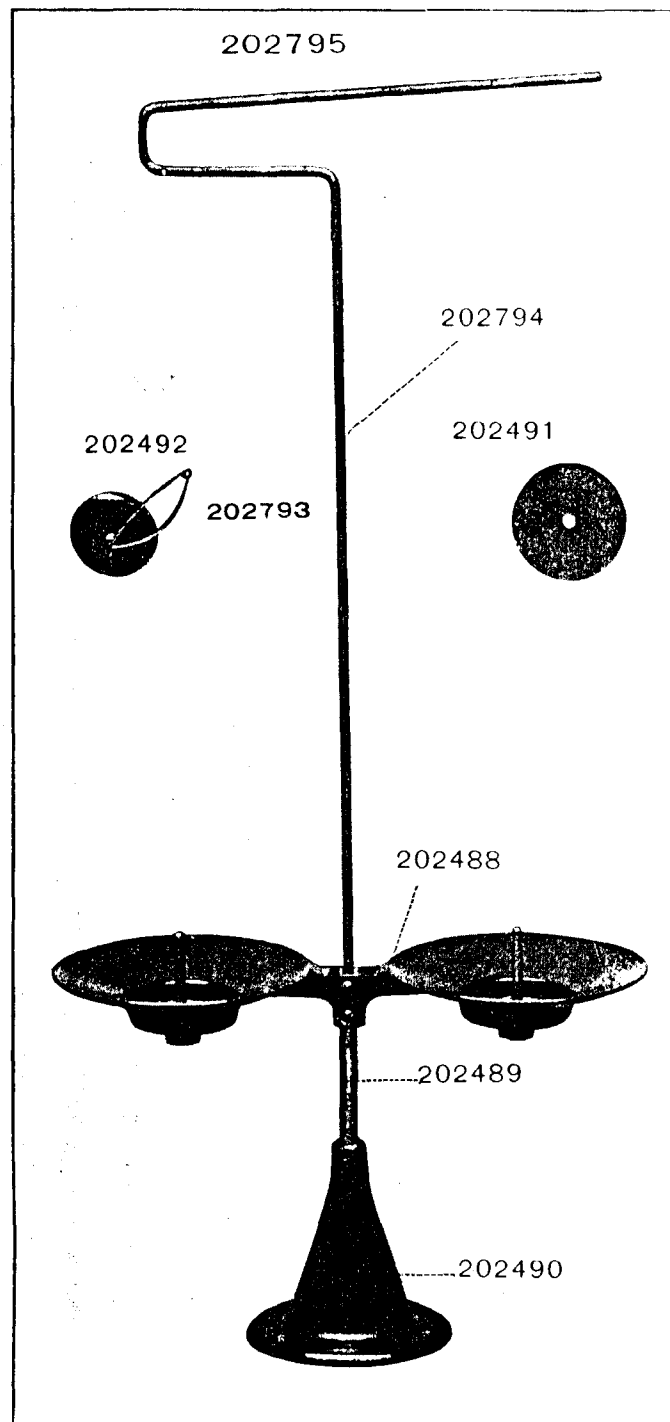 


PLATE 10416—ONE-FOURTH SIZE

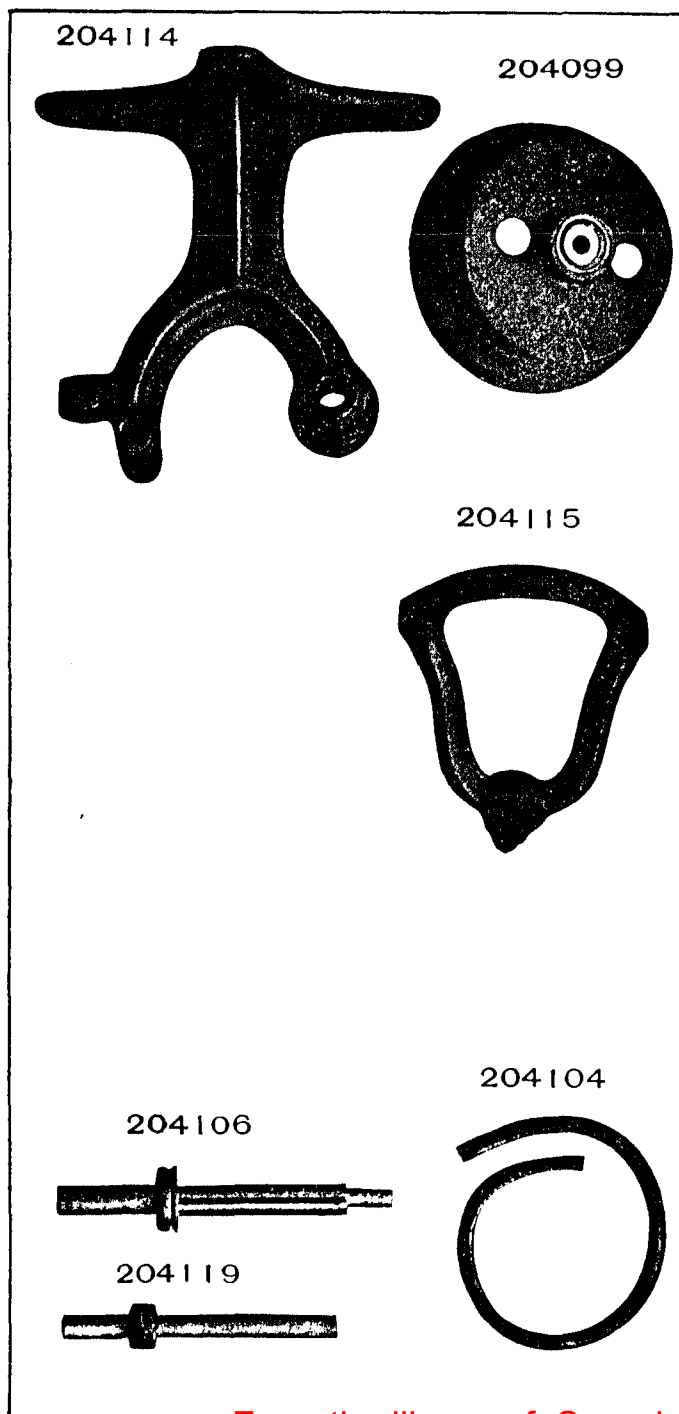 


PLATE 10776—ONE-HALF SIZE

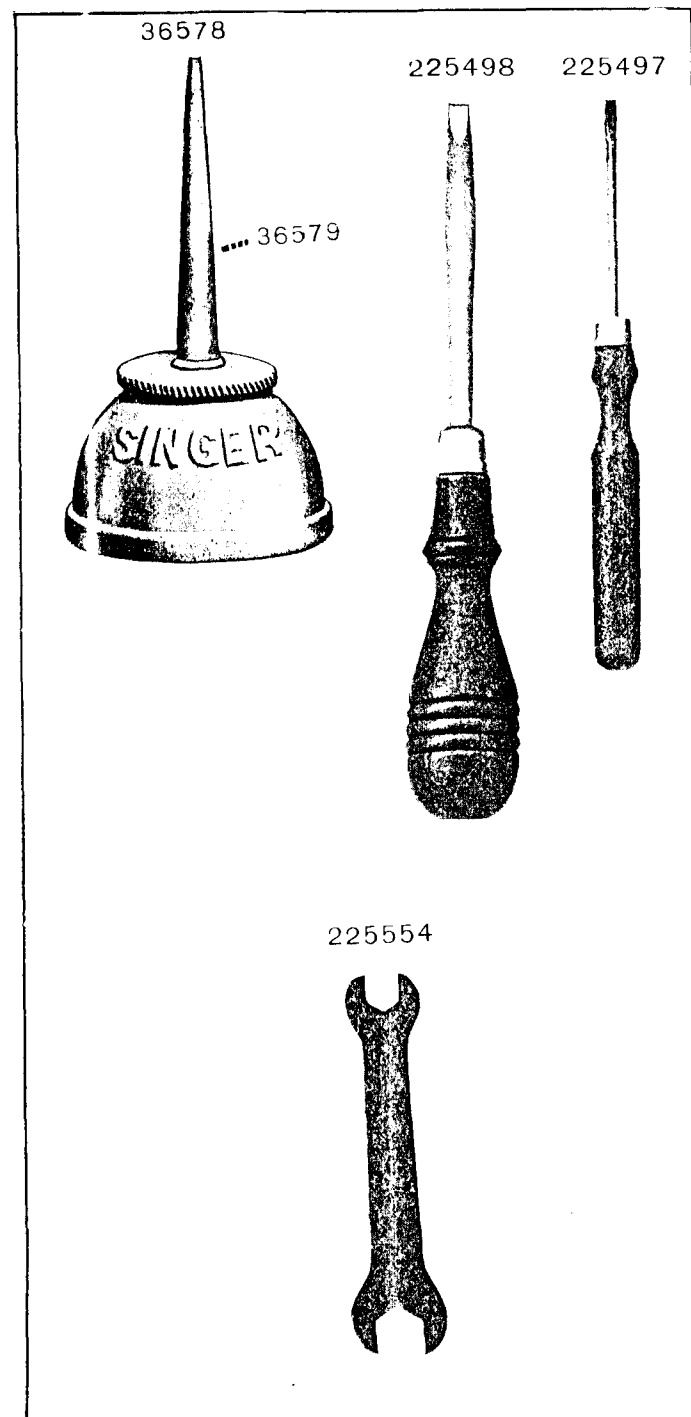 


PLATE 11157 ONE-HALF SIZE

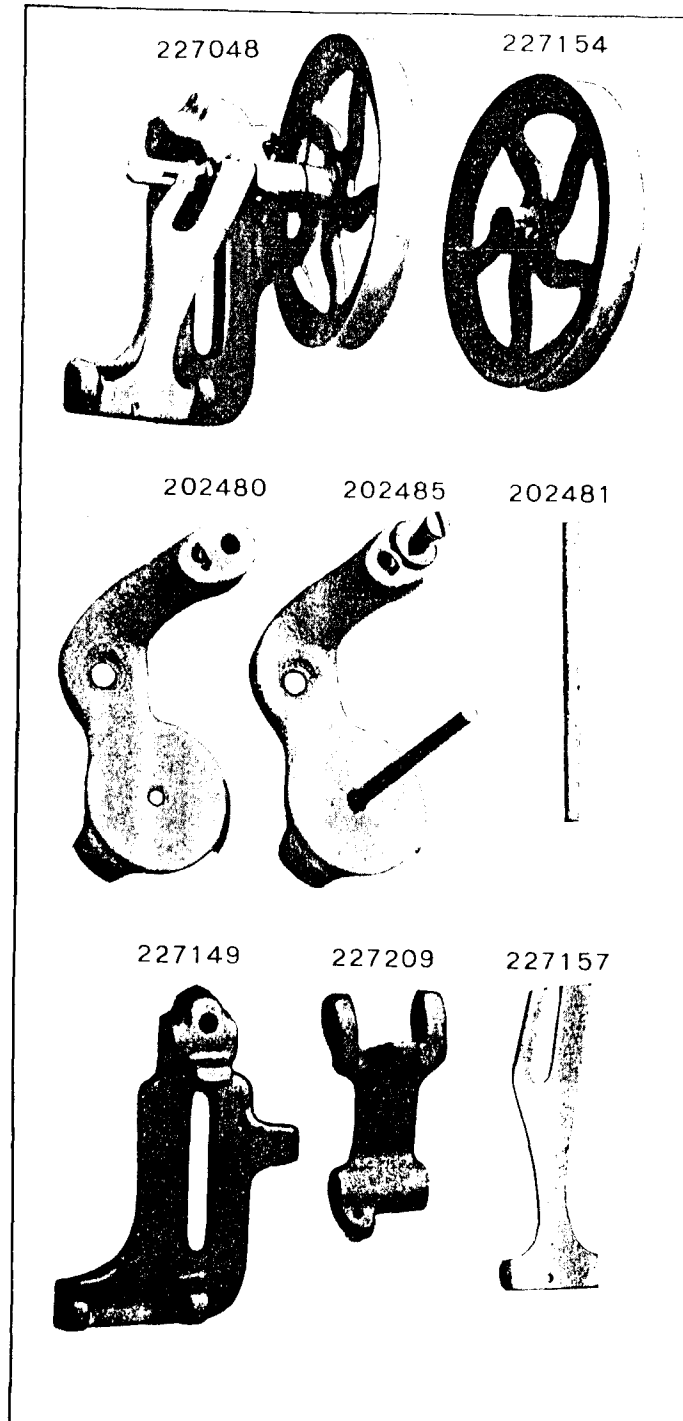 


PLATE 12321-FULL SIZE

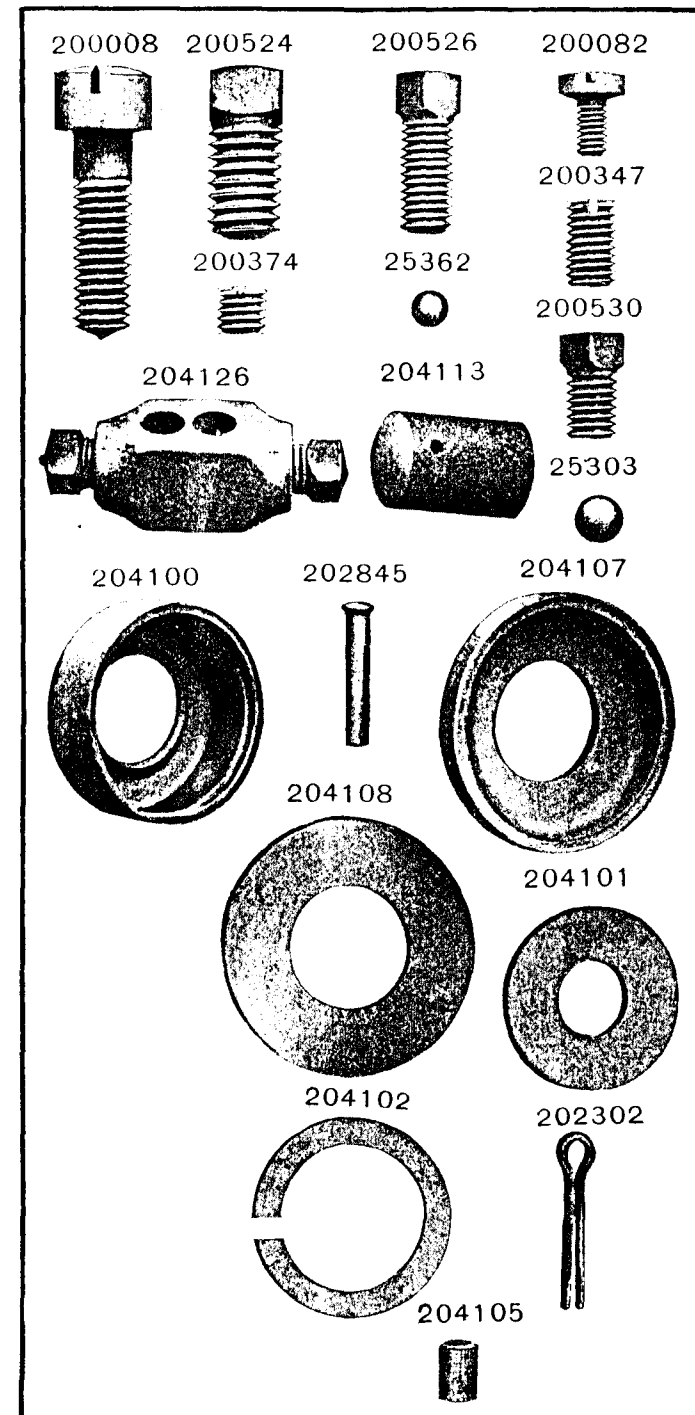 


PLATE 12322—FULL SIZE

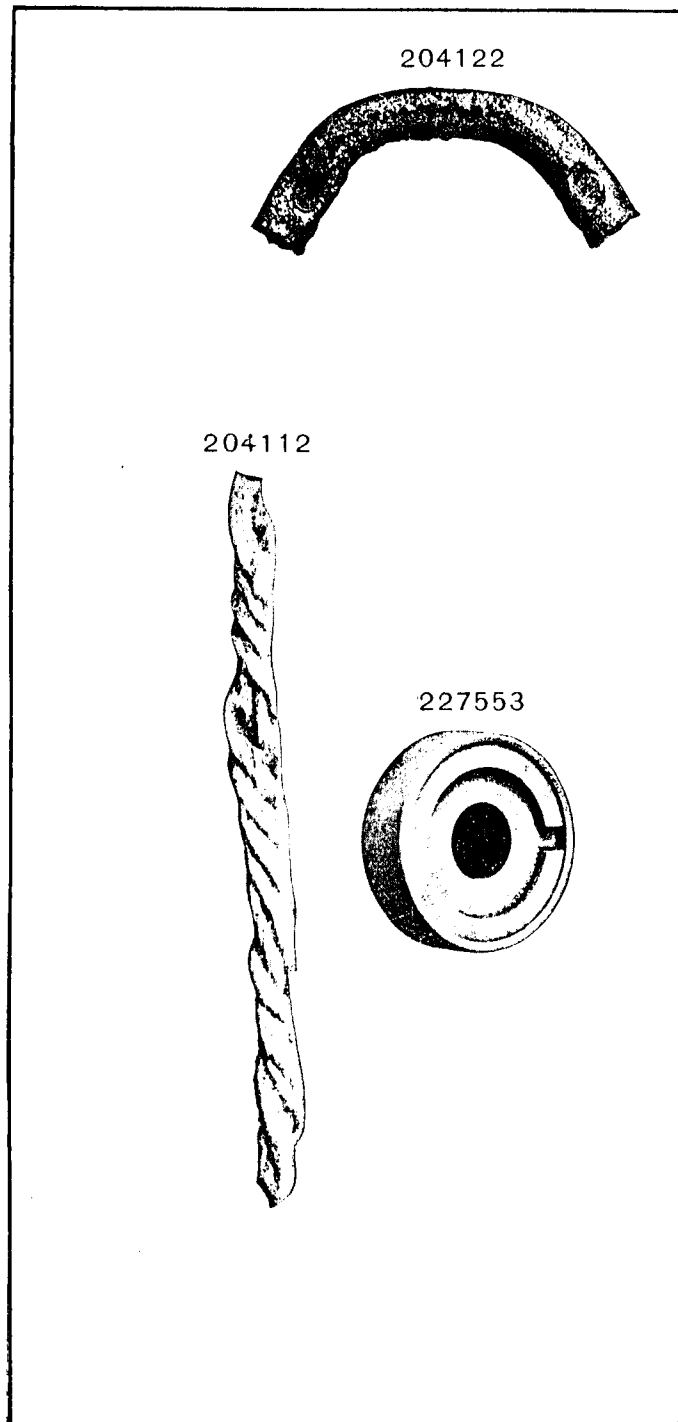 


PLATE 12381—FULL SIZE

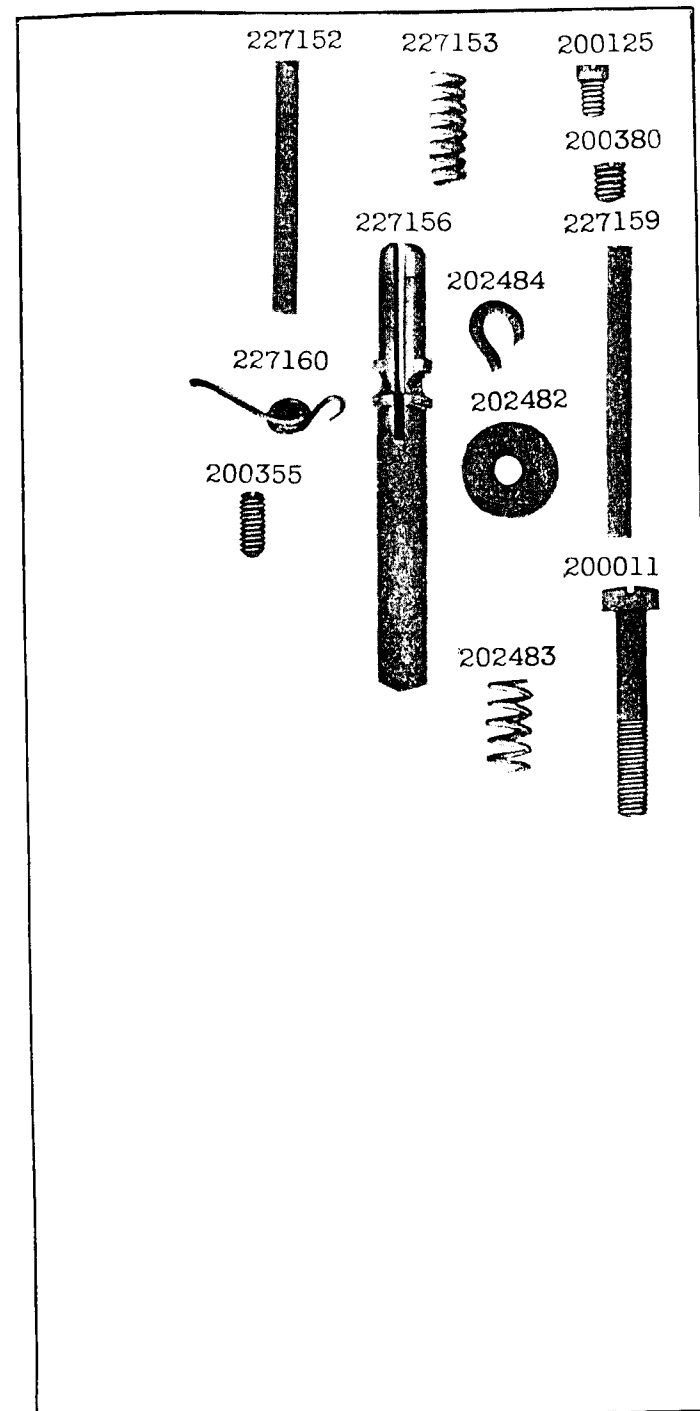 


PLATE 12601-ONE-HALF SIZE

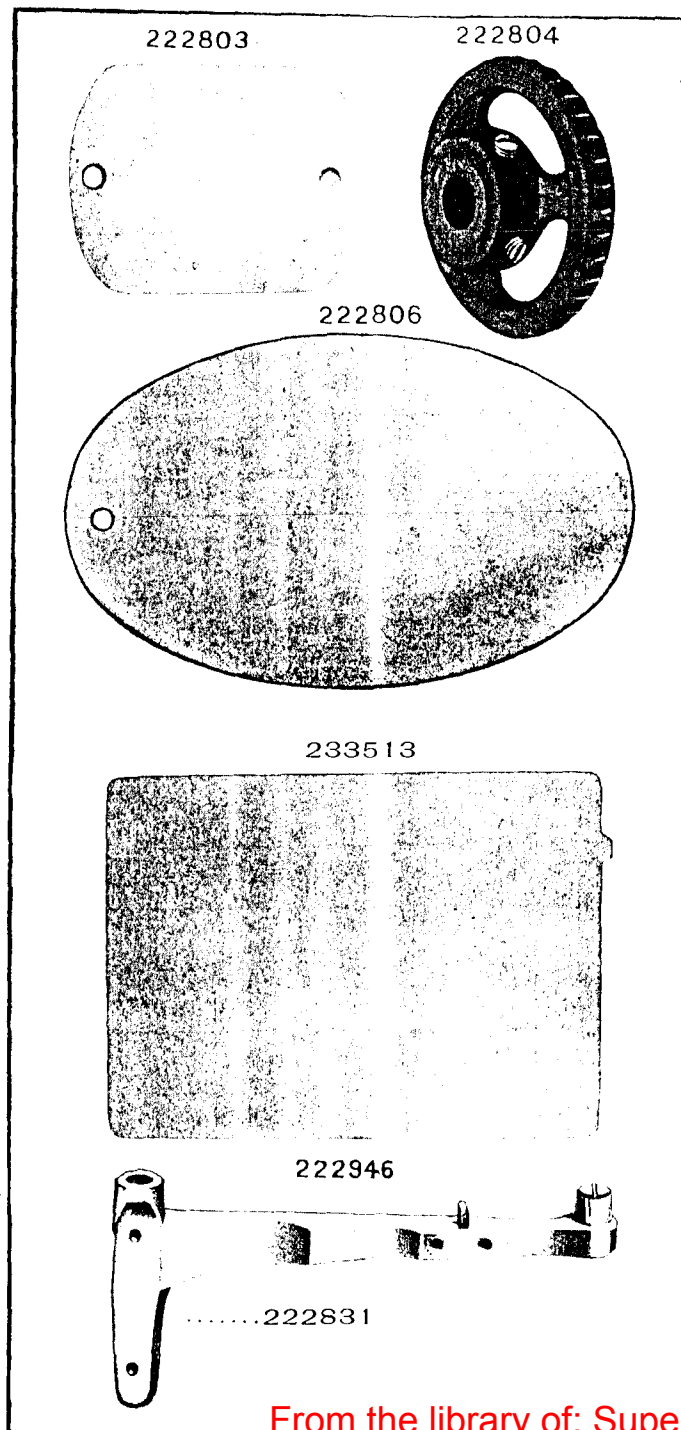 


PLATE 12602 -FULL SIZE

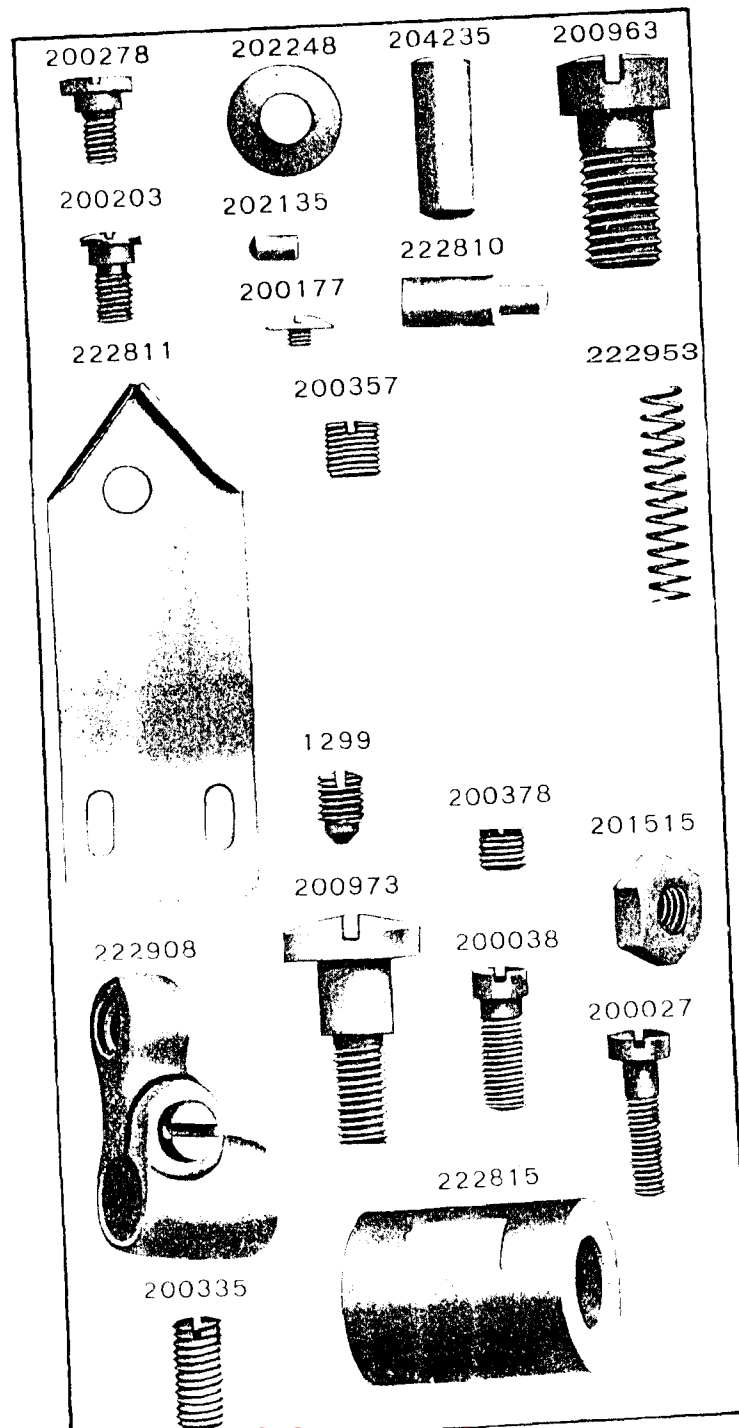 


PLATE 12603 - FULL SIZE

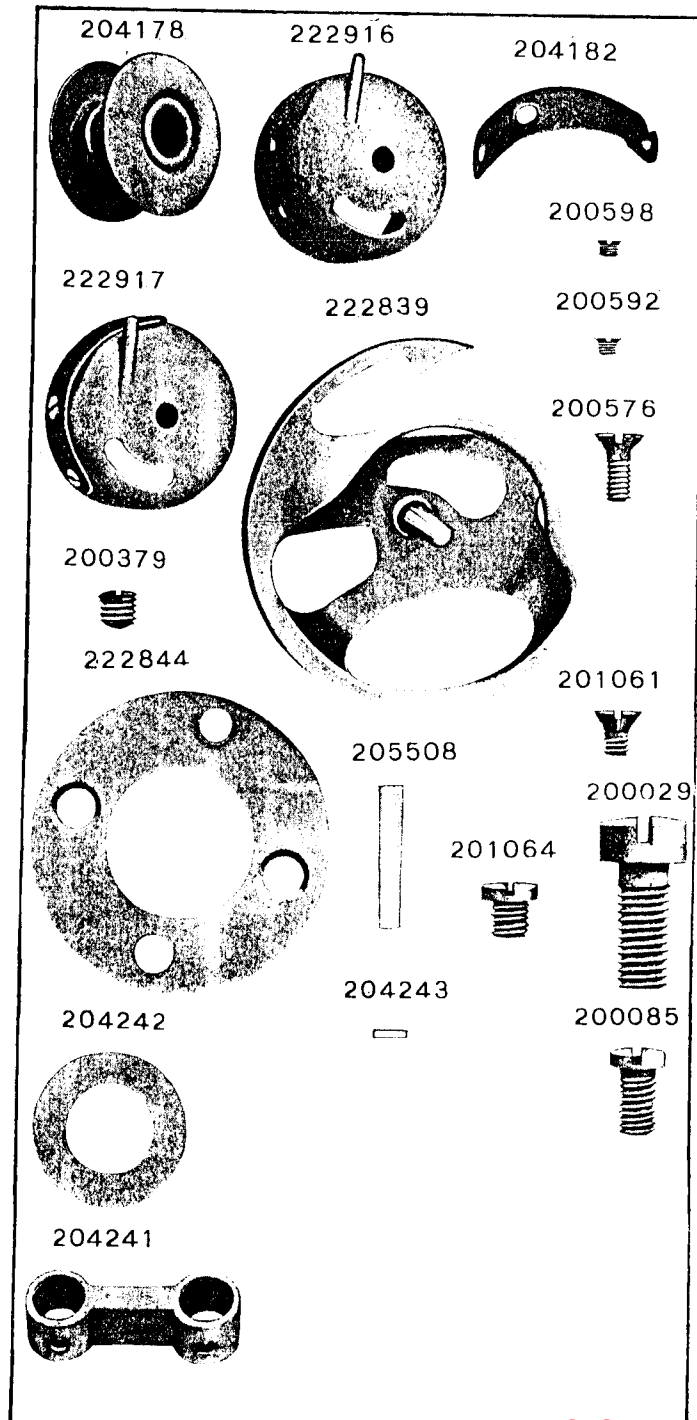 


PLATE 12604 - ONE-HALF SIZE

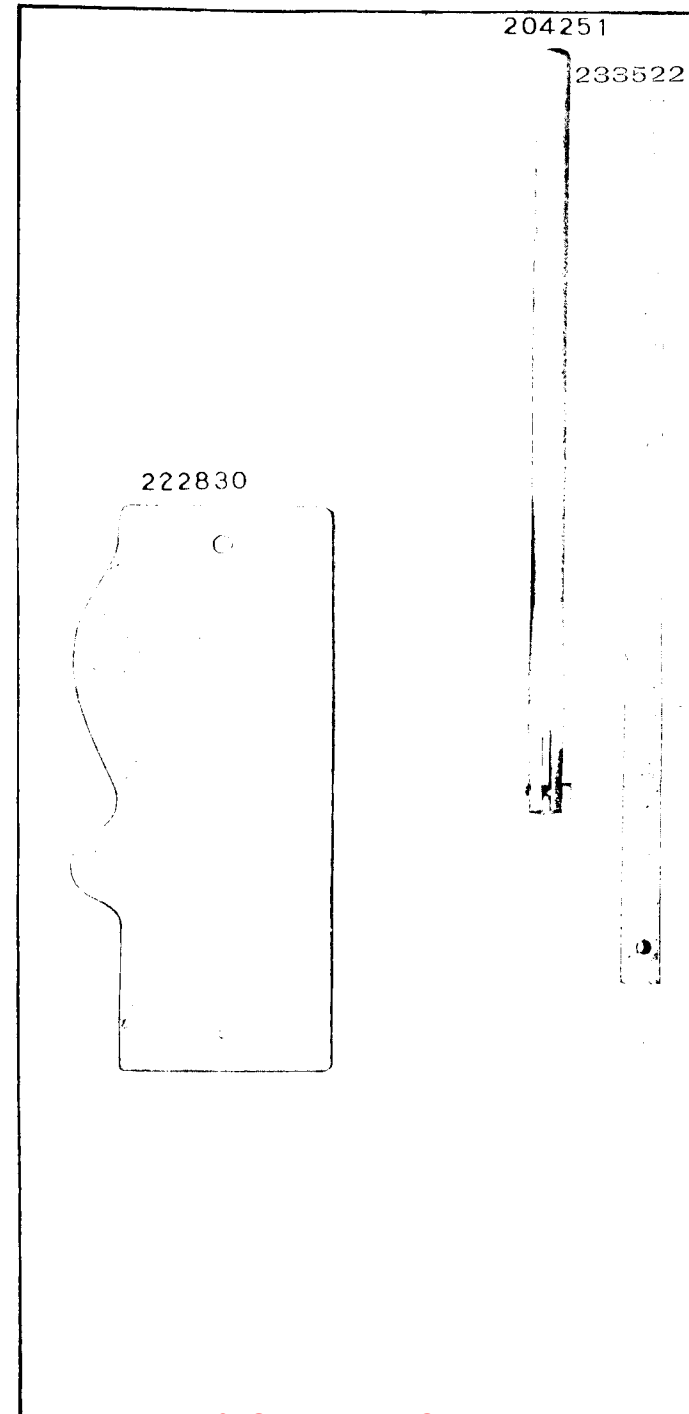 


PLATE 12605-FULL SIZE

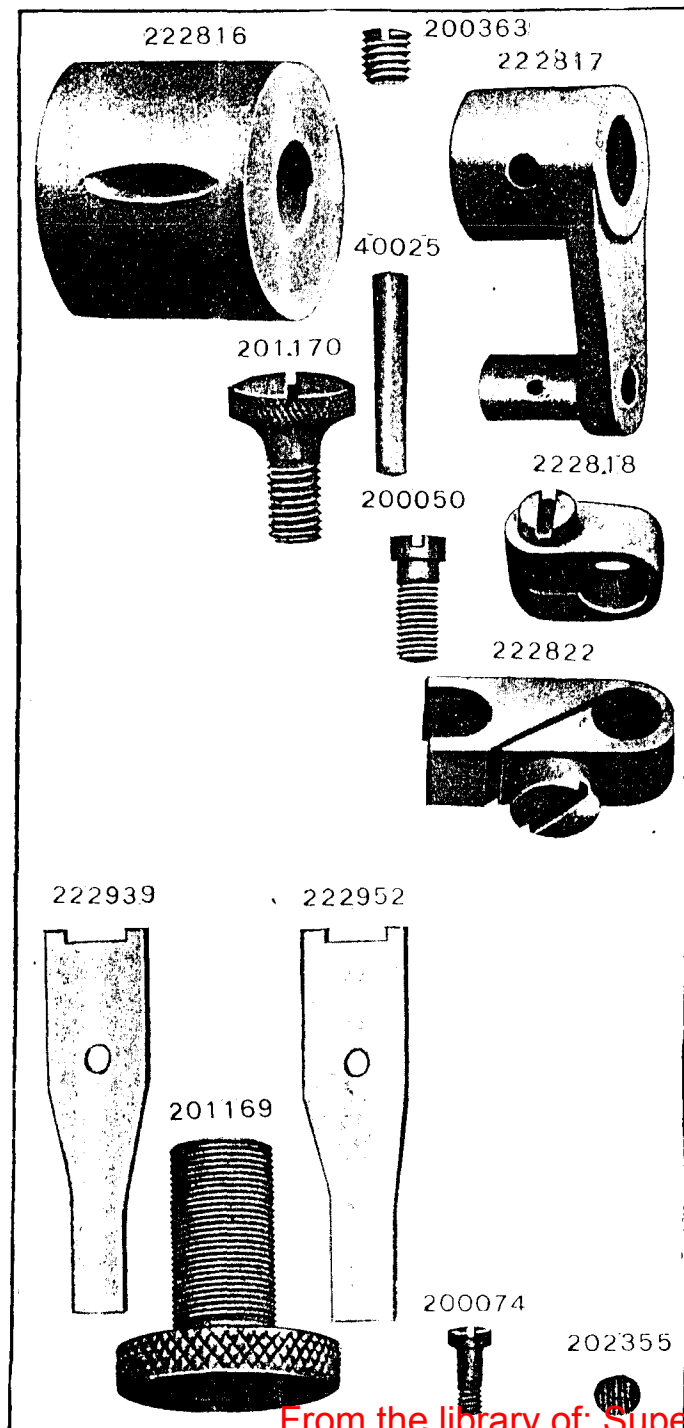 


PLATE 12606-FULL SIZE

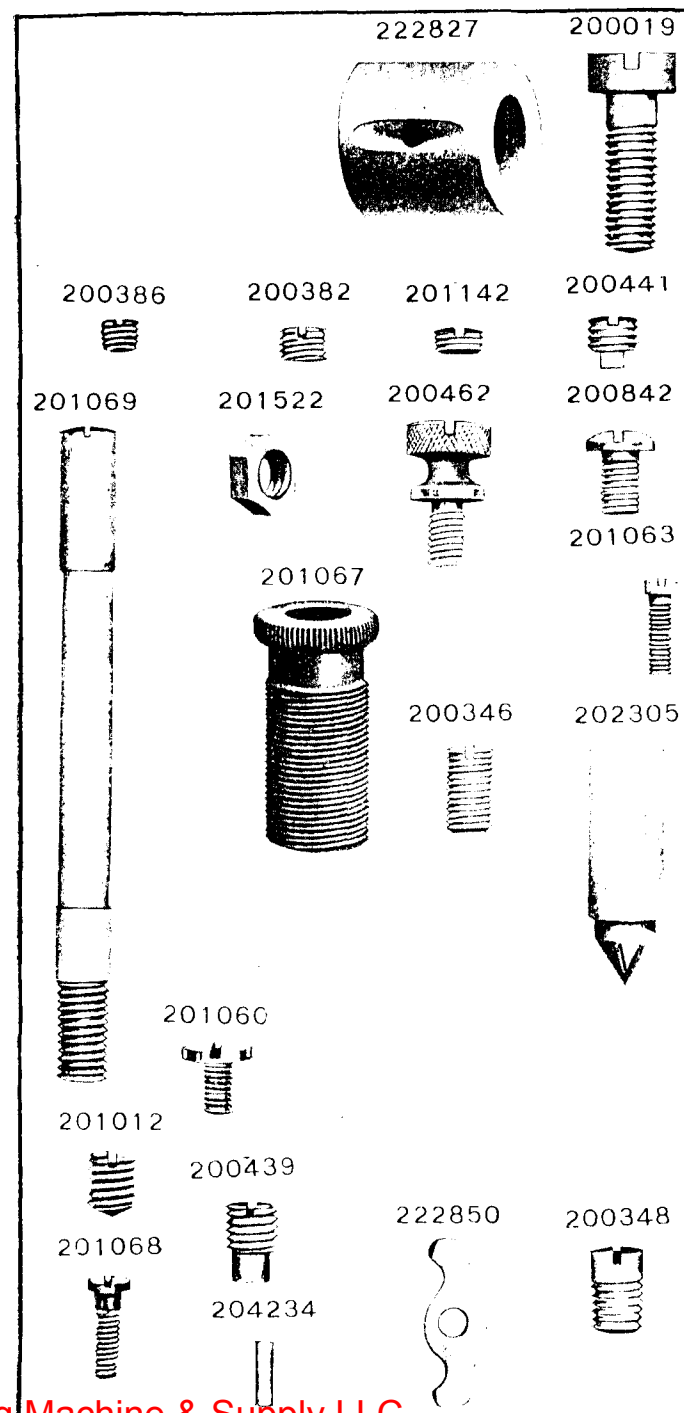 


PLATE 12607 -FULL SIZE

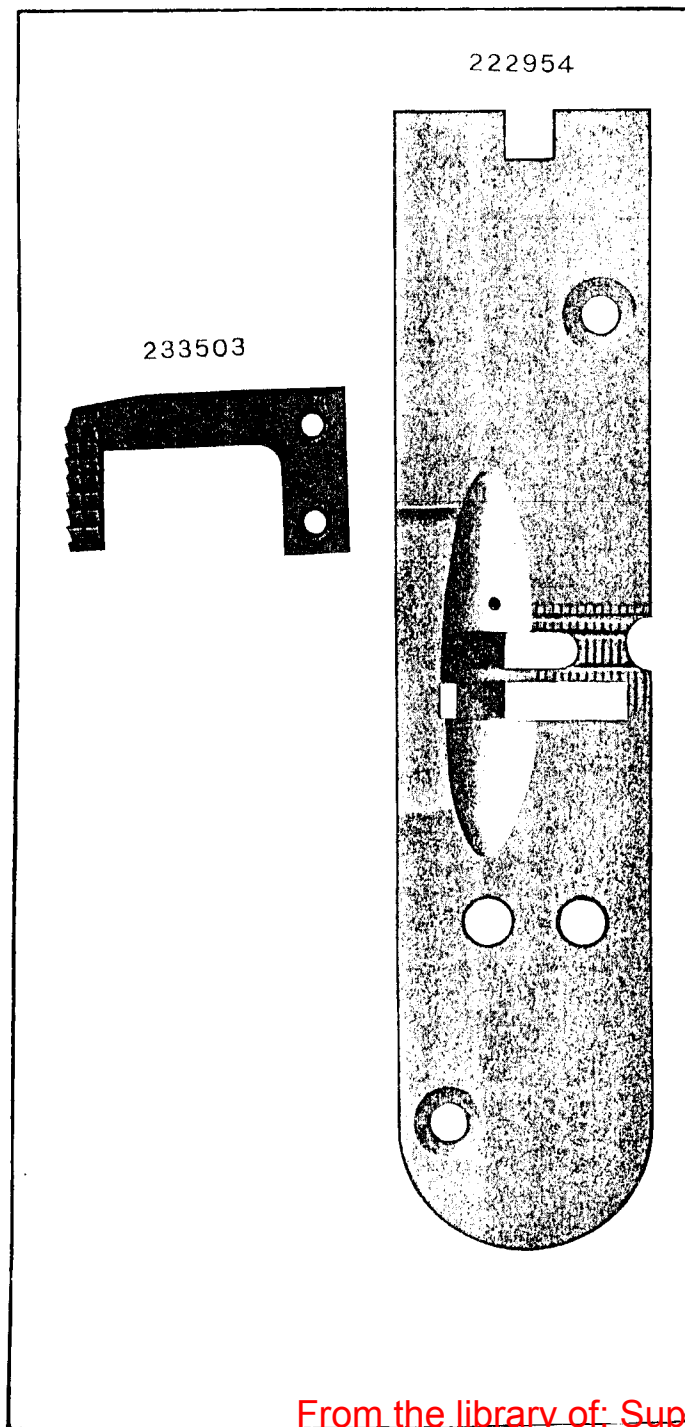 


PLATE 12608 -FULL SIZE

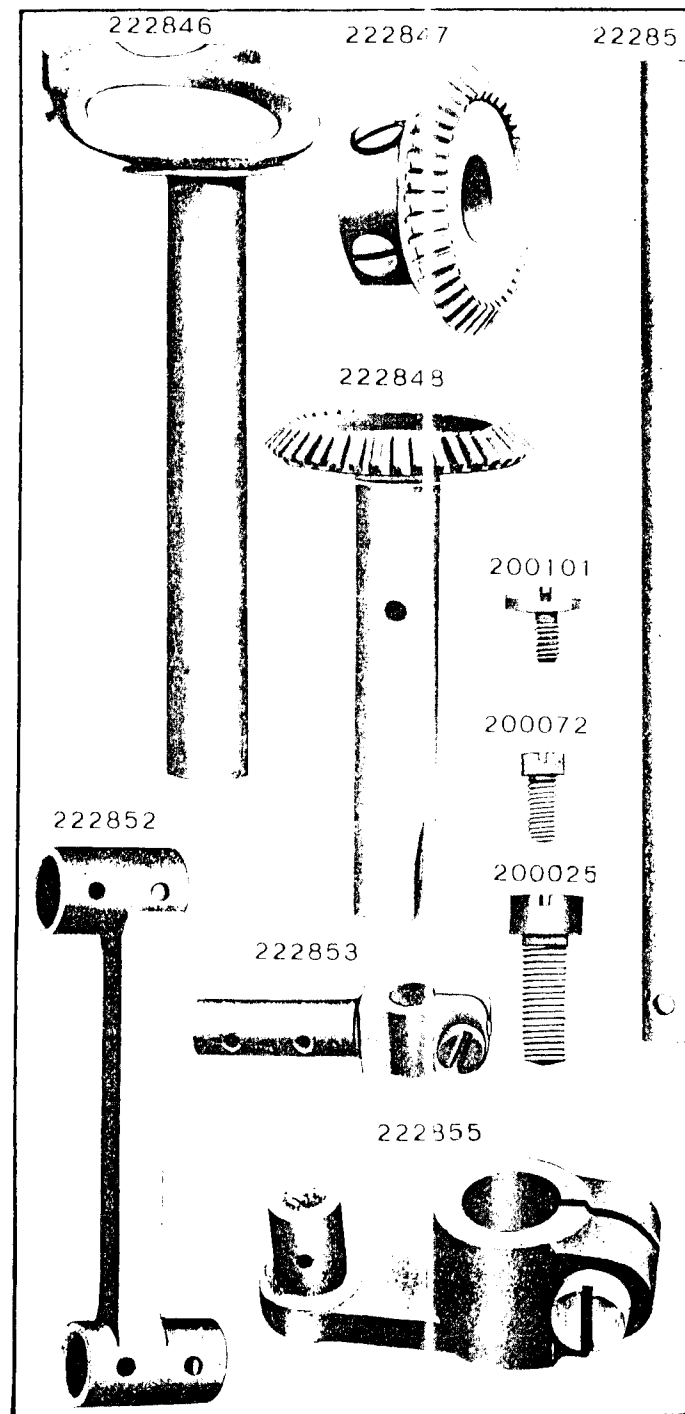 


PLATE 12609 -FULL SIZE

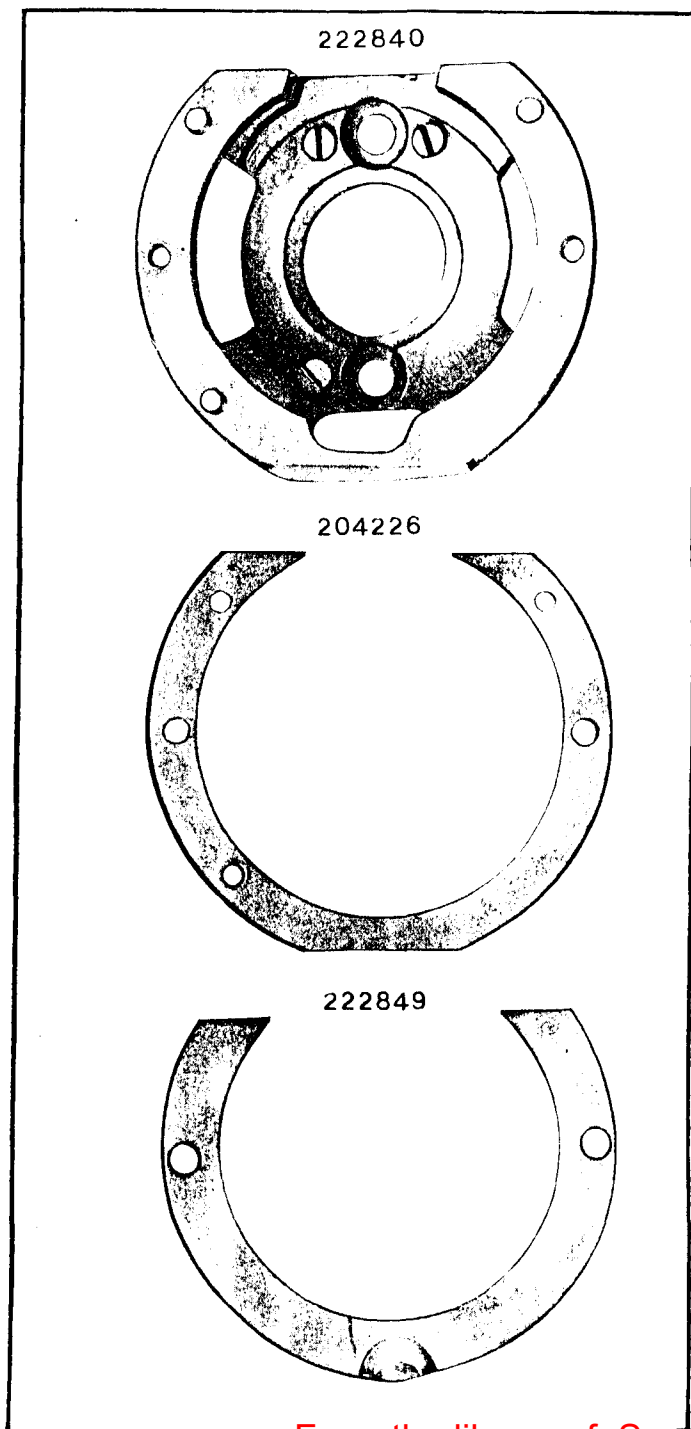 


PLATE 12610-ONE-HALF SIZE

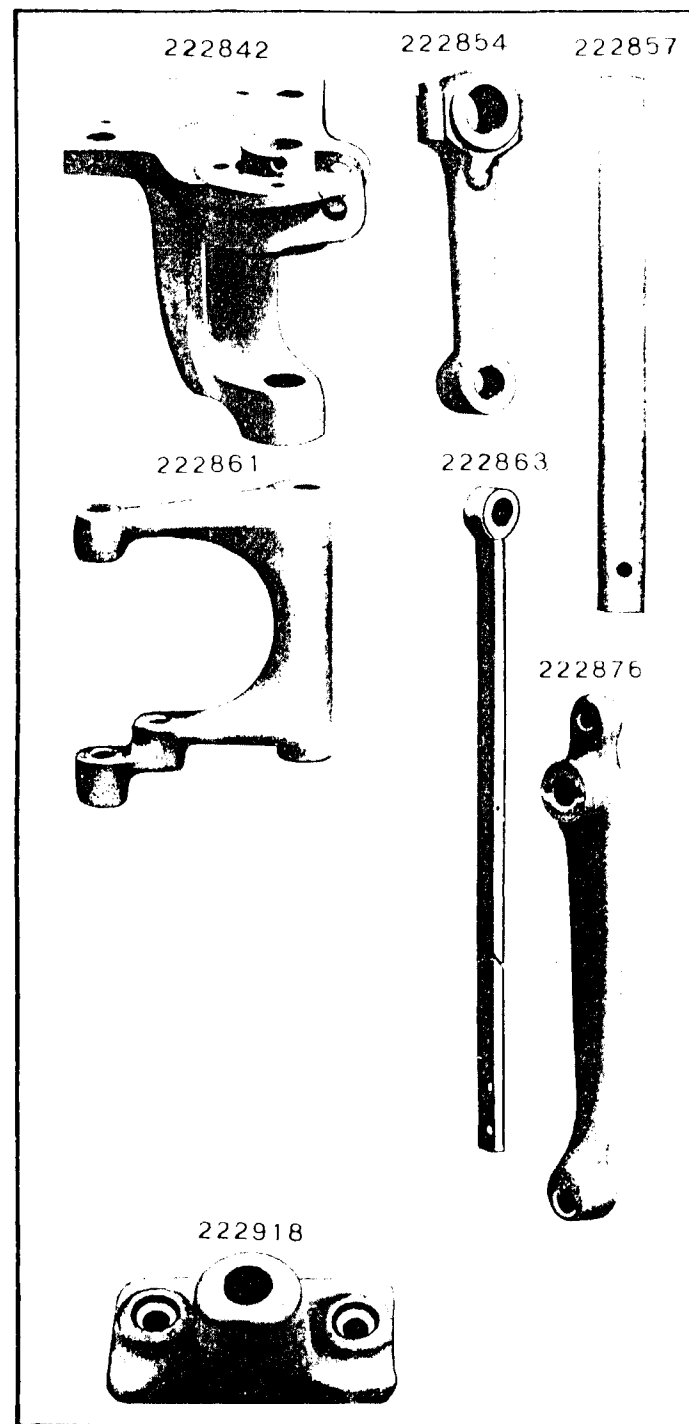 


PLATE 12611 -FULL SIZE

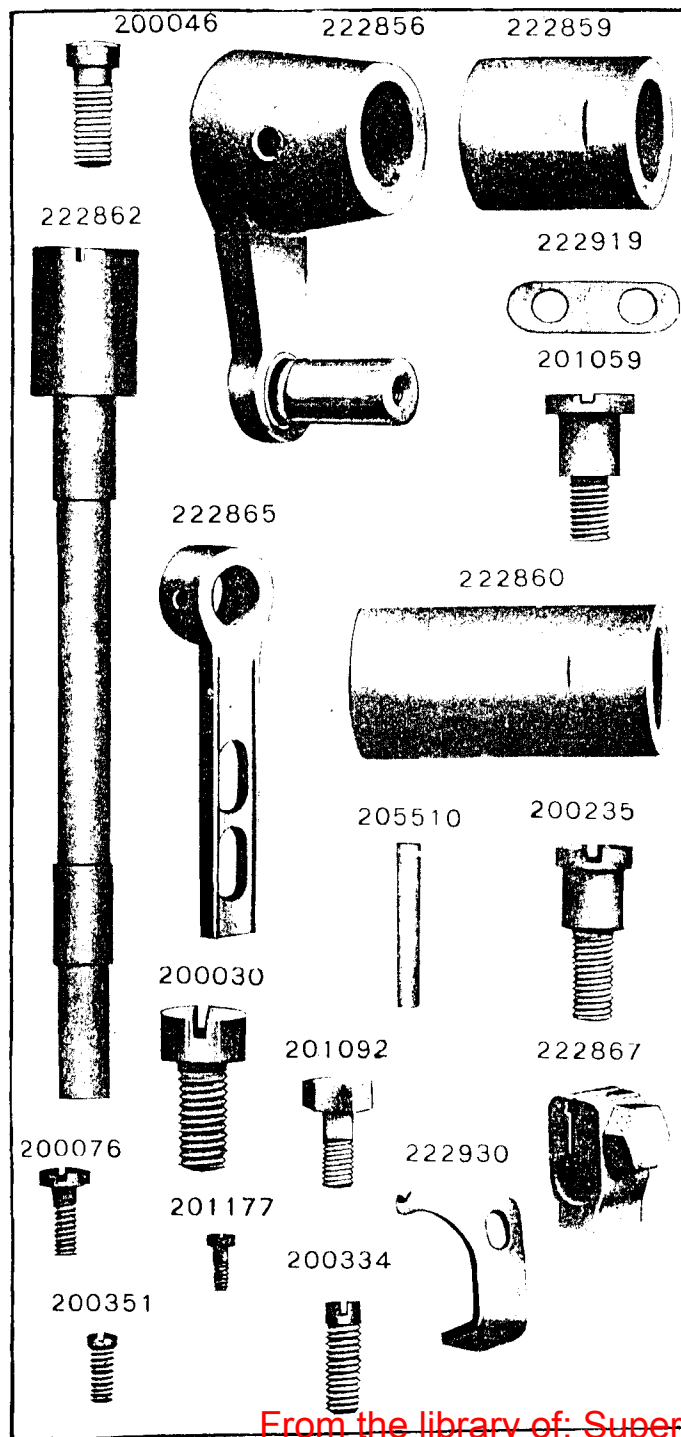 


PLATE 12612 -FULL SIZE

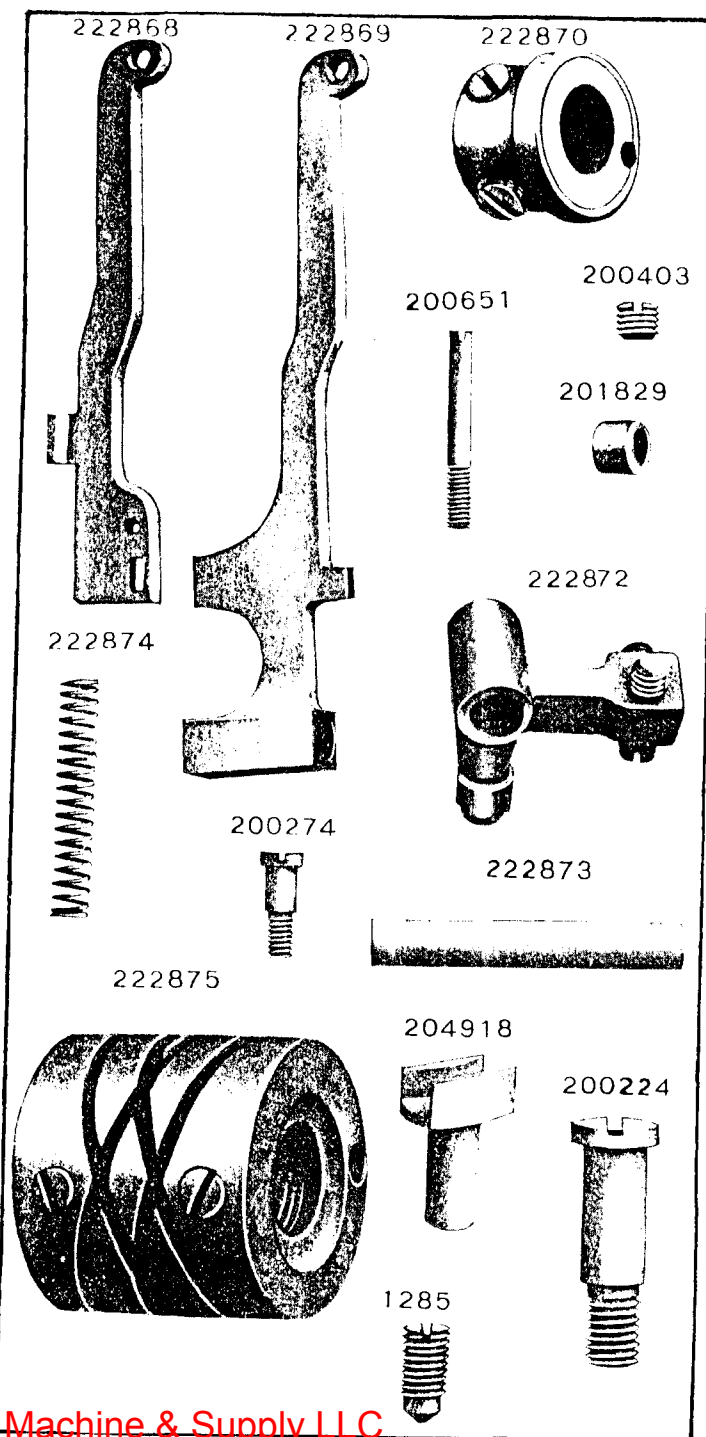 


PLATE 12613 -FULL SIZE

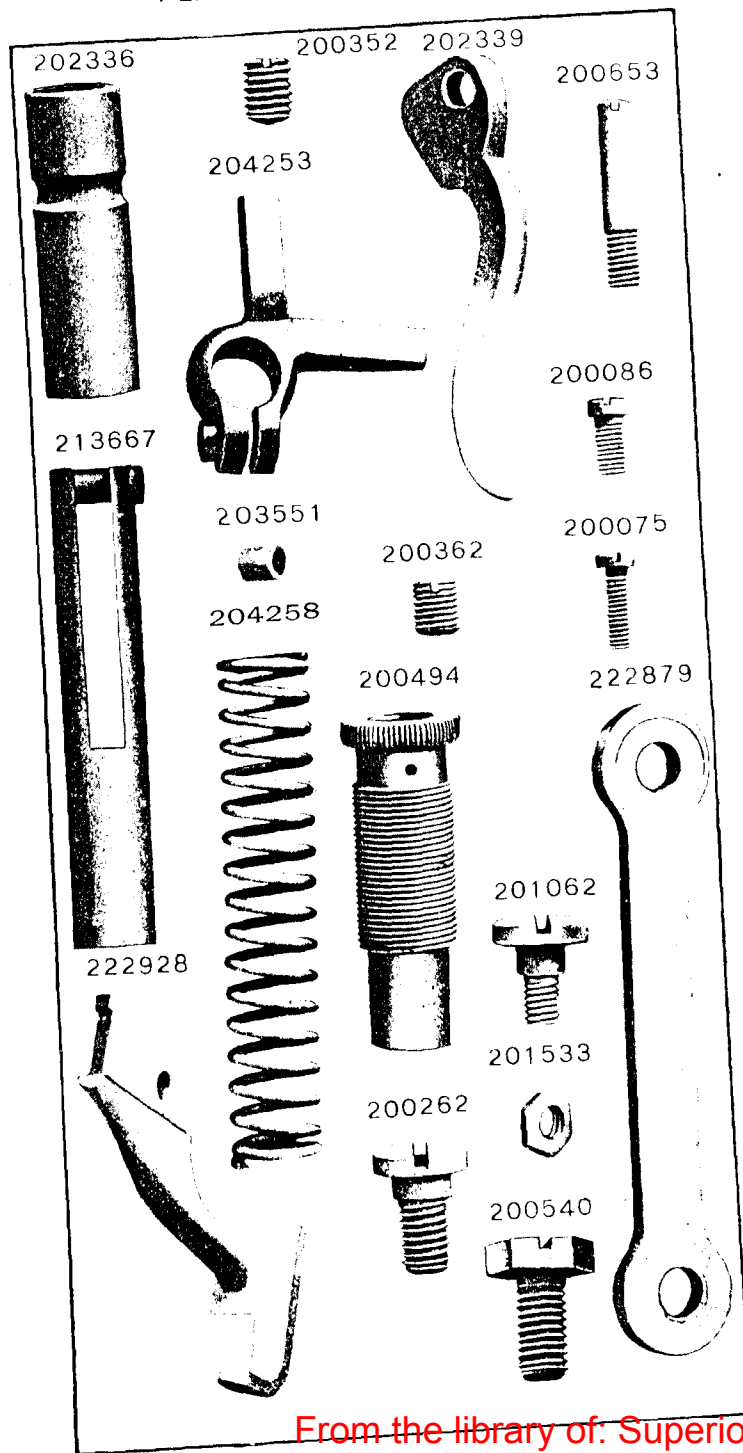 


PLATE 12614 -ONE-HALF SIZE

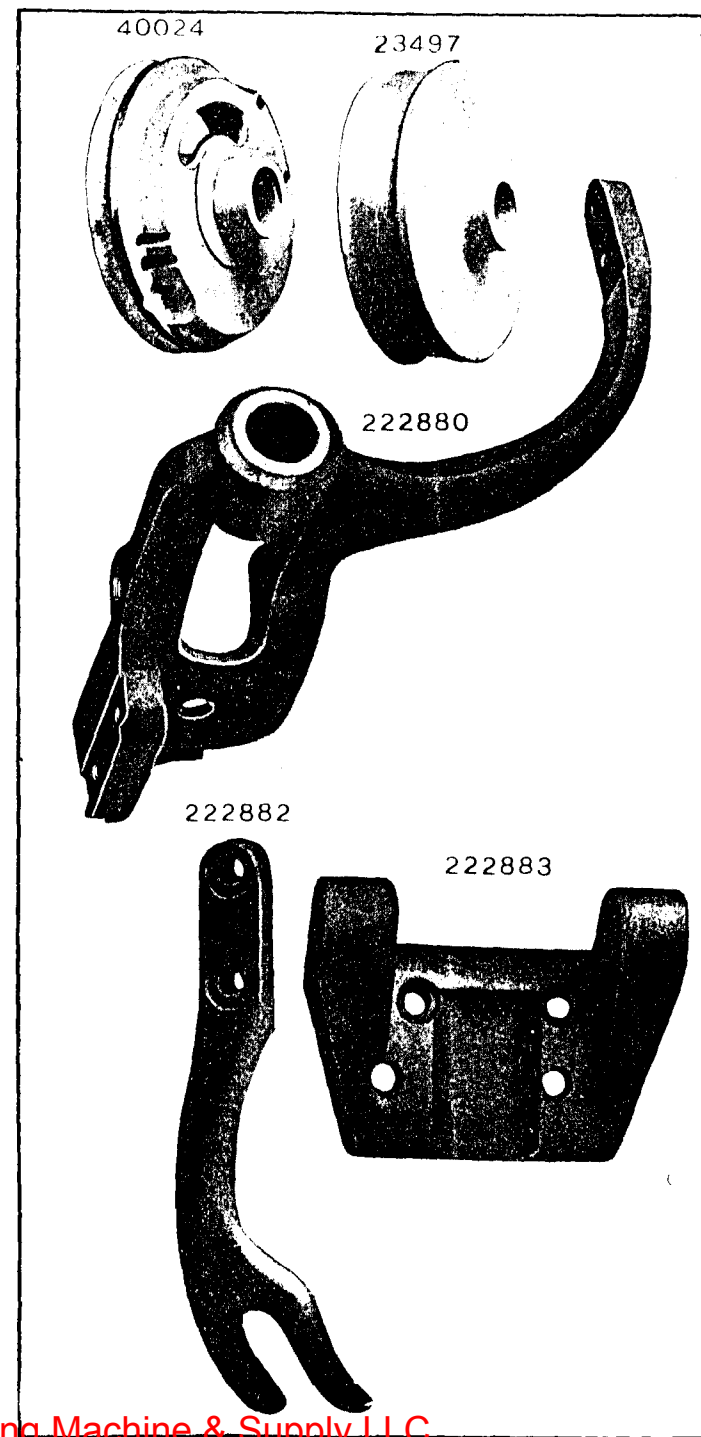 


PLATE 12615 -FULL SIZE

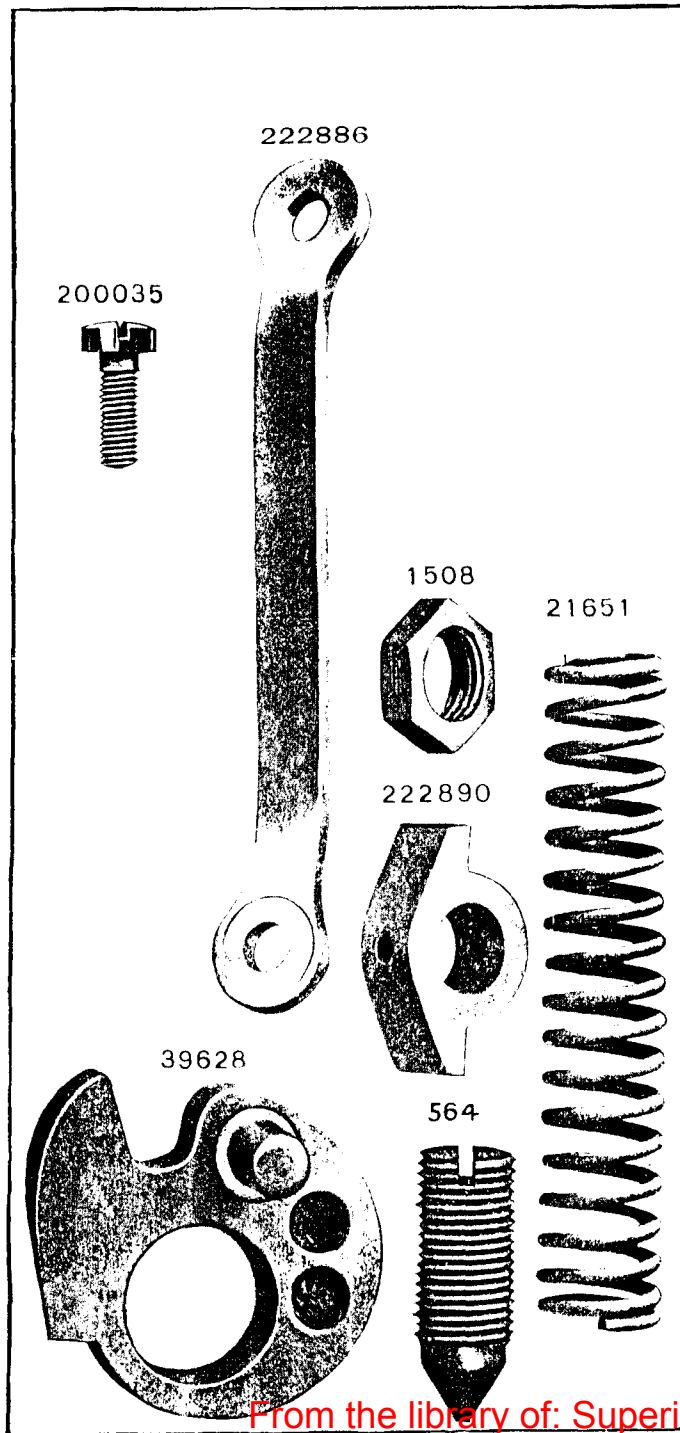 


PLATE 12616 -ONE-HALF SIZE

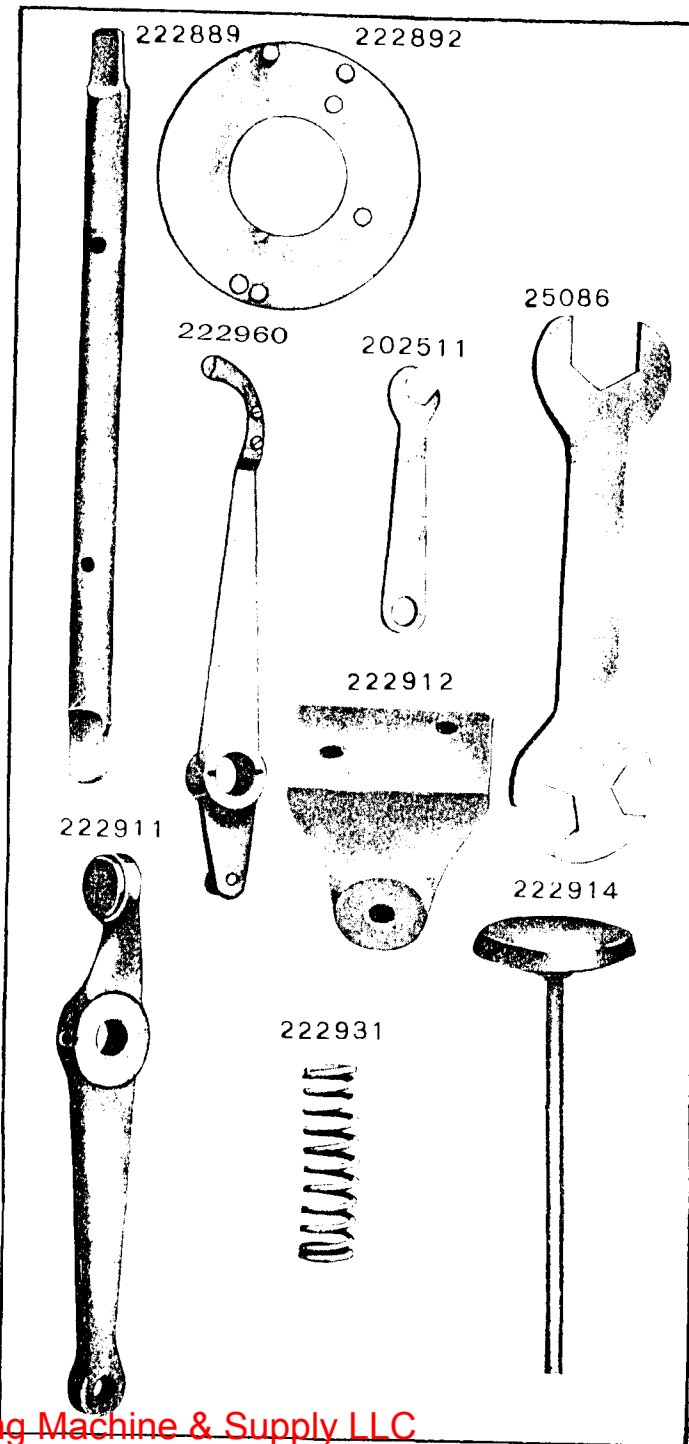 


PLATE 12617 -FULL SIZE

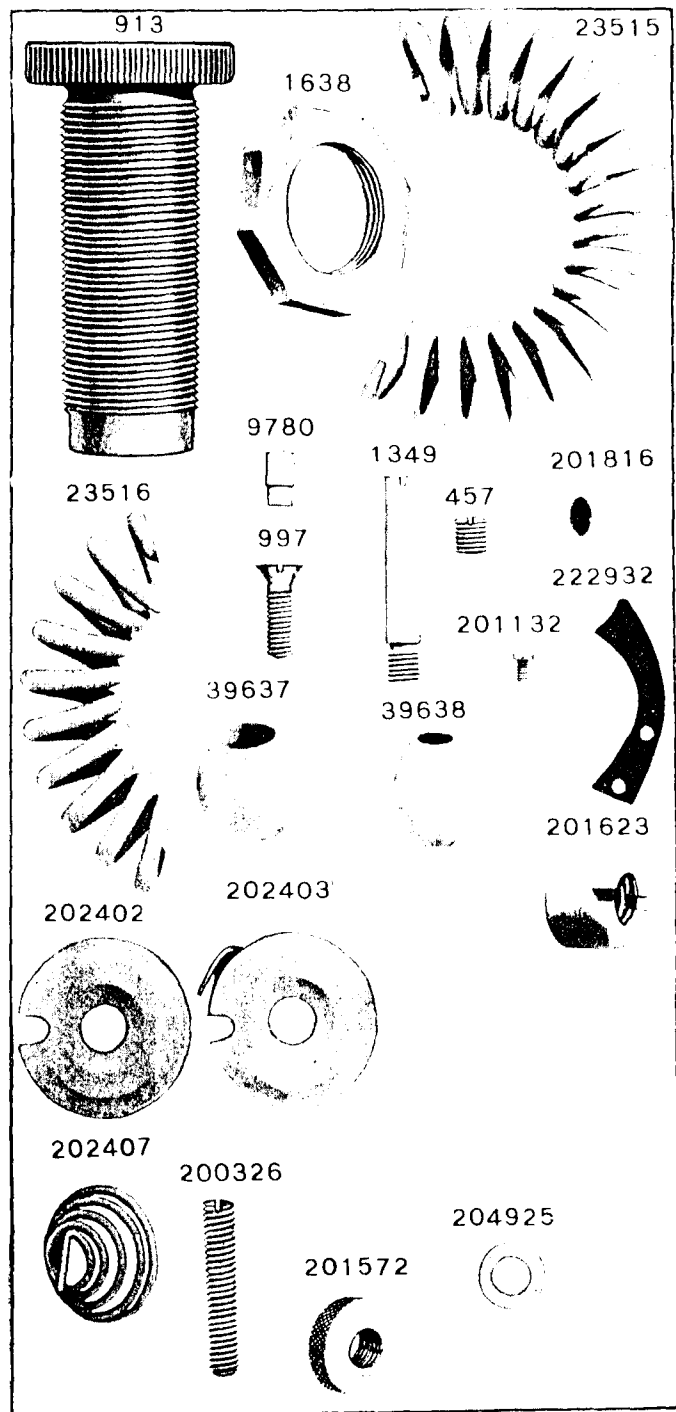 


PLATE 12618 -FULL SIZE

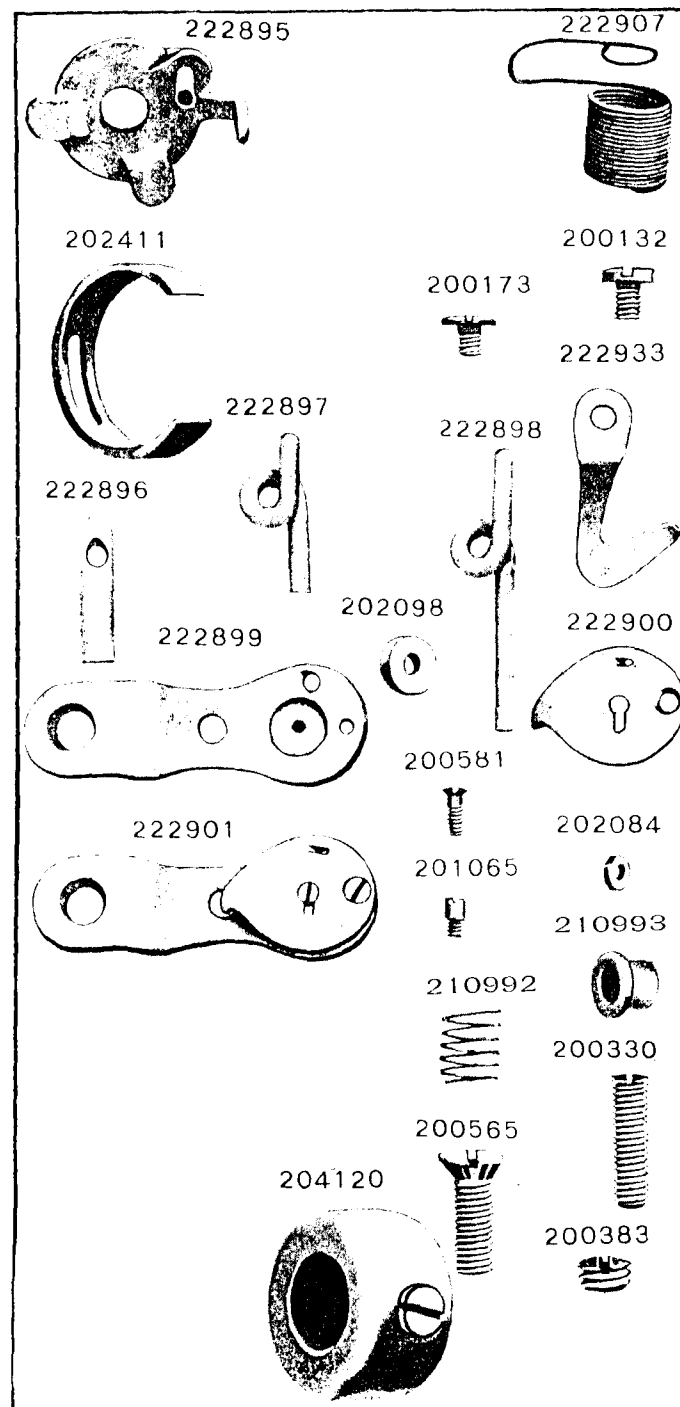 


PLATE 12619-ONE-FOURTH SIZE


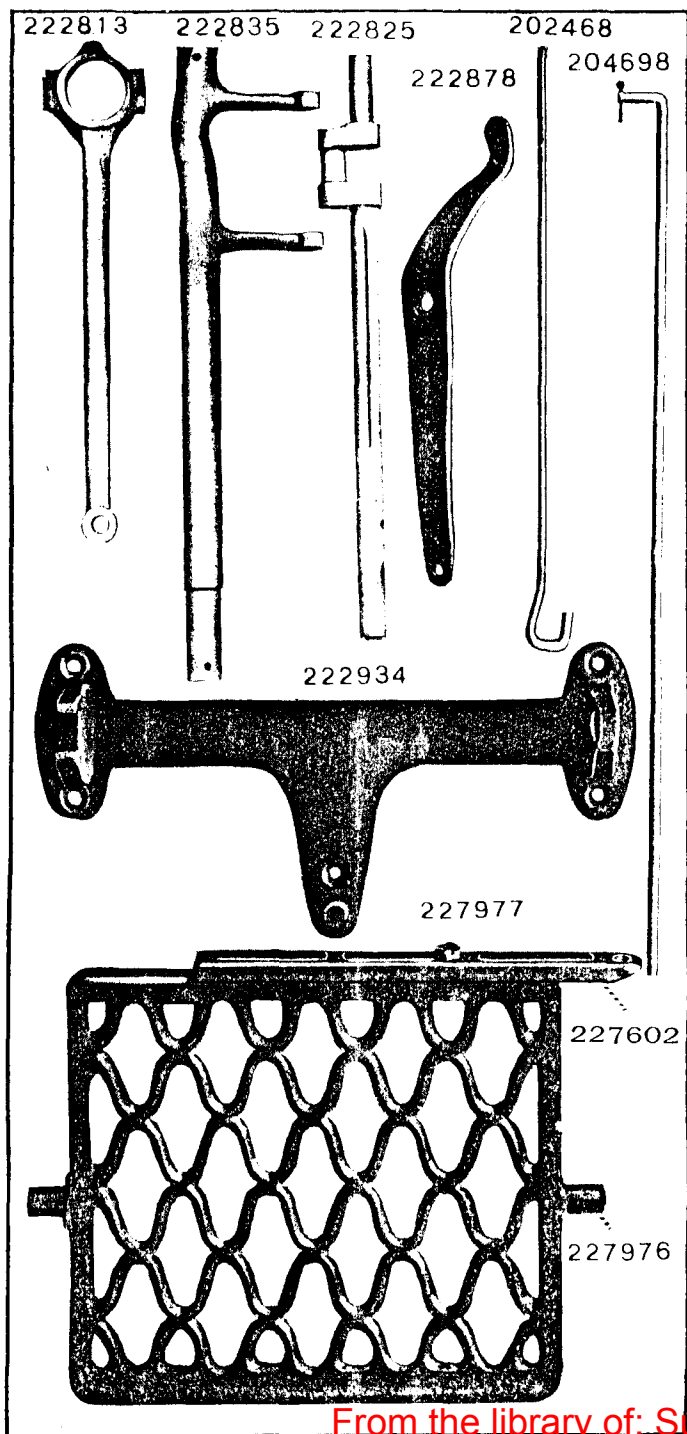 


PLATE 12620-ONE-FOURTH SIZE

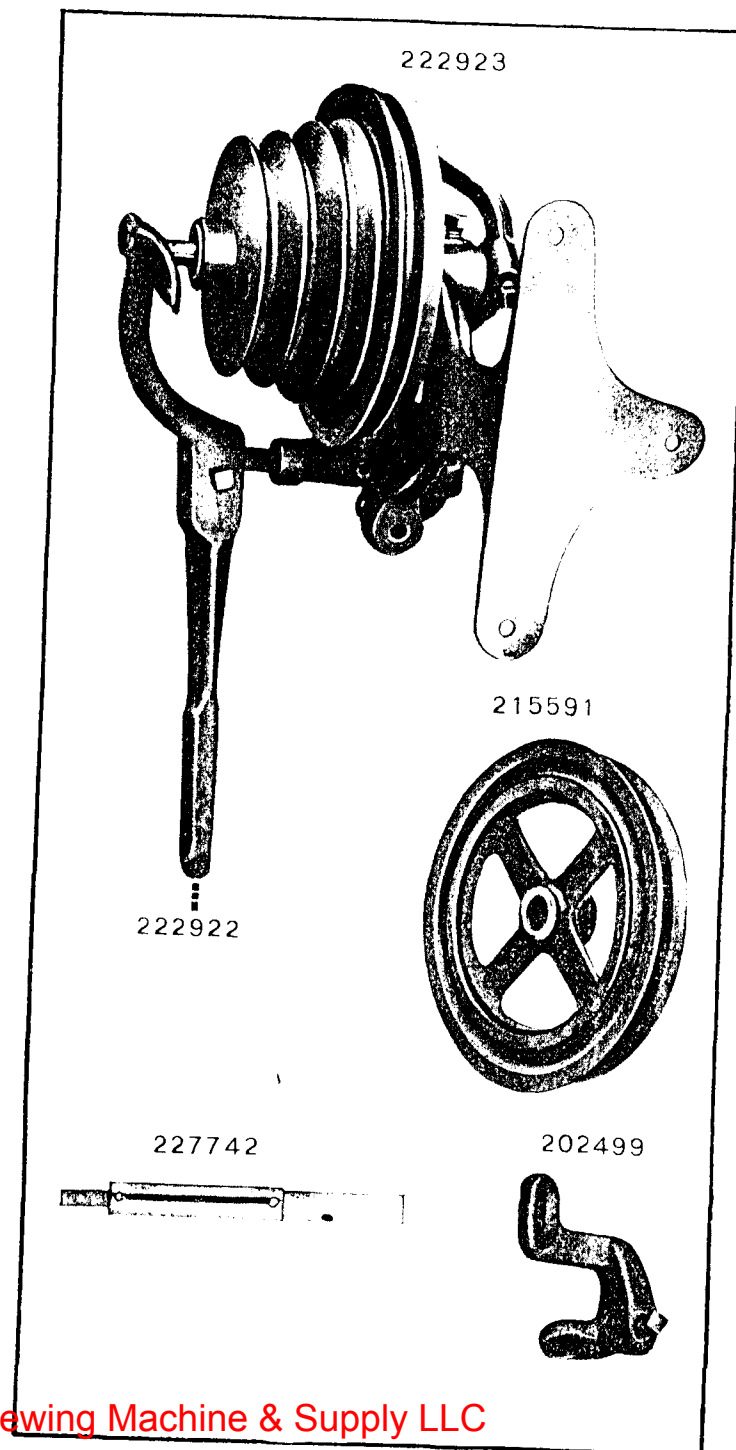 

203184

200729

200438

202629

233501

222938

233518

222937

233519

 
210750

From the library of: Super

222939



233502

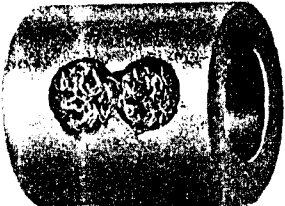

200913



 
201525



201523



233505

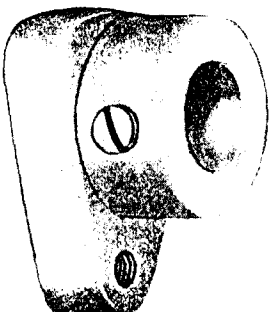

223648



200047



200098



201882



223664



200444



200064



201250



Multi-Access Ltd

PLATE 12623 -FULL SIZE

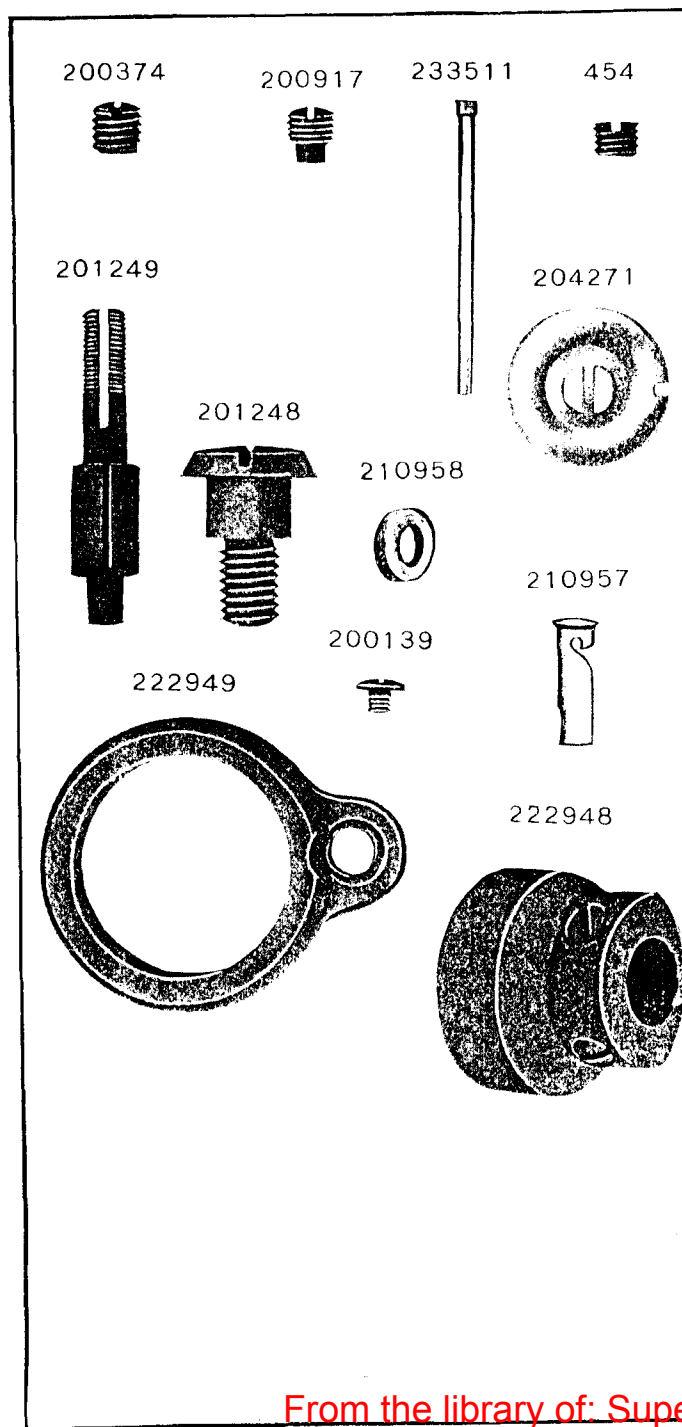 


PLATE 12624 -ONE-HALF SIZE

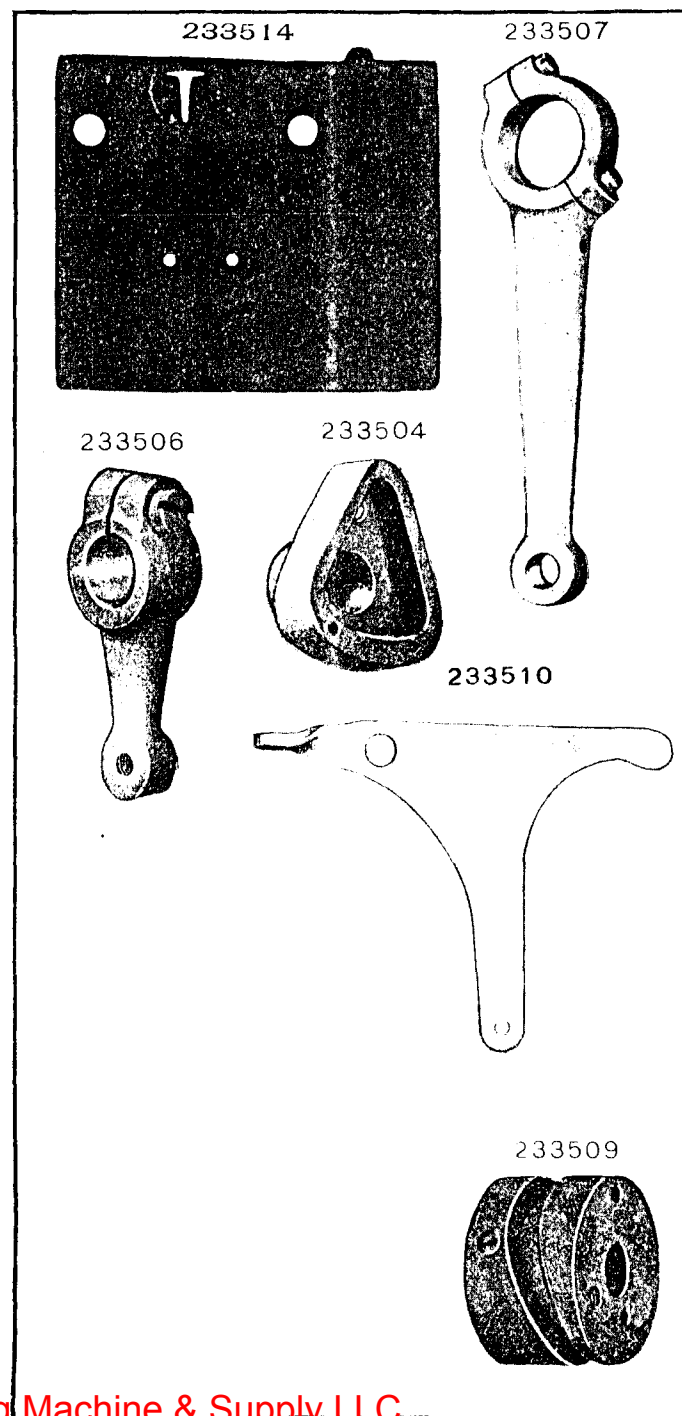 


PLATE 12625-FULL SIZE

 
222961



224385



2455

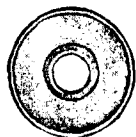

233515

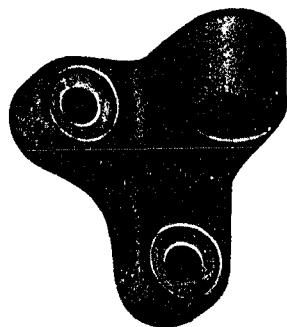 


PLATE 12626-ONE-HALF SIZE

233516 233517

