

# LIST OF PARTS



MACHINES  
Nos. 146-1 and 146-51

---

THE SINGER MANUFACTURING COMPANY

# INSTRUCTIONS FOR OILING

---

Apply oil to all oil holes, oil tubes and ball oilers often enough to keep the machine well lubricated. The ball oilers prevent dust from clogging the oil tube which retains the wicking for lubricating the rotary shaft crank bearing, and care must be taken to see that the ball oilers return to a closed position after oiling.

Use either Singer "OIL FOR HIGH SPEED SEWING MACHINES (Cloth and Leather)" for general use, or "STAINLESS OIL FOR HIGH SPEED SEWING MACHINES" where a stainless oil is desired.

Copyright, U. S. A., 1929, 1933 and 1938

by The Singer Manufacturing Co.

All Rights Reserved for all Countries

## INDEX

---

	Page
Accessories.....	22
Machine No. 146-1.....	5
Machine No. 146-51.....	13
Numerical List of Parts.....	25
Obsolete Parts.....	23
Thread Unwinder.....	22



# INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style or finish only, as follows:

- A-Hardened, Polished, Nickel Plated and Buffed
  - B-Polished, Nickel Plated and Buffed
  - C-Hardened Only
  - D-Polished Only
  - E-Soft, Not Polished
  - F-Hardened and Polished
  - F.J-Hardened, Polished and Nickel Plated
  - G-Bright Rumbled and Nickel Plated
  - H-Blued
  - J-Nickel Plated Only
  - K-Hardened and Nickel Plated
  - L-Brass Plated
  - M-Oxidized
  - N-Japanned, Dull
  - P-Japanned, Bright
  - R-Merlized
  - S-Cadmium Plating
  - T-Copper Plated
  - T.A-Hardened, Polished, Copper and Nickel Plated and Buffed
  - T.B-Copper and Nickel Plated and Polished
  - T.J-Copper and Nickel Plated Only
  - T.K-Hardened, Copper and Nickel Plated
  - T.L-Copper and Brass Plated
  - T.M-Copper Plated and Oxidized
  - U-Zinc Plated
  - V-Silver Plated
  - W-Polished and Nickel Plated
  - X-Black Oxide, for Iron and Steel
  - X.C-Hardened and Black Oxide, for Iron or Steel
  - Y-Black Nickel Plated Only
  - Z-Chromium Plated
  - Z.A-Hardened, Polished, Nickel Plated, Buffed and Chromium Plated
  - Z.B-Polished, Nickel Plated, Buffed and Chromium Plated
  - Z.C-Hardened and Chromium Plated
  - Z.J-Nickel and Chromium Plated
- These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.
- In this series:
- 1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers
  - 1501 to 1800 and 51501 to 51800 are Nut Numbers
  - 1801 to 2000 and 51801 to 52000 are Roller Numbers
  - 2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (\*) are furnished only when



LIST OF PARTS COMPLETE  
FOR

MACHINE No. 146-1

(HEAD ONLY)

FOR CLOSING LIGHT AND MEDIUM BAGS AFTER  
THEY ARE FILLED. TWO-THREAD CHAIN STITCH.  
LIFT OF PRESSER FOOT 5/16 INCH.

No.	Plate	Name
*124170	-----	Arm, upper and lower (solid) with 15404 and two 15405.....
17669	9401	Arm Oil Tube, for intermediate bearing.
17670	9401	" " " for lower bearing.....
15783	-----	" " " for 11119.....
11119	9401	" " " 15783 with 52045 for oiling 49101.....
58030	9401	Arm Oil Tube with 52150 and 54897 for oiling 58033.....
54897	9401	Arm Oil Tube Oil Cup.....
52150	21516	" " " Packing (braided cotton)..
52045	9401	" " " " (wick).....
49156	9405	" Rock Shaft
49004	9401	" " " Bushing (intermediate)..
448C	9431	" " " " " Set Screw.....
49003	9401	Arm Rock Shaft Bushing (upper).....
446C	9431	" " " " " Set Screw
17671	9401	" " " Collar with two 443C....
443C	9401	" " " " Set Screw.....
49262	9402	" " " Crank (lower) with 50282E and 50457C.....
50282E	9402	Arm Rock Shaft Crank (lower) Position Screw.....
50457C	9402	Arm Rock Shaft Crank (lower) Set Screw.
49261	9402	" " " " (upper) with 50282E and 50457C.....
50282E	9402	Arm Rock Shaft Crank (upper) Position Screw.....

## PARTS FOR MACHINE No. 146-1

No.	Plate	Name
50457C	9402	Arm Rock Shaft Crank (upper) Set Screw.
49005	9403	" " " Flanged Bushing (lower).
430C	9431	" " " " " " Set Screw.....
49084	9403	Arm Rock Shaft Oil Cover.....
193J	9430	" " " " " Screw.....
17672	9405	" Rotary Shaft.....
*58059	-----	" " " 17672 with 58033.....
58031	9403	" " " Bushing (lower).....
17674	9403	" " " " " Cap...
435C	9431	" " " " " Set Screw.....
58032	9403	Arm Rotary Shaft Flanged Bushing (intermediate).....
17675	9403	Arm Rotary Shaft Flanged Bushing (intermediate) Oil Hole Plug.....
42366	9402	Arm Rotary Shaft Flanged Bushing (intermediate) Oil Pad (short) braided cotton.....
446C	9431	Arm Rotary Shaft Flanged Bushing (intermediate) Set Screw.....
49012	9405	Arm Rotary Shaft Flanged Bushing (upper) with 49013 and 49093.....
49093	9406	Arm Rotary Shaft Flanged Bushing (upper) Oil Pad (long) braided cotton.....
49013	9407	Arm Rotary Shaft Flanged Bushing (upper) Oil Pad (short) braided cotton.....
159F	9430	Arm Rotary Shaft Flanged Bushing (upper) Screw.....
449C	9419	Arm Rotary Shaft Lower Bearing Oil Hole Plug Screw.....
144D	9430	Arm Rotary Shaft Screw.....
17676	-----	" Side Cover (left).....
2269	9407	" " " " Stop Pin.....
51224W	21516	" " " " Thumb Screw.....
17677	21518	" " " (right).....
2269	9407	" " " " Stop Pin.....
51224W	21516	" " " " Thumb Screw.....
124001	21517	Balance Wheel and Pulley (tight) 2 7/8 in. diam. with two 430C.....
430C	9431	Balance Wheel Set Screw.....
17679	9407	" " Washer.....
58023	9416	Cloth Plate.....
58024	-----	Cloth Plate complete, Nos. 49054, 58001, 58002, 58023 and two 226J.....
128J	9430	Cloth Plate Screw (lower).....
158F	9430	" " " (upper).....
58033	9405	Crank Connecting Rod with 896E, 49109 and two 145E.....
896E	9430	Crank Connecting Rod Adjusting Screw...



No.	Plate	Name
49109	9407	Crank Connecting Rod Adjusting Washer..
145E	9430	" " " Cap Screw.....
50244C	9430	" " " Hinge Screw.....
1513J	9431	" " " " " Nut...
49020	21517	Face Plate.....
193F	9430	" " Screw.....
17683	9407	Feed Bar with 220J and 457C.....
17684	9407	" " Hinge Pin.....
457C	9407	" " " " Set Screw.....
17685	9405	" Connecting Rod with 2653, 4784, and two 896E.....
896E	9430	Feed Connecting Rod Cap Screw.....
4784	9407	" " " Oil Pad (felt).....
2653	9407	" " " " " Pin.....
17686	9408	" Dog, 14 teeth (10 teeth to the inch) for 58025 and 58028.....
172C	9430	Feed Dog Screw.....
220J	9407	" " Stop Screw.....
17687	9418	" Eccentric with two 1259C.....
1259C	9403	" " Set Screw.....
17688	9418	" Lifting Eccentric with two 1259C..
58054	9424	" " " Connection with 457C, 2653, 4784 and two 1057E.....
1057E	9424	Feed Lifting Eccentric Connection Cap Screw.....
49030	9424	Feed Lifting Eccentric Connection Hinge Pin.....
457C	9407	Feed Lifting Eccentric Connection Hinge Pin Set Screw.....
4784	9407	Feed Lifting Eccentric Connection Oil Pad (felt).....
2653	9407	Feed Lifting Eccentric Connection Oil Pad Pin.....
1259C	9403	Feed Lifting Eccentric Set Screw.....
50245C	9431	" Regulating Screw Stud.....
1731C	9431	" " " " Nut.....
17690	9424	" " " " Sleeve.....
12000	9424	" " " " Stop Pin....
49033	9406	" Rock Shaft.....
124228	-----	Feed Rock Shaft complete, Nos. 49033 and 124227.....
124227	9406	Feed Rock Shaft Crank with 12000 and two 1177E.....
1177E	9422	Feed Rock Shaft Crank Clamping Screw...
17693	9406	" " " Hinge Pin.....
1508E	9431	" " " " " Nut.....
622C	9431	" " " " " Screw Bearing
1508E	9431	" " " " " " " Nut
27398	9424	" " " Washer.....



## PARTS FOR MACHINE No. 146-1

No.	Plate	Name
49036	9413	Looper with 590D and 49080.....
17694	9410	" Bell Crank.....
49039	9413	" " " Hinge Stud.....
448C	9431	" " " " Set Screw.
17695	9410	" " " Pitman with two each 175E and 1057E.....
50070C	9414	Looper Bell Crank Pitman Ball Screw Stud (back).....
1636C	9431	Looper Bell Crank Pitman Ball Screw Stud (back) Nut.....
50246C	9431	Looper Bell Crank Pitman Ball Screw Stud (front).....
1619E	9431	Looper Bell Crank Pitman Ball Screw Stud (front) Nut.....
175E	9430	Looper Bell Crank Pitman Cap (back) Screw.....
1057E	9424	Looper Bell Crank Pitman Cap (front) Screw.....
49044	9413	Looper Carrier with 4784 and two each 175E, 1147C and 59019.....
175E	9430	Looper Carrier Clamping Screw.....
59019	9413	" " Gib.....
38440	9413	" " Hinge Pin.....
157E	9430	" " " " Clamping Screw
4784	9407	" " Oil Pad (felt).....
124174	9414	Looper Carrier Pitman complete, Nos. 1708E, 1709E, 49046, 49088 and 124177.
50070C	9414	Looper Carrier Pitman Ball Screw Stud (upper).....
1519E	9431	Looper Carrier Pitman Ball Screw Stud (upper) Nut.....
46237	9414	Looper Carrier Pitman Ball Stud (lower)
1147C	9413	" " " " " " Set Screw.....
171E	9430	Looper Carrier Pitman Cap (lower) Screw
175E	9430	" " " " (upper) Screw
*49086	-----	" " " End Bearing (low- er).....
*124176	-----	Looper Carrier Pitman End Bearing (up- per).....
49088	9414	Looper Carrier Pitman Head (lower) Nos. 46237, 49086 and two 171E.....
124177	9414	Looper Carrier Pitman Head (upper) Nos. 50070C, 124176 and two 175E.....
49046	9414	Looper Carrier Pitman Rod.....
1708E	9431	" " " " Nut (lower).. 1709E 9431 " " " " (upper).. 49043 9424 " " " Washer (fibre)
137138	21518	" " Rock Shaft.....

## PARTS FOR MACHINE No. 146-1

9

No.	Plate	Name
11411	9414	Looper Carrier Rock Shaft Collar with 453C.....
453C	9414	Looper Carrier Rock Shaft Collar Set Screw.....
124173	9414	Looper Carrier Rock Shaft Crank (lower) with 156C, 157E and 443C.....
156C	9414	Looper Carrier Rock Shaft Crank (lower) Position Screw.....
443C	9401	Looper Carrier Rock Shaft Crank (lower) Set Screw.....
49276	21518	Looper Carrier Rock Shaft Crank (upper) forked with 140174C.....
140174C	21516	Looper Carrier Rock Shaft Crank (upper) Position Screw.....
49049	9414	Looper Carrier Rock Shaft Crank (upper) Slide Block.....
49051	9412	Looper Eccentric with two 1259C.....
122091	-----	" " 49051 with 49049.....
1259C	9403	" " Set Screw.....
58001	9411	" Gate with 735C.....
58002	9412	" " Hinge Pin.....
735C	9425	" " " Set Screw.....
49054	9412	" " Lock Spring.....
226J	9430	" " " Screw.....
1147C	9413	" Set Screw.....
49080	9413	" Thread Guard.....
590D	9413	" " " Screw.....
58052	9415	Needle Bar.....
49056	9415	" " Bushing (back).....
435C	9431	" " " Set Screw....
58035	9415	" " " (front).....
1133E	9431	" " " Set Screw....
*49101	9415	" " Connecting Link.....
49167	-----	" " " 49101 with 49057 and 49268.....
49057	9415	Needle Bar Connecting Link Hinge Stud..
1517J	9431	" " " " " Nut
49268	9415	" " " Stud with 1454E..
1454E	9415	" " " "Clamping Screw
1629C	9415	" Clamping Nut.....
58036	9411	Oil Pipe.....
58037	-----	" " 58036 with 54897, 58038 and 58039 for Arm Rotary Shaft Lower Bearing.....
58038	9417	Oil Pipe Holder.....
54897	9401	" " " Oil Cup.....
58039	9417	" " Packing (braided cotton).....
449C	9419	" " Set Screw.....
58040	9417	" Tube for 58041.....



## PARTS FOR MACHINE No. 146-1

No.	Plate	Name
58041	-----	Oil Tube 58040 with 58044 and 58045 for oiling 49049 and 49051.....
58042	9417	Oil Tube for 58043.....
58043	-----	" " 58042 with 58044 and 58045 for Arm Rotary Shaft Intermediate Bear- ing.....
58044	9417	Oil Tube Connection with two 198J.....
198J	9417	" " " Cap Screw.....
58045	21516	" " Packing (braided cotton).....
49059	9411	Presser Bar.....
49060	9417	" " Bushing (back).....
435C	9431	" " " " Set Screw...
49061	9417	" " " (front).....
1133E	9431	" " " " Set Screw...
58046	9428	" " Lifter.....
49065	9417	" " " Bracket with 453C and 892F.....
892F	9417	Presser Bar Lifter Bracket Adjusting Screw.....
453C	9414	Presser Bar Lifter Bracket Set Screw...
212D	9430	" " " Cap Screw.....
58047	9428	" " " Hinge Stud.....
453C	9414	" " " " " Set Screw
58048	9428	" " " Link.....
212D	9430	" " " " Cap Screw.....
1253C	9417	" " " " Hinge Screw Stud
58049	9428	" " " " Spring.....
1241E	9428	" " " " Screw Stud
49067	9427	" " Spring (flat).....
38468	9428	" " Stud.....
137088	21516	" Foot Finger Guard.....
227J	21516	" " " " Screw.....
58004	-----	" " Plate.....
50087J	9408	" " " Hinge Screw.....
58005	-----	" " Shank.....
137089	-----	" " Toe with 227J, 906C and 137088.....
58007	9408	Presser Foot Toe Hinge Stud.....
906C	9408	" " " " " Set Screw..
58008	9408	" " " Spring.....
137090	21516	Presser Foot (hinged) complete, Nos. 50087J, 58004, 58005, 58007, 58008 and 137089.....
190J	9430	Presser Foot Screw.....
574W	9431	Pressure Regulating Thumb Screw.....
1539W	9431	" " " " Lock Nut
137131	21517	Pulley (loose) 2 7/8 in. diam. with 200584D.....
*137132	-----	Pulley (loose) 137131 with 68714.....



No.	Plate	Name
137136	-----	Pulley (loose) 137132 with 137133.....
68714	21518	" " Ball Bearing.....
200584D	21516	" " Oil Plug Screw.....
137133	21516	" " Spacing Collar.....
137130	-----	Pulleys (ball bearing) complete, Nos. 124001 and 137136.....
2102	9419	Tension (looper thread) Disc.....
1560C	9419	" " " Regulating Thumb Nut.....
916C	9419	Tension (looper thread) Screw Stud.....
44209	-----	" " " " " 916C with 1560C.....
10148	9419	Tension (looper thread) Spring.....
17547	9419	" " " Thread Guide...
2102	9419	" (needle thread) Disc.....
1560C	9419	" " " Regulating Thumb Nut.....
916C	9419	Tension (needle thread) Screw Stud.....
44209	-----	" " " " " 916C with 1560C.....
13710	9419	Tension (needle thread) Spring.....
17547	9419	" " " Thread Guide...
58010	9428	Thread Cutting Blade (inside) with 1933
58011	9428	" " " (outside) with 1933
50247C	9431	" " " Hinge Screw.....
1732H	9420	" " " " " Nut....
1933	9428	" " " Roller and Stud....
17622	9421	" " " Spring.....
124256	-----	" " " Lever.....
58012	9426	" " " 124256 with 58013 and two 161D.....
58013	9420	Thread Cutting Lever Extension.....
161J	9430	" " " " " Screw...
124171	9421	" " " Hinge Stud.....
448C	9431	" " " " " Set Screw
58014	9421	" " " Plate.....
172C	9430	" " " " " Screw.....
8885	21516	" " " Spring.....
170D	9421	" " " " " Screw Stud.
49071	9420	" (looper) Eyelet.....
172C	9430	" " " " " Screw.....
49072	9423	" " " Take-up.....
190J	9430	" " " " " Screw.....
49073	9422	" (needle) Controller.....
974F	9420	" " " " " Hinge Screw.
914F	9430	" " " " " Screw.....
39541	9425	" " " " " Washer
49075	9425	" " " Take-up with 457C.....
457C	9407	" " " " " Set Screw.....

## PARTS FOR MACHINE No. 146-1

No.	Plate	Name
58025	9408	Throat Plate (large needle hole) for 17686.....
58028	9408	Throat Plate (small needle hole) for 17686.....
691F	9431	Throat Plate Screw (large).....
402D	9431	" " " (small).....
*15404	-----	Trade Mark.....
15405	-----	" " Rivet.....

Genuine Singer Needles should be used  
in Singer Machines.  
These Needles and their Containers  
are marked with the  
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked  
"For Singer Machines"  
are not Singer made needles. 2

# LIST OF PARTS COMPLETE FOR

## MACHINE No. 146-51

(HEAD ONLY)

FOR CLOSING HEAVY BAGS AFTER THEY ARE  
FILLED. TWO INDEPENDENT PRESSER BARS  
AND HINGED PRESSER FEET. LIFT OF PRESSER  
FEET 5/8 INCH.

No.	Plate	Name
*124178	-----	Arm, upper and lower (solid) with 15404 and two 15405.....
58030	9401	Arm Oil Tube with 52150 and 54897 for oiling 122012 (lower bearing).....
124179	9401	Arm Oil Tube with 52045 for oiling in- termediate bearing.....
17670	9401	Arm Oil Tube for oiling 49101.....
54897	9401	" " " Oil Cup for 58030.....
52150	21516	" " " Packing (braided cotton)..
52045	9401	" " " " (wick).....
122097	9416	" Rock Shaft.....
49003	9401	" " " Bushing (back).....
446C	9431	" " " " " Set Screw
122003	9401	" " " " (front).....
446C	9431	" " " " " Set Screw
49004	9401	" " " " (intermediate)
446C	9431	" " " " " Set Screw.....
49006	9401	Arm Rock Shaft Collar with two 443C....
443C	9401	" " " " Set Screw.....
122098	9402	" " " Crank (back) with 50582C and two 51157C.....
50582C	9402	Arm Rock Shaft Crank (back) Position Screw.....
51157C	21516	Arm Rock Shaft Crank (back) Set Screw..
122099	9402	" " " " (front) with 50582C and 51157C.....



No.	Plate	Name
50582C	9402	Arm Rock Shaft Crank (front) Position Screw.....
51157C	21516	Arm Rock Shaft Crank (front) Set Screw.
49005	9403	" " " Flanged Bushing (front).
446C	9431	" " " " " " Set Screw.....
49084	9403	Arm Rock Shaft Oil Cover.....
152J	9430	" " " " " " Screw.....
124180	9416	" Rotary Shaft.....
124230	-----	" " " 124180 with 124229....
124181	9403	" " " Bushing (front).....
435C	9431	" " " " " " Set Screw
124182	9403	" " " " " (intermediate)
446C	9431	" " " " " " Set Screw.....
49010	9403	Arm Rotary Shaft Collar with two 1259C.
1259C	9403	" " " " " Set Screw.....
49012	9405	" " " Flanged Bushing (back) with 49013 and 49093.....
49093	9406	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (long) braided cotton.....
49013	9407	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (short) braided cotton.....
159F	9430	Arm Rotary Shaft Flanged Bushing (back) Screw.....
64805	9417	Arm Rotary Shaft Flanged Bushing Oil Pad (braided cotton) for intermedi- ate bearing.....
49014	9403	Arm Rotary Shaft Flanged Bushing (in- termediate).....
448C	9431	Arm Rotary Shaft Flanged Bushing (in- termediate) Set Screw.....
144D	9430	Arm Rotary Shaft Screw.....
17676	-----	" Side Cover (left).....
2269	9407	" " " " " Stop Pin.....
51224W	21516	" " " " " Thumb Screw.....
17677	21518	" " " (right).....
2269	9407	" " " " " Stop Pin.....
51224W	21516	" " " " " Thumb Screw.....
124183	9416	Balance Wheel and Pulley (tight) 4 3/8 in. diam. with two 430C.....
430C	9431	Balance Wheel Set Screw.....
17679	9407	" " " Washer.....
124184	9416	Cloth Plate.....
124185	-----	Cloth Plate complete, Nos. 42005, 52716, 124184, 124191 and two 217J.....
50467F	9431	Cloth Plate Screw (top of plate).....
1489D	9430	" " " (side of plate).....
122012	9405	Crank Connecting Rod with 896E, 49109 and two 145E.....

No.	Plate	Name
124229	-----	Crank Connecting Rod 122012 with 1513J and 50244C.....
896E	9430	Crank Connecting Rod Adjusting Screw...
49109	9407	" " " " Washer..
145E	9430	" " " Cap Screw.....
50244C	9430	" " " Hinge Screw.....
1513J	9431	" " " " Nut...
122013	21517	Face Plate.....
193F	9430	" " Screw.....
122014	9406	Feed Bar.....
122015	-----	Feed Bar complete, Nos.190J,457C,1258C, 122014, 122016 to 122018 and two 704C.....
124231	-----	Feed Bar 122015 with 122024 and 124186.
122016	9418	" " Extension.....
704C	9430	" " " Screw.....
124186	9418	" " Hinge Pin.....
1258C	9431	" " " " Set Screw.....
122017	9418	" " Oil Pad (braided cotton).....
122018	9418	" " Wearing Plate.....
190J	9430	" " " " Screw. ....
124187	9409	" Dog, 16 teeth (5 1/3 teeth to the inch) for 124217.....
157E	9430	Feed Dog Screw.....
457C	9407	" " Stop Screw.....
124188	9424	" Eccentric with two 1036C.....
122101	21518	" " Connection with 896E, 2653, 4784, 49109 and two 145E.....
896E	9430	Feed Eccentric Connection Adjusting Screw.....
49109	9407	Feed Eccentric Connection Adjusting Screw Washer.....
145E	9430	Feed Eccentric Connection Cap Screw....
4784	9407	" " " Oil Pad (felt)
2653	9407	" " " " " Pin...
1036C	9424	" " Set Screw.....
122023	9424	" Lifting Cam with 1258C.....
1258C	9431	" " " Set Screw.....
50086C	9430	" Regulating Screw Stud.....
1714C	9431	" " " " Nut.....
49031	9424	" " " " Sleeve.....
49032	9424	" " " " Washer. ....
122024	9406	" Rock Shaft with two 1258C.....
122025	9406	" " " Hinge Pin.....
124189	9424	" " " " " Bushing.....
448C	9431	" " " " " " Set Screw.....
1258C	9431	Feed Rock Shaft Set Screw.....
122028	9413	Looper (double thread).....



No.	Plate	Name
122029	9413	Looper (single thread).....
122030	9410	" Bell Crank.....
122095	-----	" " " 122030 with 49039....
49039	9413	" " " Hinge Stud.....
448C	9431	" " " " " Set Screw.
4784	9407	" " " Oil Pad (felt).....
122031	9410	" " " Pitman with two each 171E and 1057E.....
50070C	9414	Looper Bell Crank Pitman Ball Screw Stud (lower).....
1519C	9431	Looper Bell Crank Pitman Ball Screw Stud (lower) Nut.....
50069C	9431	Looper Bell Crank Pitman Ball Screw Stud (upper).....
1619E	9431	Looper Bell Crank Pitman Ball Screw Stud (upper) Nut.....
171E	9430	Looper Bell Crank Pitman Cap (lower) Screw.....
1057E	9424	Looper Bell Crank Pitman Cap (upper) Screw.....
49043	9424	Looper Bell Crank Pitman Washer (fibre)
122032	9413	" Carrier with two each 175E, 59019, and three 1120C.....
122090	-----	Looper Carrier 122032 with 122040 and 124193.....
175E	9430	Looper Carrier Adjusting Screw.....
124193	9417	" " Collar with two 1253C...
1253C	9417	" " " Set Screw.....
59019	9413	" " G1b.....
4784	9407	" " Oil Pad (felt).....
122033	9410	Looper Carrier Pitman complete, Nos. 1722E, 1723E and 122036 to 122038..
50070C	9414	Looper Carrier Pitman Ball Screw Stud (right).....
1519E	9431	Looper Carrier Pitman Ball Screw Stud (right) Nut.....
46237	9414	Looper Carrier Pitman Ball Stud (left)
1120C	9413	" " " " " " Set Screw.....
171E	9430	Looper Carrier Pitman Cap (left) Screw.
171E	9430	" " " " (right) Screw.
*122034	-----	" " " End Bearing(left)
*122035	-----	" " " " " (right)
122036	9410	" " " Head (left) Nos. 46237, 122034 and two 171E.....
122037	9410	Looper Carrier Pitman Head (right) Nos. 50070C, 122035 and two 171E.....
122038	9410	Looper Carrier Pitman Rod.....
1722E	9431	" " " " Nut (left)...



No.	Plate	Name
1723E	9431	Looper Carrier Pitman Rod Nut (right)..
49043	9424	" " " " Washer (fibre)
137139	21517	" " Rock Shaft.....
11411	9414	" " " " Collar with 453C.....
453C	9414	Looper Carrier Rock Shaft Collar Set Screw.....
49276	21518	Looper Carrier Rock Shaft Crank (back) forked with 140174C.....
140174C	21516	Looper Carrier Rock Shaft Crank (back) Position Screw.....
49049	9414	Looper Carrier Rock Shaft Crank (back) Slide Block.....
122040	9412	Looper Carrier Rock Shaft Crank (front) with two 1255D.....
1255D	9412	Looper Carrier Rock Shaft Crank (front) Clamping Screw.....
49051	9412	Looper Eccentric with two 1259C.....
122091	-----	" " 49051 with 49049.....
1259C	9403	" " Set Screw.....
124191	9416	" Gate with 1259C.....
52716	9412	" " Hinge Pin.....
1259C	9403	" " " " Set Screw.....
42005	9412	" " Lock Spring.....
217J	9430	" " " " Screw.....
1120C	9413	" Set Screw.....
122042	9411	Needle Bar (hollow).....
122043	9415	" " Bushing (lower).....
452C	9431	" " " " Set Screw...
124192	9415	" " " (upper).....
452C	9431	" " " " Set Screw...
*49101	9415	" " Connecting Link.....
122100	-----	" " " " 49101 with 1517J, 49057, 122045 and 122099....
49057	9415	Needle Bar Connecting Link Hinge Stud..
1517J	9431	" " " " " " Nut
122045	9415	" " " Stud with two 1454E
1454E	9415	" " " Clamping Screw
2102	9419	" " Thread Retainer Disc.....
1560C	9419	" " " " Regulating Thumb Nut.....
916C	9419	Needle Bar Thread Retainer Screw Stud..
44209	-----	" " " " " " 916C, with 1560C.....
10148	9419	Needle Bar Thread Retainer Spring.....
1753C	9415	" Clamping Nut.....
122047	9415	" Guard.....
190J	9430	" " Screw.....
122048	9411	Presser Bar (left).....

No.	Plate	Name
59033	9417	Presser Bar (left) Bushing (lower).....
452C	9431	" " " " " Set
		Screw.....
122049	9417	Presser Bar (left) Bushing (upper).....
452C	9431	" " " " " Set
		Screw.....
124193	9417	Presser Bar (left) Collar with two
		1253C.....
1253C	9417	Presser Bar (left) Collar Set Screw....
122050	9417	" " " Lifting Bracket with
		1258C.....
1258C	9431	Presser Bar (left) Lifting Bracket Set
		Screw.....
124194	9428	Presser Bar Lifter.....
15486	9428	" " " Hinge Stud.....
452C	9431	" " " " " Set Screw
439C	9428	" " " Stop Screw.....
124195	9411	" " Lifting Lever.....
89C	9431	" " " " Hinge Screw..
122051	9411	" " (right).....
59033	9417	" " " Bushing (lower)....
452C	9431	" " " " " Set
		Screw.....
122049	9417	Presser Bar (right) Bushing (upper)....
452C	9431	" " " " " Set
		Screw.....
122052	9417	Presser Bar (right) Lifting Bracket
		with 1258C.....
1258C	9431	Presser Bar (right) Lifting Bracket Set
		Screw.....
122054	9427	Presser Bar Spring (flat).....
122055	9427	" " " Bracket.....
1396R	9430	" " " " Screw.....
38468	9428	" " " Stud.....
124196	-----	" Foot (left) Plate.....
646F	9429	" " " " Hinge Screw..
122057	-----	" " " Shank.....
124197	9429	Presser Foot (left hinged) complete,
		Nos. 646F, 122057, 124196, 124198 and
		two 233J.....
124198	9429	Presser Foot (left) Finger Guard.....
233J	9429	" " " " " Screw.
898J	9430	" " " Screw.....
124199	9429	" " (right).....
898J	9430	" " " Screw.....
574W	9431	Pressure Regulating Thumb Screw.....
1539W	9431	" " " " Lock Nut
124200	9427	Pulley (loose) 4 3/8 in. diam.....
122062	9419	Tension (looper thread) Disc.....



No.	Plate	Name
1560C	9419	Tension (looper thread) Regulating Thumb Nut.....
50261C	9419	Tension (looper thread) Screw Stud.....
64881	-----	" " " " " 50261C with 1560C.....
122063	9419	Tension (looper thread) Screw Stud Sleeve.....
52975	9419	Tension (looper thread) Spring.....
13915	9419	" " " " Bushing.
122062	9419	" (needle thread) Disc.....
1560C	9419	" " " Regulating Thumb Nut.....
50261C	9419	Tension (needle thread) Screw Stud.....
64881	-----	" " " " " 50261C with 1560C.....
122063	9419	Tension (needle thread) Screw Stud Sleeve.....
52975	9419	Tension (needle thread) Spring.....
13915	9419	" " " " Bushing.
124201	9419	Thread Cutting Blade (left) with 1933..
1933	9428	" " " " Roller and Stud.....
124202	9419	Thread Cutting Blade (right) with 51862
51862	9419	" " " " Roller and Stud.....
124203	9419	Thread Cutting Blade Connecting Link...
741R	9431	" " " " " Hinge Screw.....
124204	9421	Thread Cutting Blade Guide Plate.....
690R	9430	" " " " " Screw.
124205	9421	" " " Hinge Stud.....
199R	9430	" " " " " Cap Screw
124206	9421	" " " Spring.....
964R	9430	" " " " Screw.....
124207	9426	" " Lever.....
14223	9420	" " " Handle with 1518E.
1518E	9420	" " " " Nut.....
802D	9430	" " " Hinge Screw.....
124208	9420	" " " Spring.....
124209	9420	" " " Stop.....
160D	9430	" " " " Screw.....
1204E	9420	" " " " " Stud...
9525	9420	" " " " " Washer.
122064	9420	" Eyelet (side of arm).....
452C	9431	" " " " " Set Screw..
124210	9423	" Guard (back of arm).....
122065	9420	" Guide (side of arm).....
452C	9431	" " " " " Screw.....
122066	9422	" (under) Take-up.....



## PARTS FOR MACHINE No. 146-51

No.	Plate	Name
122020	9422	Thread (under) Take-up Eccentric with 1036C .....
1036C	9424	Thread (under) Take-up Eccentric Set Screw .....
122067	9422	Thread (under) Take-up Lever with two each 145E and 1279F .....
145E	9430	Thread (under) Take-up Lever Cap Screw.
122069	9425	" " " " Connection
11411	9414	" " " " "
		Collar with 453C .....
453C	9414	Thread (under) Take-up Lever Connection Collar Set Screw .....
375C	9431	Thread (under) Take-up Lever Hinge Screw .....
1519E	9431	Thread (under) Take-up Lever Hinge Screw Nut .....
1279F	9430	Thread (under) Take-up Set Screw .....
122070	9421	" " " " Stripper .....
122071	9422	" " " " Bracket
		with three 462C .....
122072	9421	Thread (under) Take-up Stripper Bracket Bushing .....
462C	9431	Thread (under) Take-up Stripper Bracket Bushing Set Screw .....
690D	9430	Thread (under) Take-up Stripper Bracket Screw .....
462C	9431	Thread (under) Take-up Stripper Set Screw .....
124211	9423	Thread (upper) Controller with 1320C and 124215 .....
124212	9423	Thread (upper) Controller Connecting Link .....
974F	9420	Thread (upper) Controller Connecting Link Hinge Screw .....
1131F	9431	Thread (upper) Controller Hinge Screw..
124213	9423	" " " " Lever .....
63C	9430	" " " " Hinge
		Screw .....
124214	9425	Thread (upper) Controller Lever Lifting Bracket with 1036C and 1823 .....
1823	9425	Thread (upper) Controller Lever Lifting Bracket Roller and Stud .....
1036C	9424	Thread (upper) Controller Lever Lifting Bracket Set Screw .....
124215	9425	Thread (upper) Controller Roller .....
1320C	9431	" " " " Screw.
46383	9425	" " Nipper Cam with two 1253C
1253C	9417	" " " " Set Screw .....
32191	9425	" " " " Disc .....

No.	Plate	Name
1535C	9420	Thread (upper) Nipper Regulating Thumb Nut.....
122074	9425	Thread (upper) Nipper Releaser.....
122075	9407	" " " Releasing Pin....
735C	9425	" " " " " Set Screw.....
1979	9425	Thread (upper) Nipper Roller and Screw Stud.....
122076	9421	Thread (upper) Nipper Roller Bracket with 735C.....
122096	-----	Thread (upper) Nipper Roller Bracket 122076 with 1979 and 122075.....
122077	9425	Thread (upper) Nipper Spring.....
122078	9425	" " " Stud.....
1036C	9424	" " " " Set Screw...
124216	9425	" " Take-up with 49223 and 49224.....
49223	9425	Thread (upper) Take-up Roller.....
49224	9425	" " " " Pin.....
45083	9425	" " " Washer.....
124217	9409	Throat Plate for 124187.....
742F	9431	" " Screw.....
*15404	-----	Trade Mark.....
15405	-----	" " Rivet.....

Genuine Singer Needles should be used  
in Singer Machines.  
These Needles and their Containers  
are marked with the  
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked  
"For Singer Machines"  
are not Singer made needles. 2

## ACCESSORIES

No.	Plate	Name
120908	21517	Bag Guide Hook.....
120344	9432	Oiler (copper plated) with 120345.....
120345	9432	" Spout, 4 1/2 in. long.....
11831	9432	Screw Driver (large).....
26026	9432	" " (medium).....
26485	9432	" " (small).....
120341	9432	Tweezers (curved).....
8908	21518	Wrench for 1519.....
8909	21518	" " 1513, 1518 and 1636.....
25200	21518	" " 1731.....
27662	21518	" " 1508 and 1619.....
42089	9433	" " 1629.....

## THREAD UNWINDER

FOR TWO SPOOLS OR TWO LARGE CONES OF THREAD

No.	Plate	Name
225257	20335	Spool Rest with 201018C.....
150203	20335	" " Cushion (felt).....
225388	20335	" " Rod.....
200383C	21516	" " " Set Screw.....
201018C	21516	" " Set Screw.....
202490	20335	" Stand with 200383C.....
225391	20335	Thread Guide.....
201696J	21516	" " Lock Nut.....
225326	20335	" " Position Cup.....
225324	20335	" " Rod with 208E and 225322..
208E	21516	" " " Screw.....
225322	21516	" " " Washer.....
225258	20335	Thread Unwinder complete, Nos. 201696J, 202490, 225257, 225324, 225326, 225388, two each 150203, 225391 and three wood screws 7/8 in. No. 12.....
27739	21517	Thread Cone (wood) for large cones....
225390	21517	" " Holder for inverted cones..

Note: Nos. 27739 and 225390 are used with but not included in 225258.



## OBSOLETE PARTS

No.	Plate	Name
29599	9401	Arm Oil Tube Packing (felt) for 146-1 Machine, use 52150.....
50282C	9402	Arm Rock Shaft Crank (back) Set Screw for 146-51 Machine, use 51157C.....
50282C	9402	Arm Rock Shaft Crank (front) Set Screw for 146-51 Machine, use 51157C.....
448C	9431	Arm Rotary Shaft Bushing (front) Set Screw for 146-51 Machine, use 435C.
286D	9431	Arm Side Cover (left) Thumb Screw, use 51224W.....
286D	9431	Arm Side Cover (right) Thumb Screw, use 51224W.....
122021	9406	Feed Eccentric Connection with 2653, 4784 and two 145E for 146-51 Machine, use 122101.....
21506	9413	Looper Carrier Collar with 457C for 146-51 Machine, use 124193.....
457C	9407	Looper Carrier Collar Set Screw for 21506.....
124172	9412	Looper Carrier Rock Shaft for 146-1 Machine, obsolete superseded by 137138, not interchangeable.....
124190	9410	Looper Carrier Rock Shaft for 146-51 Machine, obsolete superseded by 137139, not interchangeable.....
49048	9414	Looper Carrier Rock Shaft Crank (back) forked with 50083C, for 146-51 Machine, obsolete superseded by 49276, not interchangeable.....
49048	9414	Looper Carrier Rock Shaft Crank (upper) forked with 50083C, for 146-1 Machine, obsolete superseded by 49276, not interchangeable.....
50083C	9414	Looper Carrier Rock Shaft Crank (back) Set Screw for 49048.....
50083C	9414	Looper Carrier Rock Shaft Crank (upper) Set Screw for 49048.....
58003	9408	Presser Foot Guard for 58006, obsolete superseded by 137088, not interchangeable.....
58009	9408	Presser Foot (hinged) complete, for 146-1 Machine, Nos. 50087D and 58004 to 58008, use 137090.....

## OBSOLETE PARTS

No.	Plate	Name
58006	-----	Presser Foot Toe with 906C and 58003, for 58009, obsolete superseded by 137089, not interchangeable.....
124002	9427	Pulley (loose) 2 7/8 in. diam. for 146-1 Machine, use 137136.....
19510	9421	Thread Cutting Lever Spring for 146-1 Machine.....
124161	9433	Wrench for 1513.....
124162	9433	" " 1518, 1519, 1619 and 1731...
124163	9433	" " 1508.....
124165	9433	" " 1636.....

Genuine Singer Needles should be used  
in Singer Machines.  
These Needles and their Containers  
are marked with the  
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked  
"For Singer Machines"  
are not Singer made needles. 2

NUMERICAL  
LIST  
OF PARTS



# NUMERICAL LIST OF PARTS

No.	Plate	Name
63C	9430	Thread (upper) Controller Lever Hinge Screw for, 146-51 Machine.....
89C	9431	Presser Bar Lifting Lever Hinge Screw, for 146-51 Machine.....
128J	9430	Cloth Plate Screw (lower) for 146-1 Machine.....
144D	9430	Arm Rotary Shaft Screw.....
145E	9430	Crank Connecting Rod Cap Screw, for 58033 and 122012.....
145E	9430	Feed Eccentric Connection Cap Screw, for 122021 and 122101.....
145E	9430	Thread (under) Take-up Lever Cap Screw, for 122067.....
152J	9430	Arm Rock Shaft Oil Cover Screw, for 146-51 Machine.....
156C	9414	Looper Carrier Rock Shaft Crank (lower) Position Screw, for 124173.....
157E	9430	Feed Dog Screw, for 146-51 Machine.....
157E	9430	Looper Carrier Hinge Pin Clamping Screw, for 124173.....
158F	9430	Cloth Plate Screw (upper) for 146-1 Machine.....
159F	9430	Arm Rotary Shaft Flanged Bushing (back) Screw, for 146-51 Machine.....
159F	9430	Arm Rotary Shaft Flanged Bushing (upper) Screw, for 146-1 Machine.....
160D	9430	Thread Cutting Lever Stop Screw, for 146-51 Machine.....
161J	9430	Thread Cutting Lever Extension Screw, for 58012.....
170D	9421	Thread Cutting Lever Spring Screw Stud, for 146-1 Machine.....
171E	9430	Looper Bell Crank Pitman Cap (lower) Screw, for 122031.....
171E	9430	Looper Carrier Pitman Cap (left) Screw, for 122036.....
171E	9430	Looper Carrier Pitman Cap (right) Screw, for 122037.....
171E	9430	Looper Carrier Pitman Cap (lower) Screw, for 49088.....
172C	9430	Feed Dog Screw, for 146-1 Machine.....
172C	9430	Thread Cutting Lever Plate Screw, for 146-1 Machine.....
172C	9430	Thread (looper) Eyelet Screw, for 146-1 Machine.....
175E	9430	Looper Bell Crank Pitman Cap (back) Screw, for 17695.....
175E	9430	Looper Carrier Adjusting Screw, for 122032.....

## NUMERICAL LIST OF PARTS

No.	Plate	Name
175E	9430	Looper Carrier Clamping Screw, for 49044.....
175E	9430	Looper Carrier Pitman Cap (upper) Screw, for 124177.....
190J	9430	Feed Bar Wearing Plate Screw, for 122015.....
190J	9430	Needle Guard Screw, for 146-51 Machine.
190J	9430	Presser Foot Screw, for 146-1 Machine..
190J	9430	Thread (looper) Take-up Screw, for 146-1 Machine.....
193J	9430	Arm Rock Shaft Oil Cover Screw, for 146-1 Machine.....
193F	9430	Face Plate Screw.....
198J	9417	Oil Tube Connection Cap Screw, for 58044.....
199R	9430	Thread Cutting Blade Hinge Stud Cap Screw, for 146-51 Machine.....
208E	21516	Thread Unwinder Thread Guide Rod Screw, for 225324.....
212D	9430	Presser Bar Lifter Cap Screw, for 146-1 Machine.....
212D	9430	Presser Bar Lifter Link Cap Screw, for 146-1 Machine.....
217J	9430	Looper Gate Lock Spring Screw, for 124185.....
220J	9407	Feed Dog Stop Screw, for 17683.....
226J	9430	Looper Gate Lock Spring Screw, for 58024.....
227J	21516	Presser Foot Finger Guard Screw, for 137089.....
233J	9429	Presser Foot (left) Finger Guard Screw, for 124197.....
286D	9431	Arm Side Cover (left) Thumb Screw, obsolete use 51224W.....
286D	9431	Arm Side Cover (right) Thumb Screw, obsolete use 51224W.....
375C	9431	Thread (under) Take-up Lever Hinge Screw, for 146-51 Machine.....
402D	9431	Throat Plate Screw (small) for 146-1 Machine.....
430C	9431	Arm Rock Shaft Flanged Bushing (lower) Set Screw, for 146-1 Machine.....
430C	9431	Balance Wheel Set Screw, for 124001 and 124183.....
435C	9431	Arm Rotary Shaft Bushing (front) Set Screw, for 146-51 Machine.....
435C	9431	Arm Rotary Shaft Bushing (lower) Set Screw, for 146-1 Machine.....
435C	9431	Needle Bar Bushing (back) Set Screw, for 146-1 Machine.....



## NUMERICAL LIST OF PARTS

27

No.	Plate	Name
435C	9431	Presser Bar Bushing (back) Set Screw, for 146-1 Machine.....
439C	9428	Presser Bar Lifter Stop Screw, for 146-51 Machine.....
443C	9401	Arm Rock Shaft Collar Set Screw, for 17671 and 49006.....
443C	9401	Looper Carrier Rock Shaft Crank (lower) Set Screw, for 124173.....
446C	9431	Arm Rock Shaft Bushing (back) Set Screw, for 146-51 Machine.....
446C	9431	Arm Rock Shaft Bushing (front) Set Screw, for 146-51 Machine.....
446C	9431	Arm Rock Shaft Bushing (intermediate) Set Screw, for 146-51 Machine.....
446C	9431	Arm Rock Shaft Bushing (upper) Set Screw, for 146-1 Machine.....
446C	9431	Arm Rock Shaft Flanged Bushing (front) Set Screw, for 146-51 Machine.....
446C	9431	Arm Rotary Shaft Bushing (intermediate) Set Screw, for 146-51 Machine.....
446C	9431	Arm Rotary Shaft Flanged Bushing (intermediate) Set Screw, for 146-1 Machine.....
448C	9431	Arm Rock Shaft Bushing (intermediate) Set Screw, for 146-1 Machine.....
448C	9431	Arm Rotary Shaft Bushing (front) Set Screw, for 146-51 Machine, obsolete use 435C.....
448C	9431	Arm Rotary Shaft Flanged Bushing (intermediate) Set Screw, for 146-51 Machine.....
449C	9431	Feed Rock Shaft Hinge Pin Bushing Set Screw, for 146-51 Machine.....
448C	9431	Looper Bell Crank Hinge Stud Set Screw.
446C	9431	Thread Cutting Lever Hinge Stud Set Screw, for 146-1 Machine.....
449C	9419	Arm Rotary Shaft Lower Bearing Oil Hole Plug Screw, for 146-1 Machine.....
449C	9419	Oil Pipe Set Screw, for 146-1 Machine..
452C	9431	Needle Bar Bushing (lower) Set Screw, for 146-51 Machine.....
452C	9431	Needle Bar Bushing (upper) Set Screw, for 146-51 Machine.....
452C	9431	Presser Bar (left) Bushing (lower) Set Screw, for 146-51 Machine.....
452C	9431	Presser Bar (left) Bushing (upper) Set Screw, for 146-51 Machine.....
452C	9431	Presser Bar (right) Bushing (lower) Set Screw, for 146-51 Machine.....



## NUMERICAL LIST OF PARTS

No.	Plate	Name
452C	9431	Presser Bar (right) Bushing (upper) Set Screw, for 146-51 Machine.....
452C	9431	Presser Bar Lifter Hinge Stud Set Screw, for 146-1 Machine.....
452C	9431	Thread Eyelet (side of arm) Set Screw, for 146-51 Machine.....
452C	9431	Thread Guide (side of arm) Screw, for 146-51 Machine.....
453C	9414	Looper Carrier Rock Shaft Collar Set Screw, for 11411.....
453C	9414	Presser Bar Lifter Hinge Stud Set Screw, for 146-1 Machine.....
453C	9414	Presser Bar Lifter Bracket Set Screw, for 49065.....
453C	9414	Thread (under) Take-up Lever Connection Collar Set Screw, for 11411.....
457C	9407	Feed Bar Hinge Pin Set Screw, for 17683
457C	9407	" Dog Stop Screw, for 122015.....
457C	9407	" Lifting Eccentric Connection Hinge Pin Set Screw, for 58054.....
457C	9407	Looper Carrier Collar Set Screw, for 21506, obsolete.....
457C	9407	Thread (needle) Take-up Set Screw, for 49075.....
462C	9431	Thread (under) Take-up Stripper Bracket Bushing Set Screw, for 122071.....
462C	9431	Thread (under) Take-up Stripper Set Screw, for 146-51 Machine.....
574W	9431	Pressure Regulating Thumb Screw.....
590D	9413	Looper Thread Guard Screw, for 49036...
622C	9431	Feed Rock Shaft Hinge Pin Screw Bearing, for 146-1 Machine.....
646F	9429	Presser Foot (left) Plate Hinge Screw, for 124197.....
690R	9430	Thread Cutting Blade Guide Plate Screw, for 146-51 Machine.....
690D	9430	Thread (under) Take-up Stripper Bracket Screw, for 146-51 Machine.....
691F	9431	Throat Plate Screw (large) for 146-1 Machine.....
704C	9430	Feed Bar Extension Screw, for 122015...
735C	9425	Looper Gate Hinge Pin Set Screw, for 58001.....
735C	9425	Thread (upper) Nipper Releasing Pin Set Screw, for 122076.....
741R	9431	Thread Cutting Blade Connecting Link Hinge Screw, for 146-51 Machine....
742F	9431	Throat Plate Screw, for 146-51 Machine.
802D	9430	Thread Cutting Lever Hinge Screw, for 146-51 Machine.....

No.	Plate	Name
892F	9417	Presser Bar Lifter Bracket Adjusting Screw, for 49065.....
896E	9430	Crank Connecting Rod Adjusting Screw, for 58033 and 122012.....
896E	9430	Feed Connecting Rod Cap Screw, for 17685.....
896E	9430	Feed Eccentric Connection Adjusting Screw, for 122101.....
898J	9430	Presser Foot (left) Screw, for 146-51 Machine.....
898J	9430	Presser Foot (right) Screw, for 146-51 Machine.....
906C	9408	Presser Foot Toe Hinge Stud Set Screw, for 58006 and 137089.....
914F	9430	Thread (needle) Controller Screw, for 146-1 Machine.....
916C	9419	Needle Bar Thread Retainer Screw Stud, for 44209.....
916C	9419	Tension (looper thread) Screw Stud, for 44209.....
916C	9419	Tension (needle thread) Screw Stud, for 44209.....
964R	9430	Thread Cutting Blade Spring Screw, for 146-51 Machine.....
974F	9420	Thread (needle) Controller Hinge Screw, for 146-1 Machine.....
974F	9420	Thread (upper) Controller Connecting Link Hinge Screw for 146-51 Machine
1036C	9424	Feed Eccentric Set Screw, for 124188...
1036C	9424	Thread (under) Take-up Eccentric Set Screw, for 122020.....
1036C	9424	Thread (upper) Controller Lever Lifting Bracket Set Screw, for 124214.....
1036C	9424	Thread (upper) Nipper Stud Set Screw, for 146-51 Machine.....
1057E	9424	Feed Lifting Eccentric Connection Cap Screw, for 58054.....
1057E	9424	Looper Bell Crank Pitman Cap (front) Screw, for 17695.....
1057E	9424	Looper Bell Crank Pitman Cap (upper) Screw, for 122031.....
1120C	9413	Looper Carrier Pitman Ball Stud (left) Set Screw, for 122032.....
1120C	9413	Looper Set Screw, for 122032.....
1131F	9431	Thread (upper) Controller Hinge Screw, for 146-51 Machine.....
1133E	9431	Needle Bar Bushing (front) Set Screw, for 146-1 Machine.....
1133E	9431	Presser Bar Bushing (front) Set Screw, for 146-1 Machine.....



## NUMERICAL LIST OF PARTS

No.	Plate	Name
1147C	9413	Looper Carrier Pitman Ball Stud (lower) Set Screw, for 49044.....
1147C	9413	Looper Set Screw, for 49044.....
1177E	9422	Feed Rock Shaft Crank Clamping Screw, for 124227.....
1204E	9420	Thread Cutting Lever Stop Screw Stud, for 146-51 Machine.....
1241E	9428	Presser Bar Lifter Link Spring Screw Stud, for 146-1 Machine.....
1253C	9417	Looper Carrier Collar Set Screw, for 124193.....
1253C	9417	Presser Bar (left) Collar Set Screw, for 124193.....
1253C	9417	Presser Bar Lifter Link Hinge Screw Stud, for 146-1 Machine.....
1253C	9417	Thread (upper) Nipper Cam Set Screw, for 46383.....
1255D	9412	Looper Carrier Rock Shaft Crank (front) Clamping Screw, for 122040.....
1258C	9431	Feed Bar Hinge Pin Set Screw, for 122015.....
1258C	9431	Feed Lifting Cam Set Screw, for 122023.
1258C	9431	" Rock Shaft Set Screw, for 122024..
1258C	9431	Presser Bar (left) Lifting Bracket Set Screw, for 122050.....
1258C	9431	Presser Bar (right) Lifting Bracket Set Screw, for 122052.....
1259C	9403	Arm Rotary Shaft Collar Set Screw, for 49010.....
1259C	9403	Feed Eccentric Set Screw, for 17687....
1259C	9403	" Lifting Eccentric Set Screw, for 17688.....
1259C	9403	Looper Eccentric Set Screw, for 49051..
1259C	9403	" Gate Hinge Pin Set Screw, for 124191.....
1279F	9430	Thread (under) Take-up Set Screw, for 122067.....
1320C	9431	Thread (upper) Controller Roller Screw, for 124211.....
1396R	9430	Presser Bar Spring Bracket Screw, for 146-51 Machine.....
1454E	9415	Needle Bar Connecting Stud Clamping Screw, for 49268 and 122045.....
1489D	9430	Cloth Plate Screw (side of plate), for 146-51 Machine.....
1508E	9431	Feed Rock Shaft Hinge Pin Nut, for 146-1 Machine.....
1508E	9431	Feed Rock Shaft Hinge Pin Screw Bearing Nut, for 146-1 Machine.....



No.	Plate	Name
1513J	9431	Crank Connecting Rod Hinge Screw Nut, for 124229 and 146-1 Machine.....
1517J	9431	Needle Bar Connecting Link Hinge Stud Nut, for 122100 and 146-1 Machine..
1518E	9420	Thread Cutting Lever Handle Nut, for 14223.....
1519C	9431	Looper Bell Crank Pitman Ball Screw Stud (lower) Nut, for 146-51 Machine.....
1519E	9431	Looper Carrier Pitman Ball Screw Stud (right) Nut, for 146-51 Machine....
1519E	9431	Looper Carrier Pitman Ball Screw Stud (upper) Nut, for 146-1 Machine....
1519E	9431	Thread (under) Take-up Lever Hinge Screw Nut, for 146-51 Machine.....
1535C	9420	Thread (upper) Nipper Regulating Thumb Nut, for 146-51 Machine.....
1539W	9431	Pressure Regulating Thumb Screw Lock Nut.....
1560C	9419	Needle Bar Thread Retainer Regulating Thumb Nut, for 44209.....
1560C	9419	Tension (looper thread) Regulating Thumb Nut, for 44209 and 64881.....
1560C	9419	Tension (needle thread) Regulating Thumb Nut, for 44209 and 64881.....
1619E	9431	Looper Bell Crank Pitman Ball Screw Stud (front) Nut, for 146-1 Machine
1619E	9431	Looper Bell Crank Pitman Ball Screw Stud (upper) Nut, for 146-51 Machine.....
1629C	9415	Needle Clamping Nut, for 146-1 Machine.
1636C	9431	Looper Bell Crank Pitman Ball Screw Stud (back) Nut, for 146-1 Machine.
1705E	9431	Looper Carrier Pitman Rod Nut (lower) for 124174.....
1709E	9431	Looper Carrier Pitman Rod Nut (upper) for 124174.....
1714C	9431	Feed Regulating Screw Stud Nut, for 146-51 Machine.....
1722E	9431	Looper Carrier Pitman Rod Nut (left) for 122033.....
1723E	9431	Looper Carrier Pitman Rod Nut (right) for 122033.....
1731C	9431	Feed Regulating Screw Stud Nut, for 146-1 Machine.....
1732H	9420	Thread Cutting Blade Hinge Screw Nut, for 146-1 Machine.....
1753C	9415	Needle Clamping Nut, for 146-51 Machine
1823	9425	Thread (upper) Controller Lever Lifting Bracket Roller and Stud, for 124214

## NUMERICAL LIST OF PARTS

No.	Plate	Name
1933	9428	Thread Cutting Blade (left) Roller and Stud, for 124201.....
1933	9428	Thread Cutting Blade Roller and Stud, for 58010 and 58011.....
1979	9425	Thread (upper) Nipper Roller and Screw Stud, for 122096.....
2102	9419	Needle Bar Thread Retainer Disc, for 146-51 Machine.....
2102	9419	Tension (looper thread) Disc, for 146-1 Machine.....
2102	9419	Tension (needle thread) Disc, for 146-1 Machine.....
2269	9407	Arm Side Cover (left) Stop Pin.....
2269	9407	" " " (right) Stop Pin.....
2653	9407	Feed Connecting Rod Oil Pad Pin, for 17685.....
2653	9407	Feed Eccentric Connection Oil Pad Pin, for 122021 and 122101.....
2653	9407	Feed Lifting Eccentric Connection Oil Pad Pin, for 58054.....
4784	9407	Feed Connecting Rod Oil Pad (felt) for 17685.....
4784	9407	Feed Eccentric Connection Oil Pad (felt) for 122021 and 122101.....
4784	9407	Feed Lifting Eccentric Connection Oil Pad (felt) for 58054.....
4784	9407	Looper Bell Crank Oil Pad (felt) for 146-51 Machine.....
4784	9407	Looper Carrier Oil Pad (felt) for 49044 and 146-51 Machine.....
8885	21516	Thread Cutting Lever Spring, for 146-1 Machine.....
8908	21518	Wrench, for 1519 (Accessories).....
8909	21518	" for 1513, 1518 and 1636 (Accessories).....
9525	9420	Thread Cutting Lever Stop Screw Washer, for 146-51 Machine.....
10148	9419	Needle Bar Thread Retainer Spring, for 146-51 Machine.....
10148	9419	Tension (looper thread) Spring, for 146-1 Machine.....
11119	9401	Arm Oil Tube 15783 with 52045, for oiling 49101, for 146-1 Machine.....
11411	9414	Looper Carrier Rock Shaft Collar with 453C.....
11411	9414	Thread (under) Take-up Lever Connection Collar with 453C, for 146-51 Machine.....
11831	9432	Screw Driver, large (Accessories).....



No.	Plate	Name
12000	9424	Feed Regulating Screw Stud Stop Pin, for 124227.....
13710	9419	Tension (needle thread) Spring, for 146-1 Machine.....
13915	9419	Tension (looper thread) Spring Bushing, for 146-51 Machine.....
13915	9419	Tension (needle thread) Spring Bushing, for 146-51 Machine.....
14223	9420	Thread Cutting Lever Handle with 1518E, for 146-51 Machine.....
*15404	-----	Trade Mark, for 124170 and 124178.....
15405	-----	" " Rivet, for 124170 and 124178.....
15486	9428	Presser Bar Lifter Hinge Stud, for 146-51 Machine.....
15783	-----	Arm Oil Tube, for 11119.....
17547	9419	Tension (looper thread) Thread Guide, for 146-1 Machine.....
17547	9419	Tension (needle thread) Thread Guide, for 146-1 Machine.....
17622	9421	Thread Cutting Blade Spring, for 146-1 Machine.....
17669	9401	Arm Oil Tube, for intermediate bearing, for 146-1 Machine.....
17670	9401	Arm Oil Tube, for lower bearing, for 146-1 Machine, and for oiling 49101, for 146-51 Machine.....
17671	9401	Arm Rock Shaft Collar with two 443C, for 146-1 Machine.....
17672	9405	Arm Rotary Shaft, for 58059.....
17674	9403	" " " Bushing (lower) Cap, for 146-1 Machine.....
17675	9403	Arm Rotary Shaft Flanged Bushing (in- termediate) Oil Hole Plug, for 146-1 Machine.....
17676	-----	Arm Side Cover (left).....
17677	21518	" " " (right).....
17679	9407	Balance Wheel Washer.....
17683	9407	Feed Bar with 220J and 457C, for 146-1 Machine.....
17684	9407	Feed Bar Hinge Pin, for 146-1 Machine..
17685	9405	" Connecting Rod with 2653, 4784 and two 896E, for 146-1 Machine.....
17686	9408	Feed Dog, 14 teeth (10 teeth to the inch) for 58025 and 58028, for 146-1 Machine.....
17687	9418	Feed Eccentric with two 1259C, for 146-1 Machine.....
17688	9418	Feed Lifting Eccentric with two 1259C, for 146-1 Machine.....



## NUMERICAL LIST OF PARTS

No.	Plate	Name
17690	9424	Feed Regulating Screw Stud Sleeve, for 146-1 Machine.....
17693	9406	Feed Rock Shaft Hinge Pin, for 146-1 Machine.....
17694	9410	Looper Bell Crank, for 146-1 Machine....
17695	9410	" " " Pitman with two each 175E and 1057E, for 146-1 Machine.
19510	9421	Thread Cutting Lever Spring, for 146-1 Machine, obsolete.....
21506	9413	Looper Carrier Collar with 457C, for 146-51 Machine, obsolete use 124193
25200	21518	Wrench, for 1731 (Accessories).....
26026	9432	Screw Driver, medium (Accessories).....
26485	9432	" " small (Accessories).....
27398	9424	Feed Rock Shaft Washer, for 146-1 Machine.....
27662	21518	Wrench, for 1508 and 1619 (Accessories)
27739	21517	Thread Unwinder Thread Cone (wood) for large cones, for 225258.....
29599	9401	Arm Oil Tube Packing (felt) for 146-1 Machine, obsolete use 52150.....
32191	9425	Thread (upper) Nipper Disc, for 146-51 Machine.....
38440	9413	Looper Carrier Hinge Pin, for 146-1 Machine.....
38468	9428	Presser Bar Spring Stud... ..
39541	9425	Thread (needle) Controller Screw Washer, for 146-1 Machine.....
42005	9412	Looper Gate Lock Spring, for 124185....
42089	9433	Wrench, for 1629 (Accessories).....
42366	9402	Arm Rotary Shaft Flanged Bushing (intermediate) Oil Pad (short) braided cotton, for 146-1 Machine.....
44209	-----	Needle Bar Thread Retainer Screw Stud 916C with 1560C, for 146-51 Machine
44209	-----	Tension (Looper thread) Screw Stud 916C with 1560C, for 146-1 Machine.....
44209	-----	Tension (needle thread) Screw Stud 916C with 1560C, for 146-1 Machine.....
45083	9425	Thread (upper) Take-up Washer, for 146-51 Machine.....
46237	9414	Looper Carrier Pitman Ball Stud (left) for 122036.....
46237	9414	Looper Carrier Pitman Ball Stud (lower) for 49088.....
46383	9425	Thread (upper) Nipper Cam with two 1253C, for 146-51 Machine.....
49003	9401	Arm Rock Shaft Bushing (back) for 146-51 Machine.....

No.	Plate	Name
49003	9401	Arm Rock Shaft Bushing (upper), for 146-1 Machine.....
49004	9401	Arm Rock Shaft Bushing (intermediate)..
49005	9403	" " " Flanged Bushing (front) for 146-51 Machine.....
49005	9403	Arm Rock Shaft Flanged Bushing (lower) for 146-1 Machine.....
49006	9401	Arm Rock Shaft Collar with two 443C, for 146-51 Machine.....
49010	9403	Arm Rotary Shaft Collar with two 1259C, for 146-51 Machine.....
49012	9405	Arm Rotary Shaft Flanged Bushing (back) with 49013 and 49093, for 146-51 Machine.....
49012	9405	Arm Rotary Shaft Flanged Bushing (upper) with 49013 and 49093, for 146-1 Machine.....
49013	9407	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (short) braided cotton, for 49012.....
49013	9407	Arm Rotary Shaft Flanged Bushing (upper) Oil Pad (short) braided cotton, for 49012.....
49014	9403	Arm Rotary Shaft Flanged Bushing (intermediate) for 146-51 Machine....
49020	21517	Face Plate, for 146-1 Machine.....
49030	9424	Feed Lifting Eccentric Connection Hinge Pin, for 146-1 Machine.....
49031	9424	Feed Regulating Screw Stud Sleeve, for 146-51 Machine.....
49032	9424	Feed Regulating Screw Stud Washer, for 146-51 Machine.....
49033	9406	Feed Rock Shaft, for 124228.....
49036	9413	Looper with 590D and 49080, for 146-1 Machine.....
49039	9413	Looper Bell Crank Hinge Stud, for 122095 and 146-1 Machine.....
49043	9424	Looper Bell Crank Pitman Washer (fibre) for 146-51 Machine.....
49043	9424	Looper Carrier Pitman Rod Washer (fibre)
49044	9413	" " with 4784 and two each 175E, 1147C and 59019, for 146-1 Machine.....
49046	9414	Looper Carrier Pitman Rod, for 124174..
49048	9414	" " Rock Shaft Crank (back) forked with 50083C, for 146-51 Machine, obsolete superseded by 49276 not interchangeable.....



## NUMERICAL LIST OF PARTS

No.	Plate	Name
49048	9414	Looper Carrier Rock Shaft Crank (upper) forked with 50083C, for 146-1 Ma- chine, obsolete superseded by 49276 not interchangeable.....
49049	9414	Looper Carrier Rock Shaft Crank (back) Slide Block, for 122091.....
49049	9414	Looper Carrier Rock Shaft Crank (upper) Slide Block, for 122091.....
49051	9412	Looper Eccentric with two 1259C, for 122091.....
49054	9412	Looper Gate Lock Spring, for 58024.....
49056	9415	Needle Bar Bushing (back) for 146-1 Ma- chine.....
49057	9415	Needle Bar Connecting Link Hinge Stud, for 49167 and 122100.....
49059	9411	Presser Bar, for 146-1 Machine.....
49060	9417	" " Bushing (back) for 146-1 Ma- chine.....
49061	9417	Presser Bar Bushing (front) for 146-1 Machine.....
49065	9417	Presser Bar Lifter Bracket with 453C and 892F, for 146-1 Machine.....
49067	9427	Presser Bar Spring (flat) for 146-1 Ma- chine.....
49071	9420	Thread (looper) Eyelet, for 146-1 Ma- chine.....
49072	9423	Thread (looper) Take-up, for 146-1 Ma- chine.....
49073	9422	Thread (needle) Controller, for 146-1 Machine.....
49075	9425	Thread (needle) Take-up with 457C, for 146-1 Machine.....
49080	9413	Looper Thread Guard, for 49036.....
49084	9403	Arm Rock Shaft Oil Cover.....
*49086	-----	Looper Carrier Pitman End Bearing (low- er) for 49088.....
49088	9414	Looper Carrier Pitman Head (lower) for 124174, Nos. 46237, 49086 and two 171E.....
49093	9406	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (long) braided cotton, for 49012.....
49093	9406	Arm Rotary Shaft Flanged Bushing (up- per) Oil Pad (long) braided cotton, for 49012.....
*49101	9415	Needle Bar Connecting Link, for 49167 and 122100.....
49109	9407	Crank Connecting Rod Adjusting Washer, for 58033 and 122012.....



## NUMERICAL LIST OF PARTS

37

No.	Plate	Name
49109	9407	Feed Eccentric Connection Adjusting Screw Washer, for 122101.....
49156	9405	Arm Rock Shaft, for 146-1 Machine.....
49167	-----	Needle Bar Connecting Link 49101 with 49057 and 49268, for 146-1 Machine.
49223	9425	Thread (upper) Take-up Roller, for 124216.....
49224	9425	Thread (upper) Take-up Roller Pin, for 124216.....
49261	9402	Arm Rock Shaft Crank (upper) with 50282E and 50457C, for 146-1 Ma- chine.....
49262	9402	Arm Rock Shaft Crank (lower) with 50282E and 50457C, for 146-1 Ma- chine.....
49268	9415	Needle Bar Connecting Stud with 1454E, for 49167.....
49276	21518	Looper Carrier Rock Shaft Crank (back) forked with 140174C, for 146-51 Ma- chine.....
49276	21518	Looper Carrier Rock Shaft Crank (upper) forked with 140174C, for 146-1 Ma- chine.....
50069C	9431	Looper Bell Crank Pitman Ball Screw Stud (upper) for 146-51 Machine....
50070C	9414	Looper Bell Crank Pitman Ball Screw Stud (back) for 146-1 Machine.....
50070C	9414	Looper Bell Crank Pitman Ball Screw Stud (lower) for 146-51 Machine....
50070C	9414	Looper Carrier Pitman Ball Screw Stud (right) for 122037.....
50070C	9414	Looper Carrier Pitman Ball Screw Stud (upper) for 124177.....
50083C	9414	Looper Carrier Rock Shaft Crank (back) Set Screw, for 49048, obsolete....
50083C	9414	Looper Carrier Rock Shaft Crank (upper) Set Screw, for 49048, obsolete....
50086C	9430	Feed Regulating Screw Stud, for 146-51 Machine.....
50087J	9408	Presser Foot Plate Hinge Screw, for 58009 and 137090.....
50244C	9430	Crank Connecting Rod Hinge Screw, for 124229 and 146-1 Machine.....
50245C	9431	Feed Regulating Screw Stud, for 146-1 Machine.....
50246C	9431	Looper Bell Crank Pitman Ball Screw Stud (front) for 146-1 Machine....
50247C	9431	Thread Cutting Blade Hinge Screw, for 146-1 Machine.....

## NUMERICAL LIST OF PARTS

No.	Plate	Name
50261C	9419	Tension (looper thread) Screw Stud, for 64881.....
50261C	9419	Tension (needle thread) Screw Stud, for 64881.....
50282C	9402	Arm Rock Shaft Crank (back) Set Screw, for 146-51 Machine, obsolete use 51157C.....
50282C	9402	Arm Rock Shaft Crank (front) Set Screw, for 146-51 Machine, obsolete use 51157C.....
50282E	9402	Arm Rock Shaft Crank (lower) Position Screw, for 49262.....
50282E	9402	Arm Rock Shaft Crank (upper) Position Screw, for 49261.....
50457C	9402	Arm Rock Shaft Crank (lower) Set Screw, for 49262.....
50457C	9402	Arm Rock Shaft Crank (upper) Set Screw, for 49261.....
50467F	9431	Cloth Plate Screw (top of plate) for 146-51 Machine.....
50582C	9402	Arm Rock Shaft Crank (back) Position Screw, for 122098.....
50582C	9402	Arm Rock Shaft Crank (front) Position Screw, for 122099.....
51157C	21516	Arm Rock Shaft Crank (back) Set Screw, for 122098.....
51157C	21516	Arm Rock Shaft Crank (front) Set Screw, for 122099.....
51224W	21516	Arm Side Cover (left) Thumb Screw.....
51224W	21516	" " " (right) Thumb Screw.....
51862	9419	Thread Cutting Blade (right) Roller and Stud, for 124202.....
52045	9401	Arm Oil Tube Packing (wick) for 11119 and 124179.....
52150	21516	Arm Oil Tube Packing (braided cotton) for 58030.....
52716	9412	Looper Gate Hinge Pin, for 124185.....
52975	9419	Tension (looper thread) Spring, for 146-51 Machine.....
52975	9419	Tension (needle thread) Spring, for 146-51 Machine.....
54897	9401	Arm Oil Tube Oil Cap, for 58030.....
54897	9401	Oil Pipe Holder Oil Cup, for 58037.....
58001	9411	Looper Gate with 735C, for 58024.....
58002	9412	" " Hinge Pin, for 58024.....
58003	9408	Presser Foot Guard, for 58006, obsolete superseded by 137088 not interchangeable.....
58004	-----	Presser Foot Plate for 58009 and 137090



## NUMERICAL LIST OF PARTS

39

No.	Plate	Name
58005	-----	Presser Foot Shank for 58009 and 137090
58006	-----	" " Toe with 906C and 58003, for 58009, obsolete superseded by 137089 not interchangeable.....
58007	9408	Presser Foot Toe Hinge Stud, for 58009 and 137090.....
58008	9408	Presser Foot Toe Spring, for 58009 and 137090.....
58009	9408	Presser Foot (hinged) complete for 146-1 Machine, Nos.50087D and 58004 to 58008, obsolete use 137090.....
58010	9428	Thread Cutting Blade (inside) with 1933, for 146-1 Machine.....
58011	9428	Thread Cutting Blade (outside) with 1933, for 146-1 Machine.....
58012	9426	Thread Cutting Lever 124256 with 58013 and two 161J, for 146-1 Machine....
58013	9420	Thread Cutting Lever Extension, for 58012.....
58014	9421	Thread Cutting Lever Plate, for 146-1 Machine.....
58023	9416	Cloth Plate, for 58024.....
58024	-----	Cloth Plate complete for 146-1 Machine, Nos.49054,58001,58002,58023 and two 226J.....
58025	9408	Throat Plate (large needle hole) for 17686, for 146-1 Machine.....
58028	9408	Throat Plate (small needle hole) for 17686, for 146-1 Machine.....
58030	9401	Arm Oil Tube with 52150 and 54897 for oiling 58033 and 122012 (lower bearing).....
58031	9403	Arm Rotary Shaft Bushing (lower) for 146-1 Machine.....
58032	9403	Arm Rotary Shaft Flanged Bushing (in- termediate) for 146-1 Machine.....
58033	9405	Crank Connecting Rod with 896E, 49109, and two 145E for 58059.....
58035	9415	Needle Bar Bushing (front) for 146-1 Machine.....
58036	9411	Oil Pipe, for 58037.....
58037	-----	" " 58036 with 54897, 58038 and 58039 for Arm Rotary Shaft Lower Bearing, for 146-1 Machine.....
58038	9417	Oil Pipe Holder, for 58037.....
58039	9417	" " Packing (braided cotton) for 58037.....
58040	9417	Oil Tube, for 58041.....



## NUMERICAL LIST OF PARTS

No.	Plate	Name
58041	-----	Oil Tube 58040 with 58044 and 58045 for oiling 49049 and 49051, for 146-1 Machine.....
58042	9417	Oil Tube, for 58043.....
58043	-----	" " 58042 with 58044 and 58045 for Arm Rotary Shaft Intermediate Bearing, for 146-1 Machine.....
58044	9417	Oil Tube Connection with two 198J, for 58041 and 58043.....
58045	21516	Oil Tube Packing (braided cotton) for 58041 and 58043.....
58046	9428	Presser Bar Lifter, for 146-1 Machine..
58047	9428	" " " Hinge Stud, for 146-1 Machine.....
58048	9428	Presser Bar Lifter Link, for 146-1 Machine.....
58049	9428	Presser Bar Lifter Link Spring, for 146-1 Machine.....
58052	9415	Needle Bar, for 146-1 Machine.....
58054	9424	Feed Lifting Eccentric Connection with 457C, 2653, 4784 and two 1057E, for 146-1 Machine.....
*58059	-----	Arm Rotary Shaft 17672 with 58033, for 146-1 Machine.....
59019	9413	Looper Carrier Gib, for 49044 and 122032.....
59033	9417	Presser Bar (left) Bushing (lower) for 146-51 Machine.....
59033	9417	Presser Bar (right) Bushing (lower) for 146-51 Machine.....
64805	9417	Arm Rotary Shaft Flanged Bushing Oil Pad (braided cotton) for intermediate bearing, for 146-51 Machine....
64881	-----	Tension (looper thread) Screw Stud 50261C with 1560C, for 146-51 Machine.....
64881	-----	Tension (needle thread) Screw Stud 50261C with 1560C, for 146-51 Machine.....
68714	21518	Pulley (loose) Ball Bearing, for 137132
120341	9432	Tweezers, curved (Accessories).....
120344	9432	Oiler (copper plated) with 120345 (Accessories).....
120345	9432	Oiler (spout) 4 1/2 in. long, for 120344.
120908	21517	Bag Guide Hook (Accessories).....
122003	9401	Arm Rock Shaft Bushing (front) for 146-51 Machine.....
122012	9405	Crank Connecting Rod with 896E, 49109, and two 145E, for 124229.....

## NUMERICAL LIST OF PARTS

41

No.	Plate	Name
122013	21517	Face Plate, for 146-51 Machine.....
122014	9406	Feed Bar, for 122015.....
122015	-----	Feed Bar complete for 124231, Nos.190J, 457C, 1258C,122014,122016 to 122018 and two 704C.....
122016	9418	Feed Bar Extension, for 122015.....
122017	9418	" " Oil Pad (braided cotton) for 122015.....
122018	9418	Feed Bar Wearing Plate, for 122015.....
122020	9422	Thread (under) Take-up Eccentric with 1036C, for 146-51 Machine.....
122021	9406	Feed Eccentric Connection with 2653, 4784 and two 145E, for 146-51 Machine, obsolete use 122101.....
122023	9424	Feed Lifting Cam with 1258C, for 146-51 Machine.....
122024	9406	Feed Rock Shaft with two 1258C, for 124231.....
122025	9406	Feed Rock Shaft Hinge Pin, for 146-51 Machine.....
122028	9413	Looper (double thread) for 146-51 Machine.....
122029	9413	Looper (single thread) for 146-51 Machine.....
122030	9410	Looper Bell Crank, for 122095.....
122031	9410	" " " Pitman with two each 171E and 1057E, for 146-51 Machine.
122032	9413	Looper Carrier with two each 175E,59019 and three 1120C, for 122090.....
122033	9410	Looper Carrier Pitman complete for 146-51 Machine, Nos.1722E, 1723E, and 122036 to 122038.....
*122034	-----	Looper Carrier Pitman End Bearing (left) for 122036.....
*122035	-----	Looper Carrier Pitman End Bearing (right) for 122037.....
122036	9410	Looper Carrier Pitman Head (left) for 122033, Nos. 46237, 122034 and two 171E.....
122037	9410	Looper Carrier Pitman Head (right) for 122033, Nos. 50070C,122035 and two 171E.....
122038	9410	Looper Carrier Pitman Rod, for 122033..
122040	9412	" " Rock Shaft Crank (front) with two 1255D, for 122090.....
122042	9411	Needle Bar (hollow) for 146-51 Machine.
122043	9415	" " Bushing (lower) for 146-51 Machine.....
122045	9415	Needle Bar Connecting Stud with two 1454E, for 122100.....



## NUMERICAL LIST OF PARTS

No.	Plate	Name
122047	9415	Needle Guard, for 146-51 Machine.....
122048	9411	Presser Bar (left) for 146-51 Machine..
122049	9417	" " " Bushing (upper) for 146-51 Machine.....
122049	9417	Presser Bar (right) Bushing (upper) for 146-51 Machine.....
122050	9417	Presser Bar (left) Lifting Bracket with 1258C, for 146-51 Machine.....
122051	9411	Presser Bar (right) for 146-51 Machine.
122052	9417	" " " Lifting Bracket with 1258C, for 146-51 Machine.....
122054	9427	Presser Bar Spring (flat) for 146-51 Machine.....
122055	9427	Presser Bar Spring Bracket, for 146-51 Machine.....
122057	-----	Presser Foot (left) Shank, for 124197..
122062	9419	Tension (looper thread) Disc, for 146-51 Machine.....
122062	9419	Tension (needle thread) Disc, for 146-51 Machine.....
122063	9419	Tension (looper thread) Screw Stud Sleeve, for 146-51 Machine.....
122063	9419	Tension (needle thread) Screw Stud Sleeve, for 146-51 Machine.....
122064	9420	Thread Eyelet (side of arm) for 146-51 Machine.....
122065	9420	Thread Guide (side of arm) for 146-51 Machine.....
122066	9422	Thread (under) Take-up, for 146-51 Ma- chine.....
122067	9422	Thread (under) Take-up Lever with two each 145E and 1279F, for 146-51 Ma- chine.....
122069	9425	Thread (under) Take-up Lever Connection, for 146-51 Machine.....
122070	9421	Thread (under) Take-up Stripper, for 146-51 Machine.....
122071	9422	Thread (under) Take-up Stripper Bracket with three 462C, for 146-51 Machine
122072	9421	Thread (under) Take-up Stripper Bracket Bushing, for 146-51 Machine.....
122074	9425	Thread (upper) Nipper Releaser, for 146-51 Machine.....
122075	9407	Thread (upper) Nipper Releasing Pin, for 122096.....
122076	9421	Thread (upper) Nipper Roller Bracket with 735C, for 122096.....
122077	9425	Thread (upper) Nipper Spring, for 146-51 Machine.....



## NUMERICAL LIST OF PARTS

43

No.	Plate	Name
122078	9425	Thread (upper) Nipper Stud, for 146-51 Machine.....
122090	-----	Looper Carrier 122032 with 122040 and 124193, for 146-51 Machine.....
122091	-----	Looper Eccentric 49051 with 49049.....
122095	-----	" Bell Crank 122030 with 49039, for 146-51 Machine.....
122096	-----	Thread (upper) Nipper Roller Bracket 122076 with 1979 and 122075, for 146-51 Machine.....
122097	9416	Arm Rock Shaft, for 146-51 Machine.....
122098	9402	" " " Crank (back) with 50582C and two 51157C, for 146-51 Machine.
122099	9402	Arm Rock Shaft Crank (front) with 50582C and 51157C, for 122100.....
122100	-----	Needle Bar Connecting Link 49101 with 1517J, 49057, 122045 and 122099, for 146-51 Machine.....
122101	21518	Feed Eccentric Connection with 896E, 2653, 4784, 49109 and two 145E, for 146-51 Machine.....
124001	21517	Balance Wheel and Pulley (tight) 2 7/8 in. diam. with two 430C, for 137130
124002	9427	Pulley (loose) 2 7/8 in. diam., for 146-1 Machine, obsolete use 137136.
124161	9433	Wrench, for 1513, obsolete.....
124162	9433	Wrench, for 1518, 1519, 1619 and 1731, obsolete.....
124163	9433	Wrench, for 1508, obsolete.....
124165	9433	" " 1636, obsolete.....
*124170	-----	Arm, upper and lower (solid) with 15404 and two 15405, for 146-1 Machine...
124171	9421	Thread Cutting Lever Hinge Stud, for 146-1 Machine.....
124172	9412	Looper Carrier Rock Shaft, for 146-1 Machine, obsolete superseded by 137138 not interchangeable.....
124173	9414	Looper Carrier Rock Shaft Crank (lower) with 156C, 157E and 443C, for 146-1 Machine.....
124174	9414	Looper Carrier Pitman complete for 146-1 Machine, Nos. 1708E, 1709E, 49046, 49088 and 124177.....
*124176	-----	Looper Carrier Pitman End Bearing (upper) for 124177.....
124177	9414	Looper Carrier Pitman Head (upper) for 124174, Nos. 50070C, 124176 and two 175E.....
*124178	-----	Arm, upper and lower (solid) with 15404 and two 15405, for 146-51 Machine..

## NUMERICAL LIST OF PARTS

No.	Plate	Name
124179	9401	Arm Oil Tube with 52045 for oiling intermediate bearing, for 146-51 Machine.....
124180	9416	Arm Rotary Shaft, for 124230.....
124181	9403	" " " Bushing (front) for 146-51 Machine.....
124182	9403	Arm Rotary Shaft Bushing (intermediate) for 146-51 Machine.....
124183	9416	Balance Wheel and Pulley (tight) 4 3/8 in. diam. with two 430C, for 146-51 Machine.....
124184	9416	Cloth Plate, for 124185.....
124185	-----	Cloth Plate complete for 146-51 Machine, Nos. 42005, 52716, 124184, 124191 and two 217J.....
124186	9418	Feed Bar Hinge Pin, for 124231.....
124187	9409	Feed Dog, 16 teeth (5 1/3 teeth to the inch) for 124217, for 146-51 Machine.....
124188	9424	Feed Eccentric with two 1036C, for 146-51 Machine.....
124189	9424	Feed Rock Shaft Hinge Pin Bushing, for 146-51 Machine.....
124190	9410	Looper Carrier Rock Shaft, for 146-51 Machine, obsolete superseded by 137139 not interchangeable.....
124191	9416	Looper Gate with 1259C, for 124185.....
124192	9415	Needle Bar Bushing (upper) for 146-51 Machine.....
124193	9417	Looper Carrier Collar with two 1253C, for 122090.....
124193	9417	Presser Bar (left) Collar with two 1253C, for 146-51 Machine.....
124194	9428	Presser Bar Lifter, for 146-51 Machine.
124195	9411	" " " Lifting Lever, for 146-51 Machine.....
124196	-----	Presser Foot (left) Plate, for 124197..
124197	9429	Presser Foot (left hinged) complete for 146-51 Machine, Nos. 646F, 122057, 124196, 124198 and two 233J.....
124198	9429	Presser Foot (left) Finger Guard, for 124197.....
124199	9429	Presser Foot (right) for 146-51 Machine
124200	9427	Pulley (loose) 4 3/8 in. diam., for 146-51 Machine.....
124201	9419	Thread Cutting Blade (left) with 1933, for 146-51 Machine.....
124202	9419	Thread Cutting Blade (right) with 51862, for 146-51 Machine.....



## NUMERICAL LIST OF PARTS

45

No.	Plate	Name
124203	9419	Thread Cutting Blade Connecting Link, for 146-51 Machine.....
124204	9421	Thread Cutting Blade Guide Plate, for 146-51 Machine.....
124205	9421	Thread Cutting Blade Hinge Stud, for 146-51 Machine.....
124206	9421	Thread Cutting Blade Spring, for 146-51 Machine.....
124207	9426	Thread Cutting Lever, for 146-51 Machine .....
124208	9420	Thread Cutting Lever Spring, for 146-51 Machine.....
124209	9420	Thread Cutting Lever Stop, for 146-51 Machine.....
124210	9423	Thread Guard (back of arm) for 146-51 Machine.....
124211	9423	Thread (upper) Controller with 1320C and 124215, for 146-51 Machine.....
124212	9423	Thread (upper) Controller Connecting Link, for 146-51 Machine.....
124213	9423	Thread (upper) Controller Lever, for 146-51 Machine.....
124214	9425	Thread (upper) Controller Lever Lifting Bracket with 1036C and 1823, for 146-51 Machine.....
124215	9425	Thread (upper) Controller Roller, for 124211.....
124216	9425	Thread (upper) Take-up with 49223 and 49224, for 146-51 Machine.....
124217	9409	Throat Plate, for 124187.....
124227	9406	Feed Rock Shaft Crank with 12000 and two 1177E, for 124228.....
124228	-----	Feed Rock Shaft complete for 146-1 Machine, Nos. 49033 and 124227.....
124229	-----	Crank Connecting Rod 122012 with 1513J and 50244C, for 124230.....
124230	-----	Arm Rotary Shaft 124180 with 124229, for 146-51 Machine.....
124231	-----	Feed Bar 122015 with 122024 and 124186, for 146-51 Machine.....
124256	-----	Thread Cutting Lever, for 58012.....
137088	21516	Presser Foot Finger Guard, for 137089..
137089	-----	" " Toe with 227J, 906C and 137088, for 137090.....
137090	21516	Presser Foot (hinged) complete for 146-1 Machine, Nos. 50087J, 58004, 58005, 58007, 58008 and 137089.....
137130	-----	Pulleys (ball bearing) complete for 146-1 Machine, Nos. 124001 and 137136.....

## NUMERICAL LIST OF PARTS

No.	Plate	Name
137131	21517	Pulley (loose) 2 7/8 in. diam. with 200584D, for 137132.....
137132	-----	Pulley (loose) 137131 with 68714, for 137136.....
137133	21516	Pulley (loose) Spacing Collar, for 137136.....
137136	-----	Pulley (loose) 137132 with 137133, for 137130.....
137138	21518	Looper Carrier Rock Shaft, for 146-1 Machine.....
137139	21517	Looper Carrier Rock Shaft, for 146-51 Machine.....
140174C	21516	Looper Carrier Rock Shaft Crank (back) Position Screw, for 49276.....
140174C	21516	Looper Carrier Rock Shaft Crank (upper) Position Screw, for 49276.....
150203	20335	Thread Unwinder Spool Rest Cushion (felt) for 225258.....
200383C	21516	Thread Unwinder Spool Rest Rod Set Screw, for 202490.....
200584D	21516	Pulley (loose) Oil Plug Screw, for 137131.....
201018C	21516	Thread Unwinder Spool Rest Set Screw, for 225257.....
201696J	21516	Thread Unwinder Thread Guide Lock Nut, for 225258.....
202490	20335	Thread Unwinder Spool Stand with 200383C, for 225258.....
225257	20335	Thread Unwinder Spool Rest with 201018C, for 225258.....
225258	20335	Thread Unwinder complete for two spools or two large cones of thread, Nos. 201696J, 202490, 225257, 225324, 225326, 225388, two each 150203, 225391 and three wood screws 7/8 in. No. 12.....
225322	21516	Thread Unwinder Thread Guide Rod Washer, for 225324.....
225324	20335	Thread Unwinder Thread Guide Rod with 208E and 225322, for 225258.....
225326	20335	Thread Unwinder Thread Guide Position Cup, for 225258.....
225388	20335	Thread Unwinder Spool Rest Rod, for 225258.....
225390	21517	Thread Unwinder Thread Cone Holder for inverted Cones, for 225258.....
225391	20335	Thread Unwinder Thread Guide, for 225258.....



ILLUSTRATIONS  
OF  
PARTS

# PLATE 9401—FULL SIZE

58030



17670



17669



124179



11119



54897



52045



 
29599




443




122003

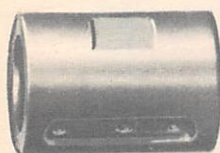


49003

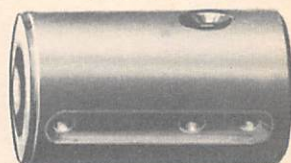 


49004

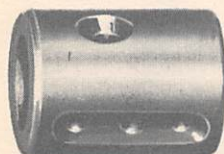 

49006

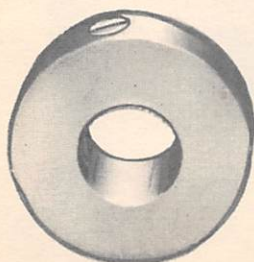 

17671

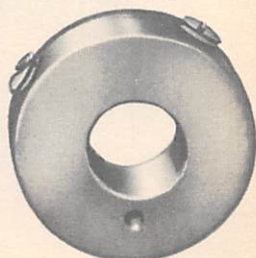 





## PLATE 9402—FULL SIZE

---

 49262

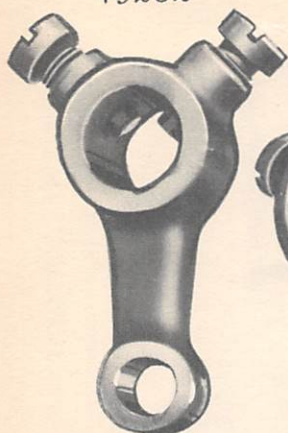

49261

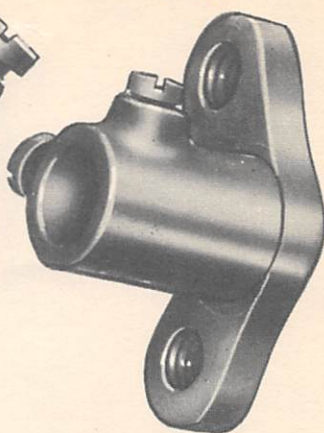 

42366



50282



50582



 
50457



122099




122098

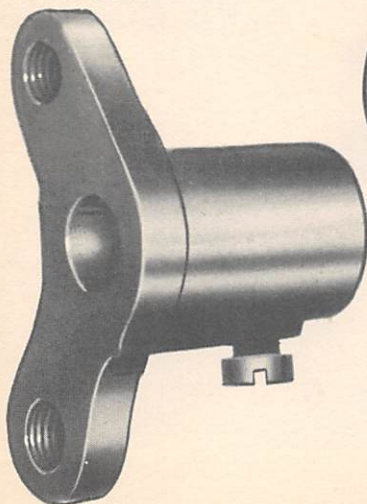


# PLATE 9403—FULL SIZE

 
124182

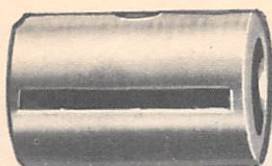

58031

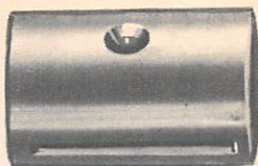 


49005

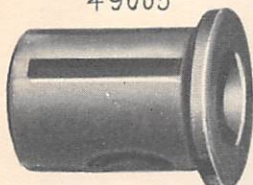 


49014



 
58032

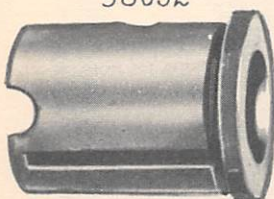


124181

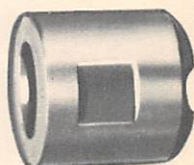 

49010

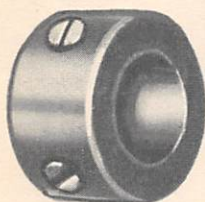 

49084

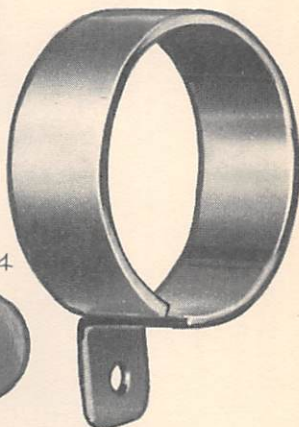 

17675



17674



1259





PLATE 9405—ONE-HALF SIZE

17672



 
49156



122012



58033

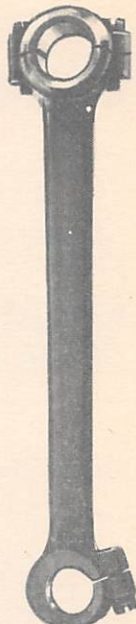

17685



49012


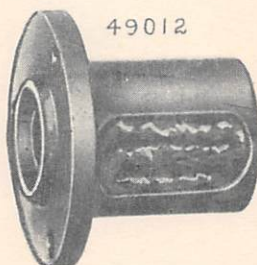 


PLATE 9406—ONE-HALF SIZE

 17693



122024

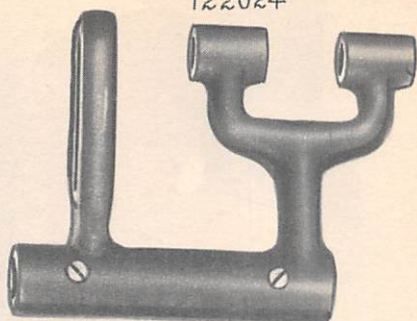

 
122025



122021




124227

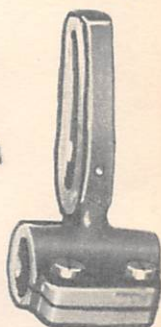

49093



 49033

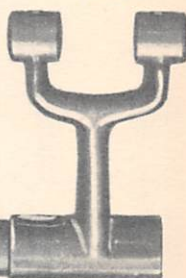

122014


 




PLATE 9407—FULL SIZE

 
17683

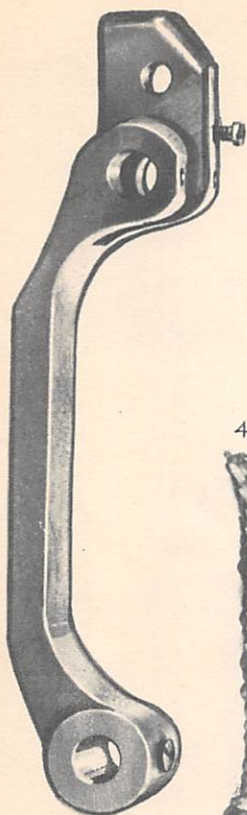

58085



 49013

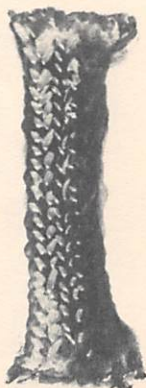

122075



17684



2269



2653



220



 
457



4784



17679

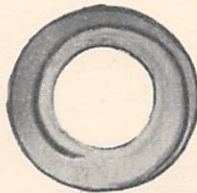

49109




# PLATE 9408—FULL SIZE

 17686



58009

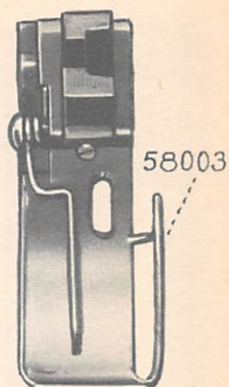

58003

50087



58007



 
906



58008



58028

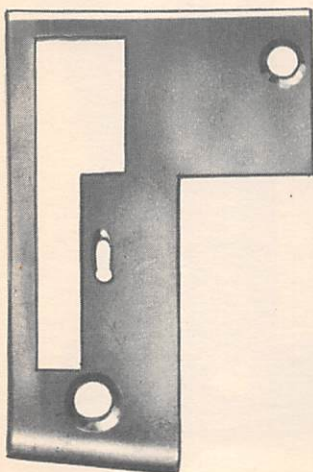

58025


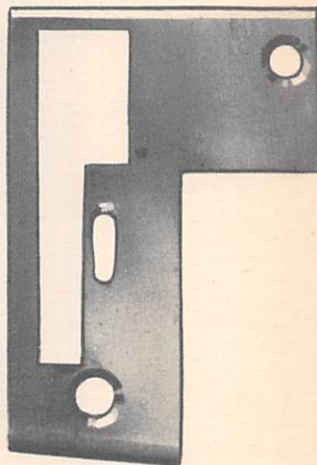 




PLATE 9409—FULL SIZE

---

 124187

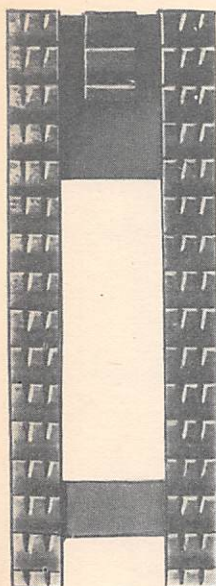

124217



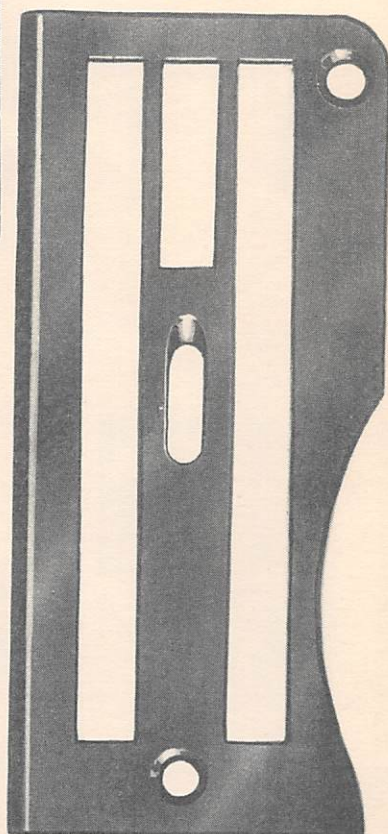 


PLATE 9410—ONE-HALF SIZE

 
122031

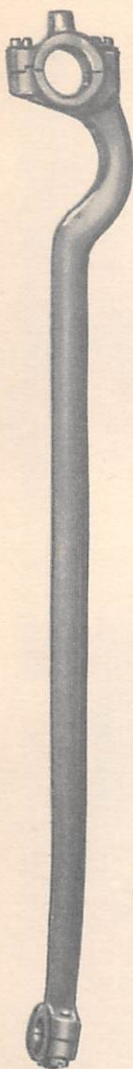

17695

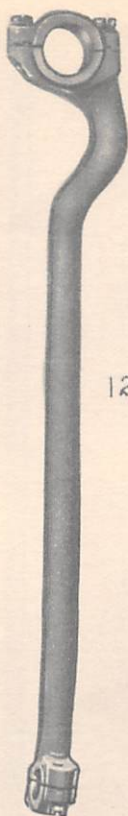 

122033

 

124190

 


122037


122038

122036

122030

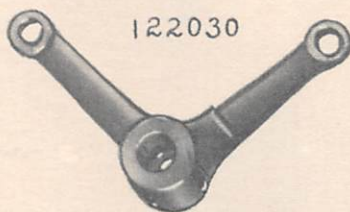

17694

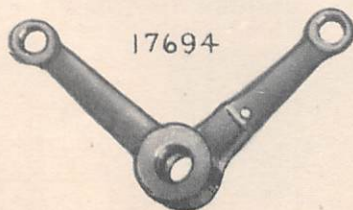 



# PLATE 9411—ONE-HALF SIZE

122048

122051

 
122042

58036


49059



124195




58001

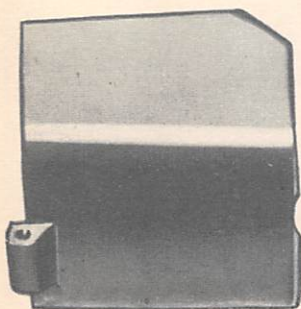 

# PLATE 9412—FULL SIZE

 
122040

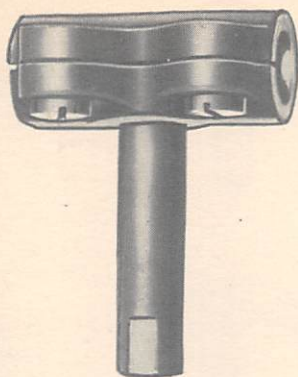

124172



 49051

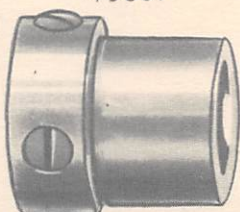

52716



58002



49054



42005




1255

 

 


PLATE 9413—FULL SIZE

122029

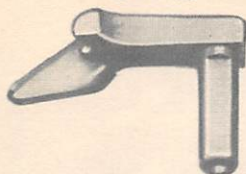

122028

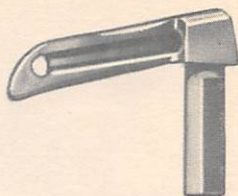

49036



 
122032



49039



49044

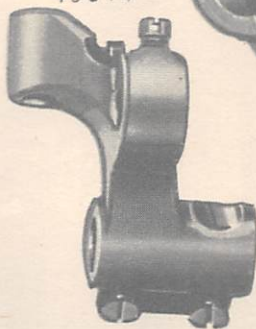

38440



49080



590



1120



1147




59019



21506



# PLATE 9414—FULL SIZE

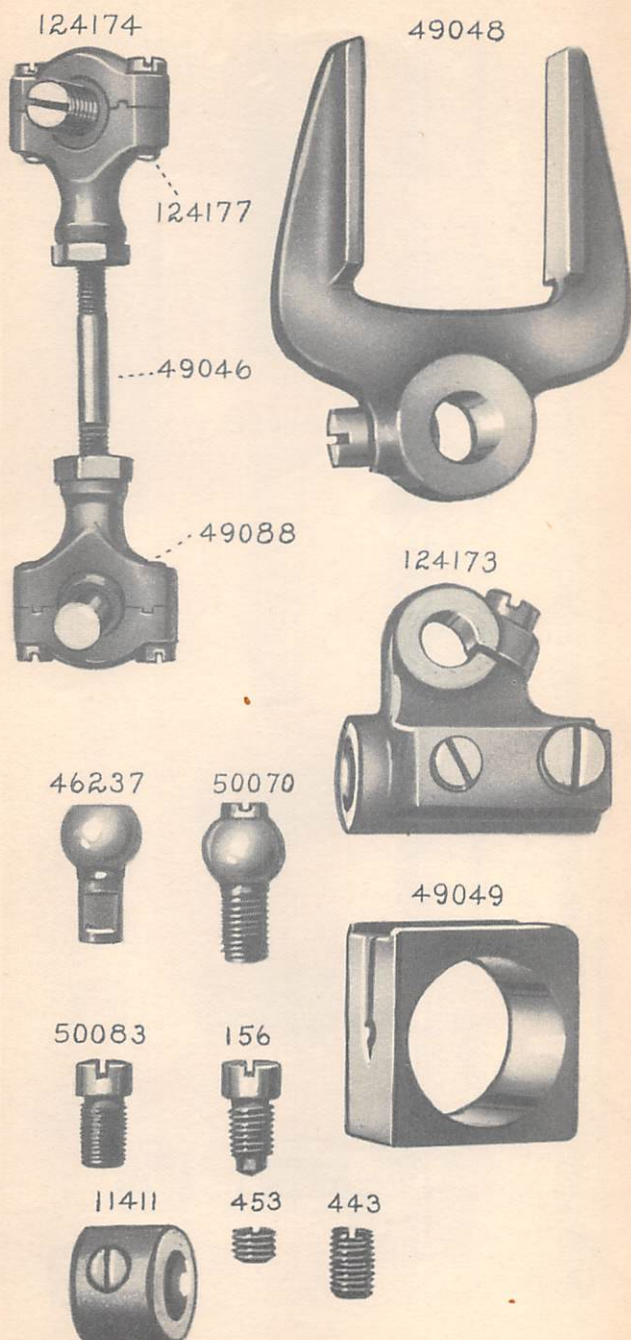 

# PLATE 9415—FULL SIZE

58052



49056



122043



58035



124192



 
49057



49268




49101

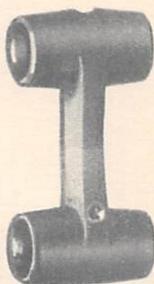

1454



 122045

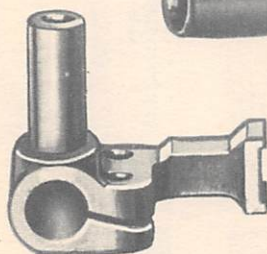

1629



122047



1753


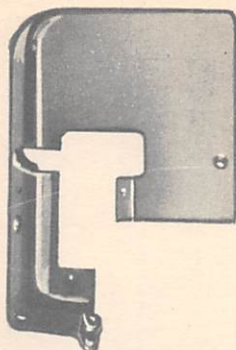 





PLATE 9416—ONE-FOURTH SIZE

122097 124180

 
58023

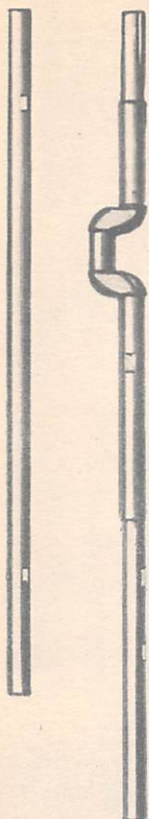


124184.

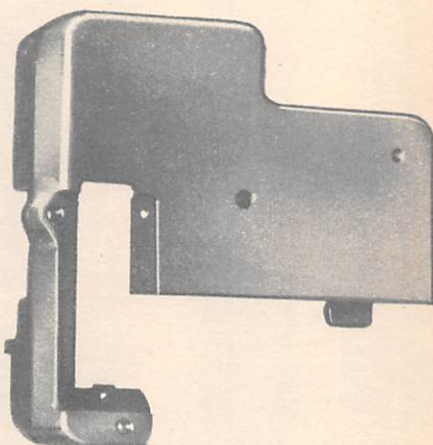 

124183

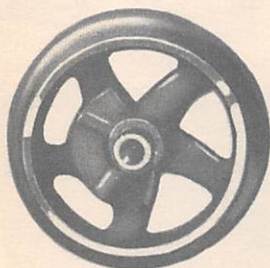 

124191

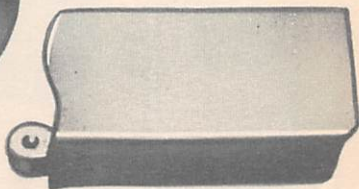 

# PLATE 9417—FULL SIZE

58039



58038



58044



49061



122049



64805



58040



198



49060



 
58042



59033



122050

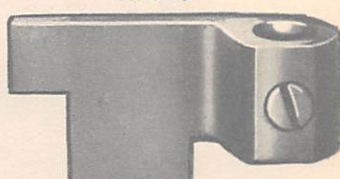

122052



124193



892



1253



49065


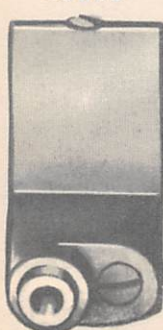 


PLATE 9418—FULL SIZE

 122016



124186

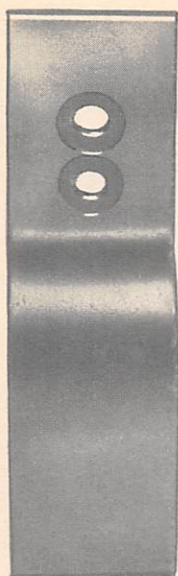

 
122017




122018



17687

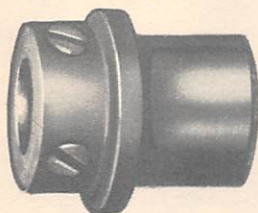


17688

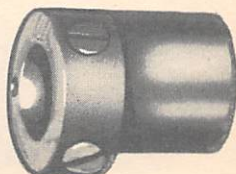 



# PLATE 9419—FULL SIZE

 122062

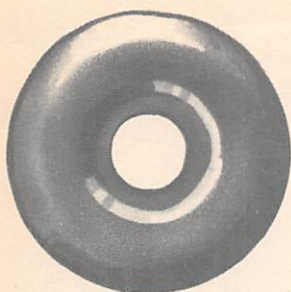


2102



1560



 17547

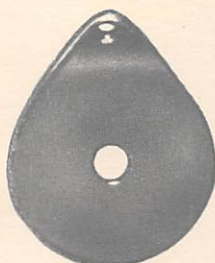

13710



916



50261



122063



52975



13915



124203



449



124201



124202




10148



51862



# PLATE 9420—FULL SIZE

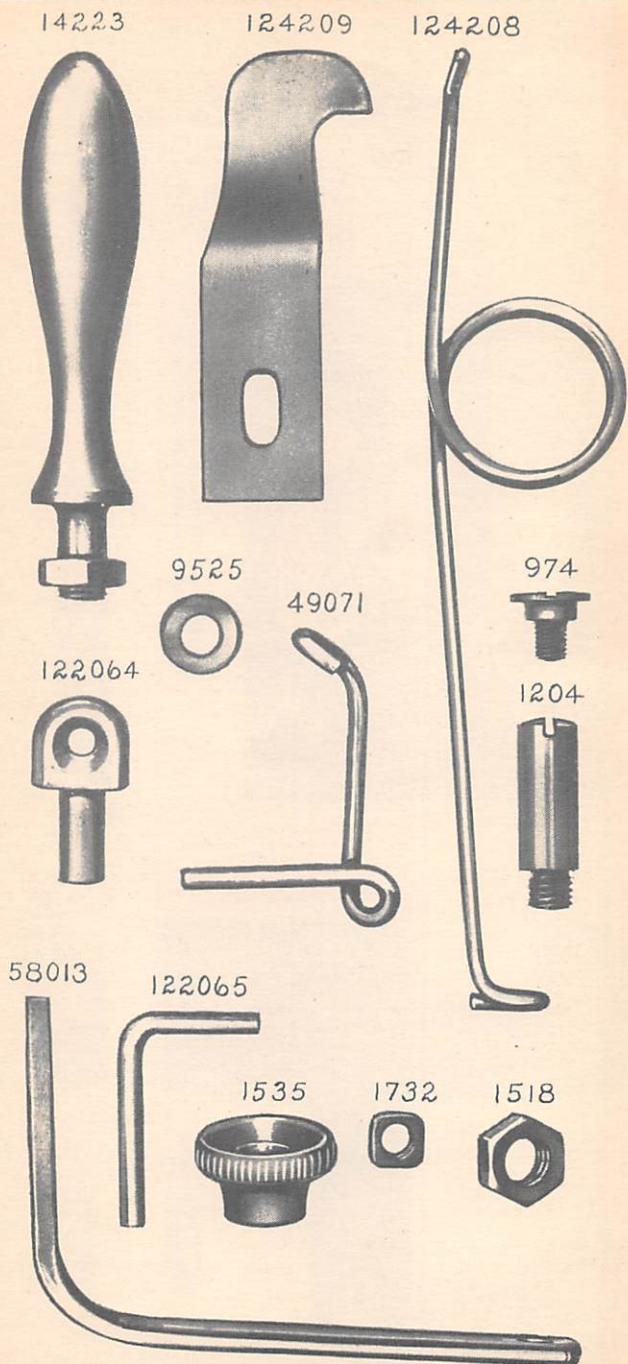 

# PLATE 9421—FULL SIZE

124206



17622



 
124205



124171



124204

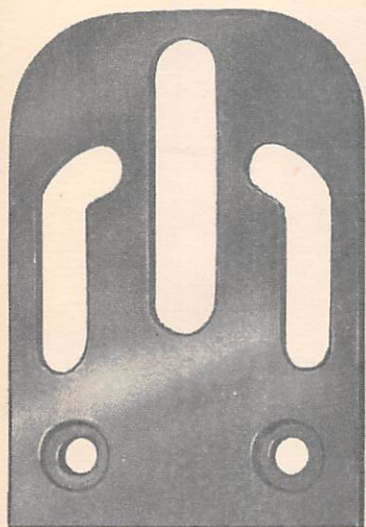


122070



19510



 58014

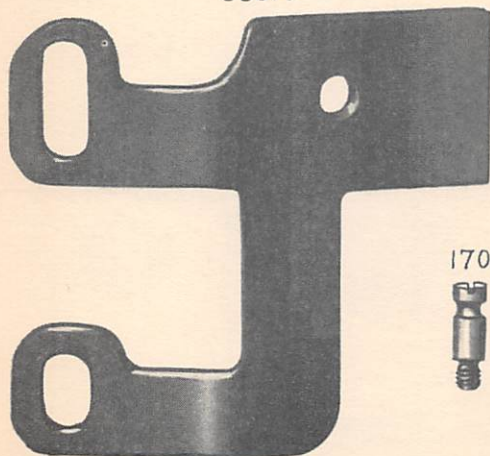

122076



170



122072

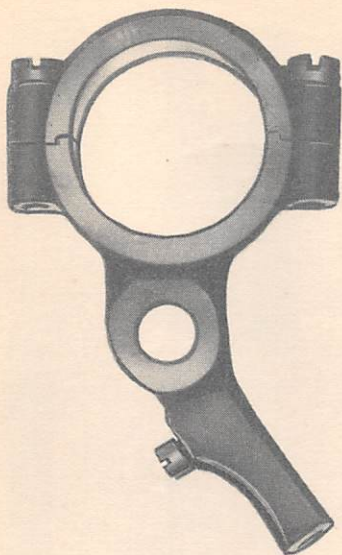




PLATE 9422—FULL SIZE

---

 122067



122066



 
49073



122071



122020

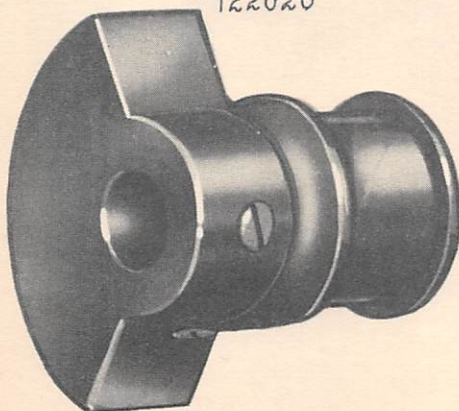


1177




PLATE 9423—FULL SIZE

---

 124211

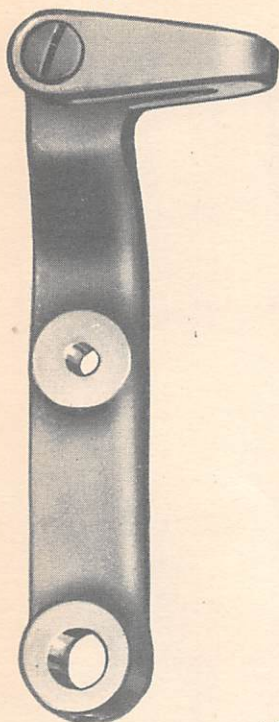

124213

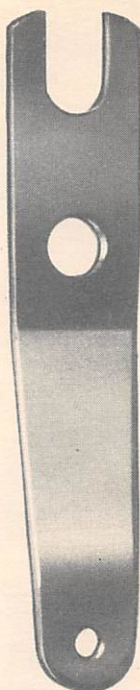 


49072





124212



 124210

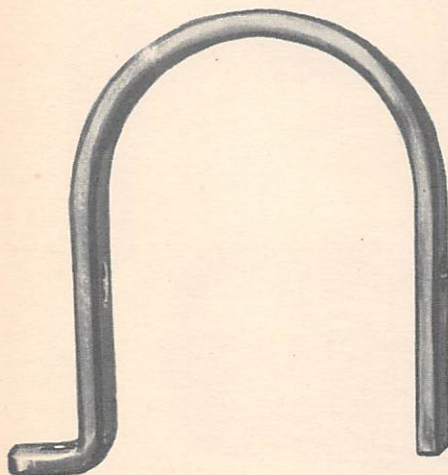


# PLATE 9424—FULL SIZE

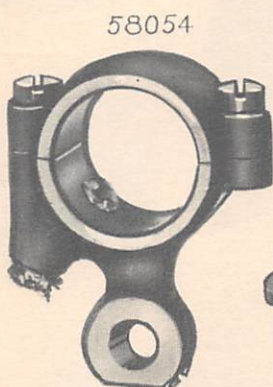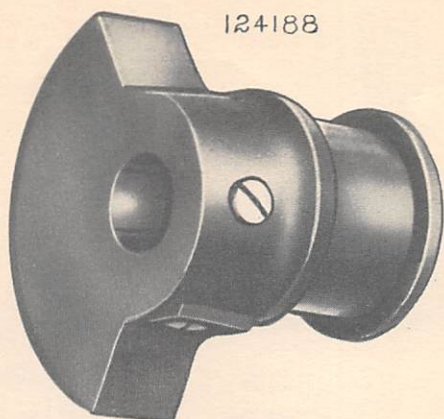  

49030 12000

 49043

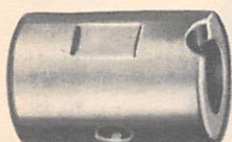

49032


27398






# PLATE 9425—FULL SIZE

 122069

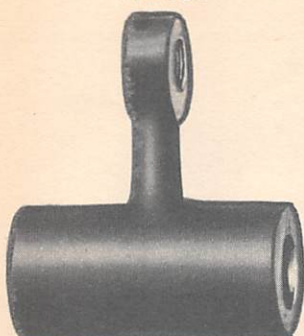


124214

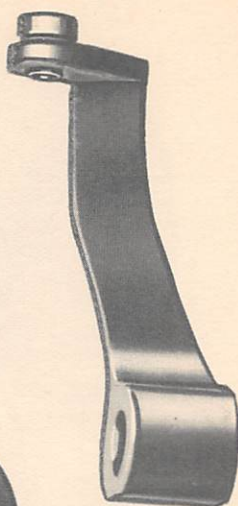 


122078



 32191

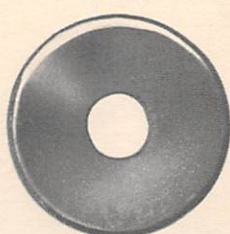

46383

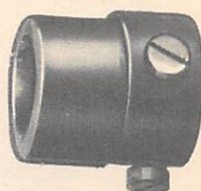 

122074



1979



735



49223



124215



 
49075



45083



124216

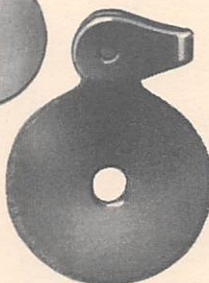

122077



49224



39541




1823




**PLATE 9426—ONE-HALF SIZE**

---

 124207

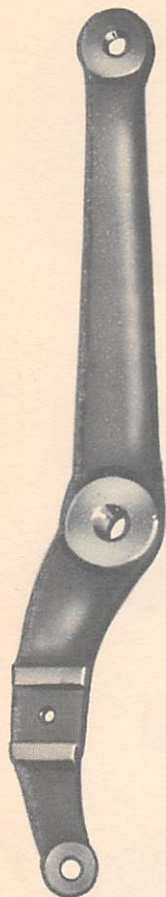

58012

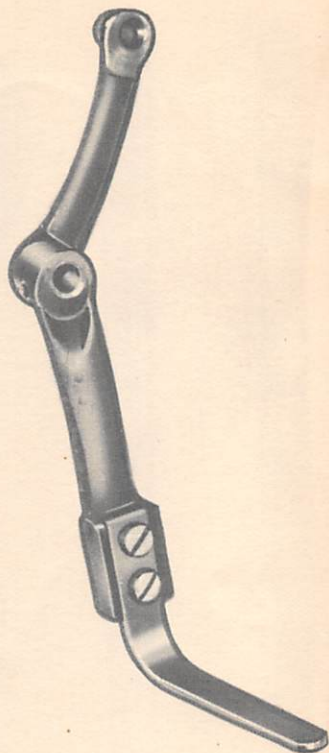 

**PLATE 9427—ONE-HALF SIZE**

---

 
49067




122054




124002

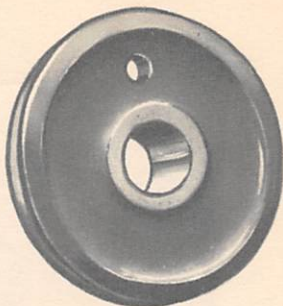

122055

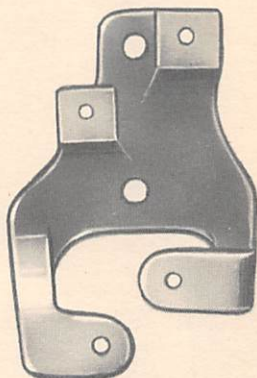 

124200

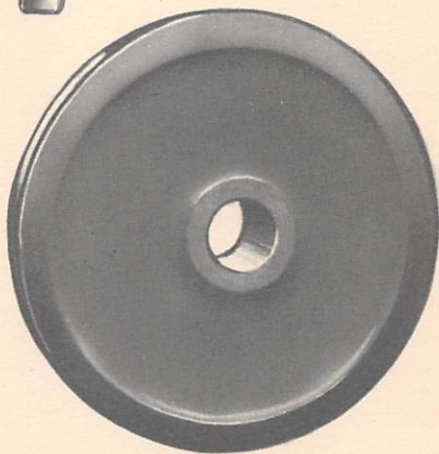 



# PLATE 9428—FULL SIZE

58047



15486



58049



 
439




1241



124194

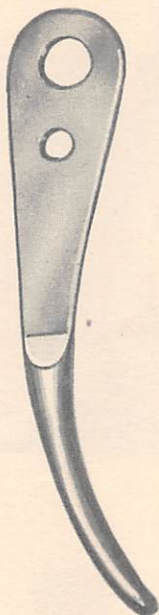


58046

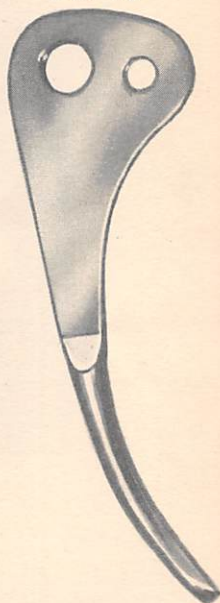 


58048



 58011

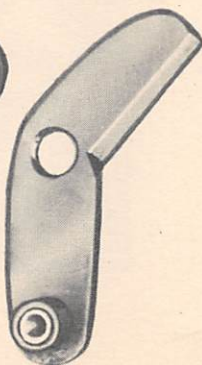

58010

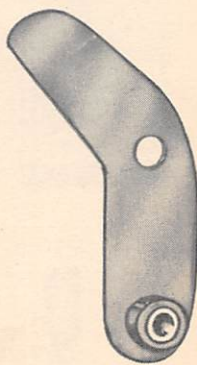 

1933




38468



PLATE 9429—FULL SIZE

---

 
124197

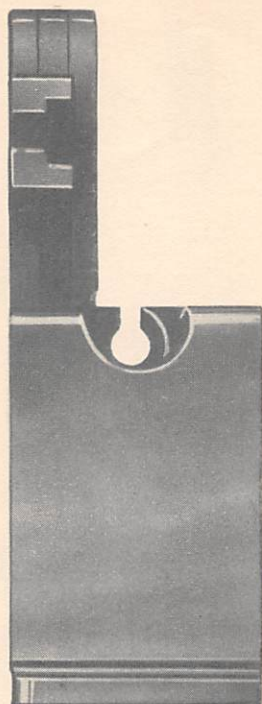

124199



 124198

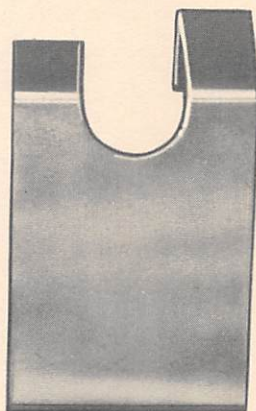

233



646



# PLATE 9430—FULL SIZE

144



1489



128 •



690



1396



145



157



896



152



159



898



161



172



704



914



160



158



190



175



171



193



217



226



1147



1279



964



 
199



212




50086



802



 50244

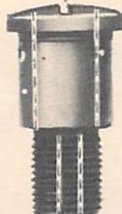

63





# PLATE 9431—FULL SIZE


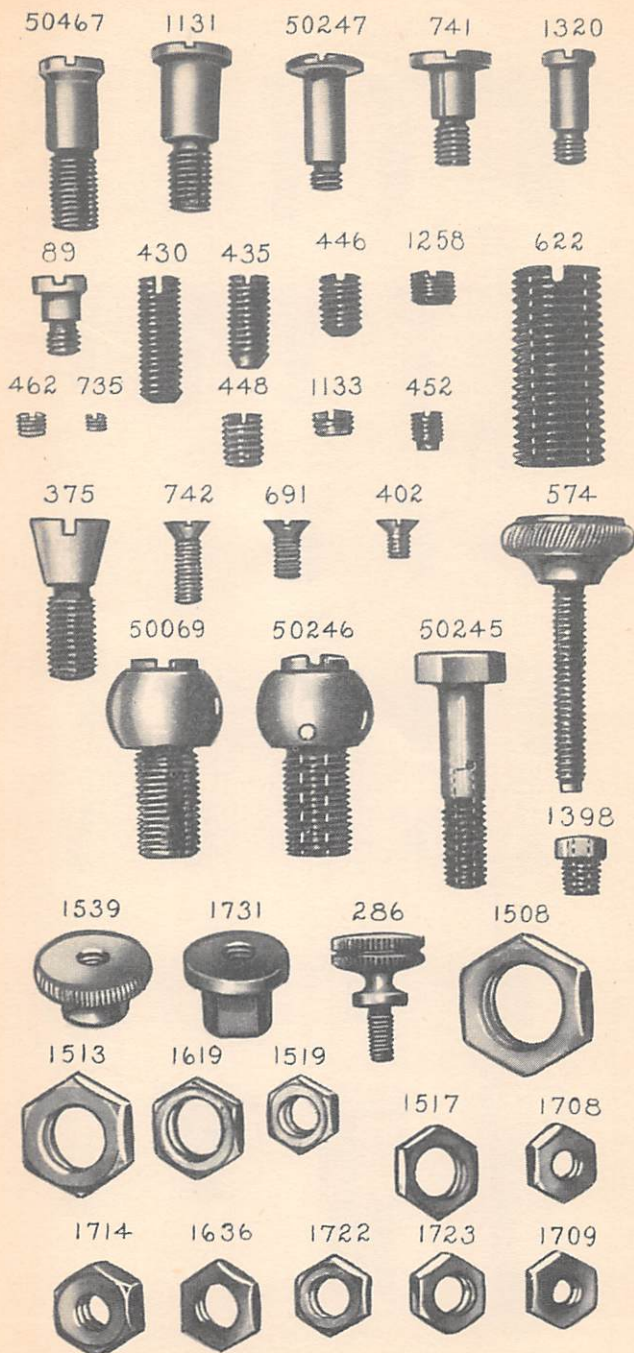 


PLATE 9432—ONE-HALF SIZE

 11831



26026

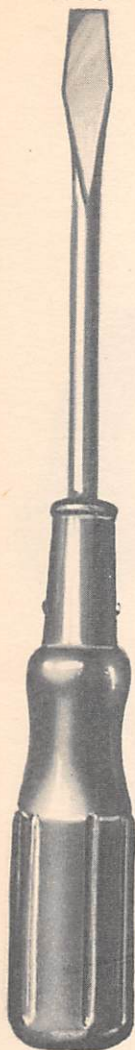

 
26485



120341



120344

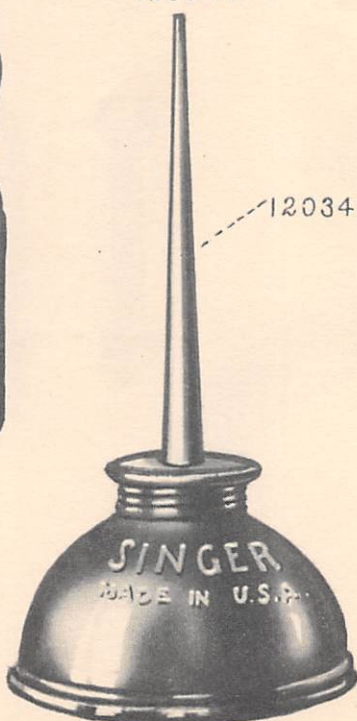

120345




**PLATE 9433—ONE-HALF SIZE**

---

124162



 124163

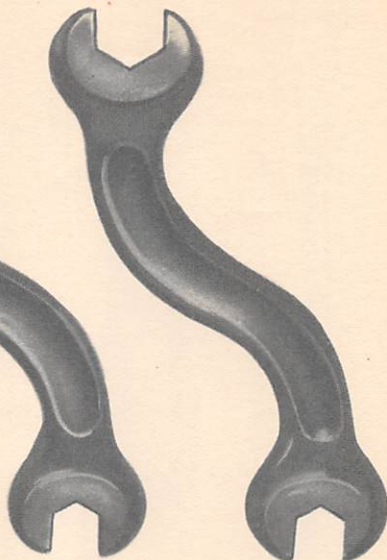

124161



42089




124165





 PLATE 20335—ONE-SIXTH SIZE

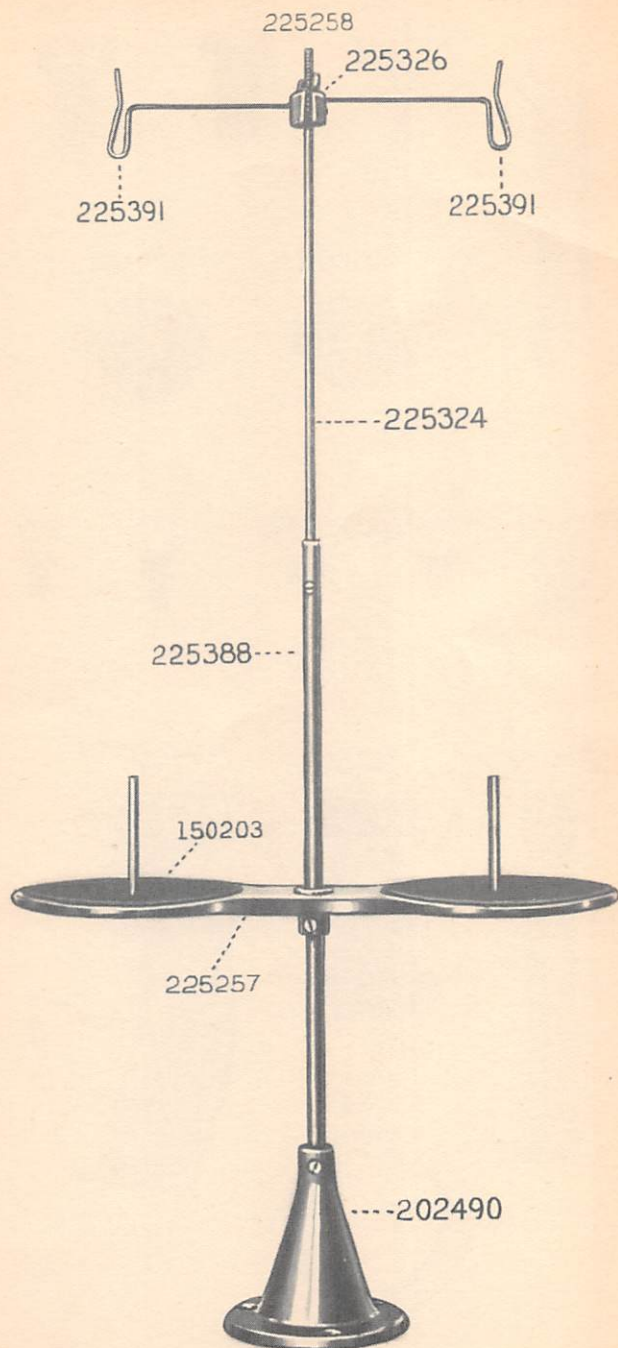

# PLATE 21516 - FULL SIZE

8885



51224



51157



140174



201696



225322



201018



200584



200383



208



227



 
58045




52150



137090

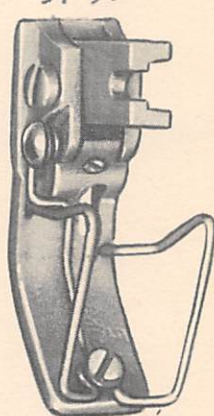

137133

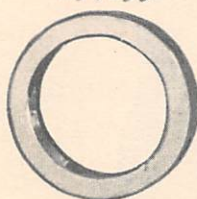 

137088

PLATE 21517 - ONE-FOURTH SIZE

120908



122013



49020



124001



137131



137139



27739



225390





# PLATE 21518 - ONE-HALF SIZE

8909



 
8908



25200




27662

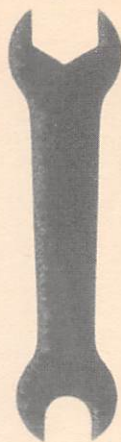

137138



 
49276

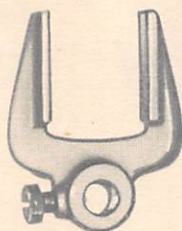

122101



 17677

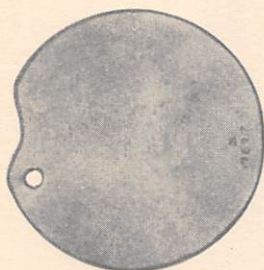

68714



Genuine Singer Needles should be used  
in Singer Machines.  
These Needles and their Containers  
are marked with the  
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked  
"For Singer Machines"  
are not Singer made needles. 2

