

Form 20240

(148)

Printed in U. S. A.

# LIST OF PARTS



## MACHINE No. 147-130

---

\*\* REG. U. S. PAT. OFF. BY

**THE SINGER MANUFACTURING COMPANY**

# INSTRUCTIONS FOR OILING

---

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold only by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 18742.

Copyright, U. S. A., 1940, 1941, 1942 and 1948  
by The Singer Manufacturing Co.  
All Rights Reserved for all Countries

# **INDEX**

---

	PAGE
ACCESSORIES — — — — —	22
BELT GUARD — — — — —	22
BENCH STANDS — — — — —	22
FITTINGS — — — — —	20-21
FOOT LIFTER PARTS — — — — —	23
KNEE LIFTER PARTS — — — — —	23
LAP SEAM FELLERS — — — — —	24
MACHINE BASES — — — — —	24
MACHINE BASE OIL DRAIN JAR — — — — —	25
MACHINE NO. 147-130 — — — — —	7
NUMERICAL LIST OF PARTS — — — — —	29
PRESSER FEET — — — — —	26
THREAD UNWINDER — — — — —	26
THREAD UNWINDER SPOOL RESTS — — — — —	27

# INSTRUCTIONS FOR ORDERING

---

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** Column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A-Hardened, Polished, Nickel Plated and Buffed.
- A.A-Buffed and Chromium Plated.
- A.B-Hardened, Polished, Buffed and Chromium Plated.
- A.C-Brown Baking Enamel Finish.
- A.D-Gray Baking Enamel Finish.
- A.E-Hardened, Bright Rumbled and Nickel Plated.
- A.F-Hardened, Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.
- A.G-Alumilite, Plain.
- A.H-Alumilite Dyed.
- A.J-Polished, Nickel Plated and Chromium Plated.
- A.K-Hardened, Polished, Nickel Plated and Chromium Plated.
- A.L-Heat Treated for Toughness.
- B-Polished, Nickel Plated and Buffed.
- C-Hardened only.
- C.R-Hardened and Merlized.
- D-Polished Only.
- E-Soft, Not Polished.
- F-Hardened and Polished.
- F.J-Hardened, Polished and Nickel Plated.
- G-Bright Rumbled and Nickel Plated.
- H-Blued.
- J-Nickel Plated Only.
- K-Hardened and Nickel Plated.
- L-Brass Plated.
- M-Oxidized.
- N-Japanned, Dull.

## INSTRUCTIONS FOR ORDERING - Continued

- P-Japanned, Bright.
- P.P-Wrinkle Finish.
- R-Merlized.
- S-Cadmium Plated.
- T-Copper Plated.
- T.A-Hardened, Polished, Copper and Nickel Plated and Buffed.
- T.B-Copper and Nickel Plated and Polished.
- T.J-Copper and Nickel Plated Only.
- T.K-Hardened, Copper and Nickel Plated.
- T.L-Copper and Brass Plated.
- T.M-Copper Plated and Oxidized.
- U-Zinc Plated.
- V-Silver Plated.
- W-Polished and Nickel Plated.
- X-Black Oxide, for Iron and Steel.
- X.C-Hardened and Black Oxide, for Iron and Steel.
- Y-Black Nickel Plated Only.
- Z-Chromium Plated.
- Z.A-Hardened, Polished, Nickel Plated, Buffed and Chromium Plated.
- Z.B-Polished, Nickel Plated, Buffed and Chromium Plated.
- Z.C-Hardened and Chromium Plated.
- Z.D-Polished and Chromium Plated.
- Z.G-Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.
- Z.J-Nickel and Chromium Plated.
- Z.T-Copper and Chromium Plated.

These letters **MUST BE USED** when they appear in the list; and **AFTER** the number as in the list.

In this series:

I to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers.

1501 to 1800 and 51501 to 51800 are Nut Numbers.

1801 to 2000 and 51801 to 52000 are Roller Numbers.

2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.


Parts marked with an asterisk (\*) are furnished only when repairs are made at factory.

When ordering parts which differ as to Gauge (the distance between seams) the Gauge, as well as the Number must be given on order.

**SINGER Needles should be used  
in SINGER Machines.  
These Needles and their Containers  
are marked with the  
Company's Trade-Mark "SIMANCO.\*\*" 1**

**Needles in Containers marked  
"FOR SINGER MACHINES"  
are NOT **SINGER** made needles. 2**

# LIST OF PARTS COMPLETE FOR

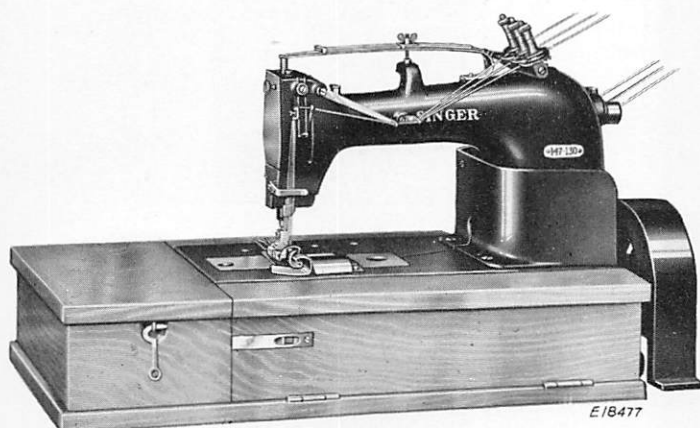

## MACHINE No. 147-130

FOR LAP SEAMING LIGHT AND MEDIUM WEIGHT FABRICS. THREE NEEDLES. THREE LOOPERS. GAUGES FROM  $\frac{5}{64}$  INCH TO  $\frac{3}{16}$  INCH BETWEEN EACH NEEDLE, IN STEPS OF  $\frac{1}{64}$  INCH. THE STANDARD GAUGES ARE  $\frac{3}{32}$  INCH,  $\frac{7}{64}$  INCH AND  $\frac{1}{8}$  INCH. LENGTH OF STITCH 7 TO 25 TO THE INCH. NEEDLE BAR STROKE  $1\frac{7}{32}$  INCHES. SPEED UP TO 4000, ACCORDING TO MATERIAL BEING STITCHED.

No.	Plate	Name
*131446	-----	Arm, upper and lower (solid) with 948J, 15404, 68483, two 131676 and four 131022.....
68428	20688	Arm Bottom Cover.....
68429	20688	" " " Gasket (cork).....
1057AL	20688	" " " Screw (4).....
50608R	20688	" Hole Plug Screw, for access to Crank Connecting Rod (upper bearing).....
139017	20688	Arm Hole Plug Screw Washer.....

No.	Plate	Name
68350	20695	Arm Oil Cup, for oiling Arm Rock Shaft Front Bearing.....
131864	24419	Arm Oil Cup, for 131866.....
131865	24419	" " " Oil Gauge.....
131866	24419	Arm Oil Cup, with Oil Gauge complete, for filling oil reservoir, Nos. 131864 and 131865...
131319	20695	Arm Oil Cup Oil Pad (braided cotton), for 68350.....
131293	20695	Arm Rock Shaft.....
131474	-----	" " " 131293 with 1235F, 127838 and 131475.....
1309C	20695	Arm Rock Shaft Adjusting Screw.....
131056	20695	" " " " " " Washer.....
68433	20695	Arm Rock Shaft Bushing (back).....
68435	20695	" " " " " " Cap...
131095	20695	" " " " " " Washer (fibre)
446AL	20695	Arm Rock Shaft Bushing (back) Set Screw.....
68436	20695	Arm Rock Shaft Bushing (intermediate)
423AL	20695	" " " " " " Set Screw.....
131072	24419	Arm Rock Shaft Crank, back (ball bearing solid) with two 50083AL.
50083AL	24419	Arm Rock Shaft Crank, back Set Screw (2).....
131475	20695	Arm Rock Shaft Crank, (front) with 853AL.....
127838	20695	Arm Rock Shaft Crank, (front) Pin...
131456	20695	" " " Flanged Bushing (front).....
453AL	20695	Arm Rock Shaft Flanged Bushing (front) Set Screw.....
42365	20695	Arm Rock Shaft Oil Pad (braided cotton) for oiling Back Bearing....
54969	20695	Arm Rock Shaft Oil Pad (braided cotton) for oiling Intermediate Bearing.....
1235F	20695	Arm Rock Shaft Oil Plug Screw.....
131476	24419	" Rotary Shaft.....
131485	-----	" " " 131476 with 640E, 131111, 131502 and 131930.....
131366	24419	Arm Rotary Shaft Ball Bearing (back) (2).....
131478	24419	Arm Rotary Shaft Ball Bearing (back) Case.....
131479	-----	Arm Rotary Shaft Ball Bearing (back) Case 131478 with 131369 and three 205C.....
131526	-----	Arm Rotary Shaft Ball Bearing (back) Case with Ball Bearings complete, Nos. 131479, 131480 and two 131366.....



## PARTS FOR MACHINE No. 147-130

9

No.	Plate	Name
131369	24419	Arm Rotary Shaft Ball Bearing (back) Case Cap.....
205C	24419	Arm Rotary Shaft Ball Bearing (back) Case Cap Screw (3).....
131370	24419	Arm Rotary Shaft Ball Bearing (back) Case Position Stud (3).....
429C	24419	Arm Rotary Shaft Ball Bearing (back) Case Set Screw.....
131480	24419	Arm Rotary Shaft Ball Bearing (back) Spacing Collar.....
131366	24419	Arm Rotary Shaft Ball Bearing (in- termediate).....
131481	24419	Arm Rotary Shaft Ball Bearing (in- termediate) Case.....
1304C	24419	Arm Rotary Shaft Ball Bearing (in- termediate) Case Set Screw.....
131482	24419	Arm Rotary Shaft Ball Bearing (in- termediate) Collar with two 457AL.....
457AL	24419	Arm Rotary Shaft Ball Bearing (in- termediate) Collar Set Screw (2)
131457	24419	Arm Rotary Shaft Bushing (front)....
761E	24419	" " " " Set Screw
42367	24419	Arm Rotary Shaft Front Bearing Oil Pad, lower (braided cotton).....
54218	24419	Arm Rotary Shaft Front Bearing Oil Pad, upper (braided cotton).....
144D	24419	Arm Rotary Shaft Screw.....
131276	20688	" Side Cover (oil vent).....
131909	20688	" " " Cap.....
131280	20688	" " " " Position Pin.....
1289X	20688	" " " " Screw.....
131910	20688	" " " " Spring.....
131911	20688	Arm Side Cover (oil vent) complete, Nos. 1289X, 131276, 131280, 131909 and 131910.....
68448	20688	Arm Side Cover Gasket.....
1057AL	20688	" " " Screw (4).....
131913	24419	Balance Wheel, 2 in. pulley, with two 51283AL, for round belt.....
131914	-----	Balance Wheel (outside diam. of belt groove 2.9 in.) with two 51283AL, for "V" belt.....
51283AL	24419	Balance Wheel Set Screw (2).....
131374	20722	Cloth Plate.....
68368	20722	" " Slide (left).....
131050	20722	" " " " Spring.....
725J	20722	" " " " " Screw (2).....
131051	20722	Cloth Plate Slide (left) complete, Nos. 68368, 131050 and two 725J.
131375	20722	Cloth Plate Slide (right) (No Throat Plate clearance cut) for 131382.
131376	-----	Cloth Plate Slide (right) (1/16 in. Throat Plate clearance cut) for 131383.....

No.	Plate	Name
131377	-----	Cloth Plate Slide (right) (7/64 in. Throat Plate clearance cut) for 131384.....
131378	-----	Cloth Plate Slide (right) (1/8 in. Throat Plate clearance cut) for 131385.....
131379	-----	Cloth Plate Slide (right) (9/64 in. Throat Plate clearance cut) for 131386.....
131380	-----	Cloth Plate Slide (right) (3/16 in. Throat Plate clearance cut) for 131387.....
131381	20722	Cloth Plate Slide (right) Spring....
725J	20722	" " " " " " Screw (2).....
131382	20722	Cloth Plate Slide (right) complete (No Throat Plate clearance cut) for 131388, Nos. 131375, 131381 and two 725J.....
131383	-----	Cloth Plate Slide (right) complete (1/16 in. Throat Plate clearance cut) for 131389, Nos. 131376, 131381 and two 725J.....
131384	-----	Cloth Plate Slide (right) complete (7/64 in. Throat Plate clearance cut) for 131390, Nos. 131377, 131381 and two 725J.....
131385	-----	Cloth Plate Slide (right) complete (1/8 in. Throat Plate clearance cut) for 131391, Nos. 131378, 131381 and two 725J.....
131386	-----	Cloth Plate Slide (right) complete (9/64 in. Throat Plate clearance cut) for 131392, Nos. 131379, 131381 and two 725J.....
131387	-----	Cloth Plate Slide (right) complete (3/16 in. Throat Plate clearance cut) for 131393, Nos. 131380, 131381 and two 725J.....
131388	-----	Cloth Plate complete, for Throat Plate with no offset, Nos. 131051, 131374 and 131382.....
131389	-----	Cloth Plate complete, for Throat Plate with 1/16 in. offset, Nos. 131051, 131374 and 131383.....
131390	-----	Cloth Plate complete, for Throat Plates with 7/64 in. offset, Nos. 131051, 131374 and 131384.....
131391	-----	Cloth Plate complete, for Throat Plates with 1/8 in. offset, Nos. 131051, 131374 and 131385.....
131392	-----	Cloth Plate complete, for Throat Plates with 9/64 in. offset, Nos. 131051, 131374 and 131386..
131393	-----	Cloth Plate complete, for Throat Plates with 3/16 in. offset, Nos. 131051, 131374 and 131387..

No.	Plate	Name
1011F	20722	Cloth Plate Screw (left) (2).....
50396F	20722	" " " (right).....
131610	20722	" " Thread Guard.....
389F	20722	" " " " Screw (lower).....
50473F	20722	Cloth Plate Thread Guard Screw (upper).....
131926	24419	Crank Connecting Rod with two each 1057AL, 51715AL, 131927 and 131928.....
Note: When No. 131926 is required for repairs, Connecting Rod and Arm Rock Shaft Crank (back) fitted together, will be furnished. All Agency orders for this part must state the Machine Number for which it is required, in order to obtain correct Needle Bar Stroke.		
131930	-----	Crank Connecting Rod 131926 with 131072.....
131927	24419	Crank Connecting Rod Cap (lower) Screw Stud (2).....
51715AL	24419	Crank Connecting Rod Cap (lower) Screw Stud Nut (2).....
131928	24419	Crank Connecting Rod Cap (lower) Screw Stud Nut Lock Washer (2)..
1057AL	24419	Crank Connecting Rod Cap (upper) Screw (2).....
131139	24420	Face Plate (lower half).....
68461	24420	" " " " Gasket (cork)
330W	24420	" " " " Screw (2)...
131395	24420	" " (upper half).....
29234	24420	" " " " Position Plate.....
1053E	24420	Face Plate (upper half) Position Plate Screw.....
51224W	24420	Face Plate (upper half) Thumb Screw.
54487	24420	" " Thread Guard.....
236F	24420	" " " " Screw.....
131941	24421	Feed Bar.....
131730	24421	" " Feed Dog Seat (adjustable) with 460AL.....
190J	24421	Feed Bar Feed Dog Seat Screw.....
22436	24421	" " " " " Washer.
131942	-----	Feed Bar with Feed Dog Leveling Device complete, Nos. 190J, 22436, 68467, 131730, 131941 and two 207E.....
131197	24421	Feed Bar Hinge Pin (eccentric).....
59343	24421	" " " " Collar with 735AL
735AL	24421	" " " " " Set Screw.
131943	24421	" " Slide Block.....
131944	24421	" " " " 131943 with 68495 and 134260.....
68495	24421	Feed Bar Slide Block Oil Pad (wick).

No.	Plate	Name
134260	24421	Feed Bar Slide Block Oil Pad Retainer.....
68467	24421	Feed Bar Wearing Plate.....
207E	24421	" " " " Screw (2)....
131500	24419	" Connecting Rod with 1057AL, 68497, 134260 and two 896AL.....
131502	-----	Feed Connecting Rod 131500 with 54025.....
896AL	24419	Feed Connecting Rod Cap Screw (2)...
1057AL	24419	" " " Clamping Screw..
68497	24419	" " " Oil Pad (wick)..
134260	24419	" " " " " Retainer
131431	24425	" Dog, 15 teeth (12 teeth to the inch) for 3/32 in. to 3/16 in. gauges, for use with 131226.....
131281	24422	Feed Dog, 18 teeth (14 teeth to the inch) for 5/64 in. gauge, for use with 131282.....
	Note:	When ordering Feed Dogs, state gauge required.
50073J	-----	Feed Dog Screw, when stationary Needle Guard is used.....
140275J	24422	Feed Dog Screw, when movable Needle Guard is used.....
460AL	24421	Feed Dog Stop Screw.....
*54024	-----	" Eccentric with 138306.....
*23729	-----	" " Body.....
51061AL	24419	" " " Set Screw (3)...
7071	24419	" " Clamping Washer (2)...
217J	24419	" " " " Screw (2).....
138306	-----	Feed Eccentric Lubricating Pad (wood).....
54025	24419	Feed Eccentric (adjustable) complete, Nos. 1103C, 23729, 54024 and two each 217J, 7071 and three 51061AL.....
1103C	24419	Feed Regulating Screw.....
131240	24421	" Rocking Frame with two 453AL...
131945	-----	" " " 131240 with 59343, 131197 and 131942.....
57234	24421	Feed Rocking Frame Hinge Pin.....
57235	24421	" " " " Bushing (2).....
453AL	24421	Feed Rocking Frame Hinge Pin Bushing Set Screw (2).....
453AL	24421	Feed Rocking Frame Hinge Pin Set Screw.....
131323	24422	Looper (back) closed eye.....
	Note:	When ordering No. 131323, state gauge required.
452C	20747	Looper (back) Set Screw.....
131324	24422	" (front) closed eye.....
	Note:	When ordering No. 131324, state gauge required.
51011J	24422	Looper (front) Screw (left).....
1302J	24422	" " " (right).....
131325	24422	" (intermediate) closed eye....

No.	Plate	Name
131326	24422	Looper (intermediate) 131325 with 1302J, 51011J and 131324.....
1120AL	20747	Looper (intermediate) Set Screw.....
54027	20747	" Carrier with two 175E.....
175E	20747	" " Adjusting Screw (2)..
54227	20747	" " Connection.....
54228	20747	" " " Shaft.....
128419	20747	" " " " Oil Pad (braided cotton).....
68478	20747	Looper Carrier Connection Shaft Sleeve (eccentric).....
51263D	20747	Looper Carrier Connection Shaft Sleeve Cap Screw.....
68479	20747	Looper Carrier Driver with four 175E
175E	20747	" " " Cap Screw (4).
*131958	20747	" Driving Shaft and Feed Lift- ing Eccentric.....
*131111	-----	Looper Driving Shaft and Feed Lift- ing Eccentric 131958 with 54027,, 54227, 54228 and 68479.....
*68483	-----	Looper Driving Shaft and Feed Lift- ing Eccentric Bracket with 761E.
948J	24419	Looper Driving Shaft and Feed Lift- ing Eccentric Bracket Screw.....
131959	20747	Looper Driving Shaft and Feed Lift- ing Eccentric Bushing.....
131028	20747	Looper Driving Shaft and Feed Lift- ing Eccentric Bushing Oil Plug...
761E	24419	Looper Driving Shaft and Feed Lift- ing Eccentric Bushing Position Screw.....
68497	-----	Looper Driving Shaft and Feed Lift- ing Eccentric Front Bearing Oil Pad (wick).....
640E	24419	Looper Driving Shaft and Feed Lift- ing Eccentric Screw.....
131052	20747	Looper Holder with 452C and 1120AL..
51119J	20747	" " Screw.....
68485	20747	" Throw-out Handle with two 443AL.....
68486	20747	Looper Throw-out Handle Plunger.....
43503	20747	" " " " Spring.....
443AL	20747	Looper Throw-out Handle Set Screw (2).....
64319	24420	Needle Bar (hollow).....
54493	-----	Needle Bar complete, Nos. 64319 and 128215.....
Note:		When ordering No. 54493 state gauge required.
131291	24420	Needle Bar Bushing (lower).....
1133E	24420	" " " " Set Screw
64320	24420	" " " (upper).....
1133E	24420	" " " " Set Screw
68488	24420	" " Connecting Link and Thread (upper) Controller.....

No.	Plate	Name
131399	-----	Needle Bar Connecting Link and Thread (upper) Controller 68488 with 68489 and 131400.....
68489	24420	Needle Bar Connecting Link Hinge Stud (hollow).....
1520J	24420	Needle Bar Connecting Link Hinge Stud Nut.....
131270	24420	Needle Bar Connecting Link Hinge Stud Oil Pad (wick).....
861F	24420	Needle Bar Connecting Link Hinge Stud Oil Plug Screw.....
853AL	20695	Needle Bar Connecting Link Hinge Stud Set Screw.....
131400	-----	Needle Bar Connecting Stud with 211F and 1492E.....
1492E	24420	Needle Bar Connecting Stud Clamping Screw.....
128215	24420	Needle Clamp with three 1498AL.....
	Note:	When ordering No. 128215 state gauge required.
131144	24425	Needle Guard (movable) for 3/32 in. to 9/64 in. gauges.....
	Note:	When ordering No. 131144 state gauge required.
131145	24425	Needle Guard (movable) for 5/32 in. to 3/16 in. gauges.....
	Note:	When ordering No. 131145 state gauge required.
68123	24422	Needle Guard (movable) Clamp.....
1498AL	24420	" Set Screw (3).....
68492	20703	Oil Pipe (back of arm) with 68497, for oiling Feed Rocking Frame Hinge Pin Front Bearing.....
68493	20703	Oil Pipe (back of arm) Clamp.....
176E	20703	" " " " " " Screw..
68494	20703	" " " " " Connection with 68495 and two 198E, for oiling Feed Rocking Frame Hinge Pin Back Bearing.....
198E	20703	Oil Pipe (back of arm) Connection Cap Screw (2).....
68495	20703	Oil Pipe (back of arm) Connection Oil Pad (wick).....
68496	20703	Oil Pipe (back of arm) Coupling (brass).....
1733	20703	Oil Pipe (back of arm) Coupling Nut (brass).....
68497	20703	Oil Pipe (back of arm) Oil Pad (wick).....
68498	20703	Oil Pipe (front of arm) with 131089 and two 1733, for oiling Looper Driving Shaft and Feed Lifting Eccentric Front Bearing.....
131112	20703	Oil Pipe (front of arm) with 68497 and 131003, for oiling Feed Bar Slide Block.....

## PARTS FOR MACHINE No. 147-130

15

No.	Plate	Name
68500	20703	Oil Pipe (front of arm) with 1733, 131084 and 131089, for oiling Arm Rotary Shaft Front Bearing..
131113	20703	Oil Pipe (front of arm) with 68497 and 131003, for oiling Feed Connecting Rod.....
131258	-----	Oil Pipe (front of arm) complete, Nos. 68498, 68500, 131112 and 131113.....
131002	20703	Oil Pipe (front of arm) Connection with two 198E, for oiling Looper Throw-out Device.....
131003	20703	Oil Pipe (front of arm) Connection with two 198E, for 131112 and 131113 (2).....
131084	20703	Oil Pipe (front of arm) Connection with two 198E, for 68500.....
198E	20703	Oil Pipe (front of arm) Connection Cap Screw (8).....
131004	20703	Oil Pipe (front of arm) coupling (center).....
131004	20703	Oil Pipe (front of arm) coupling (left).....
131087	20703	Oil Pipe (front of arm) coupling (right) with Oil Lead.....
1733	20703	Oil Pipe (front of arm) coupling Nut (brass) (2).....
131089	20703	Oil Pipe (front of arm) Oil Pad (wick) for 68498 and 68500 (2)..
68497	20703	Oil Pipe (front of arm) Oil Pad (wick) for 131112 and 131113 (2)
131912	24420	Presser Bar (hollow).....
131292	24420	" " Bushing (lower).....
1133E	24420	" " " " Set Screw.....
38456	24420	Presser Bar Bushing (upper).....
1133E	24420	" " " " Set Screw.....
131401	24420	Presser Bar Lifting Bracket with 453AL.....
11173	24420	Presser Bar Lifting Bracket Guide...
453AL	24420	" " " " " Set Screw.....
453AL	24420	Presser Bar Lifting Bracket Set Screw.....
131402	24423	Presser Bar Lifting Lever.....
68184	24423	" " " " Extension.
161J	24423	Presser Bar Lifting Lever Extension Screw (2).....
802D	24423	Presser Bar Lifting Lever Hinge Screw.....
131749	20688	Presser Bar Spring.....
131750	20688	" " " (auxiliary).....
131751	20688	" " " Screw Stud.....
1637J	20688	" " " " " Lock Nut.....

No.	Plate	Name
38468	20688	Presser Bar Spring Stud.....
131830	20688	Presser Bar Spring complete, Nos. 1637J, 51697W and 131749 to 131752.....
131851	20688	Presser Bar Spring (less auxiliary spring) complete, Nos. 1637J, 42290K, 51697W, 131749 and 131751.....
26276	24425	Presser Foot Hinge Pin.....
131223	24425	" " Plate.....
131224	24425	" " Shank.....
131225	24425	Presser Foot (hinged) complete, for 3/32 in. to 3/16 in. gauges, for lap seam felling, light or medium weight work shirts, Nos. 26276, 131223 and 131224.....
26276	24422	Presser Foot Hinge Pin.....
131582	24422	" " Plate.....
131583	24422	" " Shank.....
131584	24422	Presser Foot (hinged) complete, for 5/64 in. gauge for Lap Seam Felling, Nos. 26276, 131582 and 131583.....
190J	24422	Presser Foot Screw.....
51697W	20688	Pressure Regulating Thumb Nut.....
131752	20688	" " " " Washer for 131830.....
42290K	20688	Pressure Regulating Thumb Nut Washer, for 131851.....
131025	24423	Slack Thread Controller.....
54242	24423	Slack Thread Controller Clamp.....
190J	24423	Slack Thread Controller Clamp Screw.
131427	24424	" " Regulator.....
131404	24424	" " " Holder.....
131405	24424	" " " " Crank with 171AL.....
1423J	24424	Slack Thread Regulator Holder Crank Cap Screw.....
171AL	24424	Slack Thread Regulator Holder Crank Clamping Screw.....
131406	24424	Slack Thread Regulator Holder Crank Connecting Link.....
217J	24424	Slack Thread Regulator Screw.....
131146	24423	Tension (under thread) Bracket.....
691F	-----	" " " " Screw (2).....
2102	24423	Tension (under thread) Disc (6).....
51570C	24423	" " " " Regulating Thumb Nut (3).....
50326C	24423	Tension (under thread) Screw Stud (3).....
59539	-----	Tension (under thread) Screw Stud 50326C with 51570C (3).....
131740	24423	Tension (under thread) Spring (3)...
59537	24423	" " " " Bush- ing (large) (3).....



No.	Plate	Name
59538	24423	Tension (under thread) Spring Bush- ing (small) (3).....
131696	24423	Tension (under thread) Thread Guide (3).....
68002	24423	Tension (upper thread) Bracket.....
376J	24423	" " " " Screw
2102	24423	" " " Disc (6).....
515700	24423	" " " Regulating Thumb Nut (3).....
32572	24423	Tension (upper thread) Releasing Disc (3).....
54988	24423	Tension (upper thread) Releasing Pin (3).....
68003	24423	Tension (upper thread) Releasing Shaft.....
54047	24423	Tension (upper thread) Releasing Shaft Crank with 624AL.....
54048	24423	Tension (upper thread) Releasing Shaft Crank Link.....
624AL	24423	Tension (upper thread) Releasing Shaft Crank Set Screw.....
68261	24423	Tension (upper thread) Releasing Shaft Spring.....
131011	24423	Tension (upper thread) Releasing Shaft Spring Position Plate.....
316C	24423	Tension (upper thread) Releasing Shaft Stop Screw.....
1547J	24423	Tension (upper thread) Releasing Shaft Stop Screw Nut.....
50326C	24423	Tension (upper thread) Screw Stud (3).....
59539	-----	Tension (upper thread) Screw Stud 50326C with 51570C (3).....
131741	24423	Tension (upper thread) Spring (3)...
59537	24423	" " " " Bush- ing (large) (3).....
59538	24423	Tension (upper thread) Spring Bush- ing (small) (3).....
131696	24423	Tension (upper thread) Thread Guide (3).....
131581	24423	Thread (under) Eyelet (back).....
190J	24423	" " " " Screw..
131407	24419	" " Take-up with 1258AL..
131408	24424	" " " Oil Guard....
50438J	24424	" " " " Screw.....
1258AL	24419	Thread (under) Take-up Set Screw....
131824	24424	" " " Stripper.....
54242	24424	" " " " Clamp.....
190J	24424	Thread (under) Take-up Stripper Clamp Screw.....
131825	24424	Thread (under) Take-up Stripper Plate.....
131411	24424	Thread (under) Take-up Stripper Plate Bracket.....

No.	Plate	Name
131936	24424	Thread (under) Take-up Stripper Plate Bracket 131411 with 217J, 32062, 50438J, 54242, 131408, 131413, 131421, 131422, 131824, 131825, two each 207J, 7071, 50470J, 131430 and four 190J....
965D	24424	Thread (under) Take-up Stripper Plate Bracket Screw.....
190J	24424	Thread (under) Take-up Stripper Plate Screw (3).....
32062	-----	Thread (under) Take-up Stripper Washer.....
131413	24424	Thread (under) Take-up Thread Guard (fibre).....
50470J	24424	Thread (under) Take-up Thread Guard Screw (2).....
131421	24424	Thread (under) Take-up Thread Guide (intermediate, left).....
207J	24424	Thread (under) Take-up Thread Guide (intermediate, left) Screw.....
7071	24424	Thread (under) Take-up Thread Guide (intermediate, left) Screw Washer.....
131422	24424	Thread (under) Take-up Thread Guide (intermediate, right).....
207J	24424	Thread (under) Take-up Thread Guide (intermediate, right) Screw.....
7071	24424	Thread (under) Take-up Thread Guide (intermediate, right) Screw Washer.....
131429	24424	Thread (under) Take-up Thread Guide (left).....
131430	-----	Thread (under) Take-up Thread Guide (left) 131429 with 236C and 131204.....
217J	24424	Thread (under) Take-up Thread Guide (left) Screw.....
131204	24424	Thread (under) Take-up Thread Guide (left) Thread Retainer.....
236C	24424	Thread (under) Take-up Thread Guide (left) Thread Retainer Screw....
131429	24424	Thread (under) Take-up Thread Guide (right).....
131430	-----	Thread (under) Take-up Thread Guide (right) 131429 with 236C and 131204.....
131204	24424	Thread (under) Take-up Thread Guide (right) Thread Retainer.....
236C	24424	Thread (under) Take-up Thread Guide (right) Thread Retainer Screw...
68006	24423	Thread (upper) Eyelet.....
190J	-----	" " " Screw.....
131336	24423	" " " Take-up.....
68008	24423	" " " Plate.....
68164	24423	" " " " Spring.

No.	Plate	Name
1449J	24423	Thread (upper) Take-up Plate Spring Screw.....
131337	-----	Thread (upper) Take-up complete, Nos. 1449J, 68008, 68164 and 131336.....
211F	-----	Thread (upper) Take-up Set Screw....
131226	24425	Throat Plate for 3/32 in. to 3/16 in. gauges, for use with 131431, for Lap Seam Felling.....
131282	24422	Throat Plate for 5/64 in. gauge, for use with 131281.....
	Note:	When ordering Throat Plates, state gauge required.
742F	24422	Throat Plate Screw (2).....
*15404	-----	Trade Mark.....
131676	-----	" " Rivet (2).....

SINGER Needles should be used  
in SINGER Machines.  
These Needles and their Containers  
are marked with the  
Company's Trade-Mark "SIMANCO.\*\*" 1

Needles in Containers marked  
"FOR SINGER MACHINES"  
are NOT **SINGER** made needles. 2

## FITTINGS

FOR LAP SEAM FELLING LIGHT OR MEDIUM

WEIGHT WORK SHIRTS

FOR SIZE UP TO 17 NEEDLE

FOR  $\frac{3}{32}$  INCH TO  $\frac{3}{16}$  INCH GAUGES

NOTE: WHEN ORDERING FITTINGS STATE GAUGE REQUIRED

No.	Plate	Name
131431	24425	Feed Dog, 15 teeth (12 teeth to the inch).....
26276	24425	Presser Foot Hinge Pin.....
131223	24425	" " Plate.....
131224	24425	" " Shank.....
131225	24425	Presser Foot (hinged) complete, Nos. 26276, 131223 and 131224.....
131226	24425	Throat Plate.....

FOR LAP SEAM FELLING FLANNEL WORK SHIRTS,

OR WORK OF A SIMILAR NATURE

FOR SIZE UP TO 21 NEEDLE

FOR  $\frac{3}{32}$  INCH TO  $\frac{3}{16}$  INCH GAUGES

No.	Plate	Name
131432	24426	Feed Dog, 13 teeth (10 teeth to the inch).....
26276	24426	Presser Foot Hinge Pin.....
131228	24426	" " Plate.....
131233	24426	" " Shank.....
131229	24426	Presser Foot (hinged) complete, Nos. 26276, 131228 and 131233.....
131230	24426	Throat Plate.....

FOR LAP SEAM FELLING NAINSOCK UNDERWEAR

FOR  $\frac{5}{64}$  INCH GAUGE

No.	Plate	Name
131433	24427	Feed Dog, 21 teeth (16 teeth to the inch).....
131434	24427	Presser Foot Plate.....
128390	24427	" " " Hinge Stud (2)...
665J	24427	" " " " " Po-sition Screw (2).....
131435	24427	Presser Foot Shank.....
131436	24427	" " " Yielding Heel.....
131437	24427	" " " " " Con-nection.....
26276	24427	Presser Foot Yielding Heel Con-nection Hinge Pin.....

No.	Plate	Name
26231	-----	Presser Foot Yielding Heel Con- nection Spring.....
26276	-----	Presser Foot Yielding Heel Hinge Pin
131438	24427	Presser Foot (triple hinged) com- plete, Nos. 26231, 131434 to 131437 and two each 665J, 26276 and 128390.....
131439	24427	Throat Plate.....

## FOR LAP SEAM FELLING NAINSOCK UNDERWEAR

FOR  $\frac{3}{32}$  INCH TO  $\frac{3}{16}$  INCH GAUGES

No.	Plate	Name
131440	24428	Feed Dog, 20 teeth (16 teeth to the inch).....
26276	24428	Presser Foot Hinge Pin.....
131223	24428	" " Plate.....
131224	24428	" " Shank.....
131225	24428	Presser Foot (hinged) complete, Nos. 26276, 131223 and 131224.....
131226	24428	Throat Plate.....

## FOR SEAM CROSSING

No.	Plate	Name
131432	24429	Feed Dog, 13 teeth (10 teeth to the inch), for $\frac{3}{32}$ in. to $\frac{3}{16}$ in. gauges.....
131434	24429	Presser Foot Plate.....
128390	24429	" " " Hinge Stud (2)...
665J	24429	" " " " " Po- sition Screw (2).....
131435	24429	Presser Foot Shank.....
131664	24429	" " Yielding Heel.....
131665	24429	" " " " Con- nection.....
26276	24429	Presser Foot Yielding Heel Con- nection Hinge Pin.....
26231	-----	Presser Foot Yielding Heel Con- nection Spring.....
26276	-----	Presser Foot Yielding Heel Hinge Pin
131666	24429	Presser Foot (triple hinged) com- plete, for $\frac{3}{32}$ in. to $\frac{3}{16}$ in. gauges, Nos. 26231, 131434, 131435, 131664, 131665 and two each 665J, 26276 and 128390.....
131667	24429	Throat Plate, for $\frac{3}{32}$ in. to $\frac{3}{16}$ in. gauges.....

## ACCESSORIES

No.	Plate	Name
120344	20691	Oiler (copper plated) with 120345...
120345	20691	" Spout, 4 1/2 in. long.....
120440	20691	Screw Driver (large).....
121108	20691	" " (small).....
120341	20691	Tweezers (curved).....
4822	20691	Wrench for 1547.....
8908	20691	" " 1520.....
17905	20691	" " 140123.....
164197	20691	" " 51715 (not regularly furnished).....

## BELT GUARD

No.	Plate	Name
68222	20633	Belt Guard with two wood screws 1 in. No. 12.....

## BENCH STANDS

BENCH STAND No. 79772

FOR MACHINE BASE No. 131264

WHEN MACHINE IS MOUNTED ON TOP OF TABLE

No.	Plate	Name
79772	-----	Bench Stand with 27998, two each 41538, 126849, three wood screws 1 1/4 in. No. 12, four each 60656, wood screws 1 1/4 in. No. 10, eight wood screws 5/8 in. No. 6 and sixteen wood screws 5/8 in. No. 7.....
126849	20691	Flap Hinge with four wood screws 3/4 in. No. 7 (2).....
27998	20691	Flap Hook and Eye (large) with wood screw 1/2 in. No. 5.....
126247	20691	Flush Bolt (2).....
126248	20691	" " Plate (2).....
41538	-----	Flush Bolt with Plate complete, Nos. 126247, 126248 and four brass wood screws 5/8 in. No. 4 (2)...
60656	20691	Hinge (4).....

**BENCH STAND No. 135115**  
**FOR MACHINE BASE No. 131919**  
**WHEN MACHINE IS MOUNTED SEMI-SUBMERGED**

No.	Plate	Name
135115	-----	Bench Stand with 27998, 60220 and four each 126849 with wood screws 5/8 in. No. 7 F.H. (in place of wood screws 3/4 in. No. 7 F.H.) and wood screws 1 1/2 in. No. 10 F.H.....
126849	20691	Flap Hinge with four wood screws 5/8 in. No. 7 F.H. (4).....
27998	20691	Flap Hook and Eye (large) with wood screw 1/2 in. No. 5.....
60220	-----	Flap Hook and Eye (small) with wood screw 5/8 in. No. 4.....

### FOOT LIFTER PARTS

No.	Plate	Name
6439	-----	Chain, 36 in. to 45 in., with 56864 and 56865.....
		Note: When ordering No. 6439, state length required.
4879	20633	Chain Connecting Link.....
56864	20691	" Hook (large).....
56865	20691	" " (small).....
126249	20633	Treadle.....
4882	20633	" Shaft.....
126250	20633	" Spring.....
150451	20633	" Stand.....
150452	20633	Treadle complete, Nos. 4879, 4882, 126249, 126250, 150451 and two wood screws 1 in. No. 16 F.H....

### KNEE LIFTER PARTS

FOR USE WHEN MACHINE IS MOUNTED ON TOP OF TABLE

No.	Plate	Name
37563	-----	Chain, length 15 in., with 56864 and 56865.....
56864	20691	Chain, Hook (large).....
56865	20691	" " (small).....
2763	20633	Rock Shaft.....

## KNEE LIFTER PARTS

No.	Plate	Name
12242	20633	Rock Shaft Hanger with two wood screws 1 in. No. 10 (2).....
6335	20633	Rock Shaft Knee Arm.....
6336	-----	Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 6335.....
2766	20633	Rock Shaft Knee Arm Hub with 356C...
356C	20633	" " " " " Set Screw...
2767	20633	Rock Shaft Knee Plate with 356C.....
356C	20633	" " " " " Set Screw.....
6337	20633	" " Lifting Bracket with two 356C.....
7125	20633	Rock Shaft Lifting Bracket Hook.....
356C	20633	" " " " " Set Screw.....
356C	20633	Rock Shaft Lifting Bracket Set Screw
2770	20633	" " Stop Dog with 140219C....
140219C	20633	" " " " " Set Screw.....
23767	20633	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337, 7125 and two 12242.....

## LAP SEAM FELLERS

No.	Plate	Name
121437	24430	Lap Seam Feller (adjustable) on Shank, for light and medium weight material.....
121438	24430	Lap Seam Feller (adjustable) on Shank, for medium heavy and heavy weight material.....
1499J	24430	Lap Seam Feller Screw (2).....

## MACHINE BASES

## MACHINE BASE No. 131264

WHEN MACHINE IS MOUNTED ON TOP OF TABLE

FOR USE WITH BENCH STAND No. 79772

No.	Plate	Name
131263	24409	Machine Base.....
54477	24409	" " Screw Stud, to fasten base to table (3).....
131205	24409	Machine Base Screw Stud, to position machine on base (4).....
51576E	24409	Machine Base Screw Stud, Nut (3)....
9842	24409	" " " " " Washer (3).....



No.	Plate	Name
131022	24409	Machine Base Screw Stud, Bushing (rubber) (4).....
131279	24409	Machine Cushion (felt) (4).....
131264	24409	Machine Base complete, Nos. 131263, three each 9842, 51576E, 54477 and four each 131205 and 131279.
131328	24409	Machine Base and Oil Drain Jar (swinging type) complete, Nos. 131264 and 131268.....

## MACHINE BASE No. 131919

WHEN MACHINE IS MOUNTED SEMI-SUBMERGED

FOR USE WITH BENCH STAND No. 135115

No.	Plate	Name
131918	24410	Machine Base.....
51428R	24410	" " Bolt with 1778R (4)....
1778R	24410	" " " Nut (4).....
126150	24410	" " " " Lock Washer (4).....
69353	24410	Machine Base Bolt complete, to fasten base to table, Nos. 51428R and 126150 (4).....
131205	24410	Machine Base Screw Stud, to position machine on base (4).....
131022	24409	Machine Base Screw Stud Bushing (rubber) (4).....
131279	24410	Machine Cushion (felt) (4).....
131919	24410	Machine Base complete, Nos. 131918 and four each 69353, 131205 and 131279.....
131920	24410	Machine Base and Oil Drain Jar (swinging type) complete, for semi-submerged mounting, Nos. 131268 and 131919.....

## MACHINE BASE OIL DRAIN JAR

(SWINGING TYPE)

No.	Plate	Name
131961	24409	Jar (glass).....
131962	24409	" Cap.....
131188	24409	" Clamp.....
131217	-----	" " 131188 with 131189.....
131189	24409	" " Lever.....
1247AL	24409	" " " Hinge Screw (2).....

No.	Plate	Name
131265	24409	Nipple (long) (2).....
131266	24409	" (short).....
131267	24409	" Elbow (2).....
131268	24409	Machine Base Oil Drain Jar (swinging type) complete, Nos. 131217, 131266, 131961, 131962 and two each 1247AL, 131265 and 131267..

## PRESSER FEET

### FOR YOKING

### FOR $\frac{3}{32}$ INCH TO $\frac{3}{16}$ INCH GAUGES

NOTE: WHEN ORDERING PRESSER FEET, STATE GAUGE REQUIRED

No.	Plate	Name
26276	-----	Presser Foot Hinge Pin.....
68026	24431	" " Plate.....
46087	24431	" " Shank.....
68027	24431	Presser Foot (hinged) complete, with left hand edge guide, Nos. 26276, 46087 and 68026.....
26276	-----	Presser Foot Hinge Pin.....
120753	24431	" " Plate with left hand Edge Folder Shank.....
46087	24431	Presser Foot Shank.....
120754	24431	Presser Foot (hinged) with left hand edge folder complete, Nos. 26276, 46087 and 120753.....
26276	-----	Presser Foot Hinge Pin.....
121431	24431	" " Plate with right hand Edge Folder.....
46087	24431	Presser Foot Shank.....
121432	24431	Presser Foot (hinged) with right hand edge folder complete, Nos. 26276, 46087 and 121431.....

## THREAD UNWINDER

### FOR SIX CONES

No.	Plate	Name
150364	23109	Base with two 437C.....
150653	23109	Rod.....
437C	23109	" Set Screw (2).....
150366	23109	Thread Cone Holder (6).....
164J	23109	" " " Screw (6).....
19020	23109	" " " Washer (6).

No.	Plate	Name
150654	23109	Thread Cone Holder Support, for two cones.....
150367	23109	Thread Cone Holder Support, for four cones.....
150655	23109	Thread Cone Holder Support, Bracket for use with 150654.....
51083R	23109	Thread Cone Holder Support Bracket Bolt with 51581R.....
51581R	-----	Thread Cone Holder Support Bracket Bolt Nut.....
51082R	23109	Thread Cone Holder Support Bolt with 51581R, for use with 150367.....
51581R	-----	Thread Cone Holder Support Bolt Nut.
150368	23109	" " Steady Wire (6).....
150656	23109	" Guide for two threads.....
150369	23109	" " " four threads.....
178J	23109	" " Screw (2).....
150657	23109	Thread Unwinder complete, for in- verted cones, Nos. 51082R, 51083R, 150364, 150367, 150369, 150653 to 150656, two 178J, three wood screws 1 1/2 in. No. 16 F.H. and six each 164J, 19020, 150366 and 150368.....

## THREAD UNWINDER SPOOL RESTS

FOR USE WHEN SPOOLS ARE USED IN

PLACE OF CONES OF THREAD

FOR USE WITH THREAD UNWINDER NO. 150657

No.	Plate	Name
150647	23109	Spool Rest with 178J (6).....
150203	23109	" " Cushion (felt) (6).....
150658	23109	" " Rod for two spool rests..
150649	23109	" " " four spool rests.
178J	23109	" " Set Screw (2).....
178J	23109	" " Set Screw (6).....
150663	23109	Spool Rests complete (for six spools) Nos. 150649, 150658, two 178J and six each 150203 and 150647..

SINGER Needles should be used  
in SINGER Machines.  
These Needles and their Containers  
are marked with the  
Company's Trade-Mark "SIMANCO.\*\*" 1

Needles in Containers marked  
"FOR SINGER MACHINES"  
are NOT **SINGER** made needles. 2

NUMERICAL  
LIST  
OF PARTS

## NUMERICAL LIST OF PARTS

---

No.	Plate	Name
144D	24419	Arm Rotary Shaft Screw.....
161J	24423	Presser Bar Lifting Lever Extension Screw (2).....
164J	23109	Thread Unwinder Thread Cone Holder Screw for 150657 (6).....
171AL	24424	Slack Thread Regulator Holder Crank Clamping Screw for 131405.....
175E	20747	Looper Carrier Adjusting Screw for 54027 (2).....
175E	20747	Looper Carrier Driver Cap Screw for 68479 (4).....
176E	20703	Oil Pipe (back of arm) Clamp Screw..
178J	23109	Thread Unwinder Spool Rest Rod Set Screw for 150663.....
178J	23109	Thread Unwinder Spool Rest Set Screw for 150647 (6).....
178J	23109	Thread Unwinder Thread Guide Screw for 150657 (2).....
190J	24421	Feed Bar Feed Dog Seat Screw for 131942.....
190J	24422	Presser Foot Screw.....
190J	24423	Slack Thread Controller Clamp Screw.
190J	24423	Thread (under) Eyelet (back) Screw..
190J	24424	" " Take-up Stripper Clamp Screw for 131936.....
190J	24424	Thread (under) Take-up Stripper Plate Screw for 131936 (3).....
190J	-----	Thread (upper) Eyelet Screw.....
198E	20703	Oil Pipe (back of arm) Connection Cap Screw for 68494 (2).....
198E	20703	Oil Pipe (front of arm) Connection Cap Screw for 131002, 131003 and 131084 (8).....
205C	24419	Arm Rotary Shaft Ball Bearing (back) Case Cap Screw for 131479 (3)...
207E	24421	Feed Bar Wearing Plate Screw for 131942 (2).....
207J	24424	Thread (under) Take-up Thread Guide (intermediate, left) Screw for 131936.....
207J	24424	Thread (under) Take-up Thread Guide (intermediate, right) Screw for 131936.....
211F	-----	Thread (upper) Take-up Set Screw for 131400.....
217J	24419	Feed Eccentric Clamping Washer Screw for 54025 (2).....
217J	24424	Slack Thread Regulator Screw.....
217J	24424	Thread (under) Take-up Thread Guide (left) Screw for 131936.....

## NUMERICAL LIST OF PARTS

No.	Plate	Name
236F	24420	Face Plate Thread Guard Screw.....
236C	24424	Thread (under) Take-up Thread Guide (left) Thread Retainer Screw for 131430.....
236C	24424	Thread (under) Take-up Thread Guide (right) Thread Retainer Screw for 131430.....
316C	24423	Tension (upper thread) Releasing Shaft Stop Screw.....
330W	24420	Face Plate (lower half) Screw (2)...
356C	20633	Knee Lifter Rock Shaft Knee Arm Hub Set Screw for 2766.....
356C	20633	Knee Lifter Rock Shaft Knee Plate Set Screw for 2767.....
356C	20633	Knee Lifter Rock Shaft Lifting Bracket Hook Set Screw for 6337.
356C	20633	Knee Lifter Rock Shaft Lifting Bracket Set Screw for 6337.....
376J	24423	Tension (upper thread) Bracket Screw
389F	20722	Cloth Plate Thread Guard Screw (lower).....
423AL	20695	Arm Rock Shaft Bushing (intermediate) Set Screw.....
429C	24419	Arm Rotary Shaft Ball Bearing (back) Case Set Screw.....
437C	23109	Thread Unwinder Rod Set Screw for 150364 (2).....
443AL	20747	Looper Throw-out Handle Set Screw for 68485 (2).....
446AL	20695	Arm Rock Shaft Bushing (back) Set Screw.....
452C	20747	Looper (back) Set Screw for 131052..
453AL	20695	Arm Rock Shaft Flanged Bushing (front) Set Screw.....
453AL	24421	Feed Rocking Frame Hinge Pin Bushing Set Screw (2).....
453AL	24421	Feed Rocking Frame Hinge Pin Set Screw for 131240 (2).....
453AL	24420	Presser Bar Lifting Bracket Guide Set Screw.....
453AL	24420	Presser Bar Lifting Bracket Set Screw for 131401.....
457AL	24419	Arm Rotary Shaft Ball Bearing (in- termediate) Collar Set Screw for 131482 (2).....
460AL	24421	Feed Dog Stop Screw for 131730.....
624AL	24423	Tension (upper thread) Releasing Shaft Crank Set Screw for 54047.
640E	24419	Looper Driving Shaft and Feed Lift- ing Eccentric Screw for 131485..
665J	24427	Presser Foot Plate Hinge Stud Po- sition Screw for 131438 and 131666 (2).....
691F	-----	Tension (under thread) Bracket Screw (2).....

No.	Plate	Name
725J	20722	Cloth Plate Slide (left) Spring Screw for 131051 (2).....
725J	20722	Cloth Plate Slide (right) Spring Screw for 131382 to 131387 (2)..
735AL	24421	Feed Bar Hinge Pin Collar Set Screw for 59343.....
742F	24422	Throat Plate Screw (2).....
761E	24419	Arm Rotary Shaft Bushing (front) Set Screw.....
761E	24419	Looper Driving Shaft and Feed Lift- ing Eccentric Bushing Position Screw for 68483.....
802D	24423	Presser Bar Lifting Lever Hinge Screw.....
853AL	20695	Needle Bar Connecting Link Hinge Stud Set Screw for 131475.....
861F	24420	Needle Bar Connecting Link Hinge Stud Oil Plug Screw.....
896AL	24419	Feed Connecting Rod Cap Screw for 131500 (2).....
948J	24419	Looper Driving Shaft and Feed Lift- ing Eccentric Bracket Screw for 131446.....
965D	24424	Thread (under) Take-up Stripper Plate Bracket Screw.....
1011F	20722	Cloth Plate Screw (left) (2).....
1053E	24420	Face Plate (upper half) Position Plate Screw.....
1057AL	20688	Arm Bottom Cover Screw (4).....
1057AL	20688	" Side Cover Screw (4).....
1057AL	24419	Crank Connecting Rod Cap (upper) Screw for 131926 (2).....
1057AL	24419	Feed Connecting Rod Clamping Screw for 131500.....
1103C	24419	Feed Regulating Screw for 54025.....
1120AL	20747	Looper (intermediate) Set Screw for 131052.....
1133E	24420	Needle Bar Bushing (lower) Set Screw
1133E	24420	" " " (upper) Set Screw
1133E	24420	Presser Bar Bushing (lower) Set Screw.....
1133E	24420	Presser Bar Bushing (upper) Set Screw.....
1235F	20695	Arm Rock Shaft Oil Plug Screw for 131474.....
1247AL	24409	Machine Base Oil Drain Jar Clamp Lever Hinge Screw for 131268 (2)
1258AL	24419	Thread (under) Take-up Set Screw for 131407.....
1289X	20688	Arm Side Cover Cap Screw for 131911.
1302J	24422	Looper (front) Screw (right) for 131326.....
1304C	24419	Arm Rotary Shaft Ball Bearing (in- termediate) Case Set Screw.....
1309C	20695	Arm Rock Shaft Adjusting Screw.....



## NUMERICAL LIST OF PARTS

No.	Plate	Name
1423J	24424	Slack Thread Regulator Holder Crank Cap Screw.....
1449J	24423	Thread (upper) Take-up Plate Spring Screw for 131337.....
1492E	24420	Needle Bar Connecting Stud Clamping Screw for 131400.....
1498AL	24420	Needle Set Screw for 128215 (3).....
1499J	24430	Lap Seam Feller Screw (2).....
1520J	24420	Needle Bar Connecting Link Hinge Stud Nut.....
1547J	24423	Tension (upper thread) Releasing Shaft Stop Screw Nut.....
1637J	20688	Presser Bar Spring Screw Stud Lock Nut for 131830 and 131851.....
1733	20703	Oil Pipe (back of arm) Coupling Nut (brass).....
1733	20703	Oil Pipe (front of arm) Coupling Nut (brass) for 68498 and 68500 (3).
1778R	24410	Machine Base Bolt Nut for 51428R (4)
2102	24423	Tension (under thread) Disc (6).....
2102	24423	" (upper thread) Disc (6).....
2763	20633	Knee Lifter Rock Shaft for 23767....
2766	20633	Knee Lifter Rock Shaft Knee Arm Hub with 356C, for 6336.....
2767	20633	Knee Lifter Rock Shaft Knee Plate with 356C, for 6336.....
2770	20633	Knee Lifter Rock Shaft Stop Dog with 140219C, for 23767.....
4822	20691	Wrench for 1547 (Accessories).....
4879	20633	Foot Lifter Chain Connecting Link for 150452.....
4882	20633	Foot Lifter Treadle Shaft for 150452
6335	20633	Knee Lifter Rock Shaft Knee Arm for 6336.....
6336	-----	Knee Lifter Rock Shaft Knee Arm com- plete, for 23767 Nos. 2766, 2767 and 6335.....
6337	20633	Knee Lifter Rock Shaft Lifting Bracket with two 356C, for 23767
6439	-----	Foot Lifter Chain, 36 in. to 45 in. with 56864 and 56865.....
Note: When ordering No. 6439, state length required.		
7071	24419	Feed Eccentric Clamping Washer for 54025 (2).....
7071	24424	Thread (under) Take-up Thread Guide (intermediate, left) Screw Washer for 131936.....
7071	24424	Thread (under) Take-up Thread Guide (intermediate, right) Screw Washer for 131936.....
7125	20633	Knee Lifter Rock Shaft Lifting Bracket Hook for 23767.....
8908	20691	Wrench for 1520 (Accessories).....
9842	24409	Machine Base Screw Stud Nut Washer for 131264 (3).....

No.	Plate	Name
11173	24420	Presser Bar Lifting Bracket Guide...
12242	20633	Knee Lifter Rock Shaft Hanger with two wood screws 1 in. No. 10 for. 23767 (2).....
*15404	-----	Trade Mark for 131446.....
17905	20691	Wrench for 140123 (accessories).....
19020	23109	Thread Unwinder Thread Cone Holder Screw Washer for 150657 (6).....
22436	24421	Feed Bar Feed Dog Seat Screw Washer for 131942.....
*23729	-----	Feed Eccentric Body for 54025.....
23767	20633	Knee Lifter Rock Shaft complete, for use when Machine is mounted on top of table Nos. 2763, 2770, 6336, 6337, 7125 and two 12242..
26231	-----	Presser Foot Yielding Heel Connection Spring for 131438 and 131666....
26276	24422	Presser Foot Hinge Pin for 68027, 120754, 121432, 131225, 131229 and 131584.....
26276	24427	Presser Foot Yielding Heel Connection Hinge Pin for 131438 and 131666.
26276	-----	Presser Foot Yielding Heel Hinge Pin for 131438 and 131666.....
27998	20691	Bench Stand Flap Hook and Eye (large) with wood screw 1/2 in. No. 5, for 79772 and 135115.....
29234	24420	Face Plate (upper half) Position Plate.....
32062	-----	Thread (under) Take-up Stripper Washer for 131938.....
32572	24423	Tension (upper thread) Releasing Disc (3).....
37563	-----	Knee Lifter Chain, length 15 in., with 56864 and 56865.....
38456	24420	Presser Bar Bushing (upper).....
38468	20688	Presser Bar Spring Stud.....
41538	-----	Bench Stand Flush Bolt with Plate complete, for 79772 Nos. 126247, 126248 and four brass wood screws 5/8 in. No. 4 (2).....
42290K	20688	Pressure Regulating Thumb Nut Washer for 131851.....
42365	20695	Arm Rock Shaft Oil Pad (braided cot- ton) for oiling Back Bearing....
42367	24419	Arm Rotary Shaft Front Bearing Oil Pad, lower (braided cotton).....
43503	20747	Looper Throw-out Handle Plunger Spring.....
46087	24431	Presser Foot Shank for 68027, 120754 and 121432.....
50073J	-----	Feed Dog Screw, when stationary Needle Guard is used.....
50083AL	24419	Arm Rock Shaft Crank (back) Set Screw for 131072 (2).....

## NUMERICAL LIST OF PARTS

No.	Plate	Name
50326C	24423	Tension (under thread) Screw Stud for 59539 (3).....
50326C	24423	Tension (upper thread) Screw Stud for 59539 (3).....
50396F	20722	Cloth Plate Screw (right).....
50438J	24424	Thread (under) Take-up Oil Guard Screw for 131936.....
50470J	24424	Thread (under) Take-up Thread Guard Screw for 131936 (2).....
50473F	20722	Cloth Plate Thread Guard Screw (upper).....
50608R	20688	Arm Hole Plug Screw, for access to Crank Connecting Rod (upper bearing).....
51011J	24422	Looper (front) Screw (left) for 131326.....
51061AL	24419	Feed Eccentric Body Set Screw for 54025 (3).....
51082R	23109	Thread Unwinder Thread Cone Holder Support Bolt with 51581R, for 150657, for use with 150367.....
51083R	23109	Thread Unwinder Thread Cone Holder Support Bracket Bolt with 51581R, for 150657.....
51119J	20747	Looper Holder Screw.....
51224W	24420	Face Plate (upper half) Thumb Screw.
51263D	20747	Looper Carrier Connection Shaft Sleeve Cap Screw.....
51283AL	24419	Balance Wheel Set Screw for 131913 and 131914 (2).....
51428R	24410	Machine Base Bolt with 1778R, for 69353 (4).....
51570C	24423	Tension (under thread) Regulating Thumb Nut, for 59539 (3).....
51570C	24423	Tension (upper thread) Regulating Thumb Nut for 59539 (3).....
51576E	24409	Machine Base Screw Stud Nut for 131264 (3).....
51581R	-----	Thread Unwinder Thread Cone Holder Support Bolt Nut for 51082.....
51581R	-----	Thread Unwinder Thread Cone Holder Support Bracket Bolt Nut for 51083.....
51697W	20688	Pressure Regulating Thumb Nut for 131830 and 131851.....
51715AL	24419	Crank Connecting Rod Cap (lower) Screw Stud Nut for 131926 (2)...
*54024	-----	Feed Eccentric with 138306, for 54025.....
54025	24419	Feed Eccentric (adjustable) com- plete, for 131502, Nos. 1103C, 23729, 54024 and two each 217J, 7071 and three 51061AL.....
54027	20747	Looper Carrier with two 175E, for 131111.....
54047	24423	Tension (upper thread) Releasing Shaft Crank with 624AL.....

## NUMERICAL LIST OF PARTS

35

No.	Plate	Name
54048	24423	Tension (upper thread) Releasing Shaft Crank Link.....
54218	24419	Arm Rotary Shaft Front Bearing Oil Pad, upper (braided cotton).....
54227	20747	Looper Carrier Connection for 131111
54228	20747	Looper Carrier Connection Shaft for 131111.....
54242	24423	Slack Thread Controller Clamp.....
54242	24424	Thread (under) Take-up Stripper Clamp for 131936.....
54477	24409	Machine Base Screw Stud, to fasten base to table for 131264 (3)....
54487	24420	Face Plate Thread Guard.....
54493	-----	Needle Bar complete, Nos. 64319 and 128215.....
54969	20695	Arm Rock Shaft Oil Pad (braided cot- ton) for oiling Intermediate Bearing.....
54988	24423	Tension (upper thread) Releasing Pin (3).....
56864	20691	Chain Hook (large) for 6439 and 37563.....
56865	20691	Chain Hook (small) for 6439 and 37563.....
57234	24421	Feed Rocking Frame Hinge Pin.....
57235	24421	Feed Rocking Frame Hinge Pin Bushing (2).....
59343	24421	Feed Bar Hinge Pin Collar with 735AL, for 131945.....
59537	24423	Tension (under thread) Spring Bush- ing (large) (3).....
59537	24423	Tension (upper thread) Spring Bush- ing (large) (3).....
59538	24423	Tension (under thread) Spring Bush- ing (small) (3).....
59538	24423	Tension (upper thread) Spring Bush- ing (small) (3).....
59539	-----	Tension (under thread) Screw Stud 50326C with 51570C (3).....
59539	-----	Tension (upper thread) Screw Stud 50326C with 51570C (3).....
60220	-----	Bench Stand Flap Hook and Eye (small) with wood screw 5/8 in. No. 4, for 135115.....
60656	20691	Bench Stand Hinge for 79772 (4)....
64319	24420	Needle Bar (hollow) for 54493.....
64320	24420	Needle Bar Bushing (upper).....
68002	24423	Tension (upper thread) Bracket.....
68003	24423	" " " Releasing Shaft.....
68006	24423	Thread (upper) Eyelet.....
68008	24423	" " Take-up Plate for 131337.....
68026	24431	Presser Foot Plate for 68027.....
68027	24431	Presser Foot (hinged complete, with left hand edge Guide, for Yoking, for 3/32 in. to 3/16 in. gauges Nos. 26276, 46087 and 68026.....

Note: When ordering No. 68027 state gauge  
required.

No.	Plate	Name
68123	24422	Needle Guard (movable) Clamp.....
68164	24423	Thread (upper) Take-up Plate Spring for 131337.....
68184	24423	Presser Bar Lifting Lever Extension.
68222	20633	Belt Guard with two wood screws 1 in No. 12.....
68261	24423	Tension (upper thread) Releasing Shaft Spring.....
68350	20695	Arm Oil Cup, for oiling Arm Rock Shaft Front Bearing.....
68368	20722	Cloth Plate Slide (left) for 131051.
68428	20688	Arm Bottom Cover.....
68429	20688	" " " Gasket (cork).....
68433	20695	Arm Rock Shaft Bushing (back).....
68435	20695	" " " " " Cap....
68436	20695	" " " " " (intermediate)
68448	20688	" Side Cover Gasket.....
68461	24420	Face Plate (lower half) Gasket (cork).....
68467	24421	Feed Bar Wearing Plate for 131942...
68478	20747	Looper Carrier Connection Shaft Sleeve (eccentric).....
68479	20747	Looper Carrier Driver with four 175E, for 131111.....
*68483	-----	Looper Driving Shaft and Feed Lift- ing Eccentric Bracket with 761E, for 131446.....
68485	20747	Looper Throw-out Handle with two 443AL.....
68486	20747	Looper Throw-out Handle Plunger.....
68488	24420	Needle Bar Connecting Link and Thread (upper) Controller for 131399.....
68489	24420	Needle Bar Connecting Link Hinge Stud (hollow) for 131399.....
68492	20703	Oil Pipe (back of arm) with 68497, for oiling Feed Rocking Frame Hinge Pin Front Bearing.....
68493	20703	Oil Pipe (back of arm) Clamp.....
68494	20703	" " " " " Connection with 68495 and two 198E, for oiling Feed Rocking Frame Hinge Pin Back Bearing.....
68495	24421	Feed Bar Slide Block Oil Pad (wick) for 131944.....
68495	20703	Oil Pipe (back of arm) Connection Oil Pad (wick) for 68494.....
68496	20703	Oil Pipe (back of arm) Coupling (brass).....
68497	24419	Feed Connecting Rod Oil Pad (wick) for 131500.....
68497	-----	Looper Driving Shaft and Feed Lift- ing Eccentric Front Bearing Oil Pad (wick).....

## NUMERICAL LIST OF PARTS

37

No.	Plate	Name
68497	20703	Oil Pipe (back of arm) Oil Pad (wick) for 68492.....
68497	20703	Oil Pipe (front of arm) Oil Pad (wick) for 131112 and 131113 (2)
68498	20703	Oil Pipe (front of arm) with 131089 and two 1733, for oiling Looper Driving Shaft and Feed Lifting Eccentric Front Bearing, for 131258.....
68500	20703	Oil Pipe (front of arm) with 1733, 131084 and 131089, for oiling Arm Rotary Shaft Front Bearing, for 131258.....
69353	24410	Machine Base Bolt complete, to fasten base to table, for 131919 Nos. 51428R and 126150 (4).....
79772	-----	Bench Stand with 27998, two each 41538, 126849, three wood screws 1 1/4 in. No. 12, four each 60656, wood screws 1 1/4 in. No. 10, eight wood screws 5/8 in. No. 6 and sixteen wood screws 5/8 in. No. 7, for Machine Base No. 131264 when Machine is mounted on top of table.....
120341	20691	Tweezers (curved) Accessories.....
120344	20691	Oiler (copper plated) with 120345 (accessories).....
120345	20691	Oiler Spout, 4 1/2 in. long, for 120344.....
120440	20691	Screw Driver (large) Accessories....
120753	24431	Presser Foot Plate with left hand Edge Folder Shank for 120754....
120754	24431	Presser Foot (hinged) with left hand edge folder complete, for Yoking, for 3/32 in. to 3/16 in. Gauges, Nos. 26276, 46087 and 120753.....
	Note:	When ordering No. 120754 state gauge required.
121108	20691	Screw Driver (small) Accessories....
121431	24431	Presser Foot Plate with right hand Edge Folder for 121432.....
121432	24431	Presser Foot (hinged) with right hand edge folder complete, for Yoking, for 3/32 in. to 3/16 in. Gauges, Nos. 26276, 46087 and 121431.....
	Note:	When ordering No. 121432 state gauge required.
121437	24430	Lap Seam Feller (adjustable) on Shank, for light and medium weight material.....
121438	24430	Lap Seam Feller (adjustable) on Shank, for medium heavy and heavy weight material.....

## NUMERICAL LIST OF PARTS

No.	Plate	Name
126150	24410	Machine Base Bolt Nut Lock Washer for 69353 (4).....
126247	20691	Bench Stand Flush Bolt for 41538 (2)
126248	20691	Bench Stand Flush Bolt Plate for 41538 (2).....
126249	20633	Foot Lifter Treadle for 150452.....
126250	20633	" " " Spring for 150452.....
126849	20691	Bench Stand Flap Hinge with four wood screws 3/4 in. No. 7, for 79772 (2).....
126849	20691	Bench Stand Flap Hinge with four wood screws 5/8 in. No. 7 F.H., for 135115 (4).....
127838	20695	Arm Rock Shaft Crank (front) Pin for 131474.....
128215	24420	Needle Clamp with three 1498AL, for 54493.....
		Note: When ordering No. 128215 state gauge required.
128390	24427	Presser Foot Plate Hinge Stud for 131438 and 131666 (2).....
128419	20747	Looper Carrier Connection Shaft Oil Pad (braided cotton).....
131002	20703	Oil Pipe (front of arm) Connection with two 198E, for oiling Looper Throw-out Device.....
131003	20703	Oil Pipe (front of arm) Connection with two 198E, for 131112 and 131113 (2).....
131004	20703	Oil Pipe (front of arm) Coupling (center).....
131004	20703	Oil Pipe (front of arm) Coupling (left).....
131011	24423	Tension (upper thread) Releasing Shaft Spring Position Plate.....
131022	24409	Machine Base Screw Stud Bushing (rubber) for 131446 (4).....
131025	24423	Slack Thread Controller.....
131028	20747	Looper Driving Shaft and Feed Lift- ing Eccentric Bushing Oil Plug..
131050	20722	Cloth Plate Slide (left) Spring for 131051.....
131051	20722	Cloth Plate Slide (left) complete, for 131388 to 131393, Nos. 68368, 131050 and two 725J.....
131052	20747	Looper Holder with 452C and 1120AL..
131056	20695	Arm Rock Shaft Adjusting Screw Washer.....
131072	24419	Arm Rock Shaft Crank, back (ball bearing solid) with two 50083AL, for 131930.....
131084	20703	Oil Pipe (front of arm) Connection with two 198E, for 68500.....
131087	20703	Oil Pipe (front of arm) Coupling (right) with Oil Lead.....

No.	Plate	Name
131089	20703	Oil Pipe (front of arm) Oil Pad (wick) for 68498 and 68500 (2)..
131095	20695	Arm Rock Shaft Bushing (back) Cap Washer (fibre).....
*131111	-----	Looper Driving Shaft and Feed Lifting Eccentric 131958 with 54027, 54227, 54228 and 68479 for 131485.....
131112	20703	Oil Pipe (front of arm) with 68497 and 131003, for oiling Feed Bar Slide Block, for 131258.....
131113	20703	Oil Pipe (front of arm) with 68497 and 131003, for oiling Feed Connecting Rod, for 131258.....
131139	24420	Face Plate (lower half).....
131144	24425	Needle Guard (movable), for 3/32 in. to 9/64 in. gauges.....
	Note:	When ordering No. 131144 state gauge required.
131145	24425	Needle Guard (movable) for 5/32 in. to 3/16 in. gauges.....
	Note:	When ordering No. 131145 state gauge required.
131146	24423	Tension (under thread) Bracket.....
131188	24409	Machine Base Oil Drain Jar Clamp for 131217.....
131189	24409	Machine Base Oil Drain Jar Clamp Lever for 131217.....
131197	24421	Feed Bar Hinge Pin Eccentric for 131945.....
131204	24424	Thread (under) Take-up Thread Guide (left) Thread Retainer for 131430.....
131204	24424	Thread (under) Take-up Thread Guide (right) Thread Retainer for 131430.....
131205	24409	Machine Base Screw Stud, to position machine on base for 131264 and 131919 (4).....
131217	-----	Machine Base Oil Drain Jar Clamp 131188 with 131189, for 131268..
131223	24425	Presser Foot Plate for 131225.....
131224	24425	" " Shank for 131225.....
131225	24425	Presser Foot (hinged) complete, for 3/32 in. to 3/16 in. gauges, for lap seam felling, light or medium weight work shirts and Nainsock Underwear, Nos. 26276, 131223 and 131224.....
131226	24425	Throat Plate, for 3/32 in. to 3/16 in. gauges, for use with 131431 and 131440, for Lap Seam Felling light or medium weight work shirts, for size up to 17 needle and for Nainsock Underwear.....
	Note:	When ordering No. 131225 and 131226 state gauge required.



No.	Plate	Name
131228	24426	Presser Foot Plate for 131229.....
131229	24426	Presser Foot (hinged) complete, for 3/32 in. to 3/16 in. gauges, for Lap Seam Felling Flannel Work Shirts, or work of a similar nature and for seam crossing, Nos. 26276, 131228 and 131233...
131230	24426	Throat Plate, for 3/32 in. to 3/16 in. gauges for use with 131431, 131432 and 131440, for Lap Seam Felling Work Shirts or work of a similar nature, for size up to 21 needle.....
Note: When ordering Nos. 131229 and 131230 state gauge required.		
131233	24426	Presser Foot Shank for 131229.....
131240	24421	Feed Rocking Frame with two 453AL, for 131945.....
131258	-----	Oil Pipe (front of arm) complete, Nos. 68498, 68500, 131112 and 131113.....
131263	24409	Machine Base for 131264.....
131264	24409	Machine Base complete, for 131328 Nos. 131263, three each 9842, 51576E, 54477 and four each 131205 and 131279.....
131265	24409	Machine Base Oil Drain Jar Nipple (long) for 131268 (2).....
131266	24409	Machine Base Oil Drain Jar Nipple (short) for 131268.....
131267	24409	Machine Base Oil Drain Jar Elbow for 131268 (2).....
131268	24409	Machine Base Oil Drain Jar (swinging type) complete, for 131328 and 131920 Nos. 131217, 131266, 131961, 131962 and two each 1247AL, 131265 and 131267.....
131270	24420	Needle Bar Connecting Link Hinge Stud Oil Pad (wick).....
131276	20688	Arm Side Cover (oil vent) for 131911
131279	24409	Machine Cushion (felt) for 131264 and 131919 (4).....
131280	20688	Arm Side Cover Cap Position Pin for 131911.....
131281	24422	Feed Dog, 18 teeth (14 teeth to the inch) for 5/64 in. gauge for use with 131282.....
131282	24422	Throat Plate, for 5/64 in. gauge, for use with 131281.....
Note: When ordering Nos. 131281 and 131282 state gauge required.		
131291	24420	Needle Bar Bushing (lower).....
131292	24420	Presser Bar Bushing (lower).....

## NUMERICAL LIST OF PARTS

41

No.	Plate	Name
131293	20695	Arm Rock Shaft for 131474.....
131319	20695	Arm Oil Cup Oil Pad (braided cotton) for 68350.....
131323	24422	Looper (back) closed eye.....
131324	24422	Looper (front) closed eye for 131326
Note: When ordering Nos. 131323 or 131324 state gauge required.		
131325	24422	Looper (intermediate) closed eye for 131326.....
131326	24422	Looper (intermediate) 131325 with 1302J, 51011J and 131324.....
131328	24409	Machine Base and Oil Drain Jar (swinging type) complete, for use when Machine is mounted on top of table, for use with Bench Stand No. 79772, Nos. 131264 and 131268.....
131336	24423	Thread (upper) Take-up for 131337...
131337	-----	Thread (upper) Take-up complete, Nos. 1449J, 68008, 68164 and 131336..
131366	24419	Arm Rotary Shaft Ball Bearing (back) for 131526 (2).....
131366	24419	Arm Rotary Shaft Ball Bearing (in- termediate).....
131369	24419	Arm Rotary Shaft Ball Bearing (back) Case Cap for 131479.....
131370	24419	Arm Rotary Shaft Ball Bearing (back) Case Position Stud (3).....
131374	20722	Cloth Plate for 131388 to 131393....
131375	20722	Cloth Plate Slide (right), no Throat Plate clearance cut, for 131382.
131376	-----	Cloth Plate Slide (right), 1/16 in. Throat Plate clearance cut, for 131383.....
131377	-----	Cloth Plate Slide (right), 7/64 in. Throat Plate clearance cut, for 131384.....
131378	-----	Cloth Plate Slide (right), 1/8 in. Throat Plate clearance cut, for 131385.....
131379	-----	Cloth Plate Slide (right), 9/64 in. Throat Plate clearance cut, for 131386.....
131380	-----	Cloth Plate Slide (right), 3/16 in. Throat Plate clearance cut, for 131387.....
131381	20722	Cloth Plate Slide (right) Spring for 131382 to 131387.....
131382	20722	Cloth Plate Slide (right) complete, (no Throat Plate clearance cut) for 131388, Nos. 131375, 131381 and two 725J.....
131383	-----	Cloth Plate Slide (right) complete, (1/16 in. Throat Plate clearance cut) for 131389, Nos. 131376, 131381 and two 725J.....

## NUMERICAL LIST OF PARTS

No.	Plate	Name
131384	-----	Cloth Plate Slide (right) complete, (7/64 in. Throat Plate clearance cut) for 131390, Nos. 131377, 131381 and two 725J.....
131385	-----	Cloth Plate Slide (right) complete, (1/8 in. Throat Plate clearance cut) for 131391, Nos. 131378, 131381 and two 725J.....
131386	-----	Cloth Plate Slide (right) complete, (9/64 in. Throat Plate clearance cut) for 131392, Nos. 131379, 131381 and two 725J.....
131387	-----	Cloth Plate Slide (right) complete, (3/16 in. Throat Plate clearance cut) for 131393, Nos. 131380, 131381 and two 725J.....
131388	-----	Cloth Plate complete, for Throat Plate with no offset, Nos. 131051, 131374 and 131382.....
131389	-----	Cloth Plate complete, for Throat Plate with 1/16 in. offset, Nos. 131051, 131374 and 131383.....
131390	-----	Cloth Plate complete, for Throat Plates with 7/64 in. offset, Nos. 131051, 131374 and 131384.....
131391	-----	Cloth Plate complete, for Throat Plates with 1/8 in. offset, Nos. 131051, 131374 and 131385.....
131392	-----	Cloth Plate complete, for Throat Plates with 9/64 in. offset, Nos. 131051, 131374 and 131386..
131393	-----	Cloth Plate complete, for Throat Plates with 3/16 in. offset, Nos. 131051, 131374 and 131387..
131395	24420	Face Plate (upper half).....
131399	-----	Needle Bar Connecting Link and Thread (upper) Controller 68488 with 68489 and 131400.....
131400	-----	Needle Bar Connecting Stud with 211F and 1492E, for 131399.....
131401	24420	Presser Bar Lifting Bracket with 453AL.....
131402	24423	Presser Bar Lifting Lever.....
131404	24424	Slack Thread Regulator Holder.....
131405	24424	" " " " Crank with 171AL.....
131406	24424	Slack Thread Regulator Holder Crank Connecting Link.....
131407	24419	Thread (under) Take-up with 1258AL..
131408	24424	" " " " Oil Guard for 131936.....
131411	24424	Thread (under) Take-up Stripper Plate Bracket for 131936.....
131413	24424	Thread (under) Take-up Thread Guard (fibre) for 131936.....

No.	Plate	Name
131421	24424	Thread (under) Take-up Thread Guide (intermediate, left) for 131936.
131422	24424	Thread (under) Take-up Thread Guide (intermediate, right) for 131936
131427	24424	Slack Thread Regulator.....
131429	24424	Thread (under) Take-up Thread Guide (left) for 131430.....
131429	24424	Thread (under) Take-up Thread Guide (right) for 131430.....
131430	-----	Thread (under) Take-up Thread Guide (left) 131429 with 236C and 131204, for 131936.....
131430	-----	Thread (under) Take-up Thread Guide (right) 131429 with 236C and 131204, for 131936.....
131431	24425	Feed Dog, 15 teeth (12 teeth to the inch), for 3/32 in. to 3/16 in. gauges, for Lap Seam Felling light or medium weight work shirts, for use with 131226.....
131432	24426	Feed Dog, 13 teeth (10 teeth to the inch) for 3/32 in. to 3/16 in. gauges, for use with 131230 and 131667, for Lap Seam Felling Flannel Work Shirts, or work of a similar nature and for seam crossing.....
131433	24427	Feed Dog, 21 teeth (16 teeth to the inch), for 5/64 in. gauge for use with 131439, for Lap Seam Felling Nainsock Underwear.....
	Note:	When ordering Nos. 131431 to 131433 state gauge required.
131434	24427	Presser Foot Plate for 131438 and 131666.....
131435	24427	Presser Foot Shank for 131438 and 131666.....
131436	24427	Presser Foot Yielding Heel for 131438.....
131437	24427	Presser Foot Yielding Heel Connection for 131438.....
131438	24427	Presser Foot (triple hinged) complete, for 5/64 in. gauge, for Lap Seam Felling Nainsock underwear, Nos. 26231, 131434 to 131437 and two each 665J, 26276 and 128390.....
131439	24427	Throat Plate, for 5/64 in. gauge for use with 131433, for Lap Seam Felling Nainsock Underwear.....
131440	24428	Feed Dog, 20 teeth (16 teeth to the inch), for 3/32 in. to 3/16 in. gauges, for use with 131226 and 131230, for Lap Seam Felling Nainsock Underwear.....
	Note:	When ordering Nos. 131438 to 131440 state gauge required.

## NUMERICAL LIST OF PARTS

No.	Plate	Name
*131446	-----	Arm, upper and lower (solid) with 948J, 15404, 68483, two 131676 and four 131022.....
131456	20695	Arm Rock Shaft Flanged Bushing (front).....
131457	24419	Arm Rotary Shaft Bushing (front)....
131474	-----	Arm Rock Shaft 131293 with 1235F, 127838 and 131475.....
131475	20695	Arm Rock Shaft Crank (front) with 853AL, for 131474.....
131476	24419	Arm Rotary Shaft for 131485.....
131478	24419	" " " Ball Bearing (back) Case for 131479.....
131479	-----	Arm Rotary Shaft Ball Bearing (back) Case 131478 with 131369 and three 205C, for 131526.....
131480	24419	Arm Rotary Shaft Ball Bearing (back) Spacing Collar for 131526.....
131481	24419	Arm Rotary Shaft Ball Bearing (intermediate) Case.....
131482	24419	Arm Rotary Shaft Ball Bearing (intermediate) Collar with two 457AL.....
131485	-----	Arm Rotary Shaft 131476 with 640E, 131111, 131502 and 131930.....
131500	24419	Feed Connecting Rod with 1057AL, 68497, 134260 and two 896AL.....
131502	-----	Feed Connecting Rod 131500 with 54025, for 131485.....
131526	-----	Arm Rotary Shaft Ball Bearing (back) Case with Ball Bearings complete, Nos. 131479, 131480 and two 131366.....
131581	24423	Thread (under) Eyelet (back).....
131582	24422	Presser Foot Plate for 131584.....
131583	24422	" " Shank for 131584.....
131584	24422	Presser Foot (hinged) complete, for 5/64 in. gauge, for lap seam felling, Nos. 26276, 131582 and 131583.....
131610	20722	Cloth Plate Thread Guard.....
131664	24429	Presser Foot Yielding Heel for 131666.....
131665	24429	Presser Foot Yielding Heel Connection for 131666.....
131666	24429	Presser Foot (triple hinged) complete, for 3/32 in. to 3/16 in. gauges, for crossing seams, Nos. 26231, 131434, 131435, 131664, 131665 and two each 665J, 26276 and 128390.....
131667	24429	Throat Plate, for 3/32 in. to 3/16 in. gauges, for use with 131431 and 131432, for crossing seams..
Note: When ordering Nos. 131666 and 131667 state gauge required.		

No.	Plate	Name
131676	-----	Trade Mark Rivet for 131446 (2).....
131696	24423	Tension (under thread) Thread Guide (3).....
131696	24423	Tension (upper thread) Thread Guide (3).....
131730	24421	Feed Bar Feed Dog Seat (adjustable) with 460AL, for 131942.....
131740	24423	Tension (under thread) Spring (3)...
131741	24423	Tension (upper thread) Spring (3)...
131749	20688	Presser Bar Spring for 131830 and 131851.....
131750	20688	Presser Bar Spring (auxiliary) for 131830.....
131751	20688	Presser Bar Spring Screw Stud for 131830 and 131851.....
131752	20688	Pressure Regulating Thumb Nut Washer for 131830.....
131824	24424	Thread (under) Take-up Stripper for 131936.....
131825	24424	Thread (under) Take-up Stripper Plate for 131936.....
131830	20688	Presser Bar Spring complete, Nos. 1637J, 51697W and 131749 to 131752.....
131851	20688	Presser Bar Spring (less auxiliary spring) complete, Nos. 1637J, 42290K, 51697W, 131749 and 131751.....
131864	24419	Arm Oil Cup for 131866.....
131865	24419	Arm Oil Cup Oil Gauge for 131866....
131866	24419	Arm Oil Cup with Oil Gauge complete, for filling oil reservoir, Nos. 131864 and 131865.....
131909	20688	Arm Side Cover Cap for 131911.....
131910	20688	" " " " Spring for 131911
131911	20688	Arm Side Cover (oil vent) complete, Nos. 1289X, 131276, 131280, 131909 and 131910.....
131912	24420	Presser Bar (hollow).....
131913	24419	Balance Wheel, 2 in. pulley, with two 51283AL, for round belt.....
131914	-----	Balance Wheel (outside diam. of belt groove 2.9 in.) with two 51283AL, for "V" belt.....
131918	24410	Machine Base for 131919.....
131919	24410	Machine Base complete, for 131920 Nos. 131918 and four each 69353, 131205 and 131279.....
131920	24410	Machine Base and Oil Drain Jar (swinging type) complete, for use when Machine is mounted semi-submerged, for use with Bench Stand, No. 135115 Nos. 131268 and 131919.....

## NUMERICAL LIST OF PARTS

No.	Plate	Name
*131926	24419	Crank Connecting Rod with two each 1057AL, 51715AL, 131927 and 131928, for 131930.....
	Note:	When No. 131926 is required for repairs, Connecting Rod and Arm Rock Shaft Crank (back) fitted together will be furnished. All Agency orders for this part must state the Machine number for which it is required, in order to obtain correct Needle Bar stroke.
131927	24419	Crank Connecting Rod Cap (lower) Screw Stud for 131926 (2).....
131928	24419	Crank Connecting Rod Cap (lower) Screw Stud Nut Lock Washer for 131926 (2).....
131930	-----	Crank Connecting Rod 131926 with 131072.....
131936	24424	Thread (under) Take-up Stripper Plate Bracket 131411 with 217J, 32062, 50438J, 54242, 131408, 131413, 131421, 131422, 131824, 131825, two each 207J, 7071, 50470J, 131430 and four 190J....
131941	24421	Feed Bar for 131942.....
131942	-----	Feed Bar with Feed Dog Leveling Device complete, for 131945, Nos. 190J, 22436, 68467, 131730, 131941 and two 207E.....
131943	24421	Feed Bar Slide Block for 131944.....
131944	24421	" " " " 131943 with 68495 and 134260.....
131945	-----	Feed Rocking Frame 131240 with 59343, 131197 and 131942.....
*131958	20747	Looper Driving Shaft and Feed Lift- ing Eccentric for 131111.....
131959	20747	Looper Driving Shaft and Feed Lift- ing Eccentric Bushing.....
131961	24409	Machine Base Oil Drain Jar (glass) for 131268.....
131962	24409	Machine Base Oil Drain Jar Cap for 131268.....
134260	24421	Feed Bar Slide Block Oil Pad Retainer for 131944.....
134260	24419	Feed Connecting Rod Oil Pad Retainer for 131500.....
135115	-----	Bench Stand with 27998, 60220 and four each 126849 with wood screws 5/8 in. No. 7 F.H. (in place of wood screws 3/4 in. No. 7 F.H.) and wood screws 1 1/2 in. No. 10 F.H., for use with Machine Base No. 131919 when ma- chine is mounted semi-submerged.
138306	-----	Feed Eccentric Lubricating Pad (wood) for 54024.....

No.	Plate	Name
139017	20688	Arm Hole Plug Screw Washer.....
140219C	20633	Knee Lifter Rock Shaft Stop Dog Set Screw for 2770.....
140275J	24422	Feed Dog Screw, when movable needle guard is used.....
150203	23109	Thread Unwinder Spool Rest Cushion (felt) for 150663 (6).....
150364	23109	Thread Unwinder Base with two 437C, for 150657.....
150366	23109	Thread Unwinder Thread Cone Holder for 150657 (6).....
150367	23109	Thread Unwinder Thread Cone Holder Support for four cones, for 150657.....
150368	23109	Thread Unwinder Thread Cone Steady Wire for 150657 (6).....
150369	23109	Thread Unwinder Thread Guide, for four threads, for 150657.....
150451	20633	Foot Lifter Treadle Stand for 150452
150452	20633	Foot Lifter Treadle complete, Nos. 4879, 4882, 126249, 126250, 150451 and two wood screws 1 in. No. 16 F.H.....
150647	23109	Thread Unwinder Spool Rest with 178J for 150663 (6).....
150649	23109	Thread Unwinder Spool Rest Rod, for four spool rests, for 150663....
150653	23109	Thread Unwinder Rod for 150657.....
150654	23109	" " Thread Cone Holder Support, for two cones, for 150657.....
150655	23109	Thread Unwinder Thread Cone Holder Support Bracket for 150657, for use with 150654.....
150656	23109	Thread Unwinder Thread Guide, for two threads, for 150657.....
150657	23109	Thread Unwinder complete, for in- verted cones, (for six cones) Nos. 51082R, 51083R, 150364, 150367, 150369, 150653 to 150656, two 178J, three wood screws 1 1/2 in. No. 16 F.H. and six each 164J, 19020, 150366 and 150368..
150658	23109	Thread Unwinder Spool Rest Rod, for two spool rests for 150663.....
150663	23109	Thread Unwinder Spool Rests complete, (for six spools) for use when spools are used in place of cones of thread, for use with Thread Unwinder No. 150657, Nos. 150649, 150658, two 178J and six each 150203 and 150647.....
164197	20691	Wrench for 51715 (not regularly fur- nished) Accessories.....






SINGER Needles should be used  
in SINGER Machines.  
These Needles and their Containers  
are marked with the  
Company's Trade-Mark "SIMANCO.\*\*" 1


Needles in Containers marked  
"FOR SINGER MACHINES"  
are NOT **SINGER** made needles. 2

ILLUSTRATIONS  
OF  
PARTS


20633 - 1/4

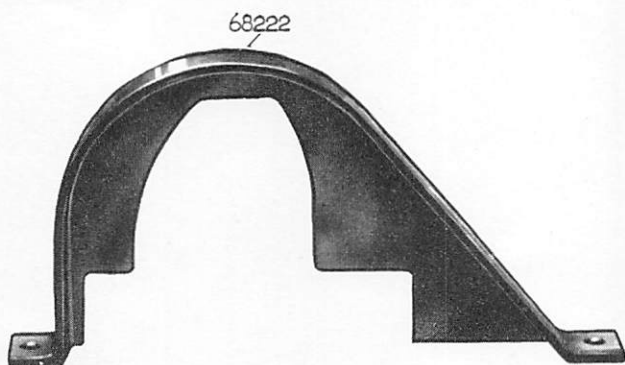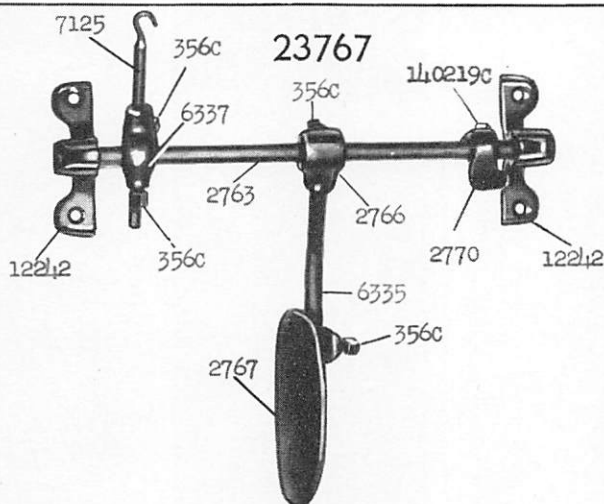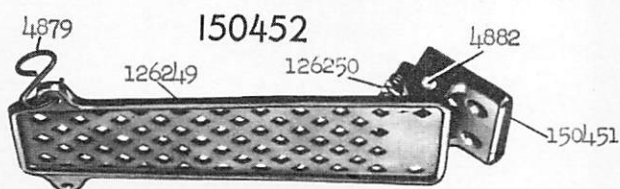

131830

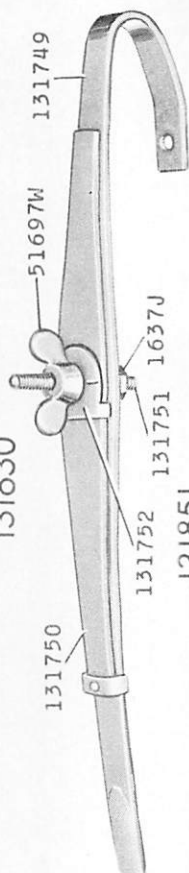

131851

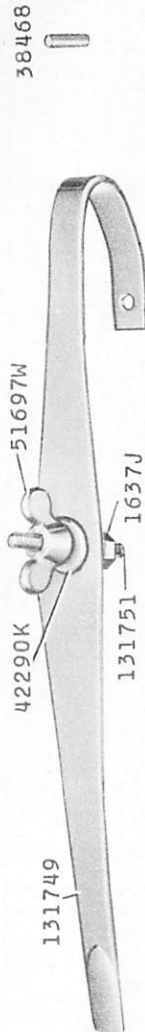

38468







139017




50608R




131911

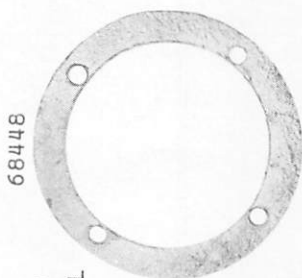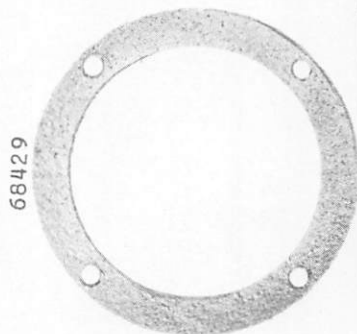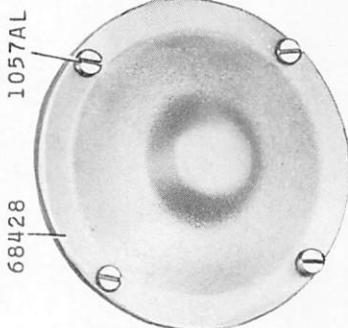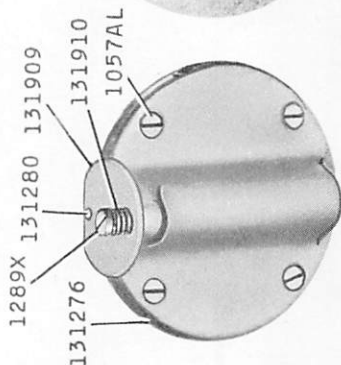

20691 - 1/2

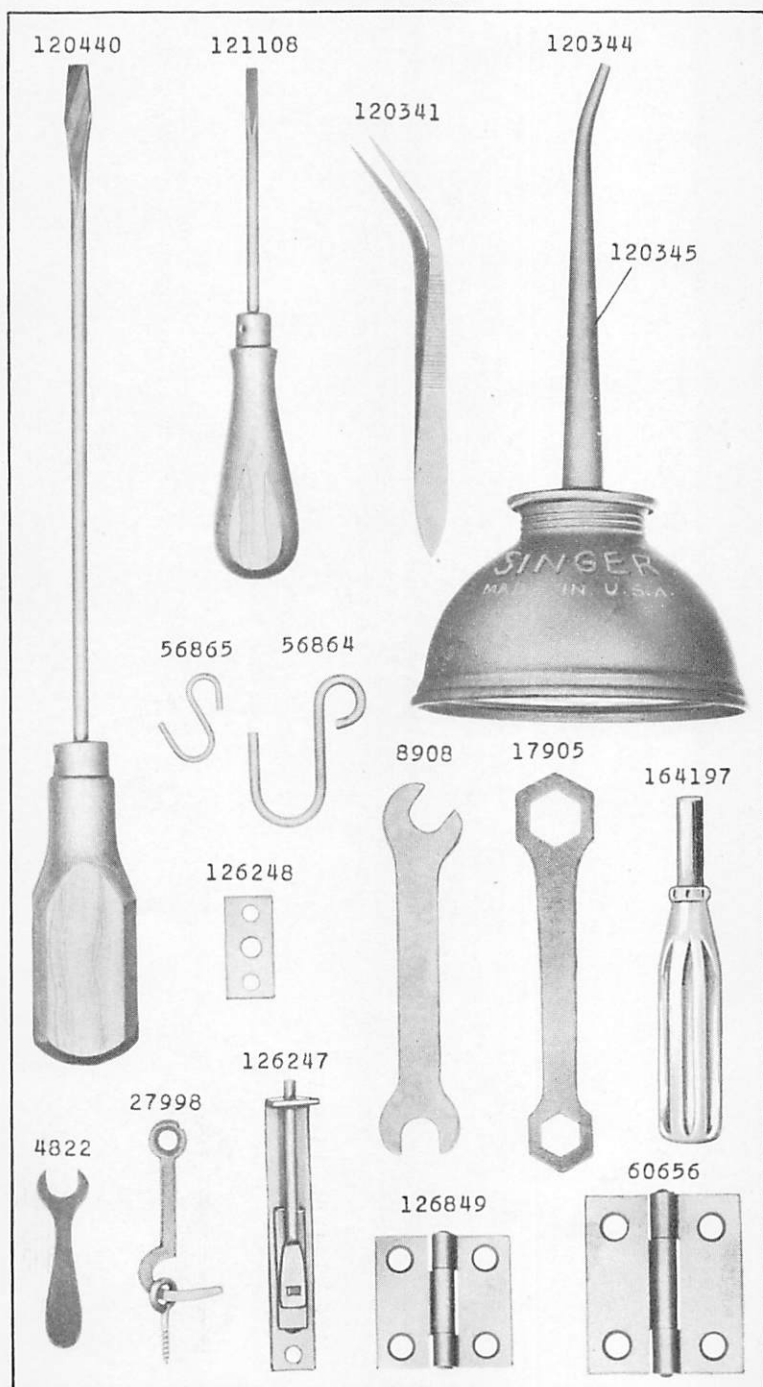






20695 - 1/2

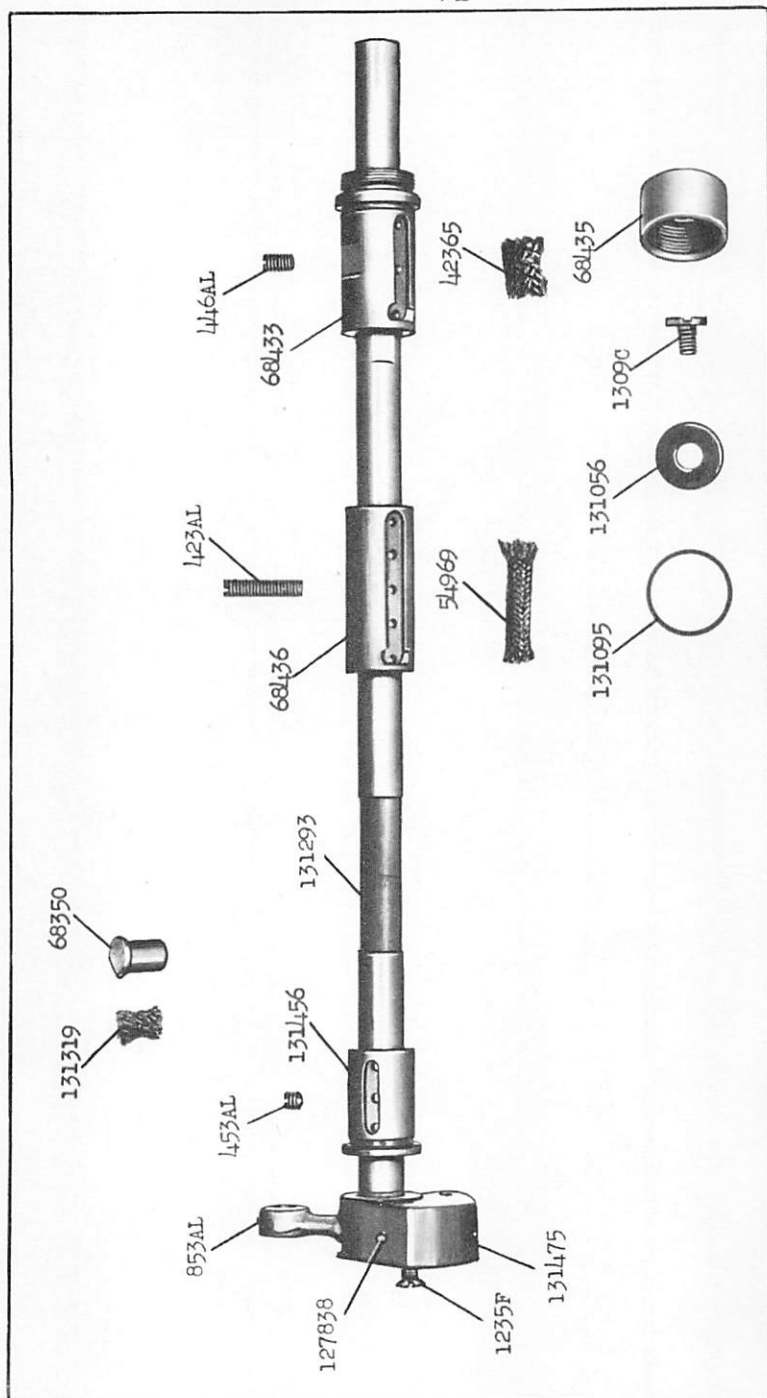




20703 - 1/2

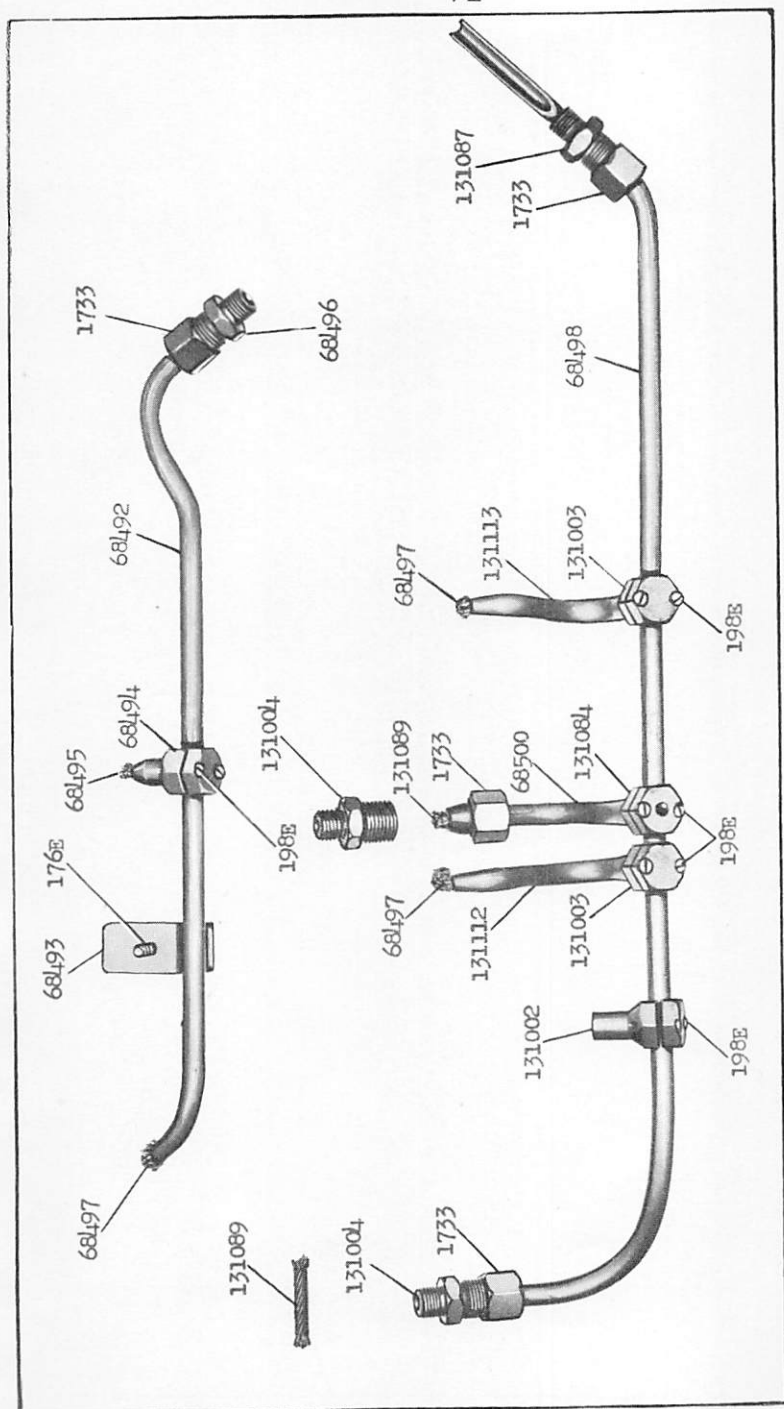

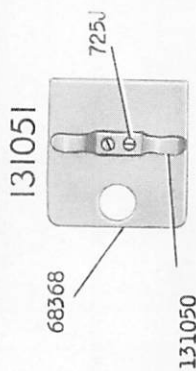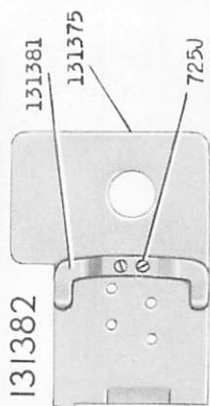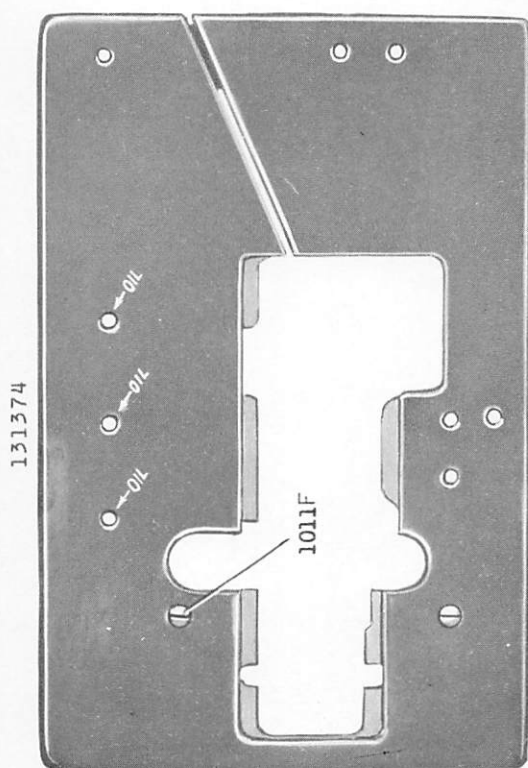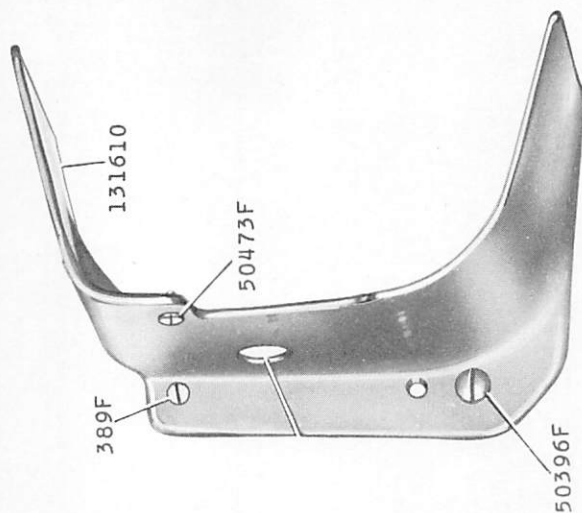




20747 - 2/3

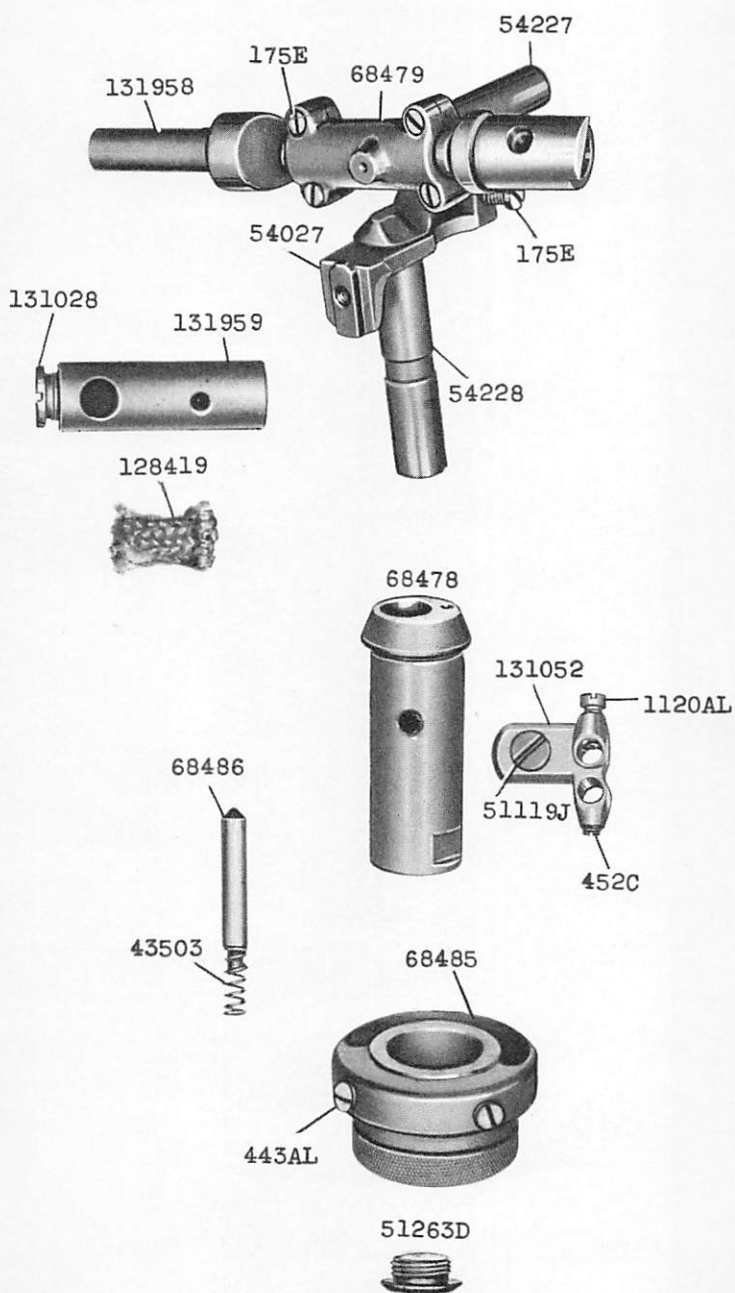


23109 - 1/6


150657

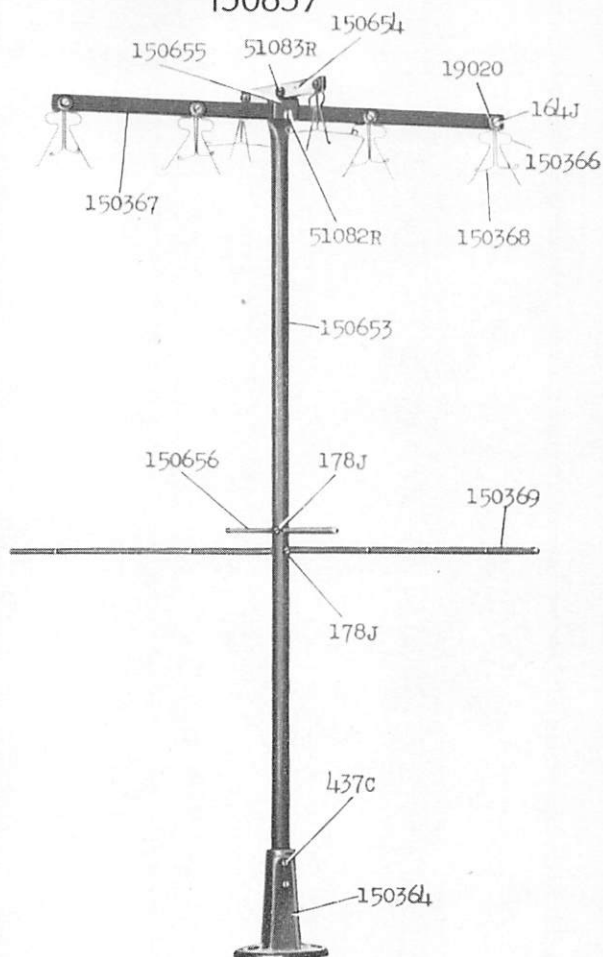


150663

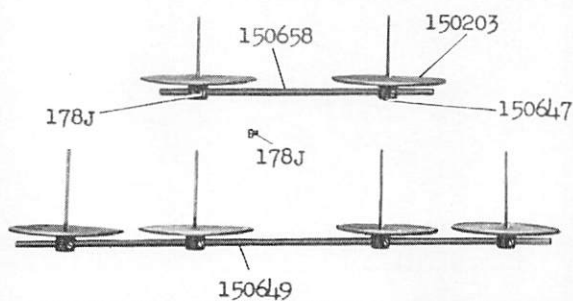


24409 - 1/4

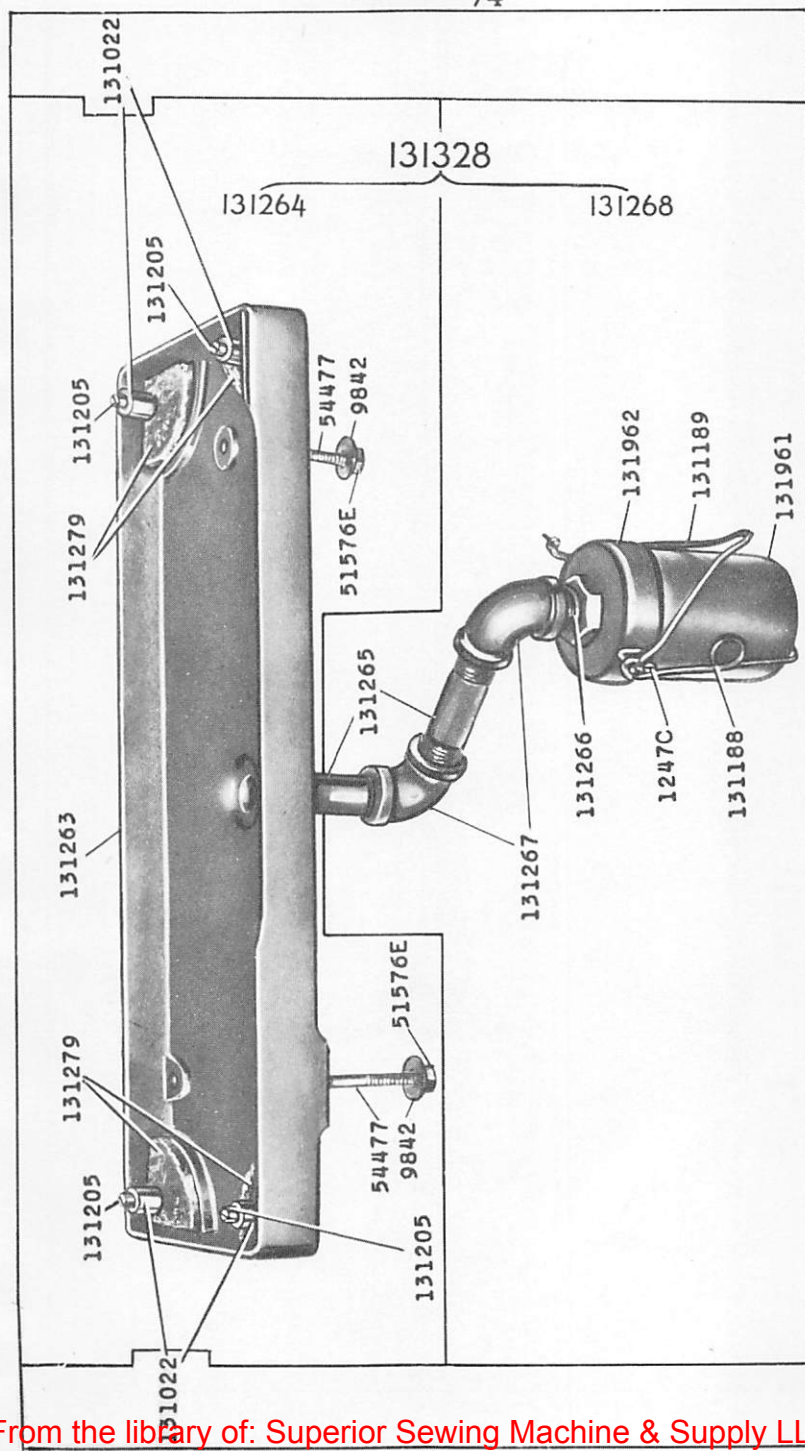

24410 - 1/4

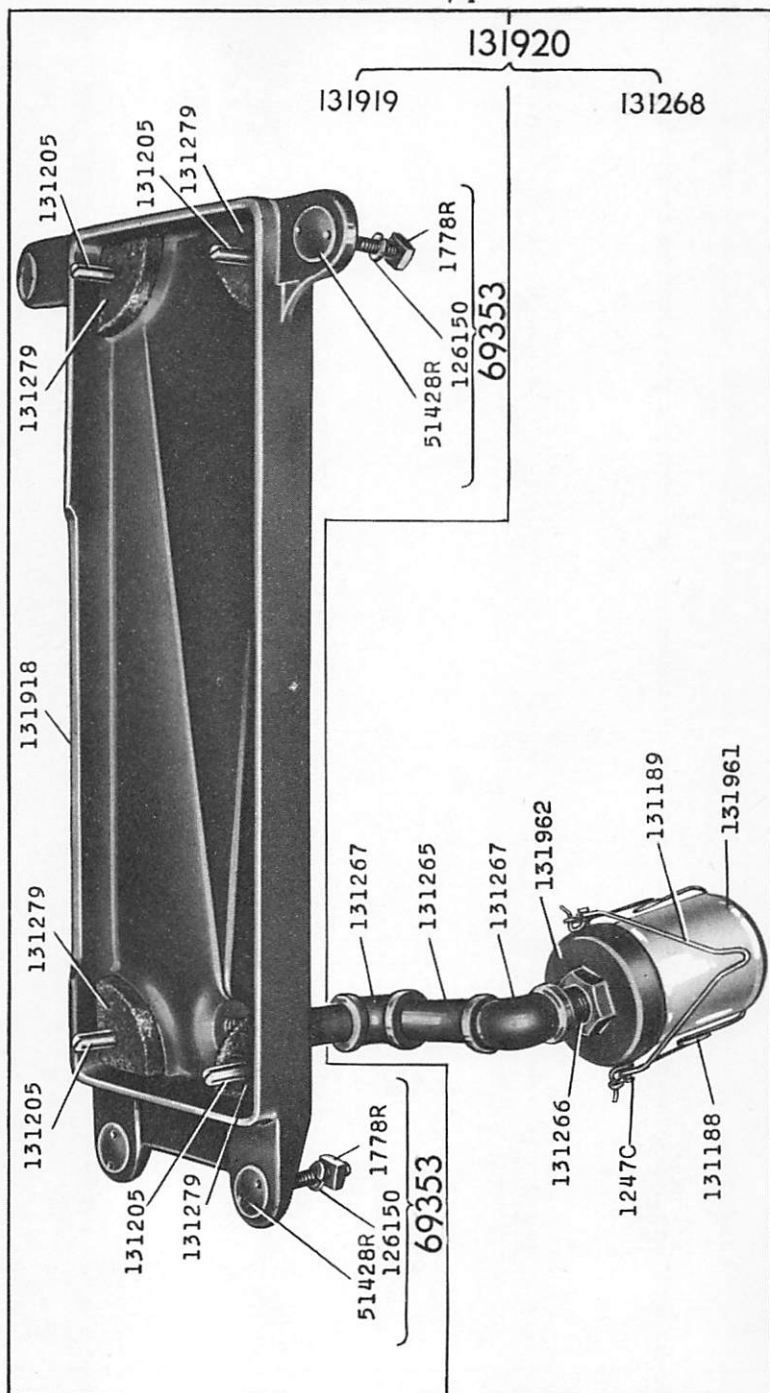


24419 - 1/3

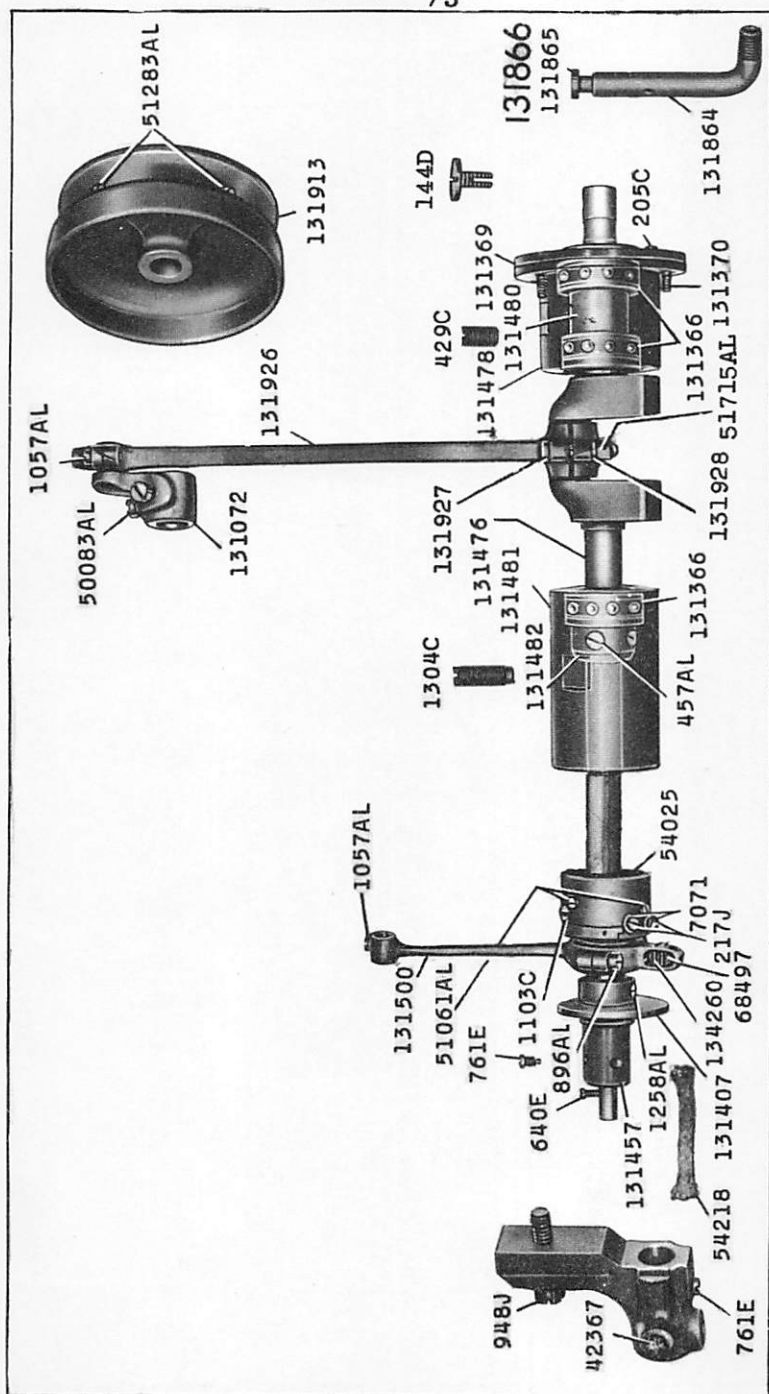





24420 - 1/2


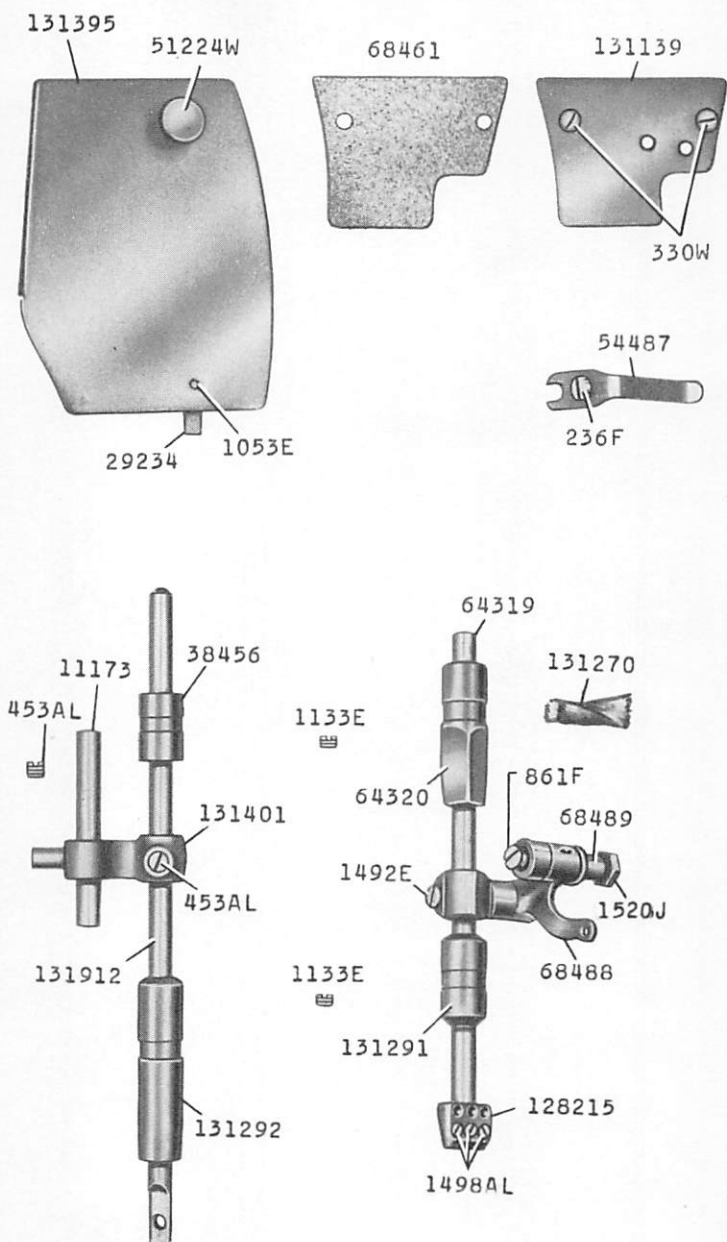


24421 - 1/2

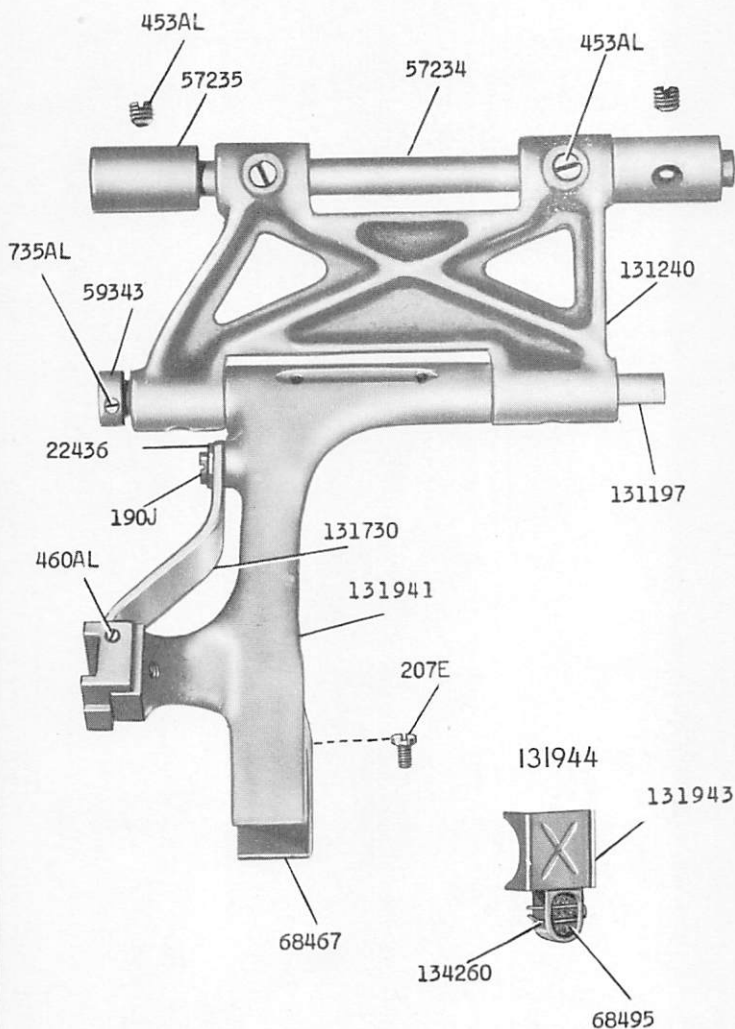

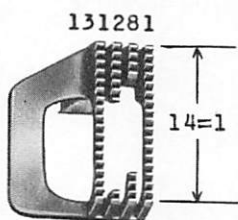

131282

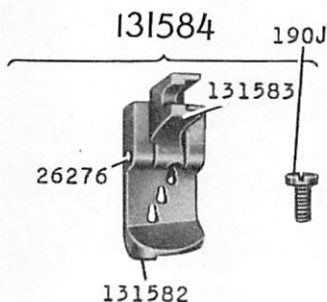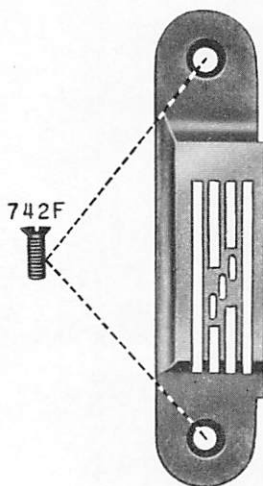

140275J



68123




131144



131323




131326

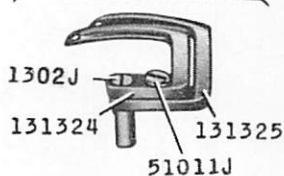





24423 - 1/2

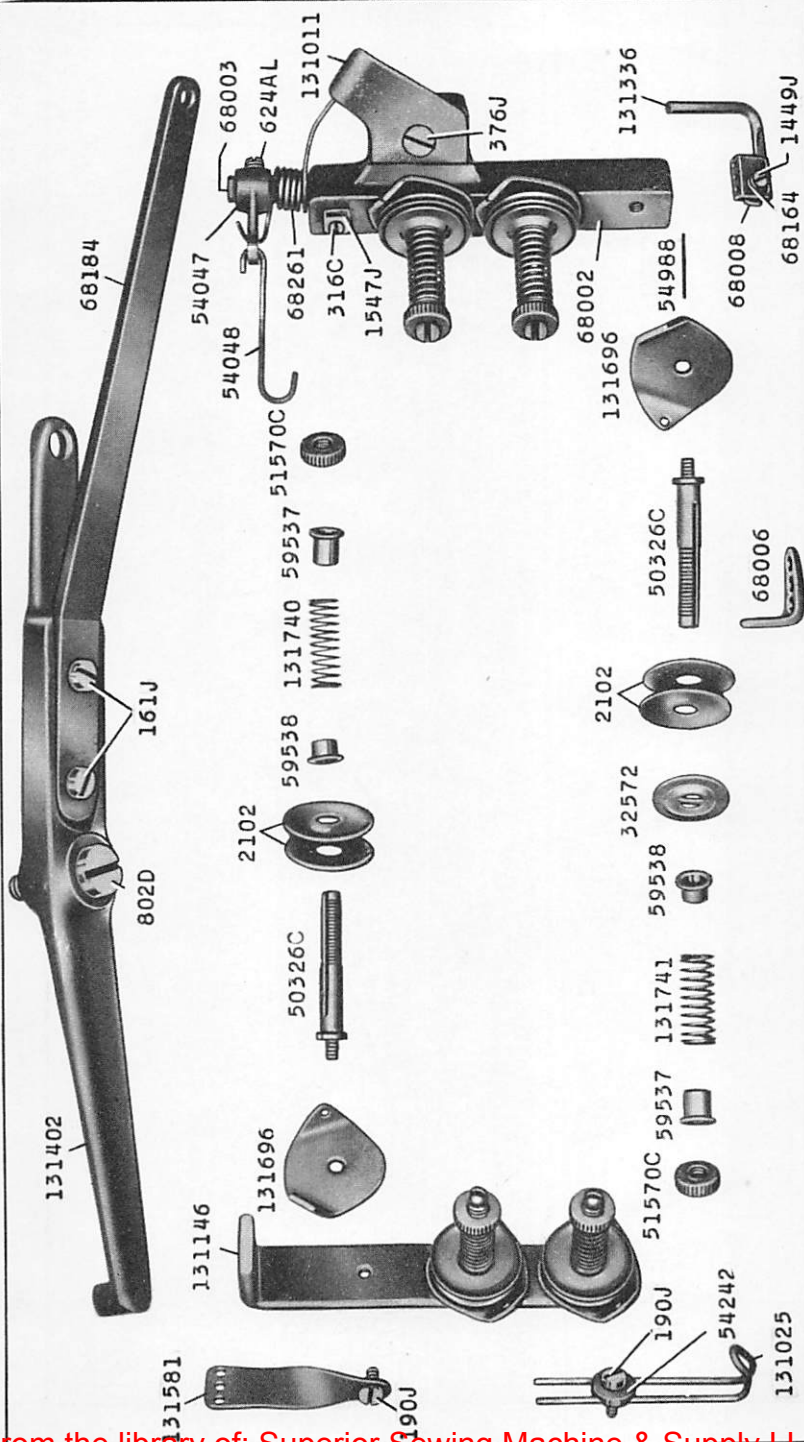


24424 - 2/3

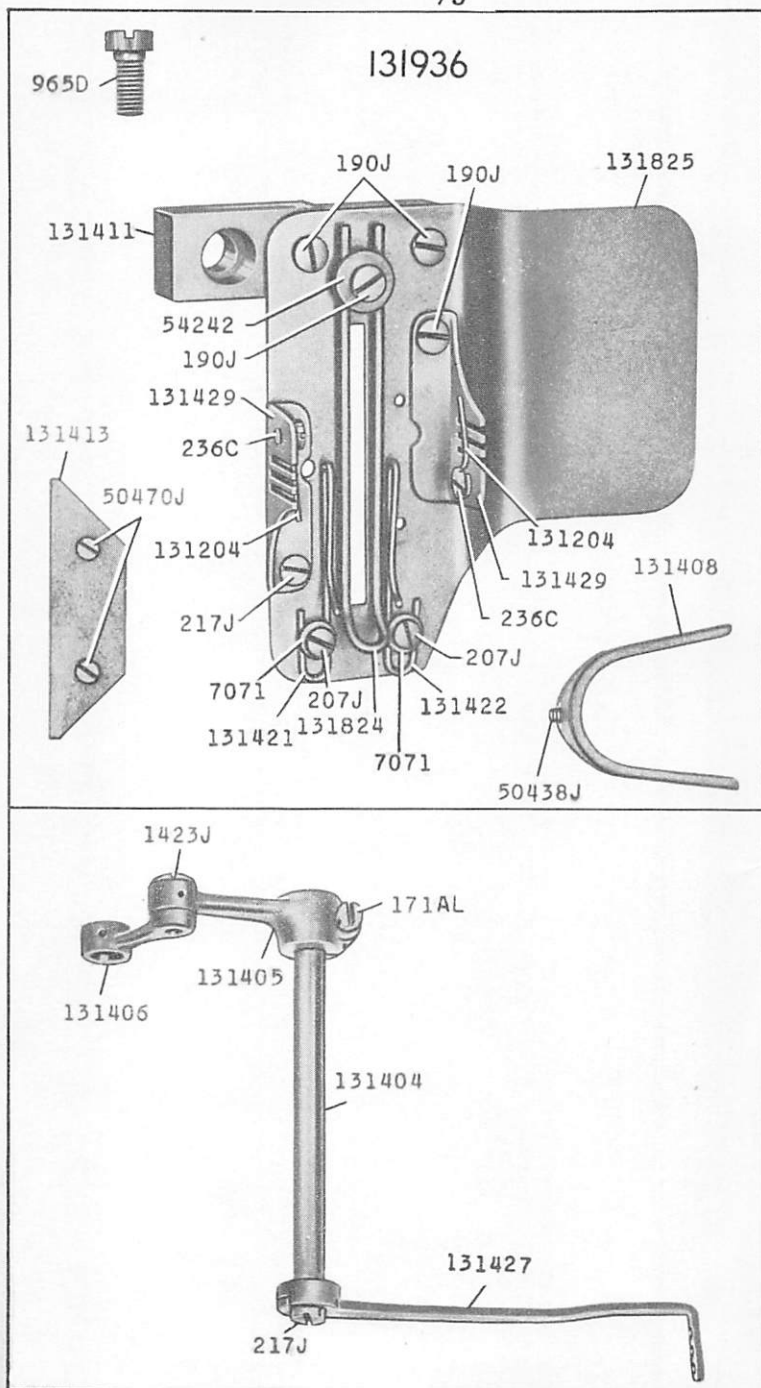

24425 -  $\frac{2}{3}$

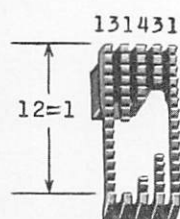


131226

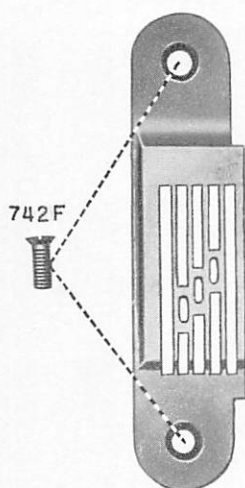

131225

190J

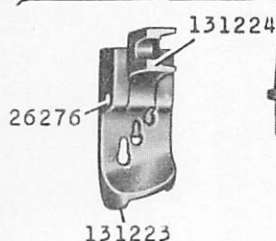

68123



131144



131145




$\frac{3}{32}, \frac{7}{64}, \frac{1}{8}, \frac{9}{64}$   $\frac{5}{32}, \frac{11}{64}, \frac{3}{16}$

131323





131326

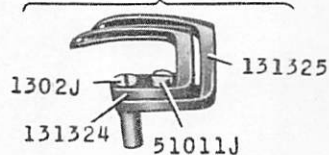

$\frac{3}{32}, \frac{7}{64}, \frac{1}{8}, \frac{9}{64}, \frac{5}{32}, \frac{11}{64}, \frac{3}{16}$



24426 - 2/3

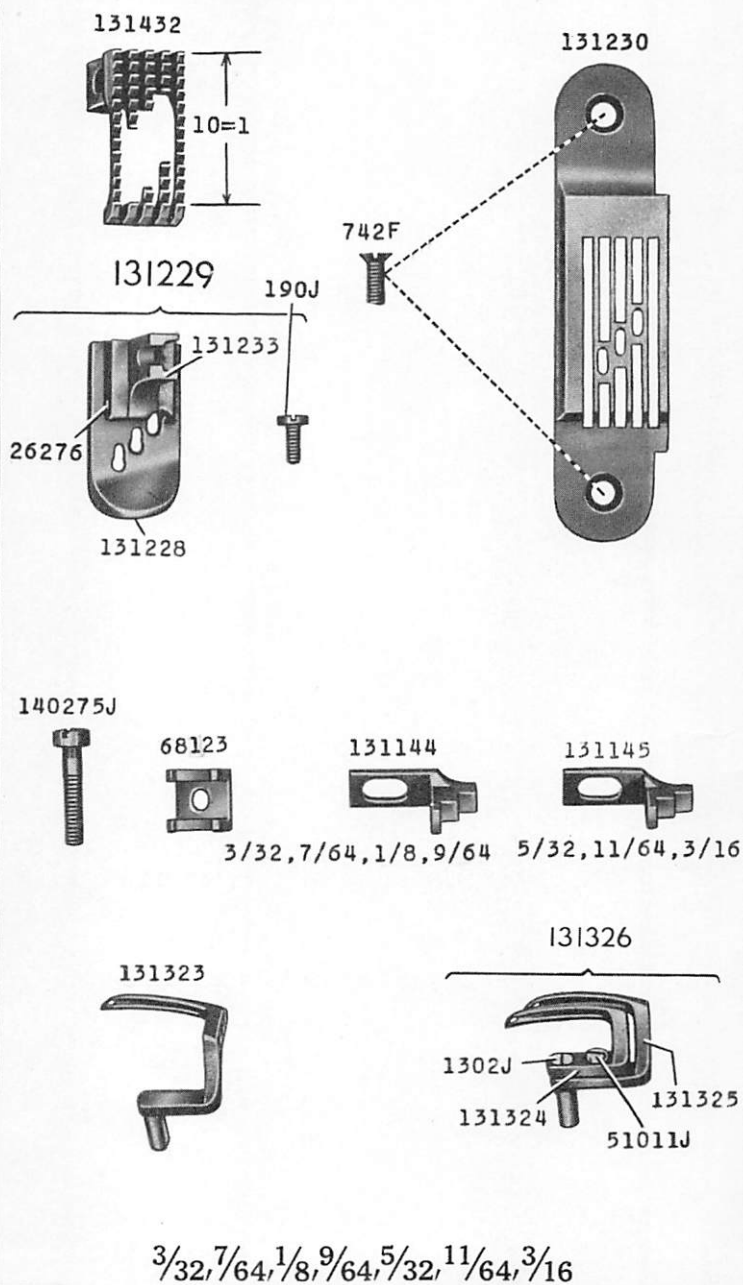

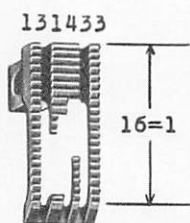

131438

190J

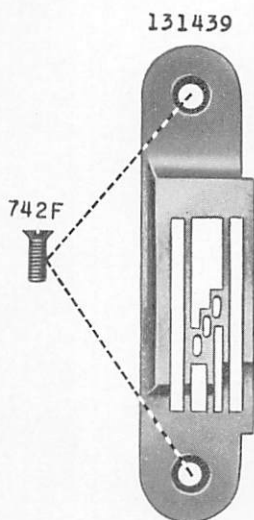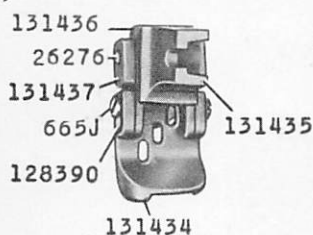

140275J



68123J




131144



131323




131326

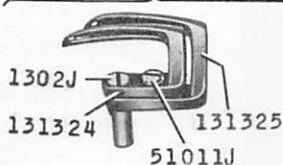




131440

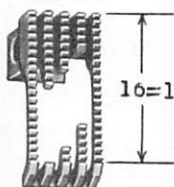

131226

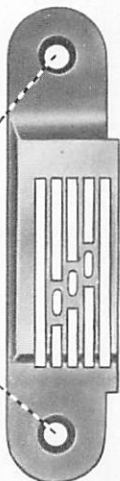


742F



131225

190J

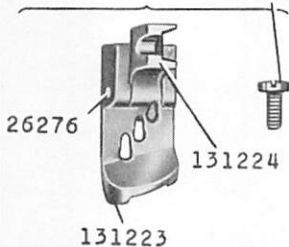

140275J



68123



131144



131145




3/32, 7/64, 1/8, 9/64 5/32, 11/64, 3/16


131323





131326

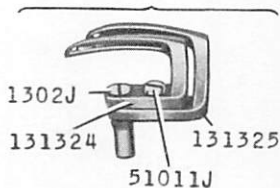

3/32, 7/64, 1/8, 9/64, 5/32, 11/64, 3/16

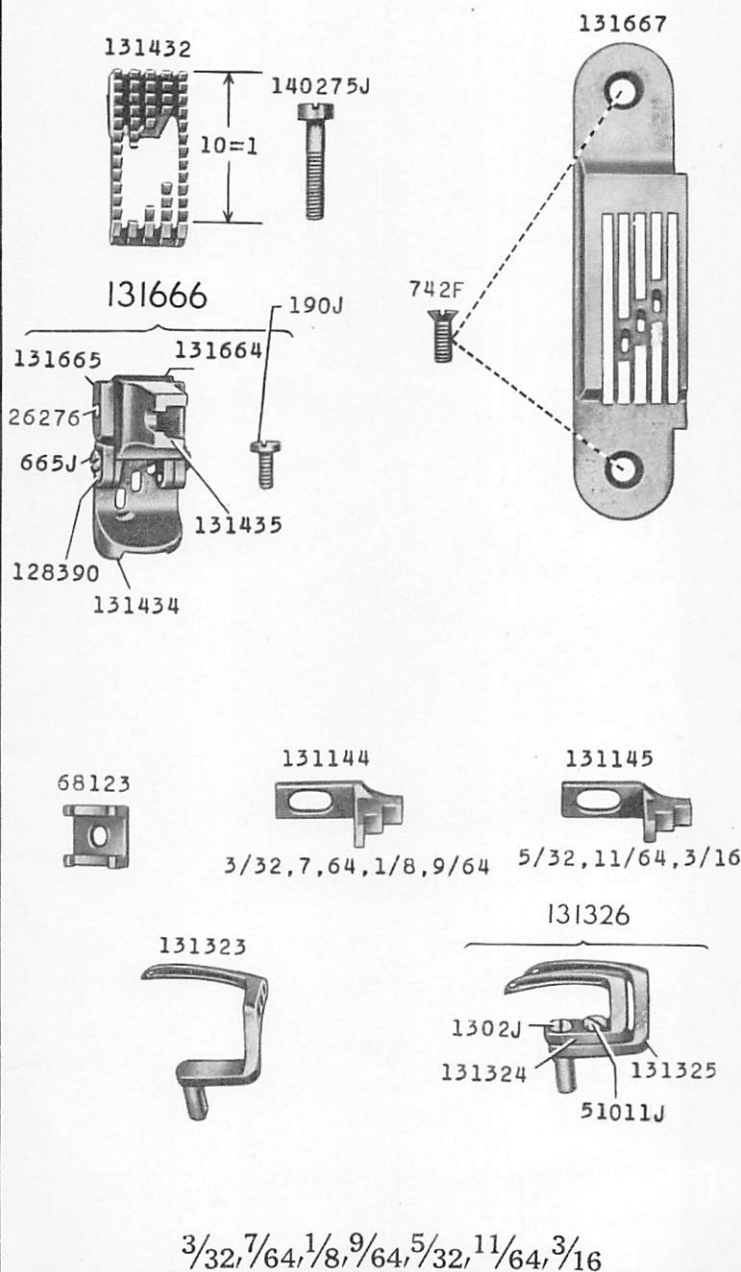

24430

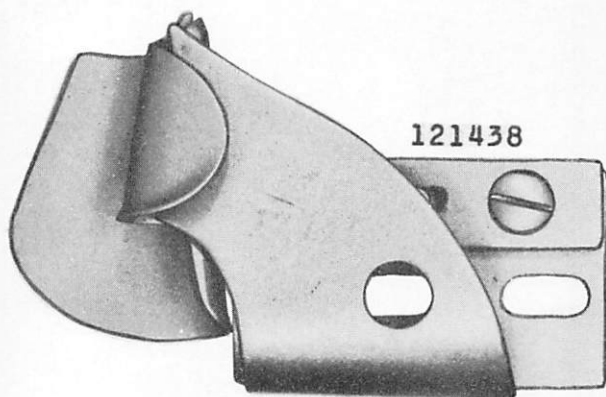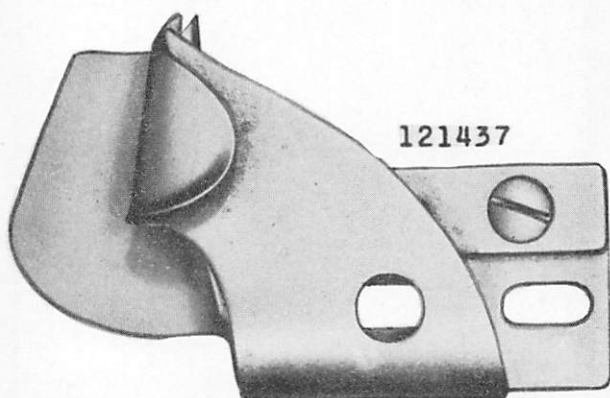


1499J






24431

120754

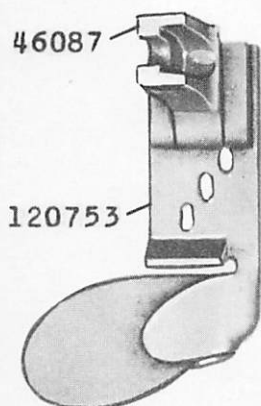

121432

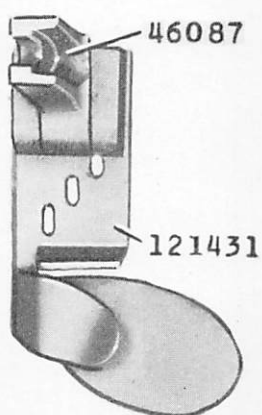

68027

