

Form 19626

(1040)

Printed in U. S. A.

LIST OF PARTS



MACHINE No. 147-88

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

The machine is equipped with an oiling system which automatically delivers the proper amount of oil to the principal bearings of the machine.

Oil in a reservoir in the arm is picked up by a scoop in the connecting rod and lubricates the various bearings inside the arm by splash. A cup within the arm catches some of this oil, and connecting pipes and wicks distribute it to the principal bearings outside the arm.

IN ORDER THAT THIS SYSTEM MAY OPERATE, IT IS ABSOLUTELY NECESSARY THAT THE OILING INSTRUCTIONS GIVEN IN FORM 19407 BE FOLLOWED TO THE LETTER.

Use either Singer "OIL FOR HIGH SPEED SEWING MACHINES (Cloth and Leather)" for general use, or "STAINLESS OIL FOR HIGH SPEED SEWING MACHINES" where a stainless oil is desired.

Copyright, U. S. A., 1938 and 1940

by The Singer Manufacturing Co.

All Rights Reserved for all Countries

INDEX

	Page
Accessories.....	19
Belt Guard.....	19
Bench Stand.....	19
Edge Guide.....	20
Fittings.....	18
Foot Lifter Parts.....	20
Knee Lifter Parts.....	20
Machine Base.....	21
Machine Base Oil Drain Jar.....	21
Machine No. 147-88.....	5
Numerical List of Parts.....	23
Thread Unwinder.....	22

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A-Hardened, Polished, Nickel Plated and Buffed
- A.A-Buffed and Chromium Plated
- A.B-Hardened, Polished, Buffed and Chromium Plated
- A.C-Brown Baking Enamel Finish
- A.D-Gray Baking Enamel Finish
- A.E-Hardened, Bright Rumbled and Nickel Plated
- A.F-Hardened, Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated
- B-Polished, Nickel Plated and Buffed
- C-Hardened Only
- C.R-Hardened and Merlized
- D-Polished Only
- E-Soft, Not Polished
- F-Hardened and Polished
- F.J-Hardened, Polished and Nickel Plated
- G-Bright Rumbled and Nickel Plated
- H-Blued
- J-Nickel Plated Only
- K-Hardened and Nickel Plated
- L-Brass Plated
- M-Oxidized
- N-Japaned, Dull
- P-Japaned, Bright
- P.P-Wrinkle Finish
- R-Merlized
- S-Cadmium Plated
- T-Copper Plated
- T.A-Hardened, Polished, Copper and Nickel Plated and Buffed
- T.B-Copper and Nickel Plated and Polished
- T.J-Copper and Nickel Plated Only
- T.K-Hardened, Copper and Nickel Plated
- T.L-Copper and Brass Plated
- T.M-Copper Plated and Oxidized
- U-Zinc Plated
- V-Silver Plated
- W-Polished and Nickel Plated
- X-Black Oxide, for Iron and Steel
- X.C-Hardened and Black Oxide, for Iron or Steel
- Y-Black Nickel Plated Only
- Z-Chromium Plated
- Z.A-Hardened, Polished, Nickel Plated, Buffed and Chromium Plated
- Z.B-Polished, Nickel Plated, Buffed and Chromium Plated
- Z.C-Hardened and Chromium Plated
- Z.D-Polished and Chromium Plated
- Z.G-Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated
- Z.J-Nickel and Chromium Plated
- Z.T-Copper and Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.


In this series:

- 1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers
- 1501 to 1800 and 51501 to 51800 are Nut Numbers
- 1801 to 2000 and 51801 to 52000 are Roller Numbers
- 2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE FOR

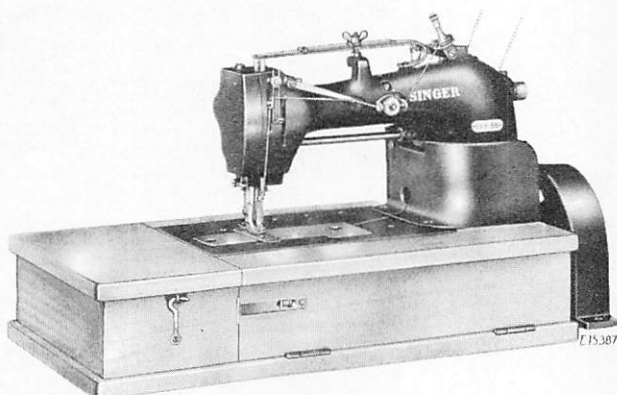

MACHINE No. 147-88

For Cloth or Leather, Work Gloves, Trousers, Mattresses, Binding, Welting, etc. One needle, one looper. Independent upper and under feed. Length of stitch up to 5 to the inch. Needle bar stroke $1 \frac{5}{16}$ inches. Ball bearing. Speed 3800 R. P. M.

No.	Plate	Name
*131644	-----	Arm, upper and lower (solid) with 948J, 15404, 68483, two 15405 and four 131022.....
68428	20688	Arm Bottom Cover.....
68429	20688	" " " Gasket (cork).....
1057C	20688	" " " Screw (4).....
50608R	20688	" Hole Plug Screw, for access to Crank Connecting Rod (upper bearing).....
139017	20688	Arm Hole Plug Screw Washer.....
68350	20679	" Oil Cup, for oiling Arm Rock Shaft Front Bearing.....
131309	20680	Arm Oil Cup, for filling oil reservoir..
131305	20680	" " " Drip Pan with two 563C.....
563C	20680	" " " " " Position Screw (2)
131319	20679	" " " Oil Pad (braided cotton) for 68350.....

No.	Plate	Name
131480	20680	Arm Rotary Shaft Ball Bearing (back) Spacing Collar.....
131366	20680	Arm Rotary Shaft Ball Bearing (inter- mediate).....
131481	20680	Arm Rotary Shaft Ball Bearing (inter- mediate) Case.....
1304C	20680	Arm Rotary Shaft Ball Bearing (inter- mediate) Case Set Screw.....
131482	20680	Arm Rotary Shaft Ball Bearing (inter- mediate) Collar with two 457C.....
457C	20680	Arm Rotary Shaft Ball Bearing (inter- mediate) Collar Set Screw (2).....
131457	20680	Arm Rotary Shaft Bushing (front).....
761E	20680	" " " " " Set Screw
42367	20680	" " " " Front Bearing Oil Pad, lower (braided cotton).....
54218	20680	Arm Rotary Shaft Front Bearing Oil Pad, upper (braided cotton).....
144D	20680	Arm Rotary Shaft Screw.....
131276	20688	" Side Cover (oil vent).....
131277	20688	" " " Cap.....
131280	20688	" " " " Position Pin.....
51224W	20688	" " " " Thumb Screw.....
131278	20688	Arm Side Cover (oil vent) complete, Nos. 51224W, 131276, 131277 and 131280...
68448	20688	Arm Side Cover Gasket (cork).....
1057K	20688	" " " " Screw (4).....
131605	-----	Balance Wheel, 2 5/8 in. pulley, with two 51283C, for round belt.....
131710	20680	Balance Wheel (outside diam. of belt groove 2.9 in.) with two 51283C, for "v" belt.....
128510	20680	Balance Wheel Cover.....
51283C	20680	" " Set Screw.....
131606	20685	Cloth Plate with 54309.....
54309	20685	" " Oil Tube with 49092.....
49092	20685	" " " " Packing (felt).....
68368	20685	" " Slide (left).....
131050	20685	" " " " Spring.....
725J	20685	" " " " " Screw (2)
131051	20685	Cloth Plate Slide (left) complete, Nos. 68368, 131050 and two 725J.....
131607	20685	Cloth Plate Slide (right).....
131381	20685	" " " " Spring.....
725J	20685	" " " " " Screw (2)
131608	20685	Cloth Plate Slide (right) complete, Nos. 131381, 131607 and two 725J.....
131609	20685	Cloth Plate complete, Nos. 131051, 131606 and 131608.....
1011F	20685	Cloth Plate Screw (left) (2).....

PARTS FOR MACHINE No. 147-88

No.	Plate	Name
50396F	20685	Cloth Plate Screw (right).....
131610	20685	" " Thread Guard.....
389F	20685	" " " " Screw (lower)..
50473F	20685	" " " " " (upper)..
*131471	20680	Crank Connecting Rod with two each 896C and 1057C.....
Note: When No. 131471 is required for repairs, Con- necting Rod and Arm Rock Shaft Crank (back) fitted together will be furnished. All Agency orders for this part must state the Machine Num- ber for which it is required in order to obtain correct Needle Bar Stroke.		
131489	-----	Crank Connecting Rod 131471 with 131486.
896C	20680	" " " Cap (lower) Screw (2).....
1057C	20680	Crank Connecting Rod Cap (upper) Screw (2).....
131645	20682	Face Plate with 13862 and 56003.....
56003	20682	" " Oil Tube (long) with 52045, for oiling Feed (upper) Bar Connect- ing Link (upper).....
13862	20682	Face Plate Oil Tube (short) with 52045, for oiling Feed (upper) Bar Connect- ing Link (upper).....
52045	20682	Face Plate Oil Tube Packing (wick).....
142W	20682	" " Screw (2).....
131612	20689	Feed Dog, 15 teeth (14 teeth to the inch) for 131643.....
140275J	20689	Feed Dog Screw.....
460C	20683	" " Stop Screw.....
131729	20683	" (lower) Bar.....
131730	20683	" " " Feed Dog Seat (adjust- able) with 460C.....
190J	20683	Feed (lower) Bar Feed Dog Seat Screw....
22436	20683	" " " " " " " Wash- er.....
131731	-----	Feed (lower) Bar with Feed Dog Leveling Device complete, Nos. 190J, 22436, 68467, 131729, 131730 and two 207E..
131197	20683	Feed (lower) Bar Hinge Pin (eccentric)..
59343	20683	" " " " " Collar with 735C.....
735C	20683	Feed (lower) Bar Hinge Pin Collar Set Screw.....
134258	20683	Feed (lower) Bar Slide Block.....
134259	20683	" " " " " 134258 with 68495 and 134260.....
68495	20683	Feed (lower) Bar Slide Block Oil Pad (wick).....
134260	20683	Feed (lower) Bar Slide Block Oil Pad Re- tainer.....

No.	Plate	Name
68467	20683	Feed (lower) Bar Wearing Plate.....
207E	20683	" " " " " Screw (2)
131500	20680	" " Connecting Rod with 1057C, 68497, 134260 and two 896C.....
131502	-----	Feed (lower) Connecting Rod 131500 with 54025.....
896C	20680	Feed (lower) Connecting Rod Cap Screw (2).....
1057C	20680	Feed (lower) Connecting Rod Clamping Screw.....
68497	20680	Feed (lower) Connecting Rod Oil Pad (wick).....
134260	20680	Feed (lower) Connecting Rod Oil Pad Re- tainer.....
*54024	-----	Feed (lower) Eccentric with 138306.....
*23729	-----	" " " " Body.....
51061C	20680	" " " " Set Screw (2)
7071	20680	" " " " Clamping Washer (2)
217J	20680	" " " " " Screw (2).....
138306	-----	Feed (lower) Eccentric Lubricating Pad (wood).....
54025	20680	Feed (lower) Eccentric (adjustable) com- plete, Nos. 1103C, 23729, 54024 and two each 217J, 7071 and 51061C.....
1103C	20680	Feed (lower) Regulating Screw.....
131240	20683	" " " " Rocking Frame with two 453C
131732	-----	" " " " " 131240 with 59343, 131197 and 131731.....
57234	20683	Feed (lower) Rocking Frame Hinge Pin....
57235	20683	" " " " " " "
		Bushing (2).....
453C	20683	Feed (lower) Rocking Frame Hinge Pin Bushing Set Screw (2).....
453C	20683	Feed (lower) Rocking Frame Hinge Pin Set Screw (2).....
131646	20682	Feed (upper) Bar.....
131689	-----	" " " " " 131646 with 199D, 52595, 54143, 131647, 131690 and three 1423W.
54143	20682	Feed (upper) Bar Connecting Link (lower)
1423W	20682	" " " " " " "
		Cap Screw (2).....
131647	20682	Feed (upper) Bar Connecting Link (upper)
199D	20682	" " " " " " "
		Cap Screw (large).....
1423W	20682	Feed (upper) Bar Connecting Link (upper) Cap Screw (small).....
131648	20682	Feed (upper) Bar Connecting Link (upper) Cushion (textolite).....
131649	20682	Feed (upper) Bar Lifting Bracket with 1250C.....

No.	Plate	Name
1250C	20682	Feed (upper) Bar Lifting Bracket Position Screw.....
192274	20682	Feed (upper) Bar Spring.....
140173C	20682	" " " " Cap Screw.....
131650	20682	" " " " Thimble.....
131651	20682	" " Bell Crank.....
131690	-----	" " " " 131651 with 131648, 131650, 140173C and 192274..
131621	20682	Feed (upper) Bell Crank Connection with 140268C.....
140268C	20682	Feed (upper) Bell Crank Connection Clamping Screw.....
131622	20682	Feed (upper) Bell Crank Connection Sleeve.....
131623	20679	Feed (upper) Bell Crank Connection Sleeve Slide Block.....
131695	20679	Feed (upper) Bell Crank Connection Sleeve Slide Block Clamping Washer (2).....
914J	20679	Feed (upper) Bell Crank Connection Sleeve Slide Block Clamping Washer Screw (2).....
50328C	20679	Feed (upper) Bell Crank Connection Sleeve Slide Block Regulating Screw.
131500	20680	Feed (upper) Connecting Rod with 1057C, 68497, 134260 and two 896C.....
131617	-----	Feed (upper) Connecting Rod 131500 with 54456.....
896C	20680	Feed (upper) Connecting Rod Cap Screw (2).....
1057C	20680	Feed (upper) Connecting Rod Clamping Screw.....
131618	20683	Feed (upper) Connecting Rod Crank with two 50200C.....
50200C	20683	Feed (upper) Connecting Rod Crank Set Screw.....
131619	20683	Feed (upper) Connecting Rod Hinge Stud..
68497	20680	" " " " Oil Pad (wick).....
134260	20680	Feed (upper) Connecting Rod Oil Pad Re- tainer.....
*54024	-----	Feed (upper) Eccentric with 138306.....
*54455	-----	" " " " Body.....
51061C	20680	" " " " Set Screw (2)
7071	20680	" " " " Clamping Washer (2)
217J	20680	" " " " Screw (2).....
138306	-----	Feed (upper) Eccentric Lubricating Pad (wood).....
54456	20680	Feed (upper) Eccentric (adjustable) com- plete, Nos. 1103C, 54024, 54455 and two each 217J, 7071 and 51061C.....

No.	Plate	Name
1103C	20680	Feed (upper) Regulating Screw.....
54155	20683	" " Rock Shaft.....
54369	20683	" " " " Collar with two 465C.....
465C	20683	Feed (upper) Rock Shaft Collar Set Screw
54156	20683	" " " " Crank (back) with two 50200C.....
50200C	20683	Feed (upper) Rock Shaft Crank (back) Set Screw.....
52595	20682	Feed (upper) Rock Shaft Crank (front) with 1057E.....
1057E	20682	Feed (upper) Rock Shaft Crank (front) Clamping Screw.....
131624	20683	Feed (upper) Rock Shaft Pitman.....
131625	20683	" " " " " Crank with two 50200C.....
50200C	20683	Feed (upper) Rock Shaft Pitman Crank Set Screw.....
131626	20683	Feed (upper) Rock Shaft Pitman Crank Shaft.....
131627	20683	Feed (upper) Rock Shaft Pitman Crank Shaft Bracket.....
129E	20683	Feed (upper) Rock Shaft Pitman Crank Shaft Bracket Screw (2).....
41F	20683	Feed (upper) Rock Shaft Pitman Hinge Screw (2).....
1520J	20683	Feed (upper) Rock Shaft Pitman Hinge Screw Nut (2).....
131628	20689	Feeding Foot.....
203J	20689	" " Screw.....
131133	20689	Looper.....
131134	20689	" 131133 with 229J and 131135.....
54027	20681	" Carrier with two 175E.....
175E	20681	" " Adjusting Screw (2).....
54227	20681	" " Connection.....
54228	20681	" " " Shaft.....
128419	20681	" " " " Oil Pad (braided cotton).....
68478	20681	Looper Carrier Connection Shaft Sleeve (eccentric).....
51263D	20681	Looper Carrier Connection Shaft Sleeve Cap Screw.....
68479	20681	Looper Carrier Driver with four 175E....
175E	20681	" " " " Cap Screw (4).....
*131110	20681	" Driving Shaft and Feed Lifting Eccentric.....

Note: When No. 131110 is required for repairs, the
Arm Rotary Shaft must be returned to the factory
to be adjusted to the new part.

No.	Plate	Name
*131111	-----	Looper Driving Shaft and Feed Lifting Eccentric 131110 with 54027, 54227, 54228 and 68479.....
*68483	-----	Looper Driving Shaft and Feed Lifting Eccentric Bracket with 761E.....
948J	20680	Looper Driving Shaft and Feed Lifting Eccentric Bracket Screw.....
68484	20681	Looper Driving Shaft and Feed Lifting Eccentric Bushing.....
131028	20681	Looper Driving Shaft and Feed Lifting Eccentric Bushing Oil Plug.....
761E	20680	Looper Driving Shaft and Feed Lifting Eccentric Bushing Position Screw....
68497	20680	Looper Driving Shaft and Feed Lifting Eccentric Front Bearing Oil Pad (wick).....
640E	20680	Looper Driving Shaft and Feed Lifting Eccentric Screw.....
54035	20681	Looper Holder with 1120C.....
51119J	20681	" " Screw.....
131135	20689	" Needle Guard with 46105.....
46105	20689	" " " Pin.....
229J	20689	" " " Screw.....
1120C	20681	" Set Screw.....
68485	20681	" Throw-out Handle with two 443C...
68486	20681	" " " Plunger.....
43503	20681	" " " " Spring..
443C	20681	" " " Set Screw (2)...
54208	20682	Needle Bar (hollow) with 857C.....
131291	20682	" " Bushing (lower).....
1133E	20682	" " " " Set Screw....
64320	20682	" " " (upper).....
1133E	20682	" " " " Set Screw....
68488	20682	" " Connecting Link and Thread (upper) Controller.....
131399	-----	Needle Bar Connecting Link and Thread (upper) Controller 68488 with 68489 and 131400.....
68489	20682	Needle Bar Connecting Link Hinge Stud (hollow).....
1520J	20682	Needle Bar Connecting Link Hinge Stud Nut.....
131270	20682	Needle Bar Connecting Link Hinge Stud Oil Pad (wick).....
861F	20682	Needle Bar Connecting Link Hinge Stud Oil Plug Screw.....
853C	20682	Needle Bar Connecting Link Hinge Stud Set Screw.....
131400	20682	Needle Bar Connecting Stud with 211F and 1492E.....

No.	Plate	Name
1492E	20682	Needle Bar Connecting Stud Clamping Screw.....
131316	20683	Needle Guard (movable).....
68123	20683	" " " Clamp.....
657C	20682	" Set Screw.....
131636	20684	011 Pipe (back of arm) with 68497, for oiling Feed (lower) Rocking Frame Hinge Pin Front Bearing.....
68493	20684	011 Pipe (back of arm) Clamp.....
176E	20684	" " " " " Screw.....
68494	20684	" " " " " Connection with 68495 and two 198E, for oiling Feed (lower) Rocking Frame Hinge Pin Back Bearing.....
68494	20684	011 Pipe (back of arm) Connection with 68495 and two 198E, for oiling Feed (upper) Rock Shaft Pitman Crank Shaft.....
198E	20684	011 Pipe (back of arm) Connection Cap Screw (2).....
68495	20684	011 Pipe (back of arm) Connection Oil Pad (wick).....
68496	20684	011 Pipe (back of arm) Coupling.....
1733	20684	" " " " " Nut (brass)
68497	20684	" " " " " Oil Pad (wick)...
131637	20684	" " (front of arm) with 131089 and two 1733, for oiling Looper Driving Shaft and Feed Lifting Eccentric Front Bearing.....
131112	20684	011 Pipe (front of arm) with 68497 and 131003, for oiling Feed (lower) Bar Slide Block.....
68500	20684	011 Pipe (front of arm) with 1733, 131084 and 131089, for oiling Arm Rotary Shaft Front Bearing.....
131113	20684	011 Pipe (front of arm) with 68497 and 131003, for oiling Feed (lower) Con- necting Rod.....
131113	20684	011 Pipe (front of arm) with 68497 and 131003, for oiling Feed (upper) Con- necting Rod.....
131638	-----	011 Pipe (front of arm) complete, Nos. 68500, 131112, 131637 and two 131113
131002	20684	011 Pipe (front of arm) Connection with two 198E, for oiling Looper Throw- out Device.....
131003	20684	011 Pipe (front of arm) Connection with two 198E, for 131112 and 131113.....
131084	20684	011 Pipe (front of arm) Connection with two 198E, for 68500.....

No.	Plate	Name
198E	20684	Oil Pipe (front of arm) Connection Cap Screw (2).....
131004	20684	Oil Pipe (front of arm) Coupling (center).....
131004	20684	Oil Pipe (front of arm) Coupling (left).
131087	20684	" " " " " " (right) with Oil Lead.....
1733	20684	Oil Pipe (front of arm) Coupling Nut (brass).....
131089	20684	Oil Pipe (front of arm) Oil Pad (wick) for 68500 and 131637.....
68497	20684	Oil Pipe (front of arm) Oil Pad (wick) for 131112 and 131113.....
57255	20682	Presser Bar.....
131629	20682	" " Bushing (lower).....
1133E	20682	" " " " Set Screw...
38456	20682	" " " (upper).....
1133E	20682	" " " " Set Screw...
131630	20682	" " Lifting Bracket with 453C...
11173	20682	" " " " Guide.....
453C	20682	" " " " " Set Screw.....
453C	20682	Presser Bar Lifting Bracket Set Screw...
131632	20686	" " " Lever.....
68184	20686	" " " " Extension.....
161J	20686	" " " " " Screw (2).....
802D	20686	Presser Bar Lifting Lever Hinge Screw...
131749	20688	" " Spring.....
131750	20688	" " " (auxiliary).....
131751	20688	" " " Screw Stud.....
1637J	20688	" " " " Lock Nut..
38468	20688	" " " Stud.....
131830	20688	Presser Bar Spring complete, Nos. 1637J, 51697W and 131749 to 131752.....
131851	20688	Presser Bar Spring (less auxiliary spring) complete, Nos. 1637J, 42290K, 51697W, 131749 and 131751.....
62527	20689	Presser Foot Hinge Pin.....
131633	20689	" " Plate.....
131634	20689	" " Shank.....
131635	20689	Presser Foot (hinged) complete, Nos. 62527, 131633 and 131634.....
190J	20689	Presser Foot Screw.....
51697W	20688	Pressure Regulating Thumb Nut.....
131752	20688	" " " " Washer for 131830.....
42290K	20688	Pressure Regulating Thumb Nut Washer for 131851.....
131025	20687	Slack Thread Controller.....
54242	20687	" " " Clamp.....
190J	20687	" " " " Screw.....

No.	Plate	Name
131419	20687	Slack Thread Regulator.....
131404	20687	" " " Holder.....
131405	20687	" " " " Crank with 171E.....
1423J	20687	Slack Thread Regulator Holder Crank Cap Screw.....
171E	20687	Slack Thread Regulator Holder Crank Clamping Screw.....
131406	20687	Slack Thread Regulator Holder Crank Con- necting Link.....
217J	20687	Slack Thread Regulator Screw.....
131012	20686	Tension (under thread) Bracket.....
691F	20686	" " " " Screw....
2102	20686	" " " Disc (2).....
51570C	20686	" " " Regulating Thumb Nut.....
50326C	20686	Tension (under thread) Screw Stud.....
59539	-----	" " " " " 50326C with 51570C.....
131740	20686	Tension (under thread) Spring.....
59537	20686	" " " " Bushing (large).....
59538	20686	Tension (under thread) Spring Bushing (small).....
131696	20686	Tension (under thread) Thread Guide.....
54045	20686	" (upper thread) Bracket.....
376J	20686	" " " " Screw....
2102	20686	" " " Disc (2).....
51570C	20686	" " " Regulating Thumb Nut.....
32572	20686	Tension (upper thread) Releasing Disc...
54988	20686	" " " " Pin....
54046	20686	" " " " Shaft..
54047	20686	" " " " "
		Crank with 624C.....
54048	20686	Tension (upper thread) Releasing Shaft Crank Link.....
624C	20686	Tension (upper thread) Releasing Shaft Crank Set Screw.....
68261	20686	Tension (upper thread) Releasing Shaft Spring.....
131011	20686	Tension (upper thread) Releasing Shaft Spring Position Plate.....
316C	20686	Tension (upper thread) Releasing Shaft Stop Screw.....
1547J	20686	Tension (upper thread) Releasing Shaft Stop Screw Nut.....
50326C	20686	Tension (upper thread) Screw Stud.....
59539	-----	" " " " " 50326C with 51570C.....

No.	Plate	Name
131741	20686	Tension (upper thread) Spring.....
59537	20686	" " " " Bushing (large).....
59538	20686	Tension (upper thread) Spring Bushing (small).....
131696	20686	Tension (upper thread) Thread Guide....
53225	20686	Thread (under) Eyelet (back).....
190J	20686	" " " " Screw.....
131407	20680	" " Take-up with 1258C.....
131408	20680	" " Oil Guard.....
50438J	20680	" " " " Screw..
1258C	20680	" " Set Screw.....
131409	20680	" " Stripper.....
54242	20680	" " " " Clamp...
190J	20680	" " " " " "
		Screw.....
131640	20680	Thread (under) Take-up Stripper Plate...
131411	20680	" " " " " "
		Bracket.....
131641	20680	Thread (under) Take-up Stripper Plate Bracket 131411 with 32062, 50438J, 54242, 131408, 131409, 131413, 131421, 131422, 131640, 131642, two each 207J, 7071, 50163J, 50470J and four 190J..
965D	20680	Thread (under) Take-up Stripper Plate Bracket Screw.....
131642	20680	Thread (under) Take-up Stripper Plate Extension.....
50163J	20680	Thread (under) Take-up Stripper Plate Extension Screw (2).....
190J	20680	Thread (under) Take-up Stripper Plate Screw (3).....
32062	20680	Thread (under) Take-up Stripper Washer..
131413	20680	" " " " Thread Guard (fibre).....
50470J	20680	Thread (under) Take-up Thread Guard Screw (2).....
131421	20680	Thread (under) Take-up Thread Guide (left).....
207J	20680	Thread (under) Take-up Thread Guide (left) Screw.....
7071	20680	Thread (under) Take-up Thread Guide (left) Screw Washer.....
131422	20680	Thread (under) Take-up Thread Guide (right).....
207J	20680	Thread (under) Take-up Thread Guide (right) Screw.....
7071	20680	Thread (under) Take-up Thread Guide (right) Screw Washer.....
68129	20687	Thread (upper) Nipper Body.....

No.	Plate	Name
1149C	20687	Thread (upper) Nipper Body Set Screw....
68130	20687	" " " Disc (inside).....
68131	20687	" " " " Washer (fibre).....
68132	20687	Thread (upper) Nipper Disc (outside)....
1698R	20687	" " " " " Nut
59456	20687	" " " " " Washer.....
68133	-----	Thread (upper) Nipper Roller.....
68134	-----	" " " " Hinge Pin...
68135	-----	" " " Stud.....
68136	20687	" " " " 68135 with 68133 and 68134.....
13218	20687	Thread (upper) Nipper Stud Spring.....
68137	20687	Thread (upper) Nipper complete, Nos. 1698R, 13218, 59456, 68129 to 68132 and 68136.....
68138	20687	Thread (upper) Nipper Thread Guide.....
207J	20687	" " " " " Screw
131332	20687	" " Take-up.....
54194	20687	" " " Plate.....
68164	20687	" " " Spring.....
1449J	20687	" " " " Screw
131333	20687	Thread (upper) Take-up complete, Nos. 1449J, 54194, 68164 and 131332.....
211F	20682	Thread (upper) Take-up Set Screw.....
131643	20689	Throat Plate for 131612.....
742F	20689	" " Screw.....
*15404	-----	Trade Mark.....
15405	-----	" " Rivet (2).....

**Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1**

**Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2**

FITTINGS

FOR GENERAL WORK

No.	Plate	Name
131612	20689	Feed Dog, 15 teeth (14 teeth to the inch) for 131643.....
131628	20689	Feeding Foot.....
62527	20689	Presser Foot Hinge Pin.....
131633	20689	" " Plate.....
131634	20689	" " Shank.....
131635	20689	Presser Foot (hinged) complete, Nos. 62527, 131633 and 131634.....
131643	20689	Throat Plate for 131612.....

FOR UPHOLSTERING AUTOMOBILE SEAT CUSHIONS, ETC.

No.	Plate	Name
131857	20690	Feed Dog, 15 teeth (10 teeth to the inch) for 131515.....
131858	20690	Feeding Foot.....
62527	20690	Presser Foot Hinge Pin.....
131859	20690	" " Plate.....
131860	20690	" " Shank.....
131861	20690	Presser Foot (hinged) complete, Nos. 62527, 131859 and 131860.....
131515	20690	Throat Plate for 131857.....

FOR PANTS SEAMING

No.	Plate	Name
54126	20690	Feed Dog, 12 teeth (10 teeth to the inch) for 68085.....
131862	20690	Feeding Foot.....
131863	20690	Presser Foot.....
68085	20690	Throat Plate for 54126.....

ACCESSORIES

No.	Plate	Name
120344	20691	Oiler (copper plated) with 120345.....
120345	20691	" Spout, 4 1/2 in. long.....
120440	20691	Screw Driver (large).....
121108	20691	" " (small).....
120341	20691	Tweezers (curved).....
4822	20691	Wrench for 1547.....
8908	20691	" " 1520.....
17905	20691	" " 140268.....

BELT GUARD

No.	Plate	Name
68222	20633	Belt Guard with two wood screws 1 in. No. 12.....

BENCH STAND

No.	Plate	Name
79772	-----	Bench Stand with 27998, two each 41538, 126849, three wood screws 1 1/4 in. No. 12, four each 60656, wood screws 1 1/4 in. No. 10 and sixteen wood screws 5/8 in. No. 7.....
126849	20691	Flap Hinge with four wood screws 3/4 in. No. 7 (2).....
27998	20691	Flap Hook and Eye (brass) with wood screw 1/2 in. No. 5.....
126247	20691	Flush Bolt.....
126248	20691	" " Plate.....
41538	-----	Flush Bolt with Plate complete, Nos. 126247, 124248 and four brass wood screws 5/8 in. No. 4 (2).....
60656	20691	Hinge (4).....

EDGE GUIDE

FOR GLOVE WORK

No.	Plate	Name
121616	20689	Edge Guide.....
226259	20689	" " Frame with 226264.....
226262	20689	" " Handle.....
226264	20689	" " Cushion (leather).....
200297K	20689	" " Hinge Screw.....
226263	20689	" " Spring.....
121617	20689	Edge Guide complete, Nos. 121616, 200297K, 226259, 226262, 226263 and two 50152W.
50152W	20689	Edge Guide Screw (2).....

FOOT LIFTER PARTS

No.	Plate	Name
6439	-----	Chain, 36 in. to 45 in., with 56864 and 56865.....
Note: When ordering No. 6439, state length required.		
4879	20633	Chain Connecting Link.....
56864	20691	" Hook (large).....
56865	20691	" " (small).....
126249	20633	Treadle.....
4882	20633	" Shaft.....
126250	20633	" Spring.....
150451	20633	" Stand.....
150452	20633	Treadle complete, Nos. 4879, 4882, 126249, 126250, 150451 and two wood screws 1 in. No. 16 F.H.....

KNEE LIFTER PARTS

No.	Plate	Name
37563	-----	Chain, length 15 in., with 56864 and 56865.....
56864	20691	Chain Hook (large).....
56865	20691	" " (small).....
2763	20633	Rock Shaft.....
12242	20633	" " Hanger with two wood screws 1 in. No. 10 (2).....

No.	Plate	Name
6335	20633	Rock Shaft Knee Arm.....
6336	-----	Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 6335.....
2766	20633	Rock Shaft Knee Arm Hub with 356C.....
356C	20633	" " " " " Set Screw.....
2767	20633	" " " Plate with 356C.....
356C	20633	" " " " " Set Screw.....
6337	20633	" " Lifting Bracket with two 356C
7125	20633	" " " " " Hook.....
356C	20633	" " " " " Set Screw.....
356C	20633	Rock Shaft Lifting Bracket Set Screw....
2770	20633	" " Stop Dog with 356C.....
356C	20633	" " " " " Set Screw.....
23767	20633	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337, 7125 and two 12242.....

MACHINE BASE

No.	Plate	Name
131263	21038	Machine Base.....
54477	21038	" " Screw Stud, to fasten base to table (3).....
131205	21038	Machine Base Screw Stud, to position ma- chine on base (4).....
51576E	21038	Machine Base Screw Stud Nut (3).....
9842	21038	" " " " " Washer (3).. " " " " " Bushing (rubber)
131022	21038	(4).....
131279	21038	Machine Cushion (felt) (4).....
131264	21038	Machine Base complete, Nos. 131263, three each 9842, 51576E, 54477 and four each 131205 and 131279.....
131328	21038	Machine Base and Oil Drain Jar (swinging type) complete, Nos. 131264 and 131268.....

MACHINE BASE OIL DRAIN JAR (SWINGING TYPE)

No.	Plate	Name
131185	21038	Jar (glass).....
131191	21038	" Cap.....
131188	-----	" Clamp.....

MACHINE BASE OIL DRAIN JAR

No.	Plate	Name
131217	-----	Jar Clamp 131188 with 131189.....
131189	-----	" " Lever.....
1247C	21038	" " " Hinge Screw (2).....
131265	21038	Nipple (long) (2).....
131266	21038	" (short).....
131267	21038	" Elbow (2).....
131268	21038	Machine Base Oil Drain Jar (swinging type) complete, Nos. 131185, 131191, 131217, 131266 and two each 1247C, 131265 and 131267.....

THREAD UNWINDER

(FOR TWO SPOOLS)

No.	Plate	Name
225257	20692	Spool Rest (for two spools) with 201018C
150203	20692	" " Cushion (felt) (2).....
225388	20692	" " Rod.....
200383C	20692	" " " Set Screw.....
201018C	20692	" " Set Screw.....
202490	20692	" Stand with 200383C.....
225391	20692	Thread Guide (2).....
201696J	20692	" " Lock Nut.....
225326	20692	" " Position Cup.....
225324	20692	" " Rod with 208E and 225322...
208E	20692	" " " Screw.....
225322	20692	" " " Washer.....
*150085	-----	" Separator.....
150086	20692	" " 150085 with 150059.....
*150059	-----	" " Bracket.....
150060	20692	" " " Arm with 164J and 9525.....
164J	20692	Thread Separator Bracket Arm Clamping Screw.....
9525	20692	Thread Separator Bracket Arm Clamping Screw Washer.....
164J	20692	Thread Separator Bracket Arm Screw.....
9525	20692	" " " " " Washer
150087	-----	Thread Separator complete, Nos. 164J, 9525, 150060 and 150086.....
150088	20692	Thread Unwinder complete, Nos. 150087, 201696J, 202490, 225257, 225324, 225326, 225388, two each 150203, 225391 and three wood screws 7/8 in. No. 12.....
27739	20692	Thread Cone (wood) for large cones.....
225390	20692	" " Holder, for inverted cones..

Note: Nos. 27739 and 225390 are used with, but not
included in 150088.

NUMERICAL
LIST
OF PARTS

NUMERICAL LIST OF PARTS

No.	Plate	Name
41F	20683	Feed (upper) Rock Shaft Pitman Hinge Screw (2).....
129E	20683	Feed (upper) Rock Shaft Pitman Crank Shaft Bracket Screw (2).....
142W	20682	Face Plate Screw (2).....
144D	20680	Arm Rotary Shaft Screw.....
161J	20686	Presser Bar Lifting Lever Extension Screw (2).....
164J	20692	Thread Unwinder Thread Separator Bracket Arm Clamping Screw for 150060.....
164J	20692	Thread Unwinder Thread Separator Bracket Arm Screw for 150087.....
171E	20687	Slack Thread Regulator Holder Crank Clamping Screw for 131405.....
175E	20681	Looper Carrier Adjusting Screw for 54027
175E	20681	" " Driver Cap Screw for 68479 (4).....
176E	20684	Oil Pipe (back of arm) Clamp Screw.....
190J	20683	Feed (lower) Bar Feed Dog Seat Screw for 131731.....
190J	20689	Presser Foot Screw.....
190J	20687	Slack Thread Controller Clamp Screw.....
190J	20686	Thread (under) Eyelet (back) Screw.....
190J	20680	" " Take-up Stripper Clamp Screw for 131641.....
190J	20680	Thread (under) Take-up Stripper Plate Screw for 131641 (3).....
198E	20684	Oil Pipe (back of arm) Connection Cap Screw for 68494 (2).....
198E	20684	Oil Pipe (front of arm) Connection Cap Screw for 131002, 131003 and 131084 (2).....
199D	20682	Feed (upper) Bar Connecting Link (upper) Cap Screw (large) for 131689.....
203J	20689	Feeding Foot Screw.....
205C	20680	Arm Rotary Shaft Ball Bearing (back) Case Cap Screw for 131479 (3).....
207E	20683	Feed (lower) Bar Wearing Plate Screw for 131731 (2).....
207J	20680	Thread (under) Take-up Thread Guide (left) Screw for 131641.....
207J	20680	Thread (under) Take-up Thread Guide (right) Screw for 131641.....
207J	20687	Thread (upper) Nipper Thread Guide Screw
208E	20692	" Unwinder Thread Guide Rod Screw for 225324.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
211F	20682	Thread (upper) Take-up Set Screw for 131400.....
217J	20680	Feed (lower) Eccentric Clamping Washer Screw for 54025 (2).....
217J	20680	Feed (upper) Eccentric Clamping Washer Screw for 54456 (2).....
217J	20687	Slack Thread Regulator Screw.....
229J	20689	Looper Needle Guard Screw for 131134....
316C	20686	Tension (upper thread) Releasing Shaft Stop Screw.....
356C	20633	Rock Shaft Knee Arm Hub Set Screw for 2766.....
356C	20633	Rock Shaft Knee Plate Set Screw for 2767
356C	20633	" " Lifting Bracket Hook Set Screw for 6337.....
356C	20633	Rock Shaft Lifting Bracket Set Screw for 6337.....
356C	20633	Rock Shaft Stop Dog Set Screw for 2770..
376J	20686	Tension (upper thread) Bracket Screw....
389F	20685	Cloth Plate Thread Guard Screw (lower)..
423C	20679	Arm Rock Shaft Bushing (intermediate) Set Screw.....
429C	20680	Arm Rotary Shaft Ball Bearing (back) Case Set Screw.....
443C	20681	Looper Throw-out Handle Set Screw for 68485 (2).....
446C	20679	Arm Rock Shaft Bushing (back) Set Screw.
453C	20679	" " " Flanged Bushing (front) Set Screw.....
453C	20683	Feed (lower) Rocking Frame Hinge Pin Bushing Set Screw (2).....
453C	20683	Feed (lower) Rocking Frame Hinge Pin Set Screw for 131240 (2).....
453C	20682	Presser Bar Lifting Bracket Guide Set Screw.....
453C	20682	Presser Bar Lifting Bracket Set Screw for 131630.....
457C	20680	Arm Rotary Shaft Ball Bearing (intermediate) Collar Set Screw for 131482 (2).....
460C	20683	Feed Dog Stop Screw for 131730.....
465C	20683	" (upper) Rock Shaft Collar Set Screw for 54369.....
563C	20680	Arm Oil Cup Drip Pan Position Screw for 131305.....
624C	20686	Tension (upper thread) Releasing Shaft Crank Set Screw for 54047.....
640E	20680	Looper Driving Shaft and Feed Lifting Eccentric Screw for 131604.....
691F	20686	Tension (under thread) Bracket Screw....

No.	Plate	Name
725J	20685	Cloth Plate Slide (left) Spring Screw for 131051 (2).....
725J	20685	Cloth Plate Slide (right) Spring Screw for 131608 (2).....
735C	20683	Feed (lower) Bar Hinge Pin Collar Set Screw for 59343.....
742F	20689	Throat Plate Screw.....
761E	20680	Arm Rotary Shaft Bushing (front) Set Screw.....
761E	20680	Looper Driving Shaft and Feed Lifting Eccentric Bushing Position Screw for 68483.....
802D	20686	Presser Bar Lifting Lever Hinge Screw...
853C	20682	Needle Bar Connecting Link Hinge Stud Set Screw for 131693.....
857C	20682	Needle Set Screw for 54208.....
861F	20682	" Bar Connecting Link Hinge Stud Oil Plug Screw.....
896C	20680	Crank Connecting Rod Cap (lower) Screw for 131471 (2).....
896C	20680	Feed (lower) Connecting Rod Cap Screw for 131500 (2).....
896C	20680	Feed (upper) Connecting Rod Cap Screw for 131500 (2).....
914J	20679	Feed (upper) Bell Crank Connection Sleeve Slide Block Clamping Washer Screw for 131694 (2).....
948J	20680	Looper Driving Shaft and Feed Lifting Eccentric Bracket Screw for 131644..
965D	20680	Thread (under) Take-up Stripper Plate Bracket Screw.....
1011F	20685	Cloth Plate Screw (left) (2).....
1057C	20688	Arm Bottom Cover Screw (4).....
1057K	20688	" Side Cover Screw (4).....
1057C	20680	Crank Connecting Rod Cap (upper) Screw for 131471 (2).....
1057C	20680	Feed (lower) Connecting Rod Clamping Screw for 131500.....
1057C	20680	Feed (upper) Connecting Rod Clamping Screw for 131500.....
1057E	20682	Feed (upper) Rock Shaft Crank (front) Clamping Screw for 52595.....
1103C	20680	Feed (lower) Regulating Screw for 54025.
1103C	20680	" (upper) Regulating Screw for 54456.
1120C	20681	Looper Set Screw for 54035.....
1133E	20682	Needle Bar Bushing (lower) Set Screw....
1133E	20682	" " " (upper) Set Screw....
1133E	20682	Presser Bar Bushing (lower) Set Screw...
1133E	20682	" " " (upper) Set Screw...
1149C	20687	Thread (upper) Nipper Body Set Screw....

NUMERICAL LIST OF PARTS

No.	Plate	Name
1247C	21038	Machine Base Oil Drain Jar Clamp Lever Hinge Screw for 131268 (2).....
1250C	20682	Feed (upper) Bar Lifting Bracket Posi- tion Screw for 131649.....
1258C	20680	Thread (under) Take-up Set Screw for 131407.....
1304C	20680	Arm Rotary Shaft Ball Bearing (inter- mediate) Case Set Screw.....
1309C	20679	Arm Rock Shaft Adjusting Screw.....
1423W	20682	Feed (upper) Bar Connecting Link (lower) Cap Screw for 131689 (2).....
1423W	20682	Feed (upper) Bar Connecting Link (upper) Cap Screw (small) for 131689.....
1423J	20687	Slack Thread Regulator Holder Crank Cap Screw.....
1449J	20687	Thread (upper) Take-up Plate Spring Screw for 131333.....
1492E	20682	Needle Bar Connecting Stud Clamping Screw for 131400.....
1520J	20683	Feed (upper) Rock Shaft Pitman Hinge Screw Nut (2).....
1520J	20682	Needle Bar Connecting Link Hinge Stud Nut.....
1547J	20686	Tension (upper thread) Releasing Shaft Stop Screw Nut.....
1637J	20688	Presser Bar Spring Screw Stud Lock Nut for 131830 and 131851.....
1698R	20687	Thread (upper) Nipper Disc (outside) Nut for 68137.....
1733	20684	Oil Pipe (back of arm) Coupling Nut (brass).....
1733	20684	Oil Pipe (front of arm) Coupling Nut (brass) for 68500 and 131637.....
2102	20686	Tension (under thread) Disc (2).....
2102	20686	" (upper thread) Disc (2).....
2763	20633	Rock Shaft for 23767.....
2766	20633	" " Knee Arm Hub with 356C, for 6336.....
2767	20633	Rock Shaft Knee Plate with 356C, for 6336.....
2770	20633	Rock Shaft Stop Dog with 356C, for 23767.....
4822	20691	Wrench for 1547 (Accessories).....
4879	20633	Chain Connecting Link for 150452.....
4882	20633	Treadle Shaft for 150452.....
6335	20633	Rock Shaft Knee Arm for 6336.....
6336	-----	Rock Shaft Knee Arm complete for 23767, Nos. 2766, 2767 and 6335.....
6337	20633	Rock Shaft Lifting Bracket with two 356C, for 23767.....

No.	Plate	Name
6439	-----	Chain, 36 in. to 45 in., with 56864 and 56865.....
7071	20680	Feed (lower) Eccentric Clamping Washer for 54025 (2).....
7071	20680	Feed (upper) Eccentric Clamping Washer for 54456 (2).....
7071	20680	Thread (under) Take-up Thread Guide (left) Screw Washer for 131641.....
7071	20680	Thread (under) Take-up Thread Guide (right) Screw Washer for 131641.....
7125	20633	Rock Shaft Lifting Bracket Hook, for 23767.....
8908	20691	Wrench for 1520 (Accessories).....
9525	20692	Thread Unwinder Thread Separator Bracket Arm Clamping Screw Washer for 150060
9525	20692	Thread Unwinder Thread Separator Bracket Arm Screw Washer for 150087.....
9842	21038	Machine Base Screw Stud Nut Washer for 131264 (3).....
11119	20679	Arm Oil Tube with 52045, for oiling Thread (upper) Nipper.....
11173	20682	Presser Bar Lifting Bracket Guide.....
12242	20633	Rock Shaft Hanger with two wood screws 1 in. No. 10, for 23767 (2).....
13218	20687	Thread (upper) Nipper Stud Spring for 68137.....
13862	20682	Face Plate Oil Tube (short) with 52045, for oiling Feed (upper) Bar Connecting Link (upper) for 131645.....
*15404	-----	Trade Mark for 131644.....
15405	-----	" " Rivet for 131644 (2).....
17905	20691	Wrench for 140268 (Accessories).....
22436	20683	Feed (lower) Bar Feed Dog Seat Screw Washer for 131731.....
*23729	----	Feed (lower) Eccentric Body for 54025...
23767	20633	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337, 7125 and two 12242.....
27739	20692	Thread Unwinder Thread Cone (wood) for large cones.....
27998	20691	Bench Stand Flap Hook and Eye (brass) with wood screw 1/2 in. No. 5, for 79772.....
32062	20680	Thread (under) Take-up Stripper Washer for 131641.....
32572	20686	Tension (upper thread) Releasing Disc...
37563	-----	Chain, length 15 in., with 56864 and 56865.....
38456	20682	Presser Bar Bushing (upper).....
38468	20688	" " Spring Stud.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
41538	-----	Bench Stand Flush Bolt with Plate complete for 79772, Nos. 126247, 126248 and four brass wood screws 5/8 in. No. 4 (2).....
42290K	20688	Pressure Regulating Thumb Nut Washer for 131851.....
42365	20679	Arm Rock Shaft Oil Pad (braided cotton) for oiling Back Bearing.....
42367	20680	Arm Rotary Shaft Front Bearing Oil Pad, lower(braided cotton).....
43503	20681	Looper Throw-out Handle Plunger Spring..
46105	20689	" Needle Guard Pin for 131135.....
49092	20685	Cloth Plate Oil Tube Packing (felt) for 54309.....
50083C	20680	Arm Rock Shaft Crank (back) Set Screw for 131486 (2).....
50152W	20689	Edge Guide Screw for 121617 (2).....
50163J	20680	Thread (under) Take-up Stripper Plate Extension Screw for 131641 (2).....
50200C	20683	Feed (upper) Connecting Rod Crank Set Screw for 131618.....
50200C	20683	Feed (upper) Rock Shaft Crank (back) Set Screw for 54156.....
50200C	20683	Feed (upper) Rock Shaft Pitman Crank Set Screw for 131625.....
50326C	20686	Tension (under thread) Screw Stud for 59539.....
50326C	20686	Tension (upper thread) Screw Stud for 59539.....
50328C	20679	Feed (upper) Bell Crank Connection Sleeve Slide Block Regulating Screw for 131694.....
50396F	20685	Cloth Plate Screw (right).....
50438J	20680	Thread (under) Take-up Oil Guard Screw for 131641.....
50470J	20680	Thread (under) Take-up Thread Guard Screw for 131641 (2).....
50473F	20685	Cloth Plate Thread Guard Screw (upper).....
50608R	20688	Arm Hole Plug Screw, for access to Crank Connecting Rod (upper bearing).....
51061C	20680	Feed (lower) Eccentric Body Set Screw for 54025 (2).....
51061C	20680	Feed (upper) Eccentric Body Set Screw for 54456 (2).....
51119J	20681	Looper Holder Screw.....
51224W	20688	Arm Side Cover Cap Thumb Screw for 131278.....
51263D	20681	Looper Carrier Connection Shaft Sleeve Cap Screw.....
51283C	20680	Balance Wheel Set Screw for 131605 and 131710.....

NUMERICAL LIST OF PARTS

29

No.	Plate	Name
51570C	20686	Tension (under thread) Regulating Thumb Nut for 59539.....
51570C	20686	Tension (upper thread) Regulating Thumb Nut for 59539.....
51576E	21038	Machine Base Screw Stud Nut for 131264 (3).....
51697W	20688	Pressure Regulating Thumb Nut for 131830 and 131851.....
52045	20679	Arm Oil Tube Packing (wick) for 11119 and 56003.....
52045	20682	Face Plate Oil Tube Packing (wick) for 13862 and 56003.....
52595	20682	Feed (upper) Rock Shaft Crank (front) with 1057E, for 131689.....
53225	20686	Thread (under) Eyelet (back).....
*54024	-----	Feed (lower) Eccentric with 138306, for 54025.....
*54024	-----	Feed (upper) Eccentric with 138306, for 54456.....
54025	20680	Feed (lower) Eccentric (adjustable) complete for 131502, Nos. 1103C, 23729, 54024 and two each 217J, 7071 and 51061C.....
54027	20681	Looper Carrier with two 175E, for 131111
54035	20681	" Holder with 1120C.....
54045	20686	Tension (upper thread) Bracket.....
54046	20686	" " " Releasing Shaft..
54047	20686	" " " " "
		Crank with 624C.....
54048	20686	Tension (upper thread) Releasing Shaft Crank Link.....
54126	20690	Feed Dog, 12 teeth (10 teeth to the inch) for 68085, for pants seaming..
54143	20682	Feed (upper) Bar Connecting Link (lower) for 131689.....
54155	20683	Feed (upper) Rock Shaft.....
54156	20683	" " " " Crank (back) with two 50200C.....
54194	20687	Thread (upper) Take-up Plate for 131333.
54208	20682	Needle Bar (hollow) with 857C.....
54218	20680	Arm Rotary Shaft Front Bearing Oil Pad, upper (braided cotton).....
54227	20681	Looper Carrier Connection for 131111....
54228	20681	" " " Shaft for 131111
54242	20687	Slack Thread Controller Clamp.....
54242	20680	Thread (under) Take-up Stripper Clamp for 131641.....
54309	20685	Cloth Plate Oil Tube with 49092, for 131606.....
54369	20683	Feed (upper) Rock Shaft Collar with two 465C.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
*54455	-----	Feed (upper) Eccentric Body for 54456...
54456	20680	Feed (upper) Eccentric Adjustable complete for 131617, Nos. 1103C, 54024, 54455 and two each 217J, 7071 and 51061C.....
54477	21038	Machine Base Screw Stud, to fasten base to table, for 131264 (3).....
54969	20679	Arm Rock Shaft Oil Pad (braided cotton) for oiling Intermediate Bearing.....
54988	20686	Tension (upper thread) Releasing Pin....
56003	20679	Arm Oil Tube with 52045, for oiling Feed (upper) Bell Crank Connection Sleeve
56003	20682	Face Plate Oil Tube (long) with 52045, for 131645, for oiling Feed (upper) Bar Connecting Link (upper).....
56864	20691	Chain Hook (large) for 6439 and 37563...
56865	20691	" " (small) for 6439 and 37563...
57234	20683	Feed (lower) Rocking Frame Hinge Pin....
57235	20683	" " " " " "
		Bushing (2).....
57255	20682	Presser Bar.....
59343	20683	Feed (lower) Bar Hinge Pin Collar with 735C, for 131732.....
59456	20687	Thread (upper) Nipper Disc (outside) Nut Washer for 68137.....
59537	20686	Tension (under thread) Spring Bushing (large).....
59537	20686	Tension (upper thread) Spring Bushing (large).....
59538	20686	Tension (under thread) Spring Bushing (small).....
59538	20686	Tension (upper thread) Spring Bushing (small).....
59539	-----	Tension (under thread) Screw Stud 50326C with 51570C.....
59539	-----	Tension (upper thread) Screw Stud 50326C with 51570C.....
60656	20691	Bench Stand Hinge for 79772 (4).....
62527	20689	Presser Foot Hinge Pin for 131635 and 131861.....
64320	20682	Needle Bar Bushing (upper).....
68085	20690	Throat Plate, for 54126, for pants sewing.....
68123	20683	Needle Guard (movable) Clamp.....
68129	20687	Thread (upper) Nipper Body for 68137....
68130	20687	" " " Disc (inside) for 68137.....
68131	20687	Thread (upper) Nipper Disc (inside) Washer (fibre) for 68137.....
68132	20687	Thread (upper) Nipper Disc (outside) for 68137.....

No.	Plate	Name
68133	-----	Thread (upper) Nipper Roller for 68136..
68134	-----	" " " " Hinge Pin for 68136.....
68135	-----	Thread (upper) Nipper Stud for 68136....
68136	20687	" " " " 68135 with 68133 and 68134, for 68137.....
68137	20687	Thread (upper) Nipper complete, Nos. 1698R,13218,59456,68129 to 68132 and 68136.....
68138	20687	Thread (upper) Nipper Thread Guide.....
68164	20687	Thread (upper) Take-up Plate Spring for 131333.....
68184	20686	Presser Bar Lifting Lever Extension.....
68222	20633	Belt Guard with two wood screws 1 in. No. 12.....
68261	20686	Tension (upper thread) Releasing Shaft Spring.....
68350	20679	Arm Oil Cup, for oiling Arm Rock Shaft Front Bearing.....
68368	20685	Cloth Plate Slide (left) for 131051.....
68428	20688	Arm Bottom Cover.....
68429	20688	" " " Gasket (cork).....
68433	20679	" Rock Shaft Bushing (back).....
68435	20679	" " " " " Cap.....
68436	20679	" " " " (intermediate)...
68448	20688	" Side Cover Gasket (cork).....
68467	20683	Feed (lower) Bar Wearing Plate for 131731.....
68478	20681	Looper Carrier Connection Shaft Sleeve (eccentric).....
68479	20681	Looper Carrier Driver with four 175E, for 131111.....
*68483	-----	Looper Driving Shaft and Feed Lifting Eccentric Bracket with 761E, for 131644.....
68484	20681	Looper Driving Shaft and Feed Lifting Eccentric Bushing.....
68485	20681	Looper Throw-out Handle with two 443C...
68486	20681	" " " Plunger.....
68488	20682	Needle Bar Connecting Link and Thread (upper) Controller for 131399.....
68489	20682	Needle Bar Connecting Link Hinge Stud (hollow) for 131399.....
68493	20684	Oil Pipe (back of arm) Clamp.....
68494	20684	" " " " " Connection with 68495 and two 198E, for oiling Feed (lower) Rocking Frame Hinge Pin Back Bearing.....
68494	20684	Oil Pipe (back of arm) Connection with 68495 and two 198E, for oiling Feed (upper) Rock Shaft Pitman Crank Shaft.....

No.	Plate	Name
68495	20683	Feed (lower) Bar Slide Block Oil Pad (wick) for 134259.....
68495	20684	Oil Pipe (back of arm) Connection Oil Pad (wick) for 68494.....
68496	20684	Oil Pipe (back of arm) Coupling.....
68497	20680	Feed (lower) Connecting Rod Oil Pad (wick) for 131500.....
68497	20680	Feed (upper) Connecting Rod Oil Pad (wick) for 131500.....
68497	-----	Looper Driving Shaft and Feed Lifting Eccentric Front Bearing Oil Pad (wick).....
68497	20684	Oil Pipe (back of arm) Oil Pad (wick) for 131636.....
68497	20684	Oil Pipe (front of arm) Oil Pad (wick) for 131112 and 131113.....
68500	20684	Oil Pipe (front of arm) with 1733, 131084 and 131089, for oiling Arm Rotary Shaft Front Bearing, for 131638.....
79772	-----	Bench Stand with 27998, two each 41538, 126849, three wood screws 1 1/4 in. No.12, four each 60656, wood screws 1 1/4 in. No. 10 and sixteen wood screws 5/8 in. No. 7.....
120341	20691	Tweezers (curved) Accessories.....
120344	20691	Oil (copper plated) with 120345 (Accessories).....
120345	20691	Oil Spout, 4 1/2 in. long, for 120344 (Accessories).....
120440	20691	Screw Driver (large) Accessories.....
121108	20691	" " (small) Accessories.....
121616	20689	Edge Guide for 121617.....
121617	20689	Edge Guide complete for glove work, Nos. 121616, 200297K, 226259, 226262, 226263 and two 50152W.....
126247	20691	Bench Stand Flush Bolt for 41538.....
126248	20691	" " " " Plate for 41538..
126249	20633	Treadle for 150452.....
126250	20633	" Spring for 150452.....
126849	20691	Bench Stand Flap Hinge with four wood screws 3/4 in. No. 7, for 79772 (2).
128419	20681	Looper Carrier Connection Shaft Oil Pad (braided cotton).....
128510	20680	Balance Wheel Cover.....
131002	20684	Oil Pipe (front of arm) Connection with two 198E, for oiling Looper Throw-out Device.....
131003	20684	Oil Pipe (front of arm) Connection with two 198E, for 131112 and 131113.....
131004	20684	Oil Pipe (front of arm) Coupling (center)

No.	Plate	Name
131004	20684	Oil Pipe (front of arm) Coupling (left).
131011	20686	Tension (upper thread) Releasing Shaft Spring Position Plate.....
131012	20686	Tension (under thread) Bracket.....
131022	21038	Machine Base Screw Stud Bushing (rubber) for 131644 (4).....
131025	20687	Slack Thread Controller.....
131028	20681	Looper Driving Shaft and Feed Lifting Eccentric Bushing Oil Plug.....
131050	20685	Cloth Plate Slide (left) Spring for 131051.....
131051	20685	Cloth Plate Slide (left) complete for 131609, Nos. 68368, 131050 and two 725J.....
131056	20679	Arm Rock Shaft Adjusting Screw Washer...
131084	20684	Oil Pipe (front of arm) Connection with two 198E, for 68500.....
131087	20684	Oil Pipe (front of arm) Coupling (right) with Oil Lead.....
131089	20684	Oil Pipe (front of arm) Oil Pad (wick) for 68500 and 131637.....
131095	20679	Arm Rock Shaft Bushing (back) Cap Washer (fibre).....
*131110	20681	Looper Driving Shaft and Feed Lifting Eccentric for 131111.....
*131111	-----	Looper Driving Shaft and Feed Lifting Eccentric 131110 with 54027, 54227, 54228 and 68479, for 131604.....
131112	20684	Oil Pipe (front of arm) with 68497 with 131003, for oiling Feed (lower) Bar Slide Block for 131638.....
131113	20684	Oil Pipe (front of arm) with 68497 and 131003, for oiling Feed (lower) Con- necting Rod for 131638.....
131113	20684	Oil Pipe (front of arm) with 68497 and 131003, for oiling Feed (upper) Con- necting Rod for 131638.....
131133	20689	Looper for 131134.....
131134	20689	" 131133 with 229J and 131135.....
131135	20689	" Needle Guard with 46105, for 131134.....
131185	21038	Machine Base Oil Drain Jar (glass) for 131268.....
131188	-----	Machine Base Oil Drain Jar Clamp for 131217.....
131189	-----	Machine Base Oil Drain Jar Clamp Lever for 131217.....
131191	21038	Machine Base Oil Drain Jar Cap for 131268.....
131197	20683	Feed (lower) Bar Hinge Pin (eccentric) for 131732.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
131205	21038	Machine Base Screw Stud, to position machine on base, for 131264 (4)....
131217	-----	Machine Base Oil Drain Jar Clamp 131188 with 131189, for 131268.....
131240	20683	Feed (lower) Rocking Frame with two 453C, for 131732.....
131263	21038	Machine Base for 131264.....
131264	21038	Machine Base complete for 131328, Nos. 131263, three each 9842, 51576E, 54477 and four each 131205 and 131279.....
131265	21038	Machine Base Oil Drain Jar Nipple (long) for 131268 (2).....
131266	21038	Machine Base Oil Drain Jar Nipple (short) for 131268.....
131267	21038	Machine Base Oil Drain Jar Nipple Elbow for 131268 (2).....
131268	21038	Machine Base Oil Drain Jar (swinging type) complete for 131328, Nos. 131185, 131191, 131217, 131266 and two each 1247C, 131265 and 131267.....
131270	20682	Needle Bar Connecting Link Hinge Stud Oil Pad (wick).....
131276	20688	Arm Side Cover (oil vent) for 131278....
131277	20688	" " " Cap for 131278.....
131278	20688	Arm Side Cover (oil vent) complete, Nos. 51224W, 131276, 131277 and 131280...
131279	21038	Machine Cushion (felt) for 131264 (4)..
131280	20688	Arm Side Cover Cap Position Pin for 131278.....
131291	20682	Needle Bar Bushing (lower).....
131305	20680	Arm Oil Cup Drip Pan with two 563C.....
131309	20680	" " " for filling oil reservoir...
131316	20683	Needle Guard (movable).....
131319	20679	Arm Oil Cup Oil Pad (braided cotton) for 68350.....
131328	21038	Machine Base and Oil Drain Jar (swinging type) complete, Nos. 131264 and 131268.....
131332	20687	Thread (upper) Take-up for 131333.....
131333	20687	Thread (upper) Take-up complete, Nos. 1449J, 54194, 68164 and 131332.....
131366	20680	Arm Rotary Shaft Ball Bearing (back) for 131526 (2).....
131366	20680	Arm Rotary Shaft Ball Bearing (intermediate).....
131369	20680	Arm Rotary Shaft Ball Bearing (back) Case Cap for 131479.....
131370	20680	Arm Rotary Shaft Ball Bearing (back) Case Position Stud (3).....
131381	20685	Cloth Plate Slide (right) Spring for 131608.....

No.	Plate	Name
131399	-----	Needle Bar Connecting Link and Thread (upper) Controller 68488 with 68489 and 131400.....
131400	20682	Needle Bar Connecting Stud with 211F and 1492E, for 131399.....
131404	20687	Slack Thread Regulator Holder.....
131405	20687	" " " " Crank with 171E.....
131406	20687	Slack Thread Regulator Holder Crank Con- necting Link.....
131407	20680	Thread (under) Take-up with 1258C.....
131408	20680	" " " Oil Guard for 131641.....
131409	20680	Thread (under) Take-up Stripper for 131641.....
131411	20680	Thread (under) Take-up Stripper Plate Bracket for 131641.....
131413	20680	Thread (under) Take-up Thread Guard (fibre) for 131641.....
131419	20687	Slack Thread Regulator.....
131421	20680	Thread (under) Take-up Thread Guide (left) for 131641.....
131422	20680	Thread (under) Take-up Thread Guide (right) for 131641.....
131456	20679	Arm Rock Shaft Flanged Bushing (front)..
131457	20680	" Rotary Shaft Bushing (front).....
*131471	20680	Crank Connecting Rod with two each 896C and 1057C, for 131489.....
131478	20680	Arm Rotary Shaft Ball Bearing (back) Case for 131479.....
131479	-----	Arm Rotary Shaft Ball Bearing (back) Case 131478 with 131369 and three 205C, for 131526.....
131480	20680	Arm Rotary Shaft Ball Bearing (back) Spacing Collar for 131526.....
131481	20680	Arm Rotary Shaft Ball Bearing (inter- mediate) Case.....
131482	20680	Arm Rotary Shaft Ball Bearing (inter- mediate) Collar with two 457C.....
131486	20680	Arm Rock Shaft Crank, back (ball bearing, solid) with two 50083C, for 131489..
131487	20680	Arm Rotary Shaft for 131604.....
131489	-----	Crank Connecting Rod 131471 with 131486, for 131604.....
131500	20680	Feed (lower) Connecting Rod with 1057C, 68497,134260 and two 896C,for 131502
131500	20680	Feed (upper) Connecting Rod with 1057C, 68497,134260 and two 896C,for 131617
131502	-----	Feed (lower) Connecting Rod 131500 with 54025, for 131604.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
131515	20690	Throat Plate for 131857, for upholster- ing automobile seat cushions, etc...
131526	-----	Arm Rotary Shaft Ball Bearing (back) Case with Ball Bearings complete, Nos. 131479, 131480 and two 131366..
131604	-----	Arm Rotary Shaft 131487 with 640E, 131111, 131489, 131502 and 131617...
131605	-----	Balance Wheel, 2 5/8 in. pulley, with two 51283C, for round belt.....
131606	20685	Cloth Plate with 54309, for 131609.....
131607	20685	" " Slide (right) for 131608....
131608	20685	Cloth Plate Slide (right) complete for 131609, Nos. 131381, 131607 and two 725J.....
131609	20685	Cloth Plate complete, Nos. 131051, 131606 and 131608.....
131610	20685	Cloth Plate Thread Guard.....
131612	20689	Feed Dog, 15 teeth (14 teeth to the inch) for 131643.....
131617	-----	Feed (upper) Connecting Rod 131500 with 54456, for 131604.....
131618	20683	Feed (upper) Connecting Rod Crank with two 50200C.....
131619	20683	Feed (upper) Connecting Rod Hinge Stud..
131621	20682	" " Bell Crank Connection with 140268C.....
131622	20682	Feed (upper) Bell Crank Connection Sleeve.....
131623	20679	Feed (upper) Bell Crank Connection Sleeve Slide Block for 131694.....
131624	20683	Feed (upper) Rock Shaft Pitman.....
131625	20683	" " " " " Crank with two 50200C.....
131626	20683	Feed (upper) Rock Shaft Pitman Crank Shaft.....
131627	20683	Feed (upper) Rock Shaft Pitman Crank Shaft Bracket.....
131628	20689	Feeding Foot.....
131629	20682	Presser Bar Bushing (lower).....
131630	20682	" " Lifting Bracket with 453C...
131632	20686	" " " Lever.....
131633	20689	" Foot Plate for 131635.....
131634	20689	" " Shank for 131635.....
131635	20689	Presser Foot (hinged) complete for general work, Nos. 62527, 131633 and 131634.....
131636	20684	Oil Pipe (back of arm) with 68497, for oiling Feed (lower) Rocking Frame Hinge Pin Front Bearing.....

NUMERICAL LIST OF PARTS

37

No.	Plate	Name
131637	20684	Oil Pipe (front of arm) with 131089 and two 1733, for 131638, for oiling Looper Driving Shaft and Feed Lifting Eccentric Front Bearing.....
131638	-----	Oil Pipe (front of arm) complete, Nos. 68500, 131112, 131637 and two 131113
131640	20680	Thread (under) Take-up Stripper Plate for 131641.....
131641	20680	Thread (under) Take-up Stripper Plate Bracket 131411 with 32062, 50438J, 54242, 131408, 131409, 131413, 131421, 131422, 131640, 131642, two each 207J, 7071, 50163J, 50470J and four 190J....
131642	20680	Thread (under) Take-up Stripper Plate Extension for 131641.....
131643	20689	Throat Plate for 131612.....
*131644	-----	Arm, upper and lower (solid) with 948J, 15404, 68483, two 15405 and four 131022.....
131645	20682	Face Plate with 13862 and 56003.....
131646	20682	Feed (upper) Bar for 131689.....
131647	20682	" " " Connecting Link (upper) for 131689.....
131648	20682	Feed (upper) Bar Connecting Link (upper) Cushion (textolite) for 131690.....
131649	20682	Feed (upper) Bar Lifting Bracket with 1250C.....
131650	20682	Feed (upper) Bar Spring Thimble for 131690.....
131651	20682	Feed (upper) Bell Crank for 131690.....
131689	-----	" " Bar 131646 with 199D, 52595, 54143, 131647, 131690 and three 1423W.
131690	-----	Feed (upper) Bell Crank 131651 with 131648, 131650, 140173C and 192274, for 131689.....
131693	20679	Arm Rock Shaft and Front Crank with 853C, for 131694.....
131694	-----	Arm Rock Shaft 131693 with 50328C, 131623 and two each 914J and 131695.....
131695	20679	Feed (upper) Bell Crank Connection Sleeve Slide Block Clamping Washer for 131694 (2).....
131696	20686	Tension (under thread) Thread Guide.....
131696	20686	" (upper thread) Thread Guide.....
131710	20680	Balance Wheel (outside diam. of belt groove 2.9 in.) with two 51283C, for "V" belt.....
131729	20683	Feed (lower) Bar for 131731.....
131730	20683	" " " Feed Dog Seat (adjustable) with 460C, for 131731.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
131731	-----	Feed (lower) Bar with Feed Dog Leveling Device complete for 131732, Nos. 190J, 22436, 68467, 131729, 131730 and two 207E.....
131732	-----	Feed (lower) Rocking Frame 131240 with 59343, 131197 and 131731.....
131740	20686	Tension (under thread) Spring.....
131741	20686	" (upper thread) Spring.....
131749	20688	Presser Bar Spring for 131830 and 131851
131750	20688	" " " (auxiliary) for 131830 and 131851.....
131751	20688	Presser Bar Spring Screw Stud for 131830 and 131851.....
131752	20688	Pressure Regulating Thumb Nut Washer for 131830.....
131830	20688	Presser Bar Spring complete, Nos. 1637J, 51697W and 131749 to 131752.....
131851	20688	Presser Bar Spring (less auxiliary spring) complete, Nos. 1637J, 42290K, 51697W, 131749 and 131751.....
131857	20690	Feed Dog, 15 teeth (10 teeth to the inch) for upholstering automobile seat cushions, etc., for 131515.....
131858	20690	Feeding Foot for upholstering automobile seat cushions, etc.....
131859	20690	Presser Foot Plate for 131861.....
131860	20690	" " Shank for 131861.....
131861	20690	Presser Foot (hinged) complete for upholstering automobile seat cushions, etc. Nos. 62527, 131859 and 131860..
131862	20690	Feeding Foot for pants seaming.....
131863	20690	Presser Foot for pants seaming.....
134258	20683	Feed (lower) Bar Slide Block for 134259.
134259	20683	" " " " " 134258 with 68495 and 134260.....
134260	20683	Feed (lower) Bar Slide Block Oil Pad Retainer for 134259.....
134260	20680	Feed (lower) Connecting Rod Oil Pad Retainer for 131500.....
134260	20680	Feed (upper) Connecting Rod Oil Pad Retainer for 131500.....
138306	-----	Feed (lower) Eccentric Lubricating Pad (wood) for 54024.....
138306	-----	Feed (upper) Eccentric Lubricating Pad (wood) for 54024.....
139017	20688	Arm Hole Plug Screw Washer.....
140173C	20682	Feed (upper) Bar Spring Cap Screw for 131690.....
140268C	20682	Feed (upper) Bell Crank Connection Clamping Screw for 131621.....

NUMERICAL LIST OF PARTS

39




No.	Plate	Name
140275J	20689	Feed Dog Screw.....
*150059	-----	Thread Unwinder Thread Separator Bracket for 150086.....
150060	20692	Thread Unwinder Thread Separator Bracket Arm with 164J and 9525, for 150087..
*150085	-----	Thread Unwinder Thread Separator for 150086.....
150086	20692	Thread Unwinder Thread Separator 150085 with 150059, for 150087.....
150087	-----	Thread Unwinder Thread Separator com- plete for 150088, Nos. 164J, 9525, 150060 and 150086.....
150088	20692	Thread Unwinder complete, for two spools, Nos. 150087, 201696J, 202490, 225257, 225324, 225326, 225388, two each 150203, 225391 and three wood screws 7/8 in. No. 12.....
150203	20692	Thread Unwinder Spool Rest Cushion (felt) for 150088 (2).....
150451	20633	Treadle Stand for 150452.....
150452	20633	Treadle complete, Nos. 4879, 4382, 126249, 126250, 150451 and two wood screws 1 in. No. 16 F.H.....
192274	20682	Feed (upper) Bar Spring for 131690.....
200297K	20689	Edge Guide Handle Hinge Screw for 121617
200383C	20692	Thread Unwinder Spool Rest Rod Set Screw for 202490.....
201018C	20692	Thread Unwinder Spool Rest Set Screw for 225257.....
201696J	20692	Thread Unwinder Thread Guide Lock Nut for 150088.....
202490	20692	Thread Unwinder Spool Stand with 200383C, for 150088.....
225257	20692	Thread Unwinder Spool Rest (for two spools) with 201018C, for 150088....
225322	20692	Thread Unwinder Thread Guide Rod Washer for 225324.....
225324	20692	Thread Unwinder Thread Guide Rod with 208E and 225322, for 150088.....
225326	20692	Thread Unwinder Thread Guide Position Cup for 150088.....
225388	20692	Thread Unwinder Spool Rest Rod for 150088.....
225390	20692	Thread Unwinder Thread Cone Holder, for inverted cones.....
225391	20692	Thread Unwinder Thread Guide for 150088 (2).....
226259	20689	Edge Guide Frame with 226264, for 121617
226262	20689	" " Handle for 121617.....
226263	20689	" " Spring for 121617.....
226264	20689	" " Handle Cushion (leather) for 226259.....


**Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1**

**Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2**


ILLUSTRATIONS
OF
PARTS


20633 - 1/4

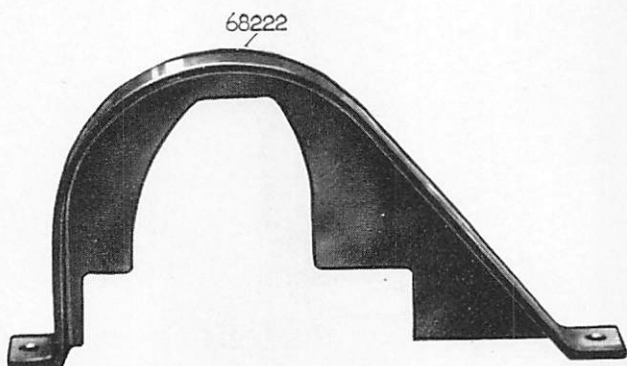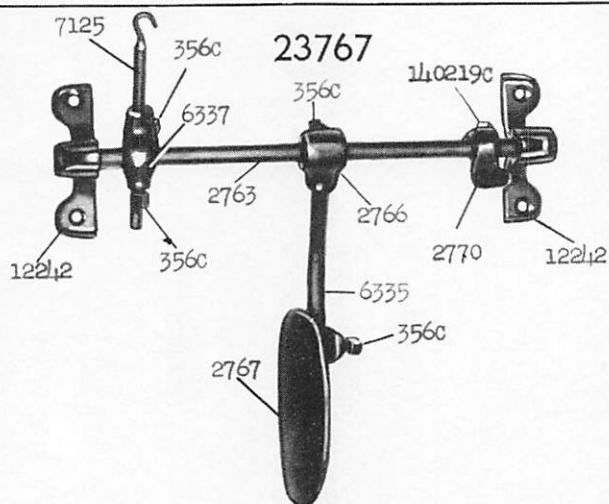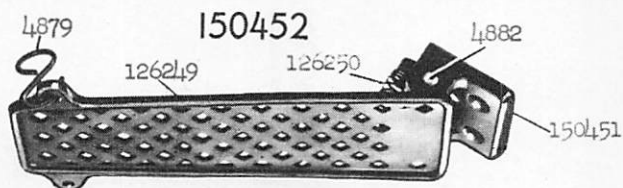

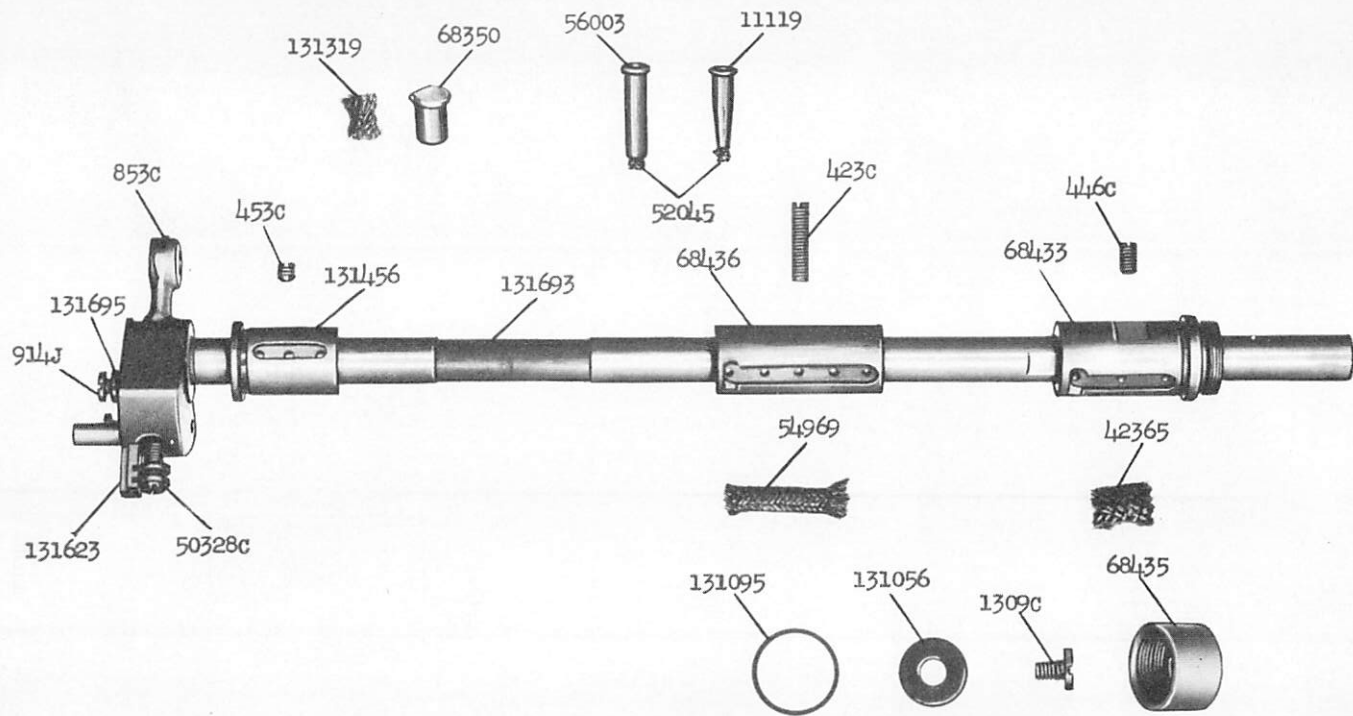



20679 - 1/2

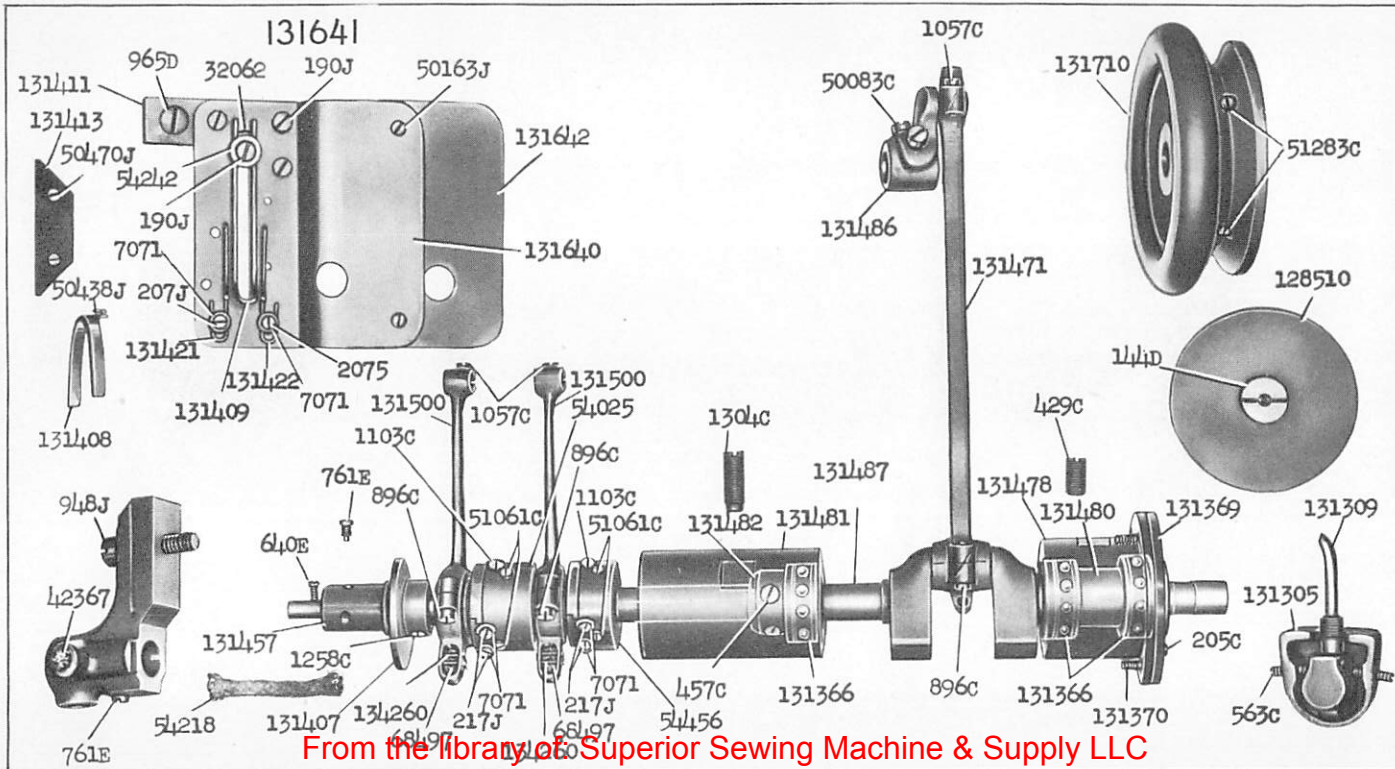

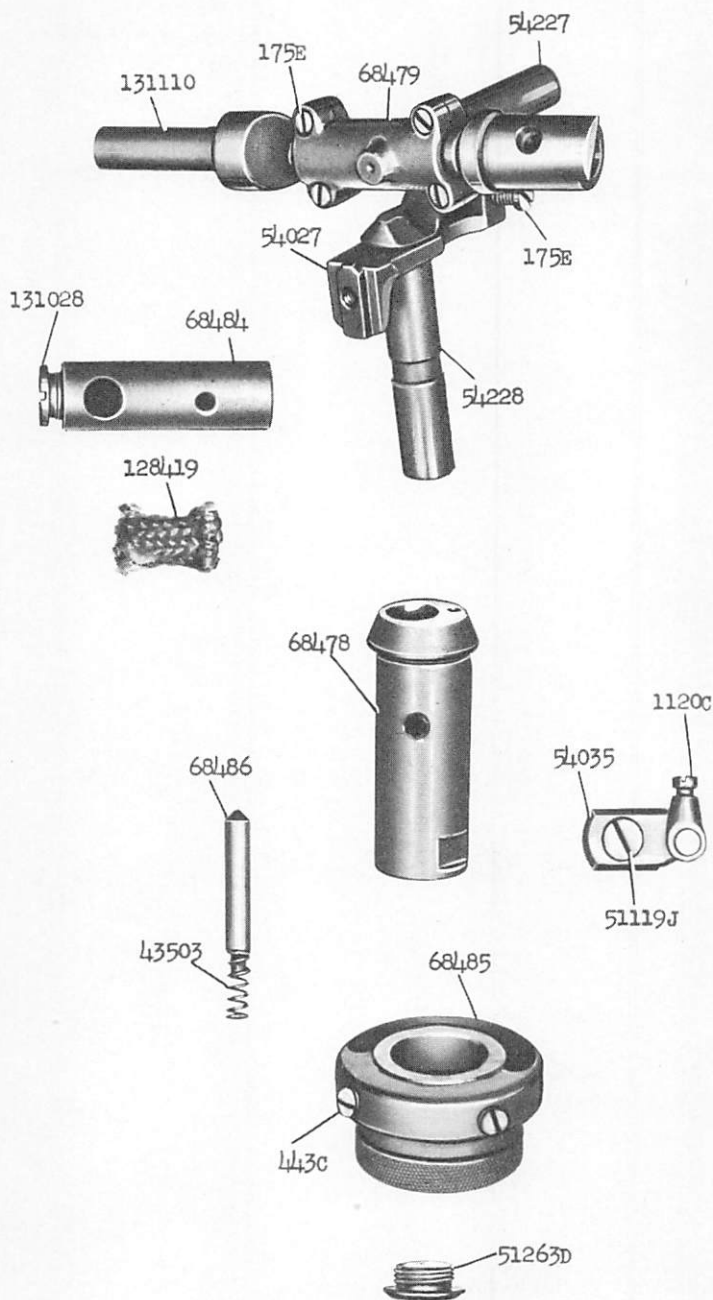


20682 - 1/2

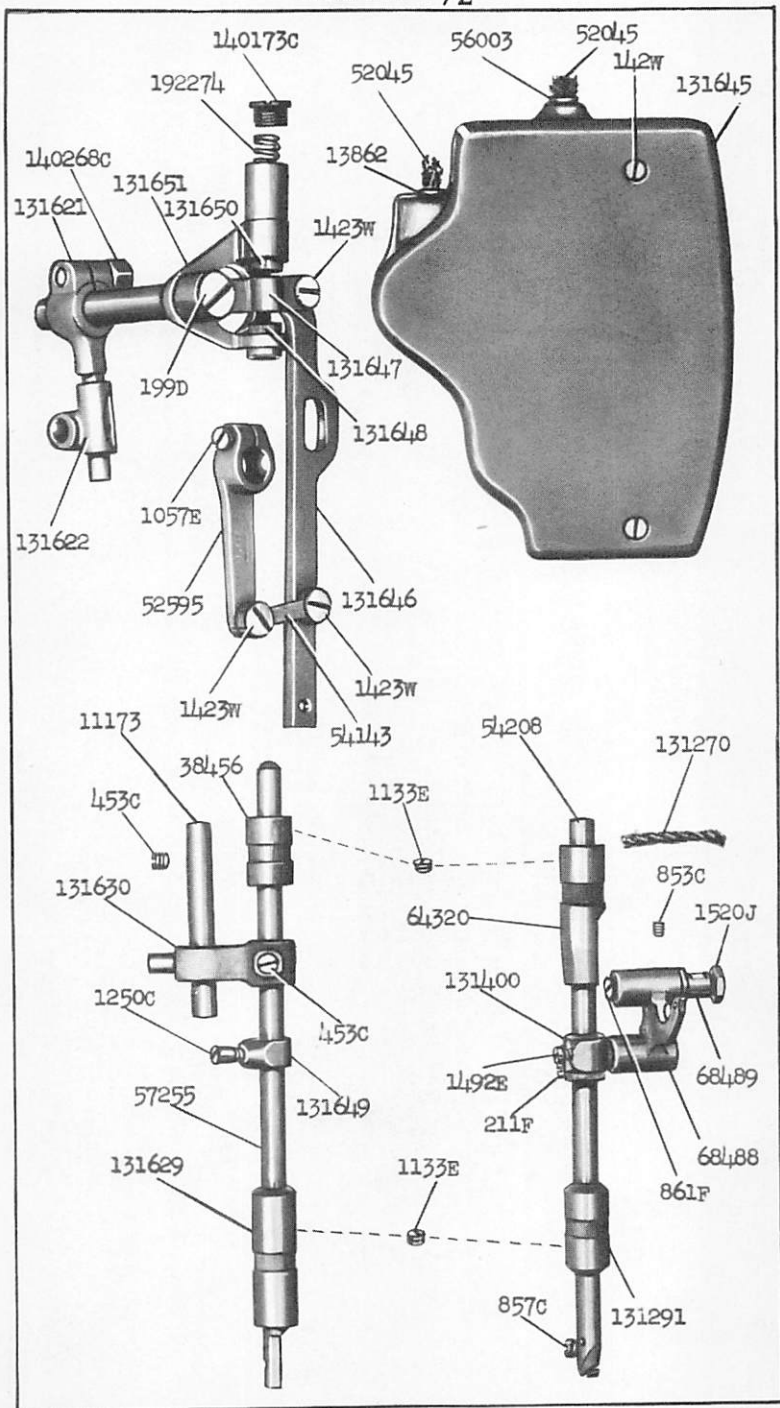

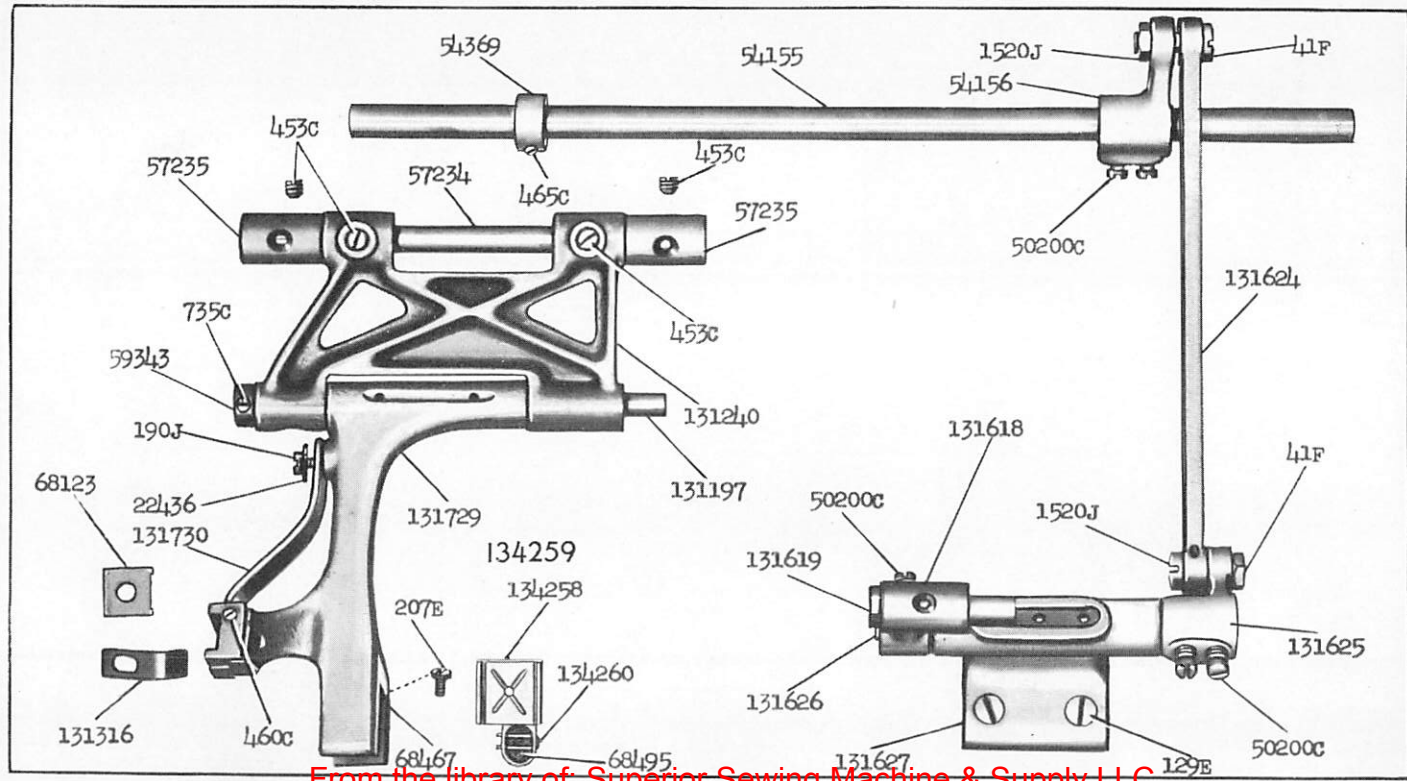


20683 - 1/2

From the library of: Superior Sewing Machine & Supply LLC

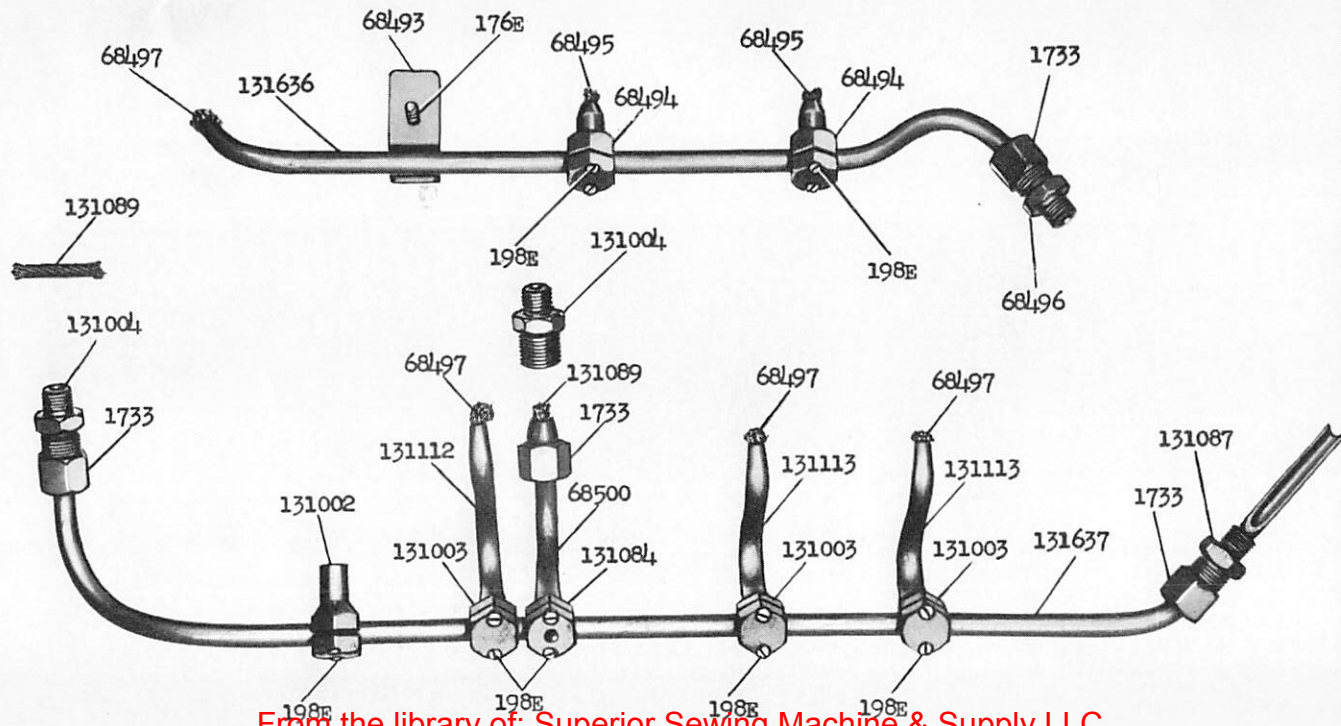


From the library of: Superior Sewing Machine & Supply LLC


131609

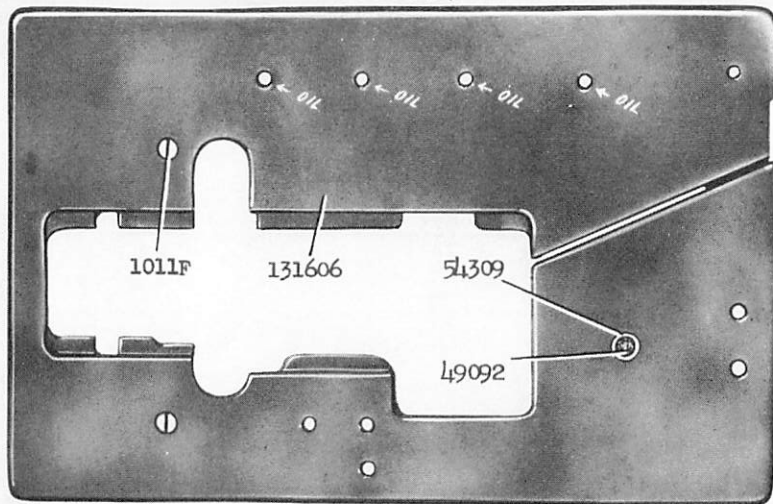

131051

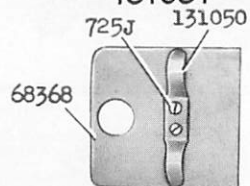

131608

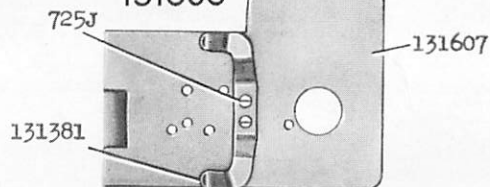


389F

131610


50473F

50396F



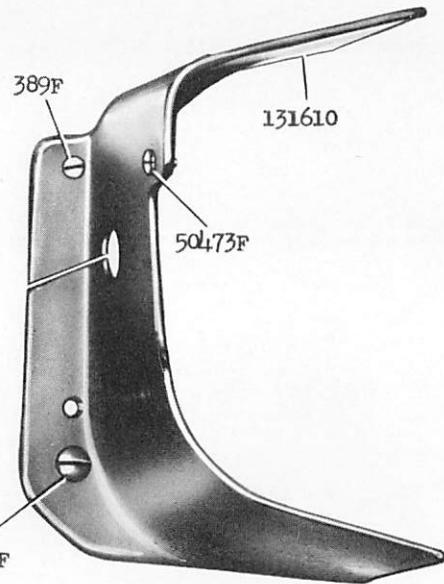


20685 - 1/2





From the library of: Superior Sewing Machine & Supply LLC

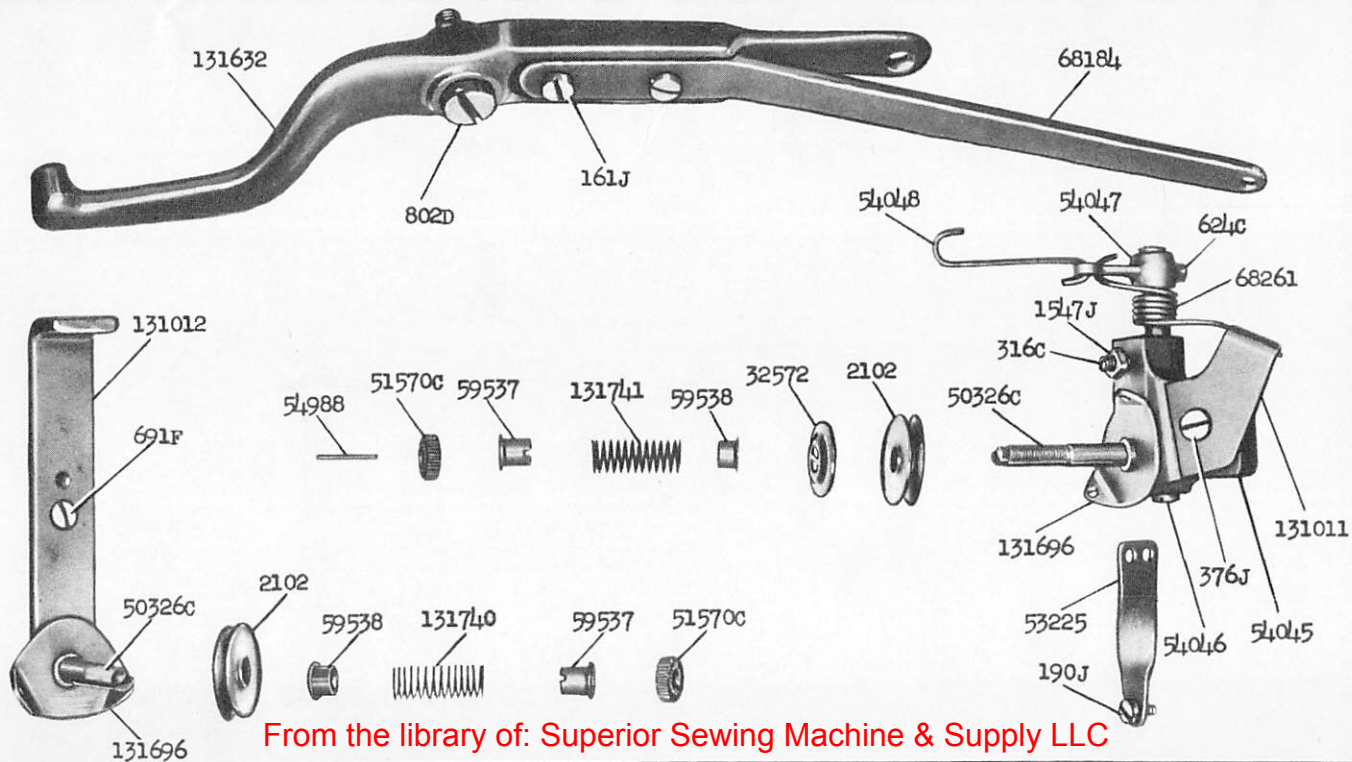

From the library of: Superior Sewing Machine & Supply LLC

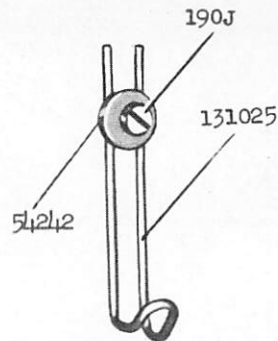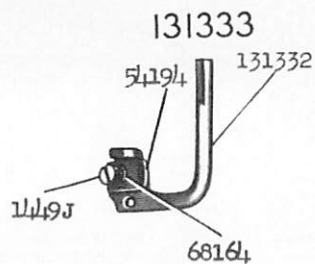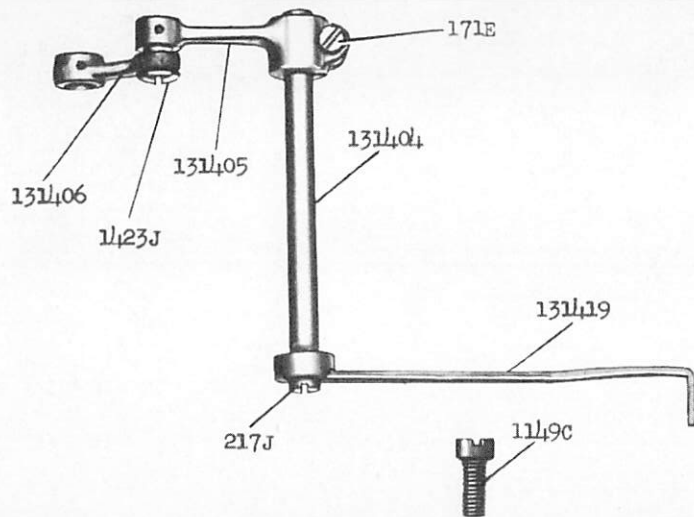


68137

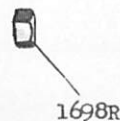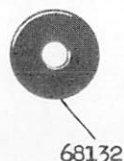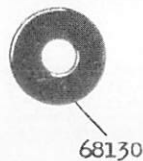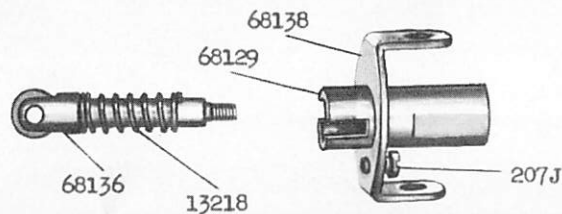

20687 - 2/3


From the library of: Superior Sewing Machine & Supply LLC

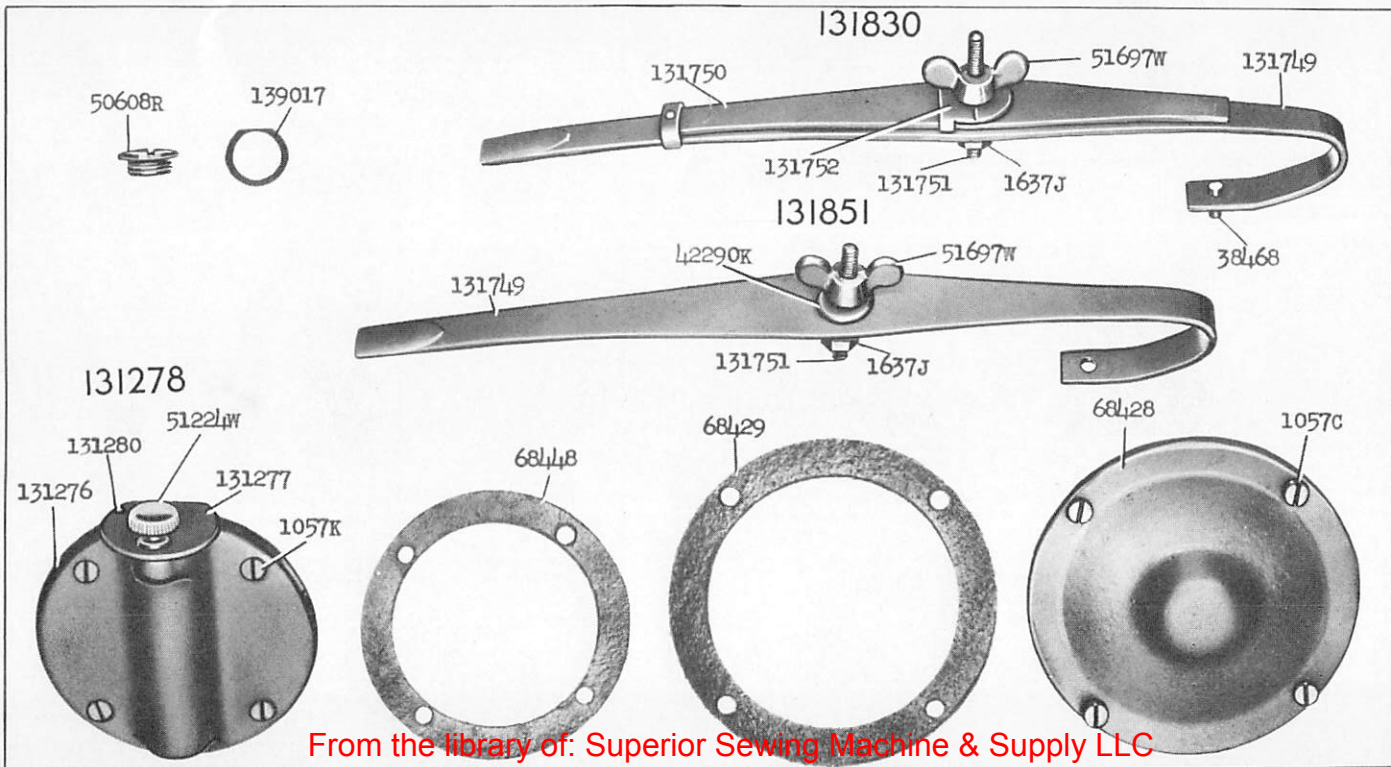


From the library of: Superior Sewing Machine & Supply LLC

20688 - 1/2

20689 - 2/3

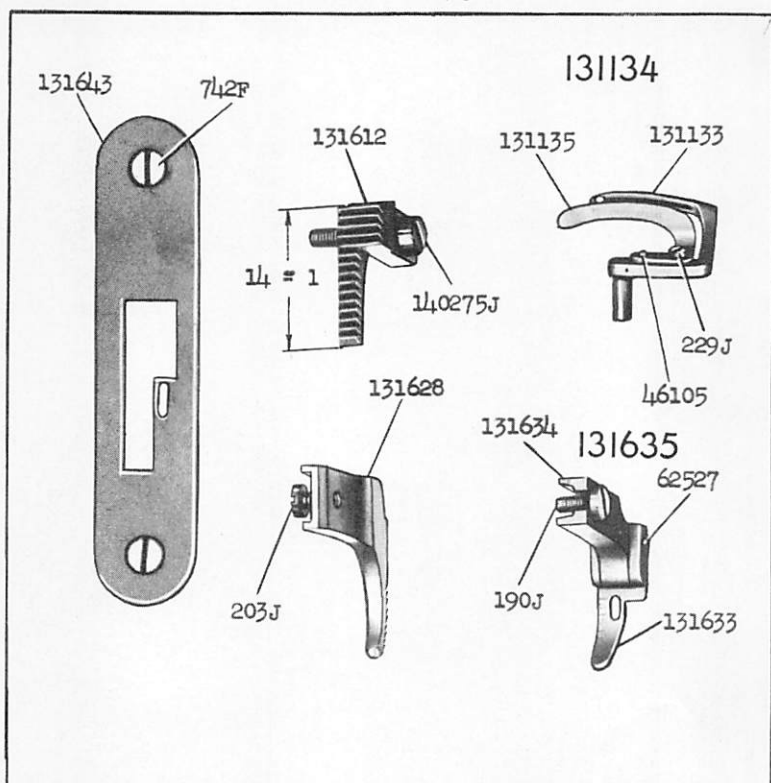


121617

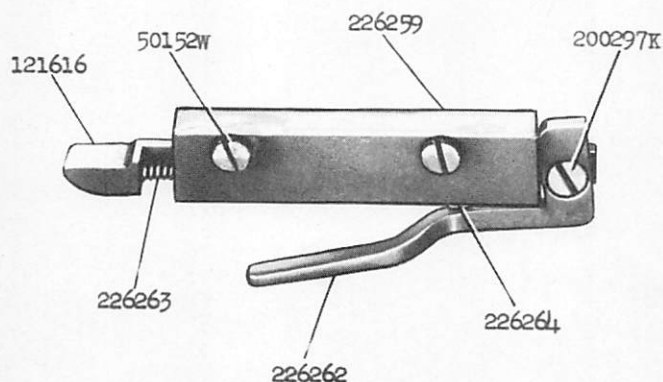


20690 - 2/3

131515

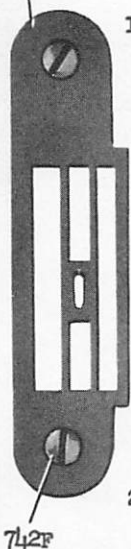


742F

131857

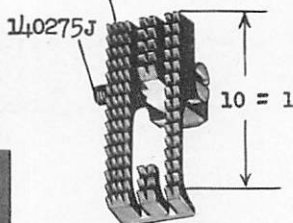


10 = 1

131134

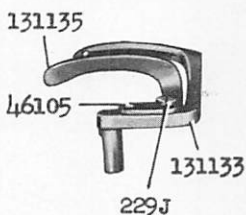


229J

131858

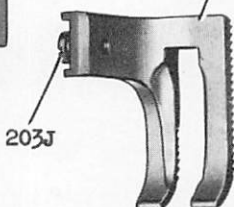

203J

131861

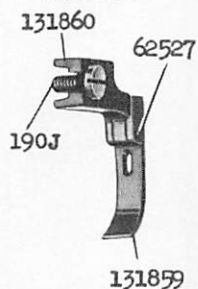


131859

68085




742F

140275J

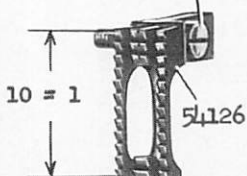

54126


131134

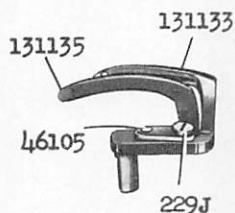


229J

203J

131862

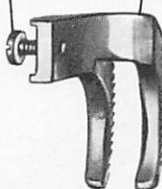


131863

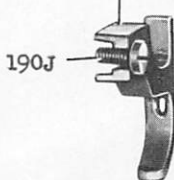


190J

20691 - 1/2

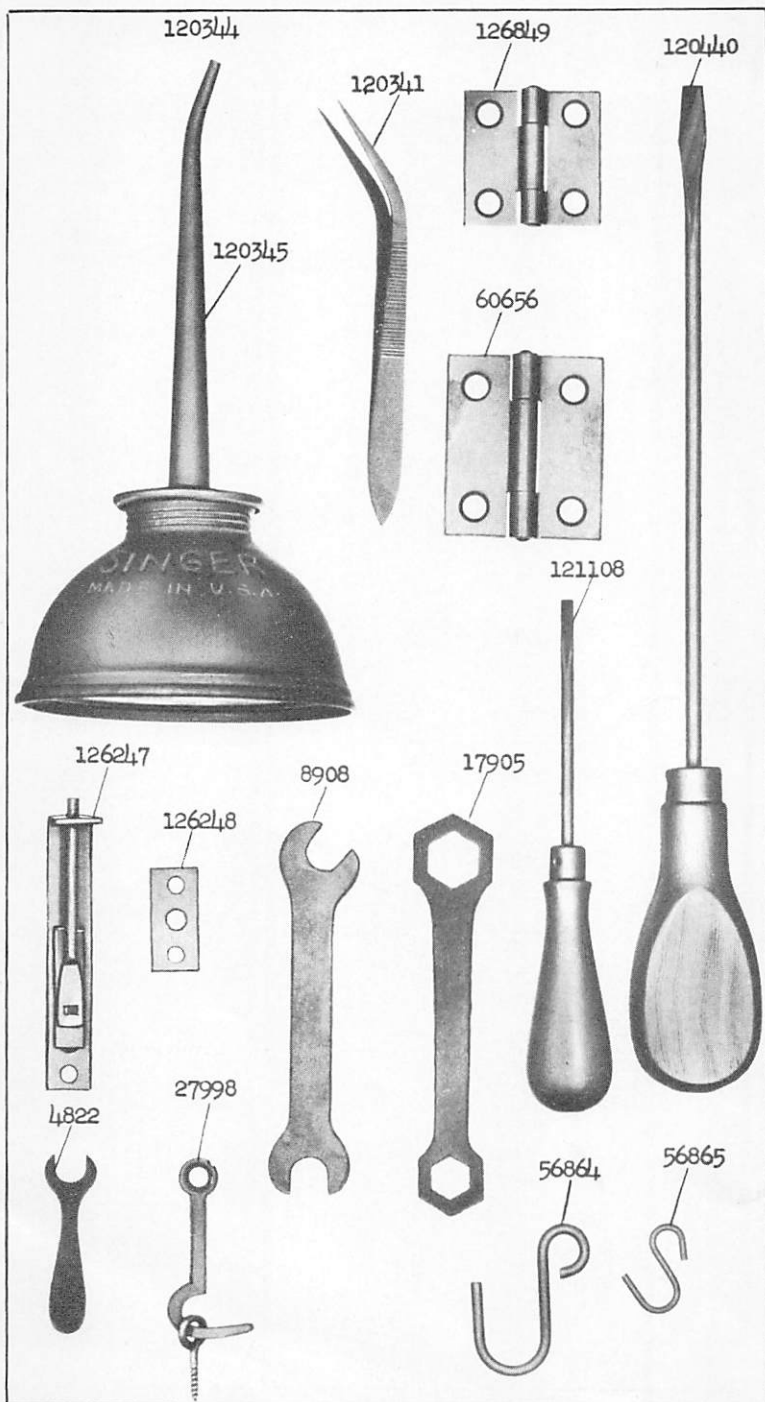

20692 - 1/6


150088

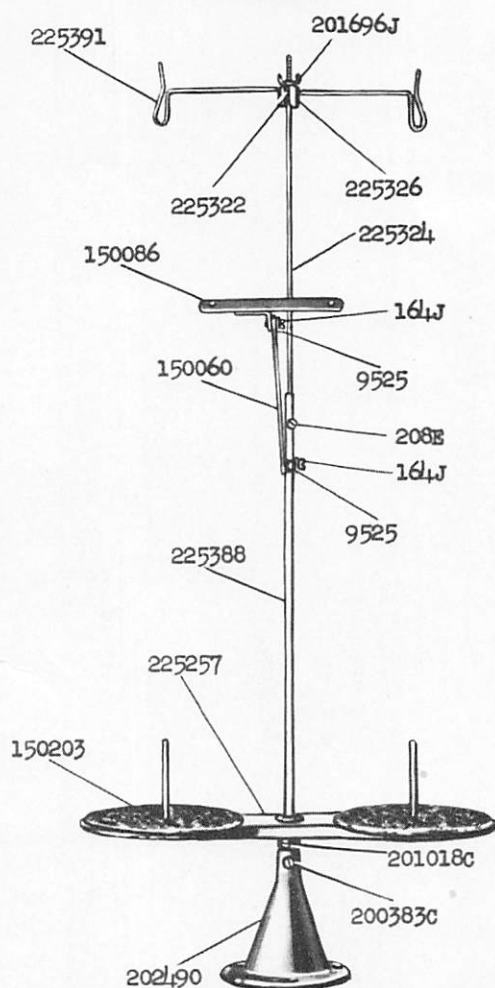

27739

225390



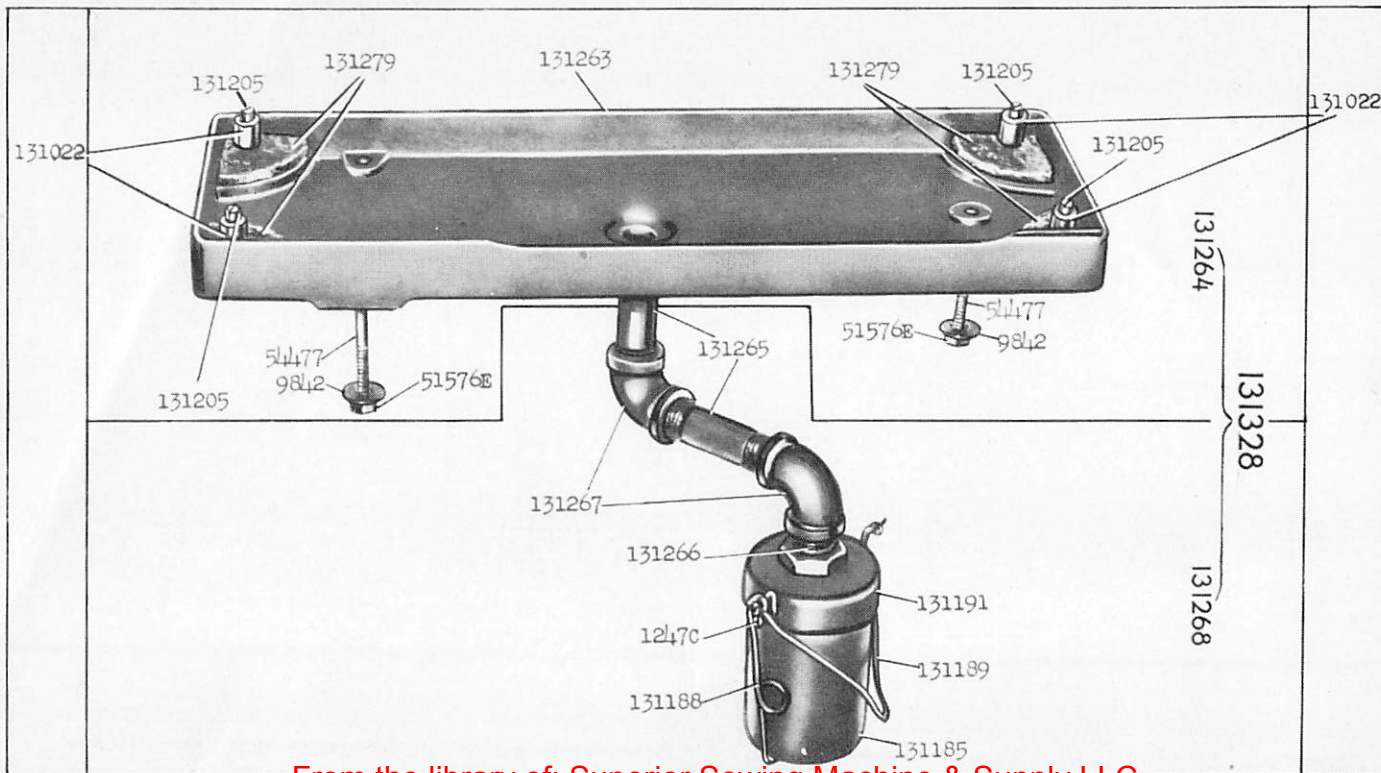

21038 - 1/4

