


SINGER

15K95,K194

MACHINES OF CLASS 15K

FOR JOINING TAPE BELTS ON SPINNING AND TWISTING FRAMES

Bed 14½" long, 7" wide. Space at right of needle 6½".

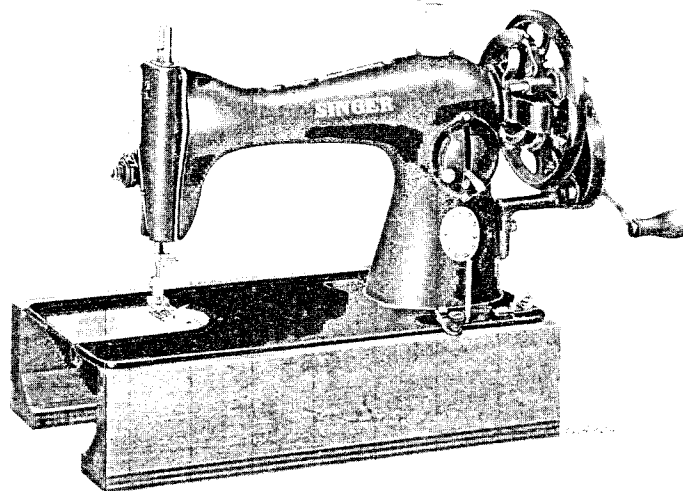


MACHINE 15K194

15K194 REVERSIBLE DROP FEED. Maximum stitch length 6 to the inch. C.B. Shuttle 125013. Balance Wheel 80176. Spool Holder 80179. Hand Attachment 91052. Wood Base 101293.

Adjustable Belt Guide Attachment 80331 is available at extra charge.

Presser Foot (Hinged) 105069 is fitted to machine, but if Presser Foot (Plain) 80058 is preferred for use with adjustable Belt Guide Attachment it will be supplied if specified on order.

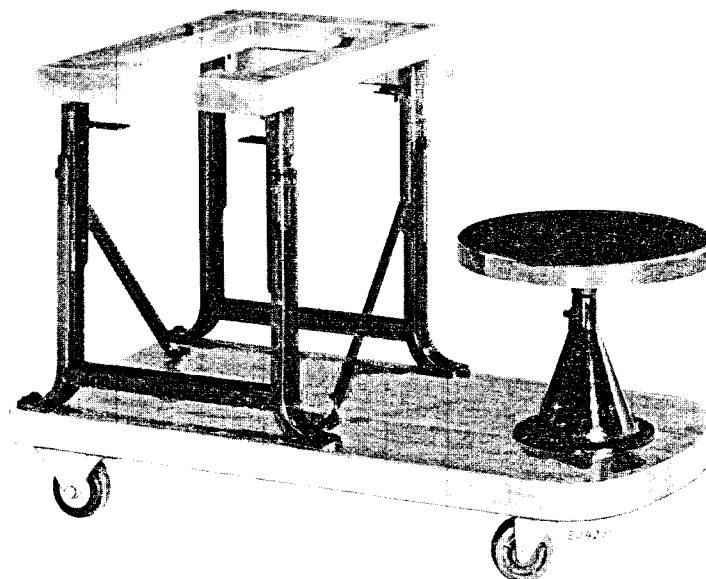

TRUCK 135425

When required, Truck 135425, on which the machine is set at the same height as the Pulley which drives the Winders on the Spinning Frames, can be supplied at an additional charge. Wood Base 101293 fits into the Well of the Truck.

Canvas Cover 96924, to protect machine from dust, can be supplied at extra charge.

List of Parts Complete

For

Machine No. 15 K 95

Reversible Drop Feed; C. B. Shuttle; For Stitching or Joining Tape Belts on Spinning and Twisting Frames.

*80340		Arm	
80341		"	80340 with 435C, 448C, 15404, 15486, 15498 and two 15405
2002	2	"	Dowel Pin
4389	2	"	" " (for repairs only)
138 E	3	"	Screw
125331		"	Oil Pad for oiling Arm Shaft Back Bearing
125333		"	" " Spring
125334		"	" " " Cap
15497		"	Shaft
15498		"	" Bushing
435 C		"	" " Set Screw
144 C		"	" Screw
8300		"	Side Cover
51224 D		"	" " Thumb Screw
2007		"	Spool Pin
15282 P			Balance Wheel (2-1/4" pulley, heavy rim)
*80342		Bed	
256 B			Clamp Stop Motion Clamp Screw
248 A		"	" " " Stop Screw
2020		"	" " " Washer
*15312		"	" " Flanged Bushing
15313		"	" " " " 15312 with two 462AL

2836			Feed Lifting Rock Shaft 2816 with 2509
2509		" "	Crank with 157J and 1813
157 J		" "	Clamping Screw
1813		" "	Roller and Stud
307 C	2	" "	Screw Center
1513 J	2	" "	" " Nut
125397		"	Regulator
125398		" "	125397 with 125381
50353 E		" "	Hinge Screw
8217		" "	Friction Washer
45305		"	Reversing Handle
125381		" "	45305 with 1550J
1550 J		" "	Lock Nut
125270		"	Rock Shaft
307 C	2	" "	Screw Center
1513 J	2	" "	" " Nut
80054			Needle Bar
125052		" "	Bushing
15248		" "	Connecting Link with 51002E
15374		" "	15248 with 2052
51002 E		" "	Adjusting Screw
570 C		" "	Hinge Screw
1520 R		" "	" " Nut
2052		" "	Stud with 155C
155 C		" "	Set Screw
80055		" "	Thread Eyelet
240 F		" "	Screw

80037	Presser Bar Spring Bracket with 453C and 756C
443 C	" " " " Set Screw
756 C	" " " " Thread Controller Clamp Screw
2070	" " " Washer
2143	" Foot for 15226
199 E	" " Screw
243 J	Pressure Regulating Thread Screw
2518	Shuttle Bobbin
15140	" " Case latch
2973	" " " " Lever
2974	" " " " " Fulcrum Pin
2975	" " " " Spring
592 E	" " " " Stop Screw
15141	" " " Hinge, complete, Nos. 2973, 2974 and 15140
15277	" " " with 591F, 592E, 2975, 15141 & 15278
2515	" Body
591 F	" Tension Regulating Screw
15278	" " Spring
125018	" 1-11.76" diam., complete, Nos. 2515, 2518 and 15277
2542	" Driver
2541	" " 2542 with two 462AL
2040	" " Pin
462 AL	" " Set Screw
2531	" Race Pack
2532	" " " Position Pin
2533	" " " Spring
648 J	" " " " Screw

448 C	Tension Screw Stud Set Screw
2103	" Spring
80211	" complete, Nos. 2103, 16202 and two 2102
80085	Thread Controller
82358	" Guard
233 D	" " Screw
2112	" Retainer Guide Disc with 2113
2113	" " " " Steady Pin
460 C	" " " Set Screw
2114	" " " Spring
2115	" " " Stud
2111	" " " complete, Nos. 2112, 2114 and 2115
15275	" Take-up Cam (steel) with 1293C
15433	" " " 15275 with 570C and 1520R
1293 C	" " " Timing Screw
15491	" " Lever with 1822
15492	" " " 15491 with 50527C
50527 C	" " " Hinge Screw
1822	" " " Roller and Stud
80259	" " Spring (closed eye)
15010	" " " (open eye)
15227	Throat Plate for 15226
691 F 2	" " Screw
*15404	Trade Mark
15405	" " Rivet
80312	Drip Pan (for Machine on Truck)

399 A	Gear Cover Screw
SS 599 F	" Screw Stud
94048	Pinion
80028	" Dowel Pin
SS 600 F	" Screw Stud (eccentric)
94052 B	Hand Attachment complete, Nos. SS565E, SS566C, SS599F, 94037 SS600F, 94016, 94027, 94034B, 94038, 94041, 94044, 94050, 94051B, 94069, 94070, two each 183E and 399A
SS 566 C	Hand Attachment Screw

Machine Base No. 101293

For

Machine No. 15K194

28242	Machine Rest Cushion (leather) for 101293
-----	" " " Nail 1/2 in. No. 17 R.H., for 101293
124387	" Button for 124388
124388	" " 124387 with 56493, for 124389
124389	" " 124388 with 22436 and 124411, for 101293
56493	" " Cushion for 124388
732 B	" " Thumb Screw for 124411
124411	" " " " Bushing 124390 with 732B, for 124389
124390	" " " " " for 124411
22436	" " " " Washer for 124389
87721	" Hinge Connection for 87723
8295	" " " Hinge Pin for 87723
87722	" " Head for 87723
SS 368 J	" " Screw for 87723
87572	" " " Washer for 87723
87723	" " complete, Nos. SS368J, 8295, 87572, 87721 and 87722 for 101293
101293	" Base with 124389, two each 28242, 87723 and nails 1/2 in. No. 17 R.H.

126150	4	Machine Platform Base Bolt Nut Lock Washer
23250	4	" " " " " Washer
151141	4	" " " " complete, Nos. 126150 and 140570 R
140656 R	2	" " " Bumper Bolt with 1778R
1778 R	2	" " " " " Nut
126150	2	" " " " " " Lock Washer
23250	2	" " " " " " Washer
151224	2	" " " " " complete, Nos. 23250, 126150 and 140656R
-----	4	" " " wood screws 1-1/2" long No. 15 R.H.
23250	4	" " " " " Washer
124387	2	" " Button
124388	2	" " " 124387 with 56493
124389	2	" " " 124388 with 22436 and 124411
56493	2	" " " Cushion
732 B	2	" " " Thumb Screw
124390	2	" " " " " Bushing
124411	2	" " " " " " 124390 w/732B
22436	2	" " " " " Washer
221830		Steel Base with 200522C and four screws 1-1/4" No. 12 R.H.B.
227134		" Seat
227053		" " 227134 with 227132
227132		" " Bracket with 227556 and three wood screws 1" No. 12
227556		" " Spindle
200522 C		" " " Set Screw
221849	2	Truck Caster with four 1-1/4" No. 14 Wood Screws
221851	2	" " (swivel) with four 1-1/4 No. 14 wood screws
135425		" complete, Nos. 135426, 221830, 227053, two each 51038R, 126510, 151224, 152256, 152257, 152258, 221849, 221851, four each 1062R, 9842, 50612P, 51550R, 126150, 151141, wood screws 1 1/2" long No. 15 R.H. and twelve 23250