

SINGER

175-65

Parts
List

SINGER
INDUSTRIAL PRODUCTS

175⁶⁵

Part Number	Description
175987	Arm Side Cover (right) (for Agents only)
51649(805)	Arm Side Cover (right) Screw
51650(802)	Arm Side Cover (right) Screw Stud Thumb Nut
175990	Bed Top Cover (back)
175909	Bed Top Cover (front) and Knife Holder
140019(806)	Bed Top Cover (front) and Knife Holder Screw
160(809)	Button Clamp Arm Hinge Pin Bracket Screw (right, short)
350737(869)	Button Clamp Arm Hinge Pin Bracket Screw (left, long)
141469(859)	Button Clamp Lifting Arm Set Screw
175910	Button Clamp Lifting Interference Lever
175928	Button Clamp Lifting Interference Lever Actuating Disc
175911	Button Clamp Lifting Interference Lever Actuating Tripper
190(809)	Button Clamp Lifting Interference Lever Actuating Tripper Screw
175913	Button Clamp Lifting Interference Lever Adjusting Segment
141144(869)	Button Clamp Lifting Interference Lever Adjusting Segment Screw
7071	Button Clamp Lifting Interference Lever Adjusting Segment Screw Washer
175914	Button Clamp Lifting Interference Lever Bracket
143(819)	Button Clamp Lifting Interference Lever Bracket Screw

Part Number	Description
86(803)	Button Clamp Lifting Interference Lever Hinge Screw
175915	Button Clamp Lifting Interference Lever Plunger
1342(819)	Button Clamp Lifting Interference Lever Plunger Hinge Screw
17719	Button Clamp Lifting Interference Lever Spring
50111(819)	Button Clamp Lifting Interference Lever Spring Screw (lever end)
175342	Button Clamp Lifting and Thread Pull-off Holder Shaft
175945	Button Clamp Lifting Rod Arm
140024(830)	Button Clamp Lifting Rod Arm Stop Plate Screw
175918	Button Clamp Lifting Rod Retaining Collar
51389(830)	Button Clamp Lifting Rod Retaining Collar Set Screw
175919	Button Clamp Lifting Rod Spring Stop
350595(869)	Button Clamp Lifting Rod Spring Stop Set Screw
175921	Face Plate
175943	Face Plate Thread Guide (upper)
175922	Face Plate Thread Retainer Sleeve (long)
175923	Face Plate Thread Retainer Sleeve (short)
175944	Face Plate Thread Retainer Stud
175925	Feed Cam
175294	Feed Cam Driving Worm

Part Number	Description
175926	Feed Cam Driving Worm Wheel
175927	Feed Cam Driving Worm Wheel Shaft
175686	Feed Plate
175988	Feed Plate Carrier
175984	Feed Plate Carrier Guide Block (left)
230(819)	Feed Plate Holder Screw
175929	Knife (thread cutting)
175930	Knife Driving Bell Crank
175931	Knife Driving Bell Crank Driving Connection
82(803)	Knife Driving Bell Crank Driving Connection Hinge Screw
1735(819)	Knife Driving Bell Crank Driving Connection Hinge Screw (lower) Lock Nut
175932	Knife Driving Bell Crank Driving Connection Slide Block
175933	Knife Driving Bell Crank Driving Connection Slide Block Spring
19020	Knife Driving Bell Crank Driving Connection Slide Block Spring Washer
175934	Knife Driving Bell Crank Stop (adjustable)
212(819)	Knife Driving Bell Crank Stop (adjustable) Screw
69(850)	Knife Driving Bell Crank Hinge Screw
175935	Knife Driving Lever
175936	Knife Driving Lever Connecting Link

Part Number	Description
82(803)	Knife Driving Lever Connecting Link Hinge Screw
1735(819)	Knife Driving Lever Connecting Link Hinge Screw Lock Nut
85(803)	Knife Driving Lever Hinge Screw
51140(803)	Knife Driving Stud
175937	Knife Retaining Plate (back)
226(805)	Knife Retaining Plate (back) Screw
175938	Knife Retaining Plate (front)
226(805)	Knife Retaining Plate (front) Screw
175939	Needle Bar (hollow)
175940	Needle Bar Connecting Link Hinge Stud
175100	Needle Bar Connecting Link Hinge Stud Thread Guide Plate
174(819)	Needle Bar Connecting Link Hinge Stud Thread Guide Plate Screw
175101	Needle Bar Connecting Link Hinge Stud Thread Guide Roller
175941	Needle Bar Connecting Stud (lower)
175989	Needle Guide Cam
175993(010)	Needle Holder for 3/32 in., 1/8 in., and 5/32 in. spacing between needles
	NOTE: For 3/32 in. spacing between needles Code No. 006. For 1/8 in. spacing between needles Code No. 008. For 5/32 in. spacing between needles Code No. 010.
	NOTE: No. 175993 with 5/32 (Code No. 010) spacing is furnished as regular to machine.

Part Number	Description
	NOTE: When ordering No. 175993, code for spacing between needle is to be specified.
	NOTE: No. 175993 with 3/32 in. (Code No. 006) spacing and No. 175993 with 1/8 in. (Code No. 008) spacing are also furnished with the machine.
	NOTE: No. 175993 with 7/64 in. (Code No. 007) spacing and No. 175993 with 9/64 in. (Code No. 009) spacing can be obtained but are not regularly furnished.
175995	Needle Holder Body Positioning Pin
196(805)	Needle Holder Clamping Screw
175996(010)	Needle Holder Complete
	NOTE: For 3/32 in. spacing between needles Code No. 006. For 1/8 in. spacing between needles Code No. 008. For 5/32 in. spacing between needles Code No. 010.
	NOTE: No. 175996 with 5/32 (Code No. 010) spacing is furnished as regular to machine.
	NOTE: When ordering No. 175996, Code for spacing between needles is to be specified.
176449	Needle Holder for single needle at center position for sewing two hole buttons
175951	Needle Plate (adjustable)
141430(806)	Needle Plate (adjustable) Screw
176454	Needle Thread Pull Back Lever
175955	Starting Crank
141427(869)	Starting Crank Adjusting Screw

Part Number	Description
175956	Starting Interference Plunger
175957	Starting Interference Plunger Actuating Lever (forked)
175958	Starting Interference Plunger Actuating Lever Bracket
160(819)	Starting Interference Plunger Actuating Lever Bracket Screw
50082(803)	Starting Interference Plunger Actuating Lever Pivot Screw
1741(805)	Starting Interference Plunger Actuating Lever Pivot Screw Lock Nut
175959	Starting Interference Plunger Plate (adjustable)
175960	Starting Interference Plunger Plate Bracket
175961	Starting Interference Plunger Plate Bracket Guide Plate
596(819)	Starting Interference Plunger Plate Bracket Guide Plate Screw
175962	Starting Interference Plunger Plate Bracket Guide Plate Spacer
207(819)	Starting Interference Plunger Plate Bracket Screw
208(819)	Starting Interference Plunger Plate Screw
175963	Starting Interference Plunger Spring
175964	Starting Interference Plunger Spring Collar
350656(869)	Starting Interference Plunger Spring Collar Set Screw
175985	Stop Dog Cushion Spring Holder

Part Number	Description
141428(869)	Stop Motion Retaining Collar Screw
175965	Stop Motion Trip (single trip)
175966	Stop Motion Trip (double trip)
1200(805)	Stop Motion Trip (double trip) Hinge Screw
175969	Stop Motion Trip Block
175999	Stop Motion Trip Point
458(830)	Stop Motion Trip Point Locking Set Screw
176000	Stop Motion Trip Point Locating Washer (compressible)
175970	Tension (automatic) Disc
141451(803)	Tension (automatic) Screw Stud
13710	Tension (automatic) Spring
175971	Tension (automatic) Thread Eyelet
175972	Tension (automatic) complete
175970	Tension (stationary) Disc
175973	Tension (stationary) complete
175974	Thread Eyelet (back)
175975	Thread Eyelet (front)
175998	Thread Nipper Plate
175976	Thread Nipper Releasing Stud (adjustable)
176450	Thread Nipper Releasing Stud (adjustable) Retainer
50438(805)	Thread Nipper Releasing Stud (adjustable) Retainer Clamping Screw
175977	Thread Nipper Releasing Stud (adjustable) Slide

Part Number	Description
175534	Thread Nipper Releasing Stud Screw
103(805)	Thread Nipper Releasing Stud (adjustable) Slide Screw
175978	Thread Nipper Releasing Stud (adjustable) Slide Spring
175161	Thread Nipper Thread Guide Pin
350719(869)	Thread Pull-off (back) Holder Set Screw
175971	Thread Pull-off Thread Eyelet
176451	Thread Retainer and Wiper Wire
212(819)	Thread Retainer and Wiper Wire Locking Screw
176452	Thread Retainer and Wiper Wire Lever
175858	Thread Retainer Lever Holder
1186(819)	Thread Retainer Lever Holder Clamping Screw
191(809)	Thread Retainer Lever Screw
176453	Thread Retainer and Wiper Wire complete
175992	Machine Base complete
228764	Spool Pin
228766	Spool Rest
150203	Spool Rest Cushion (flat)
228769	Thread Guide
228766	Thread Unwinder complete