Form 19093 (537) Printed in U. S. A.

# LIST of PARTS



MACHINE No. 176-14

THE SINGER MANUFACTURING COMPANY

From the library of: Superior Sewing Machine & Supply LLC

#### INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling each day.

Apply Singer "Stainless Oil For High Speed Machines" to all oil holes accessible from the outside. Remove the top cover and the front cover and lubricate all oiling points thus uncovered.

Copyright, U. S. A., 1935 and 1937, by The Singer Manufacturing Co. All Rights Reserved for all Countries

## INDEX

	Page
Accessories	10
Feeding Disc Opening and Starting Parts	10
Machine Base	10
Machine No. 176-14	5
Numerical List of Parts	13
Spool Stand	11

#### INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed

B-Polished, Nickel Plated and Buffed

C-Hardened Only

D-Polished Only

E-Soft, Not Polished

F-Hardened and Polished

F.J-Hardened, Polished and Nickel Plated

G-Bright Rumbled and Nickel Plated

H-Blued

J-Nickel Plated Only

K-Hardened and Nickel Plated

L-Brass Plated

M-Oxidized

N-Japanned, Dull

P-Japanned, Bright

R-Merlized

S-Cadmium Plating

T-Copper Plated

T.A-Hardened, Polished, Copper and Nickel Plated and Buffed

T.B-Copper and Nickel Plated and Polished

T.J-Copper and Nickel Plated Only

T.K-Hardened, Copper and Nickel Plated

T.M-Copper Plated and Oxidized

T.L-Copper and Brass Plated

U-Zinc Plated

V-Silver Plated

W-Polished and Nickel Plated

Y-Black Nickel Plated Only

Z-Chromium Plated

Z.B-Polished, Nickel Plated, Buffed and Chromium Plated

Z.J-Nickel and Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:

1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers

1501 to 1800 and 51501 to 51800 are Nut Numbers 1801 to 2000 and 51801 to 52000 are Roller Numbers 2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

# LIST OF PARTS COMPLETE FOR



#### MACHINE No. 176-14

For Sewing Sock Lining in Felt and Combination Felt and Leather Slippers. Horizontal needle bar with 1 3/8 inch stroke. Three movement looper. Can be adjusted to make from 4 to 10 stitches per inch. Fitted with special feed disc and work gauges. Speed 1500 R. P. M.

No.	Plate	Name
176100	22645	Balance Wheel, 3 15/16 in. diam. pulley,
		with 445C
445C	22634	Balance Wheel Set Screw
176102	22635	" " Shaft
176103	22635	" " Bushing (left)
998C	22646	" " " " Set
		Screw
176104	22635	Balance Wheel Shaft Bushing (right)
998C	22646	" " " " Set
		Screw
176105	22635	Balance Wheel Shaft Counterbalance
		(large)
176106	22635	Balance Wheel Shaft Counterbalance
		(small)
145E	22634	Balance Wheel Shaft Counterbalance Screw
		(long)

No.	Plate	Name
159E	22634	Balance Wheel Shaft Counterbalance Screw
	-	(short)
176107	22634	Balance Wheel Washer (felt)
176108	22635	Feed Connection
140086C	22634	" Hinge Screw
176109	22635	Eccentric with 8890
176110	22634	" Pin
889C	22646	Set Screw
176111	22635	Lever
176187	22647	Feeding Disc (back) with two 445C
445C	22634	Det Delew
176113	22635	Shar C
176114	22635	Reiniorcing
4450	00074	Sleeve with two 445C
445C	22634	Feeding Disc (back) Shaft Reinforcing
150150	00075	Sleeve Set Screw
176150	22635	Feeding Disc (back) Worm Gear with two
4450	00074	445C
445C 176151	22634 22635	Feeding Disc (back) Worm Gear Set Screw.
176151	22637	" " " Wheel
1/0119	22001	with 440C
176017	22646	Feeding Disc (back) Worm Wheel Driver
170017	04040	Collar with 460C
460C	22646	Feeding Disc (back) Worm Wheel Driver
4000	DEUTU	Collar Set Screw
176116	22634	Feeding Disc (back) Worm Wheel Driver
2.0220	22001	Pressure Spring
176117	22634	Feeding Disc (back) Worm Wheel Driver
		Pressure Spring Stud
176118	22634	Feeding Disc (back) Worm Wheel Driver
		Screw Stud
176119	22634	Feeding Disc (back) Worm Wheel Driver
		Wearing Screw Stud
51664C	22634	Feeding Disc (back) Worm Wheel Driver
		Wearing Screw Stud Nut
440C	22646	Feeding Disc (back) Worm Wheel Driver
		Wearing Screw Stud Set Screw
176120	22634	Feeding Disc (back) Worm Wheel Pin
176121	22637	" " " Shaft
176122		
		176121 with 176120 and 176151
577C	22646	Feeding Disc (back) Worm Wheel Shaft
		Screw Center
176024		Feeding Disc (back) Worm Wheel Shaft
	00010	Screw Center 577C with 51661J
51661J	22646	Feeding Disc (back) Worm Wheel Shaft
100100	00077	Screw Center Nut
176123	22637	Feeding Disc (back) Worm Wheel Stop Dog.

No.	Plate	Name
176124	22637	Feeding Disc (back) Worm Wheel Stop Dog
		Hinge Stud
435C	22646	Feeding Disc (back) Worm Wheel Stop Dog
4000	22040	reeding bisc (back) worm wheel Stop Dog
380305	00000	Hinge Stud Set Screw
176125	22637	Feeding Disc (back) Worm Wheel Stop Dog
		Spring
176188	22647	Feeding Disc (front)
176189		" " 176188 with 140091F,
		176192,176193,176195,176197,two
		1477E and fourteen 176194
•176190	22645	Feeding Disc (front) Arm with 1396C
176191	22645	
170101	22040	170190 WICH
100100	00000	176132,176133,176220 and two 176009
176129	22637	Feeding Disc (front) Arm Bell Crank
176130	22637	" " " " Shaft
577C	22646	и и и и и и
		Set Screw
176131	22637	Feeding Disc (front) Arm Pressure Spring
140087E	22646	" " " " " "
		Screw
1714E	22646	Feeding Disc (front) Arm Pressure Spring
1,110	22010	Screw Nut
•176132	22645	
		Feeding Disc (front) Arm Shaft (lower)
•176133	22645	" " " (upper) " " " Pin
176009	22648	
176220	22646	" " Stop Plug
176192	22646	" " Bearing Stud
1396C	22646	" " " Clamp-
		ing Screw
140091F	22646	Feeding Disc (front) Cap Screw
176193	22646	" " " Washer
176194	22646	" Roller
176195	22646	" " Washer
•176135		Head of Machine with 15404 and two each
170100		
170170	ODERR	15405 and 176009
176136	22637	Head of Machine Back Cover
176137	22637	
376J	22646	2010#1111111
176138	22645	Front Cover
140088R	22634	" " " Screw
176139	22645	" " Top Cover with three
		176045
176009	22648	Head of Machine Top Cover Steady Pin
176045	22648	" " Thread Eyelet.
176140	22639	Looper
176141	22640	" Clamping Nut
176142	22639	
		Driving Eccentric With 8890
889C	22646	Set Screw
176143	22639	" " Shaft

No.	Plate	Name
176145	32639	Looper Driving Shaft Frame
176146	22639	" " " Crank
176147	22639	" " " 176146
		with 176148
176148	22639	Looper Driving Shaft Frame Crank Driving
2,0210		Stud
176149	22639	Looper Driving Shaft Frame Crank Hinge
1/0143	22003	Bracket (back)
176144	22639	Looper Driving Shaft Frame Crank Hinge
170144	22009	Bracket (front)
170157		Looper Driving Shaft Frame Crank Hinge
176153		Bracket (front) Packing (.006"
		thick)
176152	22639	Looper Driving Shaft Frame Crank Hinge
		Bracket (front) Packing (.020"
		thick)
1396C	22646	Looper Driving Shaft Frame Crank Hinge
		Bracket Screw
1684J	22646	Looper Driving Shaft Frame Crank Nut
176155	22645	" Oscillating Cam with 889C
176156	22640	" " Pin
889C	22646	" Set Screw
176157	22640	" Crank with 164E
176158	22640	" " Ball
176159	22640	" " " Stud
164E	22640	" " " Clamp-
		ing Screw
176160	22640	Looper Oscillating Crank Pin
•176081		Needle Bar (hollow)
176161	22639	" 176081 with 176173
176162		Needle Bar complete, Nos. 140082F, 140089F,
170102		140090F,176161,176168,176169,176171
		176172 and 176174
300300	00040	
176163	22640	Needle Bar Bushing with 176164
51665C	22634	" Lock Nut
176164	22640	Steady Pin
176165	22647	Connection with two 51320E
51320E	22640	Clamping Screw
176166	22647	Eccentric with 889C
176110	22634	P1n
889C	22646	Set Screw
176168	22640	" Thread Guide
140082F	22646	Screw
140089F	22640	Nipper Screw
176169	22640	" " " Bushing
176170	22647	" " " Slide Rod
440C	22646	" " " " " Set
		Screw
176171	22640	Needle Bar Thread Nipper Spring

No.	Plate	Name	
176172	22640	Needle Clamp	
*176173		" " Body	
140090F	22640	" " Screw	
176174	22640	" Steady Pin	
176197	22646	" Guide	
1477E	22646	" " Screw	
176176	22648	Stitch Indicator	
176177	22648	" Regulating Screw Stud	
176178	22648	" " 176177 with	
		176179 and 176180	
176179	22648	Stitch Regulating Screw Stud Block	
176180	22648	" " " " Pin	
1684C	22646	и и и Nut	
176181	22648	" " " Washer	
176182	22648	" " " Slide Block	
51666J	22648	" " " Thumb Nut	
633C	22634	Tension Screw Stud	
58592		" " 633C with 1560C	
2102	22634	" Disc	
1560C	22634	" Regulating Thumb Nut	
176084	22634	" Spring	
176085		Tension complete, Nos. 58592,176084 and	
		two 2102	
*15404		Trade Mark	
15405		" " Rivet	
•176183		Work Guide	
176198	22647	" " 176183 with 176196	
•176196		" " Plate	
448C	22640	" " Set Screw	

#### **ACCESSORIES**

No.	Plate	Name
176087		Belt, 5/16 in. round, 36 in. long with 25029
25029	22648	Belt Hook
120342	22649	Oiler (copper plated) with 120343
120343	22649	" Spout, 3 1/2 in. long
26026	22649	Screw Driver
176089	22649	Tweezers
176202	22649	Wrench for 176141

#### MACHINE BASE

No.	Plate	Name
176184	22645	Machine Base with four wood screws 1 in.
		No. 10 F.H
49123	22649	Machine Base Oil Pipe
49124	22649	" " " Drain Cock
122E	22648	" Screw

#### FEEDING DISC OPENING AND STARTING PARTS

No.	Plate	Name
175216	22650	Feeding Disc Opening Treadle
175217	22647	" " " Hinge Pin
175218	22650	" " " Stand
175219	22650	Feeding Disc Opening Treadle complete,
		Nos. 175216 to 175218 and two wood
		screws 1 in. No. 14 F.H
46848	22650	Feeding Disc Opening Treadle Pitman Rod
		(lower)
46848	22650	Feeding Disc Opening Treadle Pitman Rod
		(upper)
46849	22650	Feeding Disc Opening Treadle Pitman Rod
		(upper) Connecting Lever
46850	22650	Feeding Disc Opening Treadle Pitman Rod
		(upper) Connecting Lever Bracket

No.	Plate	Name
24665	22634	Feeding Disc Opening Treadle Pitman Rod (upper) Connecting Lever Hinge Pin.
152011	22650	Feeding Disc Opening Treadle Pitman Rod (upper) Connecting Lever complete, Nos. 24665, 46849, 46850 and two wood screws 3/4 in. No. 10 R.H
176185	22650	Feeding Disc Opening Treadle Pitman Rod (upper) Connecting Lever Chain (8 links)
80223	22650	Feeding Disc Opening Treadle Pitman Rod Clamp with 361C
3610	22648	Feeding Disc Opening Treadle Pitman Rod Clamp Set Screw
123183	22634	Feeding Disc Opening Treadle Pitman Rod Cotter Pin
176091	22650	Feeding Disc Opening Treadle Pitman Rod complete, Nos. 80223 and two each 46848 and 123183
175216	22650	Starting Treadle
175217	22647	" Hinge Pin
175218	22650	" " Stand
175219	22650	Starting Treadle complete, Nos. 175216 to 175218 and two wood screws 1 in. No. 14 F.H
46848	22650	Starting Treadle Pitman Rod (lower)
46848	22650	" " (upper)
80223	22650	" " " Clamp with
		361C
361C	22648	Starting Treadle Pitman Rod Clamp Set Screw
123183	22634	Starting Treadle Pitman Rod Cotter Pin
176091	22650	Starting Treadle Pitman Rod complete, Nos. 80223 and two each 46848 and 123183

#### SPOOL STAND

No.	Plate	Name
27882	22650	Spool Rest
60655		" " 27882 with 27884
41514	22650	" Weight, 4 in. diam., with 41515
41515		" Center Pin
27884	22650	Thread Eyelet Rod
27885	22650	Spool Stand complete, Nos. 41514, 60655
		and two wood screws 3/4 in. No. 10
		F. H

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

> Needles in Containers marked "For Singer Machines" are not Singer made needles.

2

NUMERICAL LIST OF PARTS

## NUMERICAL LIST OF PARTS

No.	Dieta	11-
122E	Plate	Name Name
	22648	Machine Screw
145E	22634	Balance Wheel Shaft Counterbalance Screw (long)
159E	22634	Balance Wheel Shaft Counterbalance Screw (short)
164E	22640	Looper Oscillating Crank Ball Stud
1045	22040	Clamping Screw, for 176157
361C	22648	Feeding Disc Opening Treadle Pitman Rod Clamp Set Screw, for 80223
361C	22648	Starting Treadle Pitman Rod Clamp Set
	00040	Screw, for 80223
376J	22646	Head of Machine Back Cover Screw
435C	22646	Feeding Disc (back) Worm Wheel Stop Dog Hinge Stud Set Screw
440C	22646	Feeding Disc (back) Worm Wheel Driver
		Wearing Screw Stud Set Screw, for
		176115
440C	22646	Needle Bar Thread Nipper Slide Rod Set
		Screw
445C	22634	Balance Wheel Set Screw, for 176100
445C	22634	Feeding Disc (back) Set Screw, for 176187
445C	22634	" " Shaft Reinforcing
		Sleeve Set Screw, for 176114
445C	22634	Feeding Disc (back) Worm Gear Set Screw,
		for 176150
448C	22640	Work Guide Set Screw
<b>4</b> 60C	22646	Feeding Disc (back) Worm Wheel Driver Collar Set Screw, for 176017
577C	22646	Feeding Disc (back) Worm Wheel Shaft
01.10	22010	Screw Center, for 176024
577C	22646	Feeding Disc (front) Arm Bell Crank
		Shaft Set Screw
633C	22634	Tension Screw Stud, for 58592
889C	22646	Feed Eccentric Set Screw, for 176109
889C	22646	Looper Driving Eccentric Set Screw, for
		176142
889C	22646	Looper Oscillating Cam Set Screw, for
		176155
889C	22646	Needle Bar Eccentric Set Screw, for
		176166
998C	22646	Balance Wheel Shaft Bushing (left) Set
		Screw
998C	22646	Balance Wheel Shaft Bushing (right) Set
		Screw

No.	Plate	Name
1396C	22646	Feeding Disc (front) Bearing Stud Clamp-
		ing Screw, for 176190
1396C	22646	Looper Driving Shaft Frame Crank Hinge
		Bracket Screw
14770	22646	Needle Guide Screw, for 176189
15600	22634	Tension Regulating Thumb Nut, for 58592.
1684J	22646	Looper Driving Shaft Frame Crank Nut
1684C	22646	Stitch Regulating Screw Stud Nut
1714E	22646	Feeding Disc (front) Arm Pressure Spring
11145	22020	Screw Nut
2102	22634	Tension Disc, for 176085
*15404	20004	Trade Mark, for 176135
15405		" Rivet, for 176135
24665	22634	Feeding Disc Opening Treadle Pitman Rod
		(upper) Connecting Lever Hinge Pin,
		for 152011
25029	22648	Belt Hook, for 176087
26026	22649	Screw Driver (Accessories)
27882	22650	Spool Stand Spool Rest, for 60655
27884	22650	" Thread Eyelet Rod, for 60655
27885	22650	Spool Stand complete, Nos. 41514, 60655
		and two wood screws 3/4 in. No. 10
		F.H
41514	22650	Spool Stand Spool Weight, 4 in. diam.
		with 41515, for 27885
41515		Spool Stand Spool Weight Center Pin, for
		41514
46848	22650	Feeding Disc Opening Treadle Pitman Rod
		(lower) for 176091
46848	22650	Feeding Disc Opening Treadle Pitman Rod
*00±0	22000	(upper) for 176091
46848	22650	Starting Treadle Pitman Rod (lower) for
40848	22000	176091
42040	00050	
46848	22650	Starting Treadle Pitman Rod (upper) for
40040	00050	176091
46849	22650	Feeding Disc Opening Treadle Pitman Rod
		(upper) Connecting Lever, for 152011
46850	22650	Feeding Disc Opening Treadle Pitman Rod
		(upper) Connecting Lever Bracket,
		for 152011
49123	22649	Machine Base Oil Pipe
49124	22649	" " Drain Cock
51320E	22640	Needle Bar Connection Clamping Screw, for
		176165
51661J	22646	Feeding Disc (back) Worm Wheel Shaft
		Screw Center Nut, for 176024
51664C	22634	Feeding Disc (back) Worm Wheel Driver
		Wearing Screw Stud Nut
51665C	22634	Needle Bar Bushing Lock Nut

No.	Plate	Name
51666J	22648	Stitch Regulating Screw Stud Thumb Nut
58592		Tension Screw Stud 633C with 1560C, for 176085
60655		Spool Stand Spool Rest 27882 with 27884,
80223	22650	for 27885  Feeding Disc Opening Treadle Pitman Rod Clamp with 3610, for 176091
80223	22650	Starting Treadle Pitman Rod Clamp with 361C, for 176091
120342	22649	Oiler (copper plated) with 120343 (Accessories)
120343	22649	Oiler Spout, 3 1/2 in. long, for 120342.
123183	22634	Feeding Disc Opening Treadle Pitman Rod Cotter Pin, for 176091
123183	22634	Starting Treadle Pitman Rod Cotter Pin, for 176091
140082F	22646	Needle Bar Thread Guide Screw, for 176162
140086C	22634	Feed Connection Hinge Screw
140087E	22646	Feeding Disc (front) Arm Pressure Spring Screw
140088R	22634	Head of Machine Front Cover Screw
140089F	22640	Needle Bar Thread Nipper Screw, for 176162
140090F	22640	Needle Clamp Screw, for 176162
140091F	22646	Feeding Disc (front) Cap Screw, for 176189
152011	22650	Feeding Disc Opening Treadle Pitman Rod (upper) Connecting Lever complete,
		Nos.24665,46849,46850 and two wood screws 3/4 in. No. 10 R.H
175216	22650	Feeding Dist Opening Treadle, for 176219.
175216	22650	Starting Treadle, for 175219
175217	22647	Feeding Disc Opening Treadle Hinge Pin, for 175219
175217	22647	Starting Treadle Hinge Pin, for 175219
175218	22650	Feeding Disc Opening Treadle Stand, for 175219
175218	22650	Starting Treadle Stand, for 175219
175219	22650	Feeding Disc Opening Treadle complete, Nos. 175216 to 175218 and two wood
175219	22650	screws 1 in. No. 14 F.H
176009	22648	No. 14 F.H Feeding Disc (front) Arm Shaft Pin, for
176009	22648	Head of Machine Top Cover Steady Pin,for 176135

No.	Plate	Name
176017	22646	Feeding Disc (back) Worm Wheel Driver
		Collar with 460C
176024		Feeding Disc (back) Worm Wheel Shaft
		Screw Center 577C with 51661J
176045	22648	Head of Machine Top Cover Thread Eyelet,
		for 176139
•176081		Needle Bar (hollow) for 176161
176084	22634	Tension Spring, for 176085
176085		Tension complete, Nos. 58592, 176084 and
		two 2102
176087		Belt, 5/16 in. round, 36 in. long, with
		25029 (Accessories)
176089	22649	Tweezers (Accessories)
176091	22650	Feeding Disc Opening Treadle Pitman Rod
		complete, Nos. 80223 and two each
		46848 and 123183
176091	22650	Starting Treadle Pitman Rod complete,
		Nos. 80223 and two each 46848 and
		123183
176100	22645	Balance Wheel, 3 15/16 in. diam. pulley,
		with 445C
176102	22635	Balance Wheel Shaft
176103	22635	" " Bushing (left)
176104	22635	" " (right)
176105	22635	Counterbalance
		(large)
176106	22635	Balance Wheel Shaft Counterbalance
		(small)
176107	22634	Balance Wheel Washer (felt)
176108	22635	Feed Connection
176109	22635	" Eccentric with 889C
176110	22634	" Pin
176110	22634	Needle Bar Eccentric Pin
176111	22635	Feed Lever
176113 176114	22635 22635	Feeding Disc (back) Shaft Reinforcing
1/0114	66000	Sleeve with two 445C
176115	22637	Feeding Disc (back) Worm Wheel Driver
1/0110	10000	with 4400
176116	22634	Feeding Disc (back) Worm Wheel Driver
170110	NAUU-	Pressure Spring
176117	22634	Feeding Disc (back) Worm Wheel Driver
_,,		Pressure Spring Stud
176118	22634	Feeding Disc (back) Worm Wheel Driver
		Screw Stud
176119	22634	Feeding Disc (back) Worm Wheel Driver
		Wearing Screw Stud
176120	22634	Feeding Disc (back) Worm Wheel Pin, for
		176122

No.	Plate	Name
176121	22637	Feeding Disc (back) Worm Wheel Shaft, for
		176122
176122		Feeding Disc (back) Worm Shaft 176121
		with 176120 and 176151
176123	22637	Feeding Disc (back) Worm Wheel Stop Dog.
176124	22637	" " " " " " " "
2.02.02	22001	Hinge Stud
176125	22637	Feeding Disc (back) Worm Wheel Stop Dog
170120	10000	Spring
176129	22637	
176130	22637	Feeding Disc (front) Arm Bell Crank
		" " " " Shaft " " Pressure Spring
176131	22637	" " " " Shaft " " " Pressure Spring " " Shaft (lower)
•176132	22645	Shaft (lower)
		100 1/0191
•176133	22645	Feeding Disc (front) Arm Shaft (upper)
		for 176191
•176135		Head of Machine with 15404 and two each
		15405 and 176009
176136	22637	Head of Machine Back Cover
176137	22637	" " " Clamp
176138	22645	" " Front Cover
176139	22645	" " Top Cover with three
		176045
176140	22639	Looper
176141	22640	" Clamping Nut
176142	22639	" Driving Eccentric with 889C
176143	22639	" Shaft
176144	22639	" " Frame Crank Hinge
1,0111	22000	Bracket (front)
176145	22639	Looper Driving Shaft Frame
176146	22639	" " " Crank, for
170140	22003	
176147	22639	176147 Looper Driving Shaft Frame Crank 176146
1/014/	ECOGG	with 176148
176148	22639	Looper Driving Shaft Frame Crank Driving
1/0140	22009	Stud, for 176147
176149	22639	Looper Driving Shaft Frame Crank Hinge
170149	22009	
176150	22635	Bracket (back)Feeding Disc (back) Worm Gear with two
170100	00000	
176151	22635	4450Feeding Disc (back) Worm Wheel, for
170151	88000	
100150	00070	176122
176152	22639	Looper Driving Shaft Frame Crank Hinge
		Bracket (front) Packing (.020"
100155		thick)
176153		Looper Driving Shaft Frame Crank Hinge
		Bracket (front) Packing (.006"
200255	00017	thick)
176155	22645	Looper Oscillating Cam with 889C

No.	Plate	Name
176156	22640	Looper Oscillating Cam Pin
176157	22640	" Crank with 164E
176158	22640	" " Crank with 164E " " Ball " " " Stud
176159	22640	" " Stud
176160	22640	" " Pin
176161	22639	Needle Bar 176081 with 176173, for 176162
176162		Needle Bar complete, Nos. 140082F, 140089F,
170102		140090F, 176161, 176168, 176169, 176171
		176172 and 176174
176163	22640	Needle Bar Bushing with 176164
176164	22640	" Steady Pin, for 176163 " Connection with two 51320E
176165	22647	Connection with two 51320F
176166	22647	Eccentric with 8890
176168	22640	Thread Guide, for 170102
176169	22640	Nipper Screw Busning,
		for 176162
176170	22647	Needle Bar Thread Nipper Slide Rod
176171	22640	opring, rer
		176162
176172	22640	Needle Clamp, for 176162
•176173		" Body, for 176161
176174	22640	Steady Pin, for 176162
176176	22648	Stitch Indicator
176177	22648	" Regulating Screw Stud, for 176178
176178	22648	176177 With
		176179 and 176180
176179	22648	Stitch Regulating Screw Stud Block, for
		176178
176180	22648	Stitch Regulating Screw Stud Block Pin,
		for 176178
176181	22648	Stitch Regulating Screw Stud Nut Washer.
176182	22648	" " " Slide Block
•176183		Work Guide, for 176198
176184	22645	Machine Base with four wood screws 1 in.
		No. 10 F.H
176185	22650	Feeding Disc Opening Treadle Pitman Rod
		(upper) Connecting Lever Chain (8
		links)
176187	22647	Feeding Disc (back) with two 445C
176188	22647	" (front) for 176189
176189		" " 176188 with 140091F
		176192,176193,176195,176197,two
		1477E and fourteen 176194
•176190	22645	Feeding Disc (front) Arm with 1396C, for
		176191
176191	22645	Feeding Disc (front) Arm 176190 with
		176132,176133,176220 and two 176009
176192	22646	Feeding Disc (front) Bearing Stud, for
		176189

No.	Plate	Name
176193	22646	Feeding Disc (front) Cap Screw Washer,
		for 176189
176194	22646	Feeding Disc (front) Roller, for 176189.
176195	22646	" " Washer, for
		176189
•176196		Work Guide Plate, for 176198
176197	22646	Needle Guide, for 176189
176198	22647	Work Guide 176183 with 176196
176202	22649	Wrench for 176141 (Accessories)
176220	22646	Feeding Disc (front) Arm Stop Plug, for
		176191

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO."

> Needles in Containers marked "For Singer Machines" are not Singer made needles.


Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO."


> Needles in Containers marked "For Singer Machines"

are not Singer made needles.

OF PARTS


# PLATE 22634 - FULL SIZE

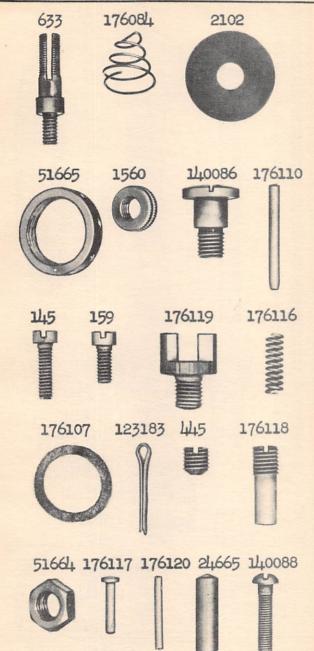

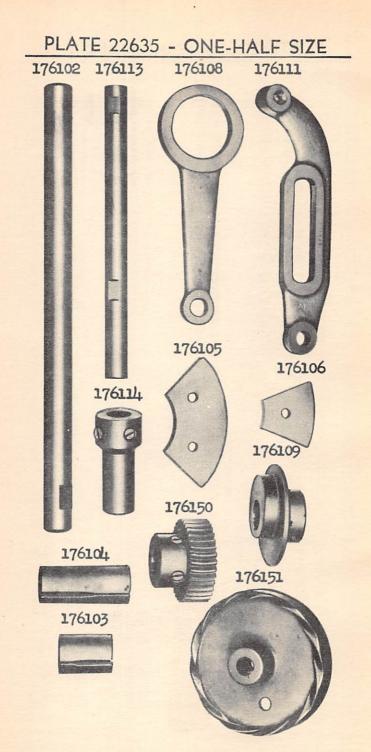



From the library of: Superior Sewing Machine & Supply LLC

## PLATE 22639 - ONE-HALF SIZE

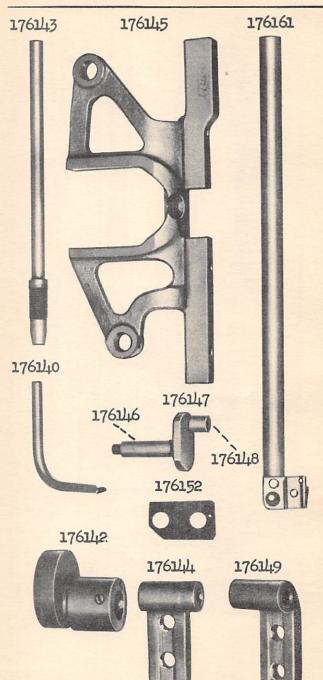


From the library of: Superior Sewing Machine & Supply LLC

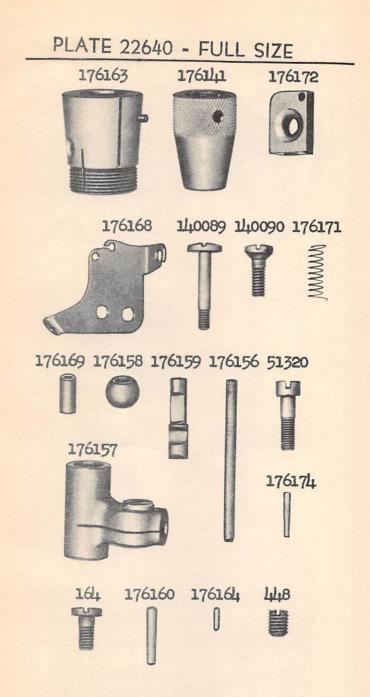


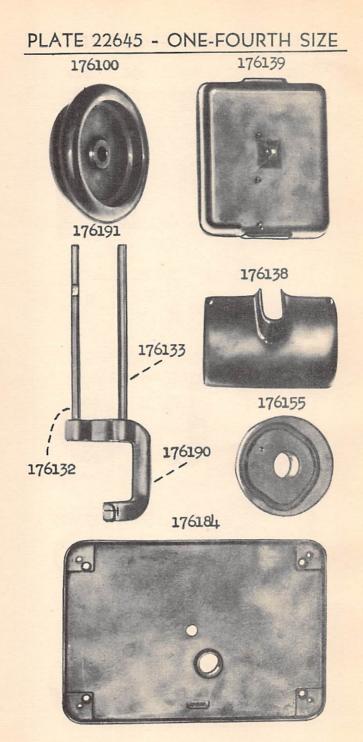


From the library of: Superior Sewing Machine & Supply LLC

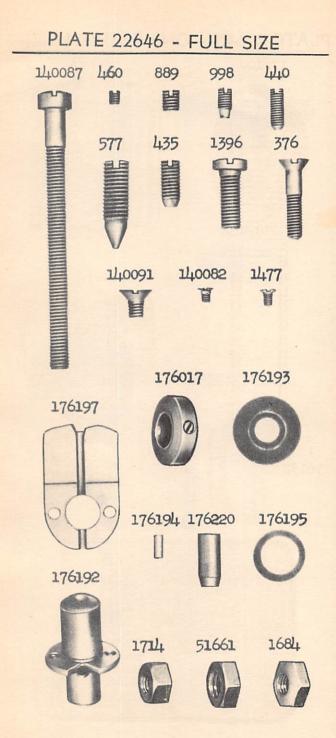

## PLATE 22647 - ONE-HALF SIZE

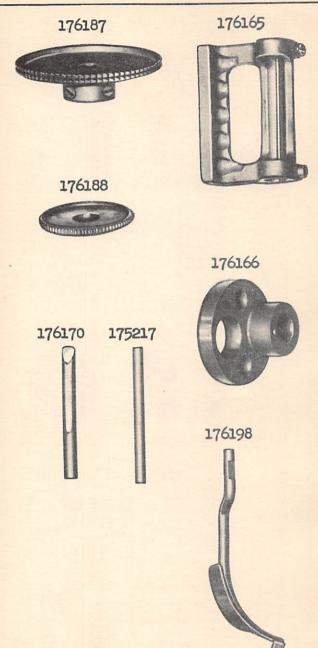

# PLATE 22648 - FULL SIZE 176110 176009 176045 361

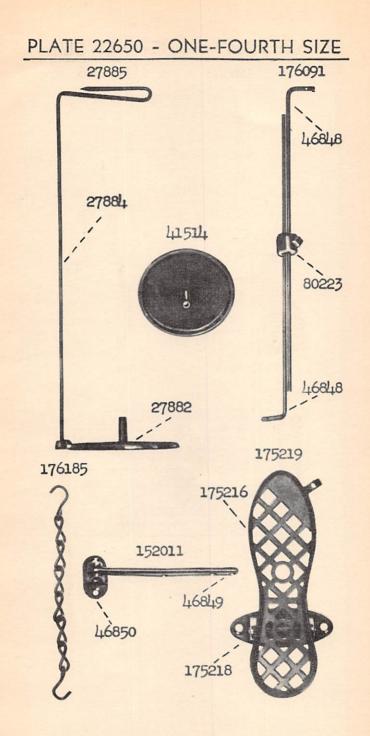

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

Needles in Containers marked

"For Singer Machines"
are not Singer made needles.

2

