# ILLUSTRATED LIST OF PARTS


FOR


Class 206K Machines

(Nos. 206K10, 206K11, 206K18 and 206K19)




\*\*A Trade Mark of
THE SINGER MANUFACTURING COMPANY

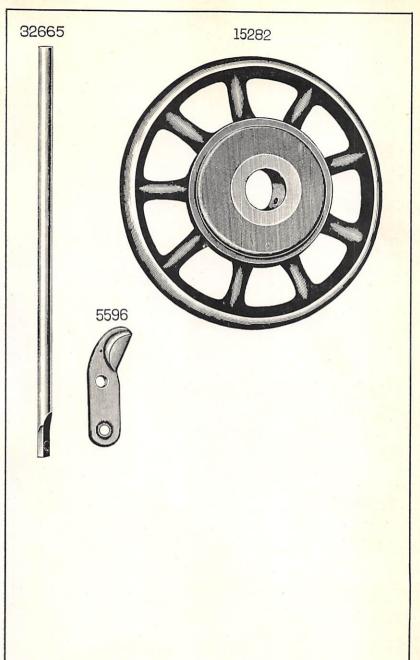


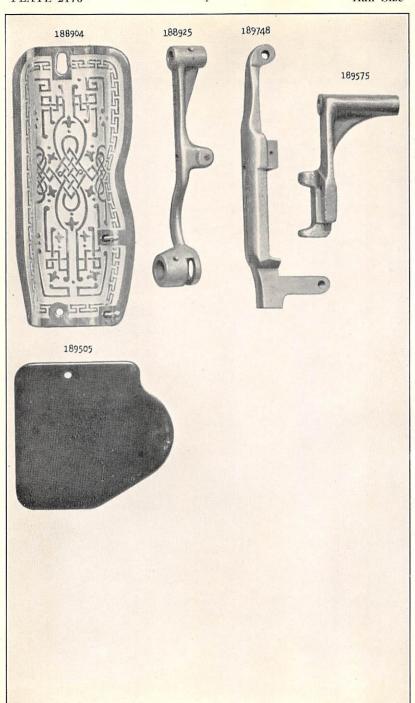


From the library of: Superior Sewing Machine & Supply LLC

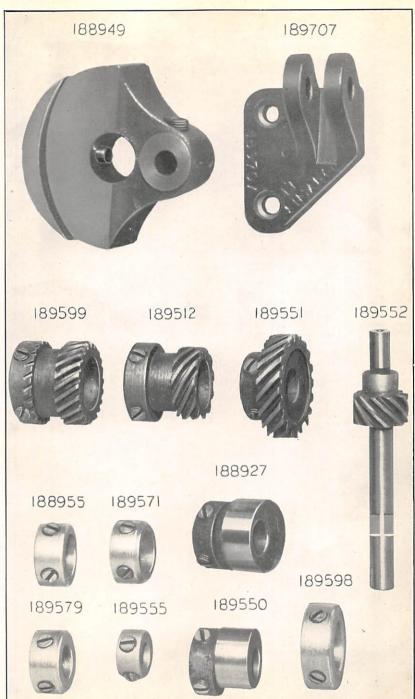



From the library of: Superior Sewing Machine & Supply LLC

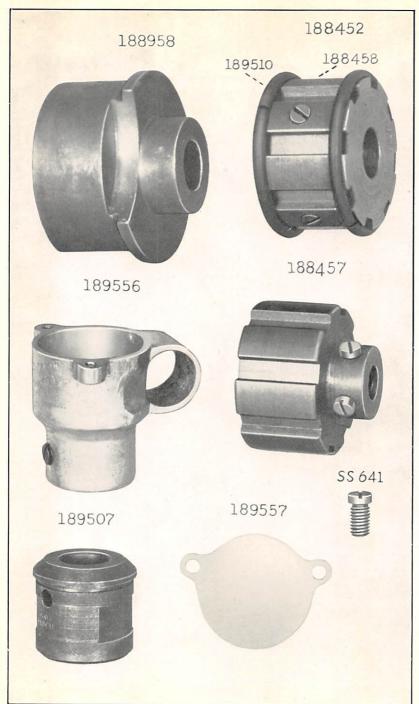


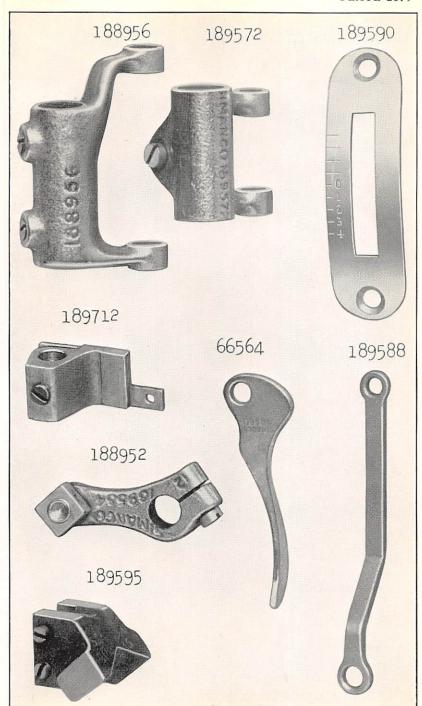




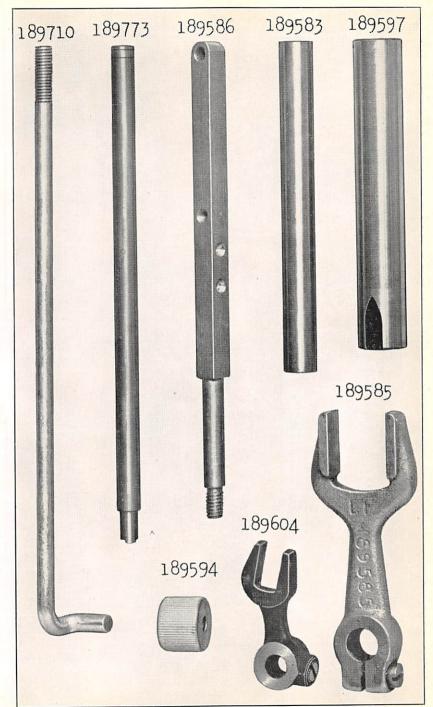


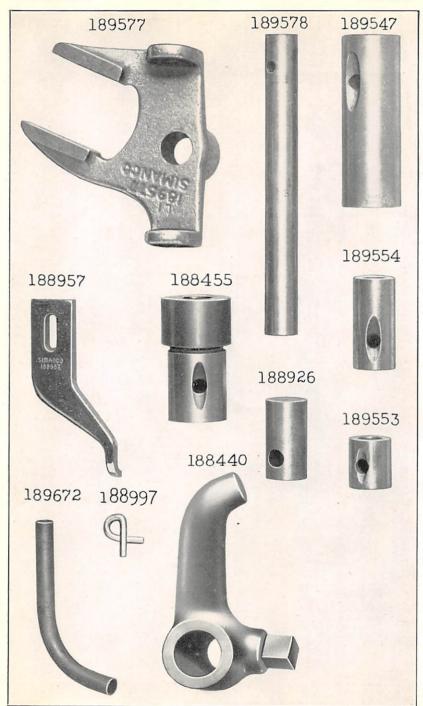


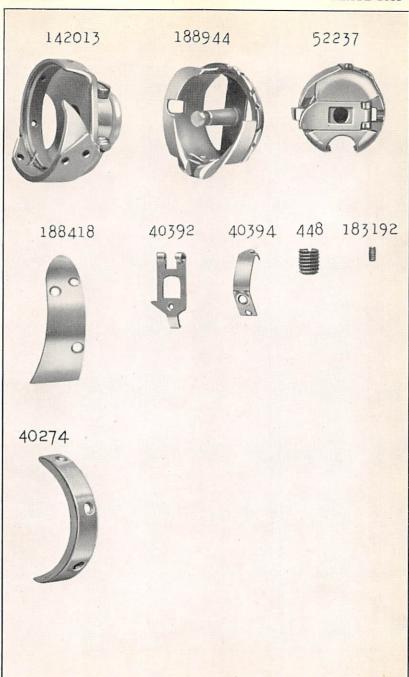

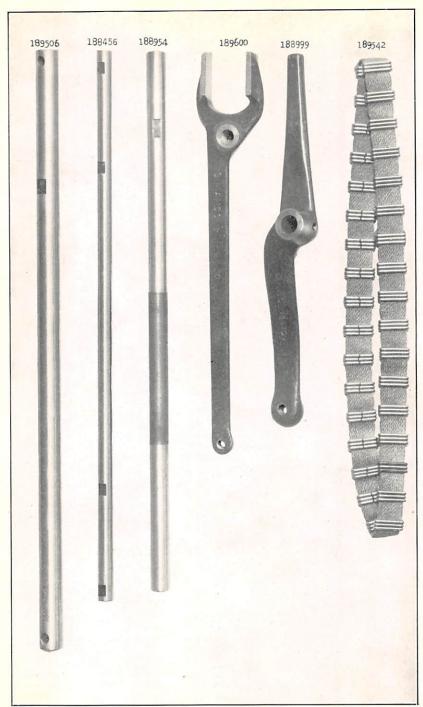


From the library of: Superior Sewing Machine & Supply LLC

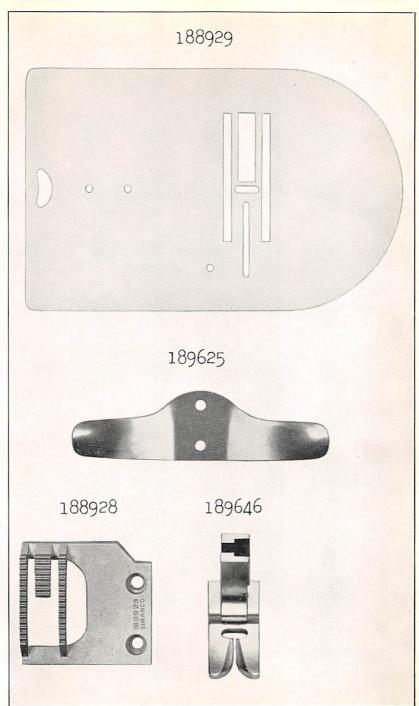


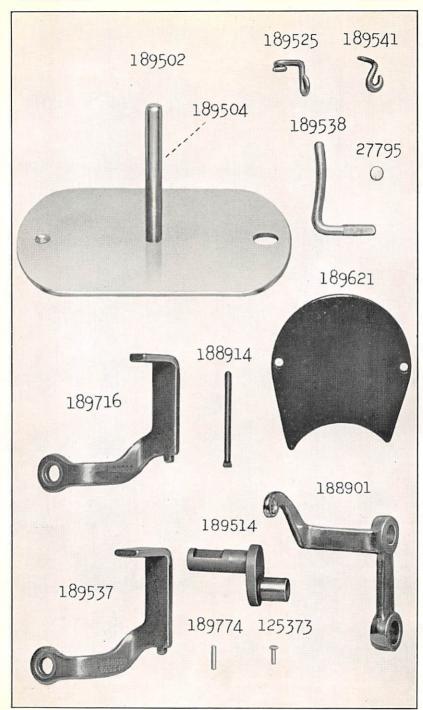


From the library of: Superior Sewing Machine & Supply LLC

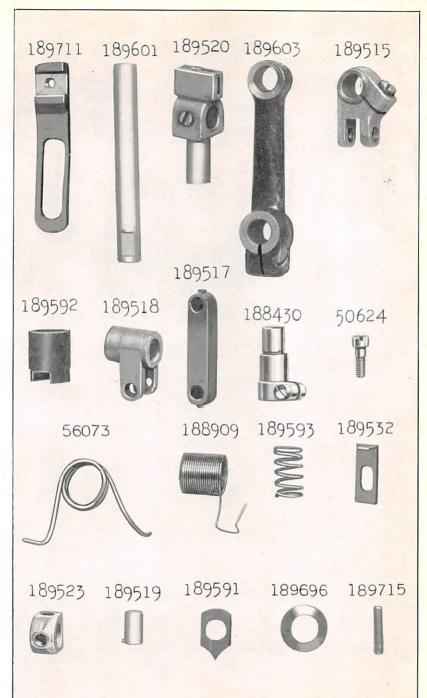





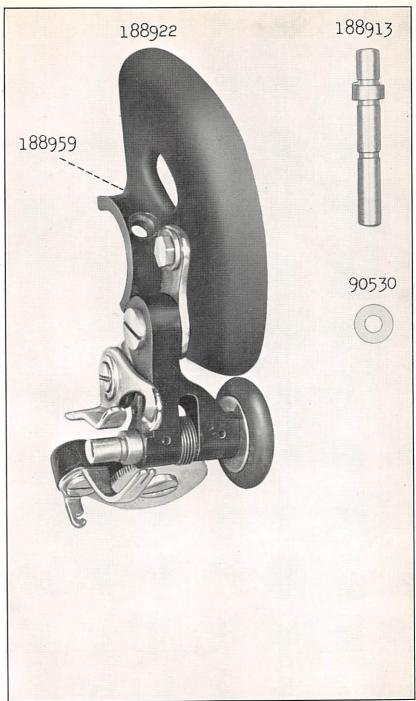


From the library of: Superior Sewing Machine & Supply LLC

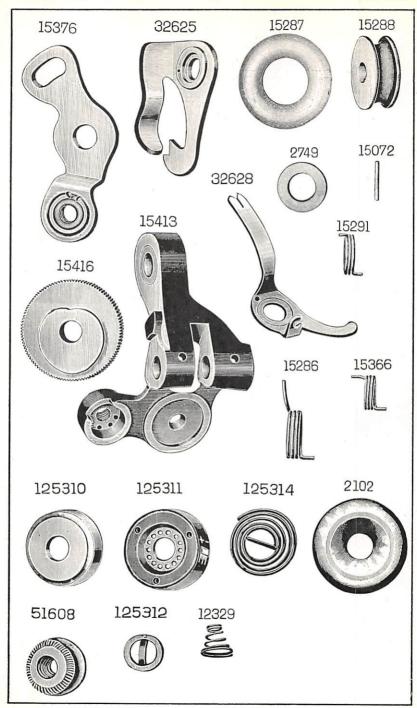

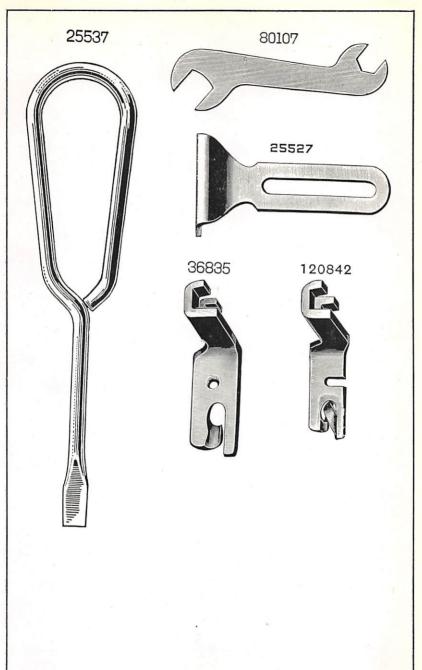


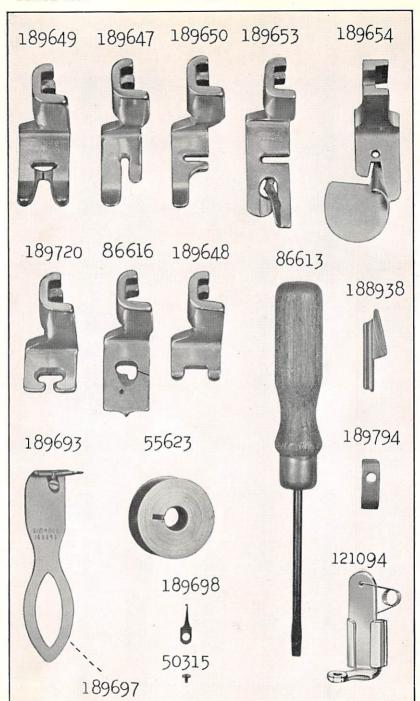


From the library of: Superior Sewing Machine & Supply LLC

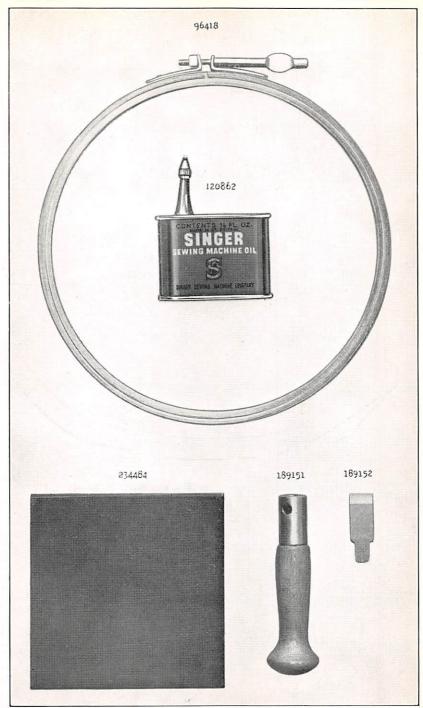



From the library of: Superior Sewing Machine & Supply LLC

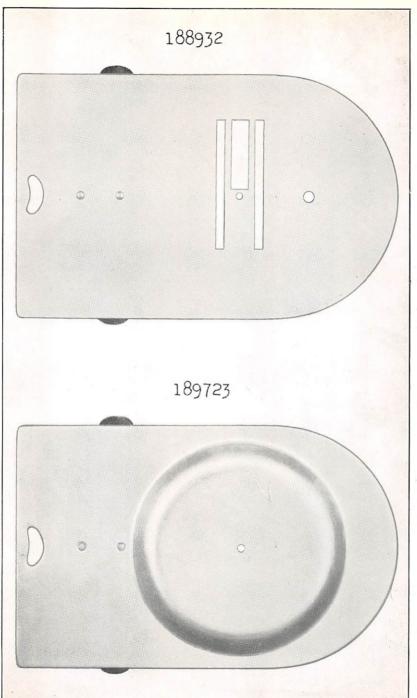


From the library of: Superior Sewing Machine & Supply LLC

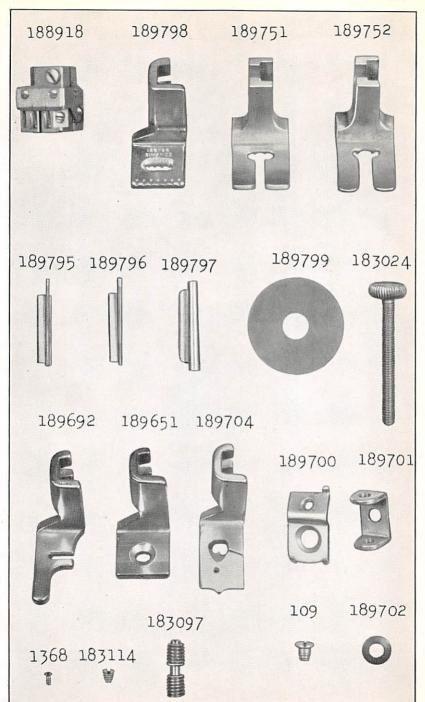

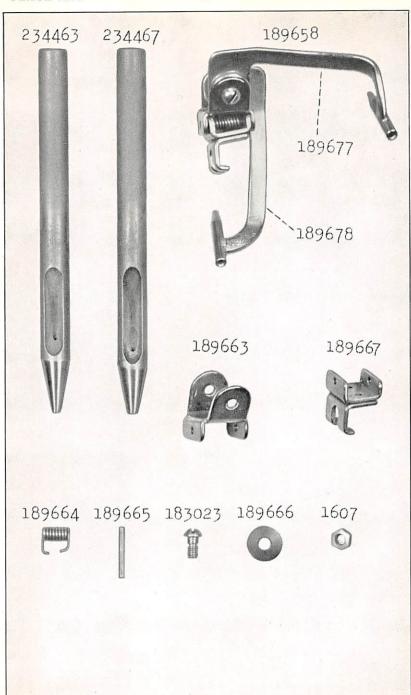


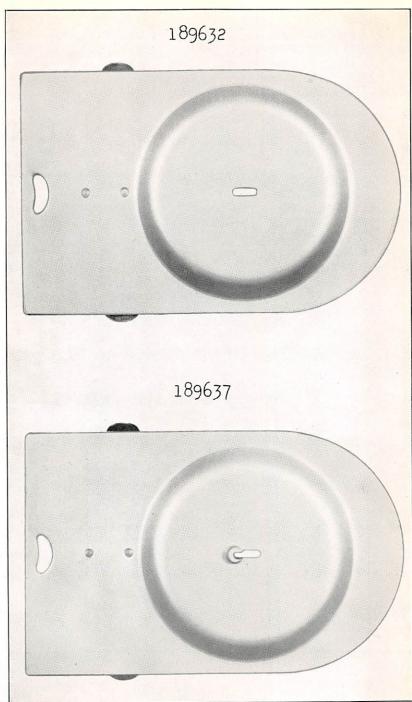



From the library of: Superior Sewing Machine & Supply LLC

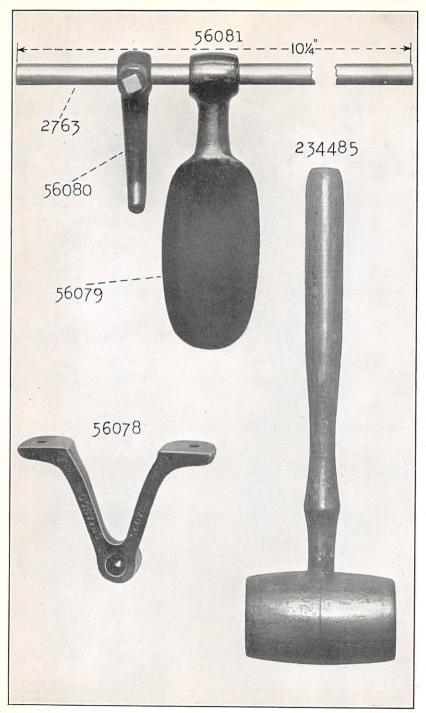

From the library of: Superior Sewing Machine & Supply LLC

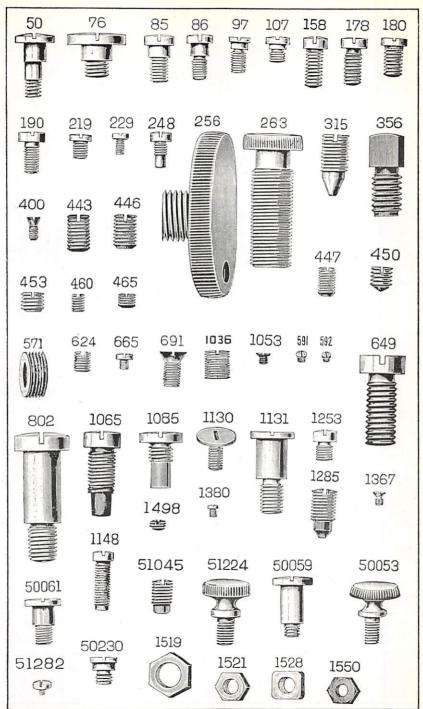

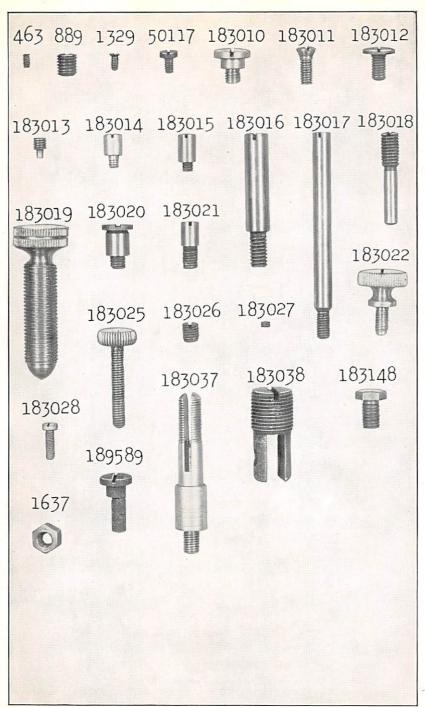

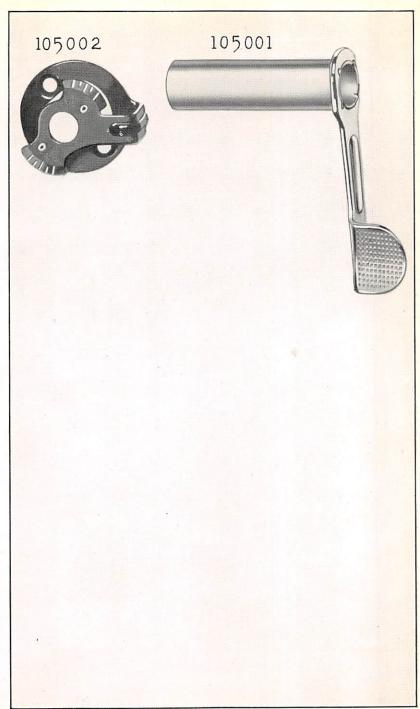

#### ILLUSTRATED LIST OF PARTS

FOR

## CLASS 206K MACHINES

(Nos. 206K10, 206K11, 206K18 and 206K19)

## CONTENTS

							Page
Parts complete f	or Nos. 2	06K18 a	nd 206K	19 Machin	es	 	37
" Special to	Nos. 206	K10 and	206K11	Machines		 	44
Attachments						 	47
Bobbin Winder						 	52
Knee Lifter						 	44
Numerical List of	of Parts					 	55
Obsolete Parts						 	53

## INSTRUCTIONS FOR ORDERING

In ordering from this List, the prefix and affix letters with the part number MUST BE quoted exactly as they are shown in the first column.

A number always indicates the same part in whatever List it may appear, or for whatever machine.

The affix letters (where shown) indicate the style of finish, as follows:-

A. Hardened, Polished, Nickel Plated and Buffed.

A.A. Buffed and Chromium Plated.

A.B. Hardened, Polished, Buffed and Chromium Plated.

A.C. Brown Baking Enamel Finish.
A.D. Grey Baking Enamel Finish.

A.D. Grey Baking Enamel Finish.
 A.E. Hardened, Bright Rumbled and Nickel Plated.

A.F. Hardened, Bright Rumbled and Nickel Plated, Bright Rumbled and Chromium Plated.

A.J. Polished, Nickel Plated and Chromium Plated.

A.K. Hardened, Polished, Nickel Plated and Chromium Plated.

A.L. Heat Treated for Toughness.

B. Polished, Nickel Plated and Buffed.

C. Hardened only.

C.R. Hardened and Merlized.

D. Polished only.

E. Soft, not Polished.

F. Hardened and Polished.

F.J. Hardened, Polished and Nickel Plated.
G. Bright Rumbled and Nickel Plated.

H. Blued.

J. Nickel Plated only.

K. Hardened and Nickel Plated.

L. Brass Plated.

M. Oxidized.

N. Japanned, Dull.

P. Japanned, Bright. P.P. Wrinkle Finish.

R. Merlized.

S. Cadmium Plated.

T. Copper Plated.

T.A. Hardened, Polished, Copper and Nickel Plated and Buffed.

T.B. Copper and Nickel Plated and Polished.

T.J. Copper and Nickel Plated only.

T.K. Hardened, Copper and Nickel Plated.

T.L. Copper and Brass Plated.

T.M. Copper Plated and Oxidized.

U. Zinc Plated.

V. Silver Plated.

W. Polished and Nickel Plated.

X. Black Oxide for Iron and Steel.

X.C. Hardened and Black Oxide for Iron and Steel.

Y. Black Nickel Plated only.

Z. Chromium Plated.

Z.A. Hardened, Polished, Nickel Plated, Buffed and Chromium Plated.

Z.B. Polished, Nickel Plated, Buffed and Chromium Plated.

Z.C. Hardened and Chromium Plated.

Z.D. Polished and Chromium Plated.

Z.G. Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.

Z.J. Nickel and Chromium Plated.

Z.T. Copper and Chromium Plated.

Parts marked with an asterisk (\*) are furnished only when the repairs are made at Factory.

#### PARTS COMPLETE

FOR

### Nos. 206K18 and 206K19 MACHINES

Reverse Feed. For Zig-zag and Straight Line Stitching.

Needle threaded from the front.

No.	Plate		
*†188905	_	Arm with 15404, 189672 and two 15405	
649e	2200	" Binding Screw (3)	
189621	2186	Cover (front)	
1329c	2201	" " ( " ) Screw (2)	
2002	2188	" Dowel Pin (2)	
*4389	2188	" " (for repairs only)	
189506	2184	" Shaft	
189507	2178	" Bushing (front)	
443c	2200	" " ( " ) Set Screw	
188958	2178	п п (back)	
1285c	2200	" " ( " ) Set Screw	
189542	2184	" Connection Belt (To be ordered from Bridgeport)	
188458	2178	" " Pulley	
448c	2183	ıı ıı, ıı ıı Set Screw	
189510	2178	" " " " Spring Ring	
188452	2178	" " complete, Nos. 188458,	two
		each 448c and 189	9510
189512	2177	" Spiral Gear with two 183026c	
183026c	2201	ıı ıı ıı Set Screw	
189505	2176	" Side Cover (back)	
51224zb	2200	" " ( " ) Thumb Screw	
2007z	2188	" Spool Pin	
8879	2188	" " Washer (cloth)	•••
189502	2186	Top Cover with 189504	• • • •
183010h	2201	" " Hinge Screw	•••
189696	2187	" " Spring Washer	
189504	2186	п п Spool Pin	
15282zb	2175	Balance Wheel, 24" pulley, for 206K18 Machine	***
56136	-	$_{\rm II}$ $_{\rm $	
*†105003	_	Bed	•••
250.1	2200	Clause Stan Mation Clamp Saraw	
256zb		Clamp Stop Motion Clamp Screw	
248za		" " Stop Screw " Washer	
2020	2188		•••
32618			
1148c	2200	ıı ıı ıı Set Screw	***

<sup>†</sup>NOTE.—Due to the accuracy required in setting Arm to Bed, these parts cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

```
No.
        Plate
188903
              Face Plate
188904
        2176
                        188903 with two 189541
  107zb 2200
105004
                        Thread Guard
189541
        2186
                         " 105004 with 125373
125373
        2186
                               " Rivet ...
51224zb 2200
                        Thumb Screw
189575
        2176
              Feed Bar ... ...
  315c
        2200
                   " Screw Centre ...
 15445
                       315c with 1519e (2)
        2200
 1519e
                             " Nut ...
188956
        2179
                      Supporting Bracket with two 889c
  889c
        2201
                   11 11
                                  " Set Screw ...
188928
        2185
               11 Dog for 188930
50117c
        2201
                  " Screw (2)
188927
        2177
                  Eccentric with two 183026c ...
183026c
        2201
                     " Set Screw
189577
              Feed Forked Connection ...
        2182
189705
                            189577 with 2049 and 189578
189706
                                  complete, Nos. 1550zj, 1637j, 183016c.
                             183017c, 188925, 188926, 189572 and 189705
 2049
        2188
                         Connection Pin ...
189578
                            " Shaft ...
        2182
189579
        2177
                                   " Adjusting Collar with two 465al
  465al 2200
                                  " Set Screw ...
189550
        2177
              Feed Lifting Eccentric with two 183026c ...
189585
                        Fork with 158e ...
        2181
  158e
       2200
                                 " Clamping Screw
183026c
        2201
                                  Set Screw
189583
        2181
                         Rock Shaft ...
189579
        2177
                          " Adjusting Collar with two 465al
  465al 2200
                              " Set Screw
188952
        2179
                                  Crank with 158e and 125330
  158e
       2200
                                   " Clamping Screw ...
15170
       2188
                                   " Slide Block
125060
        2188
                                         " " Stud
125330
                                            1 15170 with 125060
189588
       2179
              Feed Regulator Connecting Rod
  86c
       2200
                                    " Screw
189589c
       2201
                                      " Stud ...
 460c
       2200
                                      " Set Screw ...
189591
       2187
                           Index ...
189590
       2179
                           Indicator Plate ...
  691za 2200
                             " Screw (2)
```

No.	Plate								
189586	2181	Feed	Regul	ator Leve	r				
183018c	2201	11	11	11	Hinge Scre				
189594	2181		11	11	Thumb Nu				
189593	2187	11	11	"		Sprin			
189592	2187	"	11	"	" "		-	shing	
189595	2179	"	11		Block with				
447c	2200	"	11	ll li	ıı Set S				
183019zb		"	11	"	Screw				
188954	2184		Rock		JCICW				
188955	2177		NOCK !		usting Collar				
465al	2200	11			II II	100		crew	
189571	2177	11	11	11	11 11			two 465	
465al	2200	11	11	11	11 / 11	, –	) Set S		
188925	2176	11	11		necting Linl				
188926	2182	,"	11	" COII	II II	Slide I			
183017c	2201	"		"	11 11	Jide i		Slide Ba	
	2200	- 11	11.		11 11	"	11		Nut
1550zj 189572	2179		11	" Cra	nk with 158			,	
158e	2200	11	"		Clamping				
183016c	2200	11	U		Hinge Sc	The same of			
	2201	"	-11				ıt		
1637j	2201	-11	11	11 11	"	11 140			•••
51045c	2200	Mach	ine Hi	nge Set S	Screw (2)				
189773	2181	Need	le Bar	with 1897	774				
189773 189517	2181 2187	Need	le Bar		774 ng Link with				
Committee of the Commit			le Bar		g Link with		830270		
189517	2187	11	11	Connectir	g Link with	two 1	83027c (lowe		
189517 189518	2187 2187	11	11	Connectir	ng Link with	two 18	830276 (lower (upp	er)	 183011e
189517 189518 189515	2187 2187 2187	11	11	Connectir	ng Link with	two 18 e Block	830276 (lower (upp	er) er) with ) Adju	 183011e sting Screw
189517 189518 189515	2187 2187 2187	11	11	Connectir	ng Link with	two 18 e Block	830276 (lower (upp	er) er) with ) Adju	 183011e sting
189517 189518 189515 183011e	2187 2187 2487 2201	11 11 11	11 11 11	Connectir	ng Link with	two 18 e Block	83027c (lowe (upp ( "	er) er) with ) Adju	 183011e sting Screw
189517 189518 189515 183011e	2187 2187 2187 2201 2200	H H H	II II II	Connectin	g Link with  "Hing ""  ""  "Set S	e Block	830276 (lowe (upp ( " ( "	er) er) with ) Adju ) Cap	183011e sting Screw
189517 189518 189515 183011e 1130e 189519	2187 2187 2187 2201 2200 2187	11 11 11 11	" " "	Connectir	g Link with  "Hing "" "" "" "" "" "" "" ""	e Block	830276 (lowe (upp ( " ( "	er) er) with ) Adju ) Cap	183011e sting Screw Screw
189517 189518 189515 183011e 1130e 189519 183027c	2187 2187 2487 2201 2200 2187 2201	11 11 11 11 11	" " " " " " " " " " " " " " " " " " " "	Connectin	g Link with  "Hing ""  ""  "Set S	e Block	83027cc (lower (upp) ( " " " " " " " " " " " " " " " " " "	er) er) with ) Adju ) Cap	183011e sting Screw Screw
189517 189518 189515 183011e 1130e 189519 183027c 189520	2187 2187 2187 2201 2200 2187 2201 2187	11 11 11 11 11 11	" " " " " " " " " " " " " " " " " " " "	Connectir	g Link with  "Hing ""  ""  "Set S  Stud with  "Adj	e Block " Pin Screw 1400c a	83027cc (lower (upp) ( " " " " " " " " " " " " " " " " " "	er) er) with ) Adju ) Cap :	183011e sting Screw Screw
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c	2187 2187 2487 2201 2200 2187 2201 2187 2200	11 11 11 11 11 11 11 11 11 11 11 11 11	11 11 11 11 11 11	Connectir	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Cap  " Set	Pin Screw a 400c a screw Screw	83027cc (lower (upp ( " " " " " " " " " " " " " " " " " "	er) er) with Adju Cap S	183011e sting Screw Screw
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c	2187 2187 2487 2201 2200 2187 2201 2187 2200 2201	11 11 11 11 11 11	II	Connectir	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Cap	Pin Screw a 400c a screw Screw	83027cc (lower (upp ( " " " " " " " " " " " " " " " " " "	er) er) with Adju Cap S	183011e sting Screw Screw and two
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c 465al	2187 2187 2187 2201 2200 2187 2201 2187 2200 2201 2200		II	Connection	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Cap  " Set  on, Nos. 189	Pin Screw a 400c a usting S Screw Screw 515, 18	830276 (lower (lower (upp ( " " " " " " " " " " " " " " " " " "	er) er) with Adju Cap S 5al 189518	183011e sting Screw
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c 465al	2187 2187 2187 2201 2200 2187 2201 2187 2200 2201 2200		II	Connection	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Cap  " Set	Pin Screw a 400c a usting S Screw Screw 515, 18	83027cc (lower (upp ( "" ( "" and 46 Screw	cer) er) with Adju Cap S 5al 189518	183011e sting Screw Screw and two 189519, 189514,
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c 465al 189695	2187 2187 2187 2201 2200 2187 2201 2187 2200 2201 2200	11 11 11 11 11 11 11 11 11 11 11 11 11		Connection	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Set  on, Nos. 189	Pin Screw a 400c a usting S Screw Screw 515, 18	830276 (lower (upp ( " " " " " " " " " " " " " " " " " "	er) er) with Adju  Cap S 5al 189518  183012c,	183011e sting Screw Screw and two 189519, 189514,
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c 465al 189695	2187 2187 2487 2201 2200 2187 2201 2187 2200 2201 2200 —	11 11 11 11 11 11 11 11 11 11 11 11 11		Connection	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Set  on, Nos. 189  complete,	Pin Screw a 400c a usting S Screw Screw 515, 18	83027cc (lower (upp ( ""	er) er) with Adju  Cap ( 5al 189518  183012c,	183011e sting Screw Screw and two 189519, 189514, 1 189695
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c 465al 189695	2187 2187 2487 2201 2200 2187 2201 2187 2200 2201 2200	11 11 11 11 11 11 11 11 11 11 11 11 11	11 11 11 11 11 11 11 11	Connection  Crank with the Pool of the Connection of the Connectio	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Set  on, Nos. 189  complete,  th 1036c and sition Screw	Pin Screw a 400c a usting S Screw Screw 515, 18	83027cc (lowe (upp ( ""	er) er) with Adju  Cap S 5al 189518  183012c,	183011e sting Screw Screw
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c 465al 189695 189533 188949 1065c 189532	2187 2187 2487 2201 2200 2187 2201 2187 2200 2201 2200 — 2177 2200 2187	11 11 11 11 11 11 11 11 11 11 11 11 11	II	Connection	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Cap  " Set  on, Nos. 189  complete,  th 1036c and sition Screwndicator	Pin Screw a 400c a usting S Screw Screw 515, 18	83027cc (lowe (upp ( ""	er) er) with Adju  Cap ( 5al 189518  183012c, 89520 and	183011e sting Screw Screw
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c 465al 189695 189533 188949 1065c 189532	2187 2187 2187 22187 2200 2187 2201 2187 2200 2201 2200 2177 2200 2187 2200	11 11 11 11 11 11 11 11 11 11 11 11 11		Connection  Crank with the Potential Interest of the Potential Interes	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Cap  " Set  on, Nos. 189  complete,  th 1036c and sition Screwndicator  " Scr	Pin Screw a 400c a usting S Screw Screw 515, 18	83027cc (lower (upp ( ""	er) er) with Adju  Cap ( 5al 189518  183012c, 89520 and	183011e sting Screw Screw
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c 465al 189695 189533 188949 1065c 189532 665zb 189748	2187 2187 2187 22187 2200 2187 2201 2187 2200 2201 2200 — 2177 2200 2187 2200 2176			Connection  Crank with the Height In the Holder	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Set  on, Nos. 189  complete,  th 1036c and sition Screw adicator  " Screw	Pin Screw a 400c a usting S Screw Screw 515, 18	83027cc (lower (upp ( ""	er) er) with	183011e sting Screw Screw
189517 189518 189515 183011e 1130e 189519 183027c 189520 400c 183012c 465al 189695 189533 188949 1065c 189532 6652b	2187 2187 2187 22187 2200 2187 2201 2187 2200 2201 2200 2177 2200 2187 2200			Connection  Crank with the Height In the Holder the Hol	g Link with  " Hing  " "  " "  " Set S  Stud with  " Adj  " Cap  " Set  on, Nos. 189  complete,  th 1036c and sition Screwndicator  " Scr	Pin Screw a 400c a usting S Screw Screw 515, 18 Nos. 1 d 1065c 7 ew 6665zb a	83027cc (lower (upp ( ""	er) er) with	183011e sting Screw Screw

No.	Plate								
624c	2200	Needle E	Bar Ho	lder S	upportin	o Bracl	cet Set Sc	rew	
27795	2186	ii							
183015c	2201	-11	"			"	Hingo	Wash Screw	
189777			11	"	mplete	Nos	1990150	183038c,	190779
103111		11	11	11 - C1	mpiete,	1105.	1030130,		189776
189774	2186	11	" Pir	1					
100700	210=		•						
189523	2187	Needle C							•••
1498c	2200	11	11	Set So					
189525	2186	11			d Guide				
183014zb		11	11		"				•••
189694	-	"					d 1830132		
189527	-	Needle C	lamp,	comp	lete, Nos	. 18301	4zb, 1895	25 and 18	9694
188430	2187	Needle H	lolder	(single	e) with 5	0624d			
50624d	2187	11	11	Clamp	ing Scre	w			
189781	-2/4	Needle H	lolder	(single	e), compl	lete, No	os. 188430	and 1895	527
183013za	2201	Needle S	et Scr	ew					
100010									
189618	2180	Needle V	ibrato	r Am	plitude	Regula	ating Lev		
									vo 624c
189620	2180	"	11		11 .	n	. "		
									Washer
189616	2180	11	-11		11	- 11	11	<ul> <li>Friction</li> </ul>	
									Spring
183228zb	2180	- 11	11		11	11		11	
									g Screw
188436	2180	11	11		п	ij		Frictio	
								ng Screw	
183192c	2183	11	11		11	11	Lev	er Stop S	crew
105002	_		11		11	11	Sca	le	
50156c	2180	11 *	11		11		11	Screw	
189613	2180	11	11		11	11	Sha	ft	
32562	2188	11	11	Cam	with 12	85c			
189599	2177	11	11	11	Shaft S	piral G	ear with	two 18302	6c
183026c	2201	11	- 11	. 11	11	11	" Set Se	crew	
1285c	2200	11	11	- 11	Set Scr	ew			
189600	2184	11	11	Forl	c Connec	tion			
183020c	2201	11	11	11	. 11	H	inge Screv	v	
188417	_	0	11	11	11	Re	ock Shaft	Lever	
188415	2180	11	11	11	-11	SI	iding Bloo		***
1085e	2200	11	11	ii	- 11		11 11	Screw	
189597	2181	11	11	11	Driving	Shaft			
189598	2177	11	11	11	11.	11	Adjustin	g Collar w	ith two
									183026c
183026c	2201	ti .	11	11	- 11	11	11	ıı Se	t Screw
189603	2187	11	11	Leve	er (back)				
180c	2200	11	11	11	( ")	Clamp	ing Screv		

No.	Plate								
189605	2180	Needle '	Vibra	tor Lever S	lide	Bushing			
183021c	2201	11	"	11	11		Screw		
183025zb	2201	11	"	Regulat	ing S	Screw			
188416	2180	"	11	11	-	Slide with			
624c	2200	11	11	11		" Set			
189674		"	11	11		Device,			
100014									6, 189612,
				189613.					and two
				50156c	10		-		
188412	2180					5,5,5,	 D	Cl.	
188412	2180	11	"	Zero Po	SILIO	n Control	Bearii	ig Sieeve	
100000	2207								two 460c
183026c	2201	16	- 11	п	11	11	: 11		Set Screw
460c	2200	-10	4.11		11	- 11	"	11	Stop
									Screw
188413	2180	- 11	11		11	11	11	11	Thrust
									Washer
189612	2180	- 11			11	11	Eccen		453c
453c	2200	.01	11	11 -	11		11	Set	Screw
105001	_	11	- 11	11	11	11	Lever		
56038	2180		11	11	11	11	11	Friction	Washer
189673	2180		11	11	11	11	11	Position	Pin
691za	2200		- 11	11	11	11	11	Screw	
624c	2200	11	11	n,	11	11	11	Set Scre	ew
189615	2180	11			11	. 11	Plate	with	183025zb,
							18	3192c ar	nd 189675
189617		10	11	11	11	11	11	189615 v	vith
						18323	28zb, 1	88436 ar	nd 189616
189675	2180	"	11	11	11			Pin	
32665									
	2175	Presser	(Telephone)						
45237	2188	- 11	11 (	Guide Brack	et w	ith 453c			
45237 453c	2188 2200	l II	11 (	Guide Brack	et w	et Screw			
45237 453c 66564	2188 2200 2179	- 11	11 (	Guide Brack	et w S	et Screw			
45237 453c 66564 85e	2188 2200 2179 2200	l II	" (	Guide Brack  Lifter  Screw	cet w S	et Screw			
45237 453c 66564 85e 32675	2188 2200 2179 2200 2188	11 11	" (	Guide Brack  Lifter  Screw Spring	cet w S	et Screw			
45237 453c 66564 85e	2188 2200 2179 2200	11 11 11	" (	Guide Brack  Lifter  Screw	cet w S	et Screw			
45237 453c 66564 85e 32675	2188 2200 2179 2200 2188	11 11 11 11	11 (1 11 1 11 1 11 S	Guide Brack  Lifter  Screw Spring	cet w S	rith 453c et Screw  			
45237 453c 66564 85e 32675 2070	2188 2200 2179 2200 2188	11 11 11 11 11 11 11 11 11 11 11 11 11	" ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) (	Guide Brack  " " Lifter " Screw Spring " Wash	set w	vith 453c et Screw  			
45237 453c 66564 85e 32675 2070	2188 2200 2179 2200 2188 2188	" " " " " Presser	" (" )	Guide Brack  " " " Lifter " " Screw Spring " Wasl	set w	rith 453c eet Screw			
45237 453c 66564 85e 32675 2070 189645 189644	2188 2200 2179 2200 2188 2188	Presser	" ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) (	Guide Brack  " " " Lifter " " Screw Spring " Wasl  Hinge Pin Shank	set w	rith 453c eet Screw			
45237 453c 66564 85e 32675 2070	2188 2200 2179 2200 2188 2188	" " " " " Presser	" ( ) " ( )	Guide Brack  "Lifter " "Screw Spring " "Wasl  Hinge Pin Shank	set w	rith 453c eet Screw			
45237 453c 66564 85e 32675 2070 189645 189644 189643	2188 2200 2179 2200 2188 2188 —————————————————————————————	Presser	" " S" " Foot " " "	Guide Brack  " " " " " " " " " " " " " " " " " " "	set w	rith 453c eet Screw			
45237 453c 66564 85e 32675 2070 189645 189644	2188 2200 2179 2200 2188 2188	Presser	" " S" " Foot " " "	Guide Brack  " " " Lifter " " Screw Spring " Wasl  Hinge Pin Shank	set w	rith 453c eet Screw			
45237 453c 66564 85e 32675 2070 189645 189644 189643	2188 2200 2179 2200 2188 2188 2185	Presser	Foot	Guide Brack  " " " " " " " " " " " " " " " " " " "	cet w	rith 453c et Screw	  	g, compy 189643	lete, Nos. to 189645
45237 453c 66564 85e 32675 2070 189645 189644 189643	2188 2200 2179 2200 2188 2188 2185	Presser	Foot	Guide Brack  " " " " " " " " " " " " " " " " " " "	cet w	rith 453c eet Screw			lete, Nos. to 189645
45237 453c 66564 85e 32675 2070 189645 189644 189643	2188 2200 2179 2200 2188 2188 2185	Presser	Foot	Guide Brack  " " " " " " " " " " " " " " " " " " "	cet w	rith 453c et Screw	  	g, compy 189643	lete, Nos. to 189645
45237 453c 66564 85e 32675 2070 189645 189644 189643 189646	2188 2200 2179 2200 2188 2188 2185 2201	Presser	Foot	Guide Brack  " " " " " " " " " " " " " " " " " " "	S	cith 453c et Screw Cig-zag St	  	g, compy 189643	lete, Nos. to 189645

No.	Plate					2 4 0			
142013	2183	Rotating	Hook					•••	
188419	-	11	11	142013	with	188418	and four 1053	c	
188422	_	11	11	188419	with	40274 a	nd three 1367	d	
188420	_	11	11	188422	with	188944			
188421		11	11	188420	with	52237			
55623	2192	"	11	Bobbin					
52235	_	"	,,	11	Case				
52236	_	"	11	11	11	52235 v	vith 591f, 1386	0d and	40394
52237	2183	11	11	11	11	52236 v	with 592e, 297	15 and	40393
40393	_	11	-11	11	11	Hinge,	complete, Nos	. 2974,	40392
								and l	125320
188944	2183	11	11		11	Holder			
188957	2182	11	11	11	11	11	Position Brac		***
190zb	Control of the last of the las	"	11	- 11	11	11	11 11	Sci	ew
40392	2183	"	11	.11	- 11	Latch	•••	•••	***
125320	2188		11	11	11		Lever	 To:	
2974	2188	"	. 11	11	"	11	" Fulcrum		18.8.9
2975	2188	11	U		"		Spring Stop Screw		***
592e 591f	2200 2200	11	11	11	11		Regulating S	crew	
40394	2183	" "	11	"	11	1 ension	Spring S		
1380d	2200	"	11	"	"	"	" Screw		
188456	2184			Driving					
189672	2182	"	11	Dirving	; Shai		ng (back) Oil		
188455	2182	"	11	. 11	"				
448c	2183	,,	" -	11	11	Dusin.	( " ) Set		
189547	2182	11		11	11	- 11	(front)		
448c	2183	11		11	11	11	( " ) Set	Screw	
188457	2178	. 11			11	Conne	ction Belt Pul	lley wit	h
								two S	S641c
SS641c	2178	11	11	11	11		Belt Pul	ley Set	Screw
189551	2177		II	11	11	Spiral	Gear with two	o 18302	26c
189556	2178		11	- 11	11	11	" Case wit		.i
189557	2178	ii -	- 11	11	- 11	11		ver	
219j	2200		11	11	-11	11			ew (2)
450al	2200	11	11	11	. 11			t Screw	
183026c	2201	"	. 11	11.	-11	п	" Set Scre	W	•••
1253c	2200	"	11	Screw	•••		•••	•••	
40274	2183	11	11	Section					
1367d	2200	11	11	11	Screv	w			
189552	2177	11	11	Shaft					
189555	2177	11	11	ıı A	djust	ing Coll	ar with two 1:	253c	
1253c	2200		11	11	11	11	Set Screw		
189553	2182	11	11	Shaft E	Bushin	g (back	)		
453c	2200	11	11	11		-	) Set Screw		

125510	2190	ıı Indicator	
125311	2190	" Flange	
51608zw	2190	" Regulating Thumb Nut	
125312	2190	Releasing Disc	
189537	2186	ıı Lever	
97j	2200	" Hinge Screw	
12329	2190	" " Spring	
188914	2186	" " Pin	
183037zw	2201	" Screw Stud	
125314	2190	" Spring	
188911	_	Tension (graduated), complete, Nos. 32576zb, 51608	zw, 125310
		to 125312, 125314, 183037zw, 188909, 188914 and	d two 2102
26075	2188	Thread Cutter and Holder	
	2000		
188997zb	2182	Thread Guard (front of arm)	
100514	0100	There is Take on Growth for 100700	
189514	2186		
1036c	2200	Position Screw for 188949	•••
*188901	2186	Thread Take-up Lever	
*32544	2188	" " Link	
1131c	2200		
*32543	2188		
188902	_	" " 188901, with 32543 and 325	
188907	_	Thread Take-up Lever, complete, Nos. 1131c, 1889	
			189533
188909	2187	" Spring	
32576zb	2188	To the second se	
453c	2200	" " Set Screw	
188929	2185	,	
188930	-	" " ( " " " ) 188929 with	
		two 51282zj, for Zig	-zag Seams
189625	2185	1 3	
51282zj	2200	ıı ıı Screw	
189657	_	Drip Pan with four nails $\frac{5}{8}''$	
*15404			
15405		TO 1	
19409		ii ii iii iii iii iii iii iii iii iii	

### PARTS SPECIAL

TO

### Nos. 206K10 and 206K11 MACHINES

These machines are the same as Nos. 206K18 and 206K19 with the following exceptions.—

No.	Plate										
*†188906	-	Arm	with 154	104, 189	672 an	d two	15405	•••			
15282zb	2175	Balan	ce Whe	el, 2¼"	pulley,	for 20	6K10	Mach	ine		
56136	_	u,	11	21"	n.	n 20	6K11	11			• • • •
*†188951	-	Bed		***						•••	
189712	2179	Press	er Bar	Lifting	and R	eleasi	ng Le	ever I	Brack	et with	
									453c	and 189	715
189711	2187	11	" 11	11	11	11		11	Brack	et Link	
229c	2200	Ti.	11	11	11	11		11		11	
										So	crew
189715	2187	- 11	11	11	11	11		11	11	Pin	
453c	2200		11	- 11	11	.11		11	11	Set Se	rew
189713	_	11	11	- 11	11	- 11		11	11	1897	2
		,						with	1 229c	and 189	711
189716	2186	Tensi	on Rele	easing	Lever						
189719	-	Drip	Pan wit	h four	nails 5″					•••	
	–Due to supplied assemble	separa									

## Knee Lifter

For Machines when used on  $1\frac{1}{8}$ " Tables.

No.	Plate								
5596	2175	Bell	Crank						
189707	2177	11	.11	Bracket	****				
178e	2200	11	- 11	ıı Sc	rew				
5601	2188	11	11	Hinge Pin					
56073	2187	11	11	Spring		•••	•••	•••	***
189708	_	11	-11	5596, with	5601, 5	6073 and	189707		

No.	Plate			
188999	2184	Lifting Lever		
189710	2181	" Connecting Rod		
12416	2188	" " " Joint		
76zj	2200	" " Hinge Screw		
1521zj	2200	" " Lock Nut	*	
802zj	2200	" " Hinge Screw		
2763	2199	Rock Shaft		
56078	2199	Hanger with two wood screws 1" No. 1	0	
56079	2199	" Knee Arm with 356c		
356c	2200	ıı ıı ıı Set Screw		
56080	2199	" Lifting Arm with 356c		
356c	2200	" " Set Screw		
56081	2199	Rock Shaft, complete, Nos. 2763, 56079, 56080 and	two 56	078
189714	_	Knee Lifter, complete, Nos. 76zj, 802zj, 1521zj,	12416,	56081,
		188999, 189708, 189710 and two 178e		

# Knee Lifter

For Machines when used on 13 " tables.

No.	Plate							
5596	2175	Bell Crank						
189707	2177	и и .	Bracket					
178e	2200	11 11	ıı Sc	rew				
5601	2188	n n 1	Hinge Pin					
56073	2187	11 11 5	Spring					
189708			5596, with	5601, 560	73 and 1	89707		
188999	2184	Lifting Leve	er					
189710	2181	11 11	Connect	ing Rod				
12416	2188	11 11	11	11 J	oint			
76zj	2200		11	11	" Hin	ge Screw		
1521zj	2200	11 11	11	" I	Lock Nut		,	
802zj	2200	11 11	Hinge S	crew				
2763	2199	Rock Shaft						
56078	2199	11 11	Hanger wi	th two w	ood screv	vs 1" No. 1	0	
56079	2199	11 11	Knee Arm	with 356	ic			
356c	2200	11 11	. 11 11	Set Scre	w	14.1		
188440	2182	11 11	Lifting Ar	m with 3	56c			
356c	2200	11 11	11 11	Set Sci	rew			
188441	_	Rock Shaft,	complete,	Nos. 2763	3, 56079,	188440 and	two 560	78
		* *						
188442	_	Knee Lifte				Will be a second of the second		8441,
		188999,	189708, 18	9710 and	two 1786	· · · ·		

## Attachments

#### ATTACHMENT SET

No.	Plate		
25527	2191	Cloth Guide	
50053b	2200	" Thumb Screw	
189722	_	Darning Plate (round hole)	
189625	2185	п п Spring	
51282zj	2200	п п Screw	
189723	2194	Darning Plate, for Embroidery and Darning, complete,	Nos.
		189625, 189722 and two 51282zj	
00170			
96418	2193	Embroidery Hoop (round) 7" diam. $\times 7_m^m$ high	
04005	2101	P.W. P.	
36835	2191	Felling Foot	
100040	0101	TT	
120842	2191	Hemmer (foot) $\frac{5}{64}$ " hem	•••
206 ~ 12		Needles (three each sizes II and II)	
$206 \times 13$		Needles (three each sizes 11 and 14)	•••
189697	2192	Needle Threader Handle	
189698	2192		•••
36805			
50315j	2192	" " Ring	
189693	2192	Needle Threader, complete, Nos. 36805, 50315j, 189697 and	
100000	2102	189698, for threading from front to back	
		100000, for threading from front to back	•••
120862	2193	Tin of Oil $(1\frac{1}{3} \text{ oz.})$	
189647	2192	Presser Foot, for straight stitching	
189650	2192	Presser Foot, for narrow zig-zag seams and braiding	
55623	2192	Rotating Hook Bobbin	
25537	2191	Screw Driver (machine)	
86613	2192	" (bobbin case)	•••
188931		Throat Plate	
188932	2194	11 188931 with 189625 and two 51282zj, for stra	3000
0010-	2161		eams
80107	2191	Wrench	•••
00000		Attackment Cat associate No. 25525 2525 26225 262	) = 01.
86609		Attachment Set, complete, Nos. 25527, 25537, 36835, 500	
		80107, 86613, 96418, 120842, 120862, 188932, 189	
		189650, 189693, 189723, three each needles 206×13 size	
		and 14, and five 55623	

No.	Plate		
189152	2193	Buttonhole Knife, ½"	
189151	2193	" " Handle	
234484	2193	" Plate (fibre)	
189682		Hemmer Folder, for 189654	
120840	_	ıı ıı ıı 189653	
189681	_	Foot, for 189654	
189654	2192	" 189681 with 189682, for Rolled Seams .	
189653	2192	" with 120840 and 120841, for Shell Seams .	
120841	_	Tongue for 189653	
189720	2192	Presser Foot, for Appliqué and Round Ornamental Seams .	
86616	2192		
189648	2192	" " Button Sewing	
189649	2192	" Wide Ornamental and Zig-zag Seams	
86617	-	Attachment Set, complete, Nos. 86616, 189151, 189152, 189648, 189649, 189653, 189654, 189720 and 234484, for Buttons Buttonholes and Ornamental Stitching for 86610	
86610	_	Attachment Set, complete, Nos. 86609 and 86617	

NOTE.—Attachment Set No. 86610 is supplied with machine. The attachments on the following pages will be furnished at an extra charge when specified on orders.

#### ATTACHMENTS

#### EMBROIDERY SET

No	Plate	
*189669	_	Double Cord Guide Adjustable Arm (lower)
189678	2196	" " " ( " ) 189669 with 189671
*189671	_	" " ( " ) Thread Guide Tube
*189668	_	" " (upper)
189677	2196	" " ( " ) 189668 with 189670
*189670	_	" " Thread Guide Tube
*189663	2196	" " " Frame
183023j	2196	" " Hinge Screw
189666	2196	" " " " Friction Washer
1607j	2196	n n n n n n Nut
189665	2196	" " Hinge Pin
189664	2196	" " " Spring
188912	_	Holder, Nos. 189663 to 189665 and 189667
*189679	-	" " Shank
*189680	_	" " Hinge Bracket
189667	2196	" " 189679 with 189680
189658	2196	Double Cord Guide, complete, Nos. 188912, 189677, 189678, two
		each 1607j, 183023j and 189666, for Madeira and Richelieu
		Work
189631	_	Embroidery Plate
189625	2185	" Spring
51282zj	2200	" " Screw
189632	2197	Embroidery Plate, complete, Nos. 189625, 189631 and two
		51282zj
234463	2196	Punch, for .055" holes
234467	2196	$_{\rm II}$ $_{\rm II}$ $_{\rm 32}^{\prime\prime}$ $_{\rm II}$ $_{\rm}$ $_{\rm}$ $_{\rm}$ $_{\rm}$ $_{\rm}$
234485	2199	" Mallet
189634	_	Throat Plate (3 spur)
189637	2197	" (\frac{3}{16}" \text{ spur}), 189634 with 189625 and two 51282zj, for
		Madeira Eyelet Work
189639		" " (\frac{1}{8}" \text{spur.})
189642	-	$(\frac{1}{8}'' \text{ spur})$ , 189639 with 189625 and two 51282zj, for
		Madeira Eyelet Work
		100000 100000 100000
189662	-	Embroidery Set, complete, Nos. 189632, 189637, 189642,
		189658, 234463, 234467 and 234485

#### CORDING FOOT

No.	Plate						
189692	2195	Cording Foot, for narrow	v raised	zig-zag	seams a	and overedging	of
		light material					

#### DARNING FOOT

No.	Plate		
121094	2192	Darning Foot (spring) for use with Darning Plate 189723	

#### FEED RESTRICTING ATTACHMENT

No.	Plate						
189700	2195	Feed	Restricting	Attachment	Carrier	4	 
189701	2195	11.	"		Stirrup		 
189702	2195	11	"	n ·	11	Friction	
109zb	2195	11	11	11		Screw	
183024zb	2195	"	11	. 11	Stop So	rew	 
189699	_	Feed	Restricting	g Attachme			
		ar	id 189700 to	189702			 

#### PRESSER FEET

No.	Plate								
189651	2195	Presser I	Foot	, for Curved	Ornam	ental and	Zig-zag S	eams	
189704	2195			" Buttonl					
189645	-	Presser I	Foot	Hinge Pin					
188960	_	11	11	Plate					
189644		11	11	Shank .					
188961	-			ot (hinged),	comp	lete, Nos			
		18964	15 fo	r silk					

#### THROAT PLATES

No.	Plate							
188933	_	Throat	Plate	(narrov	w needle	hole)		 
189625	2185	11	11	Spring				 ***
51282zj	2200	11	11	11	Screw			 
188934		Throat	Plate	188933	with 189	9625 and	two 51282zj	 

#### TRAVERSE FOR JOINING BUTTING EDGES

No.	Plate						
188938	2192	Traverse			 ***	 	
189794	2192	-11	Clamp		 	 	
665zj	2200	11	11	Screw	 	 	

NOTE.—The Clamp and Screw are supplied with Welting Attachment No. 189800 and if the customer already has the latter a second clamp and screw will not be required.

#### WELTING ATTACHMENT

No.	Plate		
*188923	_	Needle Holder (left)	
*188924		" " (right)	
183179f	-	" Adjusting Screw	
*188431	_	п п Body with 50624d	
50624d	2187	" Clamping Screw	٠.
*188404		" " Guide Plate	
1368zk	2195	п п п Screw	
183114c	2195	п п Screw , ,	
182518e		Needle Holder Stop Nut	
183180f			
188405	_	Two-Needle Holder, Nos. 182518e, 183179f, 183180f, 188923 an	d
		188924	
188406		Two-Needle Holder, complete, Nos. 188404, 188405, 188431, tw	0
		each 1368zk and 183114c	
189798	2195	Welt Foot, for very narrow welts	
189751	2195	" " narrow welts	• •
189752	2195	" " broad welts	• •
189795	2195	Traverse, for narrow welts	
189796	2195	" " broad welts	
189794	2192	п п Clamp	
665zj	2200	11 11 Screw	• •
189797	2195	11 Tube, for strip welts	• •
189799	2195	Tension Middle Disc	• •
100000		Water 4 Attachment complete Nos 665gi 100406 10075	1
189800		Welting Attachment, complete, Nos. 665zj, 188406, 18975 189752 and 189794 to 189799	
		189752 and 189794 to 189799	• •

# Bobbin Winder (Automatic)

No.	Plate		
15376zj	2190	Adjusting Arm	
183148zb	2201	" " Screw	
90530	2189	Washer	
15072	2190	Pobbin Position Dia	
188959	2189	Bracket (helt sever)	
180zb	2200	Communication	
15413	2190	Frame	
50059zb	2200	Hinga Carau	
15286	2190	Spring	
15287	2190	Friction Ping (subban)	
15288zb	2190	Puller	
188913	2189	Spindle with 15079	
571c	2200	Worm	
32625zj	2190	Stop Latah	
50230zb	2200	Hings Consu	
15291	2190	Cowing	
32628zj	2190	Thread Guide	
50061zb	2200	Hingo Course	
15366	2190	Spring	
15416zb	2190	Worm Wheel and Thread Cuide Com	
2749	2190	Transfer in the second	
50zb	2200	S	
1528zj	2200	27	
,		" " " " " " " " " " " " " " " " " " "	• •
188922	2189	Bobbin Winder (automatic), complete, Nos. 50zb, 180zb, 571c	0
		1528zj, 2749, 15286 to 15288zb, 15291, 15366, 15376zj, 1541;	3
		15416zb, 32625zj, 32628zj, 50059zb, 50061zb, 50230zl	,
		90530 183148ab 188013 and 188050	

# Obsolete Parts

No.	Plate									
183097c	2195	Needle F	Holder	Adjust	ing Scr	ew i	for 188	918		
188915	_	11	11	Body v	vith 18	3028	8d for	188918		
183028d	2201	11	11	Clampi	ng Scr	ew f	or 188	915		
188916		11	11	Guide !	Plate f	or 1	88918			
188918	2195	Needle H	Holder	(double	e), com	plet	e, Nos.	183097	c, 188915,	188916,
100010		1889	23, 188	924, tw	o 1831	14c	and fo	ur 1368	8zk	
189619	2180	Needle V								
189601	2187	11	11					Shaft		
189604	2181	11	- 11	Leve	r (fron	t) w	ith 889	Эс		
889c	2201		11	11	( 11	) S	et Scre	w		
*189608		11	11	Zero	Positio	on C	ontrol	Bushin	g	***
189611	2180	11	11	11	11		11	11	189608 v	with
100011	2100								189609 and	1 189610
*189609		"	"	11	11		11	Lever		
*189610	_	"		11-	11		11	11	Handle	
400c	2200	Presser	Bar Lif	fting an	d Relea	asin	g Leve	r Brack	et Adjustii	ng Screw
52121		Rotatin	Hool	with t	hree 1	2530				
52090	2188	11	11		d Guar					
02000	2.00									

## NUMERICAL LIST OF PARTS

No.	Plate	
50zb	2200	Bobbin Winder Worm Wheel and Thread
		Guide Cam Screw Stud for 188922
76zj	2200 -	Knee Lifter Lifting Lever Connecting Rod
		Joint Hinge Screw for 188442 and 189714
85e	2200	Presser Bar Lifter Screw
86c	2200	Presser Bar Lifter Screw Feed Regulator Connecting Rod Screw
97j	2200	Tension Releasing Lever Hinge Screw
107zb		Face Plate Screw
109zb	2195	Feed Restricting Attachment Stirrup Screw
		for 189699
158e	2200 .	Feed Lifting Eccentric Fork Clamping Screw
		for 189585
158e	2200	Feed Lifting Rock Shaft Crank Clamping
		Screw for 188952
158e	2200	Feed Rock Shaft Crank Clamping Screw for
		189572
178e	2200	Knee Lifter Bell Crank Bracket Screw for
		188442 and 189714
180c	2200	Needle Vibrator Lever (back) Clamping
		Screw for 189603
180zb	2200	Bobbin Winder Bracket Screw for 188922
190zb		Rotating Hook Bobbin Case Holder Position
		Bracket Screw
219j	2200	Rotating Hook Driving Shaft Spiral Gear
,		Case Cover Screw
229c	2200	Presser Bar Lifting and Releasing Lever
		Bracket Link Screw for 189713
248za	2200	Clamp Stop Motion Clamp Stop Screw
256zb	2200	Clamp Stop Motion Clamp Screw
263zj	2200	Pressure Regulating Thumb Screw
315c	2200	Feed Bar Screw Centre for 15445
356c	2200	Knee Lifter Rock Shaft Knee Arm Set Screw
		for 56079
356c	2200	Knee Lifter Rock Shaft Lifting Arm Set
		Screw for 56080 and 188440
400c	2200	Needle Bar Connecting Stud Adjusting Screw
		for 189520
400c	2200	Presser Bar Lifting and Releasing Lever
		Bracket Adjusting Screw for 206K10 and
		206K11 Machine (Obsolete)
443c		Arm Shaft Bushing (front) Set Screw
447c	2200	Feed Regulator Stop Block Set Screw for
		190505

No.	Plate	
448c	2183	Arm Shaft Connection Belt Pulley Set Screw
448c	2183	for 188452 Rotating Hook Driving Shaft Bushing
1100	2100	(back) Set Screw
448c	2183	Rotating Hook Driving Shaft Bushing
		(front) Set Screw
448c	2183	Rotating Hook Shaft Bushing (front) Set
		Screw
450al	2200	Rotating Hook Driving Shaft Spiral Gear
		Case Set Screw for 189556
453c	2200	Needle Vibrator Zero Position Control
150	2200	Eccentric Set Screw for 189612
453c	2200	Presser Bar Guide Bracket Set Screw for
453c	2200	45237 Presser Bar Lifting and Releasing Lever
4000	2200	Bracket Set Screw for 189712
453c	2200	Rotating Hook Shaft Bushing (back) Set
1000	2200	Screw
453c	2200	Thread Take-up Spring Regulator Set Screw
460c	2200	Feed Regulator Connecting Rod Stud Set
		Screw for 188925
460c	2200	Needle Vibrator Zero Position Control
		Bearing Sleeve Stop Screw for 188412
465al	2200	Feed Forked Connection Shaft Adjusting
		Collar Set Screw for 189579
465al	2200	Feed Lifting Rock Shaft Adjusting Collar Set
		Screw for 189579
465al	2200	Feed Rock Shaft Adjusting Collar (right) Set
465al	2200	Screw for 189571 Feed Rock Shaft Adjusting Collar (left) Set
40041	2200	Screw for 188955
465al	2200	Needle Bar Connecting Stud Set Serow for
		189520
465al	2200	Slack Thread Regulator Set Screw
571c	2200	Bobbin Winder Spindle Worm for 188922
591f	2200	Rotating Hook Bobbin Case Tension Regu-
		lating Screw for 52236
592e	2200	Rotating Hook Bobbin Case Latch Stop
001	2200	Screw for 52237
624c	2200	Needle Bar Holder Supporting Bracket Set
624c	2200	Screw
0240	2200	Needle Vibrator Regulating Slide Set Screw for 188416
624c	2200	Needle Vibrator Zero Position Control Lever
		Set Screw for 189618
S641c	2178	Rotating Hook Driving Shaft Connection
		Belt Pulley Set Screw for 188457

	No.	Plate	
(	349e	2200	Arm Binding Screw
	365zb	2200	Needle Bar Height Indicator Screw for
	,		189776
(	365zj	2200	Welt Traverse Clamp Screw for 189800
	391za		Feed Regulator Indicator Plate Screw
(	391za	2200	Needle Vibrator Zero Position Control Lever
			Screw for 189674
8	802zj	2200	Knee Lifter Lifting Lever Hinge Screw for
			188442 and 189714
8	889c	2201	Feed Bar Supporting Bracket Set Screw for
			188956
	889c	2201	Needle Vibrator Lever (front) Set Screw for
			189604 (Obsolete)
10	036c	2200	Thread Take-up Crank Position Screw for
			188949
1	053c	2200	Rotating Hook Thread Guard Screw for
			188419
1	065c	2200	Needle Bar Crank Position Screw for 188949
1	085e	2200	Needle Vibrator Fork Connection Sliding
			Block Screw
1	130e	2200	Needle Bar Connecting Link Hinge Block
			(upper) Cap Screw for 189533
1	131c	2200	Thread Take-up Lever Link Hinge Screw for
			188907
1	148c	2200	Clamp Stop Motion Flanged Bushing Set
			Screw
1	253c	2200	Rotating Hook Screw for 52121 and 142013
1	253c	2200	Rotating Hook Shaft Adjusting Collar Set
			Screw for 189555 Arm Shaft Bushing (back) Set Screw
1	285c	2200	Arm Shaft Bushing (back) Set Screw
1	285c	2200	Needle Vibrator Cam Set Screw for 32562
1	329c	2201	Arm Cover (front) Screw
	367d	2200	Rotating Hook Section Screw for 188422
1	368zk	2195	Needle Holder Guide Plate Screw for 188406
			and 188918
1	380d	2200	Rotating Hook Bobbin Case Tension Spring
			Screw for 52236
	498c	2200	Needle Clamp Set Screw for 189694
	519e	2200	Feed Bar Screw Centre Nut for 15445
1	521zj	2200	Knee Lifter Lifting Lever Connecting Rod
		2206	Lock Nut for 188442 and 189714
1	528zj	2200	Bobbin Winder Worm Wheel and Thread Guide Cam Screw Stud Nut for 188922
		2222	Feed Rock Shaft Connecting Link Slide Block
]	550zj	2200	Slide Bar Nut for 189706
-	00-	0100	Double Cord Guide Adjustable Arm Hinge
]	607j	2196	
			Screw Nut for 189658

No.	Plate	
1637j	2201	Feed Rock Shaft Crank Hinge Screw Nut for
		189706
2002	2188	Arm Dowel Pin
2007z	2188	Arm Spool Pin
2020	2188	Clamp Stop Motion Clamp Washer
2049	2188	Feed Forked Connection Pin for 189705
2070	2188	Presser Bar Spring Washer
2102	2190	Tension Disc for 188911
2749	2190	Bobbin Winder Worm Wheel and Thread
		Guide Cam Friction Washer for 188922
2763	2199	Knee Lifter Rock Shaft for 56081 and 188441
2974	2188	Rotating Hook Bobbin Case Latch Lever
		Fulcrum Pin for 40393
2975	2188	Rotating Hook Bobbin Case Latch Spring for
		$52237 \qquad \dots \qquad \dots \qquad \dots$
*4389	2188	Arm Dowel Pin (for repairs only)
5596	2175	Knee Lifter Bell Crank for 189708
5601	2188	Knee Lifter Bell Crank Hinge Pin for 189708
8879	2188	Arm Spool Pin Washer (cloth)
12329	2190	Tension Releasing Lever Spring
12416	2188	Knee Lifter Lifting Lever Connecting Rod
		Joint for 188442 and 189714
15072	2190	Bobbin Winder Bobbin Position Pin for
		188913
15170	2188	Feed Lifting Rock Shaft Crank Slide Block
		for 125330
15282zb	2175	Balance Wheel, $2\frac{1}{4}''$ pulley, for 206K10 and
		206K18 Machines
15286	2190	Bobbin Winder Frame Spring for 188922
15287	2190	Bobbin Winder Friction Ring (rubber) for
		188922
15288zb	2190	Bobbin Winder Pulley for 188922
15291	2190	Bobbin Winder Stop Latch Spring for 188922
15366	2190	Bobbin Winder Thread Guide Spring for
		188922
15376zj	2190	Bobbin Winder Adjusting Arm for 188922
*15404	-	Trade Mark for 188905 and 188906
15405	_	Trade Mark Rivet for 188905 and 188906
15413	2190	Bobbin Winder Frame for 188922
15416zb	2190	Bobbin Winder Worm Wheel and Thread
		Guide Cam for 188922
15445		Feed Bar Screw Centre 315c with 1519e
25527	2191	Cloth Guide for 86609
25537	2191	Screw Driver (machine) for 86609
26075	2188	Thread Cutter and Holder
27795	2186	Needle Bar Holder Supporting Bracket Set
		Screw Washer

No.	Plate	
*32543	2188	Thread Take-up Lever Link Hinge Stud for 188902
*32544	2188	Thread Take-up Lever Link for 188902
32562	2188	Needle Vibrator Cam with 1285c
32576zb		Thread Take-up Spring Regulator for 188911
32618	2188	Clamp Stop Motion Flanged Bushing
32625zj	2190	Bobbin Winder Stop Latch for 188922
32628zj	2190	Bobbin Winder Thread Guide for 188922
32665	2175	Presser Bar Presser Bar Spring
32675	2188	Presser Bar Spring
36805	_	Needle Threader Hook Ring for 189693
36835	2191	Felling Foot for 86609
40274	2183	Rotating Hook Section for 188422
40392	2183	Rotating Hook Bobbin Case Latch for 40393
40393	=	Rotating Hook Bobbin Case Hinge, complete, Nos. 2974, 40392 and 125320 for 52237
40394	2183	Rotating Hook Bobbin Case Tension Spring
		for 52236
45237	2188	Presser Bar Guide Bracket with 453c
50053b	2200	Cloth Guide Thumb Screw for 86609
50059zb	2200	Bobbin Winder Frame Hinge Screw for
		188922
50061zb	2200	Bobbin Winder Thread Guide Hinge Screw for 188922
50117c	2201	Feed Dog Screw
50156c	2180	Needle Vibrator Amplitude Regulating Scale
001000		Screw for 189674
50230zb	2200	Bobbin Winder Stop Latch Hinge Screw for 188922
50315j	2192	Needle Threader Hook Screw for 189693
50624d	2187	Needle Holder Clamping Screw for 188430
		and 188431
51045c	2200	Machine Hinge Set Screw
51224zb	2200	Arm Side Cover (back) Thumb Screw
51224zb	2200	Face Plate Thumb Screw
51282zj	2200	Darning Plate Spring Screw for 189723
51282zj	2200	Embroidery Plate Spring Screw for 189632
51282zj	2200	Throat Plate Spring Screw for 188930,
		188932, 188934, 189637 and 189642
51608zw		Tension Regulating Thumb Nut for 188911
52090	2188	Rotating Hook Thread Guard (Obsolete)
52121	_	Rotating Hook with three 1253c (Obsolete)
52235	_	Rotating Hook Bobbin Case for 52236
52236	_	Rotating Hook Bobbin Case 52235 with 591f,
		1380d and 40394 for 52237

No.	Plate	
52237	2183	Rotating Hook Bobbin Case 52236 with
		592e, 2975 and 40393 for 188421
55623	2192	Rotating Hook Bobbin for 86609
56038	2180	Needle Vibrator Zero Position Control Lever
30030	2100	Friction Washer for 189674
56073	2187	Knee Lifter Bell Crank Spring for 189708
56078	2199	Knee Lifter Rock Shaft Hanger with two
		wood screws 1" No. 10, for 56081 and 188441
56079	2199	Knee Lifter Rock Shaft Knee Arm with 356c,
30073	2133	for 56081 and 188441
56080	2199	Knee Lifter Rock Shaft Lifting Arm with
		356c, for 56081
56081	2199	Knee Lifter Rock Shaft, complete, Nos. 2763,
00001		56079, 56080 and two 56078, for 189714
56136		Balance Wheel, 24" pulley, for 206K11 and
		206K19 Machines
66564	2179	Presser Bar Lifter
80107	2191	Wrench for 86609
86609	2101	Attachment Set, complete, Nos. 25527,
80009		Attachment Set, complete, Nos. 25527,
		25537, 36835, 50053b, 80107, 86613,
		96418, 120842, 120862, 188932, 189647,
		189650, 189693, 189723, three each needles
		206x13 sizes 11 and 14, and five 55623,
		for 86610
86610	_	Attachment Set, complete, Nos. 86609 and
		86617
86613	2192	Screw Driver (bobbin case) for 86609
86616	2192	Presser Foot for Buttonhole Work, for 86617
86617	_	Attachment Set, complete, Nos. 86616,
.00017		189151, 189152, 189648, 189649, 189653,
		189654, 189720 and 234484, for Buttons,
		Buttonholes and Ornamental Stitching,
		for 86610
90530	2189	Bobbin Winder Adjusting Arm Screw Washer
		for 188922
96418	2193	Embroidery Hoop (round) 7" diam. × 7m
		high, for 86609
105001		Needle Vibrator Zero Position Control Lever
100001		for 189674
105002		Needle Vibrator Amplitude Regulating Scale
103002		for 189674
105000		
105003	_	Bed for 206K18 and 206K19 Machines
NOTE.	Due to th	he accuracy required in setting Arm to Bed, these
1	barts car	nnot be supplied separately and can only be sent
(	out as a	unit, Arm and Bed assembled.

105004

Face Plate Thread Guard for 189541

No.	Plate	
120840	_	Hemmer Folder for 189653
120841	_	Hemmer Tongue for 189653
120842	2191	Hemmer (foot) $\frac{5}{64}$ " hem, for 86609
120862	2193	Tin of Oil $(1\frac{1}{3} \text{ oz.})$ for 86609
121094	2192	Darning Foot (spring) for use with Darning
		Plate 189723
125060	2188	Feed Lifting Rock Shaft Crank Slide Block
		Stud for 125330
125310	2190	Tension Indicator for 188911
125311	2190	Tension Indicator Flange for 188911
125312	2190	Tension Releasing Disc for 188911
125314	2190	Tension Spring for 188911
125320	2188	Rotating Hook Bobbin Case Latch Lever for
		40393
125330		Feed Lifting Rock Shaft Crank Slide Block
		15170 with 125060 for 188952
125373	2186	Face Plate Thread Guard Rivet for 189541

142013 2183 Rotating Hook with three 1253c for 188419

No. Pla	ate	
182518e -	- No	eedle Holder Stop Nut for 188405
		m Top Cover Hinge Screw
183011e 22		eedle Bar Connecting Link Hinge Block (upper) Adjusting Screw for 189515
183012c 22	201 No	eedle Bar Connecting Stud Cap Screw for 189533
183013za 22	201 Ne	eedle Set Screw for 189694
183014zb 22		eedle Clamp Thread Guide Screw for 189527
183015c 22		eedle Bar Holder Supporting Bracket Hinge Screw for 189777
183016c 22	201 Fe	eed Rock Shaft Crank Hinge Screw for 189706
183017c 22	201 Fe	eed Rock Shaft Connecting Link Slide Block Slide Bar for 189706
183018c 22	201 Fe	eed Regulator Lever Hinge Screw
183019zb 22	201 Fe	ed Regulator Stop Screw
183020c 22	201 No	eedle Vibrator Fork Connection Hinge Screw
183021c 22	201 No	eedle Vibrator Lever Slide Bushing Screw
183022zb 22	201 Pr	esser Foot Thumb Screw
183023j 21		ouble Cord Guide Adjustable Arm Hinge Screw for 189658
183024zb 21	195 Fe	ed Restricting Attachment Stop Screw for 189699
183025zb 22	201 Ne	eedle Vibrator Regulating Screw for 189615
183026c 22		m Shaft Spiral Gear Set Screw for 189512
	201 Fe	ed Eccentric Set Screw for 188927
		ed Lifting Eccentric Set Screw for 189550
		sedle Vibrator Cam Shaft Spiral Gear Set Screw for 189599
183026c 22		cedle Vibrator Fork Driving Shaft Adjusting Collar Set Screw for 189598
183026c 22		eedle Vibrator Zero Position Control Bearing Sleeve Set Screw
183026c 22		otating Hook Driving Shaft Spiral Gear Set Screw for 189551
		edle Bar Connecting Link Set Screw for 189517
		eedle Holder Clamping Screw for 188915 (Obsolete)
183037zw 22		nsion Screw Stud for 188911
183038c 22		edle Bar Holder Supporting Bracket for
183097c 21		edle Holder Adjusting Screw for 188918 (Obsolete)
183114c 21	95 Ne	edle Holder Screw for 188406 and 188918

No.	Plate	
183148zł	2201	Bobbin Winder Adjusting Arm Screw for
10011021	2201	188922
183179f	_	Needle Holder Adjusting Screw for 188405
183180f	_	Needle Holder Stop Screw for 188405
183192c	2183	Needle Vibrator Amplitude Regulating Lever
1001020	2100	Stop Screw for 189615
183228zl	2180	Needle Vibrator Amplitude Regulating Lever
10022021	2100	
*188404		
188405		Needle Holder Guide Plate for 188406 Two-Needle Holder, Nos. 182518e, 183179f,
100409	_	183180f, 188923 and 188924 for 188406
188406		
100400		Two-Needle Holder, complete, Nos. 188404,
		188405, 188431, two each 1368zk and
100410	2100	183114c for 189800
188412	2180	Needle Vibrator Zero Position Control
	2100	Bearing Sleeve with two 460c for 189674
188413	2180	Needle Vibrator Zero Position Control
	2100	Bearing Sleeve Thrust Washer
188415	2180	Needle Vibrator Fork Connection Sliding
		Block
188416	2180	Needle Vibrator Regulating Slide with two
		624c, for 189674
188417	_	Needle Vibrator Fork Connection Rock Shaft
		Lever
188418	2183	Rotating Hook Thread Guard for 188419
188419	-	Rotating Hook 142013 with 188418 and four
		· 1053c, for 188422
188420	_	Rotating Hook 188422 with 188944, for
		188421
188421	_	Rotating Hook 188420 with 52237
188422	_	Rotating Hook 188419 with 40274 and three
		1367d, for 188420
188430	2187	Needle Holder (single), with 50624d, for
		189781
*188431	_	Needle Holder Body with 50624d, for 188406
188436	2180	Needle Vibrator Amplitude Regulating Lever
		Friction Spring Screw Washer for 189617
188440	2182	Knee Lifter Rock Shaft Lifting Arm, with
		356c, for 188441
188441	_	Knee Lifter Rock Shaft, complete, Nos. 2763,
		56079, 188440 and two 56078, for 188442
188442	-	Knee Lifter, complete, Nos. 76zj, 802zj,
		1521zj, 12416, 188441, 188999, 189708,
		189710 and two 178e, for 206K10 and
		206K11 Machines when used on 13 " tables
188452	2178	Arm Shaft Connection Belt Pulley, complete,
		Nos. 188458, two each 448c and 189510

No.	Plate	
188455	2182	Rotating Hook Driving Shaft Bushing (back)
188456	2184	Rotating Hook Driving Shaft
188457	2178	Rotating Hook Driving Shaft Connection
		Belt Pulley with two SS641c
188458	2178	Arm Shaft Connection Belt Pulley for 188452
*188901	2186	Thread Take-up Lever for 188902
188902	-	Thread Take-up Lever 188901 with 32543
		and 32544, for 188907
188903	-	Face Plate for 188904
188904	2176	Face Plate 188903 with two 189541
*188905	-	Arm with 15404, 189672 and two 15405, for
		206K18 and 206K19 Machines
*188906	_	Arm with 15404, 189672 and two 15405, for
		206K10 and 206K11 Machines
NOTE	-Due to th	he accuracy required in setting Arm to Bed, these
*	parts car out as a	not be supplied separately and can only be sent unit, Arm and Bed assembled.
188907	_	Thread Take-up Lever, complete, Nos. 1131c,
		188902 and 189533
188909	2187	Thread Take-up Spring for 188911
188911	_	Tension (graduated), complete, Nos. 32576zb,
		51608zw, 125310 to 125312, 125314,
		183037zw, 188909, 188914 and two 2102
188912	-	Double Cord Guide Holder, Nos. 189663 to
		189665 and 189667 for 189658
188913	2189	Bobbin Winder Spindle with 15072, for 188922
188914	2186	Tension Releasing Pin for 188911 Needle Holder Body with 183028d, for 188918
188915	_	(Obsolete)
188916		Needle Holder Guide Plate for 188918
100010		(Obsolete)
188918	2195	Needle Holder (double), complete, Nos.
100010	2100	183097c, 188915, 188916, 188923, 188924,
		two 183114c and four 1368zk (Obsolete)
188922	2189	Bobbin Winder (automatic), complete, Nos.
		50zb, 180zb, 571c, 1528zj, 2749, 15286 to
		15288zb, 15291, 15366, 15376zj, 15413,
		15416zb, 32625zj, 32628zj, 50059zb,
		50061zb, 50230zb, 90530, 183148zb,
		188913 and 188959
*188923	-	Needle Holder (left) for 188405 and 188918
*188924		Needle Holder (right) for 188405 and 188918
188925	2176	Feed Rock Shaft Connecting Link with
100000	2122	460c, for 189706
188926	2182	Feed Rock Shaft Connecting Link Slide
10000=	21	Block for 189706

188927 2177 Feed Eccentric with two 183026c

No.	Plate	
188928	2185	Feed Dog for 188930
188929	2185	Throat Plate (with oblong needle hole) for
		188930
188930	_	Throat Plate (with oblong needle hole)
		188929 with 189625 and two 51282zj, for
		zig-zag seams
188931	_	Throat Plate for 188932
188932	2194	Throat Plate 188931 with 189625 and two
		51282zj, for straight seams, for 86609
188933		Throat Plate (narrow needle hole) for 188934
188934		Throat Plate 188933 with 189625 and two
		51282zj
188938	2192	Traverse for joining butting edges
188944	2183	Rotating Hook Bobbin Case Holder for 188420
188949	2177	Needle Bar Crank with 1036c and 1065c
*188951	_	Bed, for 206K10 and 206K11 Machines
NOTE.	-Due to t	he accuracy required in setting Arm to Bed, these
	parts ca	nnot be supplied separately and can only be sent
	out as a	unit, Arm and Bed assembled.
188952	2179	Feed Lifting Rock Shaft Crank with 158e and
		125330
188954	2184	Feed Rock Shaft
188955	2177	Feed Rock Shaft Adjusting Collar (left) with
		two 465al
188956	2179	Feed Bar Supporting Bracket with two 889c
188957	2182	Rotating Hook Bobbin Case Holder Position
		Bracket
188958	2178	Arm Shaft Bushing (back)
188959	2189	Bobbin Winder Bracket (belt cover) for
		188922
188960	_	Presser Foot Plate for 188961
188961	-	Presser Foot (hinged) for silk, complete, Nos.
		188960, 189644 and 189645
1889972		Thread Guard (front of arm)
188999	2184	Knee Lifter Lifting Lever for 188442 and
		189714
189151	2193	Buttonhole Knife Handle for 86617
189152	2193	Buttonhole Knife $\frac{1}{2}$ " for 86617
189502	2186	Arm Top Cover with 189504
189504	2186	Arm Top Cover Spool Pin for 189502
189505	2176	Arm Shaft
189506	2184	
189507	2178 2178	Arm Shaft Bushing (front) Arm Shaft Connection Belt Pulley Spring
189510	2178	To: 6 1004F0
189512	2177	
189514	2186	TI 1 T-1 C 1 ( 100700
100014	2100	Inread Take-up Crank for 189533

No.	Plate	
189515	2187	Needle Bar Connecting Link Hinge Block
		(upper) with 183011e, for 189695
189517	2187	Needle Bar Connecting Link with two
		183027c, for 189695
189518	2187	Needle Bar Connecting Link Hinge Block
EFRITATION OF THE		(lower) for 189695
189519	2187	Needle Bar Connecting Link Hinge Pin for
100010	2101	189695
189520	2187	Needle Bar Connecting Stud with 400c and
100020	2101	465al, for 189533
189523	2187	Needle Clamp for 189694
189525	2186	Needle Clamp Thread Guide for 189527
189527		Needle Clamp, complete, Nos. 183014zb,
100027		189525 and 189694, for 189781
189532	2187	Needle Bar Height Indicator for 189776
189532	2101	Needle Bar Connection, complete, Nos. 1130e,
189933	-	183012c, 189514, 189520 and 189695, for
100505	2100	188907 Tension Releasing Lever for 206K18 and
189537	2186	
100500	2100	206K19 Machines Slack Thread Regulator
189538	2186	Face Plate Thread Guard 105004 with 125373,
189541	2186	
100710	2104	for 188904 Arm Shaft Connection Belt (order from
189542	2184	
100545	0100	Bridgeport)
189547	2182	Rotating Hook Driving Shaft Bushing
100770	0155	(front) Feed Lifting Eccentric with two 183026c
189550	2177	
189551	2177	Rotating Hook Driving Shaft Spiral Gear
		with two 183026c
189552	2177	Rotating Hook Shaft
189553	2182	Rotating Hook Shaft Bushing (back)
189554	2182	Rotating Hook Shaft Bushing (front)
189555	2177	Rotating Hook Shaft Adjusting Collar with
		two 1253c
189556	2178	Rotating Hook Driving Shaft Spiral Gear
		Case with 450al
189557	2178	Rotating Hook Driving Shaft Spiral Gear
		Case Cover
189571	2177	Feed Rock Shaft Adjusting Collar (right)
		with two 465al
189572	2179	Feed Rock Shaft Crank with 158e, for 189706
189575	2176	Feed Bar
189577	2182	Feed Forked Connection for 189705
189578	2182	Feed Forked Connection Shaft for 189705
189579	2177	Feed Forked Connection Shaft Adjusting
		Collar with two 465al

No.	Plate	
189579	2177	Feed Lifting Rock Shaft Adjusting Collar
		with two 465al
189583	2181	Feed Lifting Rock Shaft
189585	2181	Feed Lifting Eccentric Fork with 158e
189586	2181	Feed Regulator Lever
189588	2179	Feed Regulator Connecting Rod
189589c	2201	Feed Regulator Connecting Rod Stud
189590	2179	Feed Regulator Indicator Plate
189591	2187	Feed Regulator Index
189592	2187	Feed Regulator Lever Thumb Nut Spring
		Bushing
189593	2187	Feed Regulator Lever Thumb Nut Spring
189594	2181	Feed Regulator Lever Thumb Nut
189595	2179	Feed Regulator Stop Block with two 447c
189597	2181	Needle Vibrator Fork Driving Shaft
189598	2177	Needle Vibrator Fork Driving Shaft Adjusting
		Collar with two 183026c
189599	2177	Needle Vibrator Cam Shaft Spiral Gear with
		two 183026c
189600	2184	Needle Vibrator Fork Connection
189601	2187	Needle Vibrator Fork Connection Rock
100001	210.	Shaft (Obsolete)
189603	2187	Needle Vibrator Lever (back) with 180c
189604	2181	Needle Vibrator Lever (front) with 889c
100001	2101	(Obsolete)
189605	2180	Needle Vibrator Lever Slide Bushing
*189608	_	Needle Vibrator Zero Position Control
3 2		Bushing for 189611 (Obsolete)
*189609		Needle Vibrator Zero Position Control Lever
		for 189611 (Obsolete)
*189610	_	Needle Vibrator Zero Position Control Lever
		Handle for 189611 (Obsolete)
189611	2180	Needle Vibrator Zero Position Control
		Bushing 189608 with 189609 and 189610
		(Obsolete)
189612	2180	Needle Vibrator Zero Position Control
		Eccentric with 453c, for 189674
189613	2180	Needle Vibrator Amplitude Regulating Shaft
		for 189674
189615	2180	Needle Vibrator Zero Position Control Plate
		with 183025zb, 183192c and 189675, for
		189617
189616	2180	Needle Vibrator Amplitude Regulating Lever
		Friction Spring for 189617
189617	-	Needle Vibrator Zero Position Control Plate
		189615 with 183228zb, 188436 and 189616,
		for 189674

No.	Plate	
189618	2180	Needle Vibrator Amplitude Regulating Lever with 189673 and two 624c, for 189674
189619	2180	Needle Vibrator Amplitude Regulating Scale (Obsolete)
189620	2180	Needle Vibrator Amplitude Regulating Lever Distance Washer for 189674
189621	2186	Arm Cover (front)
189625	2185	Darning Plate Spring for 189723
189625	2185	Embroidery Plate Spring for 189632
189625	2185	Throat Plate Spring for 188930, 188932,
		188934, 189637 and 189642
189631	_	Embroidery Plate for 189632
189632	2197	Embroidery Plate, complete, Nos. 189625,
		189631 and two 51282zj, for 189662, for
		Embroidery and Darning
189634		Throat Plate $(\frac{3}{16}" \text{ spur})$ , for 189637
189637	2197	Throat Plate $(\frac{3}{16}'' \text{ spur})$ , 189634 with 189625
		and two 51282zj for 189662, for Madeira Eyelet Work
189639		Throat Plate $(\frac{1}{8}'' \text{ spur})$ for $189642$
189642		Throat Plate ( $\frac{1}{8}$ " spur), 189639 with 189625
		and two 51282zj for 189662, for Madeira
		Eyelet Work
189643	_	Presser Foot Sole for 189646
189644	_	Presser Foot Shank for 188961 and 189646
189645	_	Presser Foot Hinge Pin for 188961 and 189646
189646	2185	Presser Foot (hinged), complete, Nos. 189643
		to 189645, for Zig-zag Stitching
189647	2192	Presser Foot for Straight Stitching, for 86609
189648	2192	Presser Foot for Button Sewing, for 86617
189649	2192	Presser Foot for Wide Ornamental and
100050	2102	Zig-zag Seams, for 86617
189650	2192	Presser Foot for Narrow Zig-zag Seams and Braiding, for 86609
189651	2195	Presser Foot for Curved Ornamental and
		Zig-zag Seams
189653	2192	Hemmer Foot with 120840 and 120841 for
		Shell Seams, for 86617
189654	2192	Hemmer Foot 189681 with 189682 for Rolled
189657		Seams, for 86617 Drip Pan with four nails $\frac{5}{8}$ ", for 206K18
100001		and 206K19 Machines
189658	2196	Double Cord Guide, complete, Nos. 188912,
		189677, 189678, two each 1607j, 183023j
		and 189666 for Madeira and Richelieu
		Work, for 189662

No.	Plate	
189662	_	Embroidery Set, complete, Nos. 189632,
		189637, 189642, 189658, 234463, 234467
		and 234485
*189663	2196	Double Cord Guide Adjustable Arm Frame
		for 188912
189664	2196	Double Cord Guide Hinge Spring for 188912
189665	2196	Double Cord Guide Hinge Pin for 188912
189666	2196	Double Cord Guide Adjustable Arm Hinge
		Screw Friction Washer for 189658
189667	2196	Double Cord Guide Shank 189679 with
		189680, for 188912
*189668	_	Double Cord Guide Adjustable Arm (upper)
		for 189677
*189669	_	Double Cord Guide Adjustable Arm (lower)
		for 189678
*189670	_	Double Cord Guide Adjustable Arm (upper)
		Thread Guide Tube for 189677
*189671	_	Double Cord Guide Adjustable Arm (lower)
		Thread Guide Tube for 189678
189672	2182	Rotating Hook Driving Shaft Bearing (back)
		Oil Tube for 188905 and 188906
189673	2180	Needle Vibrator Zero Position Control Lever
	1	Position Pin for 189618
189674	_	Needle Vibrator Regulating Device, com-
		plete, Nos. 691za, 56038, 105001, 105002,
		188412, 188416, 189612, 189613, 189617,
		189618, 189620 and two 50156c
189675	2180	Needle Vibrator Zero Position Control Plate
		Pin for 189615
189677	2196	Double Cord Guide Adjustable Arm (upper)
		189668 with 189670, for 189658
189678	2196	Double Cord Guide Adjustable Arm (lower)
*1000=0		189669 with 189671, for 189658 Double Cord Guide Shank for 189667
*189679	_	
*189680	-	Double Cord Guide Shank Hinge Bracket for
		189667
189681	_	Hemmer Foot for 189654
189682		Hemmer Folder for 189654
189692	2195	Cording Foot for Narrow Raised Zig-zag
100000	0100	Seams and Overedging of Light Material
189693	2192	Needle Threader, complete, Nos. 36805, 50315j, 189697 and three 189698 for
		threading from front to back, for 86609
100004		Needle Clamp 189523 with 1498c and
189694		183013za, for 189527
189695		Needle Bar Connection, Nos. 189515, 189517,
100000		189518 and two 189519 for 189533
		100010 and 000 100010 101 100000 101

No.	Plate	
		1 T C III C C : III I
189696	2187	Arm Top Cover Hinge Screw Spring Washer
189697	2192	Needle Threader Handle for 189693
189698	2192	Needle Threader Hook for 189693
189699		Feed Restricting Attachment, complete, Nos. 109zb, 183024zb and 189700 to 189702
189700	2195	Feed Restricting Attachment Carrier for
		189699
189701	2195	Feed Restricting Attachment Stirrup for
		189699
189702	2195	Feed Restricting Attachment Stirrup Friction
		Washer for 189699
189704	2195	Presser Foot for Buttonholes 1 wide
189705	-	Feed Forked Connection 189577 with 2049
		and 189578, for 189706
189706	_	Feed Forked Connection, complete, Nos.
		1550zj, 1637j, 183016c, 183017c, 188925,
189707	2177	188926, 189572 and 189705 Knee Lifter Bell Crank Bracket for 189708
189708	2111	
109700		Knee Lifter Bell Crank 5596 with 5601, 56073 and 189707; for 188442 and 189714
189710	2181	Knee Lifter Lifting Lever Connecting Rod
100710	2101	for 188442 and 189714
189711	2187	Presser Bar Lifting and Releasing Lever
100111	210.	Bracket Link for 189713
189712	2179	Presser Bar Lifting and Releasing Lever
		Bracket with 453c and 189715, for 189713
189713	-	Presser Bar Lifting and Releasing Lever
		Bracket 189712 with 229c and 189711,
		for 206K10 and 206K11 Machines
189714	_	Knee Lifter, complete, Nos. 76zj, 802zj,
		1521zj, 12416, 56081, 188999, 189708,
		189710 and two 178e, for 206K10 and
		206K11 Machines when used on 11/8" Tables
189715	2187	Presser Bar Lifting and Releasing Lever
Tel servanos uma	202700000000	Bracket Pin for 189712
189716	2186	Tension Releasing Lever for 206K10 and
100=10		206K11 Machines
189719	_	Drip Pan with four nails 5", for 206K10 and
189720	2192	206K11 Machines
100720	2192	Presser Foot, for Appliqué and Round Ornamental Seams, for 86617
189722	_	
189723	2194	Darning Plate (round hole) for 189723 Darning Plate, complete, Nos. 189625,
200120	-101	189722 and two 51282zj for Embroidery
		and Darning, for 86609
189748	2176	Needle Bar Holder for 189776
189751	2195	Welt Foot for narrow welts, for 189800

No.	Plate	
NO.	Plate	
189752	2195	Welt Foot for broad welts, for 189800
189773	2181	Needle Bar with 189774 for 189777
189774	2186	Needle Bar Pin for 189773
189776	_	Needle Bar Holder 189748 with 665zb and
		189532 for 189777
189777	_	Needle Bar Holder, complete, Nos. 183015c,
		183038c, 189773 and 189776
189781	_	Needle Holder (single), complete, Nos. 188430
		and 189527
189794	2192	Welt Traverse Clamp for 189800
189795	2195	Welt Traverse for narrow welts, for 189800
189796	2195	Welt Traverse for broad welts, for 189800
189797	2195	Welt Tube for strip welts, for 189800
189798	2195	Welt Foot for very narrow welts, for 189800
189799	2195	Tension Middle Disc for 189800
189800	_	Welting Attachment, complete, Nos. 665zj,
		188406, 189751, 189752 and 189794 to
		189799

No.	Plate		
234463	2196	Punch, for .055" holes, for 189662	
234467	2196	Punch, for $\frac{3}{32}$ " holes, for 189662	
234484	2193	Buttonhole Knife Plate (fibre) for 86617	
234485	2199	Punch Mallet for 189662	

