Form 3106w (454) Printed in U. S. A.



SINGER

MACHINE No. 240w3

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To insure easy running and prevent unnecessary wear of parts which are in movable contact, the machine requires oiling. Use "TYPE C" OIL, sold by Singer Sewing Machine Company.

BEFORE STARTING THE MACHINE, fill reservoir to "high" mark on sight gauge, as instructed in Form 3093W.

Check oil level when machine is not running. Never allow level to drop below "low" mark on sight gauge.

The addition of oil should not be necessary more than once every few months.

Copyright, U. S. A., 1947 and 1954, by The Singer Manufacturing Company All Rights Reserved for all Countries

INDEX

Accessories	Pa	ge 10
Attachments and Accessories	••	11
Cloth Plates	•	11
Finger Guard	•	12
Fittings	•	12
Foot Lifters12,13	&	14
Knee Lifter	••	10
Machine No.240w3	••	5
Machine Base	••	14
Numerical List of Parts	••	15
Thread Unwinder	••	11

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed.

AL—Heat Treated for Toughness.

ALX—Heat Treated for Toughness and Black Oxide.

B-Polished, Nickel Plated and Buffed.

C—Hardened only.

D—Polished only.

E-Soft, Not polished.

F-Hardened and Polished.

J—Nickel Plated only.

R-Merlized.

X-Black Oxide, for Iron and Steel.

XC-Hardened and Black Oxide, for Iron and Steel.

Y-Black Nickel Plated only.

Z-Chromium Plated.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series

1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers.

- 1501 to 1800, 201501 to 201800 and 351501 to 351800 are Nut Numbers.
- 1801 to 2000, 201801 to 202000 and 351801 to 352000 are Roller Numbers.
- 2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

5



MACHINE No. 240w3

HIGH SPEED. SINGLE NEEDLE. SINGLE THREAD CHAIN STITCH. DROP FEED. LONG STITCH. NEEDLE BAR TAKE-UP. ROTARY LOOPER. PLAIN TENSION.

FOR CAP AND MILLINERY WORK, EDGE BASTING AND STITCHING CASKET LININGS.

No.	Plate	Name	
243725P	15620	Cloth Plate	
Note:	Cloth P	late 243725X will be furnished in place	
	of 24372	25P if so specified on order.	
243602	15620	Cloth Plate Gasket	
222119X	15620	" " Position Pin	
691X	15620	" " Screw (3)	
25878	15621	Edge Guide	
51224B	15621	" " Thumb Screw	
243614P	15619	Face Plate	
200166X	15619	" " Screw (2)	
243615	15618	Feed Bar with 200394C and 243634	
243616	15618	" " Carrier with 243618 and two	

No. Plate Name 243617 15618 Feed Bar Carrier Hinge Stud 243618 15618 """""Beari 200364C 15618 """""Set Stud	
243618 15618 " " " " Beari 200364C 15618 " " " " Set S	
200364C 15618 " " " " Set S	ng
243619 15618 " " Hinge Stud	
243620 15618 " " " " Bearing	
243681 15618 " " " " Collar with 200)141F
200141F 15618 " " " " " Set Scr	ew
200394C 15618 " " " " Set Screw	
243621 15618 " " Slide Block	
243630 15621 " Dog, for Cap Work, for 24372	1
243631 15618 " " Adjusting Plate	
202F 15618 " " " Screw	
176D 15621 " " Screw	
243726 15618 " Driving Connection Link with	L
243633	
243633 15618 Feed Driving Connection Link Bea	r ing
243634 15618 " " " Hinge	e Stud
243635 15618 " " Link with 243636	
243636 15618 " " " Bearing	
243743 15618 "Lubricating Wick	
243727 15618 "Regulating Connection	
243638 15618 " " Hinge	Pin
243639 15618 " " Crank	
243640 15618 " " Bushing	
	sition
Screw	
200380C 15618 Feed Regulating Crank Bushing Po Screw Check Screw	sition
243641 15618 Feed Regulating Crank Link with 2	43642
243642 15618 " " " Bear	
243728 15618 " " Wheel (indexed) v	vith
243638	
243638 350555C 15618 Feed Regulating Wheel Lock Screw	v
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """	Lever
350555C 15618 Feed Regulating Wheel Lock Screw	
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 " " " " " 200122X 15618 " " " " " Cap Screw	Lever "
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 " " " " " 200122X 15618 " " " " " Cap Screw 213949 15618 Feed Regulating Wheel Lock Screw	Lever "
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 " " " " " 200122X 15618 " " " " " Cap Screw	Lever "
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever "
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever " v
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever " v
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever " v
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever '' o 744
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever '' o 744
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever '' o 744
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever '' o 744
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever '' o 744
350555C 15618 Feed Regulating Wheel Lock Screw 243644 15618 """"""""""""""""""""""""""""""""""""	Lever " o 744 asket

No.	Plate	Name
243649	15620	Looper Safety Guard
243710	15620	" " Compression Spring
243650	15620	" " Post (2)
691X	15620	" " " Screw (2)
350558X	15603	" Set Screw (long)
350559X	15603	" " (short)
243746	15603	" Shaft with 350558X and 350559X
243652	15603	" " Bearing (back)
243653	15603	" " (front)
243742	15603	" " End Thrust Adjusting Col-
243145	10000	lar with two 200392C
200392C	15603	Looper Shaft End Thrust Adjusting Col-
2003/20	15005	lar Set Screw
243741	15603	Looper Shaft End Thrust Bushing
243682	15603	"Washer
1368E	15603	" " Screw
243604P	15603	Machine Pulley (aluminum alloy
2400041	19003	casting) for 3/8 in. "V" belt (outside
		diam. of belt groove 2.6 in.) (rim
		diam. $3-3/16$ in.) with two 200379C
Note:	Machine	Pulley 243604P furnished with this
11010.		unless otherwise specified on order.
243731	15603	Machine Pulley 243604P with 243606
	10000	and 243738
243605P	15603	Machine Pulley (aluminum alloy
		casting) for 5/16 in. round belt (diam.
		of belt groove 1-13/32 in.) (rim
		diam. 3-3/16 in.) with two 200379C
243732	15603	Machine Pulley 243605P with 243606
		and 243738
350419X	15603	Machine Pulley Adjusting Screw
243606	15603	" " Ball Bearing
243738	15603	" " Gasket
200379C	15603	" " Set Screw
243607	15603	" " Shaft
243608	15603	" " 243607 with
		243609
243609	15603	Machine Pulley Shaft Ball Bearing
243611	15603	" " Sleeve
243612	15603	" " " " 243611 with
		243613
243613	15613	Machine Pulley Shaft Sleeve Oil Seal
200958X	15603	" " " Set Screw
243654	15601	Needle Bar with 9611 and 200141F
243655	15601	" " Bushing (2)
243656	15601	" " Connecting Link
243657	15601	" " Stud with
		200086C and 206758
206758	15601	Needle Bar Connecting Stud Oil Packing
00000/-		(wick)
200086C	15601	Needle Bar Connecting Stud Pinch Screw

7

243658 15602 Needle Bar Driving Connection with 243659 and 243660 243659 15602 Needle Bar Driving Connection Bushing (lower) 243661 15602 Needle Bar Driving Crank with 200058D 243661 15602 Needle Bar Driving Crank 243661 with 243606 243663 15602 Needle Bar Driving Crank Ball Bearing 200058D 2606 15602 " " " " Pinch Screw 243662 15602 " " " " Pinch Screw 243663 15602 " " " " Shaft with 243740 243664 15602 " " " " Oil Stop 243665 15602 " " " " Oil Stop 243664 15601 " " " Thread Tube 200141F 15601 " Set Screw 243665 15620 " " " Gasket 200064X 15620 " " " " Gasket 200064X 15620 " " " Bushing 243663 15601 " " " Bushing 243663 15601 " " " Rock Shaft 200201C 15601 " " " Rock Shaft 201052C 15601 " " " Rock Shaft	No.	Plate	Name
243659 and 243660 243659 15602 243660 15602 243660 15602 243661 15602 24363 15602 24363 15602 24363 15602 24363 15602 24363 15602 243641 15602 243652 15602 243663 15602 243664 15602 243669 15602 243669 15602 243669 15602 243669 15602 243669 15602 243669 15602 243669 15602 243669 15602 243669 15602 243664 15601 24365 15602 243664 15601 243665 15620 200141F 15601 243665 15620 243666 15620 243667 15620			Needle Bar Driving Connection with
(lower) (lower) 243660 15602 Needle Bar Driving Connection Bushing (upper) 243661 15602 Needle Bar Driving Crank with 200058D 243663 15602 Needle Bar Driving Crank Ball Bearing 200058D 243662 15602 " " " " " Binch Screw 243662 15602 " " " " " Shaft with 243740 243663 15602 " " " " " 243662 with 243669 243609 15602 " " " " " 243662 with 243669 243609 15602 Needle Bar Driving Shaft Ball Bearing 200136C 200136C 15602 Needle Bar Driving Shaft Oiling Wick 243664 15601 " " " " Oiling Felt 9611 15601 9611 15601 " Screw 243665 243665 15620 " " " Gasket 200064X 15620 " " " " Gasket 200064X 15601 " " " " Gasket 200064X 15602 " " " " Gasket 200064X 15601 " " " " Gasket 200064X 15601 " " " " Gasket 200064X 15601 " " " " Gasket 200201C 15601 " " " " " Gaske			
243660 15602 Needle Bar Driving Connection Bushing (upper) 243661 15602 Needle Bar Driving Crank with 243606 243683 15602 Needle Bar Driving Crank 243661 with 243606 243605 15602 Needle Bar Driving Crank Ball Bearing 200058D 243662 15602 " " " " " Pinch Screw 243663 15602 " " " " 243662 with 243664 243609 15602 " " " " 243662 with 243660 243609 15602 Needle Bar Driving Shaft Ball Bearing 200136C 243740 15602 Needle Bar Driving Shaft Oiling Wick 243664 15601 " " Oiling Felt 9611 15601 " Set Screw 243665 15620 Oil Level Indicator 243666 15620 " " " Gasket 200064X 15601 " " " Screw (12) 243665 15601 " " " Bushing 243663 15601 " " " Lifter 200010C 15602 " " " " Rock Shaft 201052C 15601 " " " " Rock Shaft 201052C 15602 " " "	243659	15602	Needle Bar Driving Connection Bushing
(upper) 243661 15602 Needle Bar Driving Crank with 200058D 243683 15602 Needle Bar Driving Crank Ball Bearing 200058D 15602 " " " " Pinch Screw 243684 15602 " " " " Shaft with 243740 243684 15602 " " " " Shaft with 243740 243684 15602 " " " " 243662 with 243669 243684 15602 Needle Bar Driving Shaft With 243740 243669 15602 " " " " 243662 with 243664 243664 15602 Needle Bar Driving Shaft Oiling Wick 243740 15602 Needle Bar Driving Shaft Oiling Wick 243645 15601 " " Thread Tube 200141F 15601 " Set Screw 243665 15620 Oil Level Indicator 243666 15620 " " " Screw (12) 243668 15601 " " " Screw (12) 243668 15601 " " " Screw (12) 243668 15601 " " " Screw (12) 243669 15601 " " " Screw (12) 243669 15601			• •
243661 15602 Needle Bar Driving Crank with 200058D 243683 15602 Needle Bar Driving Crank 243661 with 243606 243604 15602 """"""Pinch Screw 243662 15602 """""""Pinch Screw 243663 15602 """""""" 243664 15602 """"""""""""""""""""""""""""""""""""	243660	15602	
200058D 243683 15602 Needle Bar Driving Crank 243661 with 243606 243606 15602 Needle Bar Driving Crank Ball Bearing 200058D 15602 243662 15602 " " " " Shaft with 243740 243663 15602 " " " " " 243662 with 243669 243609 15602 " " " " 243662 with 243609 243609 15602 Needle Bar Driving Shaft Ball Bearing 200136C 243740 15602 Needle Bar Driving Shaft Oiling Wick 243664 16601 " " Oiling Felt 9611 15601 " " Thread Tube 200141F 15601 " Set Screw 243664 15620 " " Gasket 200064x 15620 " " " Gasket 200064x 15620 " " " Gasket 200064x 15601 " " " Screw (12) 243663 15601 " " Bushing 243673 15601 " " Lifter 200201C 15601 " " " Lifting Bracket Set Screw 243663 15602 " " " Rock Shaft 202510 15602			
243683 15602 Needle Bar Driving Crank Ball Bearing 243606 15602 " " " " " Pinch Screw 243602 15602 " " " " Shaft with 243740 24364 15602 " " " " " 243662 with 24364 15602 " " " " " 243662 with 24364 15602 " " " " " 243662 with 243609 15602 Needle Bar Driving Shaft Ball Bearing 200136C 15602 Needle Bar Driving Shaft Oiling Wick 243664 15601 " " Oiling Felt 9611 15601 " Set Screw 243665 15620 Oil Level Indicator 243666 15620 " " " Gasket 200064X 15620 " " " " Gasket 200064X 15601 " " Bushing 243663 15601 " " " Bushing 243663 15601 " " " Lifter 2000201C 15601 " " " " Rock Shaft 201052C 15601 " " " Rock Shaft 201052C 15602 " " " Rock Shaft 200141F 15602 Presser Bar Lifting Rock Shaft Crank 243671 15602 <	243661	15602	-
243606 15602 Needle Bar Driving Crank Ball Bearing 200058D 15602 """"" Shaft with 243740 243662 15602 """"""""""""""""""""""""""""""""""""			
243606 15602 Needle Bar Driving Crank Ball Bearing 200058D 15602 """"" Shaft with 243740 243662 15602 """""" Shaft with 243740 243664 15602 """"""" 243662 with 243609 15602 Needle Bar Driving Shaft Ball Bearing 200136C 15602 Needle Bar Driving Shaft Oiling Wick 243740 15602 Needle Bar Driving Shaft Oiling Wick 243664 15601 """"""Oil Stop Screw Serew Vala664 243665 15602 """"Thread Tube 243664 15601 """"Thread Tube 243665 15620 """"Gasket 200141F 15601 """"""Gasket 243663 15620 """"""""""Gasket 243664 15601 """"""""""""""""""""""""""""""""""""	243683	15602	
200058D 15602 """"""" Shaft with 243740 243662 15602 """"""""""""""""""""""""""""""""""""	010/0/	15/00	
243662 15602 " " " Shaft with 243740 243664 15602 " " " " 243662 with 243669 15602 " " " " 243662 with 243609 15602 Needle Bar Driving Shaft Ball Bearing 200136C 15602 Needle Bar Driving Shaft Oiling Wick 243740 15602 Needle Bar Driving Shaft Oiling Wick 243664 15601 " " " Oiling Felt 9611 15601 " " Thread Tube 200141F 15601 " Set Screw 243665 15620 Oil Level Indicator 243666 15620 " Reservoir Cover 243661 15620 " " Screw (12) 243663 15601 " " Screw (12) 243664 15601 " " Bushing 243653 15601 " " Lifter 200201C 15601 " " " Lifting Bracket set Screw 243669 15602 " " " Rock Shaft 201052C 15602 " " " Rock Shaft 201052C 15602 " " " Collar with 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Crank set Screw 243671 <			
243684 15602 """"""""""""""""""""""""""""""""""""			
243609 15602 243609 243609 15602 Needle Bar Driving Shaft Ball Bearing 200136C 15602 " " " " " Oil Stop Screw 243740 15602 Needle Bar Driving Shaft Oiling Wick 243740 15601 " " " " Oiling Felt 9611 15601 " " Thread Tube 200141F 15601 " Set Screw 243665 15620 Oil Level Indicator 243666 15620 " " " Gasket 200064X 15620 " " " " Gasket 200064X 15601 " " " Screw (12) 243668 15601 " " " Bushing 243653 15601 " " " Bushing 243669 15601 " " " Hinge Screw 243669 15601 " " " Rock Shaft 201052C 15601 " " " Rock Shaft 202510 15602 " " " " Rock Shaft 200141F 15602 Presser Bar Lifting Rock Shaft Crank with 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank Set Screw			
243609 15602 Needle Bar Driving Shaft Ball Bearing 200136C 15602 """"""""""""""""""""""""""""""""""""	243004	15002	
200136C 15602 """"""""""""""""""""""""""""""""""""	243609	15602	
Screw Screw 243740 15602 Needle Bar Driving Shaft Oiling Wick 243664 15601 " " Oiling Felt 9611 15601 " " Thread Tube 200141F 15601 " Set Screw 243665 15620 Oil Level Indicator 243666 15620 " Reservoir Cover 243667 15620 " " Gasket 200064X 15620 " " " Gasket 200064X 15620 " " " Screw (12) 243668 15601 " " " Gasket 2000201C 15601 " " " Bushing 243669 15601 " " " Hinge Screw 243669 15601 " " " Hinge Screw 243669 15601 " " " Rock Shaft 201052C 15601 " " " Rock Shaft 2020141F 15602 " " " Rock Shaft 2020141F 15602 Presser Bar Lifting Rock Shaft Crank with 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank			
243740 15602 Needle Bar Driving Shaft Oiling Wick 243664 15601 " " Oiling Felt 9611 15601 " Thread Tube 200141F 15601 " Set Screw 243665 15620 Oil Level Indicator 243666 15620 " Reservoir Cover 243666 15620 " " " Gasket 200064X 15620 " " " " Gasket 243653 15601 " " " " Lifter 200201C 15601 " " " Lifting Bracket set Screw 243669 15601 " " " Rock Shaft 201052C 15601 Presser Bar Lifting Rock Shaft Collar 202510 15602 " " " Rock Shaft 200141F 15602 Presser Bar Lifting Rock Shaft Crank 243671 15602 Presser Bar Lifting Rock Shaft Crank 243671 15602 Presser Bar	2001500	10000	•
243664 15601 " " Oiling Felt 9611 15601 " Thread Tube 200141F 15601 " Set Screw 243665 15620 Oil Level Indicator 243666 15620 " Reservoir Cover 243667 15620 " " " Gasket 200064X 15620 " " " " Gasket 200064X 15620 " " " " Gasket 200064X 15601 Presser Bar with 200110D 243655 15601 " " " Bushing 243673 15601 " " " Hinge Screw 243669 15601 " " " Hinge Screw 243669 15601 " " " Hinge Screw 243670 15602 " " " Rock Shaft 201052C 15601 Presser Bar Lifting Bracket Set Screw 243670 15602 " " " Rock Shaft 202510 15602 " " " Rock Shaft 200141F 15602 Presser Bar Lifting Rock Shaft Collar Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank Spring 243671	243740	15602	-
9611 15601 " " Thread Tube 200141F 15601 " Set Screw 243665 15620 Oil Level Indicator 243666 15620 " Reservoir Cover 243667 15620 " " " Gasket 200064X 15620 " " " Screw (12) 243668 15601 Presser Bar with 200110D 243655 15601 " " Bushing 243673 15601 " " Lifter 200201C 15601 " " Lifting Bracket with 201052C 15601 " " " Rock Shaft 202052 15601 Presser Bar Lifting Bracket Set Screw 243670 15602 " " " Rock Shaft 202052 15602 " " " Rock Shaft 2020510 15602 " " " Rock Shaft 2020141F 15602 Presser Bar Lifting Rock Shaft Crank with 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Spring <t< td=""><td></td><td></td><td></td></t<>			
200141F 15601 "Set Screw 243665 15620 Oil Level Indicator 243666 15620 "Reservoir Cover 243667 15620 ""Screw (12) 243668 15601 Presser Bar with 200110D 243655 15601 ""Screw (12) 243655 15601 ""Screw (12) 243655 15601 ""Screw (12) 243655 15601 ""Screw (12) 243655 15601 ""Storew (12) 243655 15601 ""Screw (12) 243655 15601 ""Storew (12) 243651 15601 ""Storew Har Screw 243669 15601 ""Isting Bracket with 201052C 201052C 15602 ""Isting Bracket Set Screw 243670 15602 ""Isting Rock Shaft 20141F 15602 Presser Bar Lifting Rock Shaft Collar Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 243026 15601 Presser Bar Spring 244026 15601 <			
243665 15620 Oil Level Indicator 243666 15620 "Reservoir Cover 243667 15620 ""Screw (12) 243668 15601 Presser Bar with 200110D 243655 15601 ""Screw (12) 243653 15601 ""Screw (12) 243669 15601 ""Screw With 200110D 243669 15601 ""Screw With 201052C 201052C 15602 """Rock Shaft 202510 15602 """Rock Shaft 202510 15602 """"Rock Shaft Collar with 200141F 200141F 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Crank with 200141F 200141F 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243671 15601 Presser Bar Lifting Rock Shaft Crank <td>-</td> <td></td> <td>" Set Screw</td>	-		" Set Screw
243667 15620 """" Gasket 200064X 15620 """" Screw (12) 243668 15601 Presser Bar with 200110D 243655 15601 """ Bushing 243673 15601 """ Lifter 200201C 15601 """ Lifter 200201C 15601 """" Hinge Screw 243669 15601 """" Lifting Bracket with 201052C 15601 Presser Bar Lifting Bracket Set Screw 243670 15602 """" Rock Shaft 202010 15602 """" Rock Shaft 202011 15602 """" Rock Shaft 202012 15602 """" Rock Shaft Collar with 200141F 200141F 15602 243671 15602 Presser Bar Lifting Rock Shaft Crank with 200141F 200141F 15602 243671 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243747 15602 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Spring 244026 15601 <td< td=""><td></td><td>15620</td><td>Oil Level Indicator</td></td<>		15620	Oil Level Indicator
243601 15620 " " " Screw (12) 243668 15601 Presser Bar with 200110D 243655 15601 " " Bushing 243673 15601 " " Lifter 200201C 15601 " " Lifter 20020201C 15601 " " Lifting Bracket with 201052C 201052C 201052C 15601 Presser Bar Lifting Bracket Set Screw 243670 15602 " " " Rock Shaft 202510 15602 " " " Rock Shaft Collar with 200141F 15602 Presser Bar Lifting Rock Shaft Collar Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank with 200141F 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank 243671 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Spring 244026 15601 Presser Bar Spring 22405 2405 15601 " " " Washer	243666	15620	" Reservoir Cover
243668 15601 Presser Bar with 200110D 243655 15601 " " Bushing 243673 15601 " " Lifter 20201C 15601 " " Lifter 20201C 15601 " " Lifting Bracket with 201052C 201052C 15601 Presser Bar Lifting Bracket Set Screw 243670 15602 " " " Rock Shaft 202510 15602 " " " Rock Shaft Collar with 200141F 200141F 200141F Collar 243671 15602 Presser Bar Lifting Rock Shaft Collar Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank 243747 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Lifting Rock Shaft Stop Pin 208085 15601 Presser Bar Spring 22405 15601 24405 15601 " " Washer " Washer 1121X 15601 " " " Thumb Screw (pressure regulating)	243667	15620	" " Gasket
243655 15601 """ Bushing 243673 15601 """ Lifter 200201C 15601 """ Lifting Bracket with 243669 15601 """ Lifting Bracket with 201052C 201052C 201052C 15601 Presser Bar Lifting Bracket Set Screw 243670 15602 """ Rock Shaft 202010 15602 """" Rock Shaft 202011 15602 """" " Collar with 200141F 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Collar Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank 243671 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Spring 22405 15601 """"Washer 1121X 15601 """"Washer 1121X 15601 """Thumb Screw (pressure regulating)	200064X	15620	" " Screw (12)
24367315601""24367315601"""20201C15601"""24366915601"""24367015602"""24367015602"""24367015602"""200141F15602"""200141F15602Presser Bar Lifting Rock Shaft Collar Set Screw24367115602Presser Bar Lifting Rock Shaft Collar Set Screw24367115602Presser Bar Lifting Rock Shaft Crank with 200141F200141F15602Presser Bar Lifting Rock Shaft Crank Set Screw24374715602Presser Bar Lifting Rock Shaft Crank Spring24402615601Presser Bar Lifting Rock Shaft Stop Pin20808515601Presser Bar Spring2240515601"1121X15601"""""Washer regulating)	243668	15601	Presser Bar with 200110D
24301313001200201C156012436691560124366915601201052C201052C201052C2510156021560215602156021560215602156021560215602156021560215602156021560215602156021560215603156041560415605156051560615607156071560815601156091121X156011121X156011121X156011121X156011121X156011121X156011121X156011121X15601156011560115601156011560115601156011121X156011121X15601 <tr< td=""><td>243655</td><td>15601</td><td>Dubning</td></tr<>	243655	15601	Dubning
200201C15001" " Lifting Bracket with 201052C201052C15601Presser Bar Lifting Bracket Set Screw 24367024367015602" " " Rock Shaft 202510200141F15602" " " " Collar with 200141F200141F15602Presser Bar Lifting Rock Shaft Collar Set Screw24367115602Presser Bar Lifting Rock Shaft Crank with 200141F200141F15602Presser Bar Lifting Rock Shaft Crank Set Screw24374715602Presser Bar Lifting Rock Shaft Crank Spring24402615601Presser Bar Lifting Rock Shaft Stop Pin20808515601Presser Bar Spring2240515601" " " Washer I121X15601" " " Thumb Screw (pressure regulating)	243673	15601	211001
24366913601201052C201052C15601Presser Bar Lifting Bracket Set Screw24367015602" " " Rock Shaft20251015602" " " " Collarwith 200141Fwith 200141F200141F15602Presser Bar Lifting Rock Shaft Collar Set Screw24367115602Presser Bar Lifting Rock Shaft Crank with 200141F200141F15602Presser Bar Lifting Rock Shaft Crank Set Screw24374715602Presser Bar Lifting Rock Shaft Crank Spring24402615601Presser Bar Lifting Rock Shaft Stop Pin20808515601Presser Bar Spring2240515601" " " Washer I121X1121X15601" " Thumb Screw (pressure regulating)			Thing's Ser ow
201052C15601Presser Bar Lifting Bracket Set Screw24367015602"""" Rock Shaft20251015602"""" "Collarwith 200141Fwith 200141F200141F15602Presser Bar Lifting Rock Shaft Collar Set Screw24367115602Presser Bar Lifting Rock Shaft Crank with 200141F200141F15602Presser Bar Lifting Rock Shaft Crank Set Screw24374715602Presser Bar Lifting Rock Shaft Crank 	243669	15601	Litting Diacket with
24367015602"""" Rock Shaft20251015602""""""""""""Collarwith 200141F200141F15602Presser Bar Lifting Rock Shaft Collar Set Screw24367115602Presser Bar Lifting Rock Shaft Crank with 200141F200141F15602Presser Bar Lifting Rock Shaft Crank Set Screw24374715602Presser Bar Lifting Rock Shaft Crank Spring24402615601Presser Bar Lifting Rock Shaft Stop Pin20808515601Presser Bar Spring2240515601""" Washer I121X15601""" Thumb Screw (pressure regulating)			
243010 15002 """"""""""""""""""""""""""""""""""""			
with 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Collar Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank with 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Lifting Rock Shaft Stop Pin 208085 15601 Presser Bar Spring 22405 15601 " " " Washer 1121X 15601 " " Thumb Screw (pressure regulating)			Rock bhait
200141F15602Presser Bar Lifting Rock Shaft Collar Set Screw24367115602Presser Bar Lifting Rock Shaft Crank with 200141F200141F15602Presser Bar Lifting Rock Shaft Crank Set Screw24374715602Presser Bar Lifting Rock Shaft Crank Spring24402615601Presser Bar Lifting Rock Shaft Stop Pin20808515601Presser Bar Spring2240515601"1121X15601""""Washer regulating)	202510	15602	
Set Screw 243671 15602 Presser Bar Lifting Rock Shaft Crank with 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Lifting Rock Shaft Stop Pin 208085 15601 Presser Bar Spring 22405 15601 " " " Washer 1121X 15601 " " Thumb Screw (pressure regulating)	0001117	15600	
24367115602Presser Bar Lifting Rock Shaft Crank with 200141F200141F15602Presser Bar Lifting Rock Shaft Crank Set Screw24374715602Presser Bar Lifting Rock Shaft Crank Spring24402615601Presser Bar Lifting Rock Shaft Stop Pin20808515601Presser Bar Spring2240515601" " " Washer I121X15601" " " Thumb Screw (pressure regulating)	2001415	15002	•
with 200141F 200141F 15602 Presser Bar Lifting Rock Shaft Crank Set Screw 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Lifting Rock Shaft Stop Pin 208085 15601 Presser Bar Spring 22405 15601 " " Washer 1121X 15601 " " Thumb Screw (pressure regulating)	213671	15602	
200141F15602Presser Bar Lifting Rock Shaft Crank Set Screw24374715602Presser Bar Lifting Rock Shaft Crank Spring24402615601Presser Bar Lifting Rock Shaft Stop Pin20808515601Presser Bar Spring 224052240515601" " " Washer 1121X1121X15601" " Thumb Screw (pressure regulating)	243071	15002	•
Set Screw 243747 15602 Presser Bar Lifting Rock Shaft Crank Spring 244026 15601 Presser Bar Lifting Rock Shaft Stop Pin 208085 15601 Presser Bar Spring 22405 15601 " " Washer 1121X 15601 " " Thumb Screw (pressure regulating)	2001415	15602	
24374715602Presser Bar Lifting Rock Shaft Crank Spring24402615601Presser Bar Lifting Rock Shaft Stop Pin20808515601Presser Bar Spring 224052240515601" " " Washer 1121X1121X15601" " Thumb Screw (pressure regulating)	2001111	15000	
Spring 244026 15601 Presser Bar Lifting Rock Shaft Stop Pin 208085 15601 Presser Bar Spring 22405 15601 " " Washer 1121X 15601 " " Thumb Screw (pressure regulating)	243747	15602	
244026 15601 Presser Bar Lifting Rock Shaft Stop Pin 208085 15601 Presser Bar Spring 22405 15601 " " Washer 1121X 15601 " " Thumb Screw (pressure regulating)			
Pin 208085 15601 Presser Bar Spring 22405 15601 " " " Washer 1121X 15601 " " Thumb Screw (pressure regulating)	244026	15601	
22405 15601 " " Washer 1121X 15601 " " Thumb Screw (pressure regulating)			
22405 15601 " " " Washer 1121X 15601 " " Thumb Screw (pressure regulating)	208085	15601	Presser Bar Spring
regulating)	22405	15601	
	1121X	15601	" " Thumb Screw (pressure
243691 15621 Presser Foot, for Cap Work			
	243691	15621	Presser Foot, for Cap Work

.

No.	Plate	Name
200110D	15601	Presser Foot Screw
2102	15619	Tension Disc
13710	15619	" Spring
Note:	Tension	Spring 13710 is furnished with this
	Machine	unless otherwise specified on order.
223438		Tension Spring (heavy)
350557C	15619	" Stud
243697	15619	" Thread Guide
1560C	15619	" Thumb Nut
243696	15619	Tension complete, Nos. 1560C, 13710
		350557C and two 2102
243730	15619	Thread Guide
201185D	15619	" " Screw
210683	15619	" Retainer Bracket with 200397X
200137X	15619	" " Screw (2)
210993	15619	" " Sleeve
210992	15619	" " Spring
243711	15619	" " Stud
210958	15619	" " Collar
200397X	15619	" " Set Screw
243712	15619	Thread Retainer Bracket complete, Nos.
		210683, 210958, 210992, 210993 and
		243711
243721	15621	Throat Plate, for 243630
244X	15621	" " Screw (2)

9

ACCESSORIES

No.	Plate	Name
228720	15622	Drip Pan with four each 228721 and wood
		screws 1 in., No. 8, R. H. B.
228721	15622	Machine Cushion
24 X 1		Needles, six, size 16
160727	15622	Oil Container (filled, 5 oz., Mfg. oil,
		light grade, not stainless) Nos. 160725
		and 160726
160725	15622	Oil Container
160726	15622	" " Cap
160728	15622	" " Spout
225498	15622	Screw Driver (7-1/4 in.long)
228476	15622	" Driver
10875	15622	Wrench

KNEE LIFTER

228561	15612	Chain, 11 in. long, with two 202784			
202784	15612	" Hook			
228722	15612	Rock Lever with 200380C and 350231C			
228723	15612	" " Bracket with 200347AL and			
		three wood screws 7/8 in., No. 12			
228724	15612	Rock Lever Bracket 228723 with 228722			
		and 228725 to 228729			
228725	15612	Rock Lever Hinge Pin			
200380C	15612	" " Set Screw			
228364	15612	" " Knee Plate with 350231C			
228388	15612	" " " Arm			
350231C	15612	" " " " Set Screw			
350231C	15612	" " " Set Screw			
228726	15612	" " Lifting Arm			
228727	15612	" " " Crank with			
		350231C			
228728	15612	Rock Lever Lifting Arm Crank Con-			
		nection			
350231C	15612	Rock Lever Lifting Arm Crank SetScrew			
228729	15612	" " Position Spring			
228367	15612	" " Stop Stud			
200347AL	15612	" " Set Screw			
228730	15612	Knee Lifter Rock Lever complete, Nos.			
228364, 228367, 228388, 228561,					
		228724 and Form A1360			

10

ACCESSORIES

THREAD UNWINDER

No.	Plate	Name
228692	15613	Spool Pin
201528X	15613	" " Nut
228693	15613	" " Washer
225259	15613	" Rest (for one spool) (flat) with
		201018C, 201528X, 228692 and 228693
150203	15613	Spool Rest Cushion (felt)
225388	15613	" " Rod
200383C	15613	" " Set Screw
201018C	15613	" " Set Screw
259658	15613	" Stand with 200383C
225391	15613	Thread Guide
201696X	15613	" " Lock Nut
225326	15613	" " Position Cup
225324	15613	" " Rod with 208AL and 225322
208AL	15613	" " Screw
225322	15613	" " Washer
225260	15613	Thread Unwinder (for one spool) com-
		plete, Nos. 150203, 201696X, 225259,
		225324, 225326, 225388, 225391,
		259658 and three wood screws 7/8
		in., No. 12

ATTACHMENTS AND ACCESSORIES

350568X	15620	Hold	Down	Screw	
228721	15620	11	**	11	Bushing

CLOTH PLATES

243725P	15623	Cloth Plate
243725X	15623	" Plate
243739	15623	" " (square back) (for Basting
		Sack Coats)
243748	15623	Cloth Plate (square, stainless steel)

FINGER GUARD

No.	Plate			Name		
36822	15624	Finger	Guar	d		
36823	15624	11		Friction Washer		
104J	15624	11		Hinge Screw		
36824	15624	11	••	Holder with 228K		
228K	15624	11	н	" Clamping	Screw	
36825	15624	Finger	Guar	d complete, Nos. l	04J and	
36822 to 36824						

FITTINGS

FOR CASKET LINING

243630	15624	Feed Dog, for 243722
243692	15624	Presser Foot
243722	15624	Throat Plate, for 243630

FOR SACK COATS

9725	15624	Feed Dog, for 9739
243691	15624	Presser Foot
9739	15624	Throat Plate, for 9725

FOOT LIFTERS

PARTS REQUIRED TO CHANGE FROM KNEE LIFTER TO FOOT LIFTER

228474	15615	Foot Lifter Treadle Chain, 34 in. long,
		with two 202784
202784	15615	Foot Lifter Treadle Chain Hook

FOOT LIFTER

FOR STANDS WITH FLAT TREADLE SUPPORT

No.	Plate	Name
14372	15615	Treadle
51074R	15615	" Bolt
46709	15615	" " 51074R with 23250 and 67425
67425	15615	" " Lock Washer
23250	15615	" "Washer
14373	15615	" Extension
50581R	15615	" " Screw
2718	15615	" " Washer
17881	15615	" Shaft
14374	15615	" Spring
14375	15615	" Stand
14379	15615	Foot Lifter Treadle complete, Nos. 2718,
		14372 to 14375, 17881, 50581R and two
		46709

FOOT LIFTER

FOR STANDS WITH TUBULAR TREADLE SUPPORT

152170	15616	Treadle Extension
152171	15616	" " Swivel Stud
51723X	15616	" " " Nut
701348	15616	" " " Lock
		Washer
152080	15616	Treadle Position Collar with 51089R
51089R	15616	" " Clamping Bolt
		with 51581R
51581R	15616	Treadle Position Collar Clamping Bolt
		Nut
152153	15616	Treadle Spring
152169	15616	Foot Lifter Treadle (pressed steel)
		with adjustable Extension complete,
		Nos.51723X,152170,152171 and
		701348
152095	15616	Foot Lifter Treadle 152169 with 152153
		and two 152080

13

FOOT LIFTER FOR USE WITH POWER TABLES

No.	Plate	Name
14372	18614	Treadle
14373	18614	" Extension
50581R	18614	" " Screw
2718	18614	" " Washer
17881	18614	'' Shaft
14374	18614	" Spring
14375	18614	" Stand
14376	18614	Foot Lifter Treadle complete, Nos.
		2718, 14372 to 14375, 17881, 50581R
		and two wood screws $1-1/4$ in., No.
		12, F.H.

MACHINE BASE

228755	15625	Machine Base (cast iron) 1-3/4 in.
		high with four 200026E
228756	15625	Machine Base (cast iron) 3 in.high
		with four 200026E
200026E	15625	Machine Screw

NUMERICAL LIST OF PARTS

No.	Plate	Name
104J	15624	Finger Guard Hinge Screw, for 36825
176D	15621	Feed Dog Screw
202F	15618	" " Adjusting Plate Screw
208AL	15613	Thread Unwinder Thread Guide Rod
		Screw, for 225324
228K	15624	Finger Guard Holder Clamping Screw, for 36824
244X	15621	Throat Plate Screw
691X	15620	Cloth Plate Screw
691X	15620	Looper Safety Guard Post Screw
1121X	15601	Presser Bar Thumb Screw (pressure
		regulating)
1368E	15603	Looper Washer Screw, for 243736
1560C	15619	Tension Thumb Nut, for 243696
2102	15619	" Disc, for 243696
2718	15615	Foot Lifter Treadle Extension Screw
		Washer, for 14376 and 14379
9611	15601	Needle Bar Thread Tube, for 243654
9725	15624	Feed Dog, for 9739, for Sack Coats
9739	15624	Throat Plate, for 9725, for Sack Coats
10875	15622	Wrench
13710	15619	Tension Spring, for 243696
	Nos.	14372 to 14375, for 14376 and 14379
14372	15615	Foot Lifter Treadle
14373	15615	" " Extension
14374	15615	" " Spring
14375	15615	" " Stand
14376	18614	Foot Lifter Treadle complete (for use
		with Power Tables) Nos. 2718, 14372
		to 14375, 17881, 50581R and two wood
		screws 1-1/4 in., No. 12, F.H.
14379	15615	Foot Lifter Treadle complete (for Stands with Flat Treadle Support) Nos. 2718,
		14372 to 14375, 17881, 50581R and two 46709
17881	15615	Foot Lifter Treadle Shaft, for 14376 and
001.05		14379 Den Caning Weather
22405	15601	Presser Bar Spring Washer
23250	15615	Foot Lifter Treadle Bolt Washer, for 46709
25878	15621	Edge Guide
		36822 to 36824, for 36825
36822	15624	Finger Guard

No.	Plate	Name
36823	15624	Finger Guard Friction Washer
36824	15624	" " Holder with 228K
36825	15624	Finger Guard complete, Nos. 104J and 36822 to 36824
46709	15615	Foot Lifter Treadle Bolt 51074R with 23250 and 67425, for 14379
50581R	15615	Foot Lifter Treadle Extension Screw, for 14376 and 14379
51074R	15615	Foot Lifter Treadle Bolt, for 46709
51089R	15616	" " Position Collar
c1001.D	15/01	Clamping Bolt with 51581R, for 152080
51224B 51581R	15621 15616	Edge Guide Thumb Screw Foot Lifter Treadle Position Collar
JIJOIK	15010	Clamping Bolt Nut, for 51089R
51723X	15616	Foot Lifter Treadle Extension Swivel Stud Nut, for 152169
67425	15615	Foot Lifter Treadle Bolt Lock Washer, for 46709
150203	15613	Thread Unwinder Spool Rest Cushion (felt) for 225260
152080	15616	Foot Lifter Treadle Position Collar with 51089R, for 152095
152095	15616	Foot Lifter Treadle 152169 with 152153 and two 152080
152153	15616	Foot Lifter Treadle Spring, for 152095
152169	15616	Foot Lifter Treadle (pressed steel) with adjustable Extension complete (for Stands with Tubular Treadle Support) Nos.51723X,152170,152171 and 701348, for 152095
152170	15616	Foot Lifter Treadle Extensionfor 152169
152171	15616	" " Swivel
160725	15622	Stud, for 152169 Oil Container, for 160727
160726	15622	" " Cap, for 160727
160727	15622	Oil Container (filled, 5 oz., Mfg.oil,
		light grade, not stainless) Nos. 160725 and 160726
160728	15622	Oil Container Spout
200026E	15625	Machine Screw, for 228755 and 228756
200058D	15602	Needle Bar Driving Crank Pinch Screw, for 243661
200064X	15620	Oil Reservoir Cover Screw
200086C	15601	Needle Bar Connecting Stud Pinch Screw for 243657
200099X	15602	Frame End Cover Screw
200110D	15601	Presser Foot Screw, for 243668
200122X	15618	Feed Regulating Wheel Lock Screw Lever Cap Screw
200136C	15602	Needle Bar Driving Shaft Oil Stop Screw
200137X	15619	Thread Retainer Bracket Screw

16

No.	Plate	Name
200141F	15618	Feed Bar Hinge Stud Collar Set Screw, for 243681
200141F	15601	Needle Set Screw, for 243654
200141F	15602	Presser Bar Lifting Rock Shaft Collar Set Screw, for 202510
200141F	15602	Presser Bar Lifting Rock Shaft Crank Set Screw, for 243671
200166X	15619	Face Plate Screw
200201C	15601	Presser Bar Lifter Hinge Screw
200347AL	15612	Knee Lifter Rock Lever Stop Stud Set Screw, for 228723
200364C	15618	Feed Bar Carrier Hinge Stud Set Screw
200379C	15603	Machine Pulley Set Screw, for 243604P and 243605P
200380C	15618	Feed Regulating Crank Bushing Position Screw
200380C	15618	Feed Regulating Crank Bushing Position Screw Check Screw
200380C	15612	Knee Lifter Rock Lever Hinge Pin Set Screw, for 228722
200383C	15613	Thread Unwinder Spool Rest Rod Set Screw, for 259658
200392C	15603	Looper Shaft End Thrust Adjusting Col- lar Set Screw, for 243742
200394C	15618	Feed Bar Hinge Stud Set Screw, for 243615
200397X	15619	Thread Retainer Stud Set Screw, for 210683
200958X	15603	Machine Pulley Shaft Sleeve Set Screw
201018C	15613	Thread Unwinder Spool Rest Set Screw, for 225259
201052C	15601	Presser Bar Lifting Bracket Set Screw, for 243669
201185D	15619	Thread Guide Screw
201528X	15613	" Unwinder Spool Pin Nut, for 225259
201696X	15613	Thread Unwinder Thread Guide Lock Nut, for 225260
202510	15602	Presser Bar Lifting Rock Shaft Collar with 200141F
202784	15615	Foot Lifter Treadle Chain Hook, for 228474
202784	15612	Knee Lifter Chain Hook, for 228561
206758	15601	Needle Bar Connecting Stud Oil Packing (wick) for 243657
208085	15601	Presser Bar Spring
210683	15619	Thread Retainer Bracket with 200397X for 243712
210958	15619	Thread Retainer Stud Collar, for 243712
210992	15619	" " Spring, for 243712
210993	15619	" " Sleeve, for 243712

No.	Plate	Name
213949	15618	Feed Regulating Wheel Lock Screw
		Washer
222119X	15620	Cloth Plate Position Pin, for 243729
223438		Tension Spring (heavy)
225259	15613	Thread Unwinder Spool Rest (for one
		spool) (flat) with 201018C, 201528X,
		228692 and 228693, for 225260 Thread Unwinder (for one spool) com-
225260	15613	plete, Nos. 150203, 201696X, 225259,
		225324, 225326, 225388, 225391,
		259658 and three wood screws 7/8
		in., No. 12
225322	15613	Thread Unwinder Thread Guide Rod
		Washer, for 225324
225324	15613	Thread Unwinder Thread Guide Rod with
		208AL and 225322, for 225260
225326	15613	Thread Unwinder Thread Guide Position
		Cup, for 225260
225388	15613	Thread Unwinder Spool Rest Rod, for 225260
225391	15613	Thread Unwinder Thread Guide, for
225591	19013	225260
225498	15622	Screw Driver (7-1/4 in.long)
228364	15612	Knee Lifter Rock Lever Knee Plate with
		350231C, for 228730
228367	15612	Knee Lifter Rock Lever Stop Stud, for 228730
228388	15612	Knee Lifter Rock Lever Knee Plate Arm
220500	15012	for 228730
228474	15615	Foot Lifter Treadle Chain, 34 in.long,
		with two 202784
228476	15622	Screw Driver
228561	15612	Knee Lifter Chain, 11 in. long, with two 202784, for 228730
228692	15613	Thread Unwinder Spool Pin, for 225259
228693	15613	" " " Washer,
220075	15015	for 225259
228720	15622	Drip Pan with four each 228721 and
		wood screws 1 in., No. 8, R. H. B.
228721	15620	Hold Down Screw Bushing
228721	15622	Machine Cushion, for 228720
228722	15612	Knee Lifter Rock Lever with 200380C and 350231C, for 228724
228723	15612	Knee Lifter Rock Lever Bracket with
440143	15012	200347AL and three wood screws 7/8
		in., No. 12, for 228724
228724	15612	Knee Lifter Rock Lever Bracket 228723
		with 228722 and 228725 to 228729,
		for 228730
		.228725 to 228729, for 228724
228725	15612	Knee Lifter Rock Lever Hinge Pin

.


No.	Plate	Name
228726	15612	Knee Lifter Rock Lever Lifting Arm
228727	15612	0 0 0 0 0 0
		Crank with 350231C
228728	15612	Knee Lifter Rock Lever Lifting Arm
		Crank Connection
228729	15612	Knee Lifter Rock Lever Position Spring
228730	15612	Knee Lifter Rock Lever complete, Nos.
		228364, 228367, 228388, 228561,
		228724 and Form A1360
228755	15625	Machine Base (cast iron) 1-3/4 in.high
		with four 200026E
228756	15625	Machine Base (cast iron) 3 in high with
		four 200026E
243602	15620	Cloth Plate Gasket
243604P	15603	Machine Pulley (aluminum alloy casting)
		for 3/8 in. "V" belt (outside diam. of
		belt groove 2.6 in.) (rim diam.
		3-3/16 in.) with two 200379C, for
		243731
243605P	15603	Machine Pulley (aluminum alloy casting)
0100001	10000	for 5/16 in. round belt (diam.of belt
		groove $1-13/32$ in.) (rim diam.
		3-3/16 in.) with two 200379C, for
		243732
243606	15603	Machine Pulley Ball Bearing, for 243731
243000	15005	and 243732
243606	15602	Needle Bar Driving Crank Ball Bearing,
245000	13002	for 243683
243607	15603	Machine Pulley Shaft, for 243608
243608	15603	" " 243607 with 243609
243609	15603	" " Ball Bearing,
243007	10000	for 243608
243609	15602	Needle Bar Driving Shaft Ball Bearing,
243007	15002	for 243684
243611	15603	Machine Pulley Shaft Sleeve, for 243612
243612	15603	Water in the second sec
243010	10000	with 243613
243613	15603	Machine Pulley Shaft Sleeve Oil Seal,
243013		for 243612
243614P	15619	Face Plate
243615	15618	Feed Bar with 200394C and 243634
243616	15618	" " Carrier with 243618 and two
245010	13010	243620
243617	15618	Feed Bar Carrier Hinge Stud
243618	15618	" " " " Bearing,
- 10010	1.010	for 243616
243619	15618	Feed Bar Hinge Stud
243620	15618	" " " " Bearing, for 243616
243621	15618	" " Slide Block
243630	15621	" Dog, for 243721 and 243722, for
		Casket Lining and Cap Work


No	Plate	Name
No. 243631	15618	Feed Dog Adjusting Plate
243633	15618	" Driving Connection Link Bearing,
243033		for 243726
243634	15618	Feed Driving Connection Link Hinge Stud, for 243615
243635	15618	Feed Driving Link with 243636
243636	15618	" " Bearing, for 243635
243638	15618	" Regulating Connection Hinge Pin,
		for 243728
243639	15618	Feed Regulating Crank
243640	15618	" " Bushing
243641	15618	" Link with 243642
243642	15618	" " Bearing,
	•	for 243641
243644	15618	Feed Regulating Wheel Lock Screw Lever
243646	15602	Frame End Cover, for 243745
243647	15602	" " Gasket
243648	15603	Looper, for 243736
243649	15620	" Safety Guard
243650	15620	" " Post
243652	15603	" Shaft Bearing (back)
243653	15603	" " (front)
243654	15601	Needle Bar with 9611 and 200141F
243655	15601	" " Bushing
243655	15601	Presser Bar Bushing
243656	15601	Needle Bar Connecting Link
243657	15601	" " Stud with 200086C
		and 206758
243658	15602	Needle Bar Driving Connection with
		243659 and 243660
243659	15602	Needle Bar Driving Connection Bushing
		(lower) for 243658
243660	15602	Needle Bar Driving Connection Bushing
		(upper)for 243658
243661	15602	Needle Bar Driving Crank with 200058D, for 243683
243662	15602	Needle Bar Driving Shaft with 243740, for 243684
243664	15601	Needle Bar Oiling Felt
243665	15620	Oil Level Indicator, for 243729
243666	15620	" Reservoir Cover
243667	15620	" " Gasket
243668	15601	Presser Bar with 200110D
243669	15601	" " Lifting Bracket with
		201052C
243670	15602	Presser Bar Lifting Rock Shaft
243671	15602	" " " " Crank
_		with 200141F
243673	15601	Presser Bar Lifter
243681	15618	Feed Bar Hinge StudCollar with 200141F


No.	Plate	Name
243682	15603	Looper Washer, for 243736
243683	15602	Needle Bar Driving Crank 243661 with 243606
243684	15602	Needle Bar Driving Shaft 243662 with 243609
243691	15621	Presser Foot, for Cap Work and Sack Coats
243692	15624	Presser Foot, for Casket Lining
243696	15619	Tension complete, Nos. 1560C, 13710 350557C and two 2102
243697	15619	Tension Thread Guide
243710	15620	Looper Safety Guard Compression Spring
243711	15619	Thread Retainer Stud, for 243712
243712	15619	Thread Retainer Bracket complete, Nos. 210683, 210958, 210992, 210993 and 243711
243721	15621	Throat Plate, for 243630
243722	15624	" " " " for Casket Lining
243725P	15620	Cloth Plate
243725X	15623	"Plate
243726	15618	Feed Driving Connection Link with 243633
243727	15618	Feed Regulating Connection
243728	15618	" " Wheel (indexed) with 243638
*243729		Frame with 243665, 244026 and two 222119X
243730	15619	Thread Guide
243731	15603	Machine Pulley 243604P with 243606 and 243738
243732	15603	Machine Pulley 243605P with 243606 and 243738
243736	15603	Looper 243648 with 1368E and 243682
243738	15603	Machine Pulley Gasket, for 243731 and 243732
243739	15623	Cloth Plate (square back) (for Basting Sack Coats
243740	15602	Needle Bar Driving Shaft Oiling Wick, for 243662
243741	15603	Looper Shaft End Thrust Bushing
243742	15603	" " " Adjusting Col- lar with two 200392C
243743	15618	Feed Lubricating Wick
243744	15602	Frame End Cover Oil Stop Screw Gasket (vellumoid) for 243745
243745	15602	Frame End Cover 243646 with 243744 and 350366X
243746	15603	Looper Shaft with 350558X and 350559X

.


No.	Plate	Name
243747	15602	Presser Bar Lifting Rock Shaft Crank Spring
243748	15623	Cloth Plate (square, stainless steel)
244026	15601	Presser Bar Lifting Rock Shaft Stop Pin, for 243729
259658	15613	Thread Unwinder Spool Stand with 200383C, for 225260
350231C	15612	Knee Lifter Rock Lever Knee Plate Arm Set Screw, for 228722
350231C	15612	Knee Lifter Rock Lever Knee Plate Set Screw, for 228364
350231C	15612	Knee Lifter Rock Lever Lifting Arm Crank Set Screw, for 228727
350366X	15602	Frame End Cover Oil Stop Screw, for 243745
350366X	15601	Frame Oil Stop Screw
350419X	15603	Machine Pulley Adjusting Screw
350555C	15618	Feed Regulating Wheel Lock Screw
350557C	15619	Tension Stud, for 243696
350558X	15603	Looper Set Screw (long) for 243746
350559X	15603	" " (short) for 243746
350568X	15620	Hold Down Screw
701348	15616	Foot Lifter Treadle Extension Swivel Stud Nut Lock Washer, for 152169

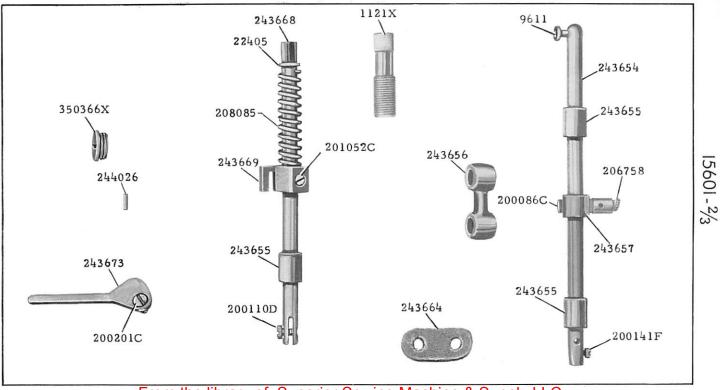


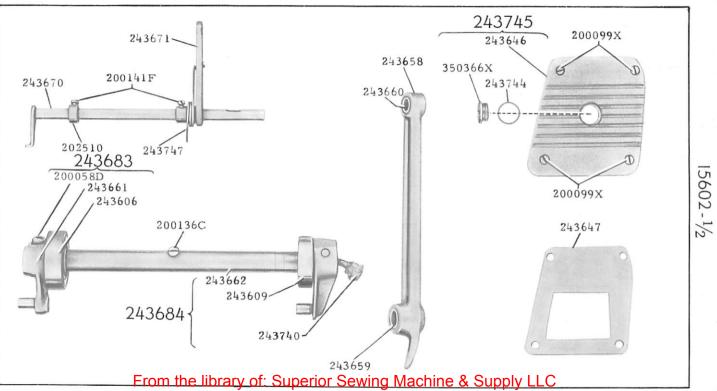


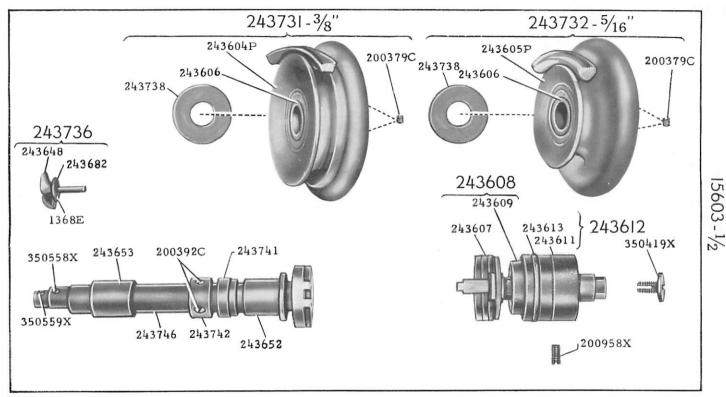


From the library of: Superior Sewing Machine & Supply LLC

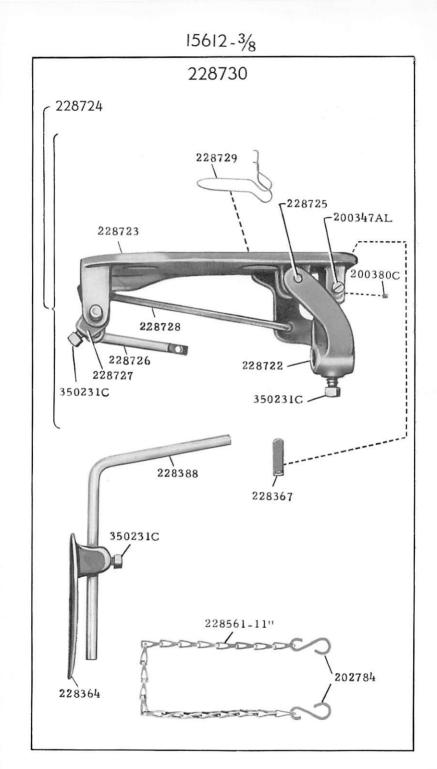


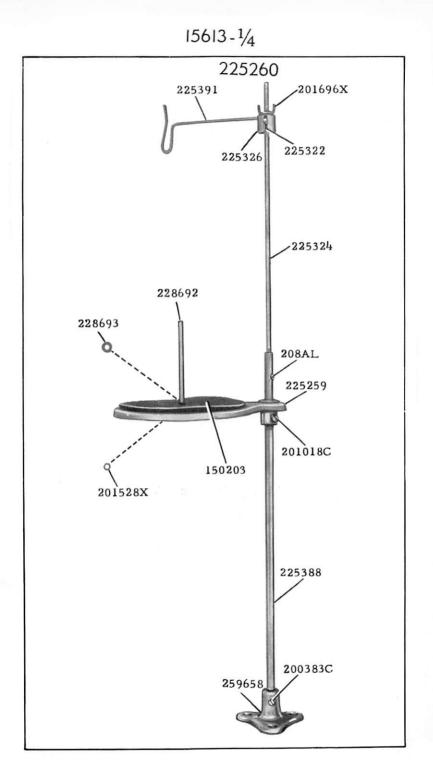


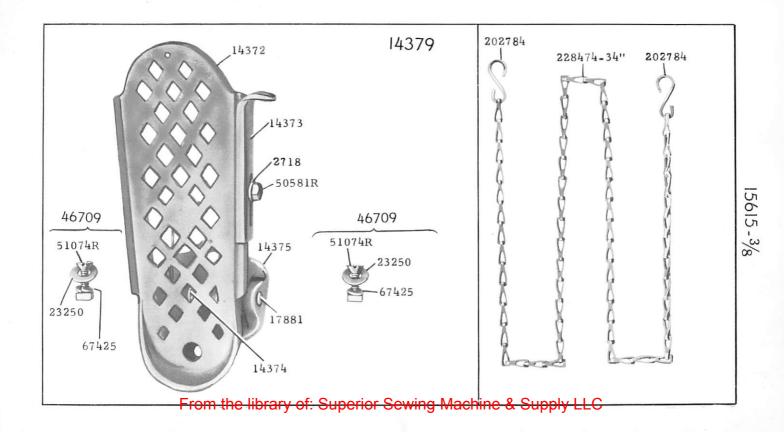


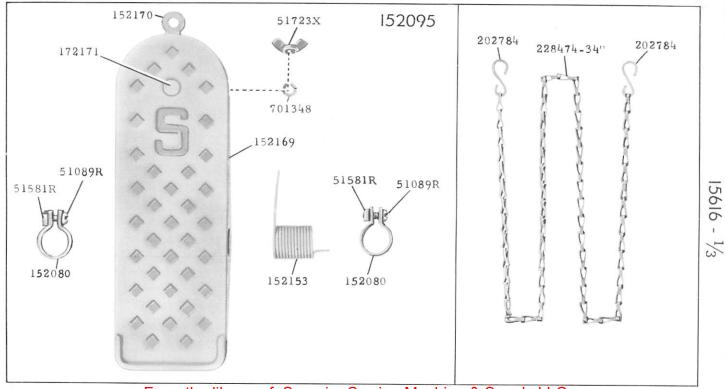


From the library of: Superior Sewing Machine & Supply LLC

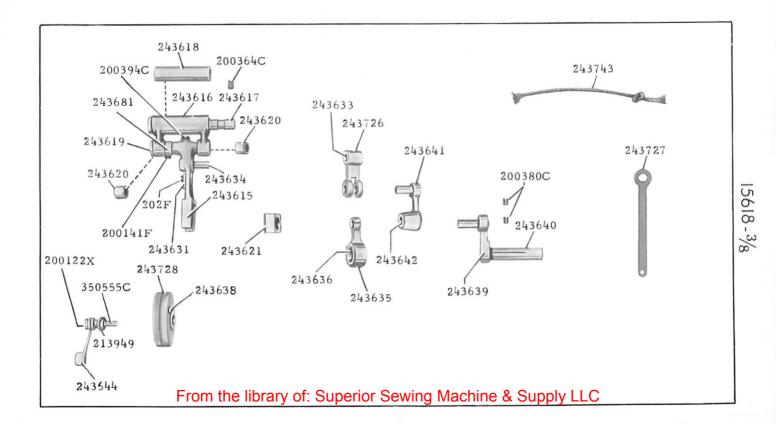

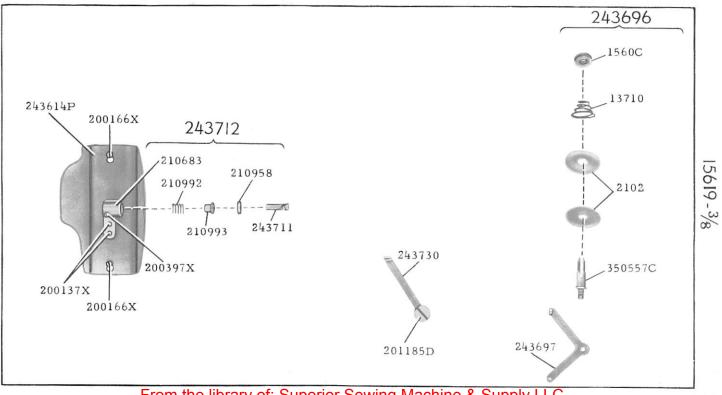

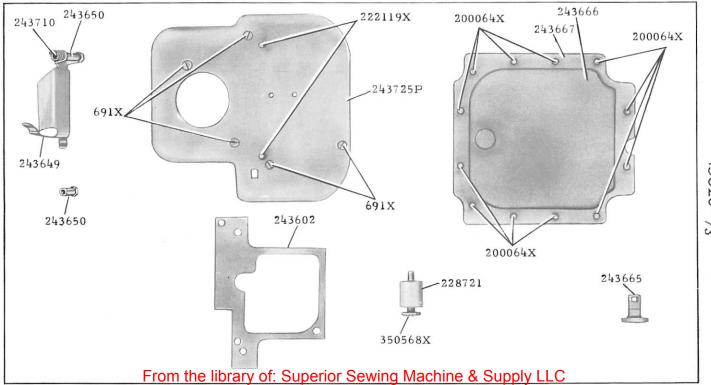



15620-1/3

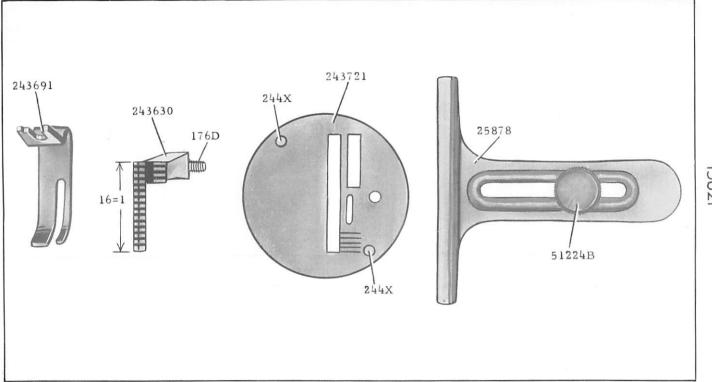

From the library of: Superior Sewing Machine & Supply LLC

15621

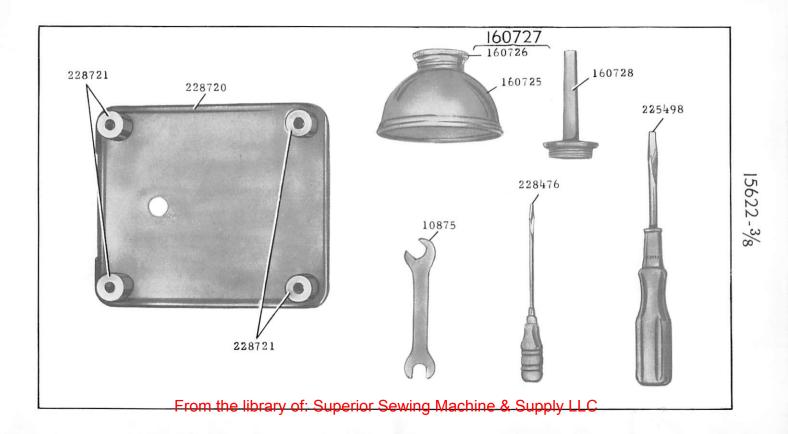

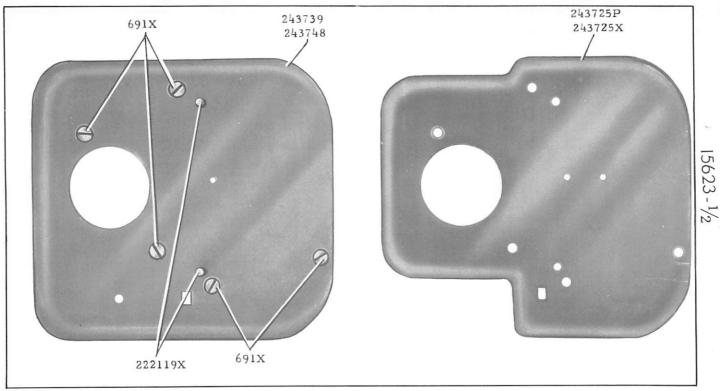

From the library of: Superior Sewing Machine & Supply LLC

