

LIST OF PARTS



SINGER^{**}

MACHINE No. 248-2

THE SINGER MANUFACTURING COMPANY

From the library of: Superior Sewing Machine & Supply LLC

^{**}A Trade Mark of THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling, and when in continuous use, "TYPE B" or "TYPE D" OIL, sold by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 20098.

"TYPE D" OIL should be used when an oil is desired which will produce a minimum of stain on fabrics, even after a long period of storage.

Oiling places are painted with vermilion lacquer.

Copyright, U. S. A., 1948 and 1955,
by The Singer Manufacturing Company
All Rights Reserved for All Countries

I N D E X

	Page
Accessories	10
Binders	11
Cable—From Oscillator to Transmitter	23
Edge Folder on Throw-out Shank	12
Edge Folding Strip Guide	12
Electrical Parts	14
Fill-in Plate with Adjustable Edge Guide	13
Foot Treadle Micro Switch	23
Hemmers	13
Knee Lifter Parts	24
Machine No. 248-2	7
Numerical List of Parts	25
Oil Reservoir	24
Strip Folder on Throw-out Shank	13
Tuning Unit	24

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A—Hardened, Polished, Nickel Plated and Buffed
- A.A—Buffed and Chromium Plated
- A.B—Hardened, Polished, Buffed and Chromium Plated
- A.C—Brown Baking Enamel Finish
- A.D—Gray Baking Enamel Finish
- A.E—Hardened, Bright Rumbled and Nickel Plated
- A.F—Hardened, Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated
- A.G—Alumilite, Plain
- A.H—Alumilite, Dyed
- A.J—Polished, Nickel Plated and Chromium Plated
- A.K—Hardened, Polished, Nickel Plated and Chromium Plated
- A.L—Heat Treated for Toughness
 - B—Polished, Nickel Plated and Buffed
 - C—Hardened Only
- C.R—Hardened and Merlized
 - D—Polished Only
 - E—Soft, Not Polished
 - F—Hardened and Polished
- F.J—Hardened, Polished and Nickel Plated
 - G—Bright Rumbled and Nickel Plated
 - H—Blued
 - J—Nickel Plated Only
 - K—Hardened and Nickel Plated
 - L—Brass Plated
 - M—Oxidized
 - N—Japanned, Dull
 - P—Japanned, Bright
- P.P—Wrinkle Finish
 - R—Merlized
 - S—Cadmium Plated
 - T—Copper Plated
- T.A—Hardened, Polished, Copper and Nickel Plated and Buffed
- T.B—Copper and Nickel Plated and Polished
- T.J—Copper and Nickel Plated Only
- T.K—Hardened, Copper and Nickel Plated
- T.L—Copper and Brass Plated
- T.M—Copper Plated and Oxidized

INSTRUCTIONS FOR ORDERING—Continued

- U—Zinc Plated**
- V—Silver Plated**
- W—Polished and Nickel Plated**
- X—Black Oxide, for Iron and Steel**
- X.C—Hardened and Black Oxide, for Iron or Steel**
- Y—Black Nickel Plated Only**
- Z—Chromium Plated**
- Z.A—Hardened, Polished, Nickel Plated, Buffed and Chromium Plated**
- Z.B—Polished, Nickel Plated, Buffed and Chromium Plated**
- Z.C—Hardened and Chromium Plated**
- Z.D—Polished and Chromium Plated**
- Z.G—Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated**
- Z.J—Nickel and Chromium Plated**
- Z.T—Copper and Chromium Plated**

These letters **MUST BE USED** when they appear in the list; and **AFTER** the number as in the list.

In this series:

1 to 1500, 50001 to 51500 and 140001 to 142000 are
Screw Numbers

1501 to 1800 and 51501 to 51800 are Nut Numbers

1801 to 2000 and 51801 to 52000 are Roller Numbers

2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

FOR



MACHINE NO. 248-2

FOR ELECTRIC SEAMING OF THERMOPLASTICS. ROLLER
PRESSER. DUAL SPEED CONTROL. FOOT LIFTER.

NOTE: The 248-2 Machine consists of Machine Head and Oscillator
only. Other equipment shown above are extra items.

No.	Plate	Name
*169001		Arm with 169052.....
204235	24731	Arm Dowel Pin (2).....
169052	24731	Arm Oil Tube with 169051 (2).....
169051	24731	Arm Oil Tube Oil Wick (braided cotton) (2).....
200004E	24731	Arm Screw (3).....
202005	24731	Arm Screw Washer (3).....
169002	24730	Arm Side Cover.....
140421X	24730	Arm Side Cover Screw (2).....
169003	24727	Arm Shaft.....
270004	24727	Arm Shaft Ball Bearing (back).....
270005	24727	Arm Shaft Ball Bearing (front).....
*169004		Bed.....
169005	24728	Bonding Bar (hollow).....
270303	24728	Bonding Bar Bushing (lower).....
169006	24728	Bonding Bar Bushing (upper).....
140321C	24728	Bonding Bar Bushing (upper) Set Screw.....
169007	24728	Bonding Bar Guide with 1465E.....
1465E	24728	Bonding Bar Guide Clamping Screw.....
270264	24728	Bonding Bar Guide Slide.....
200054E	24728	Bonding Bar Guide Slide Screw (2).....
169086	24728	Bonding Bar Lifting Bracket complete, Nos. 1723E, 169085, 169087 and two 50203E.....

NOTE: When No. 169086 is furnished for Agents orders, include also
Bushings No. 169006.

50203E 24728 Bonding Bar Lifting Bracket Clamping Screw (2)

No.	Plate	Name
1723E	24728	Bonding Bar Lifting Bracket Roller Nut.....
169087		Bonding Bar Lifting Bracket Roller Oil Pad (felt).....
169085	24728	Bonding Bar Lifting Bracket Roller Washer.....
169010	24727	Bonding Bar Lifting Eccentric with two 448AL.....
448AL	24727	Bonding Bar Lifting Eccentric Set Screw (2).....
169011	24728	Bonding Bar Lifting Link.....
270058	24728	Bonding Bar Oiling Felt.....
169012	24728	Bonding Bar Regulating Screw Stud.....
51246AL	24728	Bonding Bar Regulatnig Screw Stud Set Screw.....
169013	24728	Bonding Bar Regulating Screw Stud Set Screw Disc (lead)...
17862	24728	Bonding Bar Spring.....
169014	24728	Bonding Bar Stop Plate.....
1679C	24728	Bonding Bar Stop Plate Lock Nut (2).....
126150	24728	Bonding Bar Stop Plate Lock Nut Lock Washer.....
169089	24728	Bonding Foot with 191ALX, for use with two thicknesses of material.....
169090	24728	Bonding Foot with 191ALX, for use with three or more thicknesses of material.....
169091	24728	Bonding Foot with 191ALX, for use with material of uneven thicknesses.....
51724XC	24728	Bonding Foot Adjusting Nut.....
51724XC	24728	Bonding Foot Adjusting Nut Lock Nut.....
191ALX	24728	Bonding Foot Set Screw.....
169092	24729	Electrode.....
169088	24729	Electrode Block.....
169018	24729	Electrode Block Holder.....
140422X	24729	Electrode Block Holder Screw (2).....
931286	24729	Electrode Block Holder Screw Lock Washer (2).....
140421X	24729	Electrode Block Screw (2).....
701850	24729	Electrode Block Screw Lock Washer (2).....
140421X	24729	Electrode Screw (2).....
701850	24729	Electrode Screw Lock Washer.....
169020	24730	Face Plate.....
140421X	24730	Face Plate Screw (4).....
144259	24704	Feed Clutch (brake).....
144260		Feed Clutch (brake) 144259 with three 131726.....
1299AL	24704	Feed Clutch (brake) Set Screw.....
144261	24704	Feed Clutch (brake) Washer.....
144262	24704	Feed Clutch (drive).....
144263		Feed Clutch (drive) 144262 with three 131726.....
144264	24704	Feed Clutch Driving Arm.....
1255C	24704	Feed Clutch Driving Arm Screw (3).....
131717	24704	Feed Clutch Roller (6).....
68152	24704	Feed Clutch Roller Plunger (6).....
131718	24704	Feed Clutch Roller Plunger Spring (6).....
169021	24704	Feed Clutch Shaft.....
169022		Feed Clutch Shaft 169021 with 144269.....
169023	24704	Feed Clutch Shaft Bushing (2).....
54369	24704	Feed Clutch Shaft Collar with two 465AL (2).....
465AL	24704	Feed Clutch Shaft Collar Set Screw (4).....
144449	24704	Feed Clutch Sleeve with two 140409C.....
140409C	24704	Feed Clutch Sleeve Set Screw (2).....
131726	24704	Feed Clutch Wearing Plate (6).....
144269	24704	Feed Clutch complete, Nos. 144260, 144261, 144263, 144264, 144449, three 1255C and six each 68152, 131717 and 131718.....
52165	24727	Feed Connecting Link.....
375C	24727	Feed Connecting Link Hinge Screw.....
1518J	24727	Feed Connecting Link Hinge Screw Nut.....
52073	24727	Feed Connecting Link Hinge Stud.....
50083AL	24727	Feed Connecting Link Hinge Stud Set Screw.....
169024	24727	Feed Eccentric with two 889AL.....
889AL	24727	Feed Eccentric Set Screw (2).....

No.	Plate	Name
127152	24727	Feed Eccentric Sleeve.....
169025	24727	Feed Forked Connection.....
169026		Feed Forked Connection 169025 with 375C, 1518J and 52165.....
140432C	24727	Feed Forked Connection Hinge Screw.....
1722E	24727	Feed Forked Connection Hinge Screw Nut.....
52408	24727	Feed Regulator with 50083AL.....
52411		Feed Regulator 52408 with 52073.....
1128E	24727	Feed Regulator Hinge Screw.....
169027	24727	Feed Regulating Cam with two 889AL (2).....
889AL	24727	Feed Regulating Cam Set Screw (4).....
169028	24727	Feed Regulating Cam Shaft (2).....
5670	24732	Feed Regulating Chain, 30 in. long, with 56864 and 56865.....
56864	24732	Feed Regulating Chain Hook (large).....
56865	24732	Feed Regulating Chain Hook (small).....
169029	24727	Feed Regulating Dial.....
140202L	24727	Feed Regulating Dial Screw (6).....
169030	24727	Feed Regulating Knob with two 140423S (2).....
36006	24727	Feed Regulating Knob Friction Washer (4).....
140426X	24727	Feed Regulating Knob Position Screw (2).....
140423S	24727	Feed Regulating Knob Set Screw (4).....
169031	24727	Feed Regulating Lever with 51846 and 140377R.....
140377R	24727	Feed Regulating Lever Clamping Screw.....
169032	24727	Feed Regulating Lever Hinge Screw Stud.....
169033	24727	Feed Regulating Lever Hinge Screw Stud Arm with 140377R.....
140377R	24727	Feed Regulating Lever Hinge Screw Stud Arm Clamping Screw.....
169034	24727	Feed Regulating Lever Hinge Screw Stud Bearing.....
1516C	24727	Feed Regulating Lever Hinge Screw Stud Lock Nut.....
51846	24727	Feed Regulating Lever Roller and Stud.....
169035	24727	Feed Regulating Spring.....
1387C	24727	Feed Regulating Spring Eyelet.....
169077	24704	Feed Wheel with two 889AL.....
889AL	24704	Feed Wheel Set Screw (2).....
169072	24729	Filling Plate.....
270170	24727	Machine Pulley, "V" Belt groove, outside diam. of belt groove 2.9 in., with 350540C and 350541C.....
350540C	24727	Machine Pulley Set Screw.....
350541C	24727	Machine Pulley Set Screw.....
270171	24727	Machine Pulley 270170 with 270004.....
270269	24728	Presser Bar with 176X.....
270270	24728	Presser Bar Bushing.....
169069	24731	Presser Bar Lifter.....
350442C	24731	Presser Bar Lifter Hinge Screw.....
270062	24728	Presser Bar Lifting and Releasing Lever Bracket.....
270095	24728	Presser Bar Lifting and Releasing Lever Bracket Spring.....
270256	24731	Presser Bar Lifting Link.....
270285	24731	Presser Bar Lifting Link Connection.....
446AL	24731	Presser Bar Lifting Link Connection Set Screw.....
200293C	24731	Presser Bar Lifting Link Hinge Screw.....
169037	24731	Presser Bar Lifting Rock Shaft with 446AL.....
169080	24731	Presser Bar Lifting Rock Shaft Arm with 160E and 50269C.....
160E	24731	Presser Bar Lifting Rock Shaft Arm Clamping Screw.....
50269C	24731	Presser Bar Lifting Rock Shaft Arm Position Screw.....
169039	24728	Presser Bar Position Guide with 350411C.....
350411C	24728	Presser Bar Position Guide Clamping Screw.....
270271	24731	Presser Bar Spring.....
350435C	24731	Presser Bar Spring Pressure Screw.....
270065	24731	Presser Bar Spring Screw Stud.....
1898XC	24729	Roller, 1 1/4 in. diam., 3/16 in. face, (fine roller) with 386X and 1528X.....
169048	24729	Roller Arm for 169050R.....

PARTS FOR MACHINE NO. 248-2

No.	Plate	Name
12257X	24729	Roller Arm for 12267R.....
440XC	24729	Roller Arm Adjusting Screw.....
15446		Roller Arm Adjusting Screw 440XC with 1547X.....
1547X	24729	Roller Arm Adjusting Screw Nut.....
6073R	24729	Roller Arm Bracket for 169050.....
46037R	24729	Roller Arm Bracket for 12267R.....
316XC	24729	Roller Arm Bracket Screw Center (2).....
15444		Roller Arm Bracket Screw Center 316XC with 1547X (2).....
1547X	24729	Roller Arm Bracket Screw Center Nut (2).....
2205X	24729	Roller Arm Lock Spring.....
176X	24729	Roller Arm Lock Spring Screw.....
1549X	24729	Roller Arm Lock Spring Screw Nut.....
169050R	24729	Roller Presser (right hand) complete, 1-1/4 in. diam., 3/16 in. face (fine roller) Nos. 176X, 1549X, 1898XC, 2205X, 6073R, 15446, 169048 and two 15444.....
NOTE: No. 169050R is regularly furnished with this Machine.		
12267R	24729	Roller Presser (left hand) complete, 1 1/4 in. diam., 3/16 in. face (fine roller) Nos. 176X, 1549X, 1898XC, 2205X, 12257X, 15446, 46037R and two 15444.....
NOTE: No. 12267R is shipped as an additional part.		
176X	24728	Roller Presser Screw.....
386X	24729	Roller Screw.....
1528X	24729	Roller Screw Nut.....
169074	24729	Throat Plate.....
691F	24729	Throat Plate Screw (2).....
195582	24731	Tuning Unit (co-axial) Cable Receptacle.....
208AL	24731	Tuning Unit (co-axial) Cable Receptacle Screw (4).....
169041	24730	Tuning Unit Cover.....
202X	24730	Tuning Unit Cover Screw (8).....
169043	24731	Tuning Unit Dial Indicator.....
140424X	24731	Tuning Unit Screw (3).....
931286	24731	Tuning Unit Screw Lock Washer (3).....
169045	24731	Tuning Unit Screw Spacer (3).....

ACCESSORIES

No.	Plate	Name
217J	24732	Attachment Screw (2).....
5670	24732	Chain, 33 1/2 in. long, with 56864 and 56865.....
56864	24732	Chain Hook (large).....
56865	24732	Chain Hook (small).....
12361	24732	Machine Hinge Connection (2).....
41564	24732	Machine Rest Pin (wood).....
120342	24732	Oiler with 120343.....
120343	24732	Oiler Spout, 3 1/2 in. long.....
160287	24732	One Quart of heavy grade cloth and leather oil.....
160669	24732	Screw Driver.....
820894		Sheet of Crocus Cloth.....
144465	24732	Hexagon Socket Wrench, for Allen Safety Set Screw 140409 (1/4 x 28).....
124165	24732	Wrench.....
169071	24732	Wrench for 140455 (not regularly furnished).....
169079	24732	Wrench for 140490 (not regularly furnished).....

BINDERS

BINDER ON THROW-OUT SHANK

FOR 3/4 IN. TO 1 1/4 IN. BINDING

No.	Plate	Name
160638	24744	Binder.....
1443B	24744	Binder Adjusting Screw (2).....
176J	24744	Binder Height Adjusting Screw.....
1695J	24744	Binder Height Adjusting Screw Lock Nut.....
140554J	24744	Binder Hinge Screw.....
121678	24744	Binder Spring.....
160636	24744	Binder Throw-out Shank.....
1097J		Binder Throw-out Shank Screw.....
160639	24744	Binder on Throw-out Shank complete, Nos. 176J, 1097J, 1695J, 121678, 140554J, 160636, 160638 and two 1443B.....

BINDER (English) ON THROW-OUT SHANK

FOR 1/2 IN. TO 1 IN. BINDING

No.	Plate	Name
160463	24748	Binder (English).....
160460	24748	Binder Plate.....
160461	24748	Binder Throw-out Shank.....
959J	24748	Binder Throw-out Shank Hinge Screw.....
35610	24748	Binder Throw-out Shank Hinge Screw Friction Washer.....
237J	24748	Binder Screw (2).....
7071	24748	Binder Screw Washer (2).....
160464	24748	Binder (English) on Throw-out Shank complete, Nos. 959J, 35610, 160460, 160461, 160463 and two each 237J and 7071.....

BINDER (English) ON THROW-OUT SHANK

FOR BINDING 7/8 IN. AND UP, IN STEPS 1/8 IN.

No.	Plate	Name
160471	24748	Binder (English).....
160460	24748	Binder Plate.....
160461	24748	Binder Throw-out Shank.....
959J	24748	Binder Throw-out Shank Hinge Screw.....
35610	24748	Binder Throw-out Shank Hinge Screw Friction Washer.....
237J	24748	Binder Screw (2).....
7071	24748	Binder Screw Washer (2).....
160472	24748	Binder (English) on Throw-out Shank complete, Nos. 959J, 35610, 160460, 160461, 160471 and two each 237J and 7071.....

BINDER (Transverse) ON THROW-OUT SHANK

FOR 1/2 IN. TO 1 IN. BINDING

No.	Plate	Name
160473	24749	Binder (transverse).....
160460	24749	Binder Plate.....
160474	24749	Binder Throw-out Shank.....
959J	24749	Binder Throw-out Shank Hinge Screw.....
35610	24749	Binder Throw-out Shank Hinge Screw Friction Washer.....
51097J	24749	Binder Thumb Screw.....
3146	24749	Binder Thumb Screw Washer.....
160475	24749	Binder (transverse) on Throw-out Shank complete, Nos. 959J, 3146, 35610, 51097J, 160460, 160473 and 160474.....

BINDER (Transverse) ON THROW-OUT SHANK FOR BINDING 1 1/2 IN. AND UP

No.	Plate	Name
160476	24749	Binder (transverse).....
160460	24749	Binder Plate.....
160474	24749	Binder Throw-out Shank.....
959J	24749	Binder Throw-out Shank Hinge Screw.....
35610	24749	Binder Throw-out Shank Hinge Screw Friction Washer.....
51097J	24749	Binder Thumb Screw.....
3146	24749	Binder Thumb Screw Washer.....
160477	24749	Binder (transverse) on Throw-out Shank complete, Nos. 959J, 3146, 35610, 51097J, 160460, 160474 and 160476.....

EDGE FOLDERS

EDGE FOLDER ON THROW-OUT SHANK UP TO 5/16 IN. FOLD

No.	Plate	Name
160465	24710	Edge Folder.....
160460	24710	Edge Folder Plate.....
160461	24710	Edge Folder Throw-out Shank.....
959J	24710	Edge Folder Throw-out Shank Hinge Screw.....
35610	24710	Edge Folder Throw-out Shank Hinge Screw Friction Washer.....
237J	24710	Edge Folder Screw (2).....
7071	24710	Edge Folder Screw Washer (2).....
160466	24710	Edge Folder on Throw-out Shank complete, Nos. 959J, 35610, 160460, 160461, 160465 and two each 237J and 7071.....

EDGE FOLDER ON THROW-OUT SHANK FOR 3/8 IN. FOLD AND ABOVE

No.	Plate	Name
160490	24744	Edge Folder.....
160460	24744	Edge Folder Plate.....
160461	24744	Edge Folder Throw-out Shank.....
959J	24744	Edge Folder Throw-out Shank Hinge Screw.....
35610		Edge Folder Throw-out Shank Hinge Screw Friction Washer.....
237J	24744	Edge Folder Screw (2).....
7071	24744	Edge Folder Screw Washer (2).....
160491	24744	Edge Folder on Throw-out Shank complete, Nos. 959J, 35610, 160460, 160461, 160490 and two each 237J and 7071.....

EDGE FOLDING STRIP GUIDE (Adjustable) ON THROW-OUT SHANK

No.	Plate	Name
160467	24710	Edge Folding Strip Guide (adjustable).....
160460	24710	Edge Folding Strip Guide Plate.....
160461	24710	Edge Folding Strip Guide Throw-out Shank.....
959J	24710	Edge Folding Strip Guide Throw-out Shank Hinge Screw.....
35610	24710	Edge Folding Strip Guide Throw-out Shank Hinge Screw Friction Washer.....
237J	24710	Edge Folding Strip Guide Screw (2).....
7071	24710	Edge Folding Strip Guide Screw Washer (2).....
160468	24710	Edge Folding Strip Guide (adjustable) on Throw-out Shank complete, Nos. 959J, 35610, 160460, 160461, 160467 and two each 237J and 7071.....

FILL-IN PLATE

WITH ADJUSTABLE EDGE GUIDE

No.	Plate	Name
160478	24711	Edge Guide (adjustable).....
239J	24711	Edge Guide Screw.....
160479	24711	Fill-in Plate with Adjustable Edge Guide complete, Nos. 239J and 160478.....

HEMMERS

HEMMER ON THROW-OUT SHANK

No.	Plate	Name
160459	24711	Hemmer.....
160460	24711	Hemmer Plate.....
160461	24711	Hemmer Throw-out Shank.....
959J	24711	Hemmer Throw-out Shank Hinge Screw.....
35610	24711	Hemmer Throw-out Shank Hinge Screw Friction Washer.....
237J	24711	Hemmer Screw (2).....
7071	24711	Hemmer Screw Washer (2).....
160462	24711	Hemmer on Throw-out Shank complete, Nos. 959J, 35610, 160459, 160460, 160461 and two each 237J and 7071.....

HEMMER (adjustable) ON THROW-OUT ARM

FOR HEM SIZE 1/2 IN. AND ABOVE, FOR HEMMING BOTTOM OF RAINCOATS

No.	Plate	Name
160635	24744	Hemmer.....
1443B	24744	Hemmer Adjusting Screw (2).....
140554J	24744	Hemmer Hinge Screw.....
121678	24744	Hemmer Spring.....
160636	24744	Hemmer Throw-out Arm.....
1097J		Hemmer Throw-out Arm Screw.....
160637	24744	Hemmer (adjustable) on Throw-out Arm complete, Nos. 1097J, 121678, 140554J, 160635, 160636 and two 1443B.....

STRIP FOLDER ON THROW-OUT SHANK

FOR HANGING LOOPS FOR RAINCOATS

No.	Plate	Name
160469	24711	Strip Folder.....
160460	24711	Strip Folder Plate.....
160461	24711	Strip Folder Throw-out Shank.....
959J	24711	Strip Folder Throw-out Shank Hinge Screw.....
35610	24711	Strip Folder Throw-out Shank Hinge Screw Friction Washer.....
237J	24711	Strip Folder Screw (2).....
7071	24711	Strip Folder Screw Washer (2).....
160470	24711	Strip Folder on Throw-out Shank complete, Nos. 959J, 35610, 160460, 160461, 160469 and two each 237J and 7071.....

ELECTRICAL PARTS

SINGER ELECTRONIC OSCILLATOR NO. G16

No.	Plate	Name
195445	24716	Cable with 195446.....
195446	24716	Cable Adapter Plug (two to three wire).....
195447	24736	Cable (co-axial).....
195517		Cabinet.....
195609	24733	Oscillator Cap (Plate) with lead (2).....
195613	24733	Oscillator Choke (Grid).....
195608	24713	Oscillator Choke (plate).....
195612	24733	Oscillator Condenser (By-pass, grid).....
50662R	24733	Oscillator Condenser (By-pass, grid) Fastening Screw.....
1799	24733	Oscillator Condenser (By-pass, grid) Fastening Screw Nut (brass).....
195554	24733	Oscillator Coupler (Grid, Extension).....
50514	24733	Oscillator Coupler (Grid, Extension) Screw (brass).....
50514	24733	Oscillator Coupler (Grid, Extension) Shaft Screw (brass).....
50587	24713	Oscillator Coupling Coil Grounding Screw.....
1799		Oscillator Coupling Coil Ground Screw Nut.....
190070	24713	Oscillator Grommet (rubber) (2).....
50672	24713	Oscillator Plate Tank Condenser Bracket Screw (brass) (4).....
931084		Oscillator Plate Tank Condenser Bracket Screw Washer (4).....
195554	24733	Oscillator Plate Tank Condenser Extension Coupler.....
50514	24733	Oscillator Plate Tank Condenser Extension Coupler Screw (brass).....
50514	24733	Oscillator Plate Tank Condenser Extension Coupler Shaft Screw (brass).....
50672	24733	Oscillator Plate Tank Condenser Stand-off Insulator Screw (2).....
931084		Oscillator Plate Tank Condenser Stand-off Insulator Screw Washer (2).....
195582	24713	Oscillator Receptacle (Amphenol) Co-axial.....
50587	24713	Oscillator Receptacle Screw (brass) (4).....
1799		Oscillator Receptacle Screw Nut (brass) (4).....
195611	24733	Oscillator Resistor (grid).....
50976	24733	Oscillator Resistor (grid) Fastening Screw (2).....
1799S	24733	Oscillator Resistor (grid) Fastening Screw Nut (6).....
50776R		Oscillator Screw (for fastening unit to base of cabinet) (3).....
1785		Oscillator Screw Nut (brass) (3).....
931084		Oscillator Screw Lock Washer (3).....
195610	24733	Oscillator Socket (four-pin) (2).....
50976		Oscillator Socket (four-pin) Screw (brass) (4).....
1799		Oscillator Socket (four-pin) Screw Nut (brass) (12).....
51475R		Oscillator Supporting Bracket Screw (2).....
51636J		Oscillator Supporting Bracket Screw Nut (brass) (2).....
701850		Oscillator Supporting Bracket Screw Nut Lock Washer (2).....
980005	24713	Oscillator Terminal (3).....
50841R	24713	Oscillator Terminal Strip (for four contact) Screw (2).....
1799		Oscillator Terminal Strip (for four contact) Screw Nut (2).....
195614	24713	Oscillator Transformer (filament).....
50974J	24713	Oscillator Transformer Screw (4).....
51636J	24713	Oscillator Transformer Screw Nut (brass) (4).....
701850	24713	Oscillator Transformer Screw Nut Lock Washer (4).....
196051	24733	Oscillator Tube (2).....
NOTE: Two additional No. 196051 are sent with each complete Singer Electronic Oscillator.		
51475R	24713	Oscillator Tube Shield Supporting Rod Screw (4).....
701850	24713	Oscillator Tube Shield Supporting Rod Screw Lock Washer (4).....
195453	24713	Oscillator Unit complete, Nos. 50662R, 195582, 195608, 195611, 195612, 195613, 195614, two each 50841R, 190070, 195554, 195609, 195610, 196051, three each 1785, 50776R, 980005, four each 50514, 50974J, five 50587, six each 50672, 50976, 51475R, 51636J, nine 931084, ten 701850 and twenty six 1799.

No.	Plate	Name
195460	24714	Panel Bulb (pilot light, 115V, 6 Watts) (2).....
50644R	24714	Panel Capacitor Shaft Cover (Plate and Grid) Screw (4).....
195618	24714	Panel Lens (pilot, red).....
195617	24714	Panel Lens (pilot, yellow).....
195555	24714	Panel Milliammeter.....
50667	24714	Panel Milliammeter Screw (3).....
1787		Panel Milliammeter Screw Nut (brass) (3).....
175357		Panel Milliammeter Screw Nut Lock Washer (3).....
195616	24734	Panel Powerstat.....
196292	24734	Panel Powerstat Brush.....
140455C	24734	Panel Powerstat Brush Wheel Set Screw (2).....
195621	24714	Panel Powerstat Dial.....
50587J		Panel Powerstat Dial Screw (3).....
195622	24714	Panel Powerstat Knob with two 140454J.....
140454J		Panel Powerstat Knob Screw (2).....
195553	24734	Panel Powerstat Relay.....
50782J	24734	Panel Powerstat Relay Screw (2).....
50647R	24734	Panel Powerstat Screw (3).....
931084		Panel Powerstat Screw Lock Washer (3).....
195459	24714	Panel Switch (toggle) (2).....
796801	24714	Panel Switch Indicator (off and on) (2).....
51623J	24714	Panel Switch Nut (for fastening switch to panel) (2).....
980005	24734	Panel Terminal (42).....
195619	24734	Panel Terminal Strip.....
50841J	24734	Panel Terminal Strip Screw (2).....
195458	24714	Panel (front) complete, Nos. 195553, 195555, 195616, 195617, 195618, 195619, 195621, 195622, 196292, two each 50782, 50841J, 51623J, 140455C, 195459, 195460, 796801, three each 1787, 50587J, 50647R, 50667, 175357, 931084, four 50644R and forty-two 980005.....
195624	24716	Power Supply and Filter Unit Choke (filter).....
50974J	24716	Power Supply and Filter Unit Choke Screw (4).....
51636J	24716	Power Supply and Filter Unit Choke Screw Nut (4).....
701850	24716	Power Supply and Filter Unit Choke Screw Nut Lock Washer (4).....
195625	24716	Power Supply and Filter Unit Condenser (filter) (2).....
140126J	24716	Power Supply and Filter Unit Condenser Position Bracket Clamping Screw (2).....
50974J	24716	Power Supply and Filter Unit Condenser Position Bracket Screw (4).....
51636J	24716	Power Supply and Filter Unit Condenser Position Bracket Screw Nut (4).....
701850	24716	Power Supply and Filter Unit Condenser Position Bracket Nut Lock Washer (4).....
195462	24716	Power Supply and Filter Unit Fuse (plug, 5 Amp).....
195463	24716	Power Supply and Filter Unit Fuse (plug, 15 Amp).....
942522		Power Supply and Filter Unit Lead Clamp.....
195629	24716	Power Supply and Filter Unit Outlet (duplex).....
50791	24716	Power Supply and Filter Unit Outlet Screw (brass) (4).....
51475R	24716	Power Supply and Filter Unit Platform (Filter circuit) Screw (4).....
51636J		Power Supply and Filter Unit Platform (Filter circuit) Screw Nut (4).....
701850		Power Supply and Filter Unit Platform (Filter circuit) Screw Nut Lock Washer (4).....
195630	24716	Power Supply and Filter Unit Receptacle (fuse) complete (2).....
195626	24716	Power Supply and Filter Unit Resistor (bleeder).....
51475R	24716	Power Supply and Filter Unit Resistor (bleeder) Screw (2).....
51636J	24716	Power Supply and Filter Unit Resistor (bleeder) Screw Nut (2).....
701822	24716	Power Supply and Filter Unit Resistor (bleeder) Screw Nut Lock Washer (2).....

ELECTRICAL PARTS

No.	Plate	Name
50776R		Power Supply and Filter Unit Screw (for fastening filter unit to base) (4).....
1785		Power Supply and Filter Unit Screw Nut (brass) (4).....
931084		Power Supply and Filter Unit Screw Nut Lock Washer (4)....
50974J		Power Supply and Filter Unit Screw (for fastening filter unit to cabinet) (2).....
51636J		Power Supply and Filter Unit Screw Nut (2).....
701850		Power Supply and Filter Unit Screw Nut Lock Washer (2)....
51475R	24716	Power Supply and Filter Unit Supporting Bracket Screw.....
51636J		Power Supply and Filter Unit Supporting Bracket Screw Nut (brass).....
701850		Power Supply and Filter Unit Supporting Bracket Screw Nut Lock Washer.....
980005	24716	Power Supply and Filter Unit Terminal (27).....
195623	24736	Power Supply and Filter Unit Transformer (power).....
51475R		Power Supply and Filter Unit Transformer Screw (4).....
51636J		Power Supply and Filter Unit Transformer Screw Nut (4).....
701850		Power Supply and Filter Unit Transformer Screw Nut Lock Washer (4).....
195461		Power Supply and Filter Unit complete, Nos. 195462, 195463, 195623, 195624, 195626, 195627, 195628, 195629, 942522, two each 140126J, 195625, 195630, 701822, four each 1785, 50776R, 50791, 931084, ten 50974J, eleven 51475R, nineteen 701850, twenty-one 51636J and twenty-seven 980005.....
50514		Rectifier Unit Plug (input) Clamp Screw (brass) (2).....
1799		Rectifier Unit Plug (input) Clamp Screw Nut (brass) (2).....
50841	24735	Rectifier Unit Plug (male) Clamping Screw (brass).....
1799	24735	Rectifier Unit Plug (male) Clamping Screw Nut (brass).....
701822		Rectifier Unit Plug (male) Clamping Screw Nut Lock Washer (2).....
50974R	24735	Rectifier Unit Plug (male) Supporting Bracket Screw (2).....
51636J	24735	Rectifier Unit Plug (male) Supporting Bracket Screw Nut (2).....
701850		Rectifier Unit Plug (male) Supporting Bracket Screw Nut Locker Washer (2).....
195456	24735	Rectifier Unit Safety Switch (micro).....
50514		Rectifier Unit Safety Switch Bracket Screw (brass).....
1799		Rectifier Unit Safety Switch Bracket Screw Nut (brass).....
701822		Rectifier Unit Safety Switch Bracket Screw Nut Lock Washer.....
195455	24735	Rectifier Unit Safety Switch (Micro) complete, Nos. 1799, 50514, 195456 and 701822.....
50776R		Rectifier Unit Screw (2).....
1785J		Rectifier Unit Screw Nut (2).....
931084		Rectifier Unit Screw Nut Lock Washer (2).....
195610	24735	Rectifier Unit Socket (four pin) (2).....
50514	24735	Rectifier Unit Socket Screw (brass) (4).....
1799	24735	Rectifier Unit Socket Screw Nut (brass) (4).....
701822	24735	Rectifier Unit Socket Screw Nut Lock Washer (4).....
50841	24735	Rectifier Unit Terminal Strip Screw (brass) (2).....
50672		Rectifier Unit Terminal Strip Support Screw (brass) (2).....
195615	24735	Rectifier Unit Transformer (filament).....
50974R	24735	Rectifier Unit Transformer Screw (3).....
51636J	24735	Rectifier Unit Transformer Screw Nut (3).....
701850	24735	Rectifier Unit Transformer Screw Nut Lock Washer (3).....
195452	24735	Rectifier Unit Tube (2).....
NOTE: Two additional No. 195452 are sent with each complete Singer Electronic Oscillator.		
195628	24736	Rectifier Unit Tube Cap (long lead).....
195627	24736	Rectifier Unit Tube Cap (short lead).....
51475R	24735	Rectifier Unit Tube Platform Supporting Rod Screw (8).....
701850	24735	Rectifier Unit Tube Platform Supporting Rod Screw Lock Washer (8).....

No.	Plate	Name
195454	24735	Rectifier Unit complete, Nos. 195455, 195615, two each 1785J, 50672, 50776R, 195452, 195610, 931084, three 50841, four 50514, five each 50974R, 51636J, six each 1799, 701822, eight 51475R and thirteen 701850...

ELECTRICAL PARTS

SINGER ELECTRONIC OSCILLATOR NO. G26

No.	Plate	Name
195445	24716	Cable with 195446.....
195446	24716	Cable Adaptor Plug (two to three wire).....
195447	24736	Cable (Co-axial).....
195588	24719	Choke (Filter).....
50647S	24719	Choke (Filter) Screw (4).....
701679T	24719	Choke (Filter) Screw Lock Washer (4).....
195574	24719	Condenser (Filter).....
50647S		Condenser (Filter) Screw (2).....
701679T		Condenser (Filter) Screw Lock Washer (2).....
195463	24737	Fuse (plug, 15 Amp.).....
195870	24721	Oscillator Cap (plate) with Lead (2).....
1799S	24721	Oscillator Cap (plate) with Lead Nut (2).....
701804	24721	Oscillator Cap (plate) with Lead Nut Lock Washer (2).....
136325S	24721	Oscillator Cap (plate) with Lead Nut Washer (2).....
195589	24721	Oscillator Choke (plate).....
195576	24722	Oscillator Condenser (filament) (4).....
195579	24722	Oscillator Condenser (grid).....
140501S	24721	Oscillator Condenser (grid) Screw (4).....
195575	24721	Oscillator Plate Tank Condenser.....
50514S	24721	Oscillator Plate Tank Condenser Screw (4).....
1799S	24719	Oscillator Plate Tank Condenser Screw Nut (4).....
931202T		Oscillator Plate Tank Condenser Screw Nut Lock Washer (4).....
195582	24719	Oscillator Receptacle (Amphenol) Co-axial.....
140252S	24721	Oscillator Receptacle (Amphenol) Co-axial Screw (4).....
51733S	24719	Oscillator Receptacle (Amphenol) Co-axial Screw Nut (4).....
931380T		Oscillator Receptacle (Amphenol) Co-axial Screw Nut Lock Washer (4).....
195591	24722	Oscillator Resistor (grid).....
50514S		Oscillator Resistor (grid) Fastening Screw (2).....
1799S	24722	Oscillator Resistor (grid) Fastening Screw Nut (2).....
931202T		Oscillator Resistor (grid) Fastening Screw Nut Lock Washer (2).....
195601	24721	Oscillator Socket (2).....
50764S	24721	Oscillator Socket Screw (4).....
1799S	24722	Oscillator Socket Screw Nut (4).....
931202T		Oscillator Socket Screw Nut Lock Washer (4).....
701147		Oscillator Socket Screw Nut Washer (fiber) (4).....
136358S	24722	Oscillator Socket Screw Nut Washer (steel) (4).....
195596	24719	Oscillator Transformer (filament).....
50782S		Oscillator Transformer (filament) Screw (4).....
701804T		Oscillator Transformer (filament) Screw Lock Washer (4).....
196051	24737	Oscillator Tube (2).....
NOTE: Two additional No. 196051 are sent with each complete Singer Electronic Oscillator		
195460	24723	Panel Bulb (pilot light, 115V, 6 Watts) (2).....
195603	24723	Panel Lens (pilot, amber) with Socket complete.....
195602	24723	Panel Lens (pilot, red) with Socket complete.....
195590	24723	Panel Milliammeter.....
50513S	24724	Panel Milliammeter Screw (4).....
931202T	24724	Panel Milliammeter Screw Lock Washer (4).....
195577	24724	Panel Milliammeter Condenser (by-pass).....
51672S		Panel Milliammeter Condenser Nut (4).....

ELECTRICAL PARTS

No.	Plate	Name
151060T		Panel Milliammeter Condenser Nut Lock Washer (4).....
67564S		Panel Milliammeter Condenser Washer (2).....
195599	24724	Panel Powerstat.....
195620	24724	Panel Powerstat Brush.....
195621	24723	Panel Powerstat Dial.....
50587J		Panel Powerstat Dial Screw (3).....
195622	24723	Panel Powerstat Knob with two 140454J.....
140454J		Panel Powerstat Knob Screw (2).....
140500S		Panel Powerstat Screw (3).....
195593	24723	Panel Switch (Line Breaker).....
195910	24723	Panel Switch Name Plate (Power).....
140497R	24723	Panel Switch Name Plate Screw (2).....
140498R	24723	Panel Switch Screw (4).....
195594	24723	Panel Switch (Tack).....
796801	24723	Panel Switch (Tack) Indicator (off and on).....
195909	24723	Panel Switch (Tack) Name Plate (Spot Seal).....
140497R	24723	Panel Switch (Tack) Name Plate Screw (2).....
195583	24719	Receptacle (foot switch).....
140502S	24719	Receptacle (foot switch) Screw (2).....
195604	24737	Receptacle (fuse).....
195581	24738	Receptacle (line input).....
51324S	24738	Receptacle (line input) Screw (2).....
195580	24719	Receptacle (Motor).....
140122S	24719	Receptacle (Motor) Screw (2).....
195595	24738	Rectifier Unit Safety Switch (Micro).....
51605J	24738	Rectifier Unit Safety Switch Nut (for fastening Micro Switch to bracket).....
195600	24738	Rectifier Unit Socket (2).....
50672S		Rectifier Unit Socket Screw (2).....
701679T		Rectifier Unit Socket Screw Lock Washer (4).....
136358S		Rectifier Unit Socket Screw Washer (steel) (4).....
701147		Rectifier Unit Socket Screw Washer (fiber) (4).....
195597	24737	Rectifier Unit Transformer (Filament).....
50782S		Rectifier Unit Transformer Screw (4).....
701804T		Rectifier Unit Transformer Screw Lock Washer (4).....
195452	24724	Rectifier Unit Tube (2).....
NOTE: Two additional No. 195452 are sent with each complete Singer Electronic Oscillator.		
195907	24724	Rectifier Unit Tube Cap with Lead (2).....
1783S	24724	Rectifier Unit Tube Cap Nut (2).....
701804T		Rectifier Unit Tube Cap Nut Lock Washer (2).....
67592		Rectifier Unit Tube Cap Nut Washer (4).....
195587	24738	Relay (keying).....
50639S		Relay (keying) Screw (4).....
931202T		Relay (keying) Screw Lock Washer (4).....
195585	24738	Relay (overload, D.C.).....
50647S		Relay (overload, D.C.) Screw (2).....
701679T		Relay (overload, D.C.) Screw Lock Washer (2).....
195584	24738	Relay (plate contactor).....
50647S		Relay (plate contactor) Screw (2).....
701679S		Relay (plate contactor) Screw Lock Washer (2).....
195586	24738	Relay (time delay).....
50639S		Relay (time delay) Screw (2).....
931202T		Relay (time delay) Screw Lock Washer (2).....
195592	24724	Resistor (bleeder).....
50514S	24719	Resistor (bleeder) Screw (2).....
1799S	24719	Resistor (bleeder) Screw Nut (2).....
931202T	24719	Resistor (bleeder) Screw Nut Lock Washer (2).....
195908	24719	Resistor (bleeder) Connection (2).....
51732S	24719	Resistor (bleeder) Connection Nut (brass) (2).....
701348S	24719	Resistor (bleeder) Connection Nut Lock Washer (2).....
195598	24737	Transformer (plate).....
140499S	24737	Transformer (plate) Screw.....
151060T	24737	Transformer (plate) Screw Lock Washer.....

ELECTRICAL PARTS

SINGER ELECTRONIC OSCILLATOR NO. G46

No.	Plate	Name
195445	24716	Cable with 195446.....
195446	24716	Cable Adaptor Plug (two to three wire).....
195447	24736	Cable Co-axial.....
195608		Choke (Grid).....
195608	24743	Choke (Plate).....
195574	24719	Condenser (Filter).....
50647S		Condenser (Filter) Screw (2).....
701679T		Condenser (Filter) Screw Lock Washer (2).....
196056	24743	Condenser Coupler (Grid).....
195463	24716	Fuse (plug, 15 Amp.).....
196052	24740	Oscillator Cap (plate) with Lead (2).....
50692S	24743	Oscillator Chassis Fastening Screw (3).....
67193S		Oscillator Chassis Fastening Screw Lock Washer (3).....
51601S		Oscillator Chassis Fastening Screw Nut (3).....
701511S		Oscillator Chassis Fastening Screw Washer (3).....
195576	24722	Oscillator Condenser (filament) (4).....
196055	24741	Oscillator Condenser (stand-off) (4).....
50514		Oscillator Condenser (stand-off) Mounting Screw (8).....
701844		Oscillator Condenser (stand-off) Mounting Screw Washer (8).....
196063		Oscillator Condenser (grid) Shaft.....
196964	24743	Oscillator Condenser (grid) with Lead.....
196053	24741	Oscillator Plate Tank Condenser.....
196054	24741	Oscillator Plate Tank Condenser Mounting Bracket (2).....
50514S		Oscillator Plate Tank Condenser Screw (4).....
1799S		Oscillator Plate Tank Condenser Screw Nut (4).....
931202T		Oscillator Plate Tank Condenser Screw Nut Lock Washer (4).....
195582	24713	Oscillator Receptacle (Amphenol) Co-axial Cable.....
140125J	24743	Oscillator Receptacle (Amphenol) Co-axial Cable Screw (4).....
51761J		Oscillator Receptacle (Amphenol) Co-axial Cable Screw Nut (4).....
196065		Oscillator Resistor (grid) with Bracket.....
50514S		Oscillator Resistor (grid) Fastening Screw (2).....
1799S		Oscillator Resistor (grid) Fastening Screw Nut (2).....
196158	24742	Oscillator Rotor Lock (grid).....
196158	24741	Oscillator Rotor Lock (plate).....
196159		Oscillator Socket (2).....
50841J		Oscillator Socket Screw (4).....
1799S		Oscillator Socket Screw Nut (4).....
701844		Oscillator Socket Screw Washer (4).....
195596		Oscillator Transformer (filament).....
50782S		Oscillator Transformer (filament) Screw (4).....
701804T		Oscillator Transformer (filament) Screw Lock Washer (4).....
196051	24740	Oscillator Tube (2).....
NOTE: Two additional No. 196051 are sent with each complete Singer Electronic Oscillator.		
195460	24714	Panel Bulb (pilot light, 115 V, 6 Watts) (2).....
195603	24723	Panel Lens (pilot, amber) with Socket complete.....
195602	24723	Panel Lens (pilot, red) with Socket complete.....
196160	24739	Panel Milliammeter.....
195577	24724	Panel Milliammeter Condenser (by-pass).....
51672S	24741	Panel Milliammeter Condenser Nut (4).....
151060T		Panel Milliammeter Condenser Nut Lock Washer (4).....
190091S		Panel Milliammeter Condenser Nut Washer (2).....
195616	24741	Panel Powerstat.....
196161		Panel Powerstat Adapter Plate.....
140620		Panel Powerstat Adapter Plate Screw (3).....

No.	Plate	Name
196292	24734	Panel Powerstat Brush.....
195621	24739	Panel Powerstat Dial.....
50587R		Panel Powerstat Dial Screw (3).....
195622	24739	Panel Powerstat Knob with two 140454J.....
140454J		Panel Powerstat Knob Screw (2).....
50761S		Panel Powerstat Screw (3).....
701348		Panel Powerstat Screw Washer (3).....
196032		Panel Switch (Line Breaker).....
195910	24739	Panel Switch Name Plate (Power).....
140497R	24739	Panel Switch Name Plate Screw (2).....
140498R	24739	Panel Switch Screw (4).....
195594	24739	Panel Switch (Tack).....
796801	24739	Panel Switch (Tack) Indicator (off and on).....
195909	24739	Panel Switch (Tack) Name Plate (Spot Seal).....
140497R	24739	Panel Switch (Tack) Name Plate Screw (2).....
196059	24741	Pick-up Coil with two 897580.....
196060	24741	Pick-up Coil Grounding Post.....
51125	24741	Pick-up Coil Grounding Post Screw (brass).....
897580		Pick-up Coil Terminal (2).....
195583	24743	Receptacle (foot switch).....
51324S	24743	Receptacle (foot switch) Screw (2).....
195604		Receptacle (fuse).....
195581	24741	Receptacle (line input).....
51324S	24741	Receptacle (line input) Screw (2).....
195580		Receptacle (Motor).....
140122S		Receptacle (Motor) Screw (2).....
195595	24738	Rectifier Unit Safety Switch (Micro).....
51605J	24738	Rectifier Unit Safety Switch Nut (for fastening Micro Switch to bracket).....
195600	24738	Rectifier Unit Socket (2).....
50672S		Rectifier Unit Socket Screw (2).....
701679T		Rectifier Unit Socket Screw Lock Washer (2).....
136358S		Rectifier Unit Socket Screw Washer (steel) (4).....
701147		Rectifier Unit Socket Screw Washer (fiber) (4).....
195597	24737	Rectifier Unit Transformer (Filament).....
50782S		Rectifier Unit Transformer Screw (4).....
701804T		Rectifier Unit Transformer Screw Lock Washer (4).....
195452	24724	Rectifier Unit Tube (2).....
NOTE: Two additional No. 195452 are sent with each complete Singer Electronic Oscillator		
195907	24738	Rectifier Unit Tube Cap with Lead (2).....
1783S	24724	Rectifier Unit Tube Cap Nut (2).....
701804T		Rectifier Unit Tube Cap Nut Lock Washer (2).....
67592		Rectifier Unit Tube Cap Nut Washer.....
195587	24738	Relay (keying).....
50639S		Relay (keying) Screw (4).....
931202T		Relay (keying) Screw Lock Washer (4).....
195585	24738	Relay (overload, D.C.).....
50647S		Relay (overload, D.C.) Screw (2).....
701679T		Relay (overload, D.C.) Screw Lock Washer (2).....
195584	24738	Relay (plate contactor).....
50647S		Relay (plate contactor) Screw (2).....
701679S		Relay (plate contactor) Screw Lock Washer (2).....
195586	24738	Relay (time delay).....
50639S		Relay (time delay) Screw (2).....
931202T		Relay (time delay) Screw Lock Washer (2).....
195592	24724	Resistor (bleeder).....
195908	24719	Resistor (bleeder) Connection (2).....
51732S	24719	Resistor (bleeder) Connection Nut (brass) (2).....
701348S	24719	Resistor (bleeder) Connection Nut Lock Washer (2).....
50514S	24719	Resistor (bleeder) Screw (2).....
1799S	24719	Resistor (bleeder) Screw Nut (2).....
931202T	24719	Resistor (bleeder) Screw Nut Lock Washer (2).....
195598	24737	Transformer (plate).....

SINGER ELECTRONIC OSCILLATOR NO. G46A

No.	Plate	Name
195445	24716	Cable with 195446.....
195446	24716	Cable Adaptor Plug (two to three wire).....
195447	24736	Cable (Co-axial).....
196396	24743	Choke (Filter).....
196455		Choke (Filter) Mounting Strap (2).....
50647S		Choke (Filter) Screw (4).....
195608		Choke (Grid).....
195608	24743	Choke (Plate).....
196093	24743	Condenser (Filter).....
140250S		Condenser (Filter) Screw (2).....
701679T		Condenser (Filter) Screw Lock Washer (2).....
1785		Condenser (Filter) Screw Nut (2).....
994683	24742	Fusetron (plug, 6.25 Amp.).....
196580	24743	Harness Clamp.....
196581		Harness Clamp.....
50782S	24743	Harness Clamp Screw (2).....
701679S		Harness Clamp Screw Lock Washer (2).....
1783S	24743	Harness Clamp Screw Nut (2).....
196052	24740	Oscillator Cap (plate) with Lead (2).....
50692S	24743	Oscillator Chassis Fastening Screw (3).....
67193S		Oscillator Chassis Fastening Screw Lock Washer (3).....
51601S		Oscillator Chassis Fastening Screw Nut (3).....
701511S		Oscillator Chassis Fastening Screw Washer (3).....
196056	24743	Oscillator Condenser Coupler (Grid).....
196063		Oscillator Condenser (Grid) Shaft.....
196964	24743	Oscillator Condenser (Grid) with Lead.....
196055	24741	Oscillator Condenser (stand-off) (4).....
50514	24741	Oscillator Condenser (stand-off) Mounting Screw (8).....
701844		Oscillator Condenser (stand-off) Washer (8).....
196053	24741	Oscillator Plate Tank Condenser.....
196054	24741	Oscillator Plate Tank Condenser Mounting Bracket (2).....
195582	24743	Oscillator Receptacle (Amphenol) Co-axial Cable.....
140125J	24743	Oscillator Receptacle (Amphenol) Co-axial Cable Screw (4).....
51761J		Oscillator Receptacle (Amphenol) Co-axial Cable Screw Nut (4).....
196065		Oscillator Resistor (Grid) with Bracket.....
50514		Oscillator Resistor (Grid) Fastening Screw (2).....
1799S		Oscillator Resistor (Grid) Fastening Screw Nut (2).....
196158	24742	Oscillator Rotor Lock (Grid).....
196158	24741	Oscillator Rotor Lock (Plate).....
196091	24742	Oscillator Transformer (filament).....
196454		Oscillator Transformer (filament) Mounting Strap (2).....
50647S		Oscillator Transformer (filament) Screw (4).....
196051	24740	Oscillator Tube (2).....
NOTE: Two additional No. 196051 are sent with each complete Singer Electronic Oscillator.		
196159	24742	Oscillator Tube Socket (2).....
50841J	24742	Oscillator Tube Socket Mounting Screw (4).....
1799		Oscillator Tube Socket Mounting Screw Nut (4).....
701844		Oscillator Tube Socket Mounting Screw Washer (4).....
195460	24739	Panel Bulb (pilot light, 115V, 6 Watts) (2).....
195603	24739	Panel Lens (pilot, amber) with Socket complete.....
195602	24739	Panel Lens (pilot, red) with Socket complete.....
196160	24739	Panel Milliammeter.....
195577	24741	Panel Milliammeter Condenser (by-pass).....
51672S	24741	Panel Milliammeter Condenser Nut (4).....
151060T		Panel Milliammeter Condenser Nut Lock Washer (4).....
190091S		Panel Milliammeter Condenser Nut Washer (4).....
195616	24741	Panel Powerstat.....
196292	24740	Panel Powerstat Brush.....
195621	24739	Panel Powerstat Dial.....

No.	Plate	Name
50587R		Panel Powerstat Dial Screw (3).....
195622	24739	Panel Powerstat Knob with two 140454J.....
140454J		Panel Powerstat Knob Screw (2).....
140500S	24739	Panel Powerstat Screw (3).....
701348		Panel Powerstat Screw Washer (3).....
1515S	24742	Panel Powerstat Screw Nut (3).....
196458	24739	Panel Switch (Line Breaker).....
195910	24739	Panel Switch Name Plate (Power).....
140497R	24739	Panel Switch Name Plate Screw (2).....
140498R	24739	Panel Switch Screw (4).....
195594	24739	Panel Switch (Tack).....
796801	24739	Panel Switch (Tack) Indicator (off and on).....
195909	24739	Panel Switch (Tack) Name Plate (Spot Seal).....
140497R	24739	Panel Switch (Tack) Name Plate Screw (2).....
196059	24741	Pick-up Coil with two 897580.....
196060	24741	Pick-up Coil Grounding Post.....
5112S	24741	Pick-up Coil Grounding Post Screw (brass).....
897580		Pick-up Coil Terminal (2).....
195583	24743	Receptacle (foot switch).....
51324S	24743	Receptacle (foot switch) Screw (2).....
196457	24742	Receptacle (fuse).....
196453		Receptacle (fuse) Insulation (paper).....
50771S	24742	Receptacle (fuse) Screw (2).....
701804		Receptacle (fuse) Screw Lock Washer (2).....
701719		Receptacle (fuse) Screw Washer (2).....
195581	24741	Receptacle (line input).....
51324S	24741	Receptacle (line input) Screw (2).....
196452	24743	Receptacle (Motor).....
51324S	24743	Receptacle (Motor) Screw (2).....
195600	24742	Rectifier Unit Socket (2).....
196410		Rectifier Unit Socket Mounting Plate.....
51239X		Rectifier Unit Socket Mounting Plate Screw (2).....
701679S		Rectifier Unit Socket Mounting Plate Screw Lock Washer (2).....
51522S		Rectifier Unit Socket Mounting Plate Screw Nut (2).....
50678X	24742	Rectifier Unit Socket Screw (4).....
701679T		Rectifier Unit Socket Screw Lock Washer (4).....
51522S		Rectifier Unit Socket Screw Nut (4).....
136358S		Rectifier Unit Socket Screw Washer (steel) (4).....
701147		Rectifier Unit Socket Screw Washer (fiber) (4).....
196090	24743	Rectifier Unit Transformer (Filament).....
196454	24743	Rectifier Unit Transformer (Filament) Mounting Strap (2).....
50647S	24743	Rectifier Unit Transformer Screw (4).....
195452	24742	Rectifier Unit Tube (2).....
NOTE: Two additional No. 195452 are sent with each complete Singer Electronic Oscillator.		
196622	24742	Rectifier Unit Tube Cap with Lead (2).....
195587	24742	Relay (keying).....
50639S		Relay (keying) Screw (4).....
931202T		Relay (keying) Screw Lock Washer (4).....
19639S	24742	Relay (overload, D.C.).....
50934S		Relay (overload, D.C.) Screw (2).....
701679T		Relay (overload, D.C.) Screw Lock Washer (2).....
931131S		Relay (overload, D.C.) Screw Washer (2).....
196459	24742	Relay (plate contactor).....
50700S	24742	Relay (plate contactor) Screw (2).....
701804T		Relay (plate contactor) Screw Lock Washer (2).....
701719		Relay (plate contactor) Screw Washer (2).....
196451	24740	Relay (time delay) Condenser (Filter).....
50644S		Relay (time delay) Condenser (Filter) Screw (2).....
701804S		Relay (time delay) Condenser (Filter) Screw Lock Washer (2).....
196449	24740	Relay (time delay) Tube.....
196448	24740	Relay (time delay) Tube Socket.....

No.	Plate	Name
50514		Relay (time delay) Tube Socket Screw (2).....
931202T		Relay (time delay) Tube Socket Screw Lock Washer (2).....
67230		Relay (time delay) Tube Socket Screw Washer (2).....
195592	24743	Resistor (bleeder).....
195908		Resistor (bleeder) Connection (2).....
701850		Resistor (bleeder) Connection Nut Lock Washer (2).....
50514S		Resistor (bleeder) Screw (2).....
1799S		Resistor (bleeder) Screw Nut (2).....
931202T		Resistor (bleeder) Screw Nut Lock Washer (2).....
196089	24740	Transformer (Plate).....
196456	24740	Transformer (Plate) Mounting Strap (2).....
50761S	24740	Transformer (Plate) Screw (4).....
196450	24741	Switch (door interlock).....
51605J	24741	Switch (door interlock) Nut (for fastening switch to bracket).....

CABLE NO. 196635 (FROM OSCILLATOR TO TRANSMITTER)

No.	Plate	Name
191407	24745	Cable (only).....
191406		Cable (complete, Nos. 191407 and 898780).....
898780	24745	Cable Clamp with 50771.....
50771	24745	Cable Clamp Screw.....
196636	24745	Cable Plug.....
196635	24745	Cable 191406 with 196636 (from Oscillator to Transmitter).....

FOOT TREADLE MICRO SWITCH NO. 196645

No.	Plate	Name
196601		Foot Treadle Cord complete, Nos. 195567, 965841 and two 196495.....
196602	24746	Foot Treadle Cord Cable Clamp.....
50640R	24746	Foot Treadle Cord Cable Clamp Fastening Screw.....
51601R	24746	Foot Treadle Cord Cable Clamp Fastening Screw Nut.....
931202R	24746	Foot Treadle Cord Cable Clamp Fastening Screw Washer.....
190070	24746	Foot Treadle Cord Grommet.....
965841	24746	Foot Treadle Cord Lead.....
196495	24746	Foot Treadle Cord Lead Terminal (2).....
195567	24746	Foot Treadle Cord Plug.....
196599		Foot Treadle Micro Switch.....
196593	24746	Foot Treadle Micro Switch Extension Frame.....
196600		Foot Treadle Micro Switch Insulation (paper).....
140744		Foot Treadle Micro Switch Mounting Screw.....
196597	24746	Foot Treadle Micro Switch Saddle.....
196598	24746	Foot Treadle Micro Switch Saddle Adjusting Spring.....
51128R	24746	Foot Treadle Micro Switch Saddle Adjusting Spring Screw.....
51601R	24746	Foot Treadle Micro Switch Saddle Pivot Nut.....
140745J	24746	Foot Treadle Micro Switch Saddle Pivot Screw.....
701497R	24746	Foot Treadle Micro Switch Saddle Pivot Washer (2).....
196595	24746	Foot Treadle Return Spring.....
196596	24746	Foot Treadle Return Spring Retaining Plate.....
50671R	24746	Foot Treadle Return Spring Retaining Plate Screw.....
196445	24746	Foot Treadle Micro Switch complete, Nos. 50640R, 50671R, 51128R, 140744, 140745J, 190070, 196593, 196595, 196596, 196597, 196598, 196599, 196600, 196601, 196602, 931202R and two each 51601R and 701497R.....

NOTE: Foot Treadle Micro Switch complete, No. 196445 is included in Stand No. 601241.

KNEE LIFTER PARTS

No.	Plate	Name
169081	24747	Chain, length 14 1/4 in. with 56865.....
56865	24732	Chain Hook (small).....
62164	24747	Chain Idler Pulley (2).....
128815	24747	Chain Idler Pulley Bracket with two wood screws 1 in. No. 12 (2).....
1064R	24747	Chain Idler Screw (2).....
150036	24747	Chain Idler complete, Nos. 1064R, 62164 and 128815 (2)...
7124	24747	Rock Shaft.....
7539	24747	Rock Shaft Hanger (back) with two wood screws 1 in. No. 10.....
20093	24747	Rock Shaft Hanger (front) with two wood screws 1 in. No. 10.....
6335	24747	Rock Shaft Knee Arm with 1509E.....
6336		Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 6335.....
2766	24747	Rock Shaft Knee Arm Hub with 356C.....
356C	24747	Rock Shaft Knee Arm Hub Set Screw.....
1509E	24747	Rock Shaft Knee Arm Lock Nut.....
2767	24747	Rock Shaft Knee Plate with 356C.....
150668	24747	Rock Shaft Knee Plate Pad (rubber).....
356C	24747	Rock Shaft Knee Plate Set Screw.....
6337	24747	Rock Shaft Lifting Bracket with two 356C.....
34592	24747	Rock Shaft Lifting Bracket Hook.....
356C	24747	Rock Shaft Lifting Bracket Hook Set Screw.....
356C	24747	Rock Shaft Lifting Bracket Set Screw.....
2770	24747	Rock Shaft Stop Dog with 140219C.....
140219C		Rock Shaft Stop Dog Set Screw.....
169082	24747	Rock Shaft complete, Nos. 2770, 6336, 6337, 7124, 7539, 20093 and 34592.....
169083	24747	Knee Lifter complete, Nos. 150668, 169081, 169082 and two 150036.....

NOTE: Knee Lifter complete, No. 169083 is furnished only when specified on order.

OIL RESERVOIR

No.	Plate	Name
169047	24732	Oil Reservoir, with four wood screws 1 1/2 in. No. 6 F.H.....

TUNING UNIT

No.	Plate	Name
169042	24731	Tuning Unit Dial.....
195606	24735	Tuning Unit Knob.....
195607	24735	Tuning Unit Knob Flange.....
140444		Tuning Unit Knob Flange Screw (2).....
195605	24735	Tuning Unit Knob 195606 with 195607 and two 140444.....
50514J	24735	Tuning Unit Knob Screw.....
169046	24735	Tuning Unit Shaft Coupling with two 140490C.....
140490C	24735	Tuning Unit Shaft Coupling Set Screw (2).....
196193	24735	Tuning Unit complete, Nos. 50514J, 169042, 169046 and 195605.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
160E	24731	Presser Bar Lifting Rock Shaft Arm Clamping Screw for 169080.....
176X	24729	Roller Arm Lock Spring Screw for 12267R and 169050R.....
176X	24728	Roller Presser Screw for 270269.....
176J	24744	Binder Height Adjusting Screw for 160639.....
191ALX	24728	Bonding Foot Set Screw for 169089, 169090 and 169091....
202X	24730	Tuning Unit Cover Screw.....
208AL	24731	Tuning Unit (Co-axial) Cable Receptacle Screw.....
217J	24732	Attachment Screw (Accessories).....
237J	24748	Binder Screw for 160464 and 160472.....
237J	24710	Edge Folder Screw for 160466 and 160491.....
237J	24710	Edge Folding Strip Guide Screw for 160468.....
237J	24711	Hemmer Screw for 160462.....
237J	24711	Strip Folder Screw for 160470.....
239J	24711	Edge Guide Screw for 160479.....
316XC	24729	Roller Arm Bracket Screw Center for 15444.....
356C	24747	Knee Lifter Rock Shaft Knee Arm Hub Set Screw for 2766....
356C	24747	Knee Lifter Rock Shaft Knee Plate Set Screw for 2767.....
356C	24747	Knee Lifter Rock Shaft Lifting Bracket Hook Set Screw for 6337.....
356C	24747	Knee Lifter Rock Shaft Lifting Bracket Set Screw for 6337....
375C	24727	Feed Connecting Link Hinge Screw for 169026.....
386X	24729	Roller Screw for 1898XC.....
440XC	24729	Roller Arm Adjusting Screw for 15446.....
446AL	24731	Presser Bar Lifting Link Connection Set Screw for 169037...
448AL	24727	Bonding Bar Lifting Eccentric Set Screw for 169010.....
465AL	24704	Feed Clutch Shaft Collar Set Screw for 54369.....
691F	24729	Throat Plate Screw.....
889AL	24727	Feed Eccentric Set Screw for 169024.....
889AL	24727	Feed Regulating Cam Set Screw for 169027.....
889AL	24704	Feed Wheel Set Screw for 169077.....
959J	24748	Binder Throw-out Shank Hinge Screw for 160464, 160472, 160475 and 160477.....
959J	24710	Edge Folder Throw-out Shank Hinge Screw for 160466 and 160491.....
959J	24710	Edge Folding Strip Guide Throw-out Shank Hinge Screw for 160468.....
959J	24711	Hemmer Throw-out Shank Hinge Screw for 160462.....
959J	24711	Strip Folder Throw-out Shank Hinge Screw for 160470.....
1064R	24747	Knee Lifter Chain Idler Screw for 150036.....
1097J		Binder Throw-out Shank Screw for 160639.....
1097J	24744	Hemmer Throw-out Arm Screw for 160637.....
1128E	24727	Feed Regulator Hinge Screw.....
1255C	24704	Feed Clutch Driving Arm Screw for 144269.....
1299AL	24704	Feed Clutch (brake) Set Screw.....
1387C	24727	Feed Regulating Spring Eyelet.....
1443B	24744	Binder Adjusting Screw for 160639.....
1443B	24744	Hemmer Adjusting Screw for 160637.....
1465E	24728	Bonding Bar Guide Clamping Screw for 169007.....
1509E	24747	Knee Lifter Rock Shaft Knee Arm Lock Nut for 6335.....
1515S	24742	Panel Powerstat Screw Nut for Singer Electronic Oscillator No. G46A.....
1516C	24727	Feed Regulating Lever Hinge Screw Stud Lock Nut.....
1518J	24727	Feed Connecting Link Hinge Screw Nut for 169026.....
1528X	24729	Roller Screw Nut for 1898XC.....
1547X	24729	Roller Arm Adjusting Screw Nut for 15446.....
1547X	24729	Roller Arm Bracket Screw Center Nut for 15444.....
1549X	24729	Roller Arm Lock Spring Screw Nut for 12267R and 169050R.....
1679C	24728	Bonding Bar Stop Plate Lock Nut.....
1695J	24744	Binder Height Adjusting Screw Lock Nut for 160639.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
1722E	24727	Feed Forked Connection Hinge Screw Nut.....
1723E	24728	Bonding Bar Lifting Bracket Roller Nut for 169086.....
1783S	24743	Harness Clamp Screw Nut for Singer Electronic Oscillator No. G46A.....
1783S	24724	Rectifier Unit Tube Cap Nut for Singer Electronic Oscillators Nos. G26 and G46.....
1785		Condenser (Filter) Screw Nut for Singer Electronic Oscillator No. G46A.....
1785		Oscillator Screw Nut (brass) for 195453.....
1785		Power Supply and Filter Unit Screw Nut (brass) for 195461.....
1785J		Rectifier Unit Screw Nut for 195454.....
1787		Panel Milliammeter Screw Nut (brass) for 195458.....
1799S	24721	Oscillator Cap (plate) with Lead Nut for Singer Electronic Oscillator No. G26.....
1799	24733	Oscillator Condenser (By-pass, grid) Fastening Screw Nut (brass) for 195453.....
1799		Oscillator Coupling Coil Ground Screw Nut for 195453.....
1799S	24719	Oscillator Plate Tank Condenser Screw Nut for Singer Electronic Oscillators Nos. G26 and G46.....
1799		Oscillator Receptacle Screw Nut (brass) for 195453.....
1799S	24733	Oscillator Resistor (grid) Fastening Screw Nut for 195453 for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
1799		Oscillator Socket (four-pin) Screw Nut (brass) for 195453...
1799S	24722	Oscillator Socket Screw Nut for Singer Electronic Oscillators Nos. G26 and G46.....
1799S		Oscillator Terminal Strip (for four contact) Screw Nut for 195453.....
1799		Oscillator Tube Socket Mounting Screw Nut for Singer Electronic Oscillator No. G46A.....
1799		Rectifier Unit Plug (input) Clamp Screw Nut (brass) for Singer Electronic Oscillator No. G16.....
1799	24735	Rectifier Unit Plug (male) Clamping Screw Nut (brass) for 195454.....
1799		Rectifier Unit Safety Switch Bracket Screw Nut (brass) for 195455.....
1799	24735	Rectifier Unit Socket Screw Nut (brass) for 195454.....
1799S	24719	Resistor (bleeder) Screw Nut for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
1898XC	24729	Roller, 1 1/4 in. diam., 3/16 in. face, (fine roller) with 386X and 1528X, for 12267R and 169050R.....
2205X	24729	Roller Arm Lock Spring for 12267R and 169050R.....
2766	24747	Knee Lifter Rock Shaft Knee Arm Hub with 356C, for 6336...
2767	24747	Knee Lifter Rock Shaft Knee Plate with 356C, for 6336.....
2770	24747	Knee Lifter Rock Shaft Stop Dog with 140219C, for 169082.
3146	24749	Binder Thumb Screw Washer for 160475 and 160477.....
5670	24732	Chain, 33 1/2 in. long, with 56864 and 56865 (Accessories).....
5670	24732	Feed Regulating Chain, 30 in. long, with 56864 and 56865.
6073R	24729	Roller Arm Bracket for 169050R.....
6335	24747	Knee Lifter Rock Shaft Knee Arm with 1509E, for 6336.....
6336		Knee Lifter Rock Shaft Knee Arm complete, for 169082, Nos. 2766, 2767 and 6335.....
6337	24747	Knee Lifter Rock Shaft Lifting Bracket with two 356C, for 169082.....
7071	24748	Binder Screw Washer for 160464 and 160472.....
7071	24710	Edge Folder Screw Washer for 160466 and 160491.....
7071	24710	Edge Folding Strip Guide Screw Washer for 160468.....
7071	24711	Hemmer Screw Washer for 160462.....
7071	24711	Strip Folder Screw Washer for 160470.....
7124	24747	Knee Lifter Rock Shaft for 169082.....
7539	24747	Knee Lifter Rock Shaft Hanger (back) with two wood screws 1 in. No. 10, for 169082.....

NUMERICAL LIST OF PARTS

27

No.	Plate	Name
12257X	24729	Roller Arm for 12267R.....
12267R	24729	Roller Presser (left hand) complete, 1 1/4 in. diam., 3/16 in. face (fine roller) Nos. 176X, 1549X, 1898XC, 2205X, 12257X, 15446, 46037R and two 15444.....
NOTE: No. 12267R is shipped as an additional part.		
12361	24732	Machine Hinge Connection (Accessories).....
15444		Roller Arm Bracket Screw Center 316XC with 1547X, for 12267R and 169050R.....
15446		Roller Arm Adjusting Screw 440XC with 1547X, for 12267R and 169050R.....
17862	24728	Bonding Bar Spring.....
20093	24747	Knee Lifter Rock Shaft Hanger (front) with two wood screws 1 in. No. 10, for 169082.....
34592	24747	Knee Lifter Rock Shaft Lifting Bracket Hook for 169082.....
35610	24748	Binder Throw-out Shank Hinge Screw Friction Washer for 160464, 160472, 160475 and 160477.....
35610	24710	Edge Folder Throw-out Shank Hinge Screw Friction Washer for 160466 and 160491.....
35610	24710	Edge Folding Strip Guide Throw-out Shank Hinge Screw Friction Washer for 160468.....
35610	24711	Hemmer Throw-out Shank Hinge Screw Friction Washer for 160462.....
35610	24711	Strip Folder Throw-out Shank Hinge Screw Friction Washer for 160470.....
36006	24727	Feed Regulating Knob Friction Washer.....
41564	24732	Machine Rest Pin (wood) Accessories.....
46037R	24729	Roller Arm Bracket for 12267R.....
50083AL	24727	Feed Connecting Link Hinge Stud Set Screw for 52408.....
50203E	24728	Bonding Bar Lifting Bracket Clamping Screw for 169086.....
50269C	24731	Presser Bar Lifting Rock Shaft Arm Position Screw for 169080.....
50513S	24724	Panel Milliammeter Screw for Singer Electronic Oscillator No. G26.....
50514	24741	Oscillator Condenser (stand-off) Mounting Screw for Singer Electronic Oscillators Nos. G46 and G46A.....
50514	24733	Oscillator Coupler (Grid, Extension) Screw (brass) for 195453.....
50514	24733	Oscillator Coupler (Grid, Extension) Shaft Screw (brass) for 195453.....
50514	24733	Oscillator Plate Tank Condenser Extension Coupler Screw (brass) for 195453.....
50514	24733	Oscillator Plate Tank Condenser Extension Coupler Shaft Screw (brass) for 195453.....
50514S	24721	Oscillator Plate Tank Condenser Screw for Singer Electronic Oscillators Nos. G26 and G46.....
50514S		Oscillator Resistor (grid) Fastening Screw for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
50514		Rectifier Unit Plug (input) Clamp Screw (brass) for Singer Electronic Oscillator No. G16.....
50514		Rectifier Unit Safety Switch Bracket Screw (brass) for 195455.....
50514	24735	Rectifier Unit Socket Screw (brass) for 195454.....
50514S		Relay (time delay) Tube Socket Screw for Singer Electronic Oscillator No. G46A.....
50514S	24719	Resistor (bleeder) Screw for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
50514J	24735	Tuning Unit Knob Screw for 196193.....
50587	24713	Oscillator Coupling Coil Grounding Screw for 195453.....
50587	24713	Oscillator Receptacle Screw (brass) for 195453.....
50587J		Panel Powerstat Dial Screw for 195458, for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
50639S		Relay (keying) Screw for Singer Electronic Oscillators Nos. G26, G46 and G46A.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
50639S		Relay (time delay) Screw for Singer Electronic Oscillators Nos. G26 and G46.....
50640R	24746	Foot Treadle Cord Cable Clamp Fastening Screw for 196445.....
50644R	24714	Panel Capacitor Shaft Cover (Plate and Grid) Screw for 195458.....
50644S		Relay (time delay) Condenser (Filter) Screw for Singer Electronic Oscillator No. G46A.....
50647S	24719	Choke (Filter) Screw for Singer Electronic Oscillators Nos. G26 and G46A.....
50647S		Condenser (Filter) Screw for Singer Electronic Oscillators Nos. G26 and G46.....
50647S		Oscillator Transformer (filament) Screw for Singer Electronic Oscillator No. G46A.....
50647R	24734	Panel Powerstat Screw for 195458.....
50647S	24743	Rectifier Unit Transformer Screw for Singer Electronic Oscillator No. G46A.....
50647S		Relay (overload, D.C.) Screw for Singer Electronic Oscillators Nos. G26 and G46.....
50647S		Relay (plate contactor) Screw for Singer Electronic Oscillators Nos. G26 and G46.....
50662R	24733	Oscillator Condenser (By-pass, grid) Fastening Screw for 195453.....
50667	24714	Panel Milliammeter Screw for 195458.....
50671R	24746	Foot Treadle Return Spring Retaining Plate Screw for 196445.....
50672	24713	Oscillator Plate Tank Condenser Bracket Screw (brass) for 195453.....
50672	24733	Oscillator Plate Tank Condenser Stand-off Insulator Screw for 195453.....
50672		Rectifier Unit Terminal Strip Support Screw (brass) for 195454.....
50672S		Rectifier Unit Socket Screw for Singer Electronic Oscillators Nos. G26 and G46.....
50678X	24742	Rectifier Unit Socket Screw for Singer Electronic Oscillator No. G46A.....
50692S	24743	Oscillator Chassis Fastening Screw for Singer Electronic Oscillators Nos. G46 and G46A.....
50700S	24742	Relay (plate contactor) Screw for Singer Electronic Oscillator No. G46A.....
50761S		Panel Powerstat Screw for Singer Electronic Oscillator No. G46.....
50761S	24740	Transformer (Plate) Screw for Singer Electronic Oscillator No. G46A.....
50764S	24721	Oscillator Socket Screw for Singer Electronic Oscillator No. G26.....
50771	24745	Cable Clamp Screw for 898780.....
50771S	24742	Receptacle (fuse) Screw for Singer Electronic Oscillator No. G46A.....
50776R		Oscillator Screw (for fastening unit to base of cabinet) for 195453.....
50776R		Power Supply and Filter Unit Screw (for fastening filter unit to base) for 195461.....
50776R		Rectifier Unit Screw for 195454.....
50782S	24743	Harness Clamp Screw for Singer Electronic Oscillator No. G46A.....
50782S		Oscillator Transformer (filament) Screw for Singer Electronic Oscillators Nos. G26 and G46.....
50782J	24734	Panel Powerstat Relay Screw for 195458.....
50782S		Rectifier Unit Transformer Screw for Singer Electronic Oscillators Nos. G26 and G46.....
50791	24716	Power Supply and Filter Unit Outlet Screw (brass) for 195461.....

No.	Plate	Name
50841J		Oscillator Socket Screw for Singer Electronic Oscillator No. G46.....
50841R	24713	Oscillator Terminal Strip (for four contact) Screw for 195453.....
50841J	24742	Oscillator Tube Socket Mounting Screw for Singer Electronic Oscillator No. G46A.....
50841J	24734	Panel Terminal Strip Screw for 195458.....
50841	24735	Rectifier Unit Plug (male) Clamping Screw (brass) for 195454.....
50841	24735	Rectifier Unit Terminal Strip Screw (brass) for 195454.....
50934S		Relay (overload, D.C.) Screw for Singer Electronic Oscillator No. G46A.....
50974J	24713	Oscillator Transformer Screw for 195453.....
50974J	24716	Power Supply and Filter Unit Choke Screw for 195461.....
50974J	24716	Power Supply and Filter Unit Condenser Position Bracket Screw for 195461.....
50974J		Power Supply and Filter Unit Screw (for fastening filter unit to cabinet) for 195461.....
50974R	24734	Rectifier Unit Plug (male) Supporting Bracket Screw for 195454.....
50974R	24735	Rectifier Unit Transformer Screw for 195454.....
50976	24733	Oscillator Resistor (grid) Fastening Screw for 195453.....
50976		Oscillator Socket (four-pin) Screw (brass) for 195453.....
51097J	24749	Binder Thumb Screw for 160475 and 160477.....
51125	24741	Pick-up Coil Grounding Post Screw (brass) for Singer Electronic Oscillators Nos. G46 and G46A.....
51128R	24746	Foot Treadle Micro Switch Saddle Adjusting Spring Screw for 196445.....
51239X		Rectifier Unit Socket Mounting Plate Screw for Singer Electronic Oscillator No. G46A.....
51246AL	24728	Bonding Bar Regulating Screw Stud Set Screw.....
51324S	24743	Receptacle (foot switch) Screw for Singer Electronic Oscillators Nos. G46 and G46A.....
51324S	24738	Receptacle (line input) Screw for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
51324S	24743	Receptacle (Motor) Screw for Singer Electronic Oscillator No. G46A.....
51475R		Oscillator Supporting Bracket Screw for 195453.....
51475R	24713	Oscillator Tube Shield Supporting Rod Screw for 195453.....
51475R	24716	Power Supply and Filter Unit Platform (Filter circuit) Screw for 195461.....
51475R	24716	Power Supply and Filter Unit Resistor (bleeder) Screw for 195461.....
51475R		Power Supply and Filter Unit Supporting Bracket Screw for 195461.....
51475R		Power Supply and Filter Unit Transformer Screw for 195461.....
51475R	24735	Rectifier Unit Tube Platform Supporting Rod Screw for 195454.....
51522S		Rectifier Unit Socket Mounting Plate Screw Nut for Singer Electronic Oscillator No. G46A.....
51522S		Rectifier Unit Socket Screw Nut for Singer Electronic Oscillator No. G46A.....
51601R	24746	Foot Treadle Cord Cable Clamp Fastening Screw Nut for 196445.....
51601R	24746	Foot Treadle Micro Switch Saddle Pivot Nut for 196445.....
51601S		Oscillator Chassis Fastening Screw Nut for Singer Electronic Oscillators Nos. G46 and G46A.....
51605J	24738	Rectifier Unit Safety Switch Nut (for fastening Micro Switch to bracket) for Singer Electronic Oscillators Nos. G26 and G46.....
51605J	24741	Switch (door interlock) Nut (for fastening switch to bracket) for Singer Electronic Oscillator No. G46A.....

No.	Plate	Name
51623J	24714	Panel Switch Nut (for fastening switch to panel) for 195458.....
51636J		Oscillator Supportng Bracket Screw Nut (brass) for 195453.....
51636J	24713	Oscillator Transformer Screw Nut (brass) for 195453.....
51636J	24716	Power Supply and Filter Unit Choke Screw Nut for 195461..
51636J	24716	Power Supply and Filter Unit Condenser Position Bracket Screw Nut for 195461.....
51636J		Power Supply and Filter Union Platform (Filter circuit) Screw Nut for 195461.....
51636J	24716	Power Supply and Filter Unit Resistor (bleeder) Screw Nut for 195461.....
51636J		Power Supply and Filter Unit Screw Nut for 195461.....
51636J		Power Supply and Filter Unit Supporting Bracket Screw Nut (brass) for 195461.....
51636J		Power Supply and Filter Unit Transformer Screw Nut for 195461.....
51636J	24735	Rectifier Unit Plug (male) Supporting Bracket Screw Nut for 195454.....
51636J	24735	Rectifier Unit Transformer Screw Nut for 195454.....
51672S		Panel Milliammeter Condenser Nut for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
51724XC	24728	Bonding Foot Adjusting Nut.....
51724XC	24728	Bonding Foot Adjusting Nut Lock Nut.....
51732S	24719	Resistor (bleeder) Connection Nut (brass) for Singer Electronic Oscillators Nos. G26 and G46.....
51733S	24719	Oscillator Receptacle (Amphenol) Co-axial Cable Screw Nut for Singer Electronic Oscillator No. G26.....
51761J		Oscillator Receptacle (Amphenol) Co-axial Cable Screw Nut for Singer Electronic Oscillators Nos. G46 and G46A.....
51846	24727	Feed Regulating Lever Roller and Stud for 169031.....
52073	24727	Feed Connecting Link Hinge Stud for 52411.....
52165	24727	Feed Connecting Link for 169026.....
52408	24727	Feed Regulator with 50083AL, for 52411.....
52411		Feed Regulator 52408 with 52073.....
54369	24704	Feed Clutch Shaft Collar with two 465AL.....
56864	24732	Chain Hook (large) for 5670.....
56864	24732	Feed Regulating Chain Hook (large) for 5670.....
56865	24732	Chain Hook (small) for 5670.....
56865	24732	Feed Regulating Chain Hook (small) for 5670.....
56865	24732	Knee Lifter Chain Hook (small) for 169081.....
62164	24747	Knee Lifter Chain Idler Pulley for 150036.....
67193S		Oscillator Chassis Fastening Screw Lock Washer for Singer Electronic Oscillators Nos. G46 and G46A.....
67230		Relay (time delay) Tube Socket Screw Washer for Singer Electronic Oscillator No. G46A.....
67564S		Panel Milliammeter Condenser Washèr for Singer Electronic Oscillator No. G26.....
67592		Rectifier Unit Tube Cap Nut Washer for Singer Electronic Oscillators Nos. G26 and G46.....
68152	24704	Feed Clutch Roller Plunger for 144269.....
120342	24732	Oiler with 120343 (Accessories).....
120343	24732	Oiler Spout, 3 1/2 in. long, for 120342.....
121678	24744	Binder Spring for 160639.....
121678	24744	Hemmer Spring for 160637.....
124165	24732	Wrench (Accessories).....
126150	24728	Bonding Bar Stop Plate Lock Nut Lock Washer.....
127152	24727	Feed Eccentric Sleeve.....
128815	24747	Knee Lifter Chain Idler Pulley Bracket with two wood screws 1 in. No. 12, for 150036.....
131717	24704	Feed Clutch Roller for 144269.....
131718	24704	Feed Clutch Roller Plunger Spring for 144269.....

No.	Plate	Name
131726	24704	Feed Clutch Wearing Plate for 144260 and 144263.....
136325S	24721	Oscillator Cap (plate) with Lead Nut Washer for Singer Electronic Oscillator No. G26.....
136358S	24722	Oscillator Socket Screw Nut Washer (steel) for Singer Electronic Oscillator No. G26.....
136358S		Rectifier Unit Socket Screw Washer (steel) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
140122S	24719	Receptacle (Motor) Screw for Singer Electronic Oscillators Nos. G26 and G46.....
140125J	24743	Oscillator Receptacle (Amphenol) Co-axial Cable Screw for Singer Electronic Oscillators Nos. G46 and G46A.....
140126J	24716	Power Supply and Filter Unit Condenser Position Bracket Clamping Screw for 195461.....
140202L	24727	Feed Regulating Dial Screw.....
140219C		Knee Lifter Rock Shaft Stop Dog Set Screw for 2770.....
140250S		Condenser (Filter) Screw for Singer Electronic Oscillator No. G46A.....
140252S	24721	Oscillator Receptacle (Amphenol) Co-axial Cable Screw for Singer Electronic Oscillator No. G26.....
140321C	24728	Bonding Bar Bushing (upper) Set Screw.....
140377R	24727	Feed Regulating Lever Clamping Screw for 169031.....
140377R	24727	Feed Regulating Lever Hinge Screw Stud Arm Clamping Screw for 169033.....
140409C	24704	Feed Clutch Sleeve Set Screw for 144449.....
140421X	24730	Arm Side Cover Screw.....
140421X	24729	Electrode Block Screw.....
140421X	24729	Electrode Screw.....
140421X	24730	Face Plate Screw.....
140422X	24729	Electrode Block Holder Screw.....
140423S	24727	Feed Regulating Knob Set Screw for 169030.....
140424X	24731	Tuning Unit Screw.....
140426X	24727	Feed Regulating Knob Position Screw.....
140432C	24727	Feed Forked Connection Hinge Screw.....
140444		Tuning Unit Knob Flange Screw for 195605.....
140454J		Panel Powerstat Knob Screw for 195622.....
140455C	24734	Panel Powerstat Brush Wheel Set Screw for 195458.....
140490C	24735	Tuning Unit Shaft Coupling Set Screw for 169046.....
140497R	24723	Panel Switch Name Plate Screw for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
140497R	24723	Panel Switch (Tack) Name Plate Screw for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
140498R	24723	Panel Switch Screw for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
140499S	24737	Transformer (plate) Screw for Singer Electronic Oscillator No. G26.....
140500S	24739	Panel Powerstat Screw for Singer Electronic Oscillators Nos. G26 and G46A.....
140501S	24721	Oscillator Condenser (grid) Screw for Singer Electronic Oscillator No. G26.....
140502S	24719	Receptacle (foot switch) Screw for Singer Electronic Oscillator No. G26.....
140554J	24744	Binder Hinge Screw for 160639.....
140554J	24744	Hemmer Hinge Screw for 160637.....
140620		Panel Powerstat Adapter Plate Screw for Singer Electronic Oscillator No. G46.....
140744		Foot Treadle Micro Switch Mounting Screw for 196445.....
140745J	24746	Foot Treadle Micro Switch Saddle Pivot Screw for 196445...
144259	24704	Feed Clutch (brake) for 144260.....
144260		Feed Clutch (brake) 144459 with three 131726, for 144269.
144261	24704	Feed Clutch (brake) Washer for 144269.....
144262	24704	Feed Clutch (drive) for 144263.....
144263		Feed Clutch (drive) 144262 with three 131726, for 144269..
144264	24704	Feed Clutch Driving Arm for 144269.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
144269	24704	Feed Clutch complete, for 169022, Nos. 144260, 144261, 144263, 144264, 144449, three 1255C and six each 68152, 131717 and 131718.....
144449	24704	Feed Clutch Sleeve with two 140409C, for 144269.....
144465	24732	Hexagon Socket Wrench, for Allen Safety Set Screw 140409 (1/4 x 28) Accessories.....
150036	24747	Knee Lifter Chain Idler complete, for 169083, Nos. 1064R, 62164 and 128815.....
150668	24747	Knee Lifter Rock Shaft Knee Plate Pad (rubber) for 169083..
151060T		Panel Milliammeter Condenser Nut Lock Washer for Singer Electronic Oscillators Nos. G26, G46 and G46A...
151060T	24737	Transformer (plate) Screw Lock Washer for Singer Electronic Oscillator No. G26.....
160287	24732	One Quart of heavy grade cloth and leather oil (Accessories).....
160459	24711	Hemmer for 160462.....
160460	24748	Binder Plate for 160464, 160472, 160475 and 160477.....
160460	24710	Edge Folder Plate for 160466 and 160491.....
160460	24710	Edge Folding Strip Guide Plate for 160468.....
160460	24711	Hemmer Plate for 160462.....
160460	24711	Strip Folder Plate for 160470.....
160461	24748	Binder Throw-out Shank for 160464 and 160472.....
160461	24710	Edge Folder Throw-out Shank for 160466 and 160491.....
160461	24710	Edge Folding Strip Guide Throw-out Shank for 160468.....
160461	24711	Hemmer Throw-out Shank for 160462.....
160461	24711	Strip Folder Throw-out Shank for 160470.....
160462	24711	Hemmer on Throw-out Shank complete, Nos. 959J, 35610, 160459, 160460, 160461 and two each 237J and 7071.....
160463	24748	Binder (English) for 160464.....
160464	24748	Binder (English) on Throw-out Shank complete, for 1/2 in. to 1 in. Binding, Nos. 959J, 35610, 160460, 160461, 160463 and two each 237J and 7071.....
160465	24710	Edge Folder for 160466.....
160466	24710	Edge Folder on Throw-out Shank complete, for up to 5/16 in. fold, Nos. 959J, 35610, 160460, 160461, 160465 and two each 237J and 7071.....
160467	24710	Edge Folding Strip Guide (adjustable) for 160468.....
160468	24710	Edge Folding Strip Guide (adjustable) on Throw-out Shank complete, Nos. 959J, 35610, 160460, 160461, 160467 and two each 237J and 7071.....
160469	24711	Strip Folder for 160470.....
160470	24711	Strip Folder on Throw-out Shank complete, Nos. 959J, 35610, 160460, 160461, 160469 and two each 237J and 7071.....
160471	24748	Binder (English) for 160472.....
160472	24748	Binder (English) on Throw-out Shank complete, for Binding 7/8 in. and up, in steps of 1/8 in., Nos. 959J, 35610, 160460, 160461, 160471 and two each 237J and 7071.....
160473	24749	Binder (transverse) for 160475.....
160474	24749	Binder Throw-out Shank for 160475 and 160477.....
160475	24749	Binder (transverse) on Throw-out Shank complete, for 1/2 in. to 1 in. Binding, Nos. 959J, 3146, 35610, 51097J, 160460, 160473 and 160474.....
160476	24749	Binder (transverse) for 160477.....
160477	24749	Binder (transverse) on Throw-out Shank complete, for Binding 1 1/2 in. and up, Nos. 959J, 3146, 35610, 51097J, 160460, 160474 and 160476.....
160478	24711	Edge Guide (adjustable) for 160479.....
160479	24711	Fill-in Plate with Adjustable Edge Guide complete, Nos. 239J and 160478.....
160490	24744	Edge Folder for 160491.....

No.	Plate	Name
160491	24744	Edge Folder on Throw-out Shank complete, for 3/8 in. fold and above, Nos. 959J, 35610, 160460, 160461, 160490 and two each 237J and 7071.....
160635	24744	Hemmer for 160637.....
160636	24744	Binder Throw-out Shank for 160639.....
160636	24744	Hemmer Throw-out Arm for 160637.....
160637	24744	Hemmer (adjustable) on Throw-out Arm complete, Nos. 1097J, 121678, 140554J, 160635, 160636 and two 1443B.....
160638	24744	Binder for 160639.....
160639	24744	Binder on Throw-out Shank complete, for 3/4 in. to 1 1/4 in. Binding, Nos. 176J, 1097J, 1695J, 121678, 140554J, 160636, 160638 and two 1443B.....
160669	24732	Screw Driver (Accessories).....
*169001		Arm with 169052.....
169002	24730	Arm Side Cover.....
169003	24727	Arm Shaft.....
*169004		Bed.....
169005	24728	Bonding Bar (hollow).....
169006	24728	Bonding Bar Bushing (upper).....
169007	24728	Bonding Bar Guide with 1465E.....
169010	24727	Bonding Bar Lifting Eccentric with two 448AL.....
169011	24728	Bonding Bar Lifting Link.....
169012	24728	Bonding Bar Regulating Screw Stud.....
169013	24728	Bonding Bar Regulating Screw Stud Set Screw Disc (lead).....
169014	24728	Bonding Bar Stop Plate.....
169018	24729	Electrode Block Holder.....
169020	24730	Face Plate.....
169021	24704	Feed Clutch Shaft for 169022.....
169022		Feed Clutch Shaft 169021 with 144269.....
169023	24704	Feed Clutch Shaft Bushing.....
169024	24727	Feed Eccentric with two 889AL.....
169025	24727	Feed Forked Connection for 169026.....
169026		Feed Forked Connection 169025 with 375C, 1518J and 52165.....
169027	24727	Feed Regulating Cam with two 889AL.....
169028	24727	Feed Regulating Cam Shaft.....
169029	24727	Feed Regulating Dial.....
169030	24727	Feed Regulating Knob with two 140423S.....
169031	24727	Feed Regulating Lever with 51846 and 140377R.....
169032	24727	Feed Regulating Lever Hinge Screw Stud.....
169033	24727	Feed Regulating Lever Hinge Screw Stud Arm with 140377R.....
169034	24727	Feed Regulating Lever Hinge Screw Stud Bearing.....
169035	24727	Feed Regulating Spring.....
169037	24731	Presser Bar Lifting Rock Shaft with 446AL.....
169039	24728	Presser Bar Position Guide with 350411C.....
169041	24730	Tuning Unit Cover.....
169042	24731	Tuning Unit Dial for 196193.....
169043	24731	Tuning Unit Dial Indicator.....
169045	24731	Tuning Unit Screw Spacer.....
169046	24735	Tuning Unit Shaft Coupling with two 140490C, for 196193.....
169047	24732	Oil Reservoir, with four wood screws 1-1/2 in. No. 6 F. H....
169048	24729	Roller Arm for 169050R.....
169050R	24729	Roller Presser (right hand) complete, 1-1/4 in. diam., 3/16 in. face (fine roller) Nos. 176X, 1549X, 1898XC, 2205X, 6073R, 15446, 169048 and two 15444.....
NOTE: No. 169050R is regularly furnished with this machine.		
169051	24731	Arm Oil Tube Oil Wick (braided cotton) for 169052.....
169052	24731	Arm Oil Tube with 169051, for 169001.....
169069	24731	Presser Bar Lifter.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
169071	24732	Wrench for 140455 (not regularly furnished).....
169072	24729	Filling Plate.....
169074	24729	Throat Plate.....
169077	24704	Feed Wheel with two 889AL.....
169079	24732	Wrench for 140490 (not regularly furnished).....
169080	24731	Presser Bar Lifting Rock Shaft Arm with 160E and 50269C.....
169081	24747	Knee Lifter Chain, length 14 1/4 in. with 56865, for 169083.....
169082	24747	Knee Lifter Rock Shaft complete, for 169083, Nos. 2770, 6336, 6337, 7124, 7539, 20093 and 34592.....
169083	24747	Knee Lifter complete, Nos. 150668, 169081, 169082 and two 150036.....
		NOTE: Knee Lifter complete, No. 169083 is furnished only when specified on order.
169085	24728	Bonding Bar Lifting Bracket Roller Washer for 169086.....
169086	24728	Bonding Bar Lifting Bracket complete, Nos. 1723E, 169085, 169087 and two 50203E.....
		NOTE: When No. 169086 is furnished for Agents orders, include also Bushing No. 169006
169087		Bonding Bar Lifting Bracket Roller Oil Pad (felt) for 169086.....
169088	24729	Electrode Block.....
169089	24728	Bonding Foot with 191ALX, for use with two thicknesses of material.....
169090	24728	Bonding Foot with 191ALX, for use with three or more thicknesses of material.....
169091	24728	Bonding Foot with 191ALX, for use with material of uneven thicknesses.....
169092	24729	Electrode.....
175357		Panel Milliammeter Screw Nut Lock Washer for 195458.....
190070	24746	Foot Treadle Cord Grommet for 196445.....
190070	24713	Oscillator Grommet (rubber) for 195453.....
190091S		Panel Milliammeter Condenser Nut Washer for Singer Electronic Oscillators Nos. G46 and G46A.....
191406		Cable complete, for 196635, Nos. 191407 and 898780.....
191407	24745	Cable (only) for 191406.....
195445	24716	Cable with 195446, for Singer Electronic Oscillators Nos. G16, G26, G46 and G46A.....
195446	24716	Cable Adapter Plug (two to three wire) for 195445.....
195447	24736	Cable (co-axial) for Singer Electronic Oscillators Nos. G16, G26, G46 and G46A.....
195452	24735	Rectifier Unit Tube for 195454, for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
		NOTE: Two additional No. 195452 are sent with each complete Singer Electronic Oscillator
195453	24713	Oscillator Unit complete, for Singer Electronic Oscillator No. G16, Nos. 50662R, 195582, 195608, 195611, 195612, 195613, 195614, two each 50841R, 190070, 195554, 195609, 195610, 196051, three each 1785, 50776R, 980005, four each 50514, 50974J, five 50587, six each 50672, 50976, 51475R, 51636J, nine 931084, ten 701850 and twenty-six 1799.....
195454	24735	Rectifier Unit complete, for Singer Electronic Oscillator No. G16, Nos. 195455, 195615, two each 1785J, 50672, 50776R, 195452, 195610, 931084, three 50841, four 50514, five each 50974R, 51636J, six each 1799, 701822, eight 51475R and thirteen 701850.....
195455	24735	Rectifier Unit Safety Switch (Micro) complete, for 195454, Nos. 1799, 50514, 195456 and 701822.....
195456	24735	Rectifier Unit Safety Switch (Micro) for 195455.....
195458	24714	Panel (front) complete, for Singer Electronic Oscillator No. G16, Nos. 195553, 195555, 195616, 195617, 195618, 195619, 195621, 195622, 196292, two each 50782, 50841J, 51623J, 140455C, 195459, 195460, 796801, 796802, 796803, 796804, 796805, 796806, 796807, 796808, 796809, 796810, 796811, 796812, 796813, 796814, 796815, 796816, 796817, 796818, 796819, 796820, 796821, 796822, 796823, 796824, 796825, 796826, 796827, 796828, 796829, 796830, 796831, 796832, 796833, 796834, 796835, 796836, 796837, 796838, 796839, 796840, 796841, 796842, 796843, 796844, 796845, 796846, 796847, 796848, 796849, 796850, 796851, 796852, 796853, 796854, 796855, 796856, 796857, 796858, 796859, 796860, 796861, 796862, 796863, 796864, 796865, 796866, 796867, 796868, 796869, 796870, 796871, 796872, 796873, 796874, 796875, 796876, 796877, 796878, 796879, 796880, 796881, 796882, 796883, 796884, 796885, 796886, 796887, 796888, 796889, 796890, 796891, 796892, 796893, 796894, 796895, 796896, 796897, 796898, 796899, 796900, 796901, 796902, 796903, 796904, 796905, 796906, 796907, 796908, 796909, 796910, 796911, 796912, 796913, 796914, 796915, 796916, 796917, 796918, 796919, 796920, 796921, 796922, 796923, 796924, 796925, 796926, 796927, 796928, 796929, 796930, 796931, 796932, 796933, 796934, 796935, 796936, 796937, 796938, 796939, 796940, 796941, 796942, 796943, 796944, 796945, 796946, 796947, 796948, 796949, 796950, 796951, 796952, 796953, 796954, 796955, 796956, 796957, 796958, 796959, 796960, 796961, 796962, 796963, 796964, 796965, 796966, 796967, 796968, 796969, 796970, 796971, 796972, 796973, 796974, 796975, 796976, 796977, 796978, 796979, 796980, 796981, 796982, 796983, 796984, 796985, 796986, 796987, 796988, 796989, 796990, 796991, 796992, 796993, 796994, 796995, 796996, 796997, 796998, 796999, 797000, 797001, 797002, 797003, 797004, 797005, 797006, 797007, 797008, 797009, 797010, 797011, 797012, 797013, 797014, 797015, 797016, 797017, 797018, 797019, 797020, 797021, 797022, 797023, 797024, 797025, 797026, 797027, 797028, 797029, 797030, 797031, 797032, 797033, 797034, 797035, 797036, 797037, 797038, 797039, 797040, 797041, 797042, 797043, 797044, 797045, 797046, 797047, 797048, 797049, 797050, 797051, 797052, 797053, 797054, 797055, 797056, 797057, 797058, 797059, 797060, 797061, 797062, 797063, 797064, 797065, 797066, 797067, 797068, 797069, 797070, 797071, 797072, 797073, 797074, 797075, 797076, 797077, 797078, 797079, 797080, 797081, 797082, 797083, 797084, 797085, 797086, 797087, 797088, 797089, 797090, 797091, 797092, 797093, 797094, 797095, 797096, 797097, 797098, 797099, 797100, 797101, 797102, 797103, 797104, 797105, 797106, 797107, 797108, 797109, 797110, 797111, 797112, 797113, 797114, 797115, 797116, 797117, 797118, 797119, 797120, 797121, 797122, 797123, 797124, 797125, 797126, 797127, 797128, 797129, 797130, 797131, 797132, 797133, 797134, 797135, 797136, 797137, 797138, 797139, 797140, 797141, 797142, 797143, 797144, 797145, 797146, 797147, 797148, 797149, 797150, 797151, 797152, 797153, 797154, 797155, 797156, 797157, 797158, 797159, 797160, 797161, 797162, 797163, 797164, 797165, 797166, 797167, 797168, 797169, 797170, 797171, 797172, 797173, 797174, 797175, 797176, 797177, 797178, 797179, 797180, 797181, 797182, 797183, 797184, 797185, 797186, 797187, 797188, 797189, 797190, 797191, 797192, 797193, 797194, 797195, 797196, 797197, 797198, 797199, 797200, 797201, 797202, 797203, 797204, 797205, 797206, 797207, 797208, 797209, 797210, 797211, 797212, 797213, 797214, 797215, 797216, 797217, 797218, 797219, 797220, 797221, 797222, 797223, 797224, 797225, 797226, 797227, 797228, 797229, 797230, 797231, 797232, 797233, 797234, 797235, 797236, 797237, 797238, 797239, 797240, 797241, 797242, 797243, 797244, 797245, 797246, 797247, 797248, 797249, 797250, 797251, 797252, 797253, 797254, 797255, 797256, 797257, 797258, 797259, 797260, 797261, 797262, 797263, 797264, 797265, 797266, 797267, 797268, 797269, 797270, 797271, 797272, 797273, 797274, 797275, 797276, 797277, 797278, 797279, 797280, 797281, 797282, 797283, 797284, 797285, 797286, 797287, 797288, 797289, 797290, 797291, 797292, 797293, 797294, 797295, 797296, 797297, 797298, 797299, 797300, 797301, 797302, 797303, 797304, 797305, 797306, 797307, 797308, 797309, 797310, 797311, 797312, 797313, 797314, 797315, 797316, 797317, 797318, 797319, 797320, 797321, 797322, 797323, 797324, 797325, 797326, 797327, 797328, 797329, 797330, 797331, 797332, 797333, 797334, 797335, 797336, 797337, 797338, 797339, 797340, 797341, 797342, 797343, 797344, 797345, 797346, 797347, 797348, 797349, 797350, 797351, 797352, 797353, 797354, 797355, 797356, 797357, 797358, 797359, 797360, 797361, 797362, 797363, 797364, 797365, 797366, 797367, 797368, 797369, 797370, 797371, 797372, 797373, 797374, 797375, 797376, 797377, 797378, 797379, 797380, 797381, 797382, 797383, 797384, 797385, 797386, 797387, 797388, 797389, 797390, 797391, 797392, 797393, 797394, 797395, 797396, 797397, 797398, 797399, 797400, 797401, 797402, 797403, 797404, 797405, 797406, 797407, 797408, 797409, 797410, 797411, 797412, 797413, 797414, 797415, 797416, 797417, 797418, 797419, 797420, 797421, 797422, 797423, 797424, 797425, 797426, 797427, 797428, 797429, 797430, 797431, 797432, 797433, 797434, 797435, 797436, 797437, 797438, 797439, 797440, 797441, 797442, 797443, 797444, 797445, 797446, 797447, 797448, 797449, 797450, 797451, 797452, 797453, 797454, 797455, 797456, 797457, 797458, 797459, 797460, 797461, 797462, 797463, 797464, 797465, 797466, 797467, 797468, 797469, 797470, 797471, 797472, 797473, 797474, 797475, 797476, 797477, 797478, 797479, 797480, 797481, 797482, 797483, 797484, 797485, 797486, 797487, 797488, 797489, 797490, 797491, 797492, 797493, 797494, 797495, 797496, 797497, 797498, 797499, 797500, 797501, 797502, 797503, 797504, 797505, 797506, 797507, 797508, 797509, 797510, 797511, 797512, 797513, 797514, 797515, 797516, 797517, 797518, 797519, 797520, 797521, 797522, 797523, 797524, 797525, 797526, 797527, 797528, 797529, 797530, 797531, 797532, 797533, 797534, 797535, 797536, 797537, 797538, 797539, 797540, 797541, 797542, 797543, 797544, 797545, 797546, 797547, 797548, 797549, 797550, 797551, 797552, 797553, 797554, 797555, 797556, 797557, 797558, 797559, 797560, 797561, 797562, 797563, 797564, 797565, 797566, 797567, 797568, 797569, 797570, 797571, 797572, 797573, 797574, 797575, 797576, 797577, 797578, 797579, 797580, 797581, 797582, 797583, 797584, 797585, 797586, 797587, 797588, 797589, 797590, 797591, 797592, 797593, 797594, 797595, 797596, 797597, 797598, 797599, 797600, 797601, 797602, 797603, 797604, 797605, 797606, 797607, 797608, 797609, 797610, 797611, 797612, 797613, 797614, 797615, 797616, 797617, 797618, 797619, 797620, 797621, 797622, 797623, 797624, 797625, 797626, 797627, 797628, 797629, 797630, 797631, 797632, 797633, 797634, 797635, 797636, 797637, 797638, 797639, 797640, 797641, 797642, 797643, 797644, 797645, 797646, 797647, 797648, 797649, 797650, 797651, 797652, 797653, 797654, 797655, 797656, 797657, 797658, 797659, 797660, 797661, 797662, 797663, 797664, 797665, 797666, 797667, 797668, 797669, 797670, 797671, 797672, 797673, 797674, 797675, 797676, 797677, 797678, 797679, 797680, 797681, 797682, 797683, 797684, 797685, 797686, 797687, 797688, 797689, 797690, 797691, 797692, 797693, 797694, 797695, 797696, 797697, 797698, 797699, 797700, 797701, 797702, 797703, 797704, 797705, 797706, 797707, 797708, 797709, 797710, 797711, 797712, 797713, 797714, 797715, 797716, 797717, 797718, 797719, 797720, 797721, 797722, 797723, 797724, 797725, 797726, 797727, 797728, 797729, 797730, 797731, 797732, 797733, 797734, 797735, 797736, 797737, 797738, 797739, 797740, 797741, 797742, 797743, 797744, 797745, 797746, 797747, 797748, 797749, 797750, 797751, 797752, 797753, 797754, 797755, 797756, 797757, 797758, 797759, 797760, 797761, 797762, 797763, 797764, 797765, 797766, 797767, 797768, 797769, 797770, 797771, 797772, 797773, 797774, 797775, 797776, 797777, 797778, 797779, 797780, 797781, 797782, 797783, 797784, 797785, 797786, 797787, 797788, 797789, 797790, 797791, 797792, 797793, 797794, 797795, 797796, 797797, 797798, 797799, 797800, 797801, 797802, 797803, 797804, 797805, 797806, 797807, 797808, 797809, 797810, 797811, 797812, 797813, 797814, 797815, 797816, 797817, 797818, 797819, 797820, 797821, 797822, 797823, 797824, 797825, 797826, 797827, 797828, 797829, 797830, 797831, 797832, 797833, 797834, 797835, 797836, 797837, 797838, 797839, 797840, 797841, 797842, 797843, 797844, 797845, 797846, 797847, 797848, 797849, 797850, 797851, 797852, 797853, 797854, 797855, 797856, 797857, 797858, 797859, 797860, 797861, 797862, 797863, 797864, 797865, 797866, 797867, 797868, 797869, 797870, 797871, 797872, 797873, 797874, 797875, 797876, 797877, 797878, 797879, 797880, 797881, 797882, 797883, 797884, 797885, 797886, 797887, 797888, 797889, 797890, 797891, 797892, 797893, 797894, 797895, 797896, 797897, 797898, 797899, 797900, 797901, 797902, 797903, 797904, 797905, 797906, 797907, 797908, 797909, 797910, 797911, 797912, 797913, 797914, 797915, 797916, 797917, 797918, 797919, 797920, 797921, 797922, 797923, 797924, 797925, 797926, 797927, 797928, 797929, 797930, 797931, 797932, 797933, 797934, 797935, 797936, 797937, 797938, 797939, 797940, 797941, 797942, 797943, 797944, 797945, 797946, 797947, 797948, 797949, 797950, 797951, 797952, 797953, 797954, 797955, 797956, 797957, 797958, 797959, 797960, 797961, 797962, 797963, 797964, 797965, 797966, 797967, 797968, 797969, 797970, 797971, 797972, 797973, 797974, 797975, 797976, 797977, 797978, 797979, 797980, 797981, 797982, 797983, 797984, 797985, 797986, 797987, 797988, 797989, 797990, 797991, 797992, 797993, 797994, 797995, 797996, 797997, 797998, 797999, 798000, 798001, 798002, 798003, 798004, 798005, 798006, 798007, 798008, 798009, 798010, 798011, 798012, 798013, 798014, 798015, 798016, 798017, 798018, 798019, 798020, 798021, 798022, 798023, 798024, 798025, 798026, 798027, 798028, 798029, 798030, 798031, 798032, 798033, 798034, 798035, 798036, 798037, 798038, 798039, 798040, 798041, 798042, 798043,

No.	Plate	Name
195459	24714	Panel Switch (toggle) for 195458.....
195460	24714	Panel Bulb (pilot light, 115V, 6 Watts) for 195458, for Singer Electronic Oscillators Nos. G26, G46 and G46A...
195461		Power Supply and Filter Unit complete, for Singer Electronic Oscillator No. G16, Nos. 195462, 195463, 195623, 195624, 195626, 195627, 195628, 195629, 942522, two each 140126J, 195625, 195630, 701822, four each 1785, 50776R, 50791, 931084, ten 50974J, eleven 51475R, nineteen 701850, twenty-one 51636J and twenty-seven 980005.....
195462	24716	Power Supply and Filter Unit Fuse (plug, 5 Amp) for 195461.....
195463	24716	Fuse (plug, 15 Amp.) for Singer Electronic Oscillators Nos. G26 and G46.....
195463	24716	Power Supply and Filter Unit Fuse (plug, 15 Amp.) for 195461.....
195517		Cabinet for Singer Electronic Oscillator No. G16.....
195553	24734	Panel Powerstat Relay for 195458.....
195554	24733	Oscillator Coupler (Grid, Extension) for Singer Electronic Oscillator No. G16.....
195554	24733	Oscillator Plate Tank Condenser Extension Coupler for 195453.....
195555	24714	Panel Milliammeter for 195458.....
195567	24746	Foot Treadle Cord Plug for 196601.....
195574	24719	Condenser (Filter) for Singer Electronic Oscillators Nos. G26 and G46.....
195575	24721	Oscillator Plate Tank Condenser for Singer Electronic Oscillator No. G26.....
195576	24722	Oscillator Condenser (filament) for Singer Electronic Oscillators Nos. G26 and G46.....
195577	24724	Panel Milliammeter Condenser (by-pass) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195579	24722	Oscillator Condenser (grid) for Singer Electronic Oscillator No. G26.....
195580	24719	Receptacle (Motor) for Singer Electronic Oscillators Nos. G26 and G46.....
195581	24738	Receptacle (line input) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195582	24713	Oscillator Receptacle (Amphenol) Co-axial Cable for 195453, for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195582	24731	Tuning Unit (co-axial) Cable Receptacle.....
195583	24719	Receptacle (foot switch) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195584	24738	Relay (plate contactor) for Singer Electronic Oscillators Nos. G26 and G46.....
195585	24738	Relay (overload, D.C.) for Singer Electronic Oscillators Nos. G26 and G46.....
195586	24738	Relay (time delay) for Singer Electronic Oscillators Nos. G26 and G46.....
195587	24738	Relay (keying) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195588	24719	Choke (Filter) for Singer Electronic Oscillator No. G26.....
195589	24721	Oscillator Choke (plate) for Singer Electronic Oscillator No. G26.....
195590	24723	Panel Milliammeter for Singer Electronic Oscillator No. G26.....
195591	24722	Oscillator Resistor (grid) for Singer Electronic Oscillator No. G26.....
195592	24724	Resistor (bleeder) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195593	24723	Panel Switch (Line Breaker) for Singer Electronic Oscillator No. G26.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
195594	24723	Panel Switch (tack) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195595	24738	Rectifier Unit Safety Switch (Micro) for Singer Electronic Oscillators Nos. G26 and G46.....
195596	24719	Oscillator Transformer (filament) for Singer Electronic Oscillators Nos. G26 and G46.....
195597	24737	Rectifier Unit Transformer (Filament) for Singer Electronic Oscillators Nos. G26 and G46.....
195598	24737	Transformer (plate) for Singer Electronic Oscillators Nos. G26 and G46.....
195599	24724	Panel Powerstat for Singer Electronic Oscillator No. G26....
195600	24738	Rectifier Unit Socket for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195601	24721	Oscillator Socket for Singer Electronic Oscillator No. G26...
195602	24723	Panel Lens (pilot, red) with Socket complete for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195603	24723	Panel Lens (pilot, amber) with Socket complete for Singer Electronic Oscillators Nos. G26, G46 and G46A....
195604	24737	Receptacle (fuse) for Singer Electronic Oscillators Nos. G26 and G46.....
195605	24735	Tuning Unit Knob 195606 with 195607 and two 140444, for 196193.....
195606	24735	Tuning Unit Knob for 195605.....
195607	24735	Tuning Unit Knob Flange for 195605.....
195608	24713	Oscillator Choke (plate) for 195453.....
195608		Choke (Grid) for Singer Electronic Oscillators Nos. G46 and G46A.....
195608	24743	Choke (Plate) for Singer Electronic Oscillators Nos. G46 and G46A.....
195609	24733	Oscillator Cap (Plate) with lead for 195453.....
195610	24733	Oscillator Socket (four-pin) for 195453.....
195610	24735	Rectifier Unit Socket (four-pin) for 195454.....
195611	24733	Oscillator Resistor (grid) for 195453.....
195612	24733	Oscillator Condenser (By-pass, grid) for 195453.....
195613	24733	Oscillator Choke (Grid) for 195453.....
195614	24713	Oscillator Transformer (filament) for 195453.....
195615	24735	Rectifier Unit Transformer (filament) for 195454.....
195616	24734	Panel Powerstat for 195458, for Singer Electronic Oscillators Nos. G46 and G46A.....
195617	24714	Panel Lens (pilot, yellow) for 195458.....
195618	24714	Panel Lens (pilot, red) for 195458.....
195619	24734	Panel Terminal Strip for 195458.....
195620	24724	Panel Powerstat Brush for Singer Electronic Oscillator No. G26.....
195621	24714	Panel Powerstat Dial for 195458, for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195622	24714	Panel Powerstat Knob with two 140454J, for 195458, for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195623	24736	Power Supply and Filter Unit Transformer (power) for 195461.....
195624	24716	Power Supply and Filter Unit Choke (filter) for 195461.....
195625	24716	Power Supply and Filter Unit Condenser (filter) for 195461..
195626	24716	Power Supply and Filter Unit Resistor (bleeder) for 195461..
195627	24736	Rectifier Unit Tube Cap (short lead) for 195461.....
195628	24736	Rectifier Unit Tube Cap (long lead) for 195461.....
195629	24716	Power Supply and Filter Unit Outlet (duplex) for 195461....
195630	24716	Power Supply and Filter Unit Receptacle (fuse) complete for 195461.....
195870	24721	Oscillator Cap (plate) with Lead for Singer Electronic Oscillator No. G26.....
195907	24724	Rectifier Unit Tube Cap with Lead for Singer Electronic Oscillators Nos. G26 and G46.....

No.	Plate	Name
195908	24719	Resistor (bleeder) Connection for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195909	24723	Panel Switch (Tack) Name Plate (Spot Seal) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
195910	24723	Panel Switch Name Plate (Power) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
196032		Panel Switch (Line Breaker) for Singer Electronic Oscillator No. G46.....
196051	24733	Oscillator Tube for 195453, for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
NOTE: Two additional No. 196051 are sent with each complete Singer Electronic Oscillator		
196052	24740	Oscillator Cap (plate) with Lead for Singer Electronic Oscillators Nos. G46 and G46A.....
196053	24741	Oscillator Plate Tank Condenser for Singer Electronic Oscillators Nos. G46 and G46A.....
196054	24741	Oscillator Plate Tank Condenser Mounting Bracket for Singer Electronic Oscillators Nos. G46 and G46A.....
196055	24741	Oscillator Condenser (stand-off) for Singer Electronic Oscillators Nos. G46 and G46A.....
196056	24743	Condenser Coupler (Grid) for Singer Electronic Oscillator No. G46.....
196056	24743	Oscillator Condenser Coupler (Grid) for Singer Electronic Oscillator No. G46A.....
196059	24741	Pick-up Coil with two 897580, for Singer Electronic Oscillators Nos. G46 and G46A.....
196060	24741	Pick-up Coil Grounding Post for Singer Electronic Oscillators Nos. G46 and G46A.....
196063		Oscillator Condenser (Grid) Shaft for Singer Electronic Oscillators Nos. G46 and G46A.....
196065		Oscillator Resistor (Grid) with Bracket for Singer Electronic Oscillators Nos. G46 and G46A.....
196089	24740	Transformer (Plate) for Singer Electronic Oscillator No. G46A.....
196090	24743	Rectifier Unit Transformer (Filament) for Singer Electronic Oscillator No. G46A.....
196091	24742	Oscillator Transformer (Filament) for Singer Electronic Oscillator No. G46A.....
196093	24743	Condenser (Filter) for Singer Electronic Oscillator No. G46A.....
196158	24742	Oscillator Rotor Lock (Grid) for Singer Electronic Oscillators Nos. G46 and G46A.....
196158	24741	Oscillator Rotor Lock (plate) for Singer Electronic Oscillators Nos. G46 and G46A.....
196159		Oscillator Socket for Singer Electronic Oscillator No. G46.....
196159	24742	Oscillator Tube Socket for Singer Electronic Oscillator No. G46A.....
196160	24739	Panel Milliammeter for Singer Electronic Oscillators Nos. G46 and G46A.....
196161		Panel Powerstat Adapter Plate for Singer Electronic Oscillator No. G46.....
196193	24735	Tuning Unit complete, Nos. 50514J, 169042, 169046 and 195605.....
196292	24734	Panel Powerstat Brush for 195458, for Singer Electronic Oscillators Nos. G46 and G46A.....
196395	24742	Relay (overload, D.C.) for Singer Electronic Oscillator No. G46A.....
196396	24743	Choke (Filter) for Singer Electronic Oscillator No. G46A.....
196410		Rectifier Unit Socket Mounting Plate for Singer Electronic Oscillator No. G46A.....

NUMERICAL LIST OF PARTS


No.	Plate	Name
196445	24746	Foot Treadle Micro Switch complete, Nos. 50640R, 50671R,, 51128R, 140744, 140745J, 190070, 196593, 196595, 196596, 196597, 196598, 196599, 196600, 196601, 196602, 931202R and two each 51601R and 701497R.....
NOTE: Foot Treadle Micro Switch complete, No. 196445 is included in Stand No. 601241		
196448	24740	Relay (time delay) Tube socket for Singer Electronic Oscillator No. G46A.....
196449	24740	Relay (time delay) Tube for Singer Electronic Oscillator No. G46A.....
196450	24741	Switch (door interlock) for Singer Electronic Oscillator No. G46A.....
196451	24740	Relay (time delay) Condenser (Filter) for Singer Electronic Oscillator No. G46A.....
196452	24743	Receptacle (Motor) for Singer Electronic Oscillator No. G46A.....
196453		Receptacle (fuse) Insulation (paper) for Singer Electronic Oscillator No. G46A.....
196454		Oscillator Transformer (filament) Mounting Strap for Singer Electronic Oscillator No. G46A.....
196454	24743	Rectifier Unit Transformer (filament) Mounting Strap for Singer Electronic Oscillator No. G46A.....
196455		Choke (Filter) Mounting Strap for Singer Electronic Oscillator No. G46A.....
196456	24740	Transformer (plate) Mounting Strap for Singer Electronic Oscillator No. G46A.....
196457	24742	Receptacle (fuse) for Singer Electronic Oscillator No. G46A.....
196458	24739	Panel Switch (line breaker) for Singer Electronic Oscillator No. G46A.....
196459	24742	Relay (plate contactor) for Singer Electronic Oscillator No. G46A.....
196495	24746	Foot Treadle Cord Lead Terminal for 196601.....
196580	24743	Harness Clamp for Singer Electronic Oscillator No. G46A...
196581		Harness Clamp for Singer Electronic Oscillator No. G46A...
196593	24746	Foot Treadle Micro Switch Extension Frame for 196445.....
196595	24746	Foot Treadle Return Spring for 196445.....
196596	24746	Foot Treadle Return Spring Retaining Plate for 196445.....
196597	24746	Foot Treadle Micro Switch Saddle for 196445.....
196598	24746	Foot Treadle Micro Switch Saddle Adjusting Spring for 196445.....
196599		Foot Treadle Micro Switch for 196445.....
196600		Foot Treadle Micro Switch Insulation (paper) for 196445.....
196601		Foot Treadle Cord complete, for 196445, Nos. 195567, 965841 and two 196495.....
196602	24746	Foot Treadle Cord Cable Clamp for 196445.....
196622	24742	Rectifier Unit Tube Cap with Lead for Singer Electronic Oscillator No. G46A.....
196635	24745	Cable 191406 with 196636 (from Oscillator to Transmitter).....
196636	24745	Cable Plug for 196635.....
196964	24743	Oscillator Condenser (grid) with Lead for Singer Electronic Oscillators Nos. G46 and G46A.....
200004E	24731	Arm Screw.....
200054E	24728	Bonding Bar Guide Slide Screw.....
200293C	24731	Presser Bar Lifting Link Hinge Screw.....
202005	24731	Arm Screw Washer.....
204235	24731	Arm Dowel Pin.....
270004	24727	Arm Shaft Ball Bearing (back) for 270171.....
270005	24727	Arm Shaft Ball Bearing (front).....
270058	24728	Bonding Bar Oiling Felt.....
270062	24728	Presser Bar Lifting and Releasing Lever Bracket.....

No.	Plate	Name
270065	24731	Presser Bar Spring Screw Stud.....
270095	24728	Presser Bar Lifting and Releasing Lever Bracket Spring.....
270170	24727	Machine Pulley, "V" Belt groove, outside diam. of belt groove 2.9 in., with 350540C and 350541C, for 270171.....
270171	24727	Machine Pulley 270170 with 270004.....
270256	24731	Presser Bar Lifting Link.....
270264	24728	Bonding Bar Guide Slide.....
270269	24728	Presser Bar with 176X.....
270270	24728	Presser Bar Bushing.....
270271	24731	Presser Bar Spring.....
270285	24731	Presser Bar Lifting Link Connection.....
270303	24728	Bonding Bar Bushing (lower).....
350411C	24728	Presser Bar Position Guide Clamping Screw for 169039.....
350435C	24731	Presser Bar Spring Pressure Screw.....
350442C	24731	Presser Bar Lifter Hinge Screw.....
350540C	24727	Machine Pulley Set Screw for 270170.....
350541C	24727	Machine Pulley Set Screw for 270170.....
701147		Oscillator Socket Screw Nut Washer (fiber) for Singer Electronic Oscillator No. G26.....
701147		Rectifier Unit Socket Screw Washer (fiber) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
701348		Panel Powerstat Screw Washer for Singer Electronic Oscillators Nos. G46 and G46A.....
701348S	24719	Resistor (bleeder) Connection Nut Lock Washer for Singer Electronic Oscillators Nos. G26 and G46.....
701497R	24746	Foot Treadle Micro Switch Saddle Pivot Washer for 196445
701511S		Oscillator Chassis Fastening Screw Washer for Singer Electronic Oscillators Nos. G46 and G46A.....
701679T	24719	Choke (Filter) Screw Lock Washer for Singer Electronic Oscillator No. G26.....
701679T		Condenser (Filter) Screw Lock Washer for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
701679S		Harness Clamp Screw Lock Washer for Singer Electronic Oscillator No. G46A.....
701679S		Rectifier Unit Socket Mounting Plate Screw Lock Washer for Singer Electronic Oscillator No. G46A.....
701679T		Rectifier Unit Socket Screw Lock Washer for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
701679T		Relay (overload, D.C.) Screw Lock Washer for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
701679S		Relay (plate contactor) Screw Lock Washer for Singer Electronic Oscillators Nos. G26 and G46.....
701719		Receptacle (fuse) Screw Washer for Singer Electronic Oscillator No. G46A.....
701719		Relay (plate contactor) Screw Washer for Singer Electronic Oscillator No. G46A.....
701804	24721	Oscillator Cap (plate) with Lead Nut Lock Washer for Singer Electronic Oscillator No. G26.....
701804T		Oscillator Transformer (filament) Screw Lock Washer for Singer Electronic Oscillators Nos. G26 and G46.....
701804		Receptacle (fuse) Screw Lock Washer for Singer Electronic Oscillator No. G46A.....
701804T		Rectifier Unit Transformer Screw Lock Washer for Singer Electronic Oscillators No. G26 and G46.....
701804T		Rectifier Unit Tube Cap Nut Lock Washer for Singer Electronic Oscillators Nos. G26 and G46.....
701804T		Relay (plate contactor) Screw Lock Washer for Singer Electronic Oscillator No. G46A.....
701804S		Relay (time delay) Condenser (Filter) Screw Lock Washer for Singer Electronic Oscillator No. G46A.....
701822	24716	Power Supply and Filter Unit Resistor (bleeder) Screw Nut Lock Washer for 195461.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
701822		Rectifier Unit Plug (male) Clamping Screw Nut Lock Washer for 195454.....
701822		Rectifier Unit Safety Switch Bracket Screw Nut Lock Washer for 195455.....
701822	24735	Rectifier Unit Socket Screw Nut Lock Washer for 195454.....
701844		Oscillator Condenser (stand-off) Mounting Screw Washer for Singer Electronic Oscillator No. G46.....
701844		Oscillator Condenser (stand-off) Washer for Singer Electronic Oscillator No. G46A.....
701844		Oscillator Socket Screw Washer for Singer Electronic Oscillators Nos. G46 and G46A.....
701844		Oscillator Tube Socket Mounting Screw Washer for Singer Electronic Oscillator No. G46A.....
701850	24729	Electrode Block Screw Lock Washer.....
701850	24729	Electrode Screw Lock Washer.....
701850		Oscillator Supporting Bracket Screw Nut Lock Washer for 195453.....
701850	24713	Oscillator Transformer Screw Nut Lock Washer for 195453.....
701850	24713	Oscillator Tube Shield Supporting Rod Screw Lock Washer for 195453.....
701850	24716	Power Supply and Filter Unit Choke Screw Nut Lock Washer for 195461.....
701850	24716	Power Supply and Filter Unit Condenser Position Bracket Nut Lock Washer for 195461.....
701850		Power Supply and Filter Unit Platform (filter circuit) Screw Nut Lock Washer for 195461.....
701850		Power Supply and Filter Unit Screw Nut Lock Washer for 195461.....
701850		Power Supply and Filter Unit Supporting Bracket Screw Nut Lock Washer for 195461.....
701850		Power Supply and Filter Unit Transformer Screw Nut Lock Washer for 195461.....
701850		Rectifier Unit Plug (male) Supporting Bracket Screw Nut Lock Washer for 195454.....
701850	24735	Rectifier Unit Transformer Screw Nut Lock Washer for 195454.....
701850	24735	Rectifier Unit Tube Platform Supporting Rod Screw Lock Washer for 195454.....
701850		Resistor (bleeder) Connection Nut Lock Washer for Singer Electronic Oscillator No. G46A.....
796801	24714	Panel Switch Indicator (off and on) for 195458.....
796801	24723	Panel Switch (Tack) Indicator (off and on) for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
820894		Sheet of Crocus Cloth (Accessories).....
897580		Pick-up Coil Terminal for 196059.....
898780	24745	Cable Clamp with 50771, for 191406.....
931084		Oscillator Plate Tank Condenser Bracket Screw Washer for 195453.....
931084		Oscillator Plate Tank Condenser Stand-off Insulator Screw Washer for 195453.....
931084		Oscillator Screw Lock Washer for 195453.....
931084		Panel Powerstat Screw Lock Washer for 195458.....
931084		Power Supply and Filter Unit Screw Nut Lock Washer for 195461.....
931084		Rectifier Unit Screw Nut Lock Washer for 195454.....
931131		Relay (overload, D.C.) Screw Washer for Singer Electronic Oscillator No. G46A.....
931202R	24746	Foot Treadle Cord Cable Clamp Fastening Screw Washer for 196445.....
931202T		Oscillator Plate Tank Condenser Screw Nut Lock Washer for Singer Electronic Oscillators Nos. G26 and G46.....


No.	Plate	Name
931202T	-----	Oscillator Resistor (grid) Fastening Screw Nut Lock Washer for Singer Electronic Oscillator No. G26.....
931202T	-----	Oscillator Socket Screw Nut Lock Washer for Singer Electronic Oscillator No. G26.....
931202T	24724	Panel Milliammeter Screw Lock Washer for Singer Electronic Oscillator No. G26.....
931202S	-----	Relay (keying) Screw Lock Washer for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
931202T	-----	Relay (time delay) Screw Lock Washer for Singer Electronic Oscillators Nos. G26 and G46.....
931202T	-----	Relay (time delay) Tube Socket Screw Lock Washer for Singer Electronic Oscillator No. G46A.....
931202T	24719	Resistor (bleeder) Screw Nut Lock Washer for Singer Electronic Oscillators Nos. G26, G46 and G46A.....
931286	24729	Electrode Block Holder Screw Lock Washer.....
931286	24731	Tuning Unit Screw Lock Washer.....
931380T	-----	Oscillator Receptacle (Amphenol) Co-axial Screw Nut Lock Washer for Singer Electronic Oscillator No. G26.....
942522	-----	Power Supply and Filter Unit Lead Clamp for 195461.....
965841	24746	Foot Treadle Cord Lead for 196601.....
980005	24713	Oscillator Terminal for 195453.....
980005	24734	Panel Terminal for 195458.....
980005	24716	Power Supply and Filter Unit Terminal for 195461.....
994683	24742	Fusetron (plug, 6.25 Amp.) for Singer Electronic Oscillator No. G46A.....

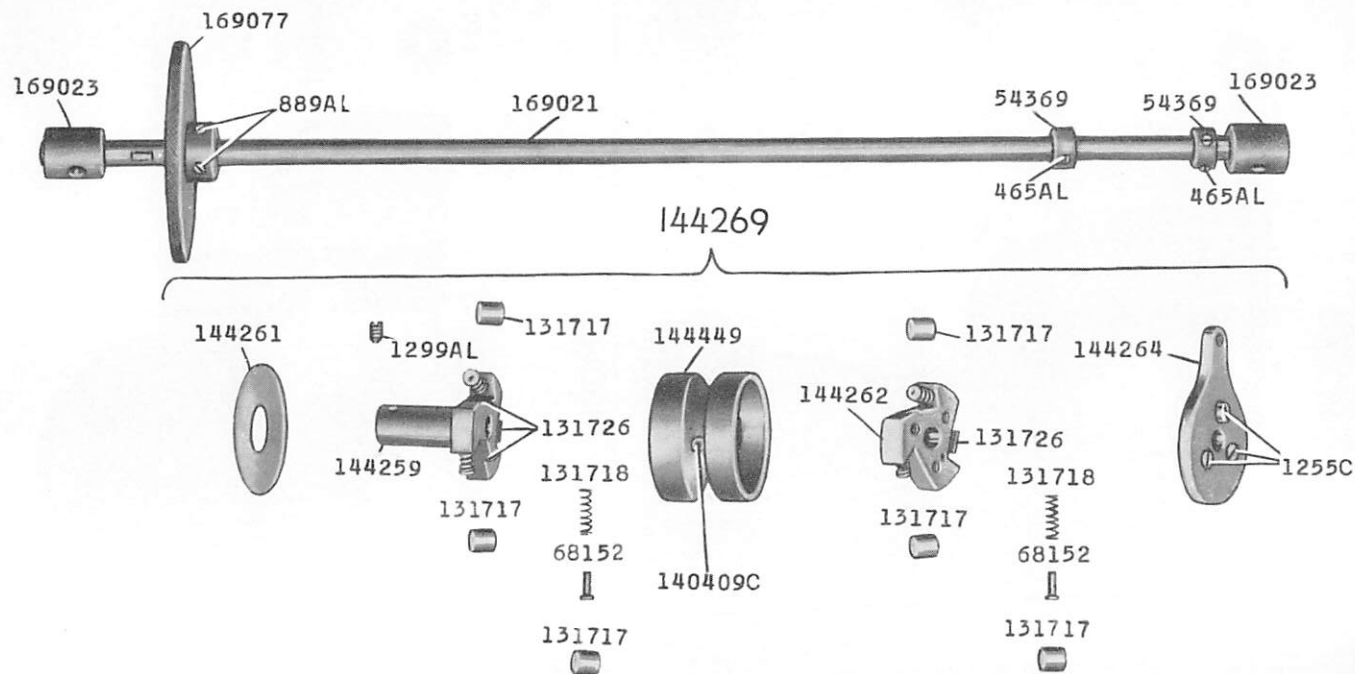


From the library of: Superior Sewing Machine & Supply LLC


24710 - 2/3

160468

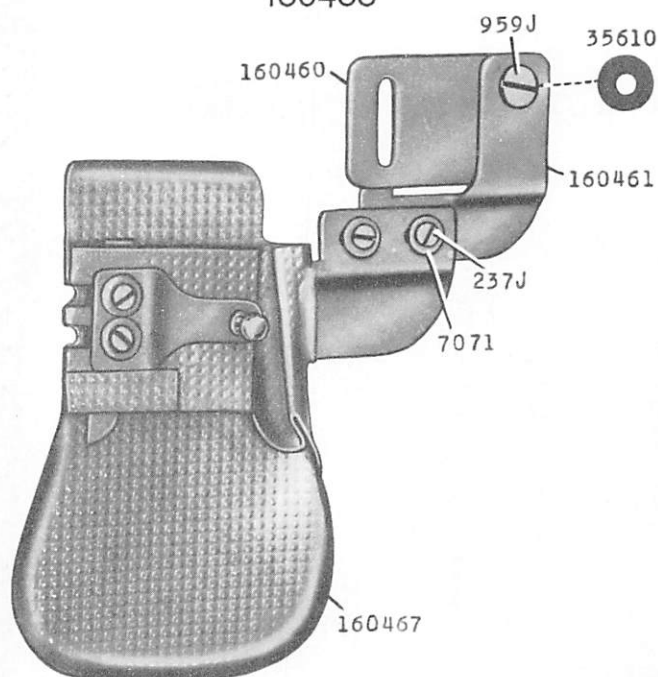


160466

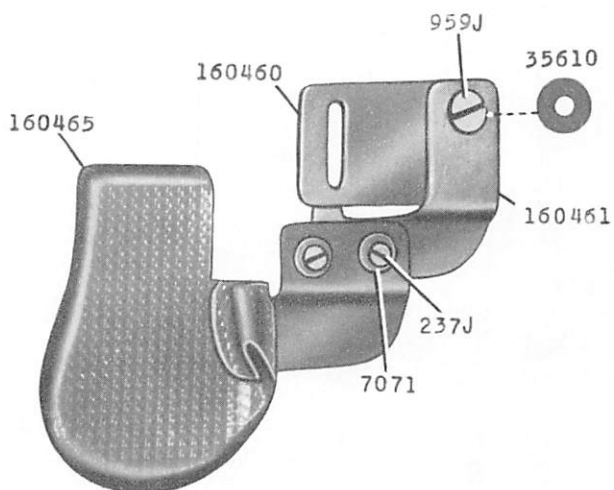

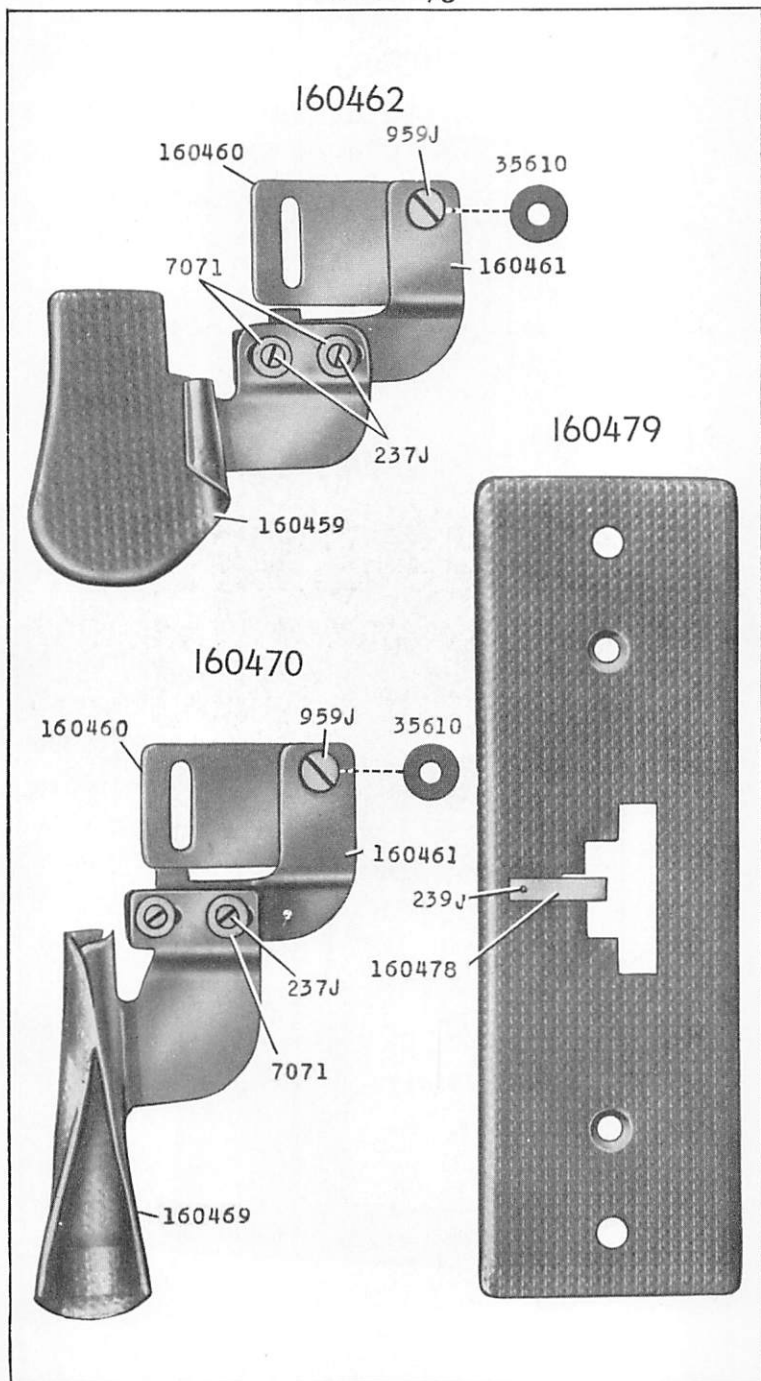


24713 - 1/3


195453

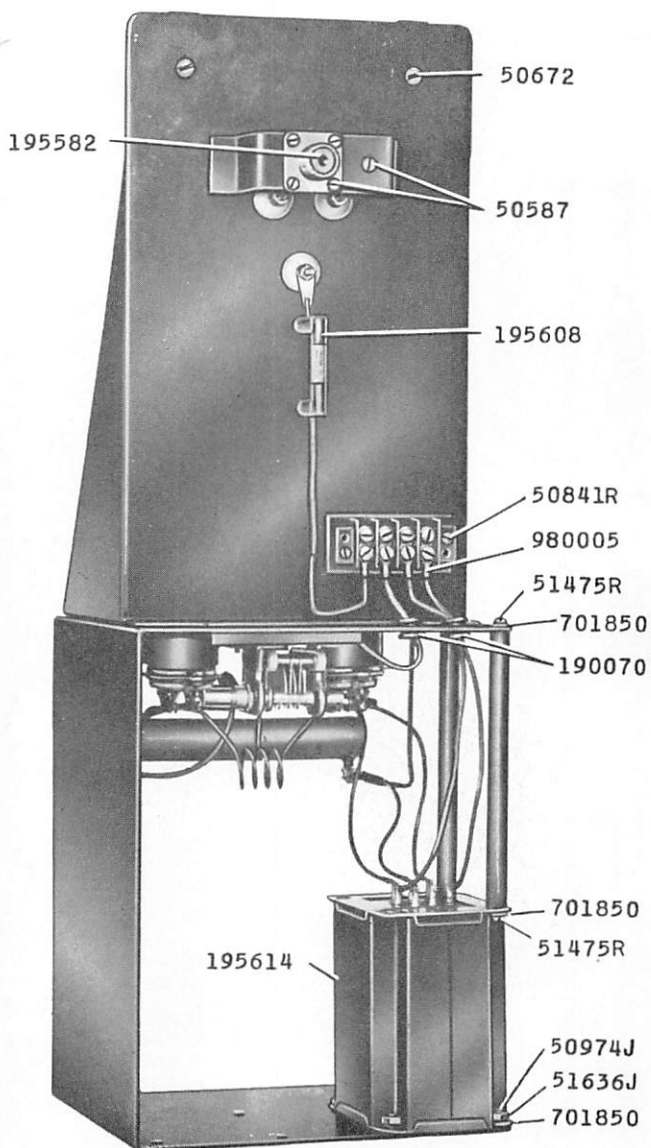

24714 - 1/3


195458

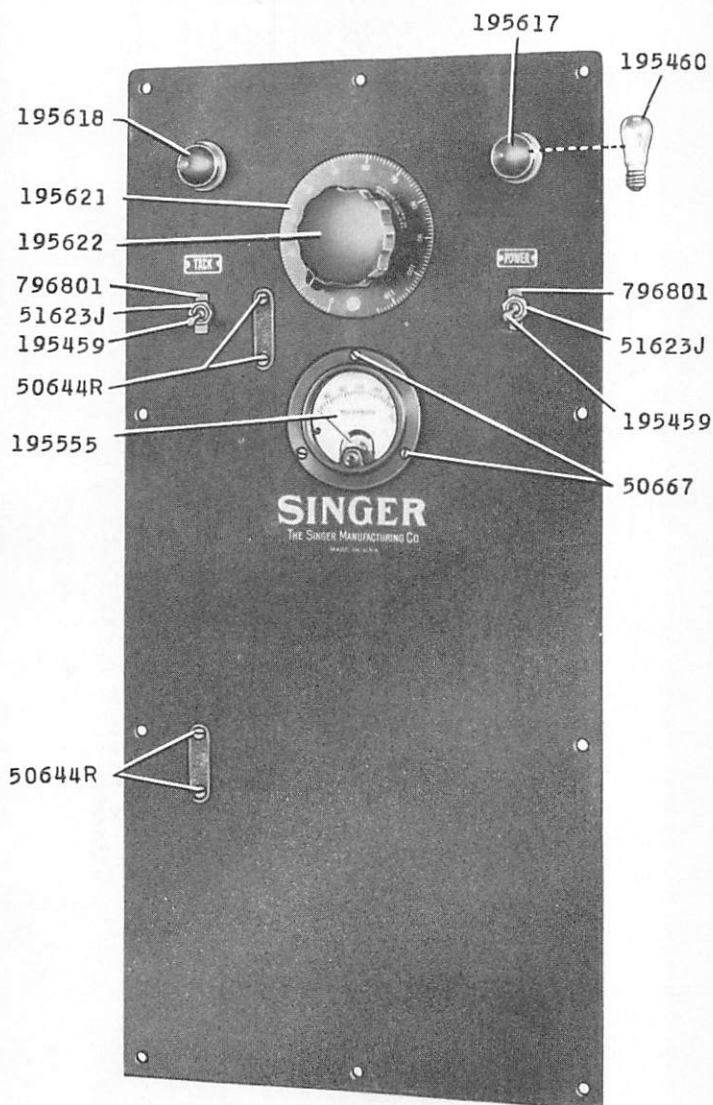

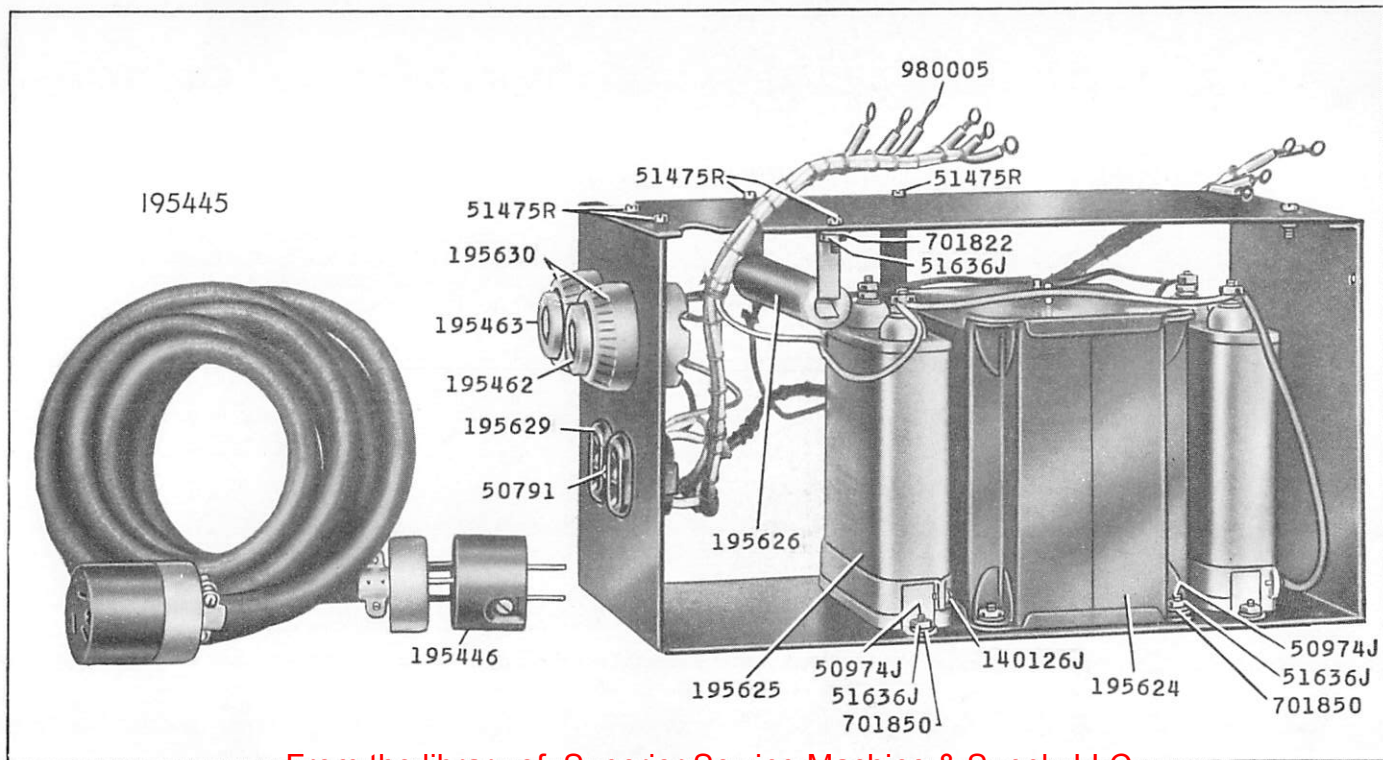


From the library of: Superior Sewing Machine & Supply LLC


24719

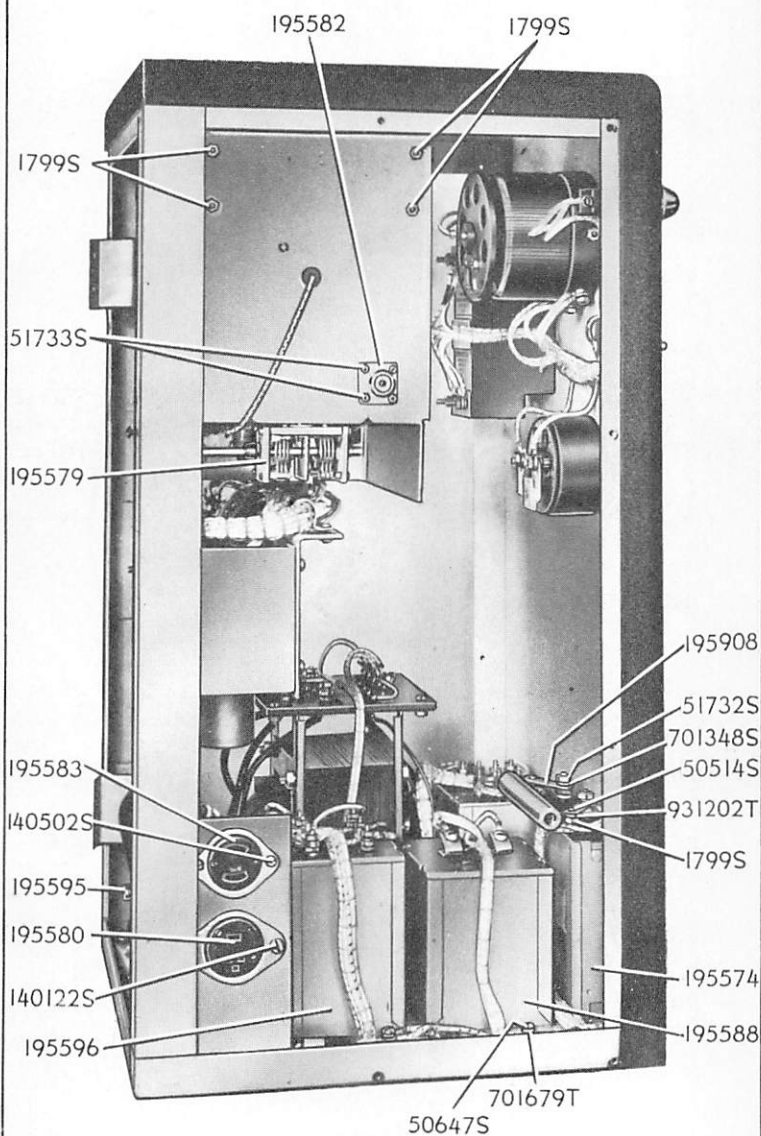


24721

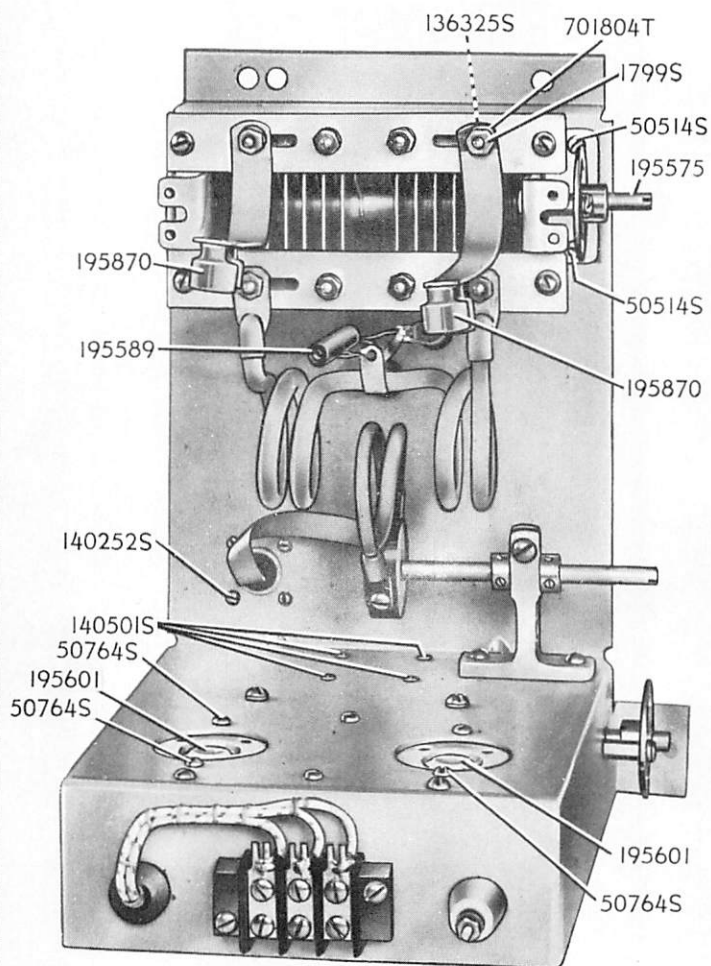


24722

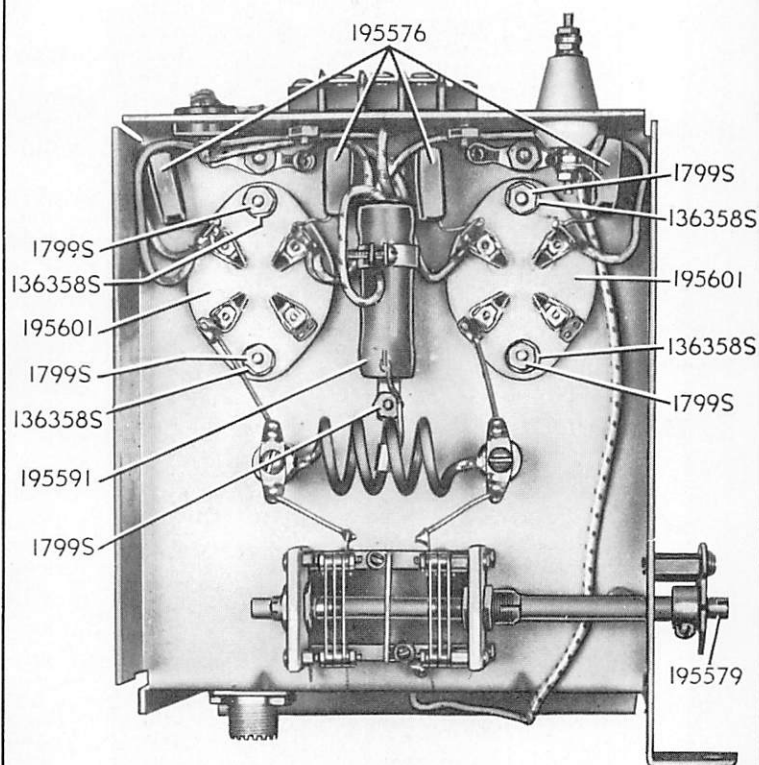


24723

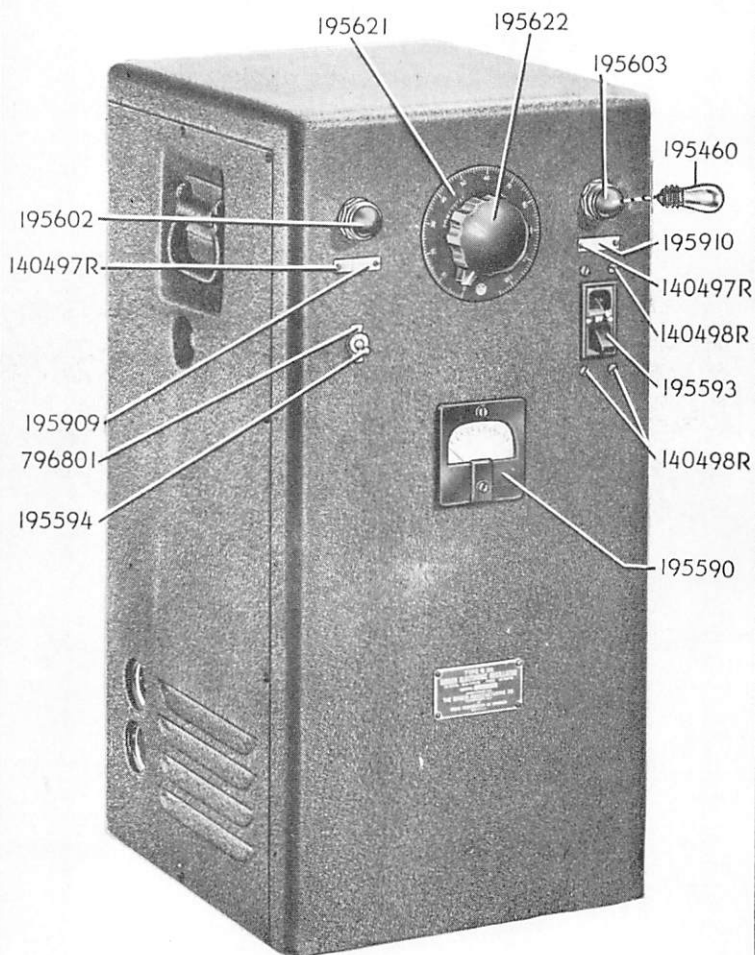

24724

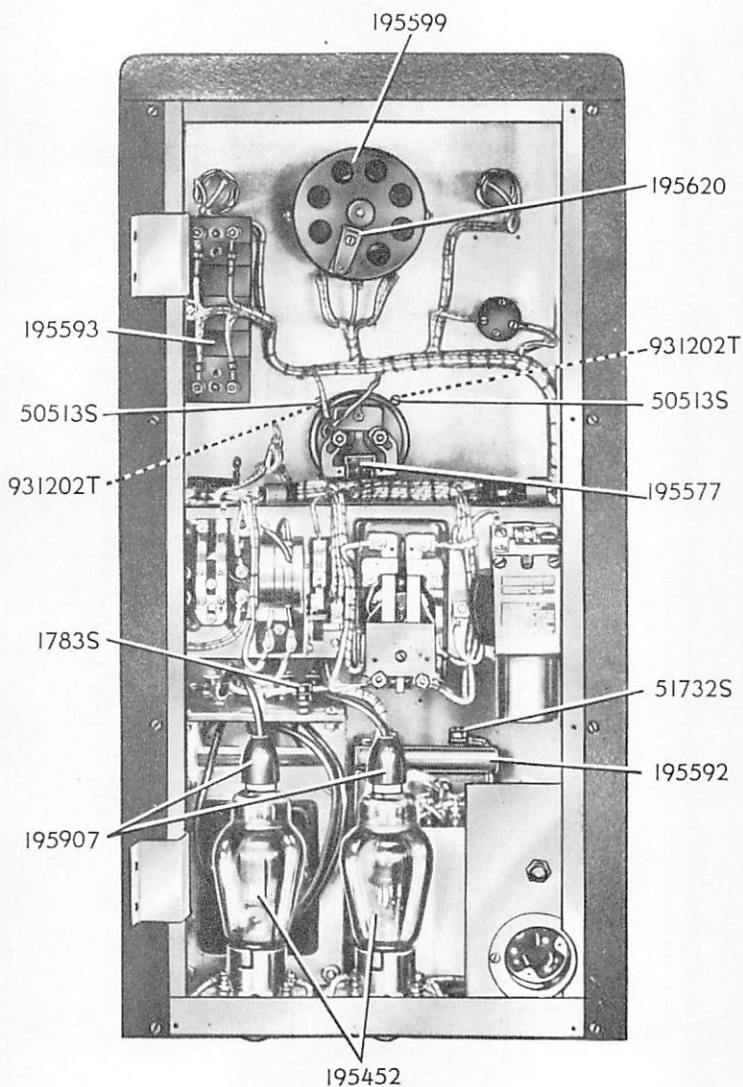


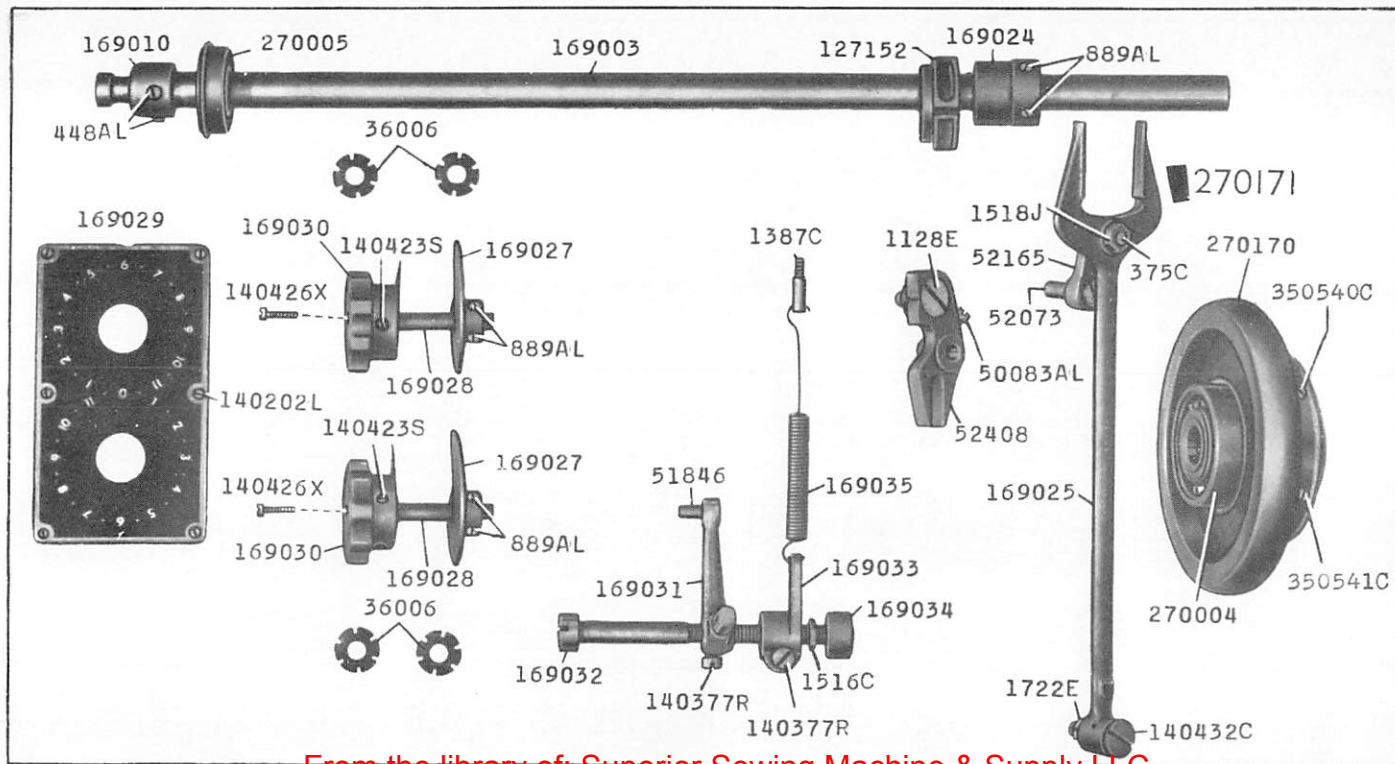


24727-1/3

From the library of: Superior Sewing Machine & Supply LLC


24728-2/3

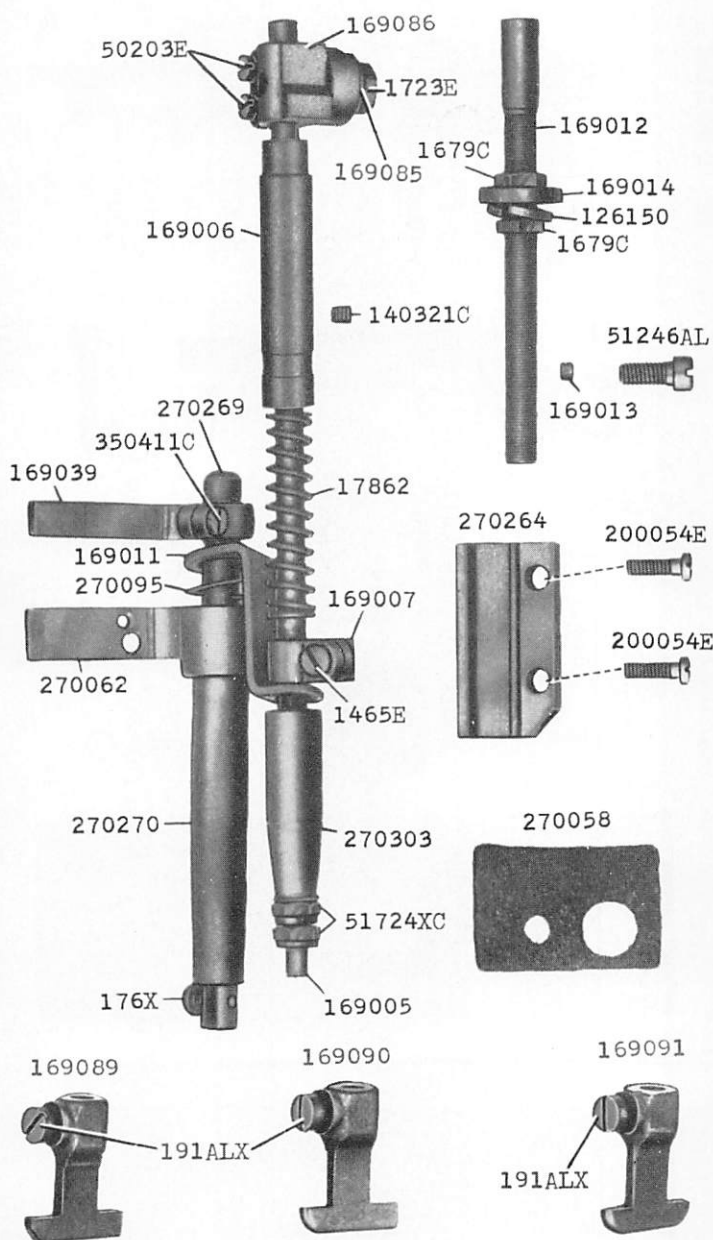

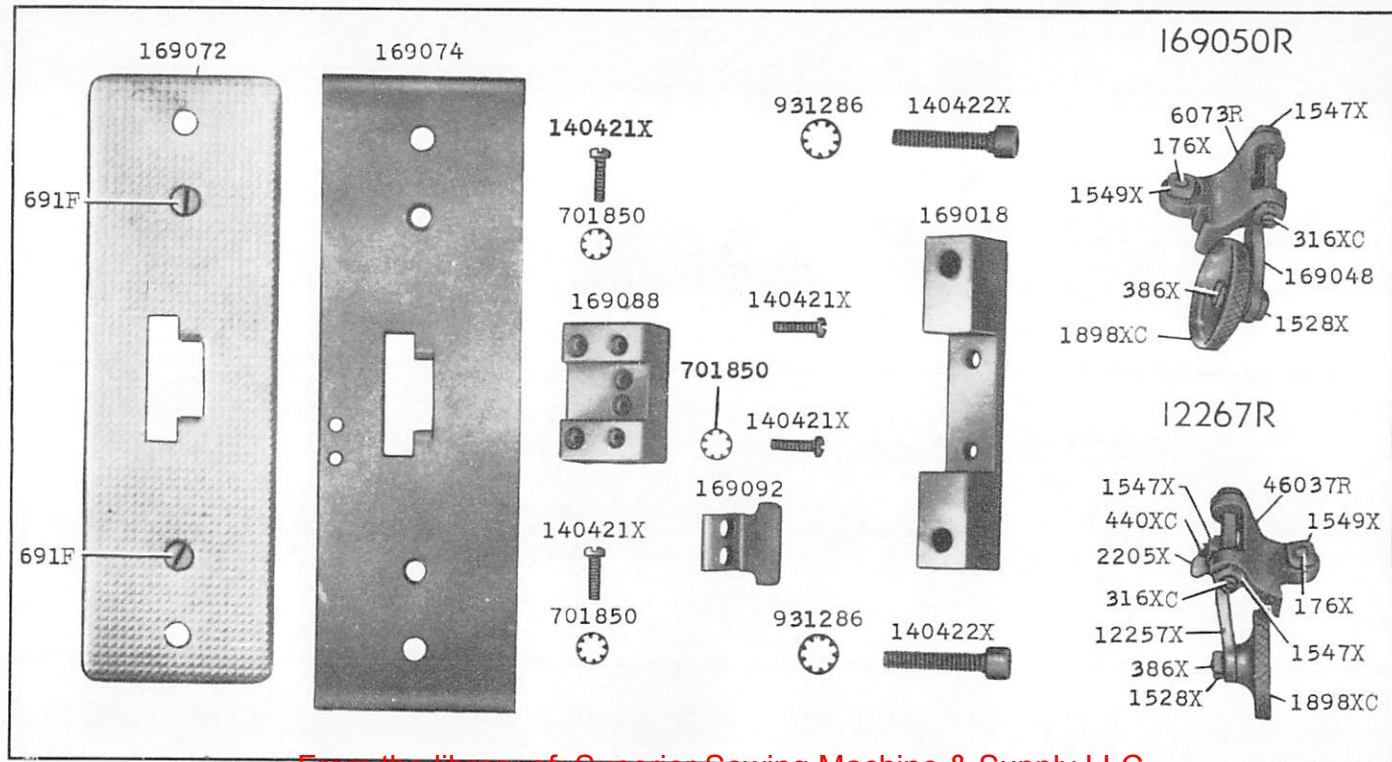


24729-1/2

From the library of. Superior Sewing Machine & Supply LLC

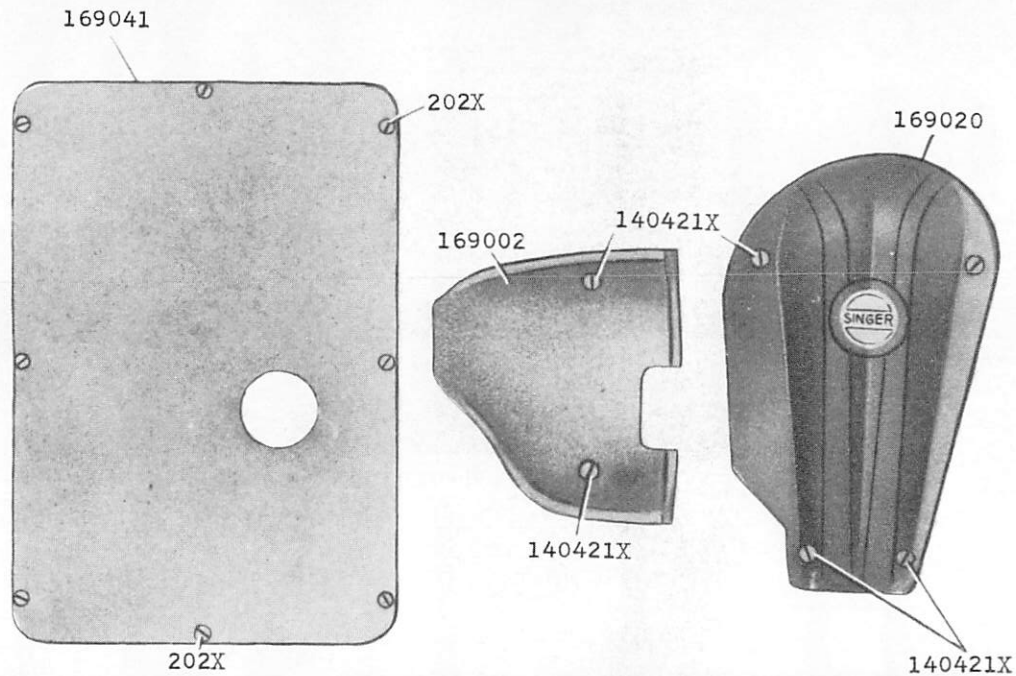


From the library of: Superior Sewing Machine & Supply LLC

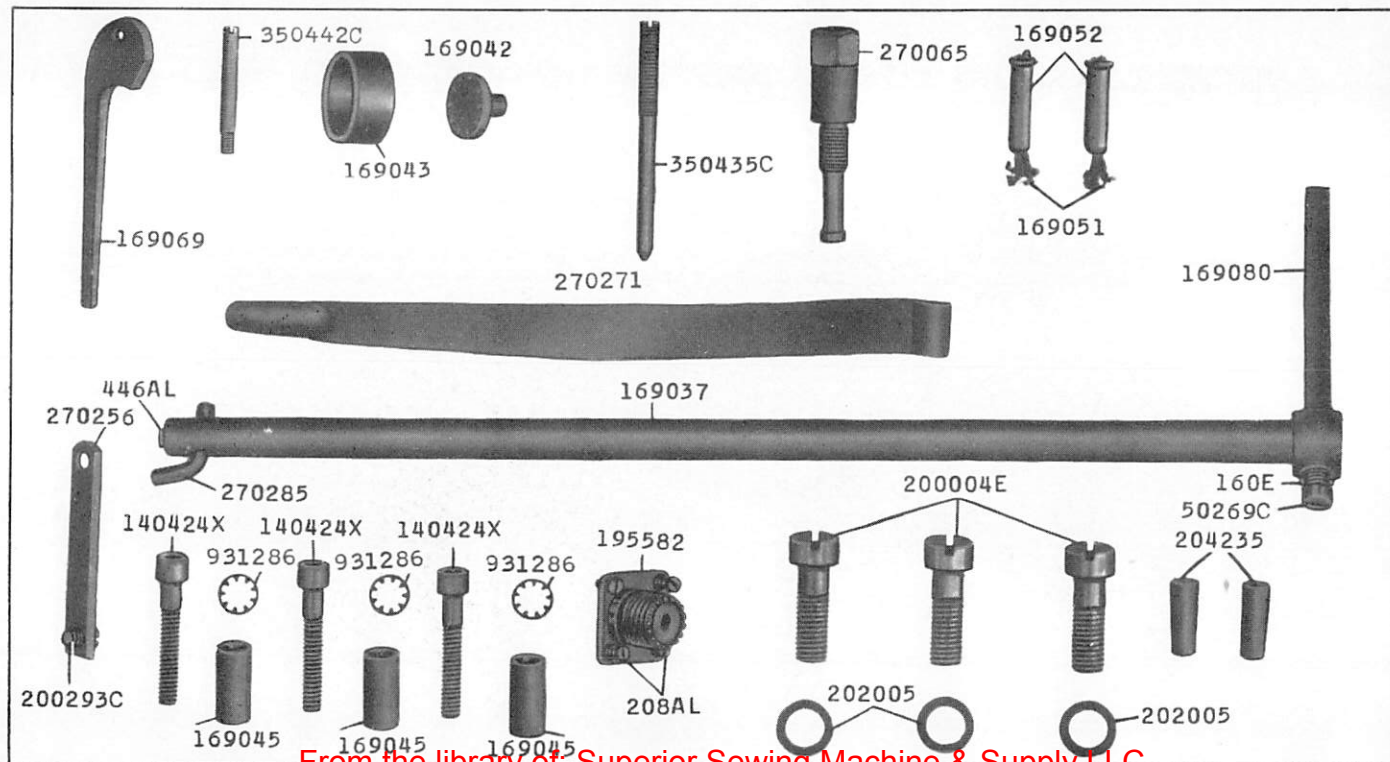

24731-1/2

From the library of: Superior Sewing Machine & Supply LLC

24732-1/3

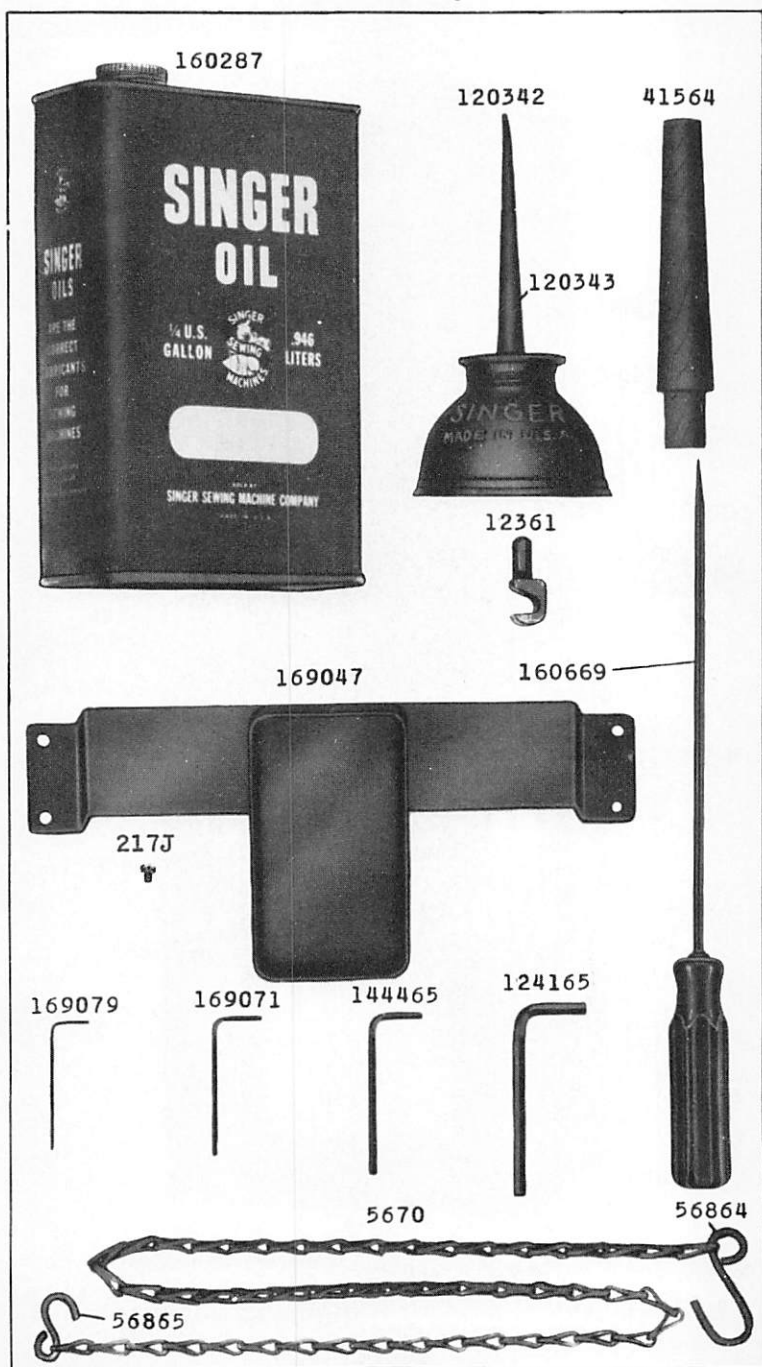


195453




24734.1/3

195458

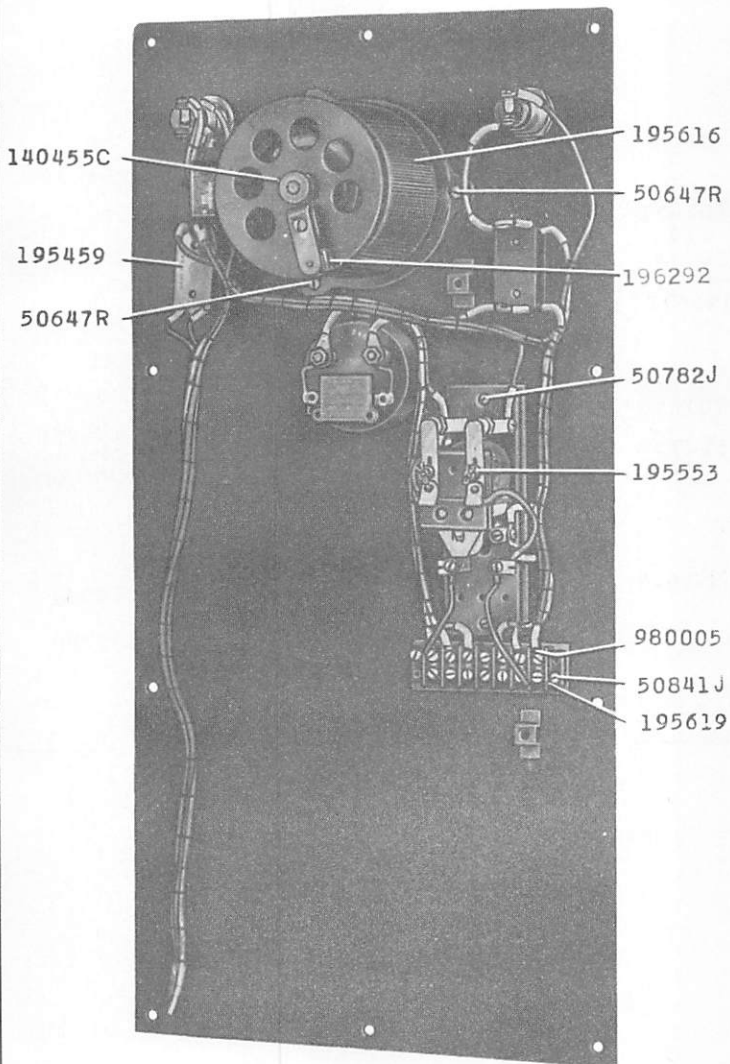




24735-1/2

195454

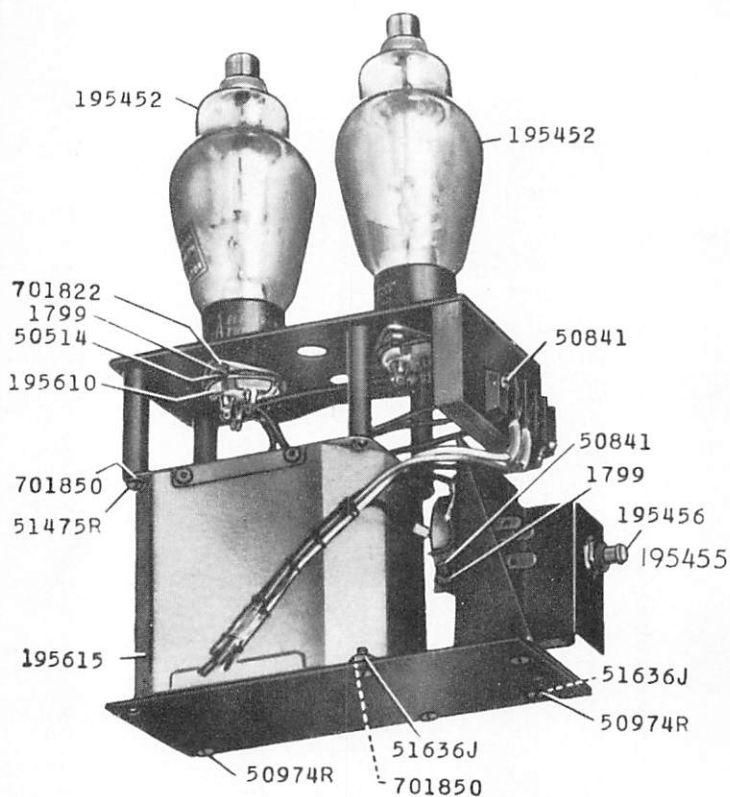

196193

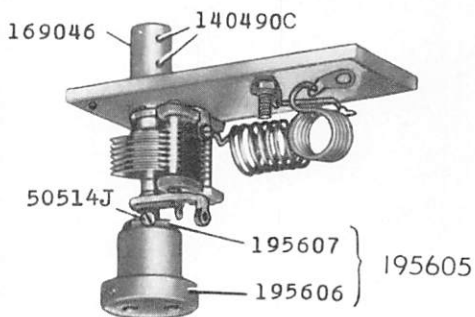


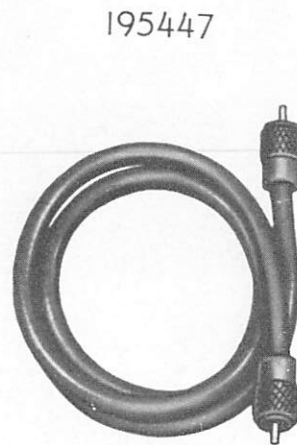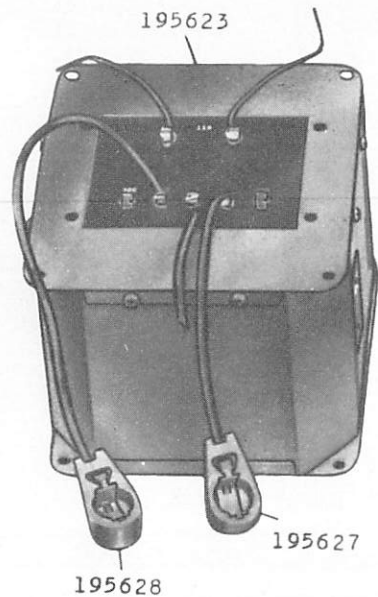


From the library of: Superior Sewing Machine & Supply LLC

24736-1/2


24737

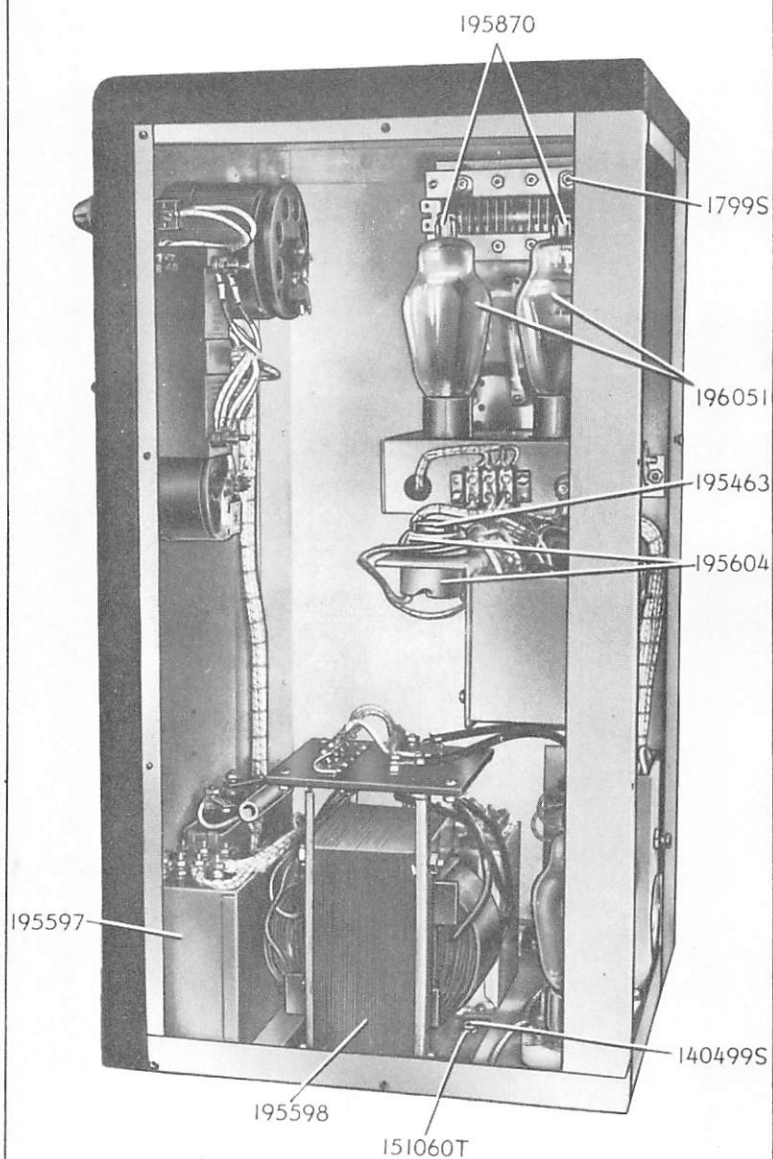

24738

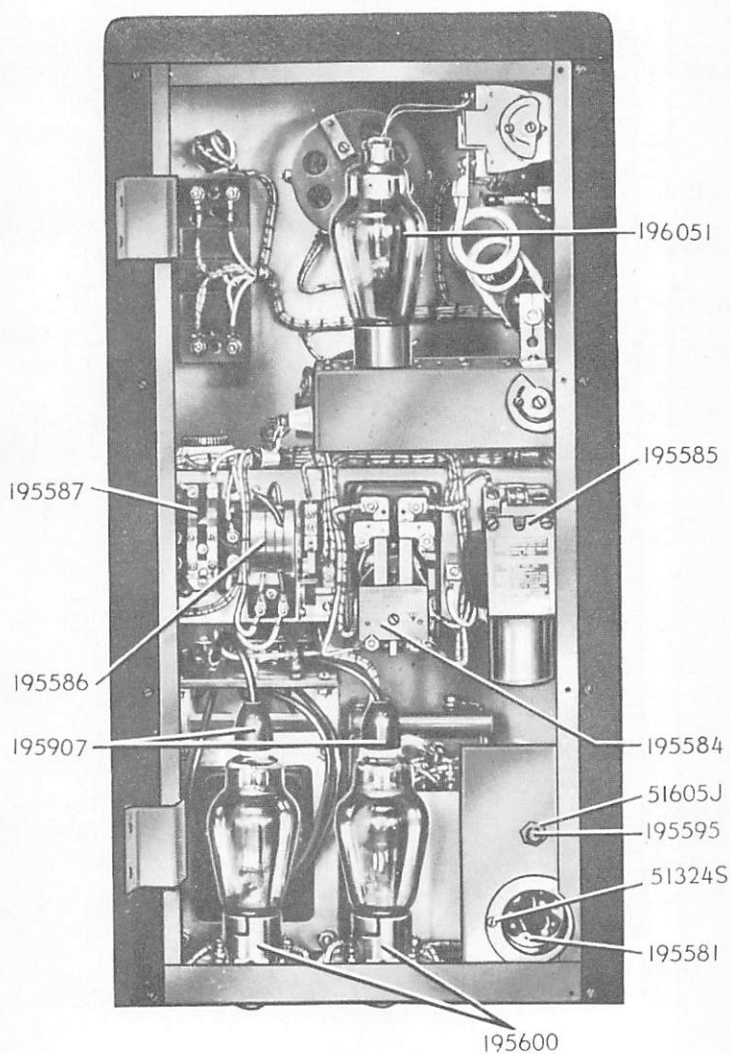


24739

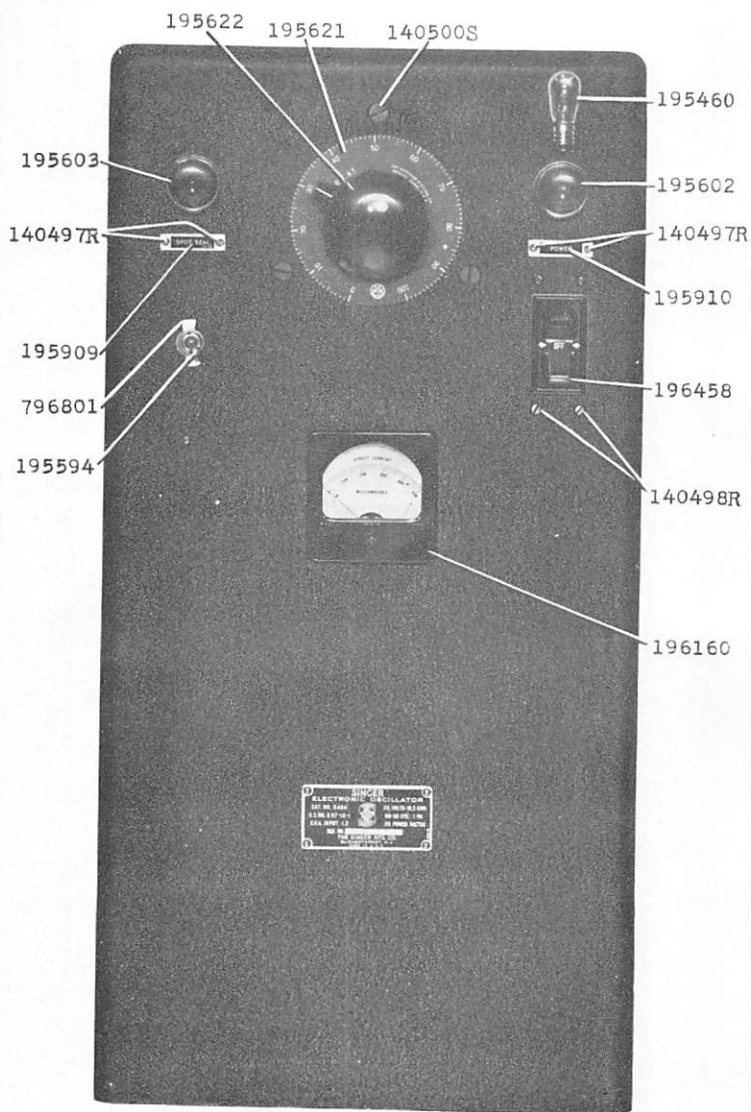


SINCER
ELECTRONIC OSCILLATOR
CAT. NO. 5426
U.S. \$97.50
E.A. IMP. 42
11.000-10.3 MHz
NO. 50 CTC: 1 IN.
11 POWER FACTOR
100 IN. 
THE SINCER DIV. CO.
Newburgh, N.Y.

From the library of: Superior Sewing Machine & Supply LLC


24740

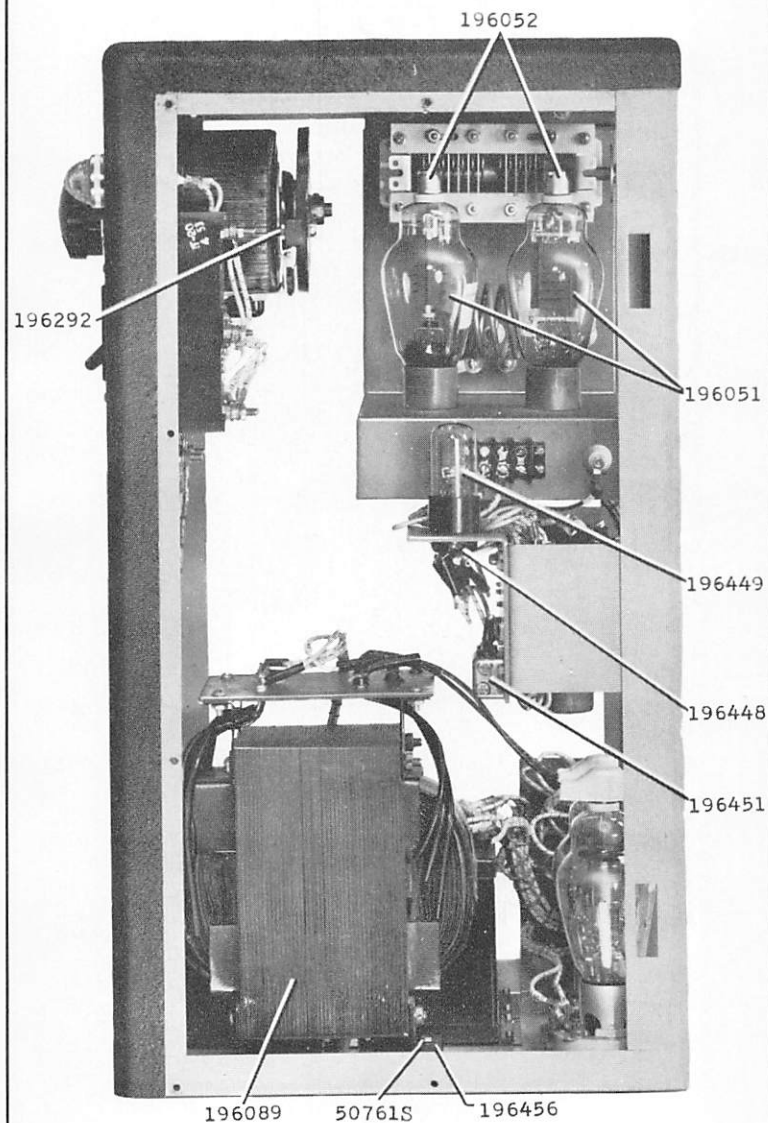


24741

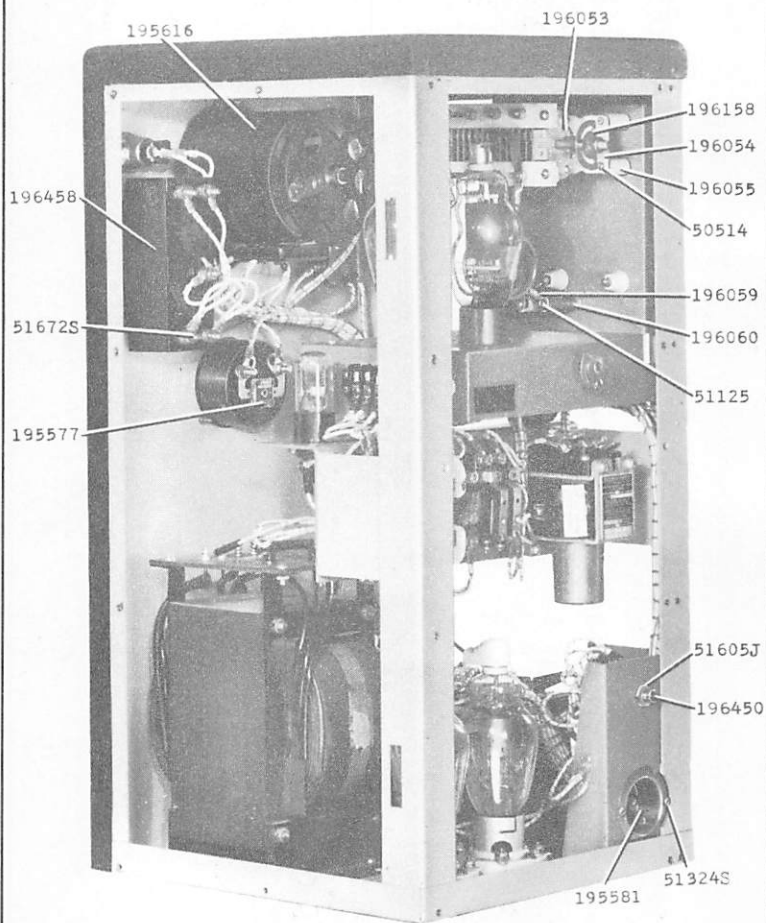

24742

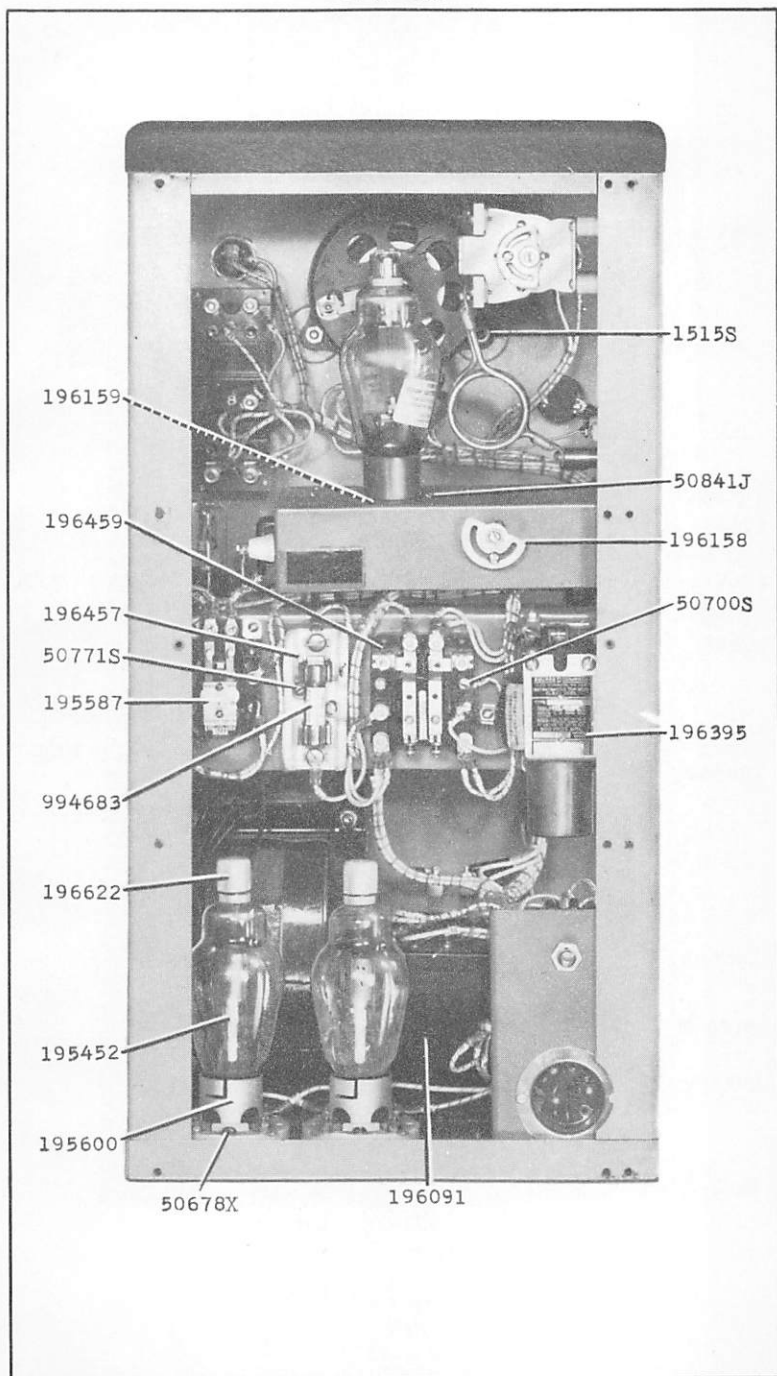


24743

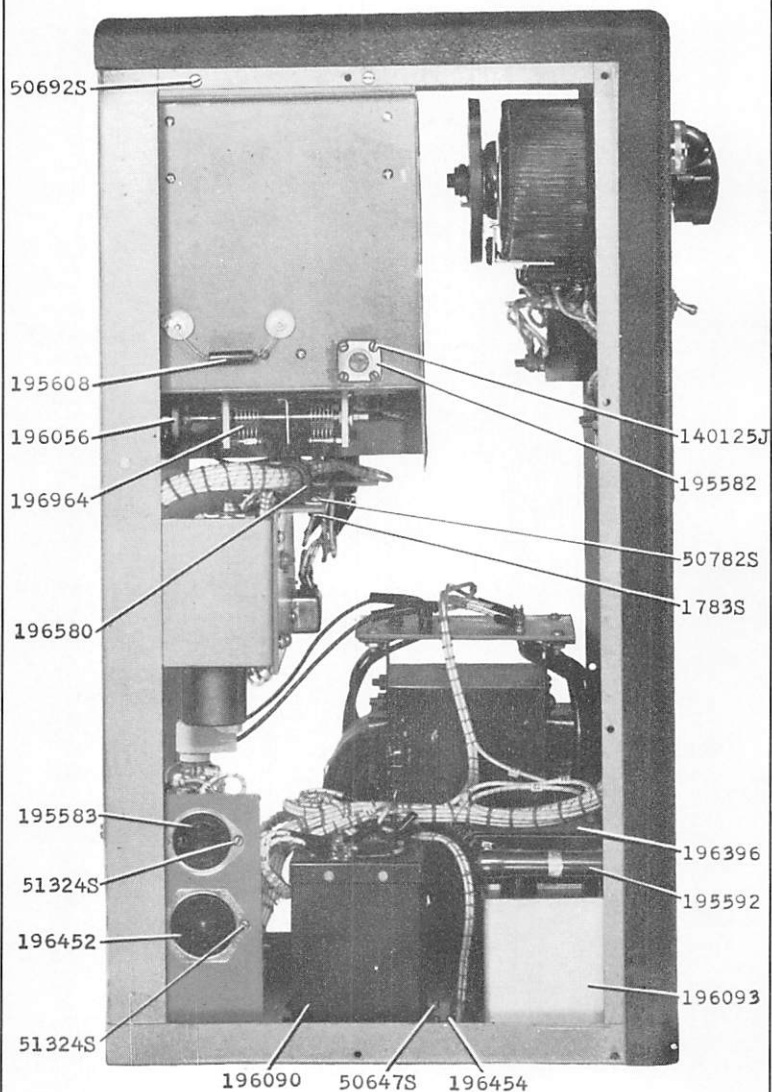


24744-1/3


160491

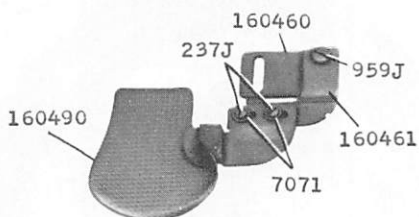

160637

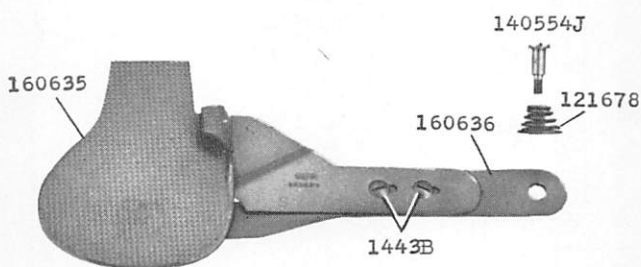


160639

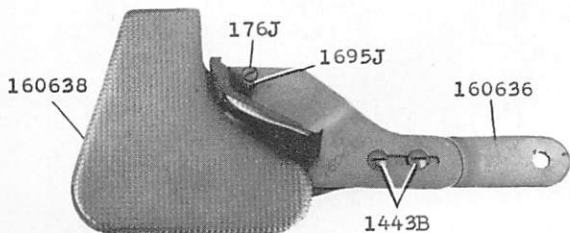


24745-1/3

196635

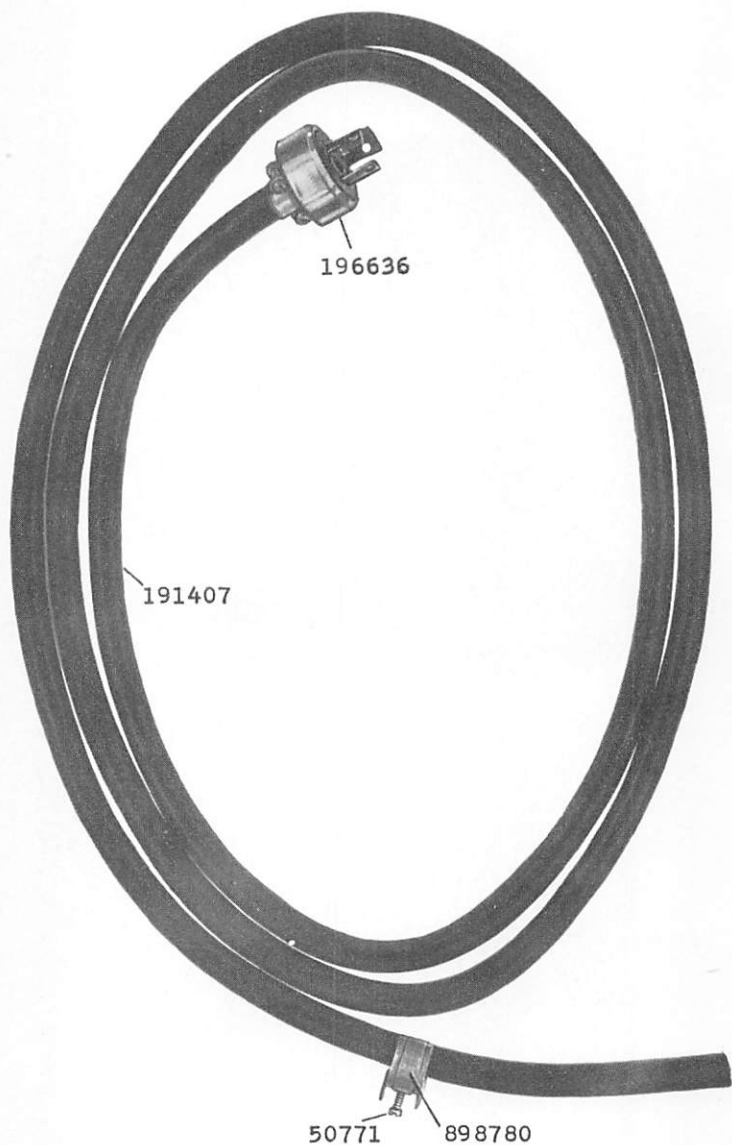


24746-1/3

196445

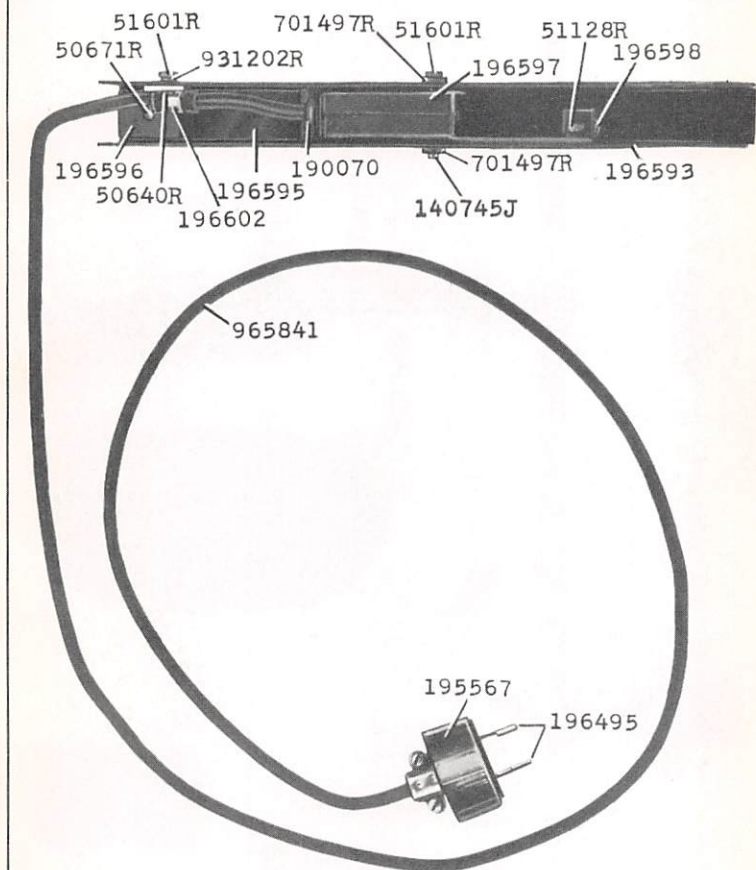

169083

169082

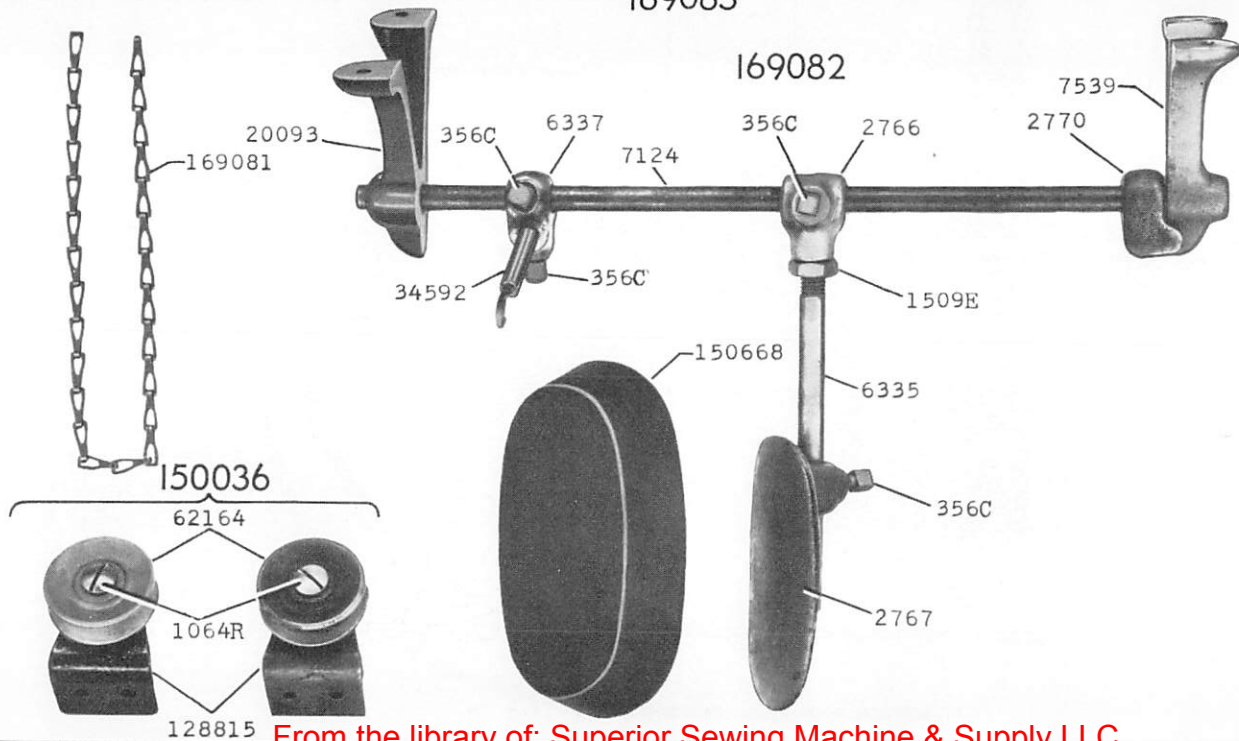


24747.1/3


From the library of: Superior Sewing Machine & Supply LLC

24748-1/2

160464

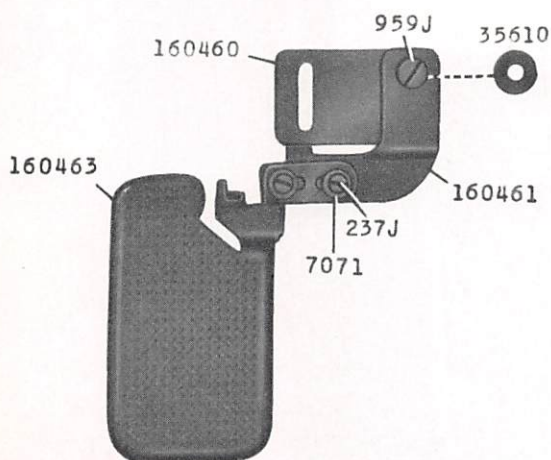


160472

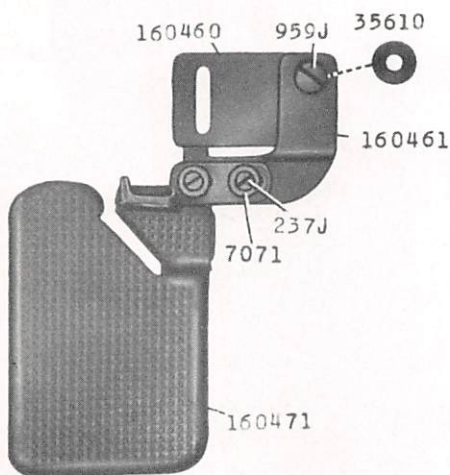

24749-2/3

160475

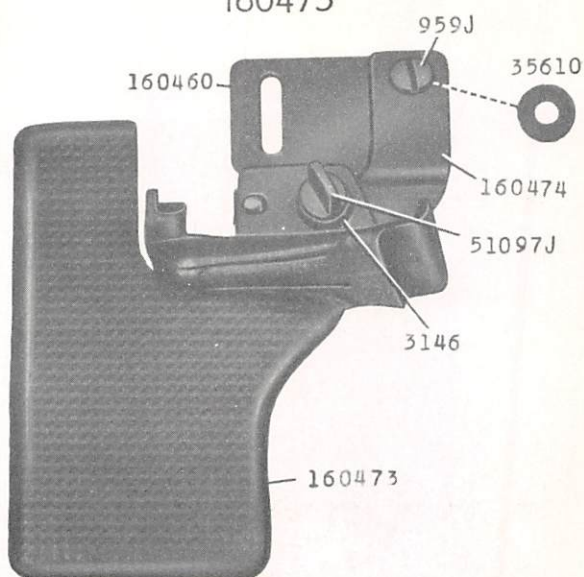

160477

