

LIST OF PARTS

FOR

No. 25-50

MACHINE.

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on Sewing Machine parts is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished "
- E. Soft, not polished.

These letters **MUST BE USED** *when* they appear in the list, and **AFTER** the number, *as* in the list.

In this series

1 to 1500 are Screw Numbers.

1501 " 1800 " Nut "

1801 " 2000 " Roller "

2001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

PARTS COMPLETE FOR

No. 25-50 MACHINE.

SINGLE THREAD, CHAIN STITCH, ROTATING HOOK, PLAIN TENSION,
SPECIALLY DESIGNED FOR STITCHING STRAW BRAID, FITTED
WITH GUIDES, PRESSER FEET, FEED DOGS, ETC., FOR
DIFFERENT VARIETIES OF STRAW BRAID, USED
IN THE MANUFACTURE OF HATS.

No.	Plate	Name	Each
*19005	—	Arm, upper and lower (solid).....	\$10 00
9953	2151	“ Rock Shaft.....	25
19006	2158	“ “ “ Crank (back) with 460c..	40
9954	2158	“ “ “ “ “ Pin.....	01
460c	2158	“ “ “ “ “ Set Screw..	02
19007	2158	“ “ “ “ (front).....	1 00
9954	2158	“ “ “ “ “ Pin.....	01
19096	2151	“ Rotary Shaft with two 1019c.....	1 00
19009	2158	“ “ “ Collar with two 454....	25
454	2158	“ “ “ “ “ Set Screw.....	02
19097	2150	Balance Wheel, 2¼ in. pulley, with 424c....	80
9573	2150	“ “ “ Cover.....	25
168b	2161	“ “ “ “ “ Screw.....	04
424c	2161	“ “ “ “ “ Set Screw.....	05
22306	2158	Connecting Rod with two 1012A.....	50
1012A	2158	“ “ “ Adjusting Screw.....	05
44A	2158	“ “ “ “ “ Screw Stud.....	10
19010	2150	Feed Bar with 19023 and two 401E.....	1 75
19011	2152	“ “ “ Carrier with four 457c.....	1 25
19012	2152	“ “ “ “ “ Hinge Pin.....	15
457c	2152	“ “ “ “ “ Set Screw.....	02
19012	2152	“ “ “ “ “ Hinge Pin.....	15
457c	2152	“ “ “ “ “ Set Screw.....	02
19023	2153	“ “ “ “ “ Supporting Plate.....	25
401E	2153	“ “ “ “ “ Screw.....	02
19013	2152	“ “ “ “ “ Connecting Rod with 794c and 1012c..	1 00
1012c	2158	“ “ “ “ “ Adjusting Screw (regulating end).....	05
794c	2152	Feed Connecting Rod Adjusting Screw (eccentric end).....	05
19015	2154	Feed Dog (medium or Milan).....	35
19018	2154	“ “ “ (fine or chip).....	35
19094	2154	“ “ “ (chip).....	35
19019	2153	“ “ “ “ “ Carrier.....	1 00
19020	2153	“ “ “ “ “ Friction Spring.....	02
19021	2153	“ “ “ “ “ Washer..	01
995c	2153	“ “ “ “ “ Regulating Thumb Screw	10
996c	2153	“ “ “ “ “ Screw.....	06
997c	2154	“ “ “ “ “ Screw.....	05
19022	2152	“ “ “ “ “ Eccentric with two 453c.....	1 25
453c	2152	“ “ “ “ “ Set Screw.....	02
19014	2153	“ “ “ “ “ Sleeve.....	1 00

No. 25-50 Machine Parts.

5

No.	Plate	Name	Each
1027c	2153	Feed Regulating Screw Stud.....	\$ 15
1627c	2153	" " " " Nut.....	05
19025	2153	" " " " Washer.....	05
19026	2159	Lifting Presser Bar.....	40
19027	2159	" " " Guide & Lifting Bracket with 998c.....	60
998c	2159	Lifting Presser Bar Guide & Lifting Bracket Position Screw.....	04
32018	2159	Lifting Presser Bar Lifter.....	30
999	2159	" " " " Hinge Screw.....	05
19099	2159	" " " Lifting Arm with 208D and 1083c.....	80
1083c	2159	Lifting Presser Bar Lifting Arm Adjusting Screw.....	05
208D	2159	Lifting Presser Bar Lifting Arm Adjusting Screw Clamping Screw.....	02
19033	2159	Lifting Presser Bar Lifting Arm Pin.....	01
19100	2159	" " " " " Position Spring.....	02
219	2159	Lifting Presser Bar Lifting Arm Position Spring Screw.....	02
32001	2159	Lifting Presser Bar Lifting Arm Shaft.....	25
32002	2159	" " " " " " Bush- ing.....	25
250	2159	Lifting Presser Bar Lifting Arm Shaft Bush- ing Set Screw.....	03
32003	2159	Lifting Presser Bar Lifting Arm Shaft Driving Lever.....	65
32004	2159	Lifting Presser Bar Lifting Arm Shaft Driving Lever Roller.....	10
32005	2159	Lifting Presser Bar Lifting Arm Shaft Driving Lever Roller Pin.....	04
32006	—	Lifting Presser Bar Lifting Arm Shaft Driving Lever 32003 with 32004 and 32005.	75
19033	2159	Lifting Presser Bar Lifting Arm Shaft Driving Lever Pin.....	01
1001D	2159	Lifting Presser Bar Pressure Regulating Thumb Screw.....	12
1002	2159	Lifting Presser Bar Screw Stud.....	03
19034	2159	" " " Spring.....	02
19035	2159	" " " Bracket.....	25
19036	2155	" " Foot (narrow toe).	1 00
19037	2155	" " " (wide ").....	1 00
19038	2155	" " " Guide (Canton) with 19083.....	1 00
19039	2155	Lifting Presser Foot Guide (coarse Canton) with 19082.....	1 00
19040	2155	Lifting Presser Foot Guide (fine Canton)..	1 00
19041	2155	" " " " (Milan).....	1 00
19065	2156	" " " " (fine Milan)....	1 00
19042	2155	" " " " (tape).....	1 00

No.	Plate	Name	Each
19095	2155	Lifting Presser Foot Guide (chip).....	\$1 00
19043	2155	“ “ “ “ Adjusting Lever with 19045 and 19046.....	30
19044	2155	Lifting Presser Foot Guide Adjusting Lever Friction Washer.....	02
19045	2155	Lifting Presser Foot Guide Adjusting Lever Handle.....	05
19046	2155	Lifting Presser Foot Guide Adjusting Lever Pin	01
1003c	2155	Lifting Presser Foot Guide Adjusting Lever Thumb Screw	12
19083	2155	Lifting Presser Foot Guide Stud for 19038..	03
19082	2155	“ “ “ “ “ “ 19039..	03
1628c	2157	“ “ “ Nut.....	03
19047	2155	“ “ “ Washer.....	02
19048	2153	Looper	1 00
19049	2153	“ Gate with 19050.....	40
19050	2153	“ “ Hinge Stud	05
19051	2153	“ “ Spring	03
8554	2153	“ “ Stop Pin.....	02
1019c	2153	“ Set Screw.....	02
19052	2158	Needle Bar.....	1 00
9527	2158	“ “ Connecting Link with two 329E.	25
329E	2158	“ “ “ “ Adjusting Scr.	02
9570	2158	“ “ “ Stud with 219.....	30
219	2159	“ “ “ “ Clamping Scr.	02
1629c	2158	“ Clamping Nut.....	08
32007	2156	Plait Guide (lower).....	65
32008	2156	“ “ (upper).....	50
2749	2156	“ “ “ Friction Washer.....	01
836D	2156	“ “ “ Hinge Screw.....	06
32009	2156	“ “ “ Lock Spring	03
662D	2156	“ “ “ “ “ Screw.....	02
32010	—	“ “ complete, Nos. 662D, 836D, 2749 and 32007 to 32009	1 25
19054	2156	Plait Guide Friction Washer.....	02
19055	2156	“ “ Regulating Pinion.....	75
1004	2156	“ “ “ “ Screw.....	08
1005	2156	“ “ “ Screw.....	06
19056	2157	“ “ (inside edge) Nos. 19059 & 19060	25
19057	2157	“ “ “ “ “ Finger (narrow) with 1006A	35
1006A	2157	Plait Guide (inside edge) Finger (narrow) Hinge Stud.....	06
1628c	2157	Plait Guide (inside edge) Finger (narrow) Hinge Stud Nut.....	03
19058	2157	Plait Guide (inside edge) Finger (wide) with 1007A	35
1007A	2157	Plait Guide (inside edge) Finger (wide) Hinge Stud.....	08
1628c	2157	Plait Guide (inside edge) Finger (wide) Hinge Stud Nut.....	03

No. 25-50 Machine Parts.

7

No.	Plate	Name	Each
19059	—	Plait Guide (inside edge) Plate.....	\$ 10
19060	—	“ “ “ “ Rod.....	15
19061	2157	“ “ (stationary) Nos. 19062 and 19063	25
19062	—	“ “ “ “ Bracket.....	10
19063	—	“ “ “ “ Rod.....	15
19064	2150	Spool Bracket with 1009c.....	75
2049	2160	“ “ Dowel Pin.....	01
1008B	2161	“ “ Screw.....	05
19066	2160	“ Spindle.....	25
1009C	2161	“ “ Set Screw.....	10
19067	2150	“ Thread Guiding Disc.....	15
691A	2162	“ “ “ “ Screw.....	04
32011	2160	Tension Controller.....	10
32012	2160	“ Disc.....	10
1560C	2160	“ Regulating Thumb Nut.....	04
13710	2160	“ Spring.....	03
1084	2160	“ Stud.....	08
219	2159	“ “ Set Screw.....	02
32013	2160	“ Thread Guard (left).....	15
32014	2160	“ “ “ (right).....	15
219	2159	“ “ “ Set Screw.....	02
19068	2160	Thread Controller Bracket.....	20
330D	2160	“ “ “ “ Screw.....	02
19069	2160	“ “ Guide Plate with 19070.	25
19070	2160	“ “ “ “ Stud.....	03
19071	2160	“ “ Releasing Rod.....	10
19072	2160	“ “ Spring.....	05
19073	2160	“ Eyelet and Hat Guard.....	10
19074	2160	“ Guard (head of arm).....	10
330D	2160	“ “ “ “ Screw.....	02
19075	2160	“ Pull-off Lever with 1933.....	75
19076	2160	“ “ “ “ Cam with two 460c.	75
460C	2158	“ “ “ “ Set Screw.....	02
701	2160	“ “ “ “ Hinge Screw.....	06
1933	2160	“ “ “ “ Roller and Stud....	18
32015	2154	Throat Plate.....	60
32016	2154	“ “ “ “ Holder with two 19078.....	1 25
32017	—	“ “ “ “ 32016 with 32015 and two 934D.....	1 85
1011	2154	Throat Plate Holder Screw.....	03
19078	2154	“ “ “ “ Steady Pin.....	01
934D	2154	“ “ “ “ Screw.....	02
19085	2162	Tip Plate.....	60
19086	2162	“ “ “ “ Arm.....	75
1061	2162	“ “ “ “ Screw Stud.....	25
19087	2162	“ “ “ “ Locking Washer.....	25
19088	2162	“ “ “ “ “ Pin.....	01
691	2162	“ “ “ “ “ Screw.....	04
19089	2162	“ “ “ “ “ Spring.....	02
19090	2162	“ “ “ “ “ Steady Pin.....	01
19091	—	“ “ “ “ “ complete, Nos. 691, 1061, 19085 to 19089 and two 19090.....	2 00

ACCESSORIES.

No.	Plate	Name	Each
26460	2151	Oiler with cap and 26462.....	\$ 05
26461	—	“ 26460 filled with oil.....	08
26462	2151	“ Spout, 2 in. long.....	01
26026	2151	Screw Driver (large)	10
26485	2151	“ “ (small).....	05
25539	2158	Stiletto	05
32022	2151	Machine Cushion (cloth) for 19092.....	02
19079	2158	Wrench for 1027, 1083, 1628 and 1629.....	20

FOOT LIFTER PARTS.

No.	Plate	Name	Each
6439	—	Chain, 42 in. long.....	\$ 20
4879	2151	“ Connecting Link for 4885	03
19080	2151	Lifting Lever.....	35
21D	2161	“ “ Hinge Screw.....	15
19081	2153	“ “ Spring.....	05
4881	2166	Treadle	30
4882	2151	“ Shaft.....	05
4883	2151	“ Spring.....	10
4884	2166	“ Stand.....	25
4885	2166	“ complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....	75
19093	—	Foot Lifter complete, Nos. 21D, 4885, 6439, 19080 and 19081.....	1 50

FOR MACHINE ON IRON BASE.

No.	Plate	Name	Each
19092	2166	Machine Base with three wood screws 1½ in. No. 12.....	\$ 50
1062E	2161	Machine Base Screw.....	08
9842	2153	“ “ “ Washer.....	02

OBSOLETE PARTS.

No.	Plate	Name	Each
19008	2165	Arm Rotary Shaft with 1019c.....	\$1 00
9504	2165	Balance Wheel with 424c.....	90
19028	2163	Lifting Presser Bar Lifter, use 32018	25
19029	2163	" " " Lifting Arm with 1000c	1 00
810	2163	" " " " " Cap Screw	03
1000	2163	" " " " " Clamping Screw.....	06
19030	2163	Lifting Presser Bar Lifting Arm Position Spring.....	02
19031	2163	Lifting Presser Bar Lifting Arm Shaft....	15
19032	2163	" " " " " " Driv- ing Lever	60
19053	2163	Plait Guide, use 32010.....	1 00
2102	2163	Tension Disc.....	05
637	2163	" Screw Stud.....	08
19077	2164	Throat Plate with two 19078, use 32017....	1 25
1011	2154	" " Screw.....	03

NUMERICAL LIST.

No. Plate	Name	Each
21D 2161	Lifting Lever Hinge Screw for 19093.....	\$ 15
44A 2158	Connecting Rod Screw Stud.....	10
168D 2161	Balance Wheel Cover Screw.....	04
208D 2159	Lifting Presser Bar Lifting Arm Adjusting Screw Clamping Screw for 19099.....	02
219 2159	Lifting Presser Bar Lifting Arm Position Spring Screw.....	02
219 2159	Needle Bar Connecting Stud Clamping Screw	02
219 2159	Tension Stud Set Screw.....	02
219 2159	" Thread Guard Set Screw.....	02
250 2159	Lifting Presser Bar Lifting Arm Shaft Bushing Set Screw.....	03
329E 2158	Needle Bar Connecting Link Adjusting Screw for 9527.....	02
330D 2160	Thread Controller Bracket Screw.....	02
330D 2160	" Guard Screw.....	02
401E 2153	Feed Bar Supporting Plate Screw for 19010..	02
424C 2161	Balance Wheel Set Screw for 19097.....	05
453C 2152	Feed Eccentric Set Screw for 19022.....	02
454 2158	Arm Rotary Shaft Collar Set Screw for 19009	02
457C 2152	Feed Bar Carrier Hinge Pin Set Screw for 19011.....	02
457C 2152	Feed Bar Hinge Pin Set Screw for 19011....	02
460C 2158	Arm Rock Shaft Crank (back) Set Screw for 19006.....	02
460C 2158	Thread Pull-off Lever Cam Set Screw for 19076.....	02
637 2163	Tension Screw Stud, obsolete.....	08
662D 2156	Plait Guide (upper) Lock Spring Screw for 32010.....	02
691A 2162	Spool Thread Guiding Disc Screw.....	04
691 2162	Tip Plate Screw for 19091.....	04
701 2160	Thread Pull-off Lever Hinge Screw.....	06
794C 2152	Feed Connecting Rod Adjusting Screw (eccen- tric end) for 19013.....	05
810 2163	Lifting Presser Bar Lifting Arm Cap Screw, obsolete.....	03
836D 2156	Plait Guide (upper) Hinge Screw for 32010...	06
934D 2154	Throat Plate Screw for 32017.....	02
995C 2153	Feed Dog Carrier Regulating Thumb Screw	10
996C 2153	" " " Screw.....	06
997C 2154	" " " Screw.....	05
998C 2159	Lifting Presser Bar Guide and Lifting Bracket Position Screw for 19027.....	04
999 2159	Lifting Presser Bar Lifter Hinge Screw....	05
1000C 2163	" " " Lifting Arm Clamping Screw for 19029, obsolete.....	06
1001D 2159	Lifting Presser Bar Pressure Regulating Thumb Screw.....	12

Numerical List of Parts.

11

No.	Plate	Name	Each
1002	2159	Lifting Presser Bar Screw Stud.....	\$ 03
1003	2155	" " Foot Guide Adjusting Lever	
		Thumb Screw	12
1004	2156	Plait Guide Regulating Pinion Screw.....	08
1005	2156	" " Screw	06
1006A	2157	" " (inside edge) Finger (narrow)	
		Hinge Stud for 19057.....	06
1007A	2157	Plait Guide (inside edge) Finger (wide) Hinge	
		Stud for 19058	08
1008B	2161	Spool Bracket Screw.....	05
1009C	2161	" Spindle Set Screw for 19064.....	10
1011	2154	Throat Plate Holder Screw.....	03
1011	2154	" " Screw, obsolete.....	03
1012A	2158	Connecting Rod Adjusting Screw for 22306..	05
1012C	2158	Feed Connecting Rod Adjusting Screw (regu-	
		lating end) for 19013.....	05
1019C	2153	Looper Set Screw.....	02
1027C	2153	Feed Regulating Screw Stud	15
1061	2162	Tip Plate Arm Screw Stud for 19091.....	25
1062E	2161	Machine Base Screw.....	08
1083C	2159	Lifting Presser Bar Lifting Arm Adjusting	
		Screw for 19099.....	05
1084	2160	Tension Stud.....	08
1560C	2160	" Regulating Thumb Nut.....	04
1627C	2153	Feed Regulating Screw Stud Nut	05
1628C	2157	Lifting Presser Foot Nut	03
1628C	2157	Plait Guide (inside edge) Finger (narrow)	
		Hinge Stud Nut.....	03
1628C	2157	Plait Guide (inside edge) Finger (wide) Hinge	
		Stud Nut.....	03
1629C	2158	Needle Clamping Nut	08
1933	2160	Thread Pull-off Lever Roller and Stud for	
		19075.....	18
2049	2160	Spool Bracket Dowel Pin.....	01
2102	2163	Tension Disc, obsolete.....	05
2749	2156	Plait Guide (upper) Friction Washer for 32010	01
4879	2151	Chain Connecting Link for 4885.....	03
4881	2166	Treadle for 4885.....	30
4882	2151	" Shaft for 4885.....	05
4883	2151	" Spring for 4885.....	10
4884	2166	" Stand " "	25
4885	2166	" complete, Nos. 4879, 4881 to 4884 and	
		two wood screws 1 in. No. 16, for 19093..	75
6439	—	Chain, 42 in. long, for 19093.....	20
8554	2153	Looper Gate Stop Pin.....	02
9504	2165	Balance Wheel with 424c, obsolete	90
9527	2158	Needle Bar Connecting Link with two 329E..	25
9570	2158	" " " Stud with 219	30
9573	2150	Balance Wheel Cover.....	25
9842	2153	Machine Base Screw Washer.....	02

Numerical List of Parts.

No.	Plate	Name	Each
9952	2151	Arm Rock Shaft.....	\$ 25
9954	2158	" " " Crank (back) Pin.....	01
9954	2158	" " " " (front) "	01
13710	2160	Tension Spring.....	03
*19005	—	Arm, upper and lower (solid).....	10 00
19006	2158	" Rock Shaft Crank (back) with 460c..	40
19007	2158	" " " " (front).....	1 00
19008	2165	" Rotary Shaft with 1019c, obsolete...	1 00
19009	2158	" " " Collar with two 454....	25
19010	2150	Feed Bar with 19023 and two 401E.....	1 75
19011	2152	" " Carrier with four 457c.....	1 25
19012	2152	" " " Hinge Pin.....	15
19012	2152	" " Hinge Pin.....	15
19013	2152	" Connecting Rod with 794c and 1012c.	1 00
19014	2153	" Eccentric Sleeve.....	1 00
19015	2154	" Dog (medium or Milan).....	35
19018	2154	" " (fine or chip).....	35
19019	2153	" " Carrier.....	1 00
19020	2153	" " " Friction Spring	02
19021	2153	" " " " " Washer .	01
19022	2152	" Eccentric with two 453c.....	1 25
19023	2153	" Bar Supporting Plate for 19010	25
19025	2153	" Regulating Screw Stud Washer.....	05
19026	2159	Lifting Presser Bar.....	40
19027	2159	" " " Guide & Lifting Bracket with 9980.....	60
19028	2163	Lifting Presser Bar Lifter, obsolete, use 32018	25
19029	2163	" " " Lifting Arm with 1000c, obsolete	1 00
19030	2163	Lifting Presser Bar Lifting Arm Position Spring, obsolete.....	02
19031	2163	Lifting Presser Bar Lifting Arm Shaft, obsolete	15
19032	2163	Lifting Presser Bar Lifting Arm Shaft Driving Lever, obsolete.....	60
19033	2159	Lifting Presser Bar Lifting Arm Pin	01
19033	2159	" " " " " S h a f t Driving Lever Pin.....	01
19034	2159	Lifting Presser Bar Spring.....	02
19035	2159	" " " " Bracket.....	25
19036	2155	" " Foot (narrow toe).....	1 00
19037	2155	" " " (wide ")	1 00
19038	2155	" " " Guide (Canton) with 19083	1 00
19039	2155	Lifting Presser Foot Guide (coarse Canton) with 19082.....	1 00
19040	2155	Lifting Presser Foot Guide (fine Canton)..	1 00
19041	2155	" " " " (Milan).....	1 00
19042	2155	" " " " (tape).	1 00
19043	2155	" " " Adjusting Lever with 19045 and 19046.....	30

Numerical List of Parts.

13


No.	Plate	Nama	Each
19044	2155	Lifting Presser Foot Guide Adjusting Lever	
		Friction Washer.....	\$ 02
19045	2155	Lifting Presser Foot Guide Adjusting Lever	
		Handle for 19043..	05
19046	2155	Lifting Presser Foot Guide Adjusting Lever	
		Pin for 19043	01
19047	2155	Lifting Presser Foot Washer.....	02
19048	2153	Looper	1 00
19049	2153	" Gate with 19050.....	40
19050	2153	" " Hinge Stud for 19049	05
19051	2153	" " Spring.....	03
19052	2158	Needle Bar.....	1 00
19053	2163	Plait Guide, obsolete, use 32010.....	1 00
19054	2156	" " Friction Washer.....	02
19055	2156	" " Regulating Pinion.....	75
19056	2157	" " (inside edge) Nos. 19059 & 19060	25
19057	2157	" " " " Finger (narrow)	
		with 1006A	35
19058	2157	Plait Guide (inside edge) Finger (wide)	
		with 1007A	35
19059	—	Plait Guide (inside edge) Plate for 19056...	10
19060	—	" " " " Rod " " ..	15
19061	2157	" " (stationary) Nos. 19062 & 19063	25
19062	—	" " " Bracket for 19061.	10
19063	—	" " " Rod for 19061.....	15
19064	2150	Spool Bracket with 1009c.....	75
19065	2156	Lifting Presser Foot Guide (fine Milan)..	1 00
19066	2160	Spool Spindle.....	25
19067	2150	" Thread Guiding Disc.....	15
19068	2160	Thread Controller Bracket.....	20
19069	2160	" " Guide Plate with 19070	25
19070	2160	" " " " Stud for 19069	03
19071	2160	" " Releasing Rod	10
19072	2160	" " Spring.....	05
19073	2160	" Eyelet and Hat Guard.....	10
19074	2160	" Guard (head of arm)	10
19075	2160	" Pull-off Lever with 1933.....	75
19076	2160	" " " Cam with two 460c.	75
19077	2164	Throat Plate with two 19078, obsolete, use	
		32017	1 25
19078	2154	Throat Plate Holder Steady Pin for 32016..	01
19079	2158	Wrench for 1027, 1083, 1628 and 1629 (A. & A.)	20
19080	2151	Lifting Lever for 19093.....	35
19081	2153	" " Spring for 19093.....	05
19082	2155	" Presser Foot Guide Stud for 19039..	03
19083	2155	" " " " " " 19038..	03
19085	2162	Tip Plate for 19091.	60
19086	2162	" " Arm for 19091.	75
19087	2162	" " Locking Washer for 19091.....	25
19088	2162	" " " " Pin for 19091...	01

Numerical List of Parts.


No.	Plate	Name	Each
19089	2162	Tip Plate Spring for 19091	02
19090	2162	" " Steady Pin for 19091	01
19091	—	" " complete, Nos. 691, 1061, 19085 to 19089 and two 19090.....	2 00
19092	2166	Machine Base with three wood screws 1 $\frac{1}{4}$ in. No. 12.....	50
19093	—	Foot Lifter complete, Nos. 21D, 4885, 6439, 19080 and 19081.....	1 50
19094	2154	Feed Dog (chip).....	35
19095	2155	Lifting Presser Foot Guide (chip).....	1 00
19096	2151	Arm Rotary Shaft with two 1019c.....	1 00
19097	2150	Balance Wheel, 2 $\frac{1}{4}$ in. pulley, with 424c....	80
19099	2159	Lifting Presser Bar Lifting Arm with 208D and 1083c.....	80
19100	2159	Lifting Presser Bar Lifting Arm Position Spring	02
22306	2158	Connecting Rod with two 1012	50
25539	2158	Stiletto (A. & A.).....	05
26026	2151	Screw Driver, large (A. & A.).....	10
26460	2151	Oiler with cap and 26462, for 26461.....	05
26461	—	" 26460 filled with oil (A. & A.).....	08
26462	2151	" Spout, 2 in. long, for 26460.....	01
26485	2151	Screw Driver, small (A. & A.).....	05
32001	2159	Lifting Presser Bar Lifting Arm Shaft.....	25
32002	2159	" " " " " " Bush- ing.....	25
32003	2159	Lifting Presser Bar Lifting Arm Shaft Driving Lever for 32006.....	65
32004	2159	Lifting Presser Bar Lifting Arm Shaft Driving Lever Roller for 32006	10
32005	2159	Lifting Presser Bar Lifting Arm Shaft Driving Lever Roller Pin for 32006.....	04
32006	—	Lifting Presser Bar Lifting Arm Shaft Driving Lever 32003 with 32004 and 32005	75
32007	2156	Plait Guide (lower) for 32010.....	65
32008	2156	" " (upper) " "	50
32009	2156	" " " Lock Spring for 32010.	03
32010	—	" " complete, Nos. 662D, 836D, 2749 and 32007 to 32009	1 25
32011	2160	Tension Controller.....	10
32012	2160	" Disc.....	10
32013	2160	" Thread Guard (left).....	15
32014	2160	" " " (right).....	15
32015	2154	Throat Plate for 32017.....	60
32016	2154	" " Holder with two 19078 for 32017	1 25
32017	—	" " " 32016 with 32015 and two 934D.....	1 85
32018	2159	Lifting Presser Bar Lifter.....	30
32022	2151	Machine Cushion (cloth) for 19092.....	02

PLATE 2150—ONE-HALF SIZE


19010

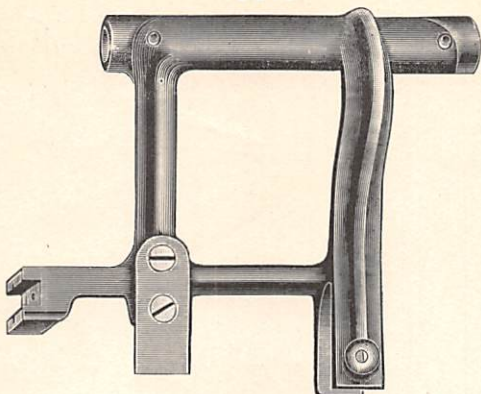


19067

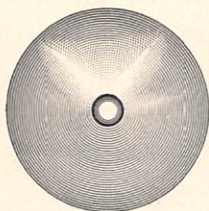

19064

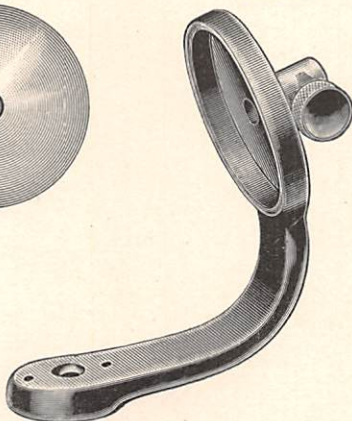

19097

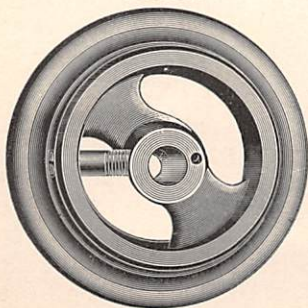

9573



PLATE 2151—ONE-HALF SIZE

9952

19096


19080

4882

4879




4883

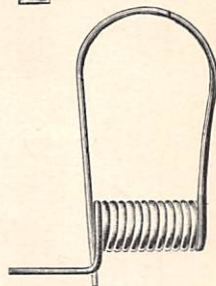


26485

32022

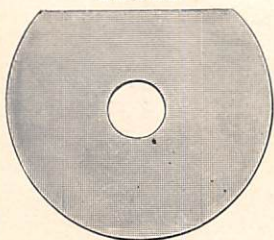

26460

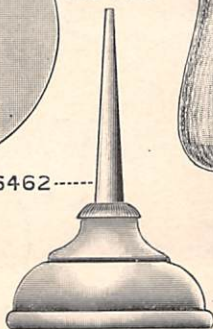

26462-----

26026



PLATE 2152—FULL SIZE

19012



19022



19013



453



457



794



19011

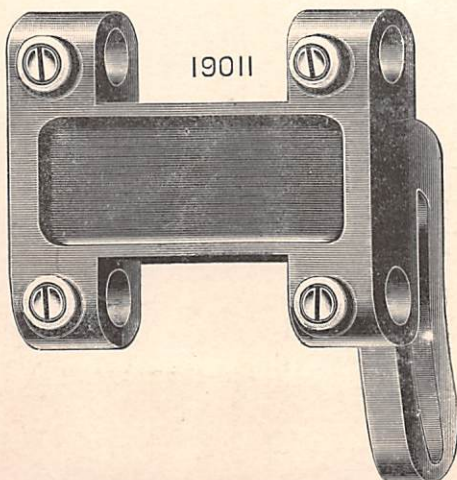


PLATE 2153—FULL SIZE

19019



995



19014



1027



996



1627



19025



19020



19021



19023




401



8554




19049

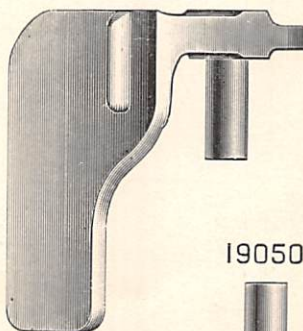

19050



19048

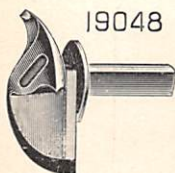

1019



19051



9842




19081



PLATE 2154—FULL SIZE


32016

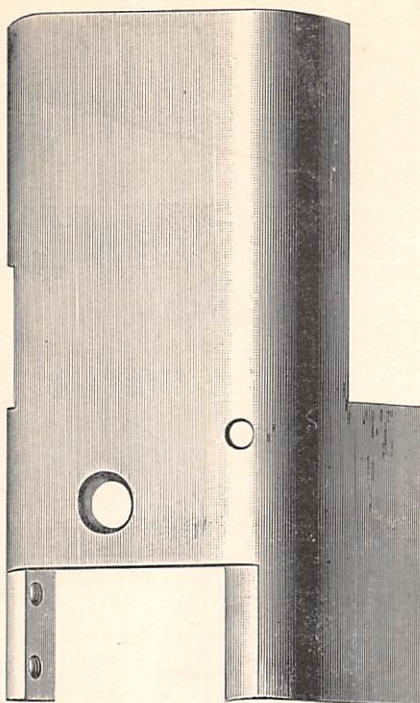

934



32015

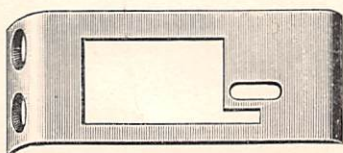


19015



19018



 19094



19078



1011



997



PLATE 2155—FULL SIZE



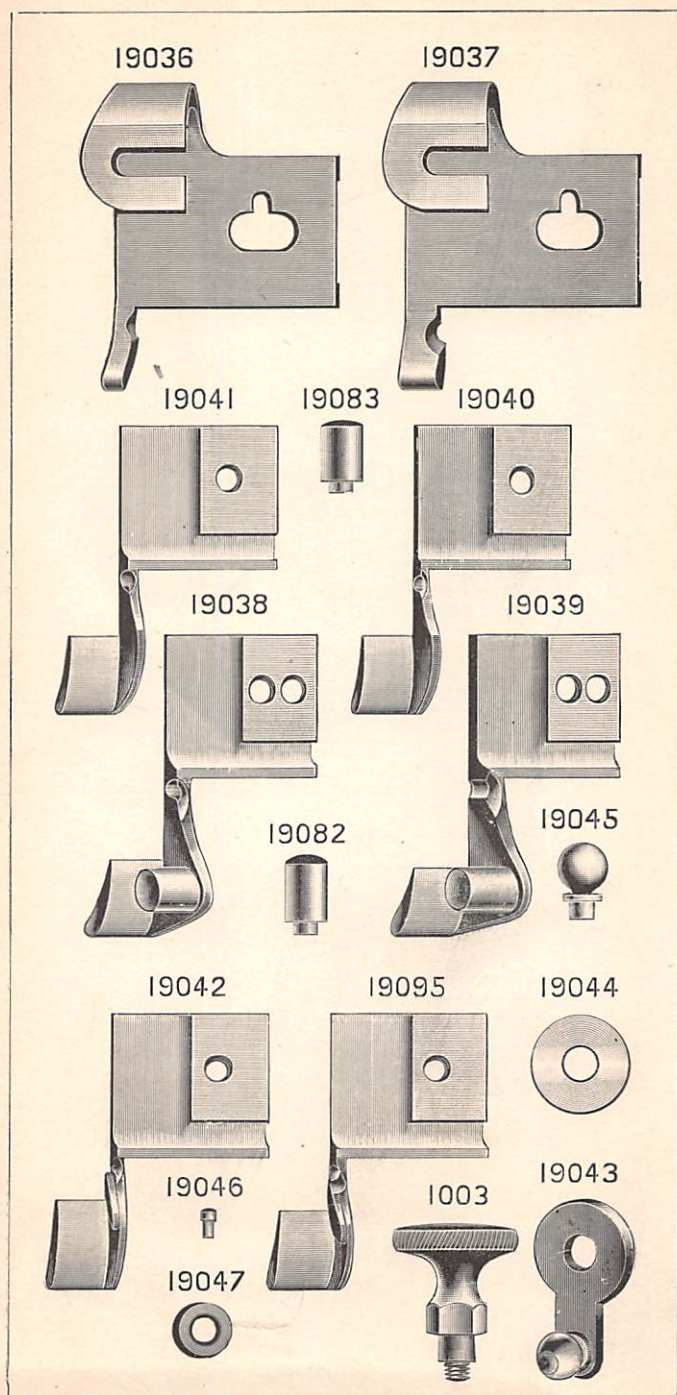


PLATE 2156—FULL SIZE

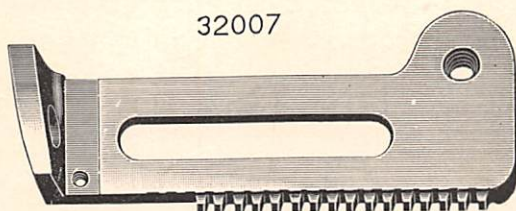

32009 662

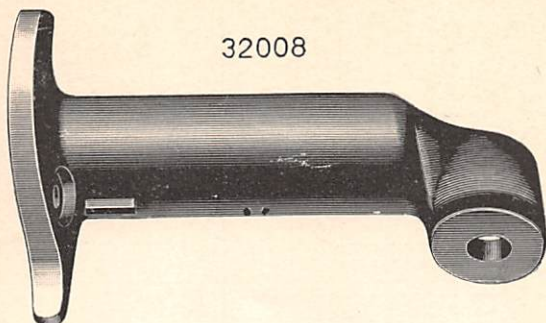

2749



836



19054



1004



1005



19055



19065


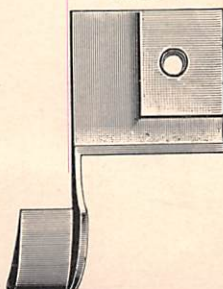



PLATE 2157—FULL SIZE



19057

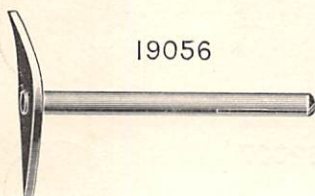

19058

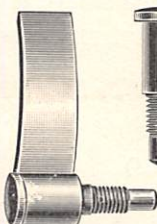

1007



1006



1628



PLATE 2158—FULL SIZE

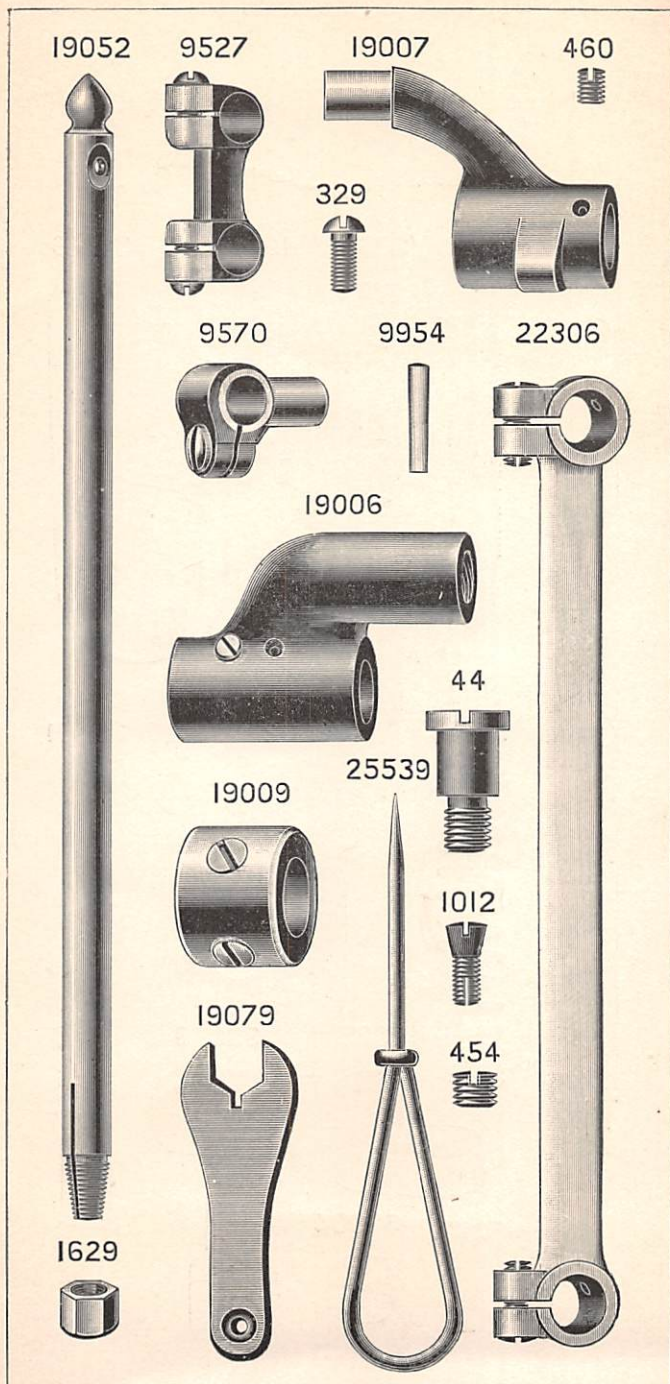


PLATE 2159—FULL SIZE

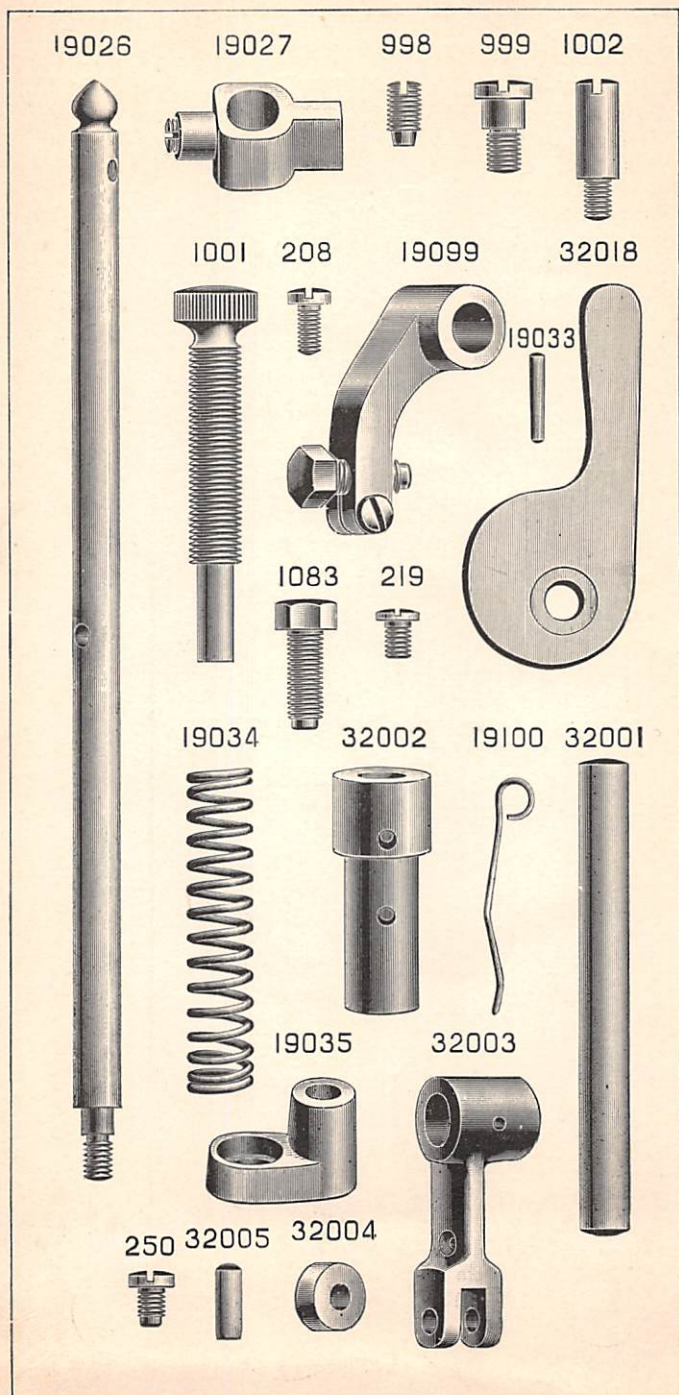


PLATE 2160—FULL SIZE


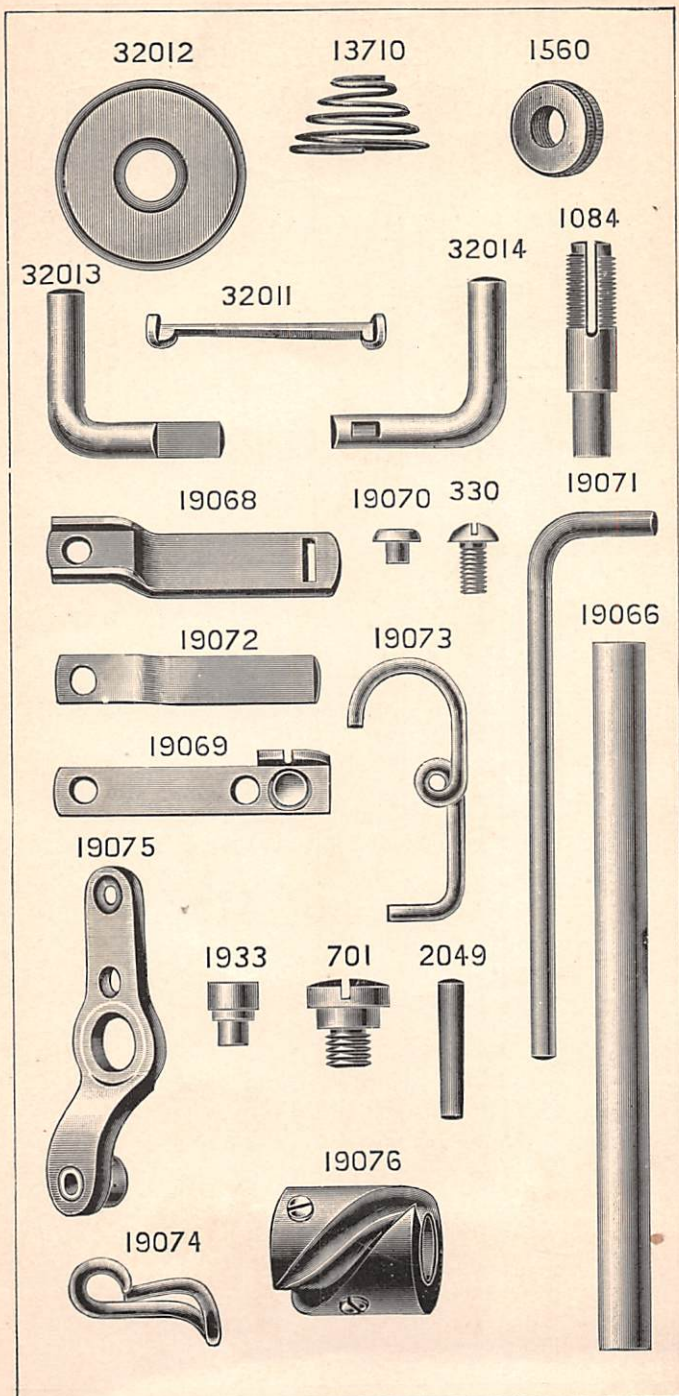


PLATE 2161—FULL SIZE

 1062



21



424



1008



168




1009



PLATE 2162—FULL SIZE


19085

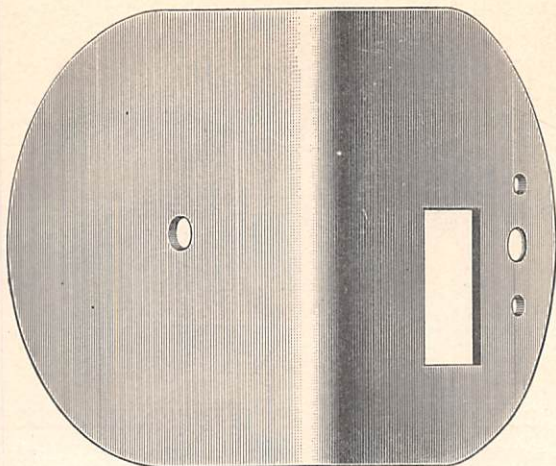

19090



19086

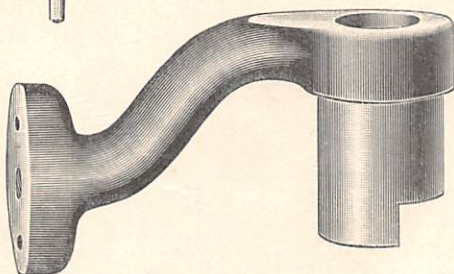

691



19088



19089



1061



19087



PLATE 2163—FULL SIZE


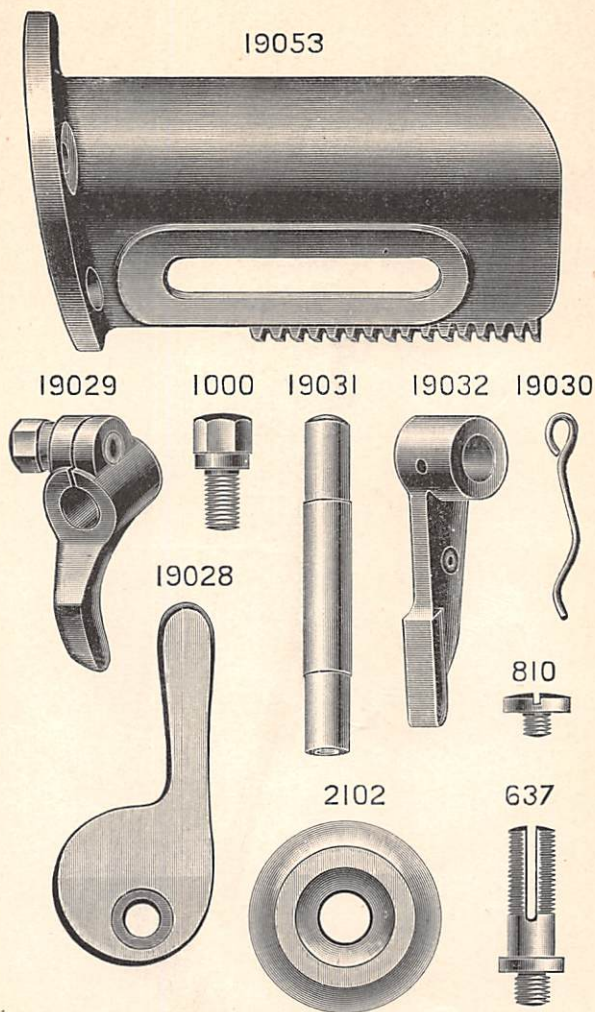


PLATE 2164—FULL SIZE

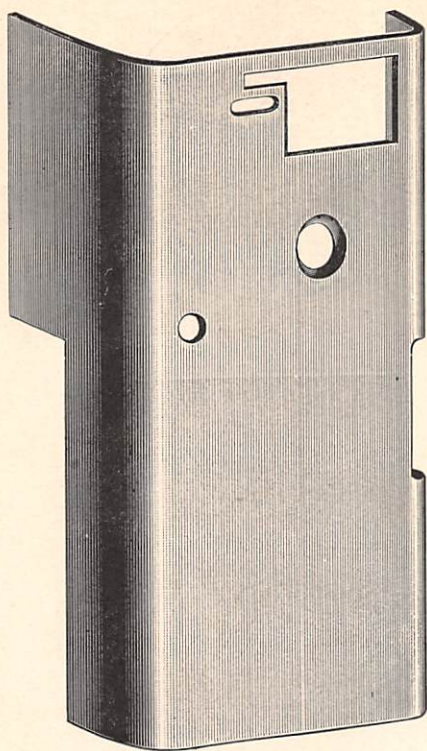

19077

PLATE 2165—ONE-HALF SIZE

19008



9504

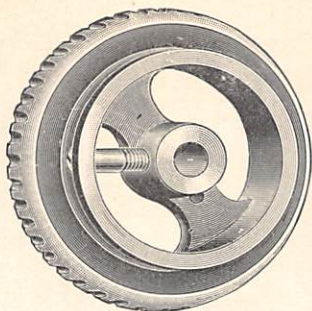


PLATE 2166—ONE-FOURTH SIZE

