 


SINGER*

261-11,12,13

PARTS

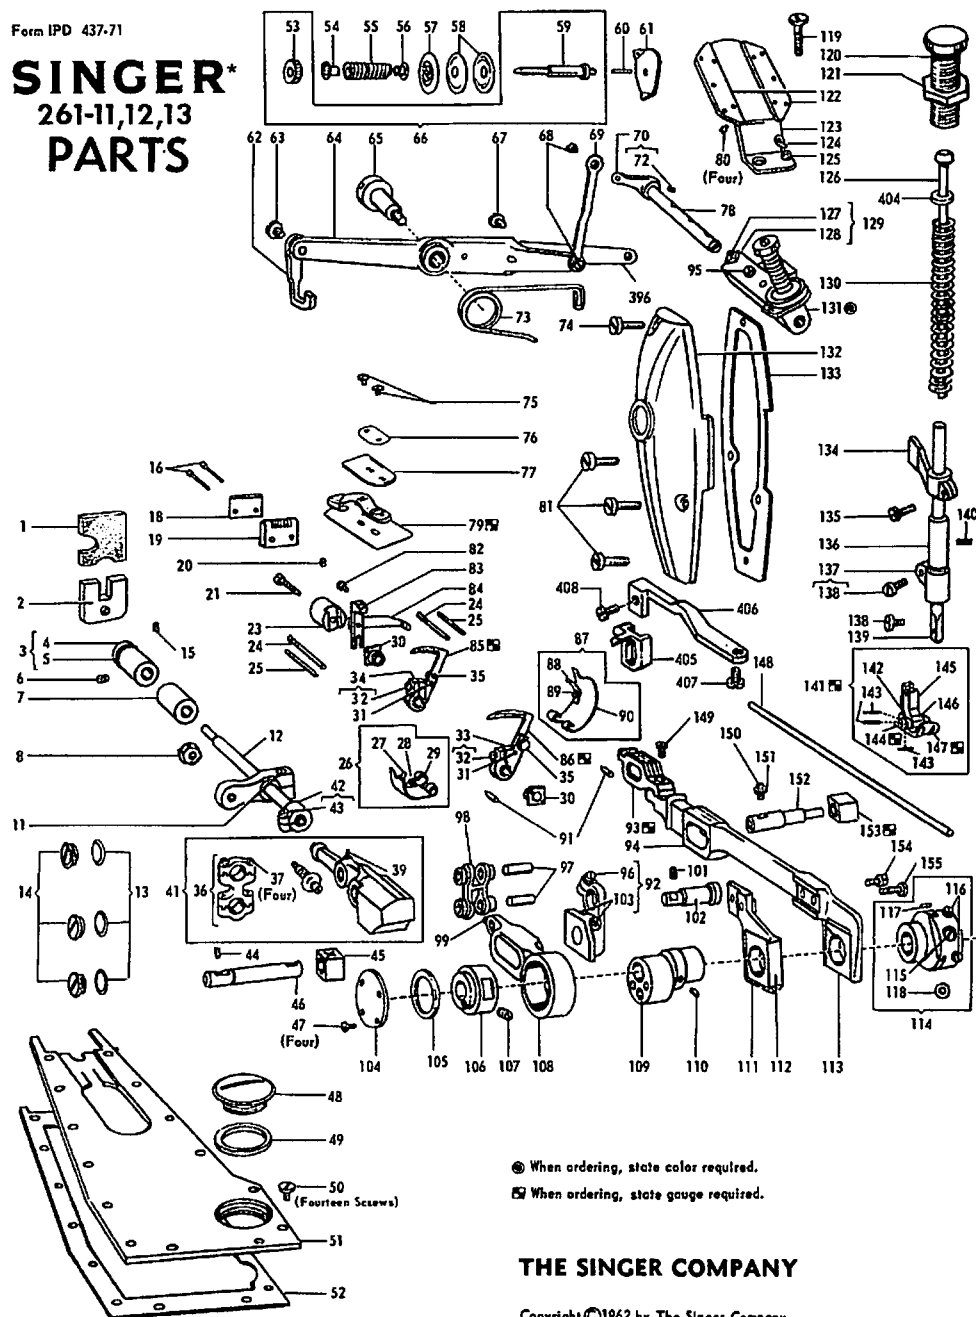 


 
THE SINGER COMPANY

Copyright ©1962 by The Singer Company
 All Rights Reserved under Inter-American Copyright Union
 Copyright under International Copyright Union

* A Trademark of THE SINGER COMPANY

Printed in U. S. A.

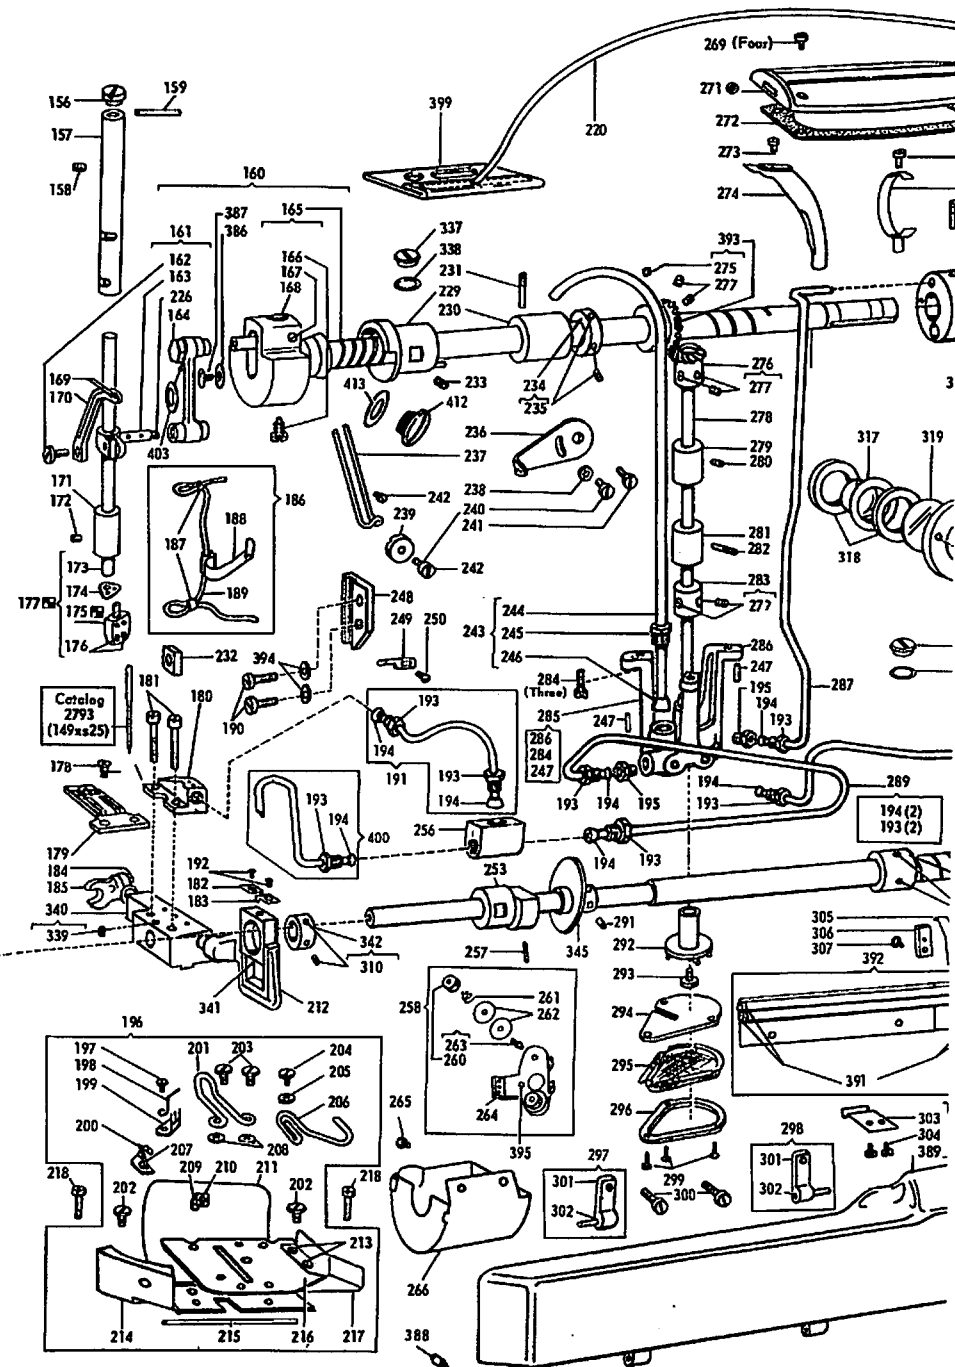

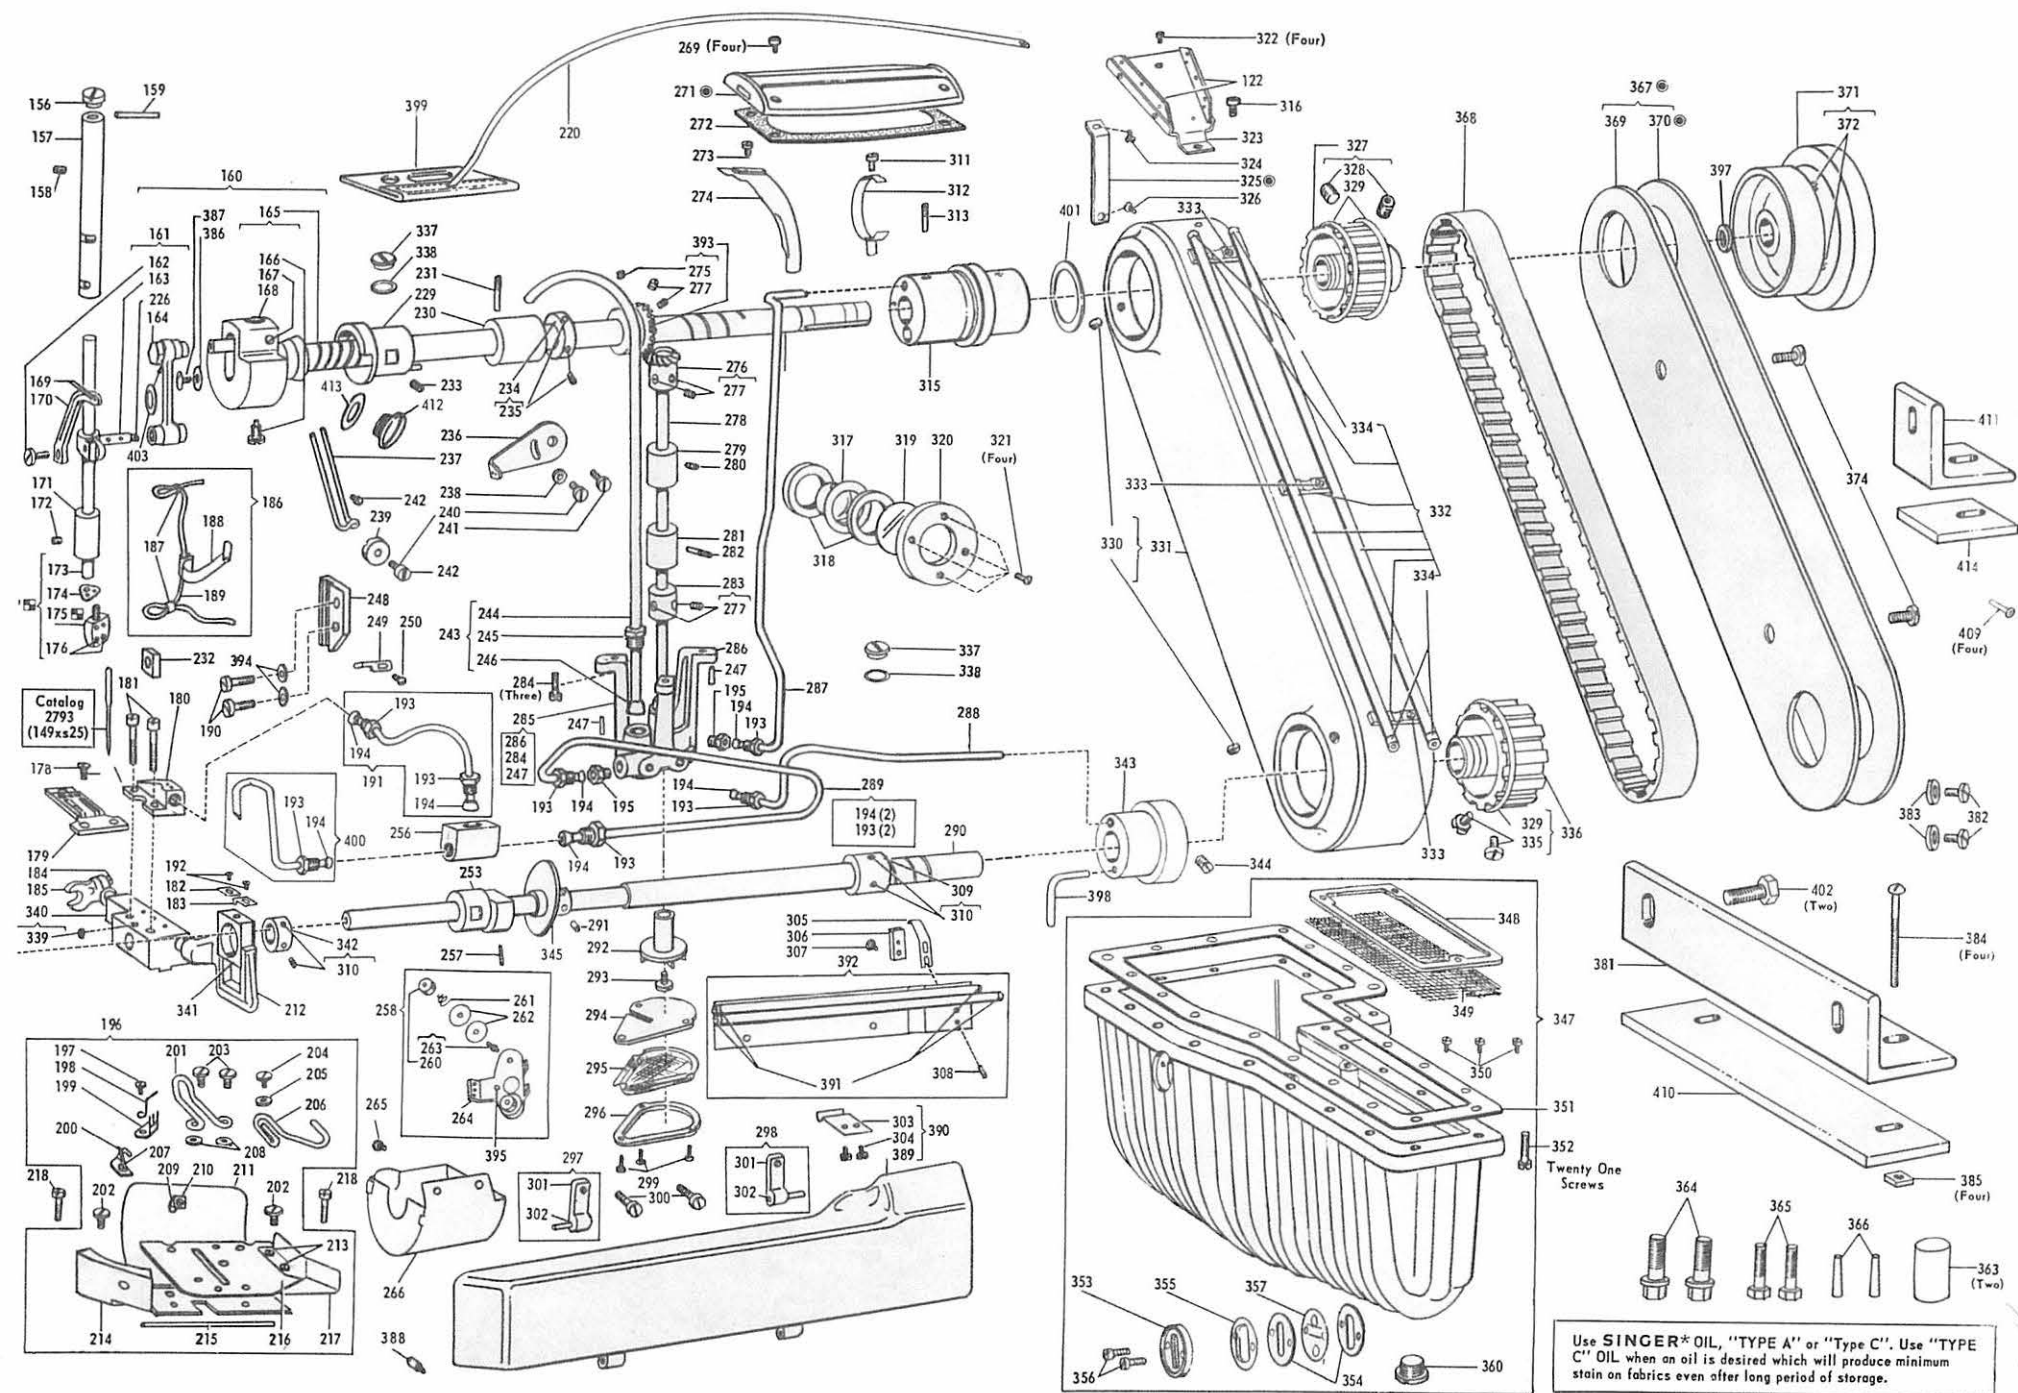

LIST OF PARTS FOR 261-11, 12 and 13 MACHINES

CODE	PART NUMBER	DESCRIPTION	MACHINE VARIETY
1	143646	Bed Cover Reinforcing Plate Gasket	261-11, 12, 13
2	143614	Bed Oil Shield (felt, lower)	261-11, 12, 13
3	143552	Bushing (back) complete, 143485 with 143551	261-11, 12, 13
4	143485	Bushing (back)	261-11, 12, 13
5	143551	Oil Seal (rubber)	261-11, 12, 13
6	443	Set Screw	261-11, 12, 13
7	143486	Bushing (front)	261-11, 12, 13
8	1520(809)	Ball Screw Stud Nut	261-11, 12, 13
11	1057(830)	Clamping Screw	261-11, 12, 13
12	143484	Looper Holder Shaft	261-11, 12, 13
13	139509	Gasket (3)	261-11, 12, 13
14	139510	Oil Plug (3)	261-11, 12, 13
15	454(830)	Set Screw	261-11, 12, 13
16	50225(809)	Screw (2)	261-11, 12, 13
18	139181	Thread Cutter	261-11, 12, 13
19	143524	Thread Cutter Support and Guide	261-11, 12, 13
20	456	Set Screw	261-11, 12, 13
21	1167	Adjusting Screw	261-11, 12, 13
23	139120	Looper Thread Guide Bracket Holder	261-11, 12, 13
24	143479	Screw Stud (2)	261-11, 12, 13
25	143480	Position Pin (2)	261-11, 12, 13
26	143465	Looper Gate (left) 143464 with 143470 and 51282(819), for Throat Plates 21/32 inch wide	261-11, 12, 13
26	143467	Looper Gate (left) 143466 with 143470 and 51282(819), for Throat Plates 3/4 inch wide	261-11, 12, 13
26	143469	Looper Gate (left) 143468 with 143470 and 51282(819), for Throat Plates 7/8 inch wide	261-11, 12, 13
27	143470	Lock Spring	261-11, 12, 13
28	51282(819)	Lock Spring Screw	261-11, 12, 13
29	143464	Looper Gate (left), for Throat Plates 21/32 inch wide	261-11, 12, 13
29	143466	Looper Gate (left), for Throat Plates 3/4 inch wide	261-11, 12, 13
29	143468	Looper Gate (left), for Throat Plates 7/8 inch wide	261-11, 12, 13
30	143483	Looper Holder Bushing Eccentric (2)	261-11, 12, 13
31	26276	Looper Position Pin (2)	261-11, 12, 13
32	141158	Looper Holder Clamping Screw (2)	261-11, 12, 13
33	143482	Looper Holder (front)	261-11, 12, 13
34	143481	Looper Holder (back)	261-11, 12, 13
35	140393	Looper Clamping Screw (2)	261-11, 12, 13
36	143612	Driving Arm Connection with four 175(830)	261-11, 12, 13
37	175(830)	Cap Screw (4)	261-11, 12, 13
39	1047(830)	Set Screw	261-11, 12, 13
41	32355	Looper Driving Arm complete	261-11, 12, 13
42	139097	Looper Holder Shaft Collar with 1454(830)	261-11, 12, 13
43	1454(830)	Clamping Screw	261-11, 12, 13
44	446(830)	Set Screw	261-11, 12, 13
45	139074	Looper Eccentric Connection Slide Block	261-11, 12, 13
46	143463	Looper Eccentric Connection Slide Block Stud	261-11, 12, 13
47	202(813)	Bushing Cover Screw (4)	261-11, 12, 13
48	140999	Bed Cover Hole Plug Screw	261-11, 12, 13
49	143435	Bed Cover Hole Plug Screw Gasket	261-11, 12, 13
50	140295	Bed Cover Screw (14)	261-11, 12, 13
51	143433	Bed Cover	261-11, 12, 13
52	143434	Bed Cover Gasket	261-11, 12, 13
53	51570(803)	Tension Regulating Thumb Nut (2)	261-11, 12, 13
54	59537	Tension Spring Bushing (large) (2)	261-11, 12, 13
55	131741	Tension Spring	261-11, 12, 13
56	59538	Tension Spring Bushing (small) (2)	261-11, 12, 13
57	32572	Tension Releasing Disc (2)	261-11, 12, 13
58	2102	Tension Disc (4)	261-11, 12, 13
59	50326	Tension Screw Stud (2)	261-11, 12, 13
60	54988	Tension Releasing Pin (2)	261-11, 12, 13
61	131696	Tension Thread Guide (2)	261-11, 12, 13
62	146676	Presser Bar Lifting Bracket Lifter	261-11, 12, 13
63	807(819)	Presser Bar Lifting Bracket Lifter Hinge Screw	261-11, 12, 13
64	143510	Presser Bar Lifting Lever	261-11, 12, 13
65	802(819)	Presser Bar Lifting Lever Hinge Screw	261-11, 12, 13
66	59539	Tension Screw Stud 50326 with 51570 (2)	261-11, 12, 13
67	161(819)	Presser Bar Lifting Lever Extension Screw (2)	261-11, 12, 13
68	110(803)	Hinge Screw	261-11, 12, 13
69	146620	Tension Releasing Shaft Crank Connection Link	261-11, 12, 13
70	54872	Tension Releasing Shaft Crank with 624(830)	261-11, 12, 13
72	624(830)	Tension Releasing Shaft Crank Set Screw	261-11, 12, 13

CODE	PART NUMBER	DESCRIPTION	MACHINE VARIETY
73	143511	Presser Bar Lifting Lever Spring	261-11, 12, 13
74	140050	Face Plate Screw (upper)	261-11, 12, 13
75	1443(802)	Lap Seam Feller Clamping Plate Screw (2)	261-11, 12, 13
76	121449	Lap Seam Feller Clamping Plate	261-11, 12, 13
77	139366	Lap Seam Feller Slide	261-11, 12, 13
78	68003	Tension Releasing Shaft	261-11, 12, 13
79	121586	Lap Seam Feller, Adjustable	261-11, 12
	161427	Lap Seam Feller with Yielding Lower Scroll and Adjustable Top Scroll	261-12
	121629	Lap Seam Feller, Adjustable	261-13
80	229	Screw (4)	261-11, 12, 13
81	140061(809)	Face Plate Screw (lower) (3)	261-11, 12, 13
82	206(809)	Looper Thread Guide Screw	261-11, 12, 13
83	143548	Looper Thread Guide Bracket	261-11, 12, 13
84	143487	Looper Thread Guide	261-11, 12, 13
85	32819	Looper (back) for 3/32 inch or 1/8 inch gauges	261-11, 12, 13
	32820	Looper (back) for 5/32 inch, 3/16 inch or 11/32 inch gauges	261-11, 12, 13
	32821	Looper (back) for 1/4 inch and 9/32 inch gauges	261-11, 12, 13
86	32822	Looper (front) for 3/32 inch or 1/8 inch gauges	261-11, 12, 13
	32823	Looper (front) for 5/32 inch, 3/16 inch and 7/32 inch gauges	261-11, 12, 13
	32824	Looper (front) for 1/4 inch and 9/32 inch gauges	261-11, 12, 13
87	143472	Looper Gate (right) 143471 with 143477 and 51282(819), for Throat Plates 21/32 inch wide	261-11, 12, 13
	143474	Looper Gate (right) 143473 with 143477 and 51282(819), for Throat Plates 3/4 inch wide	261-11, 12, 13
	143476	Looper Gate (right) 143475 with 143477 and 51282(819), for Throat Plates 7/8 inch wide	261-11, 12, 13
88	143477	Looper Gate (right) Lock Spring	261-11, 12, 13
89	51282(819)	Looper Gate (right) Lock Spring Screw	261-11, 12, 13
90	143471	Looper Gate (right) for Throat Plates 21/32 inch wide	261-11, 12, 13
	143473	Looper Gate (right) for Throat Plates 3/4 inch wide	261-11, 12, 13
	143475	Looper Gate (right) for Throat Plates 7/8 inch wide	261-11, 12, 13
91	143478	Looper Gate Hinge Pin (2)	261-11, 12, 13
92	139535	Looper Eccentric Collar and Support with 51369(803) and two 1253(830)	261-11, 12, 13
93	139047	Feed Dog, 21 teeth (16 teeth to the inch), for 1/8 inch and 5/32 inch gauges (NOTE: State gauge required.)	261-11, 12
	22571-012	Feed Dog (14 teeth to the inch), for 3/16 inch gauge, for Chaining-off	261-11
	139540	Feed Dog, 19 teeth (14 teeth to the inch), for 3/16 inch to 1/4 inch gauges (NOTE: State gauge required.)	261-11
	139388	Feed Dog, 16 teeth (12 teeth to the inch), for 3/16 inch, 7/32 inch and 1/4 inch gauges (NOTE: State gauges required.)	261-12
	139414	Feed Dog, 11 teeth (8 teeth to the inch), for 3/16 inch to 9/32 inch gauges (NOTE: State gauge required.)	261-13
	139049	Feed Dog, 19 teeth (14 teeth to the inch), for 1/4 inch to 9/32 inch gauges (NOTE: State gauge required.)	261-13
	139388	Feed Dog, 16 teeth (12 teeth to the inch), for 3/16 inch and 7/32 inch gauges (NOTE: State gauge required.)	261-13
	139382	Feed Dog, 14 teeth (10 teeth to the inch), for 1/4 inch to 9/32 inch gauges (NOTE: State gauge required.)	261-13
94	143448	Feed Bar	261-11, 12, 13
95	225(819)	Plug Screw	261-11, 12, 13
96	51369	Clamping Screw	261-11, 12, 13
97	139065	Link Hinge Pin (2)	261-11, 12, 13
98	139064	Connecting Link	261-11, 12, 13
99	1047(830)	Set Screw (2)	261-11, 12, 13
101	446(830)	Set Screw	261-11, 12, 13
102	139534	Looper Driving Arm Hinge Stud	261-11, 12, 13
103	1253(830)	Set Screw (2)	261-11, 12, 13
104	139030	Bed Rotary Shaft Bushing (left) Cover	261-11, 12, 13
105	143643	Bed Rotary Shaft Bushing (left) "O" Ring	261-11, 12, 13
106	143644	Bed Rotary Shaft Bushing (left)	261-11, 12, 13
107	140331(830)	Set Screw	261-11, 12, 13
108	143462	Looper Eccentric Connection with 1047(830)	261-11, 12, 13
109	143461	Looper Eccentric and Feed Lifting Eccentric with two 1036(830)	261-11
	143621	Looper Eccentric and Feed Lifting Eccentric with two 1259(830)	261-12, 13
110	1036(830)	Looper Eccentric and Feed Lifting Eccentric Set Screw	261-11
	1259(830)	Looper Eccentric and Feed Lifting Eccentric Set Screw	261-12, 13
111	139432	Feed Lifting Eccentric Forked Connection	261-11, 12, 13
112	143451	Feed Lifting Eccentric Forked Connection Slide Block	261-11, 12, 13
113	143450	Feed Eccentric Slide Block	261-11, 12, 13

CODE	PART NUMBER	DESCRIPTION	MACHINE VARIETY
114	143449	Feed Eccentric (adjustable) complete, Nos. 217(809), 7071, 50328(809) and two 51061(830)	261-11, 12, 13
115	217(809)	Feed Eccentric Clamping Washer Screw	261-11, 12, 13
116	51061(830)	Set Screw (2)	261-11, 12, 13
117	50328(803)	Feed Regulating Screw	261-11, 12, 13
118	7071	Feed Eccentric Clamping Washer	261-11, 12, 13
119	376	Tension Bracket Screw	261-11, 12, 13
120	141008(819)	Pressure Regulating Thumb Screw	261-11, 12, 13
121	51614(819)	Pressure Regulating Thumb Screw Nut	261-11, 12, 13
122	139158	Thread (looper) Thread Guide (2)	261-11, 12, 13
	139158	Thread (needle) Thread Guide (2)	261-11, 12, 13
123	139180	Thread (needle) Thread Guide Bracket	261-11, 12, 13
124	139177	Thread (needle) Eyelet	261-11, 12, 13
125	207(809)	Thread (needle) Eyelet Screw	261-11, 12, 13
126	32833	Presser Bar Spring Guide Pin	261-11, 12, 13
127	316(803)	Stop Screw	261-11, 12, 13
128	1547(809)	Stop Screw Nut	261-11, 12, 13
129	15444	Tension (needle thread) Releasing Shaft Stop Screw 316(803) with 1547(809)	261-11, 12, 13
130	146159	Presser Bar Spring	261-11, 12, 13
131	68002	Tension (needle thread) Bracket (NOTE: State color required.)	261-11, 12, 13
132	143447	Face Plate	261-11, 12, 13
133	143543	Face Plate Gasket	261-11, 12, 13
134	146694	Presser Bar Lifting Bracket with 1057(830)	261-11, 12, 13
135	1057(830)	Clamping Screw	261-11, 12, 13
136	146751	Presser Bar Bushing (lower)	261-11, 12, 13
137	146752	Presser Bar Stop with 190(809)	261-11, 12, 13
138	190(809)	Clamping Screw	261-11, 12, 13
	190(809)	Presser Foot Screw	261-11, 12, 13
139	139462	Presser Bar	261-11, 12, 13
140	1133(805)	Presser Bar Bushing (lower) Set Screw	261-11, 12, 13
141	139138	Presser Foot (triple hinged) complete, for 3/32 inch, 1/8 inch, 5/32 inch, 3/16 inch, 7/32 inch, 1/4 inch and 9/32 inch gauges, Nos. 37160, 139134, 139135, 139137, 146167 and three 26276 (NOTE: State gauge required.)	261-12, 13
	21492-008	Presser Foot (triple hinged) complete, for 1/8 inch gauge	261-11
	21492-010	Presser Foot (triple hinged) complete, for 5/32 inch gauge	261-11
	21492-012	Presser Foot (triple hinged) complete, for 3/16 inch gauge	261-11
	21492-016	Presser Foot (triple hinged) complete, for 1/4 inch gauge	261-11
142	37160	Presser Foot Plate Connection Spring	261-12, 13
	21489	Presser Foot Plate and Yielding Heel Connection Spring	261-11
143	26276	Hinge Pin (3)	261-12, 13
	26276-004	Hinge Pin	261-11
144	139134	Presser Foot Plate (back) (NOTE: State gauge required)	261-12, 13
	21487-008	Presser Foot Plate, for 1/8 inch gauge	261-11
	21487-010	Presser Foot Plate, for 5/32 inch gauge	261-11
	21487-012	Presser Foot Plate, for 3/16 inch gauge	261-11
	21487-016	Presser Foot Plate, for 1/4 inch gauge	261-11
145	139137	Presser Foot Shank	261-12, 13
	21490	Presser Foot Shank	261-11
146	146167	Presser Foot Plate Connection	261-12, 13
	21488	Presser Foot Plate and Yielding Heel Connection	261-11
147	139135	Presser Foot Plate (front)	261-12, 13
148	139281	Thread (looper) Thread Tube (side of bed)	261-11, 12, 13
149	1255(805)	Feed Dog Screw	261-11, 12, 13
150	443(830)	Feed Bar Hinge Pin Set Screw	261-11, 12, 13
151	1520(803)	Feed Bar Hinge Pin Set Screw Lock Nut	261-11, 12, 13
152	34737	Feed Bar Hinge Pin (eccentric)	261-11, 12, 13
153	139046	Feed Bar Hinge Pin Slide Block	261-11, 12, 13
154	914(803)	Connection Screw (short)	261-11, 12, 13
155	172(803)	Connection Screw (long)	261-11, 12, 13
156	140440(819)	Needle Bar Bushing (upper) Oil Plug Screw	261-11, 12, 13
157	12982	Needle Bar Bushing (upper)	261-11, 12, 13
158	1133(830)	Needle Bar Bushing (upper) Set Screw	261-11, 12, 13
159	143492	Needle Bar Bushing (lower and upper) Oil Wick Guide Tube	261-11, 12, 13
160	143631	Arm Rotary Shaft 143630 with 140359(805), 143236 and 143494-001	261-11
	143634	Arm Rotary Shaft 143633 with 140359(805), 143236 and 143494-001	261-12
	143636	Arm Rotary Shaft 143635 with 140359(805), 143236 and 143494-001	261-13
161	143494-001	Needle Bar Connecting Link with 14475, 139533 and 143495	261-11, 12, 13
162	140061	Clamping Screw	261-11, 12, 13
163	143495	Needle Bar Connecting Stud with 140061(805) and 143619	261-11, 12, 13
164	139533	Needle Bar Connecting Link Screw Cap	261-11, 12, 13

CODE	PART NUMBER	DESCRIPTION	MACHINE VARIETY
165	143630	Arm Rotary Shaft with 1036(830) and 140542(830)	261-11
	143633	Arm Rotary Shaft with 1036(830) and 140542(830)	261-12
	143635	Arm Rotary Shaft with 1036(830) and 140542(830)	261-13
166	140542(830)	Needle Bar Crank Position Screw	261-11, 12, 13
167	1036(830)	Set Screw	261-11, 12, 13
168	140552(830)	Needle Bar Connecting Link Hinge Stud Clamping Screw	261-11, 12, 13
169	147079	Thread (needle) Take-up Eyelet Bushing (2)	261-11, 12, 13
170	143523	Thread (needle) Take-up with two 147079	261-11, 12, 13
171	20799-001	Needle Bar Bushing (lower)	261-11, 12
	20799-002	Needle Bar Bushing (lower)	261-13
172	1133(830)	Needle Bar Bushing (lower) Set Screw	261-11, 12, 13
173	146573	Needle Bar	261-11, 12, 13
174	143497	Needle Clamp Thread Guide	261-11, 12, 13
175	139116	Needle Clamp with two 1498(83), for gauges 3/32 inch to 9/32 inch (NOTE: State gauge required.)	261-11, 12, 13
176	1498(830)	Needle Set Screw (2)	261-11, 12, 13
177	143489	Needle Bar complete, for 3/32 inch to 9/32 inch gauges, Nos. 139116 and 146573 (NOTE: State gauge required.)	261-11, 12, 13
178	691(806)	Throat Plate Screw (3)	261-11, 12, 13
179	139538	Throat Plate for 1/8 inch and 5/32 inch gauges (NOTE: State gauge required.)	261-11, 12
	22572-012	Throat Plate for 3/16 inch gauge	261-11
	139541	Throat Plate for 3/16 inch to 1/4 inch gauges (NOTE: State gauge required.)	261-11
	139389	Throat Plate for 3/16 inch to 1/4 inch gauges (NOTE: State gauge required.)	261-11, 12
	139186	Throat Plate for 1/4 inch to 9/32 inch gauges (NOTE: State gauge required.)	261-13
180	143457	Oil Connection	261-11, 12, 13
181	120(805)	Oil Connection Screw (2)	261-11, 12, 13
182	143459	Slide Block Cover (back)	261-11, 12, 13
183	143460	Slide Block Cover (front)	261-11, 12, 13
184	1324(830)	Forked Connection Crank Clamping Screw	261-11, 12, 13
185	139257	Looper Avoiding Eccentric Forked Connection Crank with 1324(830)	261-11, 12, 13
186	146805	Needle Bar Bushing (lower and upper) Oil Wick complete, Nos. 146703, 146804 and two 146580	261-11, 12, 13
187	146580	Oil Wick Clip (2)	261-11, 12, 13
188	146703	Oil Wick Clamp and Retainer	261-11, 12, 13
189	146804	Needle Bar Bushing Oil Wick	261-11, 12, 13
190	1485(805)	Needle Bar Connecting Stud Slide Block Guide Screw (2)	261-11, 12, 13
191	143649	Bed Rotary Shaft Bushing (left) and Looper Avoid Bracket Oil Tube with two each 143124 and 143125	261-11, 12, 13
192	226(805)	Slide Block Cover Screw (2)	261-11, 12, 13
193	143125	Oil Tube Clamping Sleeve Nut (7)	261-11, 12, 13
194	143124	Oil Tube Clamping Sleeve (7)	261-11, 12, 13
195	143126	Oil Tube Clamping Sleeve Adapter (3)	261-11, 12, 13
196	143519	Thread (looper) Take-up Stripper Plate Bracket 143518 with 219(809), 237(809), 240(809), 7071, 51282(809), 139145, 139146, 139147, 139148, 139152, 139154, 139155, 139156, 139157, 143517 and two each 203(809), 207(809), 665(809) and 17032	261-11, 12, 13
197	240(809)	Thread Retainer Screw	261-11, 12, 13
198	139157	Thread Retainer	261-11, 12, 13
199	139156	Thread Separator	261-11, 12, 13
200	139154	Thread Guide (left)	261-11, 12, 13
201	139148	Thread (looper) Take-up Stripper	261-11, 12, 13
202	207(809)	Thread (looper) Take-up Stripper Plate Screw (2)	261-11, 12, 13
203	203(809)	Thread (looper) Take-up Stripper Screw (2)	261-11, 12, 13
204	219(809)	Thread Guide (right) Screw	261-11, 12, 13
205	7071	Thread Guide (right) Screw Washer	261-11, 12, 13
206	139155	Thread Guide (right)	261-11, 12, 13
207	237(809)	Thread Guide (left) Screw	261-11, 12, 13
208	17032	Stripper Screw Washer (2)	261-11, 12, 13
209	139147	Take-up Cover Lock Spring	261-11, 12, 13
210	51282(809)	Take-up Cover Lock Spring Screw	261-11, 12, 13
211	139145	Thread (looper) Take-up Cover	261-11, 12, 13
212	143455	Looper Avoiding Eccentric Forked Connection	261-11, 12, 13
213	665(809)	Stripper Plate Thread Guard Screw (2)	261-11, 12, 13
214	143518	Stripper Plate Bracket	261-11, 12, 13
215	139146	Take-up Cover Hinge Pin	261-11, 12, 13
216	143517	Stripper Plate	261-11, 12, 13

CODE	PART NUMBER	DESCRIPTION	MACHINE VARIETY
217	139152	Stripper Plate Thread Guard	261-11, 12, 13
218	175(830)	Stripper Plate Bracket Screw (2)	261-11, 12, 13
220	156772	Oil Removing Tube (head end)	261-11, 12, 13
226	143619	Stud Oil Wick (felt)	261-11, 12, 13
229	146672	Arm Rotary Shaft Flanged Bushing (front)	261-11, 12, 13
230	152503	Arm Rotary Shaft Bushing (center)	261-11, 12, 13
231	140296	Arm Rotary Shaft Flanged Bushing (center) Set Screw	261-11, 12, 13
232	139111	Needle Bar Connecting Stud Slide Block	261-11, 12, 13
233	140331(830)	Arm Rotary Shaft Flanged Bushing (front) Set Screw	261-11, 12, 13
234	147468	Arm Rotary Shaft Thrust Collar with two 624(830)	261-11, 12, 13
235	624(830)	Arm Rotary Shaft Thrust Collar Set Screw (2)	261-11, 12, 13
236	146633	Thread (needle) Eyelet (side of arm)	261-11, 12, 13
237	32399	Slack Thread Controller	261-11, 12, 13
238	7071	Thread (needle) Eyelet (side of arm) Position Screw Washer	261-11, 12, 13
239	54242	Slack Thread Controller Clamp	261-11, 12, 13
240	176(809)	Slack Thread Controller Clamp Screw	261-11, 12, 13
	176(809)	Thread (needle) Eyelet (side of arm) Position Screw	261-11, 12, 13
241	724(809)	Thread (needle) Eyelet (side of arm) Screw	261-11, 12, 13
242	140239(830)	Slack Thread Controller Position Screw	261-11, 12, 13
243	143504	Oil Pipe complete, No. 143503 with 143065 and 143066	261-11, 12, 13
244	143503	Oil Pipe	261-11, 12, 13
245	140366	Oil Pipe Clamping Sleeve Nut	261-11, 12, 13
246	140365	Oil Pipe Clamping Sleeve	261-11, 12, 13
247	143071	Oil Pump Body Position Pin (2)	261-11, 12, 13
248	143496	Needle Bar Connecting Stud Slide Block Guide	261-11, 12, 13
249	143570	Thread Guide (front of arm)	261-11, 12, 13
250	140180(809)	Thread Guide (front of arm) Screw	261-11, 12, 13
253	143645	Bed Rotary Shaft Bushing (intermediate)	261-11, 12, 13
256	143648	Oil Tube Connection	261-11, 12, 13
257	140331(830)	Set Screw	261-11, 12, 13
258	143516	Tension (looper thread) complete, Nos. 143567, two each 143514, 143515 and four 10106	261-11, 12, 13
259	143515	Tension Screw Stud 141002(803) with 1742(803) (2)	261-11, 12, 13
260	1742(803)	Tension Regulating Thumb Nut (2)	261-11, 12, 13
261	143514	Tension Spring (2)	261-11, 12, 13
262	10106	Tension Disc (4)	261-11, 12, 13
263	141002(803)	Tension Screw Stud (2)	261-11, 12, 13
264	143567	Tension (looper thread) Body	261-11, 12, 13
265	202(806)	Oil and Lint Guard Screw (2)	261-11, 12, 13
266	143499	Oil and Lint Guard	261-11, 12, 13
269	51369(813)	Arm Top Cover Screw (4)	261-11, 12, 13
271	146829-001	Arm Top Cover	261-11, 12, 13
272	146508	Arm Top Cover Gasket	261-11, 12, 13
273	51369(805)	Oil Lead Screw	261-11, 12, 13
274	143370	Oil Lead	261-11, 12, 13
275	140333	Arm Rotary Shaft Bevel Gear Position Screw	261-11, 12, 13
276	143015	Arm Shaft (upright) Bevel Gear (upper), left hand spiral with two 1259(830)	261-11, 12, 13
277	1259(830)	Set Screw	261-11, 12, 13
278	143430	Arm Shaft (upright)	261-11, 12, 13
279	147111-001	Arm Shaft (upright) Bushing (upper)	261-11, 12, 13
280	50504(830)	Set Screw	261-11, 12, 13
281	146505	Arm Shaft (upright) Bushing (lower)	261-11, 12, 13
282	140298(830)	Set Screw	261-11, 12, 13
283	143431	Arm Shaft (upright) Collar with two 1259(830)	261-11, 12, 13
284	157(805)	Oil Pump Body Screw (3)	261-11, 12, 13
285	146660	Oil Pump Body 146659 with three 143126	261-11, 12, 13
286	146659	Oil Pump Body	261-11, 12, 13
287	143620	Oil Pipe with 143124 and 143125	261-11, 12, 13
288	143501	Oil Pipe with 143124 and 143125	261-11, 12, 13
289	143647	Oil Tube complete with two each 143124 and 143125	261-11, 12, 13
290	143642	Bed Rotary Shaft	261-11, 12, 13
291	1266(830)	Thread (looper) Take-up Set Screw (2)	261-11, 12, 13
292	143073	Oil Pump Impeller	261-11, 12, 13
293	50123(805)	Oil Pump Impeller Locking Screw	261-11, 12, 13
294	146600	Oil Pump Cover	261-11, 12, 13
295	146657	Oil Pump Screen	261-11, 12, 13
296	146658	Oil Pump Screen Frame	261-11, 12, 13
297	139519	Thread (looper) Thread Tube Cover Hinge Plate (left) 139172 with 12162	261-11, 12, 13
298	139520	Thread (looper) Thread Tube Cover Hinge Plate (right) 139172 with 12162	261-11, 12, 13

CODE	PART NUMBER	DESCRIPTION	MACHINE VARIETY
299	189(805)	Oil Pump Screen Frame Screw (3)	261-11, 12, 13
300	140061(809)	Cover Hinge Plate Screw (2)	261-11, 12, 13
301	139172	Thread (looper) Thread Tube Cover Hinge Plate (2)	261-11, 12, 13
302	12162	Cover Hinge Pin (2)	261-11, 12, 13
303	139173	Cover Catch	261-11, 12, 13
304	229(809)	Cover Catch Screw (2)	261-11, 12, 13
305	139173	Cover Lock Spring	261-11, 12, 13
306	139174	Cover Lock Spring Reinforcing Plate	261-11, 12, 13
307	202(809)	Cover Lock Spring Screw (2)	261-11, 12, 13
308	20995	Cover Lock Spring Position Spring	261-11, 12, 13
309	143445	Bed Rotary Shaft Bushing Flanged (right) Spacing Collar with two 50150(830)	261-11, 12, 13
310	50150(830)	Spacing Collar Set Screw (4)	261-11, 12, 13
311	237(805)	Arm Rotary Shaft Flanged Bushing (back) Oil Sump Tube Holder Screw	261-11, 12, 13
312	146790	Oil Sump Tube	261-11, 12, 13
313	140296(830)	Arm Rotary Shaft Flanged Bushing (back) Set Screw	261-11, 12, 13
315	143641	Arm Rotary Shaft Flanged Bushing (back)	261-11, 12, 13
316	176(809)	Thread Guide Bracket Screw	261-11, 12, 13
317	146591	Oil Flow Body	261-11, 12, 13
318	143061	Oil Flow Body Gasket (2)	261-11, 12, 13
319	143062	Oil Flow Window	261-11, 12, 13
320	143063	Oil Flow Window Cap	261-11, 12, 13
321	50257(809)	Oil Flow Window Cap Screw (4)	261-11, 12, 13
322	50342(809)	Thread (looper) Thread Guide Screw (4)	261-11, 12, 13
323	139324	Thread (looper) Thread Guide Bracket	261-11, 12, 13
324	237(809)	Guide Bracket Support Screw (upper)	261-11, 12, 13
325	139325	Guide Bracket Support	261-11, 12, 13
326	202(809)	Guide Bracket Support Screw (lower)	261-11, 12, 13
327	143618	Arm Rotary Shaft Sprocket Wheel with two each 141146(869) and 202253	261-11, 12, 13
328	141146(869)	Sprocket Wheel Set Screw (2)	261-11, 12, 13
329	202253	Sprocket Wheel Spring Flange (2)	261-11, 12, 13
330	1448(830)	Bed Rotary Shaft Belt Guard Set Screw (2)	261-11, 12, 13
331	143437	Bed Rotary Shaft Belt Guard with two 1448(830)	261-11, 12, 13
332	143544	Thread Tube (belt guard) complete, Nos. two 139161 and four 139162	261-11, 12, 13
333	203(809)	Thread Tube (belt guard) Set Screw (3)	261-11, 12, 13
334	139162	Thread Tube (belt guard) Bushing (4)	261-11, 12, 13
335	140409(869)	Bed Rotary Shaft Sprocket Wheel Set Screw (2)	261-11, 12, 13
336	143446	Bed Rotary Shaft Sprocket Wheel with 202253 and two 140409(869)	261-11, 12, 13
337	50608(813)	Plug Screw (2)	261-11, 12, 13
338	139017	Plug Screw Washer (2)	261-11, 12, 13
339	456(830)	Slide Block Stud Set Screw (in 143456)	261-11, 12, 13
340	143456	Looper Avoiding Eccentric Forked Connection Bracket with 456(830)	261-11, 12, 13
341	143458	Looper Avoiding Eccentric Forked Connection Slide Block	261-11, 12, 13
342	143454-002	Looper Avoiding Eccentric with two 50150(830)	261-11, 12, 13
343	143444	Bed Rotary Shaft Bushing, Flanged (right)	261-11, 12, 13
344	50422(803)	Bed Rotary Shaft Bushing, Flanged (right) Set Screw	261-11, 12, 13
345	139144	Thread (looper) Take-up with two 1266(830)	261-11, 12, 13
347	143626	Oil Reservoir complete, Nos. 141139(869), 143509, 143542, 143601, 164133, 164134, two each 1485(809), 164132 and three 208(830)	261-11, 12, 13
348	143542	Oil Reservoir Screen Frame	261-11, 12, 13
349	143509	Oil Reservoir Screen	261-11, 12, 13
350	208(830)	Oil Reservoir Screen Frame Screw (3)	261-11, 12, 13
351	143508	Oil Reservoir Gasket	261-11, 12, 13
352	966(819)	Oil Reservoir Screw (21)	261-11, 12, 13
353	164134	Oil Reservoir Sight Gauge Window Retainer	261-11, 12, 13
354	164132	Gasket (2)	261-11, 12, 13
355	164133	Oil Reservoir Sight Gauge Window	261-11, 12, 13
356	1485(809)	Oil Reservoir Sight Gauge Window Retainer Screw (2)	261-11, 12, 13
357	143601	Sight Gauge Background Disc	261-11, 12, 13
360	141139(869)	Oil Reservoir Drain Plug	261-11, 12, 13
363	139190	Machine Mounting Cushion (2)	261-11, 12, 13
364	146552	Arm Screw (right) (2)	261-11, 12, 13
365	50491(805)	Arm Screw (left) (2)	261-11, 12, 13
366	16532	Arm Dowel Pin (2)	261-11, 12, 13
367	139036	Bed Rotary Shaft Belt Guard Cover 139035 with 139037	261-11, 12, 13
368	264715	Bed Rotary Shaft Belt	261-11, 12, 13
369	139037	Belt Guard Cover Gasket (cork)	261-11, 12, 13

CODE	PART NUMBER	DESCRIPTION	MACHINE VARIETY
370	139035	Belt Guard Cover	261-11, 12, 13
371	139484	Machine Pulley with two 51283(830)	261-11, 12
	139419	Machine Pulley with two 51283(830)	261-13
372	51283(830)	Machine Pulley Set Screw (2)	261-11, 12, 13
374	690(806)	Belt Guard Cover Screw (2)	261-11, 12, 13
381	22794	Machine Mounting Bracket Long	261-11, 12, 13
382	146(819)	Machine Mounting Bracket (short) Screw (2)	261-11, 12, 13
383	2807	Machine Mounting Bracket (short) Screw Washer (2)	261-11, 12, 13
384	51069(819)	Mounting Bolt with 51581(819) (4)	261-11, 12, 13
385	51581(819)	Mounting Bolt Nut (4)	261-11, 12, 13
386	143236	Arm Rotary Shaft Screw Plug (front) Washer	261-11, 12, 13
387	140359(805)	Arm Rotary Shaft Screw Plug (front)	261-11, 12, 13
388	1250(830)	Thread (looper) Take-up Cover Position Screw Stud	261-11, 12, 13
389	143521	Thread (looper) Thread Tube Cover	261-11, 12, 13
390	143522	Thread (looper) Thread Tube Cover 143521 with 139171 and two 229(809)	261-11, 12, 13
391	139167	Thread (looper) Tube Bushing (4)	261-11, 12, 13
392	139168	Thread (looper) Tube complete with 20995 and four 139167	261-11, 12, 13
393	146864	Arm Rotary Shaft Bevel Gear (right hand spiral) with 140333(830) and two 1259(830)	261-11, 12, 13
394	59456	Slide Block Guide Screw Washer (2)	261-11, 12, 13
395	430(830)	Tension (looper thread) Body Set Screw	261-11, 12, 13
396	146609	Presser Bar Lifting Lever Extension	261-11, 12, 13
397	143624	Arm Rotary Shaft Sprocket Wheel Oil Retaining Ring	261-11, 12, 13
398	143632	Oil Return Tube	261-11, 12, 13
399	158240	Oil Removing Tube (head end) Screen	261-11, 12, 13
400	143650	Bed Rotary Shaft Bushing (left) Oil Tube, with 143124 and 143125	261-11, 12, 13
401	158045	Arm Shaft Sprocket Wheel Spacing Washer	261-11, 12, 13
402	141464(803)	Machine Mounting Bracket (long) Screw	261-11, 12, 13
403	14475	Needle Bar Connecting Link Screw Cap Disc	261-11, 12, 13
404	175032	Presser Bar Spring Washer	261-11, 12, 13
405	32381	Needle Guard	261-11, 12, 13
406	32382	Needle Guard Holder	261-11, 12, 13
407	193(809)	Needle Guard Screw	261-11, 12, 13
408	223(809)	Needle Guard Screw	261-11, 12, 13
409	15405	Trademark Rivet (2)	261-11, 12, 13
	15405	Number Plate Rivet (2)	261-11, 12, 13
410	22796	Machine Mounting Bracket (long) Pad	261-11, 12, 13
411	22795	Machine Mounting Bracket (short)	261-11, 12, 13
412	141403(819)	Arm Hole Plug Screw	261-11, 12, 13
413	139017	Arm Hole Plug Screw Washer	261-11, 12, 13
414	22797	Machine Mounting Bracket (short) Pad	261-11, 12, 13

ECONOMY in Printing
LITHOGRAPH, REPRODUCTION