



THE SINGER COMPANY
Copyright ©1965 by The Singer Company
All Rights Reserved under Inter-American Copyright Union
Copyright under International Copyright Union

Printed in U. S. A.

NUMERICAL LIST OF PARTS FOR 261-32 MACHINE

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
110(803)	Tension (needle thread) Releasing Shaft Crank Connecting Link Hinge Screw(2)	223(809)	Needle Guard (movable) Screw	802(819)	Presser Bar Lifting Lever Hinge Screw	1664(809)	Feed Roll Guide Bar Adjusting Screw Nut
120(805)	Looper Avoiding Eccentric Forked Connection Bracket and Oil Connection Screw(2)	226(805)	Looper Avoiding Eccentric Forked Connection Slide Black Cover Screw(2)	807(819)	Feed Roll and Presser Bar Lifter Hinge Screw Feed Lifting Eccentric Forked Connection Screw (short)	1742(803)	Tension (looper thread) Regulating Thumb Nut(3)
131(805)	Looper Thread Guide Bracket Screw	226(809)	Thread (looper) Thread Guide (front of bed) Screw (right)	914(803)	Oil Reservoir Screw(21)	2070	Presser Bar Spring Washer
144(804)	Arm Rotary Shaft Screw (back)	229(809)	Thread (looper) Thread Guide (intermediate) Bracket Screw(2)	1036(830)	Feed Roll Eccentric Set Screw(2)	2102	Tension (needle thread) Disc(6)
146(819)	Belt Guard Screw(2)	229(809)	Thread (needle) Thread Guide (intermediate) Bracket Screw(2)	1036(830)	Needle Bar Connecting Link Hinge Stud Position Set Screw	2807	Mounting Cushion Screw Washer
146(813)	Mounting Cushion Screw	229(809)	Thread (looper) Thread Guide (front of bed) Cover Catch Screw(2)	1047(830)	Looper Driving Arm Connection Link Hinge Pin Set Screw(2)	Catalog	
152(819)	Face Plate Screw(2)	229(809)	Thread (needle) Thread Guide (left) Screw(2)	1057(830)	Feed Roll Lifting Bracket Clamping Screw	3651	Needle (Size No. 22)
157(805)	Oil Pump (Centrifugal) Body Screw(3)	229(809)	Thread (needle) Thread Guide (right) Screw(2)	1057(830)	Presser Bar Guide Bracket Clamping Screw	7071	Feed Eccentric Clamping Washer
161(819)	Presser Bar Lifting Lever Extension Screw(2)	237(809)	Thread (looper) Thread Guide Bracket Support Screw (upper)	1133(830)	Needle Bar Bushing (lower) Set Screw	7071	Thread (looper) Take-up Thread Guide (right) Screw Washer
171(805)	Bed Rotary Shaft Bushing (intermediate) Oil Connection Screw(2)	237(809)	Thread (looper) Take-up Thread Guide (left) Screw	1133(830)	Needle Bar Bushing (upper) Set Screw	7071	Thread (needle) Eyelet (side of arm) Position Screw Washer
172(803)	Feed Lifting Eccentric Forked Connection Screw (long)	240(809)	Thread (looper) Take-up Thread Separator Thread Retainer Screw	1133(805)	Presser Bar Bushing (lower) Set Screw	10106	Position Screw Washer Tension (looper thread) Disc(6)
175(830)	Looper Driving Arm Connection Cap (lower) Screw(2)	316(803)	Tension (needle thread) Releasing Shaft Stop Screw	1250(830)	Thread (looper) Take-up Cover Position Screw Stud	12162	Thread (looper) Thread Guide (front of bed) Cover Hinge Pin(2)
175(830)	Looper Driving Arm Connection Crank (upper) Screw(2)	376(809)	Tension (needle thread) Bracket Screw	1253(830)	Looper Eccentric Connection Slide Black Stud Collar Set Screw(2)	13288	Arm Top Cover (front) Stitch Regulator Plunger Spring Stop Ring
175(805)	Needle Bar Connecting Stud Clamping Screw	430(830)	Tension (looper thread) Body Set Screw	1255(805)	Feed Dog Screw	13994	Needle Bar Bushing (lower and upper) Oil Wick Clip(2)
175(830)	Thread (looper) Take-up Stripper Plate Bracket Screw(2)	443(830)	Feed Bar Hinge Pin Set Screw	1258(830)	Feed Roll Driving Shaft (upright) Driving Collar Set Screw(4)	14442-001	Needle Bar complete, for 1/8 in. - 1/8 in. gauge 128215 and 146573
176(809)	Slack Thread Controller Clamp Screw	443(830)	Feed Roll Clutch Body Set Screw(2)	1259(830)	Arm Rotary Shaft Bevel Gear Set Screw(2)	14475	Needle Bar Connecting Link Screw Cap Disc (fiber)
176(809)	Thread (looper) Thread Guide Bracket Screw	443(830)	Looper Holder Shaft Bushing (back) Set Screw	1259(830)	Arm Shaft (upright) Bevel Gear (upper) Set Screw(2)	15405	Number Plate Rivet(2)
176(809)	Thread (needle) Eyelet (side of arm) Position Screw	446(830)	Looper Driving Arm Hinge Stud Set Screw	1259(830)	Arm Shaft (upright) Collar Set Screw(2)	15405	Trade Mark Rivet(2)
189(805)	Oil Pump (Centrifugal) Screen Frame Screw(3)	446(830)	Looper Eccentric Connection Slide Black Stud Set Screw	1259(830)	Feed Roll Feed Regulator Locking Slide Ratchet Wheel Retaining Collar Set Screw(2)	15444	Tension (needle thread) Releasing Shaft Stop Screw 316(803) with 1547(809)
190(809)	Presser Foot Screw	447(830)	Feed Roll Set Screw	1259(830)	Looper Eccentric and Feed Lifting Eccentric Set Screw(2)	16532	Arm Dowel Pin(2)
193(809)	Needle Guard (movable) Holder Screw	453(830)	Feed Roll Bracket Shaft Bushing (lower) Set Screw	1266(830)	Thread (looper) Take-up Set Screw(2)	17022	Thread (looper) Take-up Stripper Screw Washer(2)
197(819)	Oil Removing Wick (head end) Hinge Plate and Cover Screw(4)	453(830)	Feed Roll Bracket Shaft Bushing (upper) Set Screw	1300(803)	Bed Rotary Shaft Sprocket Wheel Set Screw(2)	20437	Feed Roll Guide Bar Screw Washer(2)
202(813)	Bed Rotary Shaft Bushing (left) Cover Gasket Screw(4)	453(830)	Feed Roll Clutch (brake) Bushing Set Screw(2)	1324(803)	Looper Avoiding Eccentric Forked Connection Crank Clamping Screw	20799-002	Needle Bar Bushing (lower)
202(806)	Oil and Lint Guard Screw(2)	454(830)	Looper Holder Shaft Bushing (front) Set Screw	1375(830)	Feed Roll Eccentric Set Screw	20995	Thread (looper) Thread Guide (front of bed) Cover Lock Spring Position Pin
202(809)	Thread (looper) Thread Guide Bracket Support Screw (lower)	456(830)	Looper Eccentric Connection Slide Black Stud Set Screw	1443(802)	Lap Seam Feller Screw(2)	22833	Feed Roll Bracket Pressure Spring
202(809)	Thread (looper) Thread Guide (front of bed) Cover Lock Spring Screw	456(830)	Looper Thread Guide Bracket Holder Set Screw	1448(830)	Belt Guard Holder Screw(2)	22837	Feed Roll with 447(830)
203(809)	Thread (looper) Take-up Stripper Screw(2)	457(830)	Feed Roll Clutch Shaft Arm Bushing (rear) Set Screw	1448(830)	Bed Rotary Shaft Belt Guard Set Screw(2)	22839	Presser Foot (triple hinged) complete, for 1/8 in. - 1/8 in. and 9/64 in. - 9/64 in. gauges, 22919, 22920, 22922, 22923, 22924, 51362(809), two 22921 and six 50008(803)
203(809)	Thread (looper) Thread Tube (belt guard) Seat Screw(3)	460(830)	Feed Roll Clutch Shaft Collar Set Screw(2)	1449(809)	Thread (needle) Take-up Plate Spring Screw	Note: 22839 is furnished as regular to the machine when called for in standard gauges of 1/8 in. - 1/8 in. and 9/64 in. - 9/64 in. Note: For 1/8 in. - 1/8 in., order Code 501, for 9/64 in. - 9/64 in., order Code 502. Note: When ordering 22839, code for gauge required must be stated. Note: For 1/8 in. - 1/8 in., order Code 501. For 9/64 in. - 9/64 in., order Code 502. Note: When ordering 22919, code for gauge required must be stated.	
206(809)	Looper Thread Guide Screw	462(830)	Feed Roll Clutch Shaft Bevel Gear Set Screw(2)	1454(805)	Feed Roll Bracket Shaft Lifting Lever Guide Clamping Screw		
207(805)	Arm Rotary Shaft Flanged Bushing (back) Oil Sump Tube Holder Screw	462(830)	Feed Roll Driving Shaft (horizontal) Bevel Gear Set Screw(2)	1454(830)	Looper Holder Shaft Collar Clamping Screw		
207(809)	Thread (looper) Take-up Stripper Plate Screw(2)	624(830)	Arm Rotary Shaft Thrust Collar Set Screw(2)	1485(805)	Needle Bar Connecting Stud Slide Black Guide Screw(2)		
207(809)	Thread (needle) Eyelet Screw	624(830)	Tension (needle thread) Releasing Shaft Crank Set Screw	1485(809)	Oil Reservoir Sight Gauge Window Retainer Screw(2)		
208(805)	Oil Reservoir Screen Frame Screw(3)	662(809)	Lap Seam Feller Spring Screw(2)	1498(806)	Needle Set Screw(3)		
217(809)	Feed Eccentric Clamping Washer Screw	665(809)	Thread (looper) Take-up Stripper Plate Thread Guard Screw(2)	1520(803)	Feed Bar Hinge Pin Set Screw Lock Nut		
219(809)	Thread (looper) Take-up Thread Guide (right) Screw	690(806)	Bed Rotary Shaft Belt Guard Cover Screw(2)	1520(809)	Looper Driving Arm Bolt Screw Stud Nut		
		691(806)	Throat Plate Screw(3)	1547(809)	Tension (needle thread) Releasing Shaft Stop Screw Nut		
		724(809)	Thread (needle) Eyelet (side of arm) Screw	1662(819)	Feed Roll Eccentric Connecting Rod Hinge Screw Nut		
		783(805)	Bed Extension Screw(2)				

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
22920	Presser Foot Plate Leveling Spring	51282(809)	Thread (looper) Take-up Cover Lock Spring Screw	139017	Bed Oil Plug Screw Washer	139315	Thread (looper) Take-up Thread Guide (right) (for one thread)
22921	Presser Foot Plate and Yielding Heel Connection(2)	51283(830)	Machine Pulley Set Screw(2)	139030	Bed Rotary Shaft Bushing (left) Cover	139316	Thread (looper) Take-up Thread Guide (right) (for two threads)
22922	Presser Foot Shank	51362(809)	Presser Foot Plate Leveling Spring Screw	139031	Bed Rotary Shaft Bushing (left) Cover Gasket	139317	Thread (looper) Take-up Thread Separator
22923	Presser Foot Yielding Heel	51369(813)	Arm Top Cover (front) Screw(4)	139035	Bed Rotary Shaft Belt Guard Cover	139318	Thread (looper) Thread Guide (front of bed) with 139321 and two 139320
22924	Presser Foot Yielding Heel Spring	51369(813)	Arm Top Cover Screw(4)	139036	Bed Rotary Shaft Belt Guard Cover 139035 with 139037	139319	Thread (looper) Thread Guide (front of bed) Plate with 20995
22957	Lap Seam Feller Slide Filler Plate	51369(803)	Looper Driving Arm Hinge Stud Clamping Screw	139037	Bed Rotary Shaft Belt Guard Cover Gasket (cork)	139320	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (long)(2)
23103	Looper Driving Arm Connecting Link and two Hinge Pins	51369(805)	Oil Lead Screw	139046	Feed Bar Hinge Pin Slide Block	139321	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
25362	Feed Roll Guide Bar Adjusting Screw Pressure Ball	51460(805)	Thread (needle) Take-up Clamping Screw	139069	Looper Driving Arm Connection Crank with 1057(830)	139322	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
26276	Looper Position Pin	51570(803)	Tension (needle thread) Regulating Thumb Nut(3)	139070	Looper Driving Arm Connection Crank Ball Screw Stud	139323	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
29043	Thread Cutter Screw Washer(2)	51581(813)	Mounting Cushion Bolt Nut	139074	Looper Eccentric Connection Slide Block	139324	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
32572	Tension (needle thread) Releasing Disc(3)	51614(818)	Pressure Regulating Thumb Screw Nut	139097	Looper Holder Shaft Collar with 1454(830)	139325	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
49220	Tension (needle thread) Thread Guide (back)	54242	Slack Thread Controller Clamp	139111	Needle Bar Connecting Stud Slide Block	139326	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50008(803)	Presser Foot Plate Hinge Screw(2)	54246-001	Tension (needle thread) Releasing Shaft	139144	Thread (looper) Take-up with two 1266(830)	139327	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50008(803)	Presser Foot Plate Yielding Heel Connection Hinge Screw(2)	54872	Tension (needle thread) Releasing Shaft Crank with 624(830)	139145	Thread (looper) Take-up Cover	139328	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50008(803)	Presser Foot Yielding Heel Hinge Screw(2)	54988	Tension (needle thread) Releasing Pin(3)	139146	Thread (looper) Take-up Cover Hinge Pin	139329	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50037(818)	Thread Cutter and Throat Plate Screw Hole Cover Screw(2)	59456	Needle Bar Connecting Stud Slide Block	139147	Thread (looper) Take-up Cover Lock Spring	139330	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50040(804)	Bed Rotary Shaft Screw (right)	59537	Tension (needle thread) Spring Bushing (large)(3)	139148	Thread (looper) Take-up Stripper	139331	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50123(805)	Oil Pump (Centrifugal) Impeller Locking Screw	59538	Tension (needle thread) Spring Bushing (small)(3)	139152	Thread (looper) Take-up Stripper Plate	139332	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50150(830)	Bed Rotary Shaft Bushing Flanged (right) Spacing Collar Set Screw(2)	59539	Tension (needle thread) Screw Stud 50326(803) with 51570(803)(3)	139154	Thread (looper) Take-up Thread Guide (left)	139333	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50150(830)	Looper Avoiding Eccentric Set Screw(2)	64519	Arm Top Cover (front) Stitch Regulator Plunger Spring	139155	Thread (looper) Take-up Thread Separator	139334	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50257(809)	Oil Flow Window Cap Screw(4)	68002	Tension (needle thread) Bracket	139156	Thread (looper) Take-up Thread Retainer	139335	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50326(803)	Tension (needle thread) Screw Stud(3)	68008	Thread (needle) Take-up Plate	139157	Thread (looper) Take-up Thread Guide (left)	139336	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50328(803)	Feed Regulating Screw	68164	Thread (needle) Take-up Plate Spring	139158	Thread (looper) Take-up Thread Guide (left)	139337	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50342(809)	Thread (looper) Thread Guide (intermediate) Screw(2)	121449	Lap Seam Feller Clamping Plate	139158	Thread (looper) Take-up Thread Guide (left)	139338	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50342(809)	Thread (looper) Thread Guide (left) Screw(2)	121629	Lap Seam Feller on Shank with Yielding Lower Scroll with 230066 and two 662(809), for MH	139158	Thread (looper) Take-up Thread Guide (left)	139339	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50342(809)	Thread (looper) Thread Guide (right) Screw(2)			139158	Thread (looper) Take-up Thread Guide (left)	139340	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50342(809)	Thread (needle) Thread Guide (intermediate) Screw(2)			139158	Thread (looper) Take-up Thread Guide (left)	139341	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50362(809)	Thread (looper) Thread Guide (front of bed) Screw (left)			139158	Thread (looper) Take-up Thread Guide (left)	139342	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50411(809)	Thread (looper) Thread Guide (front of bed) Thread Retainer Screw(2)			139158	Thread (looper) Take-up Thread Guide (left)	139343	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50422(803)	Bed Rotary Shaft Bushing Flanged (right) Set Screw			139158	Thread (looper) Take-up Thread Guide (left)	139344	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50443(803)	Feed Roll Clutch Shaft Driving Crank Clamping Screw			139158	Thread (looper) Take-up Thread Guide (left)	139345	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50470(804)	Feed Roll Driving Shaft (horizontal) Spur Gear and Feed Roll Shaft Spur Gear Cover Plate Screw(2)			139158	Thread (looper) Take-up Thread Guide (left)	139346	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50491(805)	Arm Screw (left)(2)			139158	Thread (looper) Take-up Thread Guide (left)	139347	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50504(830)	Arm Shaft (upright) Bushing (upper) Set Screw			139158	Thread (looper) Take-up Thread Guide (left)	139348	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50555(805)	Arm Rotary Shaft Plug Screw			139158	Thread (looper) Take-up Thread Guide (left)	139349	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50579(809)	Feed Roll Driving Shaft (horizontal) Bevel Gear Cover Screw(2)			139158	Thread (looper) Take-up Thread Guide (left)	139350	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
50608(813)	Bed Oil Plug Screw			139158	Thread (looper) Take-up Thread Guide (left)	139351	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
51061(830)	Feed Eccentric Body Set Screw(2)			139158	Thread (looper) Take-up Thread Guide (left)	139352	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
51069(813)	Mounting Cushion Bolt with 51581(813)			139158	Thread (looper) Take-up Thread Guide (left)	139353	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
51282(819)	Looper Gate (left) Lock Spring Screw			139158	Thread (looper) Take-up Thread Guide (left)	139354	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)
51282(819)	Looper Gate (right) Lock Spring Screw			139158	Thread (looper) Take-up Thread Guide (left)	139355	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
139509	Looper Eccentric Connection Slide Block Stud Gasket	140610(819)	Arm Hole Plug Screw	143440	Bed Rotary Shaft Bushing (intermediate) Oil Connection	143491	Needle Bar Bushing (lower and upper) Oil Wick complete, 143490, 146703 and two 13994
139510	Feed Bar Hinge Pin (eccentric) Oil Plug	140676(819)	Arm Top Cover Plug Screw	143441	Bed Rotary Shaft Bushing (intermediate) Oil Connection 143440 with 143442	143492	Needle Bar Bushing (lower and upper) Oil Wick Guide Tube (Arm)
139510	Looper Driving Arm Hinge Stud Oil Plug	140717(819)	Pressure Regulating Thumb Screw	143442	Bed Rotary Shaft Bushing (intermediate) Oil Connection	143494-002	Needle Bar Connecting Link, Connecting Stud and Hinge Stud with 14475 and 139533
139510	Looper Eccentric Connection Slide Block Stud Oil Plug	140999(813)	Bed Cover Hole Plug Screw	143443	Bed Rotary Shaft Bushing (left)	143499	Oil and Lint Guard
139516	Feed Bar Hinge Pin (eccentric)	141002(803)	Tension (looper thread) Screw Stud(3) Looper Clamping Screw	143444	Bed Rotary Shaft Bushing Flanged (right) with plug	143500	Oil Pipe and two each 143124 and 143125
139519	Thread (looper) Thread Guide (front of bed) Cover Hinge Plate (left) 139172 with 12162	141005(830)	Looper Clamping Screw	143445	Bed Rotary Shaft Bushing Flanged (right) Spacing Collar with two 50150(830)	143501	Oil Pipe with 143124 and 143125
139520	Thread (looper) Thread Guide (front of bed) Cover Hinge Plate (right) 139172 with 12162	141032(869)	Feed Roll Guide Bracket Screw(2)	143446	Bed Rotary Shaft Sprocket Wheel with 202253 and two 1300(803)	143502	Oil Pipe with two each 143124 and 143125
139533	Needle Bar Connecting Link Screw Cap	141068(819)	Feed Roll Driving Shaft (horizontal) Spur Gear and Feed Roll Shaft Spur Gear Cover Screw(2)	143448	Feed Bar Feed Eccentric (adjustable) complete, 217(809), 7071, 50328(803), and two 51061(830)	143503	Oil Pipe for 143504
139534	Looper Driving Arm Hinge Stud	141141(869)	Feed Roll Bracket Shaft Set Screw(2)	143449	Feed Eccentric (adjustable) complete, 217(809), 7071, 50328(803), and two 51061(830)	143504	Oil Pipe complete, 143503 143065 with 143066 (for Agents only)
139535	Looper Eccentric Connection Slide Block Stud Collar and Looper Driving Arm Hinge Stud Support with 51369(803) and two 1253(830)	141143(803)	Feed Roll Eccentric Connecting Rod Hinge Screw	143450	Feed Eccentric Slide Block	143506	Oil Reservoir
140061(809)	Thread (looper) Thread Guide (front of bed) Cover Hinge Plate Screw(2)	141146(869)	Arm Rotary Shaft Sprocket Wheel Set Screw(2)	143451	Feed Lifting Eccentric Forked Connection Slide Block	143507	Oil Reservoir complete 143506, 143509, 143542, 143601, 144307, 164133, 164134, two 1485(809) and three each 208(805) and 164132
140180(809)	Thread Guide (front of arm) Screw	141158(869)	Looper Holder Clamping Screw	143454-001	Looper Avoiding Eccentric with two 50150(830)	143508	Oil Reservoir Gasket
140279(830)	Feed Roll Clutch Shaft Arm Bushing (front) Set Screw	141163(805)	Bed Rotary Shaft Screw (left)	143455	Looper Avoiding Eccentric Forked Connection	143509	Oil Reservoir Screen
140295(803)	Bed Cover Screw(14)	141244(830)	Feed Roll Guide Bar Adjusting Screw	143456	Looper Avoiding Eccentric Forked Connection Bracket with 456(830)	143510	Presser Bar Lifting Lever
140296(830)	Arm Rotary Shaft Bushing (center) Set Screw	142354	Presser Bar Spring	143457	Looper Avoiding Eccentric Forked Connection Bracket	143511-001	Presser Bar Lifting Lever Spring
140296(830)	Arm Rotary Shaft Bushing (center) Set Screw	143015	Arm Shaft (upright) Bevel Gear (upper) (left hand spiral with two 1259(830))	143458	Looper Avoiding Eccentric Forked Connection Slide Block	143514	Tension (looper thread) Spring(3)
140296(830)	Arm Rotary Shaft Bushing (center) Set Screw	143061	Oil Flow Body Gasket(2)	143459	Looper Avoiding Eccentric Forked Connection Slide Block	143515	Tension (looper thread; Screw Stud 141002(803); with 1742(803)(3)
140298(830)	Arm Shaft (upright) Bushing (lower) Set Screw	143062	Oil Flow Window	143460	Looper Avoiding Eccentric Forked Connection Slide Block	143517	Thread (looper) Take-up Stripper Plate
140304(819)	Oil Reservoir Drain Plug	143063	Oil Flow Window Cap	143461	Looper Avoiding Eccentric Forked Connection Slide Block	143518	Thread (looper) Take-up Stripper Plate Bracket
140331(830)	Arm Rotary Shaft Flanged Bushing (front) Set Screw	143065	Oil Pipe Clamping Sleeve	143462	Looper Eccentric Connection with Bushing and 1047(830)	143521	Thread (looper) Thread Guide (front of bed) Cover
140331(830)	Bed Rotary Shaft Bushing (intermediate) Set Screw	143066	Oil Pipe Clamping Sleeve Nut	143463	Looper Eccentric Connection Slide Block Stud	143522	Thread (looper) Thread Guide (front of bed) Cover 143521 with 139171 and two 229(809)
140331(830)	Bed Rotary Shaft Bushing (left) Set Screw	143071	Oil Pump (Centrifugal) Body Position Pin(2)	143468	Looper Gate (left)	143524	Thread Cutter Support and Thread Guide
140333(830)	Arm Rotary Shaft Bevel Gear Position Screw	143073	Oil Pump (Centrifugal) Impeller	143469	Looper Gate (left) 143468 with 143470 and 51282(819)	143542	Oil Reservoir Screen Frame
140359(805)	Arm Rotary Shaft Screw Plug (front)	143085	Feed Roll Feed Regulator	143470	Looper Gate (left) Lock Spring	143548	Looper Thread Guide Bracket
140440(819)	Needle Bar Bushing (upper) Oil Plug Screw	143086	Feed Roll Feed Regulator Locking Slide	143471	Looper Gate (right)	143551	Looper Holder Shaft Bushing (back) Oil Seal (rubber)
140489(803)	Feed Roll Guide Bar Screw(2)	143087	Feed Roll Feed Regulator Locking Slide Ratchet Wheel	143472	Looper Gate (right) 143475 with 143477 and 51282(819)	143552	Looper Holder Shaft Bushing (back) 143485 with 143551
140542(830)	Needle Bar Crank Position Screw	143088	Feed Roll Feed Regulator Locking Slide Ratchet Wheel Pin	143473	Looper Gate (right) Lock Spring	143554	Looper (back) for 3/64 in. - 3/64 in. to 9/64 in. - 9/64 in. gauges
140549(805)	Feed Roll Feed Regulator Locking Slide Spring Screw	143124	Oil Pipe Clamping Sleeve(6)	143474	Looper Gate (right) Lock Spring	143555	Looper (front) for 3/64 in. - 3/64 in. to 9/64 in. - 9/64 in. gauges
140552(830)	Needle Bar Connecting Link Hinge Stud	143125	Oil Pipe Clamping Sleeve Nut(6)	143475	Looper Gate (right) Lock Spring	143556	Looper (intermediate)
140553(805)	Clamping Screw Oil Removing Wick (head end) Holder Body Hinge Screw	143126	Oil Pipe Clamping Sleeve Adaptor(5)	143476	Looper Gate (right) Lock Spring	143557	Looper Holder with 26276 and 141158(869)
140601(809)	Feed Roll Clutch Position Bracket Screw(2)	143134	Feed Roll Feed Regulator 143085 with 140549(805), 143086, and 143378	143477	Looper Gate (right) Lock Spring	143558	Looper Holder Bushing (eccentric)
140607(819)	Arm Top Cover (front) Stitch Regulator Plunger Hole Plug Screw, for plugging the Plunger Hole when the Plunger is removed to prevent tampering with the Stitch Set (for Agents only)	143236	Arm Rotary Shaft Screw Plug (front) Washer (fiber)	143478	Looper Gate Hinge Pin(2)	143559	Looper Thread Guide
		143370	Oil Lead	143479	Looper Gate Hinge Screw Stud(2)	143560	Looper Thread Guide Bracket Holder
		143378	Feed Roll Feed Regulator Locking Slide Spring	143480	Looper Gate Position Pin(2)	143567	Tension (looper thread) Body
		143430	Arm Shaft (upright)	143484	Looper Holder Shaft Bushing (back)		
		143431	Arm Shaft (upright) Collar with two 1259(830)	143485	Looper Holder Shaft Bushing (back)		
		143432	Arm Top Cover Plug Screw Gasket	143486	Looper Holder Shaft Bushing (back)		
		143433	Bed Cover with Insert and Reinforcing Plate	143490	Needle Bar Bushing (lower and upper) Oil Wick		
		143434	Bed Cover Gasket (cork)				
		143435	Bed Cover Hole Plug Screw Gasket				
		143436	Bed Rotary Shaft Bed Rotary Shaft Bolt Guard with two 1448(830)				
		143437	Bed Rotary Shaft Bushing (intermediate)				
		143438	Bed Rotary Shaft Bushing (intermediate)				
		143439	Bed Rotary Shaft Bushing (intermediate)				

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
143568	Tension (looper thread) complete, 143567, three each 143514, 143515 and six 10106	143615	Bed Oil Shield (felt, upper)	147206	Arm Top Cover (front) Gasket	147437	Feed Roll Driving Shaft (upright) Bevel Gear (upper)
143569	Tension (needle thread) Thread Guide (center) Thread Guide (front of arm)	143616	Needle Guard (movable) Holder	147395	Combination of Feed Roll Feed Parts 1662(819), 141143(803), 143087, 143134, 147472-001, 149042, 149046 and 149203	147438	Feed Roll Driving Shaft (upright) Driving Collar with two 1258(830)(2)
143570	Thread Guide (front of arm)	143617	Arm Rotary Shaft Flanged Bushing (back)	147396-002	Sprocket Wheel and Hub with two each 141146(869) and 202253	147439	Feed Roll Driving Shaft (upright) Hinge Pin (3/4 in. long) (2)
143571	Thread (needle) Eyelet (side of arm)	143618	Arm Rotary Shaft Sprocket Wheel and Hub with two each 141146(869) and 202253	147397	Face Plate Gasket	147440	Feed Roll Shaft
143574	Belt Guard (small)	143620	Oil Pipe with 143124 and 143125	147400	Feed Roll Bracket with two 141141(869)	147441	Feed Roll Shaft Spur Gear
143575	Belt Guard Bracket	143621	Looper Eccentric and Feed Lifting Eccentric with two 1259(830)	147405	Feed Roll Bracket Pressure Spring Adjusting Nut	147442-001	Feed Roll Shaft Spur Gear Pin (1/2 in. long)
143576	Belt Guard Holder with two 1448(830)	143622	Oil Return Tube	147408	Feed Roll Clutch (broke)	147468	Arm Rotary Shaft Thrust Collar with two 624(830)
143577	Belt Guard complete, with 143574, 143575, 143576 and four 146(819)	143624	Arm Rotary Shaft Sprocket Wheel Oil Retaining Ring	147410	Feed Roll Clutch (broke) Bushing with two 453(830)	147472-001	Feed Roll Eccentric
143579	Thread (looper) Take-up Stripper Plate Bracket 143518 with 219(809), 237(809) 240(809), 7071, 51282(809), 139145, 139146, 139147, 139148, 139152, 139154, 139157, 139315, 139316, 139317, 143517, two each 203(809), 207(809), 665(809) and 17022	144307	Oil Reservoir Drain Plug Gasket	147411	Feed Roll Clutch (broke) Member Spring(3)	149016	Arm Top Cover (front)
143580	Arm Rotary Shaft with 1036(830), 50555(803) 140542(830) and crank	146505	Arm Shaft (upright) Bushing (lower)	147412	Feed Roll Clutch (drive)	149017	Arm Top Cover (front) with Stitch Regulator Plunger complete, 64519, 149018 149016 and 13288
143581-002	Arm Rotary Shaft 143580 with 143494-002	146508	Arm Top Cover Gasket	147414	Feed Roll Clutch (drive) Member Spring(3)	149018	Arm Top Cover (front) Stitch Regulator Plunger
143582	Feed Roll and Presser Bar Lifter	146552	Arm Screw (right) (2)	147415	Feed Roll Clutch Body with two 443(830)	149042	Feed Roll Eccentric Connecting Rod
143583-001	Feed Roll Bracket Shaft	146573	Needle Bar (hollow)	147416	Feed Roll Clutch Position Bracket	149046	Feed Roll Feed Regulator Locking Slide Ratchet Wheel Retaining Collar with 143088 and two 1259(830)
143584	Feed Roll Bracket Shaft Bushing (lower)	146576	Needle Bar Bushing (upper)	147417	Feed Roll Clutch Roller(6)	149118	Feed Roll Guide Bar
143585	Feed Roll Bracket Shaft Bushing (upper)	146580	Feed Roll Clutch Shaft Arm Bushing (front) Oil Wick Clip	147418	Feed Roll Clutch Roller Plunger(6)	149119	Feed Roll Guide Bracket
143586	Feed Roll Bracket Shaft Lifting Lever Guide with 1454(805)	146591	Oil Flow Body	147419	Feed Roll Clutch Washer(2)	149203	Feed Roll Clutch Shaft Driving Crank with 50443(803)
143587	Feed Roll Lifting Bracket with 1057(830)	146600	Oil Pump (Centrifugal) Cover	147420	Feed Roll Clutch Wearing Plate(6)	149205	Oil Removing Wick (head end) Hinge Plate, Stop, Spring Clip and Cover
143589	Presser Bar Bushing (lower)	146609	Presser Bar Lifting Lever Extension	147421	Feed Roll Clutch and Shaft complete, 147408, 147410, 147412, 147415, 147422, 147427, two 147419, three 147411, 147414 and six each 147417 147418 and 147420	149206	Oil Removing Wick (head end) Holder Body complete, 140553(805), 146698, 146745, 147055, 147107 and 149205
143590	Presser Bar Guide Bracket with 1057(830)	146657	Oil Pump (Centrifugal) Screen	147422	Feed Roll Clutch Shaft	149210-001	Feed Roll Bracket complete, 22837, 147400, 147426, 147430, 147431, 147432, 147433-001, 147434, 147435, 147437, 147440, 147441, 147442-001 and two each 50470(804) 50579(809) and 141068(819)
143595	Tension (needle thread) Releasing Shaft Crank Connecting Link	146658	Oil Pump (Centrifugal) Screen Frame	147424	Feed Roll Clutch Shaft Arm Bushing (front) Oil Wick with 146580	152503	Arm Rotary Shaft Bushing (center)
143596	Throat Plate for 1/8 in. - 1/8 in. and 9/64 in. - 9/64 in. gauges, for use with 22839 and 139497 Note: 143596 is furnished as regular to the machine when called for in standard gauges of 1/8 in. - 1/8 in. and 9/64 in. - 9/64 in. Note: For throat plate 143596 use looper gates 143469 and 143476 Note: When ordering 143596, state gauge required	146659	Oil Pump (Centrifugal) Body	147425-001	Feed Roll Clutch Shaft Arm Bushing (rear)	164132	Oil Reservoir Sight Gauge Background Disc Gasket
143597	Throat Plate Screw	146660	Oil Pump (Centrifugal) Body 146659 with three 143126	147426	Feed Roll Clutch Shaft Bevel Gear with two 462(830)	164132	Oil Reservoir Sight Gauge Window Gasket
143599-001	Needle Guard (movable)	146698	Oil Removing Wick (head end) Holder Body Spring	147426	Feed Roll Driving Shaft (horizontal) Bevel Gear with two 462(830)	164132	Oil Reservoir Sight Gauge Window Retainer Gasket
143601	Oil Reservoir Sight Gauge Background Disc	146703	Needle Bar Bushing (lower and upper) Oil Wick Clamp and Retainer	147427	Feed Roll Clutch Shaft Collar with two 460(830)	164133	Oil Reservoir Sight Gauge Window Retainer Gasket
143612	Looper Driving Arm Connection with four 175(830) (for Agents only)	146745	Oil Removing Wick (head end) Holder Body	147429	Feed Roll Clutch Shaft Oil Retainer (felt)	164134	Oil Reservoir Sight Gauge Window Retainer
143613	Looper Driving Arm 139496 and connection with 139070 and four 175(830) (for Agents only)	146790	Arm Rotary Shaft Flanged Bushing (back) Oil Sump Tube with Holder	147430	Feed Roll Driving Shaft (horizontal)	202253	Arm Rotary Shaft Sprocket Wheel Spring Flange(2)
143614	Bed Oil Shield (felt, lower)	146829-001	Arm Top Cover	147431	Feed Roll Driving Shaft (horizontal)	202253	Bed Rotary Shaft Sprocket Wheel Spring Flange
		146830	Arm Top Cover 146829-001 with 140676(819) and 143432	147432	Feed Roll Driving Shaft (horizontal) Bevel Gear Cover	230066	Lap Seam Feller Spring
		146864	Arm Rotary Shaft Bevel Gear, right hand spiral with 140333(830) and two 1259(830)	147432	Feed Roll Driving Shaft (horizontal) Spur Gear	264715	Bed Rotary Shaft Belt
		146908	Needle Bar Connecting Stud Slide Block Guide	147433-001	Feed Roll Driving Shaft (horizontal) Spur Gear Pin (1/2 in. long)		
		146909	Presser Bar	147434	Feed Roll Driving Shaft (horizontal) Spur Gear and Feed Roll Shaft Spur Gear Cover		
		147005-001	Arm Rotary Shaft Flanged Bushing (front) with Drain Tube	147435	Feed Roll Driving Shaft (horizontal) Spur Gear and Feed Roll Shaft Spur Gear Cover Plate		
		147055	Oil Removing Wick (head end) Hinge Plate and Cover Gasket	147437	Feed Roll Driving Shaft (upright)		
		147070	Arm Hole Plug Screw Washer		Feed Roll Driving Shaft (upright) Bevel Gear (lower)		
		147107	Oil Removing Wick (head end)				
		147108	Oil Removing Wick (head end) Holder Body 146745 with 146698 and 147107 (for Agents only)				
		147111-001	Arm Shaft (upright) Bushing (upper)				