



Copyright © 1965 by The Singer Company
All Rights Reserved under Inter-American Copyright Union
Copyright under International Copyright Union

Printed in U. S. A.

LIST OF PARTS FOR 261-41 MACHINE

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
110(803)	Tension (needle thread) Releasing Shaft Crank Connecting Link Hinge Screw (2)	226(805)	Looper Avoiding Eccentric Forked Connection Slide Block Cover Screw (2)	914(803)	Feed Lifting Eccentric Forked Connection Screw (short)
120(805)	Looper Avoiding Eccentric Forked Connection Bracket and Oil Connection Screw (2)	226(809)	Thread (looper) Thread Guide (front of bed) Screw (right)	966(819)	Oil Reservoir Screw (2)
131(805)	Looper Thread Guide Bracket Screw	229(809)	Thread (looper) Thread Guide (intermediate) Bracket Screw (2)	1036(830)	Needle Bar Connecting Link Hinge Stud Position Set Screw
146(813)	Mounting Bracket Screw	229(809)	Thread (needle) Thread Guide (intermediate) Bracket Screw (2)	1047(830)	Looper Driving Arm Connection Link Hinge Pin Set Screw (2)
157(805)	Oil Pump (centrifugal) Body Screw (3)	229(809)	Thread (looper) Thread Guide (front of bed) Cover Catch Screw (2)	1057(830)	Looper Driving Arm Connection Crank Clamping Screw
161(819)	Presser Bar Lifting Lever Extension Screw (2)	229(809)	Thread (needle) Thread Guide (left) Screw (2)	1057(830)	Presser Bar Lifting Bracket Clamping Screw
172(803)	Feed Lifting Eccentric Forked Connection Screw (long)	229(809)	Thread (needle) Thread Guide (right) Screw (2)	1133(805)	Presser Bar Bushing (lower) Set Screw
175(805)	Needle Bar Connecting Stud Clamping Screw	237(805)	Flanged Bushing (back) Oil Sump Tube Holder Screw	1133(830)	Needle Bar Bushing (lower) Set Screw
175(830)	Looper Driving Arm Connection Cap (lower) Screw (2)	237(809)	Thread (looper) Thread Guide Bracket Support Screw (upper)	1133(830)	Needle Bar Bushing (upper) Set Screw
175(830)	Looper Driving Arm Connection Cap (upper) Screw (2)	237(809)	Thread (looper) Take-up Thread Guide (left) Screw	1250(830)	Thread (looper) Take-up Cover Position Screw Stud
175(830)	Thread (looper) Take-up Stripper Plate Bracket Screw (2)	240(809)	Thread (looper) Take-up Thread Separator Thread Retainer Screw	1253(830)	Looper Eccentric Connection Slide Block Stud Collar Screw (2)
176(809)	Slack Thread Controller Clamp Screw	316(803)	Tension (needle thread) Releasing Shaft Stop Screw	1255(805)	Feed Dog Screw
176(809)	Thread (looper) Thread Guide Bracket Screw	376(809)	Tension (needle thread) Bracket Screw	1259(830)	Arm Rotary Shaft Bevel Gear Set Screw (2)
176(809)	Thread (needle) Eyelet (side of arm) Position Screw	430(830)	Tension (looper thread) Body Set Screw	1259(830)	Arm Shaft (upright) Bevel Gear (upper) Set Screw (2)
189(805)	Oil Pump (centrifugal) Screen Frame Screw (3)	443(830)	Feed Bar Hinge Pin Set Screw	1259(830)	Arm Shaft (upright) Collar Set Screw (2)
190(809)	Presser Bar Stop Clamping Screw	443(830)	Looper Holder Shaft Bushing (back) Set Screw	1259(830)	Looper Eccentric and Feed Lifting Eccentric Set Screw (2)
190(809)	Presser Foot Screw	446(830)	Looper Driving Arm Hinge Stud Set Screw	1266(830)	Thread (looper) Take-up Set Screw (2)
193(809)	Needle Guard (movable) Holder Screw	446(830)	Looper Eccentric Connection Slide Block Stud Set Screw	1324(830)	Looper Avoiding Eccentric Forked Connection Crank Clamping Screw
202(806)	Oil and Lint Guard Screw (2)	454(830)	Looper Holder Shaft Bushing (front) Set Screw	1443(802)	Lap Seam Feller Screw (2)
202(809)	Thread (looper) Thread Guide Bracket Support Screw (lower)	456(830)	Looper Eccentric Connection Slide Block Stud Set Screw	1448(830)	Bed Rotary Shaft Belt Guard Set Screw (2)
202(809)	Thread (looper) Thread Guide (front of bed) Cover Lock Spring Screw	456(830)	Looper Thread Guide Bracket Holder Set Screw	1449(809)	Thread (needle) Take-up Plate Spring Screw
202(813)	Bed Rotary Shaft Bushing (left) Cover Gasket Screw (4)	624(830)	Arm Rotary Shaft Thrust Collar Set Screw (2)	1454(830)	Looper Holder Shaft Collar Clamping Screw
203(809)	Thread (looper) Take-up Stripper Screw (2)	624(830)	Tension (needle thread) Releasing Shaft Crank Set Screw	1485(805)	Needle Bar Connecting Stud Slide Block Guide Screw (2)
203(809)	Thread (looper) Thread Tube (belt guard) Seat Screw (3)	662(809)	Lap Seam Feller Spring Screw (2)	1485(809)	Oil Reservoir Sight Gauge Window Retainer Screw (2)
206(809)	Looper Thread Guide Screw	665(809)	Thread (looper) Take-up Stripper Plate Thread Guard Screw (2)	1498(806)	Needle Set Screw (3)
207(809)	Thread (looper) Take-up Stripper Plate Screw (2)	690(806)	Bed Rotary Shaft Belt Guard Cover Screw (2)	1520(803)	Feed Bar Hinge Pin Set Screw Lock Nut
207(809)	Thread (needle) Eyelet Screw	691(806)	Throat Plate Screw (3)	1520(809)	Looper Driving Arm Ball Screw Stud Nut
8208(805)	Oil Reservoir Screen Frame Screw (3)	724(809)	Thread (needle) Eyelet (side of arm) Screw	1547(809)	Tension (needle thread) Releasing Shaft Stop Screw Nut
217(809)	Feed Eccentric Clamping Washer Screw	802(819)	Presser Bar Lifting Lever Hinge Screw	1742(803)	Tension (looper thread) Regulating Thumb Nut (3)
219(809)	Thread (looper) Take-up Thread Guide (right) Screw	807(819)	Presser Bar Lifting Bracket Lifter Hinge Screw	2102	Tension (needle thread) Disc (6)
223(809)	Needle Guard (movable) Screw			2807	Mounting Bracket Screw Washer
				7071	Feed Eccentric Clamping Washer
				7071	Thread (looper) Take-up Thread Guide (right) Screw Washer

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
7071	Thread (needle) Eyelet (side of arm) Position Screw Washer	32355	Looper Driving Arm complete	51282(819)	Looper Gate (left) Lock Spring Screw
10106	Tension (looper thread) Disc (6)	32572	Tension (needle thread) Releasing Disc (3)	51282(819)	Looper Gate (right) Lock Spring Screw
12162	Thread (looper) Thread Guide (front of bed) Cover Hinge Pin (2)	32821	Looper (back), for 1/8"-1/8" or 9/64"-9/64" gauges Note: When ordering No. 32821 state gauge required.	51283(830)	Machine Pulley Set Screw (2)
14442-001	Needle Bar complete, for 1/8"-1/8" gauge, Nos. 128215 and 146573	32824	Looper (front), for 1/8"-1/8" or 9/64"-9/64" gauges Note: When ordering No. 32824 state gauge required.	51362(809)	Presser Foot Plate Leveling Spring Screw
14475	Needle Bar Connecting Link Screw Cap Disc (fiber)	32833	Presser Bar Spring Guide Pin	51369(803)	Looper Driving Arm Hinge Stud Clamping Screw
15405	Number Plate Rivet (2)	34737	Feed Bar Hinge Pin (eccentric)	51369(805)	Oil Lead Screw
15405	Trademark Rivet (2)	49220	Tension (needle thread) Thread Guide (back)	51369(813)	Arm Top Cover Screw (4)
15444	Tension (needle thread) Releasing Shaft Stop Screw 316(803) with 1547(809)	50008(803)	Presser Foot Plate Hinge Screw (2)	51460(805)	Thread (needle) Take-up Clamping Screw
16532	Arm Dowel Pin (2)	50008(803)	Presser Foot Plate and Yielding Heel Connection Hinge Screw (2)	51570(803)	Tension (needle thread) Regulating Thumb Nut (3)
17022	Thread (looper) Take-up Stripper Screw Washer (2)	50008(803)	Presser Foot Yielding Heel Hinge Screw (2)	51581(813)	Mounting Bracket Bolt Nut (4)
20799-002	Needle Bar Bushing (lower)	50123(805)	Oil Pump (centrifugal) Impeller Locking Screw	51614(819)	Pressure Regulating Thumb Screw Nut
20995	Thread (looper) Thread Guide (front of bed) Cover Lock Spring Position Pin	50150(830)	Bed Rotary Shaft Bushing Flanged (right) Spacing Collar Set Screw (2)	54242	Slack Thread Controller Clamp
22794	Machine Mounting Bracket (long)	50150(830)	Looper Avoiding Eccentric Set Screw (2)	54872	Tension (needle thread) Releasing Shaft Crank with 624(830)
22795	Machine Mounting Bracket (short)	50225(809)	Thread Cutter Screw (2)	54988	Tension (needle thread) Releasing Pin (3)
22796	Machine Mounting Bracket (long) Pad	50257(809)	Oil Flow Window Cap Screw (4)	59456	Needle Bar Connecting Stud Slide Block Guide Screw Washer (2)
22797	Machine Mounting Bracket (short) Pad	50326(803)	Tension (needle thread) Screw Stud (3)	59537	Tension (needle thread) Spring Bushing (large) (3)
22840	Presser Foot (triple hinged) complete, for 1/8"-1/8" and 9/64"-9/64" gauges, Nos. 22919, 22920, 22922, 22924, 22925, 51362(809), two 22921 and six 50008(803) Note: For 1/8"-1/8" gauge order Code 501, for 9/64"-9/64" gauge order Code 502. Note: When ordering 22840, Code for gauge required must be stated.	50328(803)	Feed Regulating Screw	59538	Tension (needle thread) Spring Bushing (small) (3)
22919	Presser Foot Plate, for 1/8"-1/8" and 9/64"-9/64" gauges, for 22839 and 22840 Note: For 1/8"-1/8" gauge order Code 501, for 9/64"-9/64" gauge, order Code 502. Note: When ordering 22919, Code for gauge required must be stated.	50342(809)	Thread (looper) Thread Guide (intermediate) Screw (2)	59539	Tension (needle thread) Screw Stud 50326(803) with 51570(803) (3)
22920	Presser Foot Plate Leveling Spring	50342(809)	Thread (looper) Thread Guide (left) Screw (2)	68002	Tension (needle thread) Bracket
22921	Presser Foot Plate and Yielding Heel Connection (2)	50342(809)	Thread (looper) Thread Guide (right) Screw (2)	68003	Tension (needle thread) Releasing Shaft
22922	Presser Foot Shank	50342(809)	Thread (needle) Thread Guide (intermediate) Screw (2)	68008	Thread (needle) Take-up Plate
22924	Presser Foot Yielding Heel Spring	50362(809)	Thread (looper) Thread Guide (front of bed) Screw (left)	68164	Thread (needle) Take-up Plate Spring
22925	Presser Foot Yielding Heel	50411(809)	Thread (looper) Thread Guide (front of bed) Thread Retainer Screw (2)	121449	Lap Seam Feller Clamping Plate
22957	Lap Seam Feller Slide Filler Plate	50422(803)	Bed Rotary Shaft Bushing Flanged (right) Set Screw	121629	Lap Seam Feller on Shank with Yielding Lower Scroll with 230066 and two 662(809), for MH, Special H, H, M, H, and special heavyweight materials, for 3/16" to 3/8" gauges, in steps of 1/32"
26276	Looper Position Pin	50491(805)	Arm Screw (left) (2)		Note: When ordering No. 121629 weight of material and gauges of machine must be stated.
		50504(830)	Arm Shaft (upright) Bushing (upper) Set Screw	128215	Needle Clamp with three 1498(806), for 1/8"-1/8" and 9/64"-9/64" gauges Note: When ordering No. 128215, state gauge required.
		50608(813)	Bed Oil Plug Screw	131696	Tension (needle thread) Thread Guide (front)
		50608(813)	Arm Hole Plug Screw	131741	Tension (needle thread) Spring (3)
		51061(830)	Feed Eccentric Body Set Screw (2)	139017	Bed Oil Plug Screw Washer
		51069(813)	Mounting Bracket Bolt with 51581(813) (4)		
		51282(809)	Thread (looper) Take-up Cover Lock Spring Screw		

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
139017	Arm Hole Plug Screw Washer	139257	Looper Avoiding Eccentric Forked Connection Crank (forked) with 1324(830)	139500	Throat Plate, for 1/8"-1/8" and 9/64"-9/64" gauges for use with 22840 and 139499 Note: When ordering No. 139500 state gauge required.
139030	Bed Rotary Shaft Bushing (left) Cover	139281	Thread (looper) Thread Tube (side of bed)	139509	Feed Bar Hinge Pin (eccentric) Gasket
139035	Bed Rotary Shaft Belt Guard Cover	139315	Thread (looper) Take-up Thread Guide (right) (for one thread)	139509	Looper Driving Arm Hinge Stud Gasket
139036	Bed Rotary Shaft Belt Guard Cover 139035 with 139037	139316	Thread (looper) Take-up Thread Guide (right) (for two threads)	139509	Looper Eccentric Connection Slide
139037	Bed Rotary Shaft Belt Guard Cover Gasket (cork)	139317	Thread (looper) Take-up Thread Separator	139510	Block Stud Gasket
139046	Feed Bar Hinge Pin Slide Block	139318	Thread (looper) Thread Guide (front of bed) with 139321 and two 139320	139510	Feed Bar Hinge Pin (eccentric) Oil Plug
139064	Looper Driving Arm Connecting Link	139319	Thread (looper) Thread Guide (front of bed) Plate with 20995	139510	Looper Driving Arm Hinge Stud Oil Plug
139065	Connecting Link Hinge Pin (2)	139320	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (long) (2)	139510	Looper Eccentric Connection Slide
139074	Looper Eccentric Connecting Slide Block	139321	Thread (looper) Thread Guide (front of bed) Thread Retaining Pin (short)	139519	Block Stud Oil Plug
139097	Looper Holder Shaft Collar with 1454(830)	139322	Thread (looper) Thread Guide (front of bed) Thread Retainer	139519	Thread (looper) Thread Guide (front of bed)
139111	Needle Bar Connecting Stud Slide Block	139323	Thread (looper) Thread Guide (front of bed) complete, Nos. 226(809), 50362(809), 139318, 139319, 139322 and two 50411(809)	139520	Cover Hinge Plate (left) 139172 with 12162
139144	Thread (looper) Take-up with two 1266(830)	139324	Thread (looper) Thread Guide Bracket	139520	Thread (looper) Thread Guide (front of bed)
139145	Thread (looper) Take-up Cover	139325	Thread (looper) Thread Guide Bracket Support	139533	Cover Hinge Plate (right) 139172 with 12162
139146	Thread (looper) Take-up Cover Hinge Pin	139327	Thread (looper) Thread Tube (belt guard) complete. Nos. three 139161 and six 139162	139533	Needle Bar Connecting Link Screw Cap
139147	Thread (looper) Take-up Cover Lock Spring	139330	Thread (looper) Thread Guide (intermediate) Bracket	139534	Looper Driving Arm Hinge Stud
139148	Thread (looper) Take-up Stripper	139330	Thread (needle) Thread Guide (intermediate) Bracket	139535	Looper Eccentric Connection Slide
139152	Thread (looper) Take-up Stripper Plate Thread Guard	139331	Thread (needle) Thread Guide Bracket	140050(809)	Block Stud Collar and Looper Driving Arm
139154	Thread (looper) Take-up Thread Guide (left)	139366	Lap Seam Feller Slide	140061(809)	Hinge Stud Support with 51369(803) and two 1253(830)
139157	Thread (looper) Take-up Thread Separator Thread Retainer	139393	Slack Thread Controller	140061(809)	Face Plate Screw (upper)
139158	Thread (looper) Thread Guide (intermediate)	139395-002	Thread (needle) Take-up with 51460(805)	140061(809)	Face Plate Screw (lower) (3)
139158	Thread (looper) Thread Guide (left)	139396-002	Thread (needle) Take-up complete, Nos. 1449(809), 68008, 68164 and 139395-002	140061(809)	Thread (looper) Thread Guide (front of bed)
139158	Thread (looper) Thread Guide (right)	139419	Machine Pulley "V" belt groove with two 51283(830), for 3/8" "V" belt	140061(809)	Cover Hinge Plate Screw (2)
139158	Thread (needle) Thread Guide (intermediate)	139432	Feed Lifting Eccentric Forked Connection	140180(809)	Thread Guide (front of arm) Screw
139158	Thread (needle) Thread Guide (left)	139462	Presser Bar	140295(803)	Bed Cover Screw (14)
139158	Thread (needle) Thread Guide (right)	139499	Feed Dog, 12 teeth (8 teeth to the inch) Note: When ordering No. 139499, state gauge required.	140296(830)	Arm Rotary Shaft Bushing (center) Set Screw
139161	Thread (looper) Thread Tube (belt guard) (3)			140296(830)	Arm Rotary Shaft Flanged Bushing (back) Set Screw
139162	Thread (looper) Thread Tube (belt guard) Bushing (6)			140298(830)	Arm Shaft (upright) Bushing (lower) Set Screw
139171	Thread (looper) Thread Guide (front of bed) Cover Catch			140331(830)	Arm Rotary Shaft Flanged Bushing (front) Set Screw
139172	Thread (looper) Thread Guide (front of bed) Cover Hinge Plate (2)			140331(830)	Bed Rotary Shaft Bushing (intermediate) Set Screw
139173	Thread (looper) Thread Guide (front of bed) Cover Lock Spring			140331(830)	Bed Rotary Shaft Bushing (left) Set Screw
139174	Thread (looper) Thread Guide (front of bed) Cover Lock Spring Reinforcing Plate			140333(830)	Arm Rotary Shaft Bevel Gear Position Screw
139177	Thread (needle) Eyelet			140359(805)	Arm Rotary Shaft Screw Plug (front)
139181	Thread Cutter (knife)			140409(869)	Bed Rotary Shaft Sprocket Wheel Set Screw (2)
139190	Machine Cushion (2)				

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
140440(819)	Needle Bar Bushing (upper) Oil Plug Screw	143454-001	Looper Avoiding Eccentric with two 50150(830)	143514	Tension (looper thread) Spring (3)
140542(830)	Needle Bar Crank Position Screw	143455	Looper Avoiding Eccentric Forked Connection	143515	Tension (looper thread) Screw Stud 141002(803) with 1742(803) (3)
140552(830)	Needle Bar Connecting Link Hinge Stud Clamping Screw	143456	Looper Avoiding Eccentric Forked Connection Bracket with 456(830)	143517	Thread (looper) Take-up Stripper Plate
140999(813)	Bed Cover Hole Plug Screw	143457	Looper Avoiding Eccentric Forked Connection Bracket Oil Connection	143518	Thread (looper) Take-up Stripper Plate Bracket
141002(803)	Tension (looper thread) Screw Stud (3)	143458	Looper Avoiding Eccentric Forked Connection Slide Block	143521	Thread (looper) Thread Guide (front of bed) Cover
141005(830)	Looper Clamping Screw	143459	Looper Avoiding Eccentric Forked Connection Slide Block Cover (back)	143522	Thread (looper) Thread Guide (front of bed) Cover 143521 with 139171 and two 229(809)
141008(819)	Pressure Regulating Thumb Screw	143460	Looper Avoiding Eccentric Forked Connection Slide Block Cover (front)	143524	Thread Cutter Support and Thread Guide
141139(869)	Oil Reservoir Drain Plug	143462	Looper Eccentric Connection with Bushing and 1047(830)	143542	Oil Reservoir Screen Frame
141146(869)	Arm Rotary Shaft Sprocket Wheel Set Screw (2)	143463	Looper Eccentric Connection Slide Block Stud	143543	Face Plate Gasket
141158(869)	Looper Holder Clamping Screw	143468	Looper Gate (left)	143548	Looper Thread Guide Bracket
141403(819)	Arm Hole Plug Screw	143469	Looper Gate (left) 143468 with 143470 and 51282(819)	143551	Looper Holder Shaft Bushing (back) Oil Seal (rubber)
143015	Arm Shaft (upright) Bevel Gear (upper) left hand spiral with two 1259(830)	143470	Looper Gate (left) Lock Spring	143552	Looper Holder Shaft Bushing (back) 143485 with 143551
143061	Oil Flow Body Gasket (2)	143475	Looper Gate (right)	143556	Looper (intermediate)
143062	Oil Flow Window	143476	Looper Gate (right) 143475 with 143477 and 51282(819)	143557	Looper Holder with 26276 and 141158(869)
143063	Oil Flow Window Cap	143477	Looper Gate (right) Lock Spring	143558	Looper Holder Bushing (eccentric)
143065	Oil Pipe Clamping Sleeve	143478	Looper Gate Hinge Pin (2)	143559	Looper Thread Guide
143066	Oil Pipe Clamping Sleeve Nut	143479	Looper Gate Hinge Screw Stud (2)	143560	Looper Thread Guide Bracket Holder
143071	Oil Pump (centrifugal) Body Position Pin (2)	143480	Looper Gate Position Pin (2)	143567	Tension (looper thread) Body
143073	Oil Pump (centrifugal) Impeller	143484	Looper Holder Shaft	143568	Tension (looper thread) complete, Nos. 143567, three each 143514 143515 and six 10106
143124	Oil Pipe Clamping Sleeve (7)	143485	Looper Holder Shaft Bushing (back)	143569	Tension (needle thread) Thread Guide (center)
143125	Oil Pipe Clamping Sleeve Nut (7)	143486	Looper Holder Shaft Bushing (front)	143570	Thread Guide (front of bed)
143126	Oil Pipe Clamping Sleeve Adapter (3)	143492	Needle Bar Bushing (lower and upper)	143571	Thread (needle) Eyelet (side of arm)
143236	Arm Rotary Shaft Screw Plug (front) Washer (fiber)	143494-002	Oil Wick Guide Tube (arm)	143579	Thread (looper) Take-up Stripper Plate Bracket 143518 with 219(809), 237(809), 240(809), 7071, 51282(809), 139145, 139146, 139147, 139148, 139152, 139154, 139157, 139315, 139316, 143517, two each 203(809), 207(809), 665(809) and 17022
143370	Oil Lead	143499	Needle Bar Connecting Link, Connecting Stud and Hinge Stud with 14475 and 139533	143599-001	Needle Guard (movable)
143430	Arm Shaft (upright)	143501	Oil and Lint Guard	143601	Oil Reservoir Sight Gauge Background Disc
143431	Arm Shaft (upright) Collar with two 1259(830)	143503	Oil Pipe with 143124 and 143125	143612	Looper Driving Arm Connection with four 175(830) (for Agents only)
143433	Bed Cover with insert and reinforcing Plate	143504	Oil Pipe for 143504	143614	Bed Oil Shield (felt, lower)
143434	Bed Cover Gasket (cork)	143508	Oil Pipe complete, 143403 with 143065 and 143066 (for Agents only)	143616	Needle Guard (movable) Holder
143435	Bed Cover Hole Plug Screw Gasket	143509	Oil Reservoir Gasket	143618	Arm Rotary Shaft Sprocket Wheel and Hub with two each 141146(869) and 202253
143437	Bed Rotary Shaft Belt Guard with two 1448(830)	143510	Oil Reservoir Screen	143619	Needle Bar Connecting Stud Oil Wick (felt)
143444	Bed Rotary Shaft Bushing Flanged (right) with plug	143511-001	Presser Bar Lifting Lever	143620	Oil Pipe with 143124 and 143125
143445	Bed Rotary Shaft Bushing Flanged (right) Spacing Collar with two 50150(830)				
143446	Bed Rotary Shaft Sprocket Wheel with 202253 and two 140409(869)				
143447-001	Face Plate with medallion				
143448	Feed Bar				
143449	Feed Eccentric (adjustable) complete, Nos. 217(809), 7071, 50328(803) and two 51061(830)				
143450	Feed Eccentric Slide Block				
143451	Feed Lifting Eccentric Forked Connection Slide Block				

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
143621	Looper Eccentric and Feed Lifting Eccentric with two 1259(830)	146703	Needle Bar Bushing (lower and upper) Oil Wick Clamp and Retainer
143622	Oil Return Tube	146751	Presser Bar Bushing (lower)
143624	Arm Rotary Shaft Sprocket Wheel Oil Retaining Ring	146752	Presser Bar Stop with 190(809)
143626	Oil Reservoir complete, Nos. 141139(869), 143509, 143542, 143601, 164133, 164134, two each 1485(809), 164132 and three 208(805)	146790	Arm Rotary Shaft Flanged Bushing (back) Oil Sump Tube with holder
143635	Arm Rotary Shaft with 1036(830), 140542(830), and Crank	146804	Needle Bar Bushing (lower and upper) Oil Wick
143637	Arm Rotary Shaft 143635 with 140359(805), 143236 and 143494-002	146805	Needle Bar Bushing (lower and upper) Oil Wick complete, Nos. 146703, 146804 and two 13994
143641	Arm Rotary Shaft Flanged Bushing (back)	146829-001	Arm Top Cover
143642	Bed Rotary Shaft	146864	Arm Rotary Shaft Bevel Gear, right hand spiral with 140333(830) and two 1259(830)
143643	Bed Rotary Shaft Bushing (left) Cover "O" Ring	146908	Needle Bar Connecting Stud Slide Block Guide
143644	Bed Rotary Shaft Bushing (left)	147070	Arm Hole Plug Screw Washer
143645	Bed Rotary Shaft Bushing (intermediate)	147111-001	Arm Shaft (upright) Bushing (upper)
143646	Bed Cover Reinforcing Plate Gasket	147468	Arm Rotary Shaft Thrust Collar with two 624(830)
143647	Oil Pipe with two each 143124 and 143125	152503	Arm Rotary Shaft Bushing (center)
143648	Oil Tube Connection	156772	Oil Removing Tube (head end)
143649	Oil Pipe and two each 143124 and 143125	158045	Arm Rotary Shaft Sprocket Wheel Spacing Washer
143650	Bed Rotary Shaft Bushing (left) Oil Tube with 143124 and 143125	158240	Oil Removing Tube (head end) Screen
146159	Presser Bar Spring	164132	Oil Reservoir Sight Gauge Background Disc Gasket
146505	Arm Shaft (upright) Bushing (lower)	164132	Oil Reservoir Sight Gauge Window Gasket
146508	Arm Top Cover Gasket	164133	Oil Reservoir Sight Gauge Window
146552	Arm Screw (right) (2)	164134	Oil Reservoir Sight Gauge Window Retainer
146573	Needle Bar (hollow)	175032	Presser Bar Spring Washer
146576	Needle Bar Bushing (upper)	202253	Arm Rotary Shaft Sprocket Wheel Spring Flange (2)
146580	Needle Bar Bushing (lower and upper) Oil Wick Clip (2)	202253	Bed Rotary Shaft Sprocket Wheel Spring Flange
146591	Oil Flow Body	230066	Lap Seam Feller Spring
146600	Oil Pump (centrifugal) Cover	264715	Bed Rotary Shaft Belt
146609	Presser Bar Lifting Lever Extension	Cat.No. 3651	Needle (Size No. 22)
146620	Tension (needle thread) Releasing Shaft Crank Connecting Link		
146657	Oil Pump (centrifugal) Screen		
146658	Oil Pump (centrifugal) Screen Frame		
146659	Oil Pump (centrifugal) Body		
146660	Oil Pump (centrifugal) Body 146659 with three 143126		
146672	Arm Rotary Shaft Flanged Bushing (front) with drain tube		
146676	Presser Bar Lifting Bracket Lifter		
146694	Presser Bar Lifting Bracket with 1057(830)		