


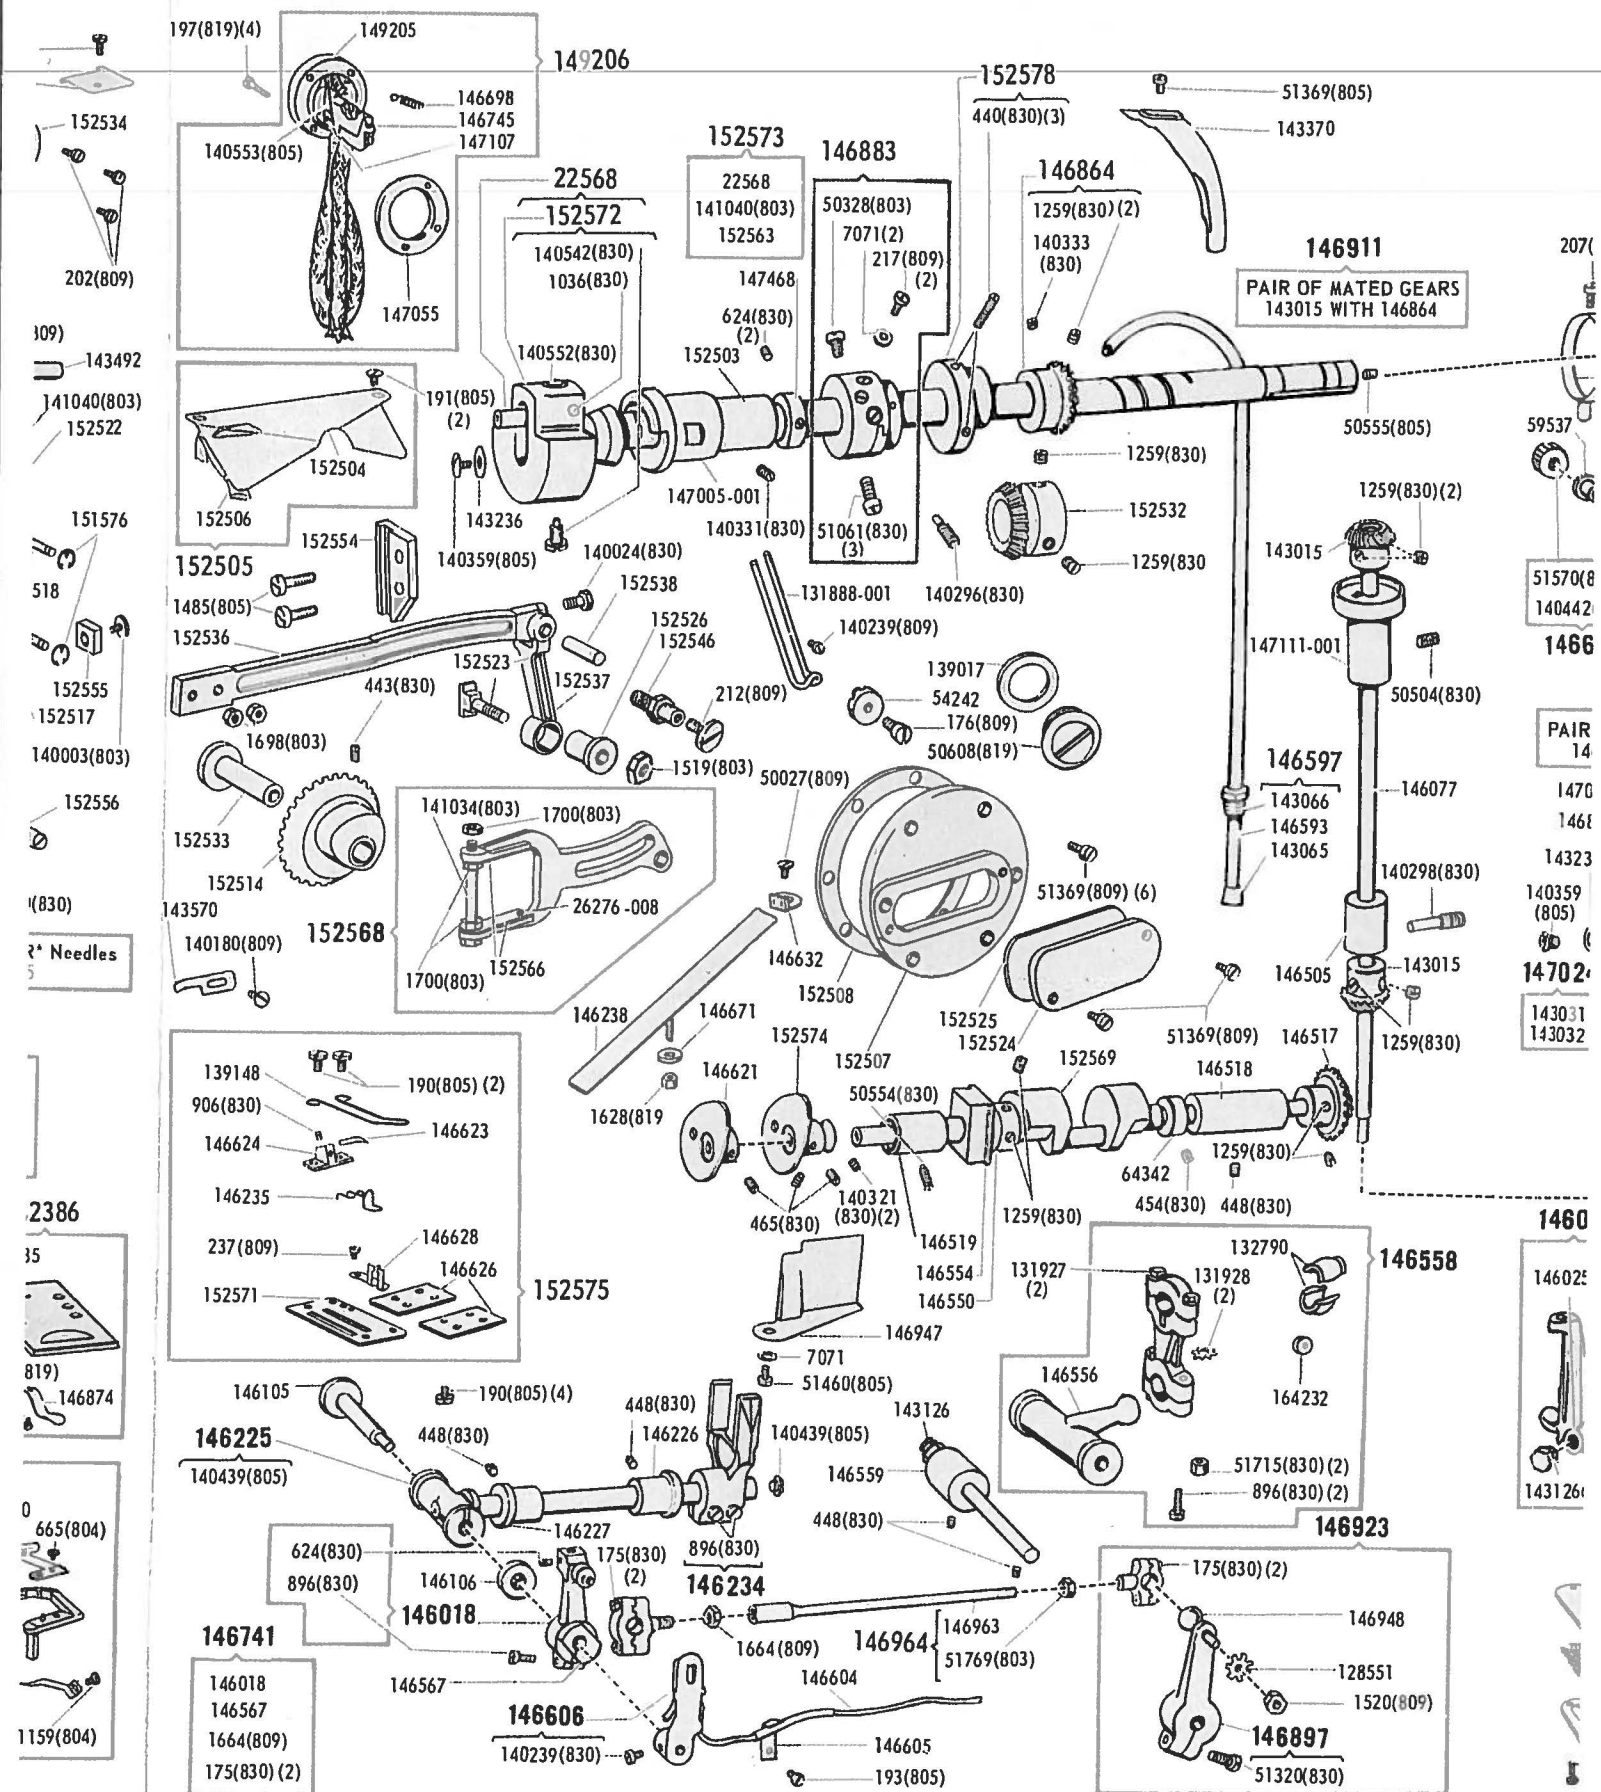

NUMERICAL LIST OF PARTS MACHINE 263-1

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
72(803)	Hinge Screw (2)	1700(803)	Clamping Screw Nut (3)	139017	Plug Screw Washer
82(803)	Hinge Screw	1735(803)	Hinge Screw Nut	139148	Stripper Staple (right)
110(803)	Hinge Screw (3)	2102	Tension Disc (4)	139158	Thread Guide
144(804)	Arm Shaft Screw (back)	4307	Slide Spring	139462	Presser Bar
157(805)	Screw (3)	7071	Washer (4)	139533	Connection Cap
157(809)	Feed Dog Screw	15444	Stop Screw 316 with 1547	140003(803)	Slide Block Screw
157(819)	Clamping Screw	16532	Arm Dowel Pin (2)	140024(830)	Clamping Screw
158(805)	Clamping Screw (2)	21125-001	Releaser Slide	140050(809)	Face Plate Screw (upper)
161(819)	Extension Screw (2)	22568	Arm Shaft (horizontal)	140061(803)	Clamping Screw
175(830)	Cap Screw (4)	152572	with stud	140061(809)	Face Plate Screw (lower)(3)
176(805)	Clamping Screw (2)	22649	Thread (needle) take-up with	140180(809)	Guide Screw
176(809)	Screw (3)	147079		140228(830)	Clamping Screw (2)
189(805)	Frame Screw (3)	26276	Hinge Pin	140230(803)	Hinge Screw (2)
190(805)	Plate Screw (4)	26276-008	Liner Pin (2)	140239(809)	Position Screw
190(809)	Screw (7)	32572	Releasing Disc	140239(830)	Screw (2)
191(805)	Oil Shield Screw (2)	50027(809)	Guide Screw	140275(803)	Lever Screw (2)
193(805)	Bracket Screw	50123(805)	Locking Screw	140296(830)	Set Screw (2)
197(805)	Plate Screw (2)	50150(830)	Set Screw	140298(830)	Set Screw
197(819)	Screw (4)	50257(819)	Cap Screw (4)	140321(830)	Screw (2)
202(809)	Cover Screw (3)	50258(805)	Cap Screw (long)	140331(830)	Set Screw
207(805)	Tube Holder Screw	50326(803)	Screw Stud	140333(830)	Position Screw
212(809)	Cap Screw	50328(803)	Feed Regulating Screw	140359(805)	Plug Screw (3)
217(809)	Screw (3)	50504(830)	Set Screw	140439(805)	Oil Plug Screw
223(805)	Cap Screw (3)	50554(830)	Set Screw	140442(803)	Screw Stud
225(819)	Stud Hole Plug	50555(805)	Plug Screw	140443(809)	Bracket Screw
228(805)	Wick Holder Screw (3)	50579(809)	Wick Holder Screw	140542(830)	Position Screw
229(809)	Screw (3)	50579(819)	Guide Screw	140552(830)	Clamping Screw
231(805)	Oil Plug Screw	50608(819)	Arm Hole Plug Screw	140553(805)	Hinge Screw
237(809)	Plate Screw	51061(830)	Set Screw (3)	140695(819)	Stop Screw
316(803)	Stop Screw	51159(804)	Retainer (bottom) Screw	141001(818)	Thumb Screw
440(830)	Set Screw (3)	51282(819)	Spring Screw	141034(803)	Clamping Screw
443(830)	Set Screw	51283(830)	Set Screw (2)	141040(803)	Retaining Screw
448(830)	Set Screw (5)	51320(830)	Clamping Screw	141139(869)	Drain Plug
454(830)	Set Screw	51369(805)	Oil Lead Screw	142385	Attachment Slide
460(830)	Set Screw (6)	51369(809)	Screw (8)	142386	Attachment Slide complete,
465(830)	Set Screw (3)	51369(805)	Screw (8)	51282, 142385 and 146874	
624(830)	Set Screw (8)	51460(805)	Oil Shield Screw	143015	Bevel Gear, with two
665(804)	Retainer (side) Screw	51570(803)	Thumb Nut (2)	1259 (2)	
665(830)	Insert Screw	51614(818)	Thumb Screw Nut	143024	Bed Hole Plug
691(806)	Throat Plate Screw (2)	51715(830)	Screw Stud Nut (2)	143031	Oil Wick (felt)
724(809)	Eyelet Screw	51769(803)	Pitman Rod Nut	143032	Wick Holder
725(819)	Spring Screw (2)	52266	Slide Block	143039	Cap
802(819)	Hinge Screw	52267	Slide Block 52266 with	143040	Connecting Rod
807(819)	Hinge Screw	125060		143049	Connecting Rod
896(830)	Screw (5)	54045	Tension Bracket	143052	Wick Holder
906(830)	Set Screw	54046	Releasing Shaft	143061	Gasket (2)
910(830)	Set Screw (2)	54242	Controller Clamp	143062	Oil Flow Window
914(809)	Thread Guard Screw	54872	Crank with 624	143063	Window Cap
965(805)	Bed Leg Screw (back) (2)	54988	Releasing Pin	143065	Clamping Sleeve
1036(830)	Set Screw	59537	Spring Bushing (large) (2)	143066	Sleeve Nut
1057(830)	Clamping Screw	59538	Spring Bushing (small) (2)	143071	Position Pin (2)
1133(830)	Set Screw	59539	Screw Stud 50326 with	143073	Impeller
1259(830)	Set Screw (12)	51570		143124	Clamping Sleeve (4)
1470(819)	Screw (4)	64342	Collar with 454	143125	Sleeve Nut (4)
1485(805)	Guide Screw (2)	125060	Hinge Stud	143126	Sleeve Adaptor (4)
1518(809)	Hinge Screw Nut (2)	128551	Locking Plate	143236	Washer (fiber) (3)
1519(803)	Stud Nut	131696	Thread Guide (2)	143370	Oil Lead
1520(809)	Screw Stud Nut	131740	Tension Spring	143492	Wick Guide Tube (in arm)
1547(809)	Stop Screw Nut	131741	Tension Spring	143510	Lifting Lever
1607(819)	Stop Screw Nut	131888-001	Slack Thread Controller	143511-001	Lever Spring
1628(819)	Screw Stud Nut	131927	Screw Stud (2)	143512-001	Presser Bar Spring
1664(809)	End Bearing Nut	131928	Lock Washer (2)	143570	Thread Guide
1695(809)	Set Screw Nut	132790	Ball Sleeve (two pieces)	146018	Looper Holder with 896
1698(803)	Lever Screw Nut (2)				and 624

NUMERICAL LIST OF PARTS MACHINE 263-1

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
146022	Oil Pipe with two each 143124 and 143125	146244	Rock Shaft Crank (front) 146689 with 50579, 52267, 146539 and 146881	146691	Slide Spring
146024	Oil Pump Body 146659 with 146025 and two 143126	146245	Position Pad (felt)	146693	Oil Return Wick
146025	Plug	146505	Bushing (lower)	146694	Guide Bracket with 1057
146077	Arm Shaft (upright)	146512	Machine Pulley (disc, power) "V" belt groove (outside diam. groove 2.9") with two 51283	146698	Spring
146078	Bed Leg (back)	146517	Bevel Gear with two 1259	146730	Pitman End Bearing (left) with two 175
146079	Bed Leg (front, long)	146518	Bushing (back)	146741	Looper Holder 146018 with 1664, 146567 and two 175
146091	Feed Rock Shaft	146519	Bushing (front)	146743	Bracket
146092	Feed Rock Shaft complete, 197, 140359, 143236, 146091, 146891, 146896, 147047 and suitable length of #1229 white lighter wicking	146521	Bed Slide (left)	146745	Wick (head end) Holder Body
146094	Crank with 140228	146522	Bed Slide (left) complete, 4307, 146521 and two 725	146751	Bushing (lower)
146095	Lifting Rock Shaft	146539	Wick Holder	146752	Stop with 190 (NOT Regularly Furnished)
146096	Lifting Rock Shaft complete, 197, 140359, 143236, 146095, 146891, 146892, 147047 and suitable length of #1229 white lighter wicking	146550	Looper Avoiding Eccentric two 1259	146790	Oil Sump Tube
146097	Bushing (front)	146551	Arm Screw Stud (back) (2)	146792	Tension (looper thread) Releaser
146098	Cap	146552	Arm Screw (front) (2)	146793	Fastening Plate
146099	Rock Shaft Crank (back) with 140228	146554	Slide Block	146795	Tension Uncurler
146105	Hinge Pin	146555	Ball Crank	146796	Uncurler Plate (back)
146106	Spacer	146557	Crank Connection with two 131928 (For Agents only)	146797	Uncurler Plate (front)
146108	Needle Guard	146558	Crank Connection with 132790, 146556, 164232 and two 131928 (For Agent only)	146864	Bevel Gear with 140333 and two 1259
146109	Needle Guard Holder	146559	Hinge Pin	146870	Gasket
146110	Oil Pipe with two each 143124 and 143125	146567	Bushing (eccentric)	146874	Spring
146111	Lever Extension	146580	Oil Wick Clip (2)	146881	Oil Wick
146115-001	Tension (looper thread) Releaser, 82, 1735, 21125-001, 146620, 146792, 146793, 146795, 146796, 146797 and two 72	146591	Oil Flow Body	146883	Feed Eccentric (adjustable) complete, 50328, two each 217 and 7071 and three 51061
146117	Thread Guard 147079	146593	Oil Pipe	146889	Crank (front) with 157
146125	Needle Bar with 140239	146597	Oil Pipe complete (from Pump to Horiz. Arm Shaft Center Bearing), 146593 with 143065 and 143066 (For Agents only)	146891	Oil Wick (2)
146126	Needle Bar complete, 50579, 146125 and 146962	146600	Oil Pump Cover	146892	Oil Wick (long)
146129	Bed Slide (right) Body	146604	Oil Wick	146896	Oil Wick (long)
146133	Bed Slide (right) Latch complete, 146129, 146688 to 146691 and four 1470, for Throat Plates with .116 off-set	146605	Wick Holder	146897	Crank Arm with 51320
146148	Machine Base and Oil Reservoir 141139(869)	146606	Position Bracket with 140239	146911	Pair of Mated Gears 143015 and 146864 (For Agents only)
146150	Gasket (left)	146612	Guide Pin	146919	Pitman Head (right) with 146948 and two 175 (For Agents only)
146151	Machine Base and Oil Reservoir	146616	Pair of Mated Gears 143015 and 146517 (For Agents only)	146923	Crank Arm 146897 with 1520, 128551, 146948 and two 175
146225	Rock Shaft with 140439	146618	Screw Stud 140442 with 51570	146947	Oil Shield
146226	Bushing (back)	146620	Connecting Link (2)	146948	Screw Stud (right)
146227	Bushing (front)	146621	Take-up (right) with 465	146962	Thread Guide
146234	Eccentric Connection (forked) with two 896	146623	Take-up Stripper	146963	Pitman Rod
146235	Stripper Staple (left)	146624	Stripper Holder with 906	146964	Pitman Rod 146963 with 51769
146238	Thread Tube	146626	Support Plate (2)	147005-001	Flanged Bushing (front)
146240	Feed Bar	146628	Thread Guide (right)	147022	Feed Bar Carrier with two 158 and 176
146241	Feed Bar 146240 with 1607 and 140695	146629	Guide Bracket	147023	Hinge Pin
146243	Feed Bar Assembly, 146241 and 146244 (For Agents only)	146632	Thread Guide	147024	Wick Holder 143032 with 143031
		146640	Machine Pad (felt)	147028	Bushing (back) (2)
		146657	Screen	147029	Collar with two 460 (2)
		146658	Screen Frame	147037	Oil Wick (short) (2) (For Agents only)
		146659	Oil Pump Body	147042	Bushing (front)
		146671	Washer	147045	Oil Wick (short) (2) (For Agents only)
		146676	Bracket Lifter	147047	Wick Clamping Plate (2)
		146688	Latch	147055	Gasket
		146689	Latch Guide	147079	Thread Eyelet Bushing
		146690	Latch Spring		

NUMERICAL LIST OF PARTS MACHINE 263-1

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
147107	Oil Removing Wick (head end)	152548†	Throat Plate complete, for 1/16" Regular, 3/32", 1/8" bight, 665, 152547 and 152551		ACCESSORIES
147108	Wick (head end) Holder Body 146745 with 146698 and 147107 (For Agents only)	152549	Screw Cap	12361	Machine Hinge Connection (2)
147111-001	Bushing (upper)	152550	Arm Top Cover and Screw Cap complete, 146870, 152509 and 152549	151559	Rest Pad (rubber) (4)
147112-001	Flanged Bushing (back)			232333(805)	Rest Pad Nail 5/8" #17 barbed (flat head) (4)
147468	Thrust Collar with two 457	152551†	Throat Plate Insert for 1/16" Regular, 3/32", 1/8" bight	41400	Rest Pin
149205	Hinge Plate and Cover			120344	Oiler (not filled)
149206	Wick (head end) Holder Body complete, 140553, 146698, 146745, 147055, 147107 and 149205	152552	Thread Eyelet	121741	1 Qt. Can Oil
		152553	Cover	120341	Tweezers
151560	Machine Pad (felt, left back)	152554	Slide Block Guide		
151561	Machine Pad (felt, left front)	152555	Slide Block	151109	Thread Unwinder complete
151576	Retaining Ring (4)	152556	Contact Pin		KNEE LIFTER
152503	Bushing (center)	152557†	Presser Foot Plate for 1/16" Regular, 3/32", 1/8" bight	146168	Chain, 13-1/2" long with two hooks
152504	Oil Shield	152558	Presser Foot Shank with 910 and 1695	12501	Pulley
152505	Oil Shield 152504 with 152506	152559†	Presser Foot (hinged) complete for 1/16" Regular, 3/32", 1/8" bight, 26276, 152557 and 152558	141054(850)	Pulley Hinge Screw Stud
152506	Oil Wick			1608(850)	Stud Nut
152507	Arm Side Cover	152563	Connection Link 152517 with 139533, 140003, 152519, 152520, 152522, 152555, two 152518 and four 151576	146169	Rock Shaft
152508	Gasket			146171	Crank Collar with two set screws
152509	Arm Top Cover	152565	Needle Bar Frame 152529 with 229, 146580, 152541 and 152543	143283	Knee Arm
152510	Gasket			147489	Knee Arm Hub with two screws
152512	Face Plate	152566	Regulator Liner (2)	2767	Arm Plate with set screw
152513	Gasket	152568	Regulator (forked) with 141034, two each 26276-008, 152566 and three 1700	146236	Lifting Lever with set screw
152514	Bevel Gear and Cam	152569	Bed Rotary Shaft	146768	Spring
152517	Connecting Link	152571	Stripper Plate	1115(819)	Spring Screw
152518	Hinge Pin (2)	152572	Arm Shaft (horiz.) with 1036, 140542 and Crank	147483	Stop Dog with clamping screw (2)
152519	Connecting Stud with 140061	152573	Arm Shaft (horiz.) 22568 with 141040 and 152563		
152520	Stud Connection	152574	Take-up (left) with two 465		
152521	Looper Thread Retainer (bottom)	152575	Stripper Plate 152571 with 237, 139148, 146623, 146624, 146626, 146628 and two 190		
152522	Crank Connection	152576	Bed Rotary Shaft 152569 with 132790, 146556, 164232 and two 131928 (For Agents only)		
152523	Adjusting Stud				
152524	Adjusting Stud Cover	152578	Feed Lifting Eccentric with three 440		
152525	Gasket	152579	Combination: Feed and Stitch Regulator 143015, 143040, 143049, 146864, 146883 and 152578 (For Agents only)		
152526	Stud Sleeve				
152529	Needle Bar Frame				
152532	Pinion with two 1259				
152533	Gear Stud				
152534	Gear Stud Cover				
152535	Gasket				
152536	Driving Lever with 140024				
152537	Driving Lever Connection				
152538	Connection Pin				
152539	Hinge Pin (eccentric)				
152540	Looper Thread Retainer (side)				
152541	Oil Wick with 146580				
152543	Wick Clamp (intermediate)				
152544	Feed Dog, 17 teeth (16 teeth to inch) Regularly furnished				
152546	Hinge Stud				
152547†	Throat Plate (small needle hole) for 1/16" Regular, 3/32", 1/8" bight				
	†State Bight Required				
		152580	Looper		
		152581	Looper 152580 with 665, 51159, 152521 and 152540		
		164232	Sleeve Guide		

STYLE OF FINISH:

When ordering screws, nuts and similar parts include new code numbers which follow parts numbers on illustrations and in the List of Parts.

NEW CODE	OLD CODE	FINISH
803	C	Hardened only
804	D	Polished only
805	E	Soft, not polished
806	F	Hardened and polished
809	J	Nickel plated only
813	R	Phosphate coating formed on surface of iron or steel
818	W	Polished and nickel plated
819	X	Black oxide for iron and steel
823	A. B.	Hardened, polished, buffed and chromium plated
830	A. L.	Heat treated for toughness
850	X. C.	Hardened and black oxide for iron and steel
869	-	Commercial finish for "ALLEN" type screws