



SINGER®

PARTS FOR 269W108 MACHINE

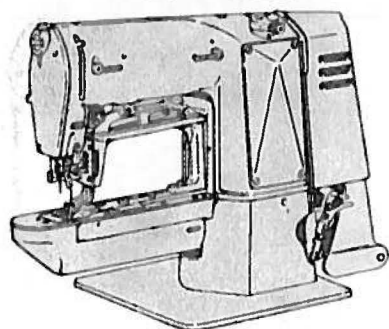

WITH SUPPLEMENTAL LISTS FOR MACHINES
269W105, 107, 109, 111, 112, 114, 117, 126, 138 AND 139

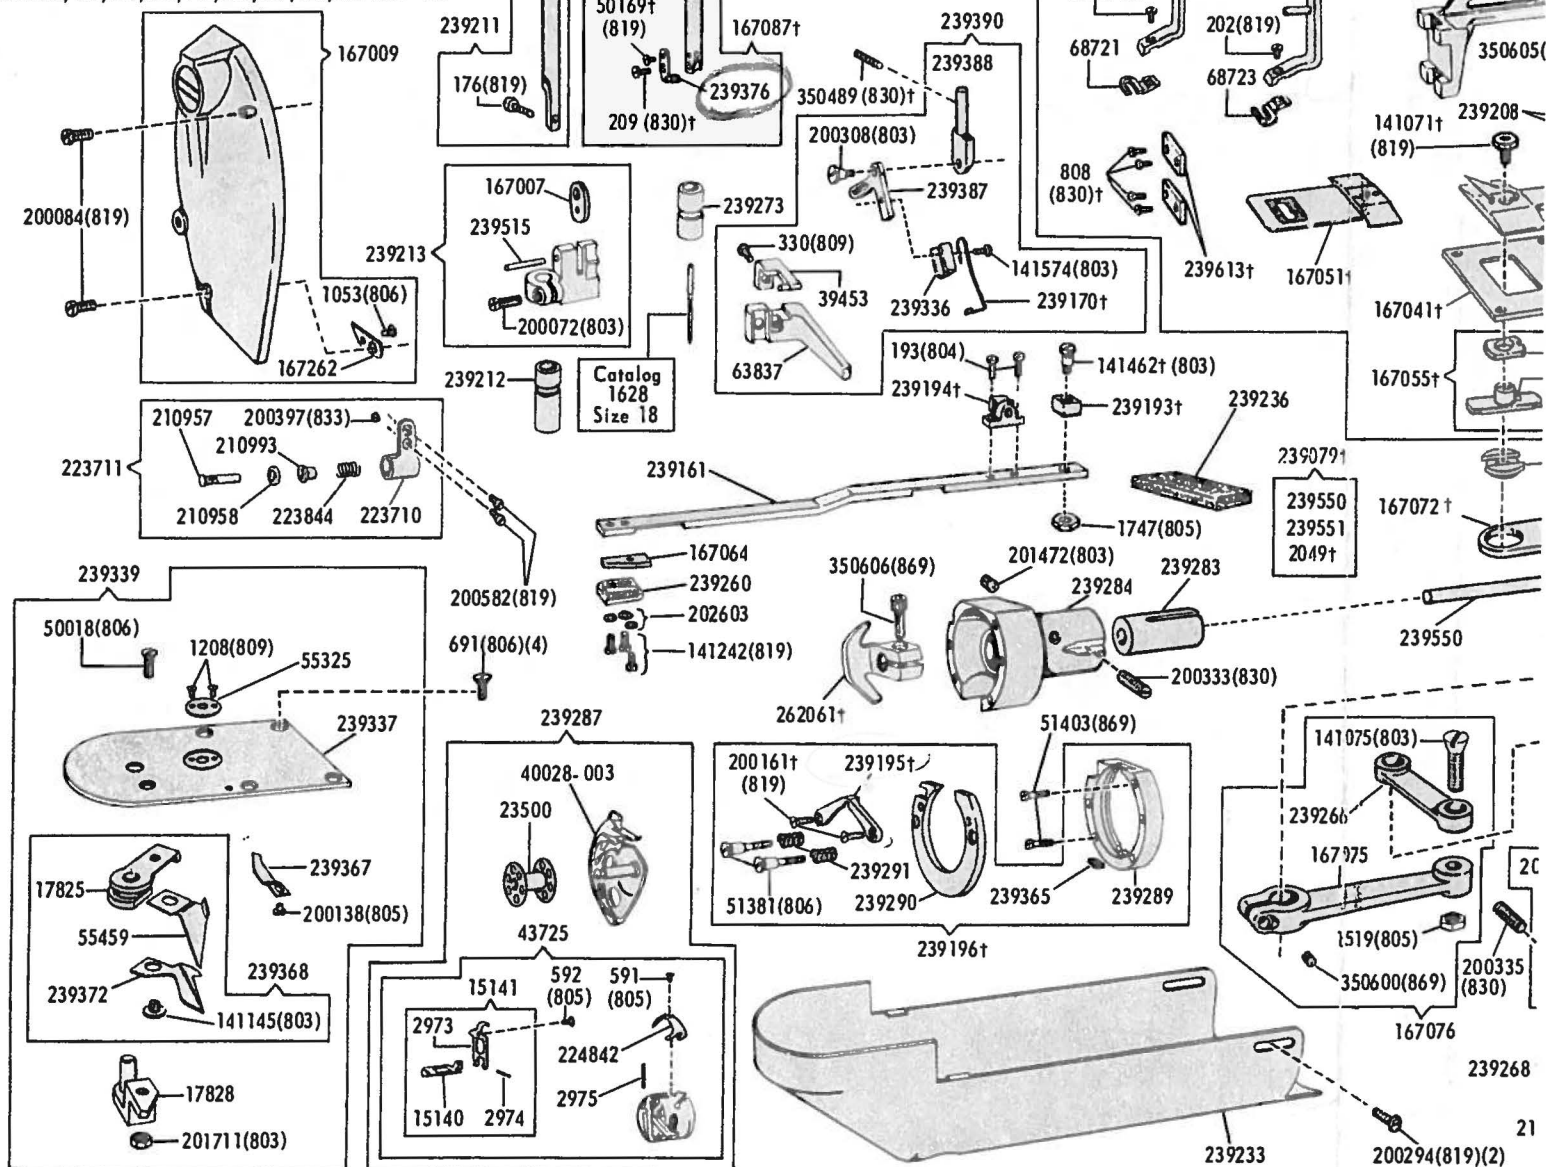

†Latest number for this part. See coded alphabetical list for earlier numbers.
*A Trademark of THE SINGER COMPANY

**NUMERICAL LIST OF PARTS
MACHINE 269W108**

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
171(830)	Adjusting Screw Pinch Screw	32377	Oscillating Shaft Crank Slide Block complete, Nos. 19448, 32376 and 141412	141407(869)	Worm Position Screw
175(830)	Pinch Screw			141407(869)	Worm Gear Position Screw
176(819)	Arch Clamp Foot Lifter Screw	32572	Tension Releasing Disc	141408(869)	Worm Gear Set Screw
193(804)	Knife Bar Connection Screw (2)	37310	Roller Screw Stud Washer (2)	141408(869)	Worm Set Screw
201(804)	Bracket Stud Screw	39453	Thread Wiper Body Finger	141412(803)	Slide Block Screw Stud
202(819)	Arch Clamp Foot Screw (2)	39653	Oscillating Rock Shaft Shuttle Body	141448(803)	Knife Actuating Lever Screw
209(833)	Needle Set Screw	40028-003	Shuttle Bobbin Case complete, Nos. 591(805), 592(805), 2975, 15141 and 224842	141449(803)	Pawl Hinge Screw
330(809)	Thread Wiper Body Finger Screw	43725		141450(803)	Bell Crank Hinge Screw
418(804)	Thread Tension Stud			141462(803)	Slide Block Screw
423(830)	Stop Screw			141560(805)	Feed Plate Screw Stud
460(830)	Collar Set Screw (2)	50018(806)	Bracket Screw	141574(803)	Clamping Plate Screw
462(830)	Adjusting Stud Set Screw	50169(819)	Thread Guide Screw	141575(803)	Spring Adjusting Screw (2)
591(806)	Regulating Screw	50356(804)	Spindle Housing Screw	141576(803)	Tension Stud
592(805)	Latch Lever Stop Screw	50446(803)	Hinge Screw	167001	Arch Clamp Frame (universal) with two 239208
691(819)	Cover Plate Screw (6)	50628(809)	Plate Screw	167004	Lifting Rock Shaft with 141059(830)
691(806)	Throat Plate Screw (4)	50650(803)	Cap Screw	167006	Lifting Arm with 350604(869)
808(830)	Retaining Plate Screw (4)	51119(805)	Lever Arm Screw	167007	Lifting Link
808(830)	Rubbing Block Screw	51381(805)	Spring Screw (2)	167009	Arm Cover (front) with 1053(806) and 167262
858(830)	Crank Set Screw	51403(869)	Screw (2)	167012	Arm Shaft Bushing (back)
896(830)	Cap Screw (2)	51657(805)	Lock Nut	167013	Arm Shaft Bushing (back) 167012 with 53618(805), 141128(833) 202299, 239374 and two 239383
908(803)	Hinge Screw	51948	Follower Arm Roller with 1521(805) and 225837	167041	Cylinder Cover Plate (top)
1053(806)	Knife Screw	51951	Cam Follower Roller and Screw Stud with 1655(803), 5968 and 37310 (2)	167048	Screw Stud (2)
1065(830)	Crank Position Screw			167049	Arm Shaft Bushing (center)
1208(809)	Bushing Screw (2)	52082	Thread Take-up Spring	167050	Supporting Gear Bracket
1513(819)	Stud Lock Nut	52454	Thread Retainer (front)	167051	Feed Plate
1518(805)	Arm Stop Rod Nut (2)	53612(805)	Screw Stud Nut (2)	167052	Feed Plate Carrier Bar with two 239448
1519(805)	Driving Link Screw Nut	53617(805)	Swivel Stud Nut	167055	Driving Block complete
1521(805)	Screw Stud Nut	53618(805)	Support Screw Lock Nut	167062	Driving Lever with 350604(869)
1560(803)	Tension Thumb Nut	55325	Throat Plate Needle Hole Bushing (46 drill needle hole)	167064	Adjusting Block
1562(819)	Tension Thumb Nut	55459	Knife (shuttle thread)	167072	Connecting Arm
1620(819)	Housing Screw Nut	63837	Arch Clamp Foot Lifter	167075	Driving Arm with 350600(869)
1636(805)	Screw Stud Nut	68721	Arch Clamp Foot (left)	167076	Driving Arm 167075 with 1519(805), 141075(803) and 239266
1650(805)	Stop Screw Lock Nut	68723	Arch Clamp Foot (right)	167084	Machine Pulley (loose)
1655(803)	Screw Stud Nut (2)	125044	Oil Pad (felt)	167086	Engaging Arm Stud
1662(805)	Bell Crank Hinge Screw Nut	131022	Stop Rod Bumper (rubber) (3)	167087	Needle Bar
1662(805)	Knife Actuating Lever Screw Nut	140321(830)	Collar Set Screw (4)	167088	Needle Bar 167086 with 209(833), 50169(819) and 239376
1747(805)	Pawl Hinge Screw Nut	140352(830)	Tripping Point Screw (2)	167089-001	Needle Bar Connecting Link 271597 with 50650(803), 167089-001 and 239385
2049	Crank Pin	141059(830)	Lifting Link Connection Screw	167143	Connecting Stud with 175(830) and 239277
2102	Tension Disc (2)	141066(803)	Locating Screw (4)	167144	Starting Bell Crank
2103	Tension Spring	141067(805)	Locking Screw		Starting Bell Crank 167143 with 51657(803), 53617(805), 167154 and 167155
2455	Tension Disc (2)	141069(869)	Arm Screw (3)	167145	Starting Lever with 141077(830)
2807	Bumper Separating Washer (4)	141069(869)	Cylinder Screw (2)	167146	Starting Lever 167145 with 239159, 239307 and two each 141099(805) and 214053
2973	Latch Lever	141069(869)	Supporting Gear Bracket Screw	167154	Starting Lever Starting Rod
2974	Fulcrum Pin	141070(803)	Supporting Gear Screw	167155	Starting Rod Adjuster
2975	Lever Spring	141071(819)	Driving Block Screw	167157	Stop Rod Swivel
5968	Roller Washer (2)	141075(803)	Driving Link Screw	167159	Brake Shoe Support with 171(830) and 201(804)
10141	Tension Spring	141077(830)	Bushing Set Screw		
13275	Oil Pad (felt)	141099(805)	Screw Stud (upper) (2)		
13288	Retaining Ring	141100(850)	Hinge Screw		
15140	Bobbin Case Latch	141101(803)	Pressure Spring		
15141	Bobbin Case Hinge Nos. 2973, 2974 and 15140	141128(833)	Adjusting Screw Bushing (back)		
17825	Knife Holder	141145(803)	Support Screw		
17828	Pinion Stud Bracket	141242(819)	Knife Screw		
19448	Slide Block	141242(819)	Adjusting Block Screw		
20197	Crank Connecting Rod with 125044 and two 896(830)	141245(869)	Rock Adjusting Screw (2)		
23421	Oil Hole Plug (leather)	141275(869)	Tension Stud Set Screw (2)		
23477	Needle Bar Crank with 858(830), 1065(830) and two 141275(869)		Crank Position Screw (2)		
23500	Bobbin				
32376	Retaining Ring				

**NUMERICAL LIST OF PARTS
MACHINE 269W108**

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
167160	Swivel Retaining Ring	200161(819)	Position Plate Screw (2)	223047	Bushing (front) Oil Packing (wick)
167161	Brake Shoe Support Bracket 167159 with 50446(803), 141101(803), 223812, 239513 and 239557	200294(819)	Cylinder Cover (bottom) Screw (2)	224842	Shuttle Tension Spring
167162	Tension Release Rod	200299(819)	Trip Lever Hinge Screw	225444	Bobbin Winder Stop Latch
167163	Tension complete, Nos. 1560(803), 2103, 32572, 52082, 141576(803), 167173, 270278 and two 2102	200308(803)	Hinge Screw	225458	Stop Latch Thumb Lever
167173	Spring Regulator with two 141245(869)	200333(830)	Bushing (front-outer) Set Screw	225459	Thumb Lever Joining Stud (2)
167181	Tripping Rock Shaft	200335(830)	Hinge Stud Set Screw (2)	225837	Roller Screw Stud Washer
167182	Tripping Rock Shaft Collar with two 460(830)	200338(803)	Bushing (back) Set Screw	228485	Number Plate Drive Screw (2)
167183	Vertical Drive Shaft Worm with 141407(869) and 141408(869)	200338(803)	Bushing (center) Set Screw	228485	Trademark Drive Screw (2)
167184	Vertical Drive Shaft Worm Gear with 141407(869) and 141408(869)	200363(830)	Hinge Pin Set Screw	228792	Bobbin Winder Brake (leather)
167229	Support Bracket Pressure Spring	200364(830)	Hinge Stud Set Screw	228793	Bobbin Winder Pulley with 200436(803)
167234	Tripping Point Washer (2)	200366(830)	Thread Guard Set Screw	228794	Bobbin Winder Spindle
167235	Thread Cutter Knife	200378(830)	Support Set Screw	228795	Spindle Housing
167262	Adjusting Stud Bracket with 462(830)	200394(803)	Hinge Pin Set Screw	228796	Thumb Lever Plate
167292	Knife Actuating Lever Screw and Nut complete, Nos. 1662(805) and 141448(803)	200397(833)	Stud Set Screw	228798	Tension Adjusting Stud
167413	Bell Crank Hinge Screw and Nut complete, Nos. 1662(805) and 141449(803)	200436(803)	Pulley Set Screw	228800	Adjusting Stud Bracket 167292 with 418(804), 1562(819), 10141, 228798, 268122 and two 2455
167414	Pawl Hinge Screw and Nut complete, Nos. 1662(805) and 141450(803)	200442(803)	Regulator Set Screw	228810	Return Spring Screw Stud
167415	Collar with two 140321(830)	200502(819)	Arm Cover (center) Screw (2)	228812	Tension Pulley
167423	Arch Clamp complete, Nos. 68721, 68723, 141071(819), 167001, 167041, 167051, 167052, 167055, 239202, 239204, 239209, 350605(869), two each 202(819), 141575(803), 201711(803), 239206, 239613 and five 808(830)	200502(819)	Thread Retainer (lower) Screw (2)	232837	Retaining Screw Washer
167445	Arm Stop Rod	201135(803)	Pulley Retaining Screw	239078	Oscillating Shaft 239550 with 1636(805), 2049, 32377 and 239551
167446	Arm Stop Rod complete, Nos. 167445, 202342, 239518 and 239519	201188(803)	Collar Set Screw	239079	Oscillating Shaft 239550 with 2049 and 239551
167447	Interlocking Arm Stop Rod 167446 with 167157, two 1518(805), three 131022 and four 2807	201256(803)	Bracket Screw (4)	239081	Thread Guide
200056(805)	Stop Latch Screw	201356(805)	Screw Stud (lower)	239133	Starting Lever Arm and Rock Shaft (adjustable) with 423(830), 1650(805), 201135(803), 201442, 201525(805), 228810, 228812 and 232837
200064(819)	Arm Cover (side) Screw (4)	201422(803)	Stud Screw	239143	Thread Take-up Lever Link
200072(803)	Pinch Screw	201442	Position Screw (pin)	239144	Hinge Pin Wick
200084(819)	Arm Cover (front) Screw (2)	201472(803)	Bushing (front-inner) Set Screw	239157	Longitudinal Rock Shaft 239304 with 51951
200084(819)	Cylinder Cover (side) Screw (2)	201525(805)	Screw Stud Nut	239158	Bobbin Winder Bracket
200084(850)	Bracket Set Screw	201711(803)	Adjusting Screw Lock Nut (2)	239158	Bobbin Winder complete, Nos. 1620(819), 50356(804), 50628(809), 200056(805), 200299(819), 202478, 225444, 225458, 228793, 228794, 228795, 228796, 239157, 249716 and two 225459
200132(819)	Thread Guide Screw	201711(803)	Bracket Screw Nut	239159	Stop Cam Interlock Arm
200138(805)	Knife (stationary) Screw	201749(805)	Hinge Screw Nut	239160	Lateral Rock Shaft 239264 with 51951
		202005	Gear Bracket Screw Washer	239161	Knife Bar
		202299	Oil Packing (wick)	239165	Lifting Rod
		202342	Arm Hinge Tension Spring	239170	Wire (adjustable)
		202423	Hinge Stud Oil Packing (wick) (2)	239193	Slide Block
		202478	Stop Latch Trip Lever	239194	Connection with Stud and Block
		202603	Adjusting Block Screw Washer	239195	Position Plate
		202603	Adjusting Screw Washer (2)	239196	Shuttle Race complete, Nos. 239195, 239289, 239290, two each 51381(806), 200161(819) and 239291
		203172	Friction Washer	239202	Shank (left)
		204235	Arm Position Pin (2)	239204	Shank (right)
		204235	Cylinder Position Pin (2)	239206	Spring (medium) (2)
		210805	Screw Washer (3)	239208	Dowel Pin (2)
		210805	Screw Stud Washer (2)	239209	Rubbing Block
		210957	Thread Retainer (lower) Stud	239211	Lifting Bar with 176(819)
		210958	Stud Collar	239212	Lifting Bar Bushing (lower)
		210993	Sleeve	239213	Position Guide with 167037, 200072(803) and 239515
		214053	Return Spring (2)	239214	Spring
		222583	Oil Packing (wick)	239218	Lifting Link Connection
		223710	Thread Retainer (lower) with 200397(833)		
		223711	Thread Retainer (lower) complete, Nos. 210957, 210958, 210993, 223710 and 223844		
		223812	Brake Shoe Support Spring		
		223844	Thread Retainer (lower) Spring		

**NUMERICAL LIST OF PARTS
MACHINE 269W108**

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
239221	Arm Cover (center)	239337	Throat Plate	249716	Housing Spring
239223	Arm Cover (side)	239339	Throat Plate 239377 with 17825, 17828, 50018(806), 55325, 55459, 141145(803), 200138(805), 201711(803), 239367, 239372 and two 1208(809)	249915	Hinge Pin with 239143
239224	Arm Shaft			259470	Collar with 201188(803)
239228	Arm Shaft Bushing (front)			262061	Shuttle Driver (C.B.) with 350606(869)
239233	Cylinder Cover (bottom)			268122	Tension Guide
239234	Cylinder Cover (side)	239341	Connection with 350606(869)	270278	Tension Releasing Pin
239236	Oil Stop Pad (felt)			271018	Thread Retainer (back)
239238	Follower Arm with 239239 and 239240	239342	Connection Rod	271597	Connecting Link
239239	Follower Arm Link	239343	Lever Arm	350238(804)	Brake Screw (2)
239240	Link Hinge Stud	239344	Tripping Rock Shaft Support	350489(830)	Support Set Screw
239245	Locating Pin	239345	Vertical Drive Shaft	350559(819)	Thread Retainer Screw (2)
239250	Oscillating Slide Stud	239346	Vertical Drive Shaft Bushings (2)	350577(819)	Pressure Regulating Screw
239251	Knife Actuating Lever			350600(869)	Mounting Screw (3)
239252-001	Lever Link	239361	Hinge Stud	350600(869)	Pinch Screw (2)
239255	Rock Shaft	239363	Locating Pin	350604(869)	Lever Clamping Screw
239256	Rock Shaft Bracket	239365	Oiling Felt	350604(869)	Lifting Arm Pinch Screw
239260	Knife Bar Pack	239367	Knife (stationary)	350604(869)	Pinch Screw (2)
239264	Lateral Rock Shaft	239368	Knife Holder complete, Nos. 17825, 55459, 141145(803) and 239372	350605(869)	Frame Screw
239265	Rock Shaft Driven Arm (2)			350606(869)	Pinch Screw(2)
239266	Driving Link	239372	Knife (needle thread)	Cat. 1628	Needle (size 18) (Chromium finish)
239267	Hinge Stud with 202423 (2)	239374	Needle Thrust Bearing		
		239376	Thread Guide		
239268	Driving Arm with 250604(869) (2)	239379	Engaging Arm with 239320, 239321 and 350600(869)		
239273	Needle Bar Bushing (lower)	239382	Thrust Plate		
239274	Needle Bar Bushing (upper)	239383	Needle Thrust Bearing Washer (2)		
239277	Oil Packing (wick)	239384	Longitudinal Rock Shaft		
239279	Hinge Pin				
239280	Hinge Pin 239279 with 23421 and 222583	239385	Take-up Crank		
239282	Oscillating Shaft Bushings (back)	239387	Thread Wiper Body		
239283	Oscillating Shaft Bushings (front-inner)	239388	Support		
239284	Oscillating Shaft Bushings (front-outer) with 201472(803)	239390	Thread Wiper (quick acting) complete, Nos. 330(809), 39453, 63837, 141574(803), 200308(803), 239170, 239336, 239387, and 239388		
239287	Shuttle 1-11/16 in. diam., Nos. 23500, 40028-003 and 43725	239486-001	Machine Pulley (tight)		
239289	Shuttle Race Body with 239365	239501	Driving Block Pin		
239290	Shuttle Race Ring	239512	Pressure Spring Sleeve		
239291	Shuttle Race Ring Spring (2)	239513	Bracket Stud (eccentric)		
239294	Starting Bell Crank Pawl	239515	Hinge Pin		
239295	Pawl Return Spring	239518	Arm Hinge Pin		
239299	Lifting Rod	239519	Arm Hinge Pin Retainer		
239301	Starting Lever Bushing	239522	Supporting Gear with 239245		
239303	Operating Lever Arm	239524	Starting Cap		
239307	Retaining Ring	239525	Thrust Button		
239314	Pulley (tight) Key	239526	Needle Bearing		
239315	Retaining Ring (2)	239549	Stop Motion Brake complete, Nos. 141100(850), 167161, 167229 and 239512		
239317	Machine Pulley (loose)	239550	Oscillating Shaft		
239318	Machine Pulley (loose) 239317 with 239322	239551	Oscillating Shaft Crank		
239320	Engaging Arm Wear Block	239554	Brake Shoe (leather)		
239321	Wear Block Pin	239555	Rivet (2)		
239322	Pulley (loose) Needle Bearing	239556	Support		
239328	Tension Thread Guard	239557	Support complete, Nos. 239554, 239556 and two 239555		
239330	Take-up Lever	239574	Screw Stud Guide Block (2)		
239331	Lever Link	239591	Feed and Knife Driving Cam with 167234 and two each 140352(830) and 167235		
239332	Take-up Lever complete, Nos. 239330 and 239331				
239336	Clamping Plate	239613	Retaining Plate (2)		

LIST OF PARTS FOR 269W107 MACHINE
Same as 269W108, except for the following:

Parts Added	DESCRIPTION	Parts Removed
239463	Arch Clamp Foot (left)	68721
239464	Arch Clamp Foot (right)	68723
239598	Feed and Knife Driving Cam with two 167234 and four each 140352(830) and 167235	239591
167108	Feed Plate	167051
239469	Throat Plate 239337 with 239468 and two 1208(809)	--
239468	Throat Plate Needle Hole Bushing	55325
239470	Throat Plate 239469 with 17825, 17828, 50018(806), 55459, 141145(803), 200138(805), 201711(803), 239367 and 239372	239339
167142	Vertical Drive Shaft Worm with 141407(869) and 141408(869)	167183
167149	Vertical Drive Shaft Worm Gear with 141407(869) and 141408(869)	167184
167091	Arch Clamp complete, Nos. 141071(819), 167001, 167041, 167052, 167055, 167108, 239202, 239204, 239209, 239463, 239464, 350605(869), two each 202(819), 141575(803), 201711(803), 239206, 239613 and four 808(830)	167423

LIST OF PARTS FOR 269W109 MACHINE
Same as 269W108, except for the following:

Parts Added	DESCRIPTION	Parts Removed
239401	Arch Clamp Foot (left)	68721
239402	Arch Clamp Foot (right)	68723
239593	Feed and Knife Driving Cam with two 167234 and four each 140352(830) and 167235	239591
167083	Feed Plate	167051
239532	Knife Holder complete, Nos. 17825, 55458, 55459 and 141145(803)	239368
210993	Thread Retainer Sleeve	--
223844	Thread Retainer Spring	--
210957	Thread Retainer Stud	--
210958	Thread Retainer Stud Collar	--
239337	Throat Plate	--
239127	Throat Plate 239337 with 17825, 17828, 50018(806), 55326, 55458, 141145(803), 200138(805), 201711(803), 239367 and two 208(830)	239339
55326	Throat Plate Needle Hole Bushing	55325
167085	Arch Clamp complete, Nos. 141070(819), 167001, 167041, 167052, 167055, 167083, 239202, 239204, 239209, 239401, 239402, 350605(869), two each 202(819), 141575(803), 201711(803), 239206, 239613 and four 808(830)	167423

LIST OF PARTS FOR 269W111 MACHINE
Same as 269W108, except for the following:

Parts Added	DESCRIPTION	Parts Removed
239425	Arch Clamp Foot Retaining Plate	239613 (2)
239411	Arch Clamp Foot (solid)	--
167202	Arch Clamp Frame with two 239208	167001
124906	Arch Clamp Foot Lifter	63837
239594	Feed and Knife Driving Cam with 167234 and two each 140352(830) and 167235	239591
167205	Feed Plate	167051
239605	Arch Clamp complete, Nos. 141071(819), 141575(803), 167044, 167052, 167055, 167202, 201711(803), 239206, 239209, 239411, 239425, 350132(819), 350605(869) and four 808(819)	167423

LIST OF PARTS FOR 269W112 MACHINE
Same as 269W108, except for the following:

Parts Added	DESCRIPTION	Parts Removed
239601	Feed and Knife Driving Cam with 167234 and two each 140352(830) and 167235	239591
167142	Vertical Drive Shaft Worm with 141407(809) and 141408(869)	167183
167149	Vertical Drive Shaft Worm Gear with 141407(869) and 141408(869)	167184



LIST OF PARTS FOR 269W105 AND 269W117 MACHINES
FOR TWO and FOUR HOLE BUTTONS
 Same as 269W108, except for the following:

Parts Added	DESCRIPTION	Parts Removed
239533	Cylinder Cover (side)	239234
200084(819)	Cylinder Cover (side) Screw (2)	--
167028	Feed Plate	167051
167029	Feed Plate Carrier Bar	167052
141071(819)	Feed Plate Carrier Bar Driving Block Screw	--
239534	Lateral Adjusting Lever	--
141545(830)	Lateral Adjusting Lever Hinge Screw	--
1620(805)	Lateral Adjusting Lever Hinge Screw Nut	--
202248	Lateral Adjusting Lever Hinge Screw Spring Washer	--
202622	Lateral Adjusting Lever Hinge Screw Washer (2)	--
2018	Lateral Adjusting Lever Spacing Washer	--
239583	Lateral Rock Shaft Driven Arm	239265
167335	Lateral Rock Shaft Driving Arm Screw Stud	167048
239574	Lateral Rock Shaft Driving Arm Screw Stud Guide Block	--
53626(803)	Lateral Rock Shaft Driving Arm Screw Stud Nut	--
141275(869)	Lateral Rock Shaft Driving Arm Screw Stud Locking Screw	--
167449	Lateral Rock Shaft Driving Arm Screw Stud Washer	210805
167329	Longitudinal Adjusting Lever	--
239356	Longitudinal Adjusting Lever Handle	--
141545(830)	Longitudinal Adjusting Lever Handle Hinge Screw	--
1620(805)	Longitudinal Adjusting Lever Handle Hinge Screw Nut	--
202248	Longitudinal Adjusting Lever Handle Hinge Screw Spring Washer	--
167287	Longitudinal Feed Plate Carrier Bar Positioner	--
167335	Longitudinal Rock Shaft Driving Arm Screw Stud	167048
239574	Longitudinal Rock Shaft Driving Arm Screw Stud Guide Block	--
141275(869)	Longitudinal Rock Shaft Driving Arm Screw Stud Locking Screw	--
53626(803)	Longitudinal Rock Shaft Driving Arm Screw Stud Nut	--
167449	Longitudinal Rock Shaft Driving Arm Screw Stud Washer	--
239289	Shuttle Race Body with 239365	--
239365	Shuttle Race Body Oiling Felt	--
210993	Thread Retainer Sleeve	--
272208	Thread Retainer Spring	223844
210957	Thread Retainer Stud	--
210958	Thread Retainer Stud Collar	--
141084(803)	Thread Wiper Body Hinge Screw	200308
167174	Thread Wiper Body Support	239388
167330	Adjusting Device complete, for quick adjusting of the Lateral and Longitudinal mechanisms, Nos. 1654(803), 2018, 141550, 167329, 239533, 239534, 239536, two each 1620(805), 53626(803), 141275(869), 141545(830), 167335, 167449 and three each 202248 and 202622	--


PARTS FOR 269W117 ONLY

Parts Added	DESCRIPTION	Parts Removed
239589	Feed and Knife Driving Cam with two 167234 and four each 140352(830) and 167235	239591
17829	Knife Thread Holder	--
239132-001	Lateral Feed Plate Carrier Bar Positioner	--
55326	Throat Plate Needle Hole Bushing	55325
239156	Throat Plate 239337 with 17825, 17828, 17829, 50018(806), 55326, 55459, 141145(803), 200138(805), 201711(803), 239367, 239372 and two 1208(830)	239339
167044	Vertical Drive Shaft Worm with 141407(869) and 141408(869)	167183
167073	Vertical Drive Shaft Worm Gear with 141407(869) and 141408(869)	167184

PARTS FOR 269W105 AND 269W117 MACHINES

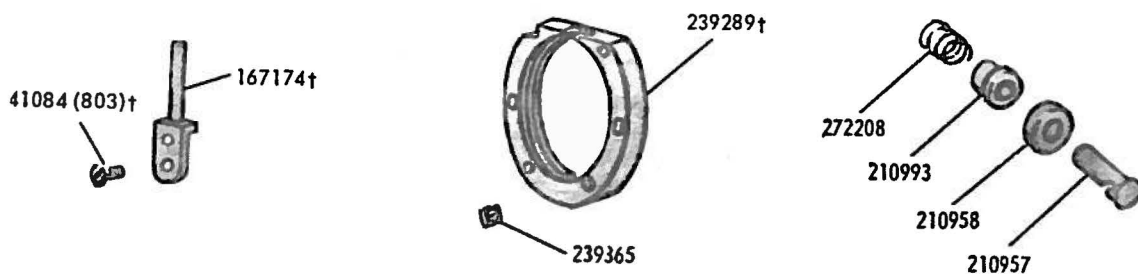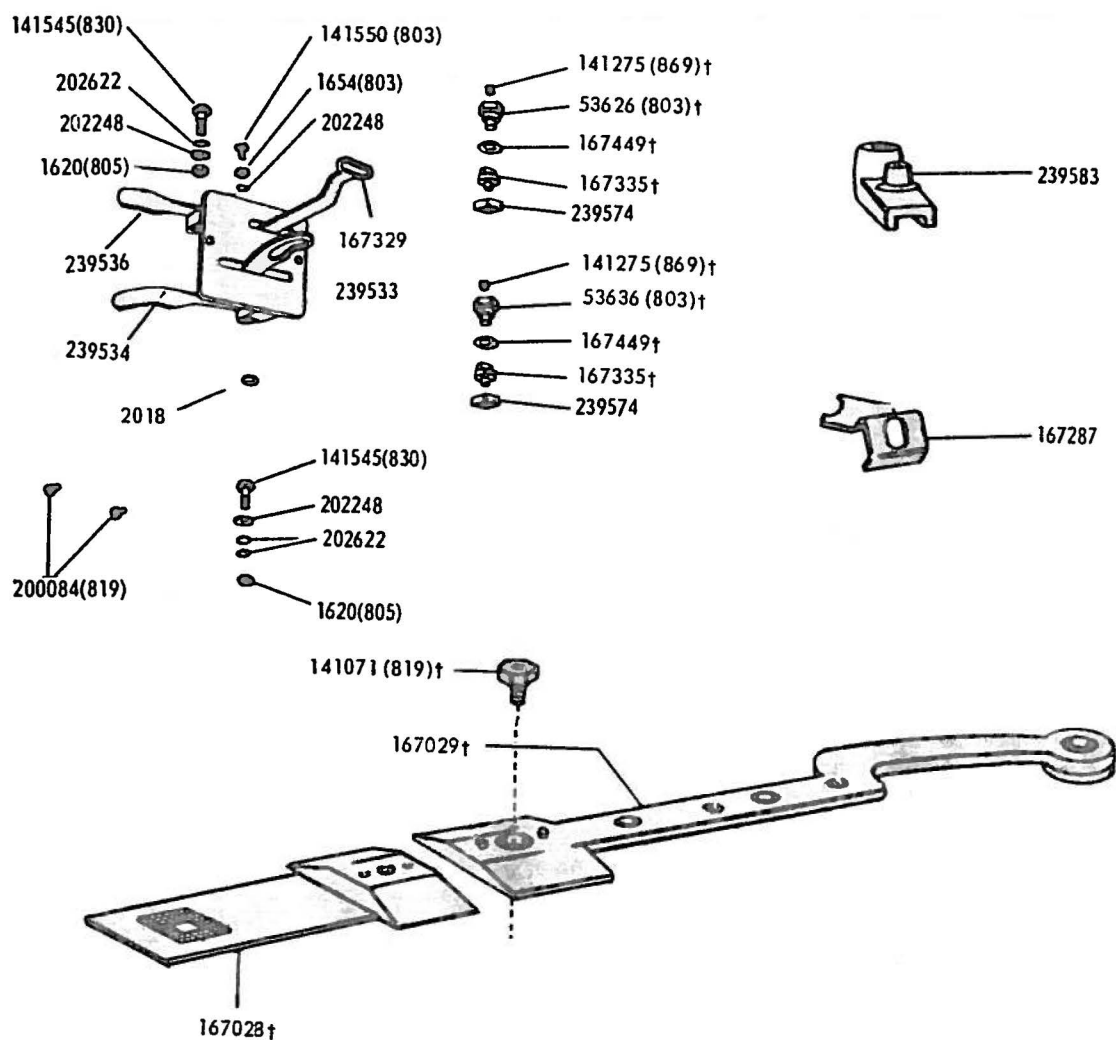

PARTS FOR 269W117 MACHINE ONLY

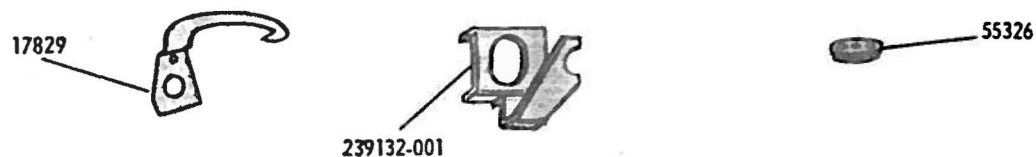

SUPPLEMENTAL PARTS LISTS


LIST OF PARTS FOR 269W105 AND 269W117 MACHINES Same as Arch Clamp on 269W108, except for the following:

Parts Added	DESCRIPTION	Parts Removed
136598	Button Clamp (left) with 17723, 45329 and three 36696	--
36696	Button Clamp (left) Pad Pin (3)	--
136600	Button Clamp (left) Spring	--
45329	Button Clamp (left) Spring Position Pin	--
228(819)	Button Clamp (left) Spring Screw	--
136601	Button Clamp (right) with 17723, 45329 and three 36696	--
36696	Button Clamp (right) Pad Pin (3)	--
136603	Button Clamp (right) Spring	--
45329	Button Clamp (right) Spring Position Pin	--
228(819)	Button Clamp (right) Spring Screw	--
124732	Button Clamp Arm with 17714 and 68799	--
17710	Button Clamp Arm Hinge Plate	--
1176(819)	Button Clamp Arm Hinge Plate Screw	--
68799	Button Clamp Arm Hook	--
1175(850)	Button Clamp Hinge Screw (2)	--
124733	Button Clamp Opening Lever	--
124734	Button Clamp Opening Lever Bracket	--
1182(819)	Button Clamp Opening Lever Bracket Screw (2)	--
124735	Button Clamp Opening Lever Contact Piece	--
239123	Button Clamp Opening Lever Contact Piece Arm	--
50117(809)	Button Clamp Opening Lever Contact Piece Arm Screw	--
1484(809)	Button Clamp Opening Lever Contact Piece Screw	--
17718	Button Clamp Opening Lever Contact Piece Screw Washer	--
99(813)	Button Clamp Opening Lever Hinge Screw	--
39241	Button Clamp Pressure Spring	--
239572	Button Clamp Pressure Spring Bracket	--
1177(819)	Button Clamp Pressure Spring Bracket Screw	--
17714	Button Clamp Pressure Spring Guide Block	--
1178(819)	Button Clamp Pressure Spring Screw	--
39335	Button Clamp Pressure Spring Screw Plate	--
39242	Button Clamp Spreader	--
124737	Button Clamp Spreader Lever	--
124738	Button Clamp Spreader Adjusting Plate	--
1182(819)	Button Clamp Spreader Lever Adjusting Plate Screw	--
17718	Button Clamp Spreader Lever Adjusting Plate Screw Washer	--
124739	Button Clamp Spreader Lever Stop	--
50237(833)	Button Clamp Spreader Lever Stop Position Screw	--
1182(819)	Button Clamp Spreader Lever Stop Screw	--
17718	Button Clamp Spreader Lever Stop Screw Washer	--
17719	Button Clamp Spreader Spring	--
1181(819)	Button Clamp Spreader Spring Screw Stud	--
63742	Button Clamp Spreader Steady Pin (long)	--
17720	Button Clamp Spreader Steady Pin (short)	--
63741	Button Clamp Spreader Thumb Plate	--
1199(819)	Button Clamp Spreader Thumb Plate Screw	--
136608	Button Clamp Stop with 17720 and 63742	--
1183(819)	Button Clamp Stop Screw	--
17723	Button Clamp Stud (2)	--
239124	Button Clamp Complete, Nos. 99(813), 1181(819), 1183(819), 1199(819), 17719, 39242, 50237(833), 63741, 124732, 124733, 124734, 124737, 124738, 124739, 136608, two each 1175(850), 17718 and four 1182(819)	167423

PARTS FOR 269W105 ONLY

Parts Added	DESCRIPTION	Parts Removed
239602	Feed and Knife Driving Cam with two 167234 and four each 140352(830) and 167235	239591

PARTS FOR BUTTON CLAMP FOR
269W105 AND 269W117 MACHINES

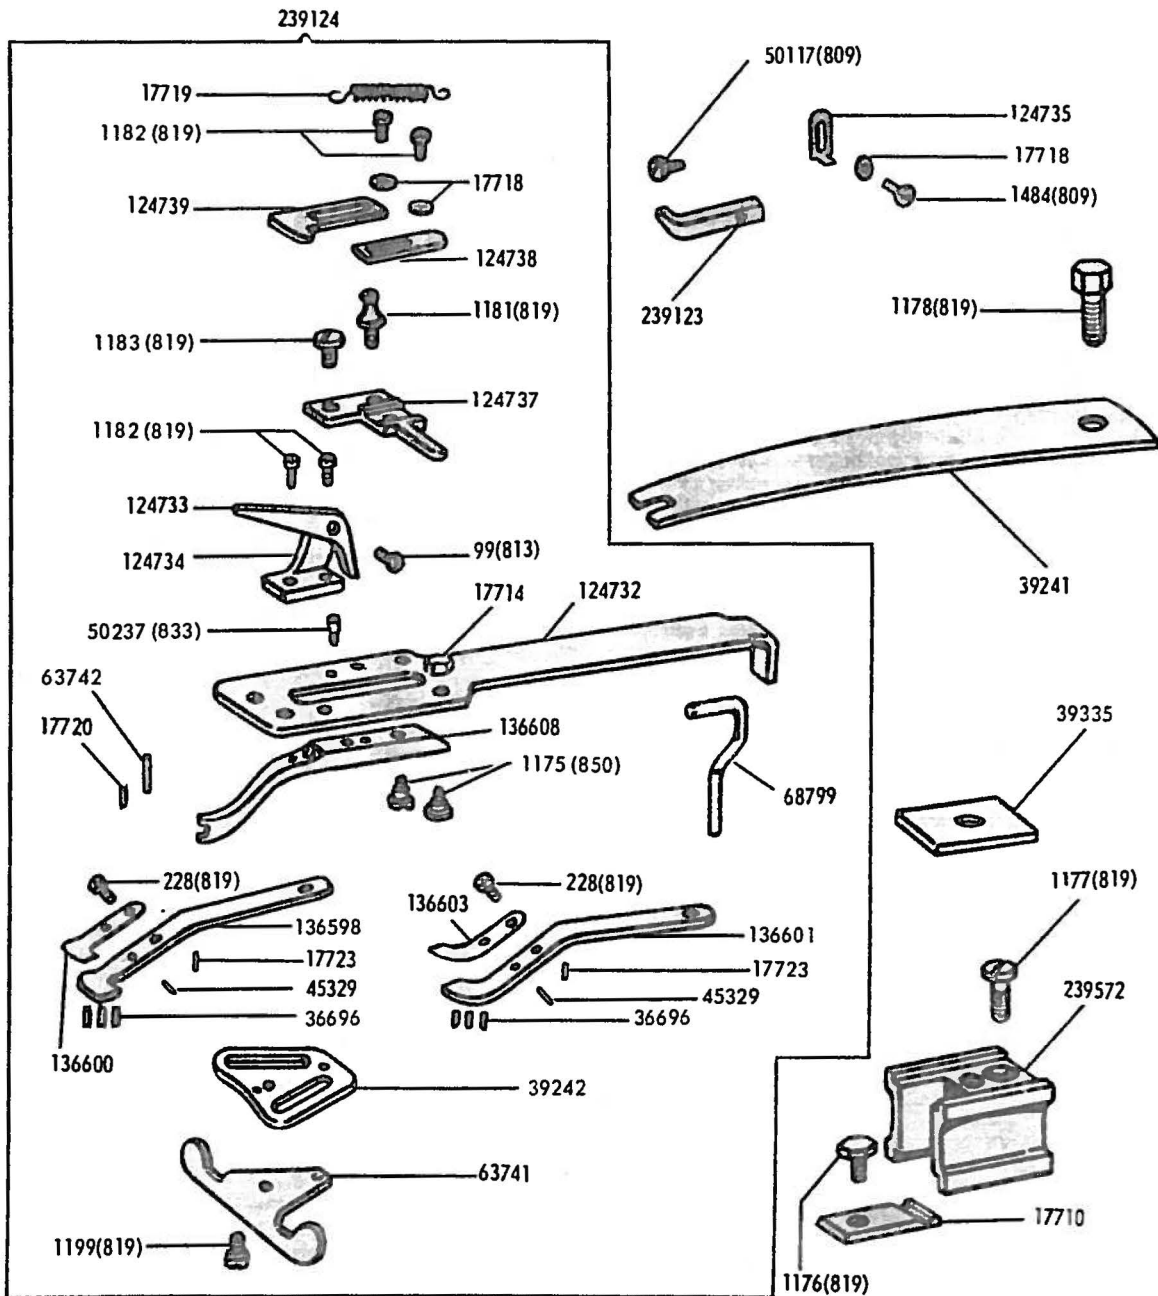

LIST OF PARTS FOR 269W114 MACHINE

Same as 269W108, except for the following:







Parts Added	DESCRIPTION	Parts Removed
239599	Feed and Knife Driving Cam with two 167234 and four each 140352(830) and 167235	239591
LIST OF PARTS FOR 269W126 MACHINE Same as 269W108, except for the following:		
239189	Feed and Knife Driving Cam with 167234 and two each 140352(830) and 167235	239591
167077	Vertical Drive Shaft Worm with 141407(869) and 141408(869)	167183
167079	Vertical Drive Shaft Worm Gear with 141407(869) and 141408(869)	167184

LIST OF PARTS FOR 269W138 MACHINE

Same as 269W108, except for the following:


Parts Added	DESCRIPTION	Parts Removed
63947	Arch Clamp Bar Locating Finger with Pointer	--
405(803)	Arch Clamp Bar Locating Finger Screw	--
239451	Arch Clamp Closing Bell Crank with Stud	--
63949	Arch Clamp Closing Bell Crank Bracket	--
183(809)	Arch Clamp Closing Bell Crank Bracket Screw (2)	--
239453	Arch Clamp Closing Bell Crank Connecting Rod	--
239454	Arch Clamp Closing Bell Crank Connecting Rod Stop	--
201535(805)	Arch Clamp Closing Bell Crank Connecting Rod Stop Nut	--
28(803)	Arch Clamp Closing Bell Crank Hinge Screw	--
63953	Arch Clamp Closing Slide	--
63954	Arch Clamp Foot (left) with 51854	239202
63955	Arch Clamp Foot (right) with 51854	239204
910(830)	Arch Clamp Foot Adjusting Screw (2)	--
63983	Arch Clamp Foot Adjusting Screw Bracket	--
190(809)	Arch Clamp Foot Adjusting Screw Bracket Screw (2)	--
1601(809)	Arch Clamp Foot Adjusting Screw Nut (2)	--
239502	Arch Clamp Foot Lifter	63837
176(819)	Arch Clamp Foot Lifter Screw	--
17959	Arch Clamp Foot Lifting Stud	--
63984	Arch Clamp Foot Plate with 17959	--
63957	Arch Clamp Foot Plate Cap (2)	--
51854	Arch Clamp Foot Roller and Screw Stud (eccentric) with 1611(805) (2)	--
1611(805)	Arch Clamp Foot Roller and Screw Stud Nut (2)	--
63986	Arch Clamp Foot Spring	--
51041(803)	Arch Clamp Foot Spring Screw	--
239455	Arch Clamp Frame with two 239208	167001
63987	Arch Clamp Pressure Spring	--
141(803)	Arch Clamp Pressure Spring Regulating Screw	--
788(804)	Arch Clamp Pressure Spring Screw Stud	--
239606	Arch Clamp complete, Nos. 28(803), 141(803), 405(803), 788(804), 51041(803), 63947, 63949, 63953, 63954, 63955, 63983, 63984, 63986, 63987, 141071(819), 167213, 239451, 239455, two each 183(809), 190(809), 910(830), 1601(809), 63957, 350605(869) and four 350132(869)	167423
239597	Feed and Knife Driving Cam with two 167234 and four each 140352(830) and 167235	239591
167213	Feed Plate	167051
167214	Starting Bell Crank	167143
167215	Starting Bell Crank 167214 with 51657(803), 53617(805), 167154 and 167155	167144
167154	Starting Lever Starting Rod	--
167155	Starting Lever Starting Rod Adjustor	--
51657(803)	Starting Lever Starting Rod Lock Nut	--
53617(805)	Starting Lever Starting Rod Swivel Stud Nut	--
239503	Thread Wiper (quick acting) complete, Nos. 330(809), 39453, 141574(803), 200308(803), 239170, 239386, 239387, 239388 and 239502	239390
239391	Work Plate	--
200400(803)	Work Plate Adjusting Screw (2)	--
201524(803)	Work Plate Adjusting Screw Nut (2)	--
239392	Work Plate Bracket (2)	--
691(819)	Work Plate Bracket Screw (4)	--
239393	Work Plate Support Strap (2)	--
742(819)	Work Plate Support Strap Screw (2)	--
201711(803)	Work Plate Support Strap Screw Nut (2)	--
691(819)	Work Plate Support Screw (2)	--
239394	Work Plate complete, Nos. 239391, two each 742(819), 200400(803), 201524(803) 201711(803), 239392, 239393 and six 691(819)	--

PARTS FOR 269W138 MACHINE

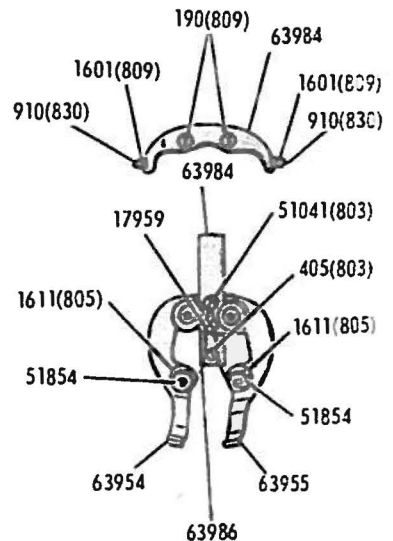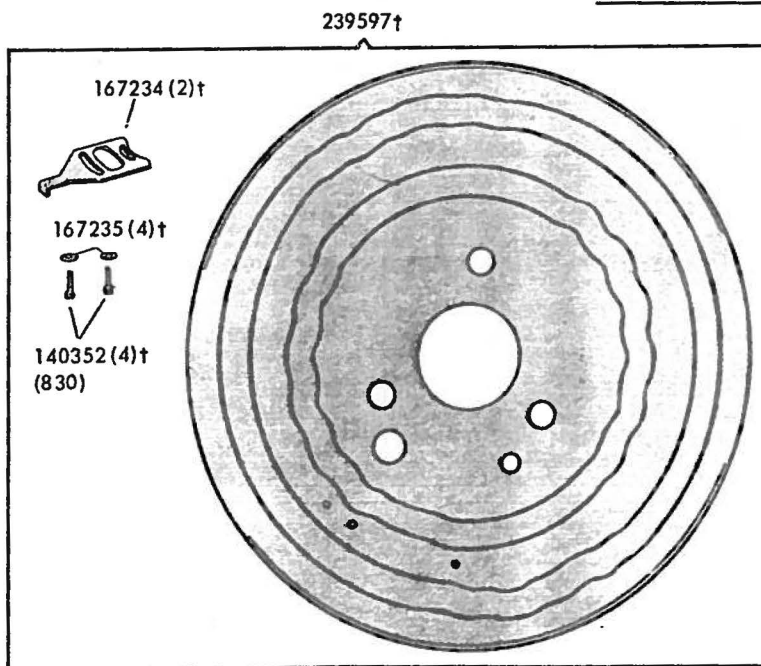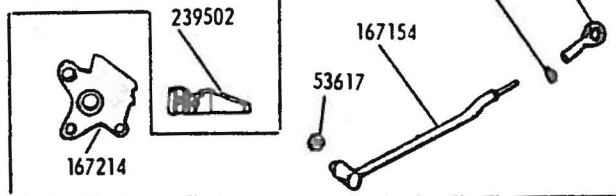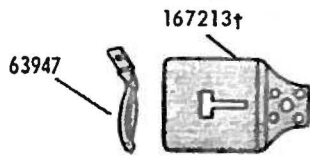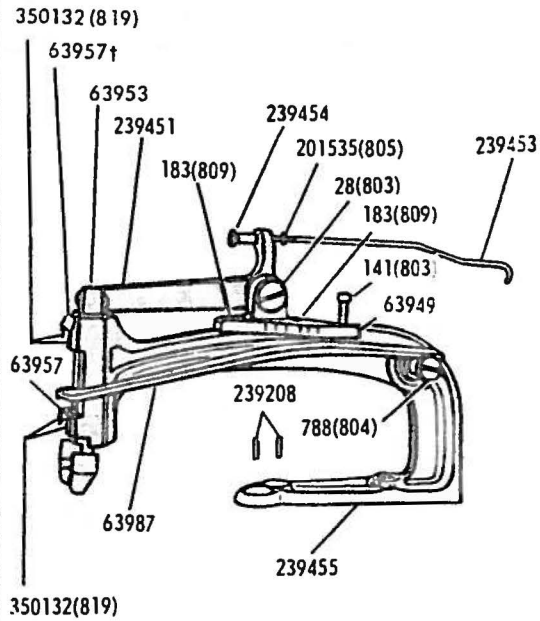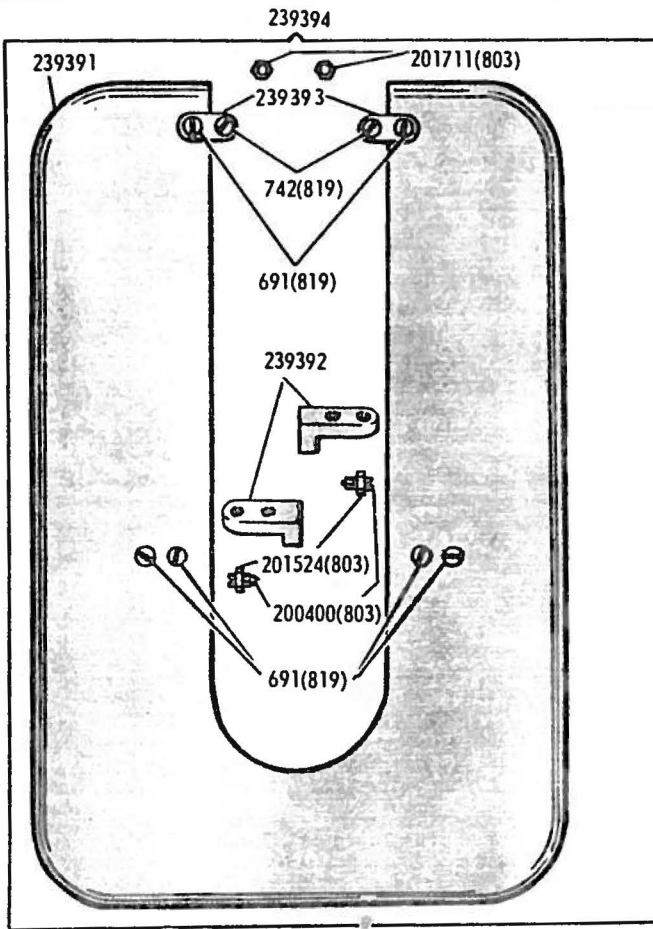

LIST OF PARTS FOR 269W139 MACHINE
Same as 269W108, except for the following:

Parts Added	DESCRIPTION	Parts Removed
239431	Arch Clamp Foot	--
239424	Arch Clamp Foot Lifter with 239442	63837
239425	Arch Clamp Foot Retaining Plate	--
200160(819)	Arch Clamp Foot Screw	--
239426	Arch Clamp Foot Shank	--
239427	Arch Clamp Foot Shank Arm	--
1094(803)	Arch Clamp Foot Shank Arm Screw	--
239428	Arch Clamp Foot Shank complete, Nos. 1094(803), 200160(819), 239426, 239427 and 239431	--
167221	Arch Clamp Frame with two 239208	167001
239430	Arch Clamp complete, Nos. 141071(819), 141575(803), 167041, 167052, 167221, 201711(803), 239206, 239209, 239425, 239428, 239476 and five 808(830)	167423
239440	Cylinder Base Leg	--
239441	Cylinder Cover (bottom)	239233
239596	Feed and Knife Driving Cam with 167234 and two each 140352(830) and 167235	239591
239476	Feed Plate	167051
239387	Thread Wiper Body	--
200308(803)	Thread Wiper Body Hinge Screw	--
239388	Thread Wiper Body Support	--
239170	Thread Wiper Body Wire	--
239336	Thread Wiper Body Wire Clamping Plate	--
141574(803)	Thread Wiper Body Wire Clamping Plate Screw	--
239442	Thread Wiper Fulcrum Pin	--
239443	Thread Wiper (quick acting) complete, Nos. 141574(803), 200308(803), 239170, 239336, 239387, 239388 and 239424	239390
167077	Vertical Drive Shaft Worm with 141407(869) and 141408(869)	167183
167079	Vertical Drive Shaft Worm Gear with 141407(869) and 141408(869)	167184
239394	Work Plate complete (see 269W138 Machine)	--

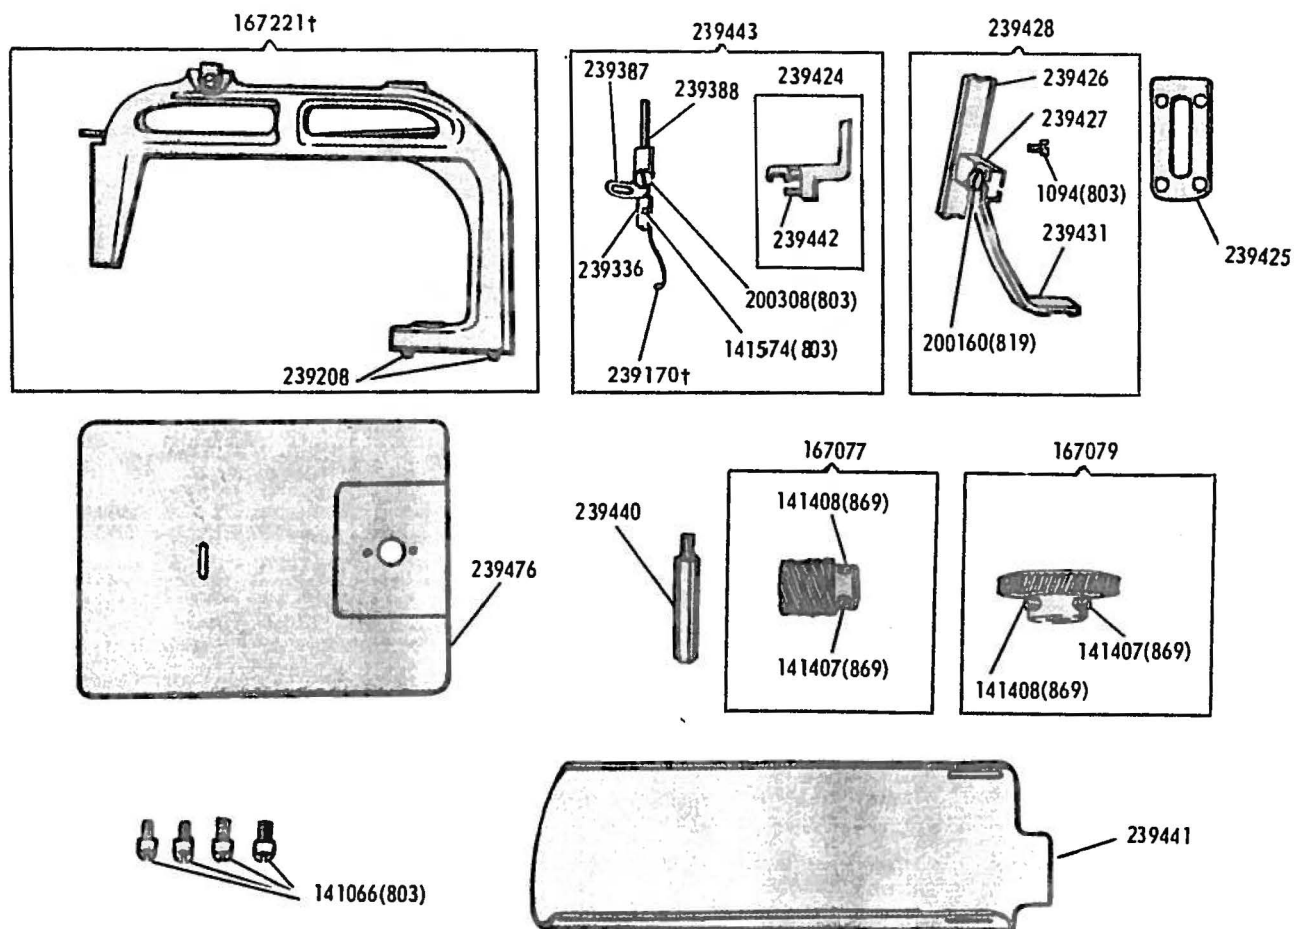

**ACCESSORIES FOR MACHINE 269W139
FOR SUBMERGED PARALLEL MOUNTING**

NUMBER	DESCRIPTION
239355	Belt Guard Base
239445	Belt Guard Base 239355 with two each 67425, 201752(819) and 350640(819)
239446	Belt Guard Base Spacer
239447	Drip Pan with four 228804
228804	Drip Pan Rock Shaft Bushing (4)
201308(805)	Drip Pan Screw (3)
203637(805)	Drip Pan Screw Washer (3)
52843	Drip Pan Washer (leather)
263417	Drip Pan Jack Screw
1517(805)	Drip Pan Jack Screw Lock Nut
167448	Machine Base and Oil Drain Jar (plastic)
228444	Machine Cushion (2)
228881	Machine Support Complete, Nos. 228866, 228868, 228870 to 228872, 239445, 239446, two 228444, four each 228873 to 228875 and 350639(819)
228786	Machine Support (rear)
228870	Machine Support (rear) 228786 with two each 51074(813) and 67425
67425	Lock Washer (11)
51074(813)	Machine Support Bolt (3)
228872	Machine Support Bracket (rear)
228873	Machine Support Bracket Jack (4)
350639(819)	Machine Support Bracket Jack Bolt (4)
228874	Machine Support Bracket Jack Bolt Washer (4)
228875	Machine Support Bracket Jack Flange with three wood screw 7/8" No. 12 R.H.B. (4)
228871	Machine Support Bracket (front) with two each 67425, 350640(819) and four 201752(819)
350640(819)	Screw (4)
201752(819)	Nut (10)
228867	Machine Support (front)
228868	Machine Support (front) 228867 with 51074(813), 67425, 200076(819) and 228869
200076(819)	Machine Support (front) Cushion Screw
228869	Machine Support (front) Cushion (nylon)
350641(819)	Screw (4)
228866	Machine Hinge Connection and Belt Guard Mounting Plate with four each 67425, 201752(819) and 350641(819)
OPERATING EQUIPMENT	
228879	Operating Equipment Complete, Nos. 228811, 228878, two each 32134, 228802, 228861, 268072, four each 2770, 228805 and 228806
228811	Operating Equipment Rock Shaft
2770	Operating Equipment Rock Shaft Stop Dog with 140219(803) (4)
140219(803)	Operating Equipment Rock Shaft Stop Dog Set Screw
32134	Operating Equipment Rock Shaft Spring (2)
268072	Operating Equipment Rock Shaft Collar with two 200386(803) (2)
200386(803)	Operating Equipment Rock Shaft Collar Set Screw (4)
288806	Operating Equipment Rock Shaft Lever Arm Bracket with two 356(803) (4)
356(803)	Operating Equipment Rock Shaft Lever Arm Bracket Set Screw (8)
228805	Operating Equipment Rock Shaft Lever Arm (4)
228861	Operating Equipment Cable (adjustable) Complete, Nos. 1521(819), 151633, 167226-001 and 228858 (2)
151633	Operating Equipment Cable (adjustable) Yoke End Pin (2)
228858	Operating Equipment Cable (adjustable) Yoke End (2)
1521(819)	Operating Equipment Cable Lock Nut (2)
167226-001	Operating Equipment Cable (2)
228910	Operating Equipment Chain (lower), 24" long (2)
228802	Operating Equipment Chain (lower) 228910 with two 202784 (2)
228878	Starting Rock Shaft
DRIVING ACCESSORIES	
228829	Driving Accessories Complete, Nos. 150748, 228880 and two 228877
228876	Foot Lifter Treadle (2)
228877	Foot Lifter Treadle 228876 with 2718(813), 14373 and 50581(813) (2)
14373	Foot Lifter Treadle Extension (2)
50581(813)	Foot Lifter Treadle Extension Screw (2)
2718(813)	Foot Lifter Treadle Extension Screw Washer (2)
151219	Belt Tightener Hinge Plate
150783	Belt Tightener Hinge Plate Adjusting Screw 150701 with 51655(813)
150701	Belt Tightener Hinge Plate Adjusting Screw
51655(813)	Belt Tightener Hinge Plate Adjusting Screw Nut
9281	Belt Tightener Hinge Plate Adjusting Screw Nut Washer
151066	Belt Tightener Hinge Plate Adjusting Screw Hinge Pin
151068	Belt Tightener Hinge Plate Adjusting Screw Hinge Pin Retaining Ring (2)
1062(819)	Belt Tightener Hinge Plate Mounting Screw (4)
1606(819)	Belt Tightener Hinge Plate Mounting Screw Nut (4)
126150	Belt Tightener Hinge Plate Mounting Screw Nut Washer (4)
151220	Belt Tightener Hinge Plate Adjusting Screw Hinge Bracket
151221	Belt Tightener Hinge Plate Hinge Bracket
151222	Belt Tightener Hinge Plate Hinge Bracket Pin
50807(813)	Belt Tightener Hinge Plate Motor Mounting Bolt (4)
1778(813)	Belt Tightener Hinge Plate Motor Mounting Bolt Nut (4)
9842	Belt Tightener Hinge Plate Motor Mounting Bolt Nut Washer (4)
150748	Machine Driving Belt, 48" long (V-belt)
228880	Motor Mount and Belt Tightener Complete, Nos. 51655(813), 150783, 151066, 151219 to 151222, two each 9281, 151068, four each 1062(819), 1606(819), 1778(813), 9842, 50807(813) and eight 126150

ACCESSORIES FOR CLASS 269W MACHINES

NUMBER	DESCRIPTION
167189	Belt Guard with 141093(830), 167188, 239356, 239357 and two 141103(850)
167187	Belt Guard with 141093(830)
239355	Belt Guard Base
239444-001	Belt Guard Base 239355 with two wood screws 1-1/4" No. 12 R.H.B.
239356	Belt Guard Hinge Pin
141093(830)	Belt Guard Hinge Pin Set Screw
239357	Belt Guard Lock Spring
167188	Belt Guard Lock Spring Plate
141103(830)	Belt Guard Lock Spring Plate Screw (2)
141577(803)	Belt Guard Lock Spring Screw Stud
23500	Bobbin (2)
228785	Drip Pan (except for 269W139 Machine)
201308(805)	Drip Pan Screw (4)
203637	Drip Pan Screw Washer (4)
52843	Drip Pan Washer (leather) (4)
259832	Eye Guard Complete, Nos. 200273(819), 226467, 259830, 259831 and two 200184(819)
259846	Eye Guard and Extension complete, Nos. 200095(819), 201528(819), 259832 and 259845, for 269W139 Machine
259831	Eye Guard Bracket
200273(819)	Eye Guard Bracket Hinge Screw
200184(819)	Eye Guard Bracket Screw (2)
226467	Eye Guard Bracket Spring Washer
259830	Eye Guard Deflector
259845	Eye Guard Deflector Bracket Extension, for 259846
200095(819)	Eye Guard Deflector Bracket Extension Screw, for 259846
201528(819)	Eye Guard Deflector Bracket Extension Screw Nut, for 259846
167448	Machine Base Oil Drain Jar (plastic)
228444	Machine Cushion (4)
12361-001	Machine Hinge Connection (2)
228786	Machine Support (left)
228865	Machine Support (left) 228786 with two wood screws 1-1/4" No. 12 F.H.
228809	Machine Support (right) with two wood screws 1-1/4" No. 12 F.H.
228787	Machine Tilting Latch Lever
228788	Machine Tilting Latch Lever 228787 with 225459 and 228790
225459	Machine Tilting Latch Lever Joint Stud
200246(803)	Machine Tilting Latch Lever Screw
228789	Machine Tilting Latch Lever Spring
228790	Machine Tilting Latch Lever Stop
120343	Oil Spout
120342	Oiler with 120343
120341	Tweezers
239371	Wrench (5/16" Hex.)

OPERATING EQUIPMENT

228807	Operating Equipment complete, Nos. two each 2770, 32134, 167416, 228802, 228811, 228861, and four each 228805 and 228806
167226-001	Operating Equipment Cable (2)
228861	Operating Equipment Cable (adjustable) complete, Nos. 1521(819), 151633, 167226-001 and 228858 (2)
1521(819)	Operating Equipment Cable Lock Nut (2)
228858	Operating Equipment Cable Yoke End (2)
151633	Operating Equipment Cable Yoke End Pin (2)
228910	Operating Equipment Chain (24" long) (2)
228802	Operating Equipment Chain 228910 with two 202784 (2)
202784	Operating Equipment Chain Hook (4)
228811	Operating Equipment Rock Shaft (2)
167416	Operating Equipment Rock Shaft Collar with two 140321(830) (2)
140321(830)	Operating Equipment Rock Shaft Collar Set Screw (4)
228805	Operating Equipment Rock Shaft Lever Arm (4)
228806	Operating Equipment Rock Shaft Lever Arm Bracket with two 356(803) (4)
356(803)	Operating Equipment Rock Shaft Lever Arm Bracket Set Screw (8)
32134	Operating Equipment Rock Shaft Spring (2)
2770	Operating Equipment Rock Shaft Stop Dog with 140219(803) (2)
140219(803)	Operating Equipment Rock Shaft Stop Dog Screw (2)

DRIVING ACCESSORIES FOR HEAD-ON INSTALLATION

150750	Machine Driving Belt, 50" long, (V-belt)
151223	Motor Mount and Belt Tightener complete, Nos. 51655(813), 150783, 151066, 151219 to 151222, two each 9281, 151068, four each 50807(813) and eight each 1778(816), 9842 and 126150
228822	Treadle complete, Nos. 2718(813), 14372, 14373, 14375, 17881, 50581(813) and two 46709 (2)