SINGER 281-5

Form 21233 (362) Printed in U.S.A.

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 281-5

WITH

HIGH MORTALITY LIST

THE SINGER MANUFACTURING COMPANY

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 281-5

No.		Name
*147199		Arm
		Note: Due to the accuracy required for gear alignment, Arm cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.
8582	2	Arm Dowel Pin
140640(805)		Arm Hole Plug (back of arm)
147109		Arm Hole Plug Gasket
140705(805)		Arm Screw (back)
146552	2	Arm Screw (front and intermediate)
140315(805)	2	Arm Screw Stud (back)
147200		Arm Shaft (horizontal) with 1036(830) and 140542(830)
147486		Arm Shaft (horizontal) Bushing (center)
140296(830)		Arm Shaft (horizontal) Bushing (center) Set Screw
147201		Arm Shaft (horizontal) Counter-Weight (back) with 446(830) and 966(805)
147202		Arm Shaft (horizontal) Counter-Weight (front) with 446(830) and 966(805)
966(805)	2	Arm Shaft (horizontal) Counter-Weight Clamping Screw
446(830)	2	Arm Shaft (horizontal) Counter-Weight Position Screw
140610(819)		Arm Shaft (horizontal) Counter-Weight Oil Plug Screw
147112		Arm Shaft (horizontal) Flanged Bushing (back)
146790		Arm Shaft (horizontal) Flanged Bushing (back) Oil Sump Tube
207(805)		Arm Shaft (horizontal) Flanged Bushing (back) Oil Sump Tube Holder Screw

No.		Name
140297(830)		Arm Shaft (horizontal) Flanged Bushing (back) Set Screw
147005		Arm Shaft (horizontal) Flanged Bushing (front)
140279(830)		Arm Shaft (horizontal) Flanged Bushing (front) Set Screw
50555(805)	2	Arm Shaft (horizontal) Plug Screw
144(804)		Arm Shaft (horizontal) Screw (back)
140640(805)		Arm Shaft (horizontal) Screw Plug (front)
147109		Arm Shaft (horizontal) Screw Plug Washer (fiber)
147468		Arm Shaft (horizontal) Thrust Collar with two 457(830)
457(830)	2	Arm Shaft (horizontal) Thrust Collar Set Screw
143013		Arm Shaft (upright)
143014		Arm Shaft (upright) Bevel Gear (lower) right hand spiral with two 1259(830)
		Note: To ensure proper functioning of Gears, No. 143014 will not be supplied separately to Agencies, but will be substituted by Pair of Gears No. 143295
1259(830)	2	Arm Shaft (upright) Bevel Gear (lower) Set Screw
143015		Arm Shaft (upright) Bevel Gear (upper) left hand spiral with two 1259(830)
		Note: To ensure proper functioning of Gears, No. 143015 will not be supplied separately to Agencies, but will be substituted by Pair of Gears No. 147476
1259(830)	2	Arm Shaft (upright) Bevel Gear (upper) Set Screw
143016		Arm Shaft (upright) Bushing (lower)
140410(830)		Arm Shaft (upright) Bushing (lower) Set Screw
147111		Arm Shaft (upright) Bushing (upper)
50504(830)		Arm Shaft (upright) Bushing (upper) Set Screw

No.		Name
147203		Arm Side Shield
147008		Arm Side Shield Wick
16709		Arm Side Shield Wick Spring Holder
147204		Arm Side Shield complete, Nos. 16709, 147008 and 147203
152(819)	2	Arm Side Shield Screw
51701(819)	2	Arm Side Shield Screw Nut
52239		Arm Spool Pin and Thread Eyelet
8879		Arm Spool Pin Washer (cloth)
		Note: When ordering No. 8879, state color required.
147011		Arm Top Cover (back) for 147013
147012		Arm Top Cover (back) for 147014
147013		Arm Top Cover with Stitch Regulator Plunger complete, Nos. 64519, 146511, 147011 and 147105
		Note: No. 147013 is regularly furnished with this machine.
147014		Arm Top Cover with Stitch Regulator Plunger complete, Nos. 64519, 143244, 146511, 147012 and 147105
147015		Arm Top Cover (back) Gasket
51369(813)	4	Arm Top Cover (back) Screw
147205		Arm Top Cover (front)
147206		Arm Top Cover (front) Gasket
51369(813)	4	Arm Top Cover (front) Screw
143244		Arm Top Cover Spool Pin with Spool Rest, 3-1/2 in. long
147105		Arm Top Cover Stitch Regulator Plunger
64519		Arm Top Cover Stitch Regulator Plunger Spring

No.		Name
146511		Arm Top Cover Stitch Regulator Plunger Stop Ring
*147490		Bed
		Note: Due to the accuracy required for gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.
143024		Bed Hole Plug
143268		Bed Leg (back)
1518(809)	2	Bed Leg (back) Nut
147207		Bed Raising Plate
1423(819)	2	Bed Raising Plate Screw
12431		Bed Slide
4307		Bed Slide Spring
725(819)	2	Bed Slide Spring Screw
12432		Bed Slide complete, Nos. 4307, 12431 and two 725(819)
147477		Bell Crank
147478		Bell Crank Bracket
158(813)	2	Bell Crank Bracket Screw
140941(803)		Bell Crank Hinge Screw
1650(819)		Bell Crank Hinge Screw Nut
147479		Bell Crank complete, Nos. 1650(819), 140941(803), 147477 and 147478
147469		Combination of Feed and Stitch Regulator Parts, Nos. 143015, 143040, 143049, 143087, 143134, 147472 and 147473 (for Agents only)
147208		Face Plate
147209		Face Plate Gasket

No.		Name
147210		Face Plate complete, Nos. 143377, 147208, 147232, 147234, 147235 and two 152(819)
152(819)	4	Face Plate Screw
147470		Feed Bar
147471		Feed Bar 147470 with 147290, 147355, 147356, 272110 and two 1423(803)
147355		Feed Bar Carrier with two each 158(805) and 140788(805)
158(805)	2	Feed Bar Carrier Clamping Screw
143031		Feed Bar Carrier Oil Wick
147024		Feed Bar Carrier Oil Wick Holder with 143031
228(805)	2	Feed Bar Carrier Oil Wick Holder Screw
272110		Feed Bar Connecting Link
1423(803)	2	Feed Bar Connecting Link Cap Screw
147288		Feed Bar Connecting Link Oil Wick
272111		Feed Bar Connecting Link Oil Wick Clamp
147035		Feed Bar Connecting Link Oil Wick Holder
147289		Feed Bar Connecting Link Oil Wick Holder 147035 with 147288
50579(809)		Feed Bar Connecting Link Oil Wick Holder Screw
147356		Feed Bar Hinge Pin (eccentric)
140788(805)	2	Feed Bar Hinge Pin Clamping Screw
149025		Feed Dog, 9 teeth (12 teeth to the inch)
50117(830)	2	Feed Dog Screw
147472		Feed Eccentric
1375(830)		Feed Eccentric Body Position Screw

No.		Nam e
1036(830)	2	Feed Eccentric Body Set Screw
140256(830)		Feed Eccentric Stop Screw (7 stitch)
140257(830)		Feed Eccentric Stop Screw (5 1/2 stitch)
		Note: No. 140257(830) is regularly furnished with this Machine.
140258(830)		Feed Eccentric Stop Screw (14 stitch)
147473		Feed Lifting Eccentric and Arm Shaft (horizontal) Bevel Gear, right hand spiral with 1259(830), 140333(830) and 143088
		Note: To ensure proper functioning of Gears, No. 147473 will not be supplied separately to Agencies, but will be substituted by Pair of Gears No. 147476
140333(830)		Feed Lifting Eccentric Position Screw
1259(830)		Feed Lifting Eccentric Set Screw
147025		Feed Lifting Rock Shaft
147030		Feed Lifting Rock Shaft Nos. 197(805), 140359(805), 143236, 147025, 147038, 147039, 147047 and two 147037
143052		Feed Lifting Rock Shaft and Feed Rock Shaft Oil Wick Holder
197(805)		Feed Lifting Rock Shaft and Feed Rock Shaft Oil Wick Holder Screw
147028	2	Feed Lifting Rock Shaft Bushing
447(830)	2	Feed Lifting Rock Shaft Bushing Set Screw
147029	2	Feed Lifting Rock Shaft Collar with two 460(830)
460(830)	4	Feed Lifting Rock Shaft Collar Set Screw
143040		Feed Lifting Rock Shaft Connecting Rod
140230(803)		Feed Lifting Rock Shaft Connecting Rod Hinge Screw
1518(809)		Feed Lifting Rock Shaft Connecting Rod Hinge Screw Nut

No.		Name
149074		Feed Lifting Rock Shaft Crank (back) with 140228(830)
140228(830)		Feed Lifting Rock Shaft Crank (back) Clamping Screw
147290		Feed Lifting Rock Shaft Crank (front) with 140915(830)
140915(830)		Feed Lifting Rock Shaft Crank (front) Clamping Screw
140359(805)		Feed Lifting Rock Shaft Oil Plug Screw
143236		Feed Lifting Rock Shaft Oil Plug Screw Washer (fiber)
147037	2	Feed Lifting Rock Shaft Oil Wick (short)
147038		Feed Lifting Rock Shaft Oil Wick (long)
147039		Feed Lifting Rock Shaft Oil Wick
147047		Feed Lifting Rock Shaft Oil Wick Clamping Plate
197(805)		Feed Lifting Rock Shaft Oil Wick Clamping Plate Screw
147040		Feed Rock Shaft
147041		Feed Rock Shaft Nos. 197(805), 140359(805), 143236, 147039, 147040, 147046, 147047 and two 147045
146933		Feed Rock Shaft Bushing (back)
447(830)		Feed Rock Shaft Bushing (back) Set Screw
147043		Feed Rock Shaft Bushing (front)
447(830)		Feed Rock Shaft Bushing (front) Set Screw
147029		Feed Rock Shaft Collar with two 460(830)
460(830)	2	Feed Rock Shaft Collar Set Screw
143049		Feed Rock Shaft Connecting Rod
140230(803)		Feed Rock Shaft Connecting Rod Hinge Screw
1518(809)		Feed Rock Shaft Connecting Rod Hinge Screw Nut
146099		Feed Rock Shaft Crank with 140228(830)

No.	Name
140228(830)	Feed Rock Shaft Crank Clamping Screw
140359(805)	Feed Rock Shaft Oil Plug Screw
143236	Feed Rock Shaft Oil Plug Screw Washer (fiber)
147045 2	Feed Rock Shaft Oil Wick (short)
147046	Feed Rock Shaft Oil Wick (long)
147039	Feed Rock Shaft Oil Wick
147047	Feed Rock Shaft Oil Wick Clamping Plate
197(805)	Feed Rock Shaft Oil Wick Clamping Plate Screw
50190(805)	Guide Thumb Screw
(149093), 4721/ (149094),47495	Knife (narrow)
(149094) 147495	Knife (wide)
	Note: No. 149094 is tied on the Arm.
620(830)	Knife Adjusting Screw
147212	Knife Bar
147213	Knife Bar Crank (back) with 50135(803)
50443(803)	Knife Bar Crank (back) Clamping Screw
50135(803)	Knife Bar Crank (back) Position Screw
147214	Knife Bar Crank (back) Connection
147215	Knife Bar Crank (back) Connection 147214 with 147216, 147217 and three 223(803)
147216	<pre>Knife Bar Crank (back) Connection Eccentric with 1375(830) and two 1036(830)</pre>
147217	Knife Bar Crank (back) Connection Eccentric End Plate
223(803) 3	Knife Bar Crank (back) Connection Eccentric End Plate Screw

No.		Name
1375(830)		Knife Bar Crank (back) Connection Eccentric Position Screw
1036(830)	2	Knife Bar Crank (back) Connection Eccentric Set Screw
50227(803)		Knife Bar Crank (back) Connection Hinge Screw
1620(819)		Knife Bar Crank (back) Connection Hinge Screw Nut
147218		Knife Bar Crank (front) with 50135(803)
147219		Knife Bar Crank (front) 147218 with 1735(803), 2297, 147220 and 147221
50443(803)		Knife Bar Crank (front) Clamping Screw
147220		Knife Bar Crank (front) Coupling Pin
147221		Knife Bar Crank (front) Coupling Pin Nut
1735(803)		Knife Bar Crank (front) Coupling Pin Nut Lock Nut
2297		Knife Bar Crank (front) Coupling Pin Spring
50135(803)		Knife Bar Crank (front) Position Screw
147222		Knife Bar Crank Shaft
147223		Knife Bar Crank Shaft 147222 with 197(805), 143031, 147047, 147227, two each 140359(805), 143236 and four 147226
147224		Knife Bar Crank Shaft Bushing (back)
624(830)		Knife Bar Crank Shaft Bushing (back) Set Screw •
147225		Knife Bar Crank Shaft Bushing (front)
440(830)		Knife Bar Crank Shaft Bushing (front) Set Screw
147227		Knife Bar Crank Shaft Feeder Oil Wick
147047		Knife Bar Crank Shaft Feeder Oil Wick Clamping Plate
197(805)		Knife Bar Crank Shaft Feeder Oil Wick Clamping Plate Screw

No.		Name
140359(805)	2	Knife Bar Crank Shaft Oil Plug Screw
143236	2	Knife Bar Crank Shaft Oil Plug Screw Washer (fiber)
143031		Knife Bar Crank Shaft Oil Wick (long)
147226	4	Knife Bar Crank Shaft Oil Wick (short)
147228		Knife Bar Gib (lower)
147229		Knife Bar Gib (upper)
147230		Knife Bar Release Lever
147231		Knife Bar Release Lever Bracket
147232		Knife Bar Release Lever Bracket 147231 with 147230 and 147233
152(819)	2	Knife Bar Release Lever Bracket Screw
147233		Knife Bar Release Lever Hinge Pin
147234		Knife Bar Release Lever Plunger
143377		Knife Bar Release Lever Plunger Retainer
147235		Knife Bar Release Lever Spring
147236		Knife Bar Retaining Plate (lower)
208(830)	2	Knife Bar Retaining Plate (lower) Screw
147237		Knife Bar Retaining Plate (upper)
208(830)	2	Knife Bar Retaining Plate (upper) Screw
149052		Knife Bar Spring
147239		Knife Bar Spring Screw Stud
1607(819)		Knife Bar Spring Screw Stud Nut
593(805)		Knife Bar Spring Screw

No.		Name
147240		Knife Bar complete, Nos. 2291, 24109, 147212, 147239, 147241 and two 208(830) and three each 185(850) and 1607(819)
147241		Knife Holder with 620(830)
24109		Knife Holder Handle
185(850)		Knife Holder Handle Screw
208(830)	2	Knife Holder Screw
1607(819)	2	Knife Holder Screw Nut
185(850)	2	Knife Screw
2291		Knife Screw Washer
147139		Machine Pulley small rim diameter (disc power) "V" belt groove 2.9 in. diam. and two 51283(830)
		Note: No. 147139 is regularly furnished.
51283(830)	2	Machine Pulley Set Screw
147140		Machine Pulley large rim diameter (disc power) "V" belt groove 2.9 in. diam. and two 51283(830)
127135		Needle Bar (hollow) with 140239(830)
147242		Needle Bar 127135 with 149088
127279		Needle Bar Bushing (lower)
1133(830)		Needle Bar Bushing (lower) Set Screw
147243		Needle Bar Bushing (upper)
1133(830)		Needle Bar Bushing (upper) Set Screw
147492		Needle Bar Connecting Link
140231(803)		Needle Bar Connecting Link Cap Screw
143056	18	Needle Bar Connecting Link Roller Bearing

No.		Name
143057		Needle Bar Connecting Stud with 140706(803)
140706(803)		Needle Bar Connecting Stud Clamping Screw
147053		Needle Bar Connecting Stud Oil Wick
143058		Needle Bar Connecting Stud Slide Block
140542(830)		Needle Bar Crank Position Screw
143196		Needle Bar Oil Wick
149088		Needle Bar Thread Guide
140239(830)		Needle Set Screw
143176	2	Number Plate Rivet
146591		Oil Flow Body
143061	2	Oil Flow Body Gasket
143062		Oil Flow Window
143063		Oil Flow Window Cap
50257(809)	4	Oil Flow Window Cap Screw
143370		Oil Lead
51369(805)		Oil Lead Screw
143064		Oil Pipe
143384		Oil Pipe for Oiling Rotating Hook Shaft (front) Bearing
143065		Oil Pipe Clamping Sleeve
143066		Oil Pipe Clamping Sleeve Nut
147106		Oil Pipe complete from Oil Pump to Arm Shaft (horizontal) Center Bearing, Nos. 143064, 143065 and 143066 (for Agents only)
143387		Oil Pipe 143384 with 143124 for oiling Rotating Hook Shaft Front Bearing

No.		Name
143124		Oil Pipe Clamping Sleeve
143125		Oil Pipe Clamping Sleeve Nut
143126		Oil Pipe Clamping Sleeve Nut Adaptor
143070		Oil Pump (centrifugal) Body with 143126
143071	2	Oil Pump (centrifugal) Body Position Pin
157(805)	2	Oil Pump (centrifugal) Body Screw (rear and left)
149135		Oil Pump (centrifugal) Body Screw and Magnet Holder
143072		Oil Pump (centrifugal) Cover
143073		Oil Pump (centrifugal) Impeller
50123(805)		Oil Pump (centrifugal) Impeller Locking Screw
143074		Oil Pump (centrifugal) Screen
143075		Oil Pump (centrifugal) Screen Frame
189(805)	4	Oil Pump (centrifugal) Screen Frame Screw
147107		Oil Removing Wick (head end)
149205		Oil Removing Wick (head end) Hinge Plate and Cover
147055		Oil Removing Wick (head end) Hinge Plate and Cover Gasket
197(819)	4	Oil Removing Wick (head end) Hinge Plate and Cover Screw
146745		Oil Removing Wick (head end) Holder Body
147108		Oil Removing Wick (head end) Holder Body 146745 with 146698 and 147107 (for Agents only)
140553(805)		Oil Removing Wick (head end) Holder Body Hinge Screw
146698		Oil Removing Wick (head end) Holder Body Spring
149206		Oil Removing Wick (head end) Holder Body complete, Nos. 140553(805), 146698, 146745, 147055, 147107 and 149205

No.		Name
147141	2	Oil Wick, 11 in. long for oiling Take-up Lever, Take-up Lever Link, Needle Bar Connecting Link and Thread Take-up Lever Link Hinge Bearing
147245		Oil Wick Holder with two 147141
149224		Oil Wick Holder Plug (felt)
140232(809)		Oil Wick Holder Screw
143295		Pair of Gears for Lower Shaft, Nos. 143014 and 143081 (for Agents only)
147476		Pair of Gears for Upper Shaft, Nos. 143015 and 147473 (for Agents only)
149139		Presser Bar (hollow)
147058		Presser Bar Bushing (lower)
149227		Presser Bar Bushing (lower) Washer
1133(830)		Presser Bar Bushing (lower) Set Screw
149140		Presser Bar Guide Bracket with 50203(830)
50203(830)		Presser Bar Guide Bracket Clamping Screw
147247		Presser Bar Lifter
69(850)		Presser Bar Lifter Hinge Screw
147445		Presser Bar Lifting Lever with 454(830)
143108		Presser Bar Lifting Lever Connecting Rod
1611[819]		Presser Bar Lifting Lever Connecting Rod Nut
1611(819)		Presser Bar Lifting Lever Connecting Rod Lock Nut
143191		Presser Bar Lifting Lever Connecting Rod Oil Mist Retaining Disc (felt)
143109		Presser Bar Lifting Lever Connecting Rod Swivel

No.	Name
802(819)	Presser Bar Lifting Lever Hinge Screw
147249	Presser Bar Lifting Lever Link
147250	Presser Bar Lifting Lever Pin
454(830)	Presser Bar Lifting Lever Pin Set Screw
146610	Presser Bar Lifting Lever Spring
147063	Presser Bar Spring
26276	Presser Foot Hinge Pin
147251	Presser Foot Plate
	Note: When ordering No. 147251, state required distance of trimmed edge from seam.
147460	Presser Foot Shank
161160	Presser Foot Shank Spring
147253	Presser Foot (Spring Hinged) complete, for 1/8 in. and 5/32 in. trimming margin, Nos. 26276, 147251, 147460 and 161160
	Note: When ordering No. 147253, state required distance of trimmed edge from seam.
26276	Presser Foot Hinge Pin
147264	Presser Foot Plate
	Note: When ordering No. 147264, state required distance of trimmed edge from seam.
147460	Presser Foot Shank
161160	Presser Foot Shank Spring

No.	Name
147254	Presser Foot (spring hinged) complete, for 3/16 in., 1/4 in., 9/32 in. and 5/16 in. trimming margin, Nos. 26276, 147264 147460 and 161160
	Note: When ordering No. 147254, state required distance of trimmed edge from seam.
	Note: No. 147253, 1/8 in, gauge and No. 147254, 3/16 in. gauge are sent with this machine unless other gauges are specified on order.
127033	Presser Foot for $1/16$ in. and $5/32$ in. trimming margin.
	Note: When ordering No. 127033, state size of trim required.
140390(830)	Presser Foot Screw
147255	Pressure Regulating Screw and Presser Bar Guide
149141	Rotating Hook (Air Cooled) with 143301 and two 1253(830)
149142	Rotating Hook (Air Cooled) 149141 with 143351, 149066 and four 1053(805)
149143	Rotating Hook (Air Cooled) 149142 with 143346, 149065 and three 1367(805)
149145	Rotating Hook (Air Cooled) 149142 with 149065 and three 1367(805) (for Agents only)
149146	Rotating Hook (Air Cooled) 149143 with 149063
270010	Rotating Hook Bobbin
149060	Rotating Hook Bobbin Case
149061	Rotating Hook Bobbin Case 149060 with 591(806), 1380(805) and 40394
40392	Rotating Hook Bobbin Case Latch
125320	Rotating Hook Bobbin Case Latch Lever
2974	Rotating Hook Bobbin Case Latch Lever Fulcrum Pin

No.		Name
1259(830)	2	Rotating Hook Shaft Bevel Gear Set Screw
143082		Rotating Hook Shaft Bushing (back)
140259(830)		Rotating Hook Shaft Bushing (back) Set Screw
149150		Rotating Hook Shaft Bushing (front)
1285(830)		Rotating Hook Shaft Bushing (front) Set Screw
149152		Rotating Hook Shaft Oil Filter Wick
143349		Rotating Hook Shaft Oil Filter Wick Holder
149153		Rotating Hook Shaft Oil Filter complete, Nos. 143349 and 149152
147131		Rotating Hook Shaft Oil Retaining Collar with two 50429(830)
50429(830)	2	Rotating Hook Shaft Oil Sling Set Screw
149066		Rotating Hook Thread Guard
1053(805)	4	Rotating Hook Thread Guard Screw
143351		Rotating Hook Wiper (leather)
147256		Slack Thread Regulator
190(809)		Slack Thread Regulator Screw
147092		Stitch Length Indicator Plate
402(819)		Stitch Length Indicator Plate Screw
143085		Stitch Regulator
143134		Stitch Regulator 143085 with 140549(805), 143086 and 143378
143086		Stitch Regulator Locking Slide
143087		Stitch Regulator Locking Slide Ratchet Wheel
143088		Stitch Regulator Locking Slide Ratchet Wheel Pin

No.		Name
143378		Stitch Regulator Locking Slide Spring
140549(805)		Stitch Regulator Locking Slide Spring Screw
2102	2	Tension Disc
1560(803)		Tension Regulating Thumb Nut
1560(803)		Tension Regulating Thumb Nut Lock Nut
147151		Tension Releasing Disc
147159		Tension Releasing Lever Body
147160		Tension Releasing Lever (adjustable) 147159 with 50123(819) and 147161
50123(819)		Tension Releasing Lever (adjustable) Screw
12398		Tension Releasing Lever Hinge Pin
147161		Tension Releasing Lever Segment
12329		Tension Releasing Lever Spring
32574		Tension Releasing Pin
147152		Tension Spring
140873(803)		Tension Stud
147292		Tension Stud 140873(803) with two 1560(803)
50305(803)		Tension Stud Set Screw
147293		Tension complete, Nos. 32574, 52083, 52394, 147151, 147152, 147292 and two 2102
147257		Thread Eyelet (side of arm) lower
208(830)		Thread Eyelet (side of arm) lower Screw
149166		Thread Eyelet and Thread Guard (front of arm)
52454		Thread Retainer

No.	Name
624(830)	Thread Retainer Set Screw
149128	Thread Take-up Crank and Thread Take-up Lever with 147193 and eighteen 143056 (for Agents only)
149199	Thread Take-up Crank and Thread Take-up Lever with 143057, 143058, 147193 and eighteen 143056
149200	Thread Take-up Crank and Thread Take-up Lever complete, Nos. 92440, 147075 and 149199 (for Agents only)
140609(830)	Thread Take-up Crank Clamping Screw
140610(819)	Thread Take-up Crank Clamping Screw Hole Plug Screw
147070	Thread Take-up Crank Clamping Screw Hole Plug Screw Gasket
1036(830)	Thread Take-up Crank Set Screw
147193	Thread Take-up Crank Wearing Plate
149161	Thread Take-up Lever Guard
147077	Thread Take-up Lever Guard Gasket
152(819)	Thread Take-up Lever Guard and Thread Eyelet and Thread Guard Screw (front of arm)
152(819)	Thread Take-up Lever Guard Screw
147073	Thread Take-up Lever Link Hinge Stud
92440	Thread Take-up Lever Link Hinge Stud Clip
147074	Thread Take-up Lever Link Hinge Stud Oil Wick
435(830)	Thread Take-up Lever Link Hinge Stud Set Screw
147075	Thread Take-up Lever Link Hinge Stud 147073 with 147074
147296	Thread Take-up Lever Oil Guard with 143196 and 147053
217(805)	Thread Take-up Lever Oil Guard Screw

No.		Name
143056	18	Thread Take-up Lever Roller Bearing
147079		Thread Take-up Lever Thread Eyelet Bushing
52394		Thread Take-up Spring
52083		Thread Take-up Spring Regulator with 50305(803)
448(830)		Thread Take-up Spring Regulator Set Screw
147259		Throat Plate Body
(149095)		Throat Plate Cutting Bar (small needle hole) #53 Drill, #5 Needle Position for 147261
		Note: When ordering No. 149095, state required distance of trimmed edge from seam.
50438(804)	2	Throat Plate Cutting Bar Screw
127035		Throat Plate Slide
50438(804)		Throat Plate Slide Screw
(149097) ,47162		Throat Plate Cutting Bar (large needle hole) #46 Drill, #5 Needle Position for 149098
		Note: No. 149097 3/16 in. gauge (tied to the Arm of Machine) is also sent with the machine unless another gauge is specified on order.
		Note: When ordering No. 149097, state required distance of trimmed edge from seam.
(149096) 14726/		Throat Plate (small needle hole) complete, for 3/32 in., 1/8 in., 5/32 in., 3/16 in., and 1/4 in. trim, #53 Drill, #5 Needle Position, Nos. 127035, 147259, 149095 and three 50438(804)
		Note: When ordering No. 149096, state required distance

of trimmed edge from seam.

No.		Name
(149098) ,47 26 3		Throat Plate (large needle hole) complete, for 3/32 in., 1/8 in., 5/32 in., 3/16 in. and 1/4 in. trim, #46 Drill, #5 Needle Position Nos. 127035, 147259, 149097 and three 50438(804)
		Note: No. 149098 1/8 in. gauge is sent with this machine unless another gauge is specified on order.
		Note: When ordering No. 149098, state required distance of trimmed edge from seam.
142032		Throat Plate Cutting Bar (small needle hole) #53 Drill, #5 Needle Position for 147294
147294		Throat Plate (small needle hole) complete, for 1/16 in. trim, #53 Drill, #5 Needle Position for use with No. 149025, Nos. 127035, 142032, 147259 and three 50438(804)
52131		Throat Plate Cutting Bar (large needle hole) #46 Drill, #5 Needle Position for 147295
147295		Throat Plate (large needle hole) complete, for 1/16 in. trim, #46 Drill, #5 Needle Position for use with No. 149025, Nos. 52131, 127035, 147259 and three 50438(804)
1454(850)	2	Throat Plate Screw
143176	2	Trade Mark Rivet
Cat. No. 1515 (16x95)		Needle

ACCESSORIES

No.		Name
270010	2	Bobbin
25878		Edge Guide
Cat. No. 1515 (16x95)	6	Needle
143308	4	Machine Base and Oil Reservoir Cushion
12361	2	Machine Hinge Connection
41400		Machine Rest Pin (wood)
121741		One Quart Can filled with light grade stainless oil
228476		Screw Driver
120440		Screw Driver
259477		Screw Driver 5 in. long
146057		Wrench (socket) for 140609(830)
		Note: Nos. 8908, 11140 and 146057 are not regularly furnished.
8908		Wrench
11140		Wrench
129090		Wrench for 1607
		BOBBIN WINDER NO. 259462
259428		Brake (leather)
259429		Brake Clamp
200113(806)		Brake Clamp Screw
225453		Frame with 202277 and 259660
225454		Frame Hinge Pin

BOBBIN WINDER NO. 259462 (Cont'd)

No.		Name
202277		Frame Oil Packing (wick)
259660		Frame Oil Well Washer
225455		Frame Spring
225456		Frame Spring Plunger
2599 30		Pulley with 457(830)
457(830)		Pulley Set Screw
225381		Spindle
225444		Stop Latch
200056(805)		Stop Latch Screw
225458		Stop Latch Thumb Lever
225459		Stop Latch Thumb Lever Hinge Stud
225459		Stop Latch Thumb Lever Joint Stud
202478		Stop Latch Trip Lever
200299(819)		Stop Latch Trip Lever Hinge Screw
225461		Tension Bracket with 201499(819)
200082(804)		Tension Bracket Screw
228026		Tension Bracket Screw Washer
2102	2	Tension Disc
13710		Tension Spring
201499(819)		Tension Stud
201572(819)		Tension Stud Thumb Nut
225462		Bobbin Winder Tension Bracket complete, Nos. 13710, 201572(819), 225461 and two 2102

BOBBIN WINDER NO. 259462 (Cont'd)

No.	Name
259462	Bobbin Winder complete, Nos. 200056(805), 200082(804), 200113(806), 200299(819), 202478, 225381, 225444, 225453, 225454, 225455, 255456, 225458, 225462, 228026, 259428, 259429, 259662, 259930, two each 225459 and wood screws 3/4 in. No. 12 R. H. B.
	KNEE LIFTER PARTS
147480	Bell Crank Plunger
143280	Rock Shaft
147481	Rock Shaft 143280 with 147482, 147483 and 147485
147482	Rock Shaft Crank with 140351(830) and 143282
140350(830)	Rock Shaft Crank Adjusting Screw
143282	Rock Shaft Crank Adjusting Screw 140350(830) and 51649(809)
51649(809)	Rock Shaft Crank Adjusting Screw Lock Nut
140351(830)	Rock Shaft Crank Clamping Screw
147487	Rock Shaft Knee Arm
147489	Rock Shaft Knee Arm Hub with 140351(830) and 140737(869)
140351(830)	Rock Shaft Knee Arm Hub Clamping Screw
140737(869)	Rock Shaft Knee Arm Set Screw
147488	Rock Shaft Knee Arm complete, Nos. 2767, 147487 and 147489
2767	Rock Shaft Knee Arm Plate with 356(803)
356(803)	Rock Shaft Knee Arm Plate Set Screw
147485	Rock Shaft Spring
147483	Rock Shaft Stop Dog with 140351(830)

HIGH MORTALITY LIST

Recommended Spare Parts and Needles for one years maintenance

281-5 Machine

/	Quantity	10.16/-	Part	NT.
1 M/c	5 M/c	10 M/c	Number	<u>Name</u>
1	5	10	52239	Arm Spool Pin and Thread Eyelet
1	5	10	149025	Feed Dog
2	10	20	50117(830)	Feed Dog Screw
3	15	30	147211	Knife (narrow)
3	15	30	147495	Knife (wide)
3	15	30	620(830)	Knife Adjusting Screw
2	10	20	185(850)	Knife Screw
2	10	20	2291	Knife Screw Washer
1	5	10	149139	Presser Bar (hollow)
1	5	10	147247	Presser Bar Lifter
1	5	10	147253	Presser Foot (spring hinged) complete, for 1/8 in. and 5/32 in. trimming margin
1	5	10	147254	Presser Foot (spring hinged) complete, for 3/16 in., 1/4 in., 9/32 in. and 5/16 in. trimming margin Note: When ordering Nos. 147253 and 147254, state required distance of trimmed edge from seam. Note: No. 147253, 1/8 in. gauge and No. 147254, 3/16 in. gauge are sent with this
				Machine unless other gauges are specified on order.
1	5	10	140390(830)	Presser Foot Screw
1	5	10	149145	Rotating Hook
6	30	60	270010	Rotating Hook Bobbin
1	5 5	10	147256	Slack Thread Regulator
1 4	30	10	190(809)	Slack Thread Regulator Screw
6 2	10	60	2102	Tension Disc
		20	147151	Tension Releasing Disc
1	5	10	12329	Tension Releasing Lever Spring
1	5	10	147292	Tension Stud
1	5 5	10	147257	Thread Eyelet (side of arm) lower Thread Eyelet and Thread Guard
1	5	10	149166	(front of arm)
1	5	10	52454	Thread Retainer

KNEE LIFTER PARTS (Cont'd)

No.	Name	
140351(830)	Rock Shaft Stop Dog Clamping Screw	
147484	Rock Shaft complete, Nos. 147481 and 147488	
	MACHINE BASE and OIL RESERVOIR	
147491	Machine Base and Oil Reservoir	
143257	Machine Base and Oil Reservoir Gasket (cork)	
50741(805)	Machine and Machine Base and Oil Reservoir Screw (for shipping purposes)	
140343(805)	Machine and Machine Base and Oil Reservoir Screw Hole Plug Screw	
149121	Machine Base and Oil Reservoir (large) with Knee Lifter Rock Shaft, Nos. 50741(805), 143257, 143280, 147480, 147482, 147483, 147485 and 147491	

FITTINGS

(For Triangular Needle Hole Location)

No.	Name		
143553	Feed Dog, 12 teeth (8 teeth to the inch) for 1/8 in1/8 in and 9/64 in9/64 in. gauges, for 143600		
	Note: When ordering No. 143553, state gauge required.		
1255(805)	Feed Dog Screw		
143562	Needle Clamp with three 51334(830), for $1/8$ in. $-1/8$ in. and $9/64$ in. $-9/64$ in. gauges		
	Note: When ordering No. 143562, state gauge required.		
51334(830)	Needle Set Screw (3)		
143563	Needle Guard (movable) for $1/8$ in. $-1/8$ in. and $9/64$ in. $-9/64$ in. gauges		
	Note: When ordering No. 143563, state gauge required.		
143564	Presser Foot Plate		
	Note: When ordering No. 143564, state gauge required.		
128390	Presser Foot Plate Hinge Stud (2)		
665(809)	Presser Foot Plate Hinge Stud Position Screw (2)		
143591	Presser Foot Shank		
143592	Presser Foot Yielding Heel		
	Note: When ordering No. 143592, state gauge required.		
143593	Presser Foot Yielding Heel Connection		
18055	Presser Foot Yielding Heel Connection Hinge Pin		
20178	Presser Foot Yielding Heel Connection Spring		
18055	Presser Foot Yielding Heel Hinge Pin		

ACCESSORIES

No.	Name			
Cat. No. 3651 (149x3)	Needle (18)			
120344	Oiler with 120345 (not filled)			
120345	Oiler Spout (4 1/2 in. long)			
120341	Tweezers			
4879	Treadle Chain Connecting Link (hook)			
6439	Treadle Chain (45 in.) with 56864 and 56865			
56864	Treatle Chain Hook (large)			
56865	Treadle Chain Hook (small)			
139190	Machine Cushion			
139191	Machine Mounting Cushion (2)			
51069(813)	Machine Mounting Cushion Bolt (2)			
2807	Machine Mounting Cushion Bolt Washer (2)			
146(813)	Machine Screw (for mounting machine to cushion) (2)			
	BELT GUARD			
143574	Belt Guard			
146(819)	Belt Guard Adjusting Screw (2)			
143575	Belt Guard Bracket			
143576	Belt Guard Holder with 1448(830)			
1448(830)	Belt Guard Holder Set Screw			
143577	Belt Guard complete, Nos. 143574, 143575, 143576 and four 146(819)			
146(819)	Belt Guard Screw (2)			

FOOT LIFTER AND TREADLE STARTING PARTS (Cont'd)

No.	Nam e
1522(816)	Starting Treadle Support Bracket Bolt Nut (2)
126509	Starting Treadle Support Bracket Bolt Nut Socket Washer (2)
12620(816	Starting Treadle Support Bracket Bolt Washer (2)
	THREAD UNWINDER FOR SIX CONES
150364	Base with two 437(830)
150653	Rod with 151614
151614	Rod Coupling
437(830)	Rod Set Screw (2)
150366	Thread Cone Holder (6)
164(809)	Thread Cone Holder Screw (6)
19020	Thread Cone Holder Screw Washer (6)
150654	Thread Cone Holder Support for two cones
150367	Thread Cone Holder Support for four cones
150655	Thread Cone Holder Support Bracket for 150654
51083(813)	Thread Cone Holder Support Bracket Bolt with 51581(813)
51581(813)	Thread Cone Holder Support Bracket Bolt Nut
51082(813)	Thread Cone Holder Support Bolt with 51581(813), for 150367
51581(813)	Thread Cone Holder Support Bolt Nut
150368	Thread Cone Steady Wire (6)
150656	Thread Guide for two threads
150369	ThreadGuide for four threads
178(809)	Thread Guide Screw (2)

	Quantity	<i>I</i>	Part	
1 M/c	5 M/c	10 M/c	Number	Name
			**************************************	Min of the Control of Spinors
1	5	10	143568	Tension (looper thread) complete
15	75	150	2102	Tension (needle thread) Disc
3	15	30	32572	Tension (needle thread) Releasing
				Disc
3	15	30	59539	Tension (needle thread) Screw Stud
2	10	20	49220	Tension (needle thread) Thread Guide (back)
2	10	20	143569	Tension (needle thread) Thread Guide (center)
2	10	20	131696	Tension (needle thread) Thread
2	1 5	2.0	120101	Guide (front)
3	15	30	139181	Thread Cutter (knife)
6	30	60	198(818)	Thread Cutter Screw
1	. 5	10	143570	Thread Guide (front of arm)
1	5	10	140180(809)	Thread Guide (front of arm) Screw
1	5	10	139147	Thread (looper) Take-up Cover Lock Spring
1	5	10	139148	Thread (looper) Take-up Stripper
1	5	10	139154	Thread (looper) Take-up Thread Guide (left)
1	5	10	237(809)	Thread (looper) Take-up Thread Guide (left) Screw
1	5	10	139315	Thread (looper) Take-up Thread
1	5	10	139316	Guide (right) (for one thread) Thread (looper) Take-up Thread
•	J	10	13/310	Guide (right) (for two threads)
1	5	10	139317	Thread (looper) Take-up Thread Separator
1	5	10	139171	Thread (looper) Thread Guide
-	3	10		(front of bed) Cover Catch
1	5	10	229(809)	Thread (looper) Thread Guide
				(front of bed) Cover Catch Screw
3	15	30	139158	Thread (looper) Thread Guide (intermediate, left and right)
l	5	10	139177	Thread (needle) Eyelet
1	5	10	143571	Thread (needle) Eyelet (side of
•	J	10	1133,1	arm)
1	5	10	724(809)	Thread (needle) Eyelet (side of
1	5	10	143572	arm) Screw Thread (needle) Take-up
l	5	10	**143596	Thread (needle) Take-up Throat Plate $(1/8 \text{ in.} -1/8 \text{ in.} \text{ and})$
_				9/64 in. - 9/64 in. gauges
3	15	30	691(806)	Throat Plate Screw
		Cat. No. 3	651 (149×3)	Needle