



SINGER

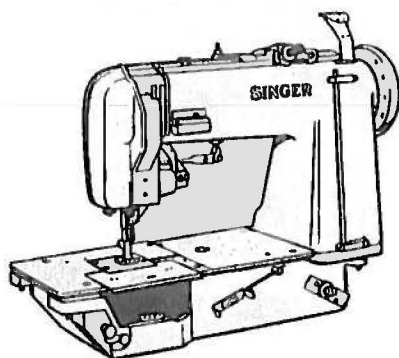

**300W101
PARTS**

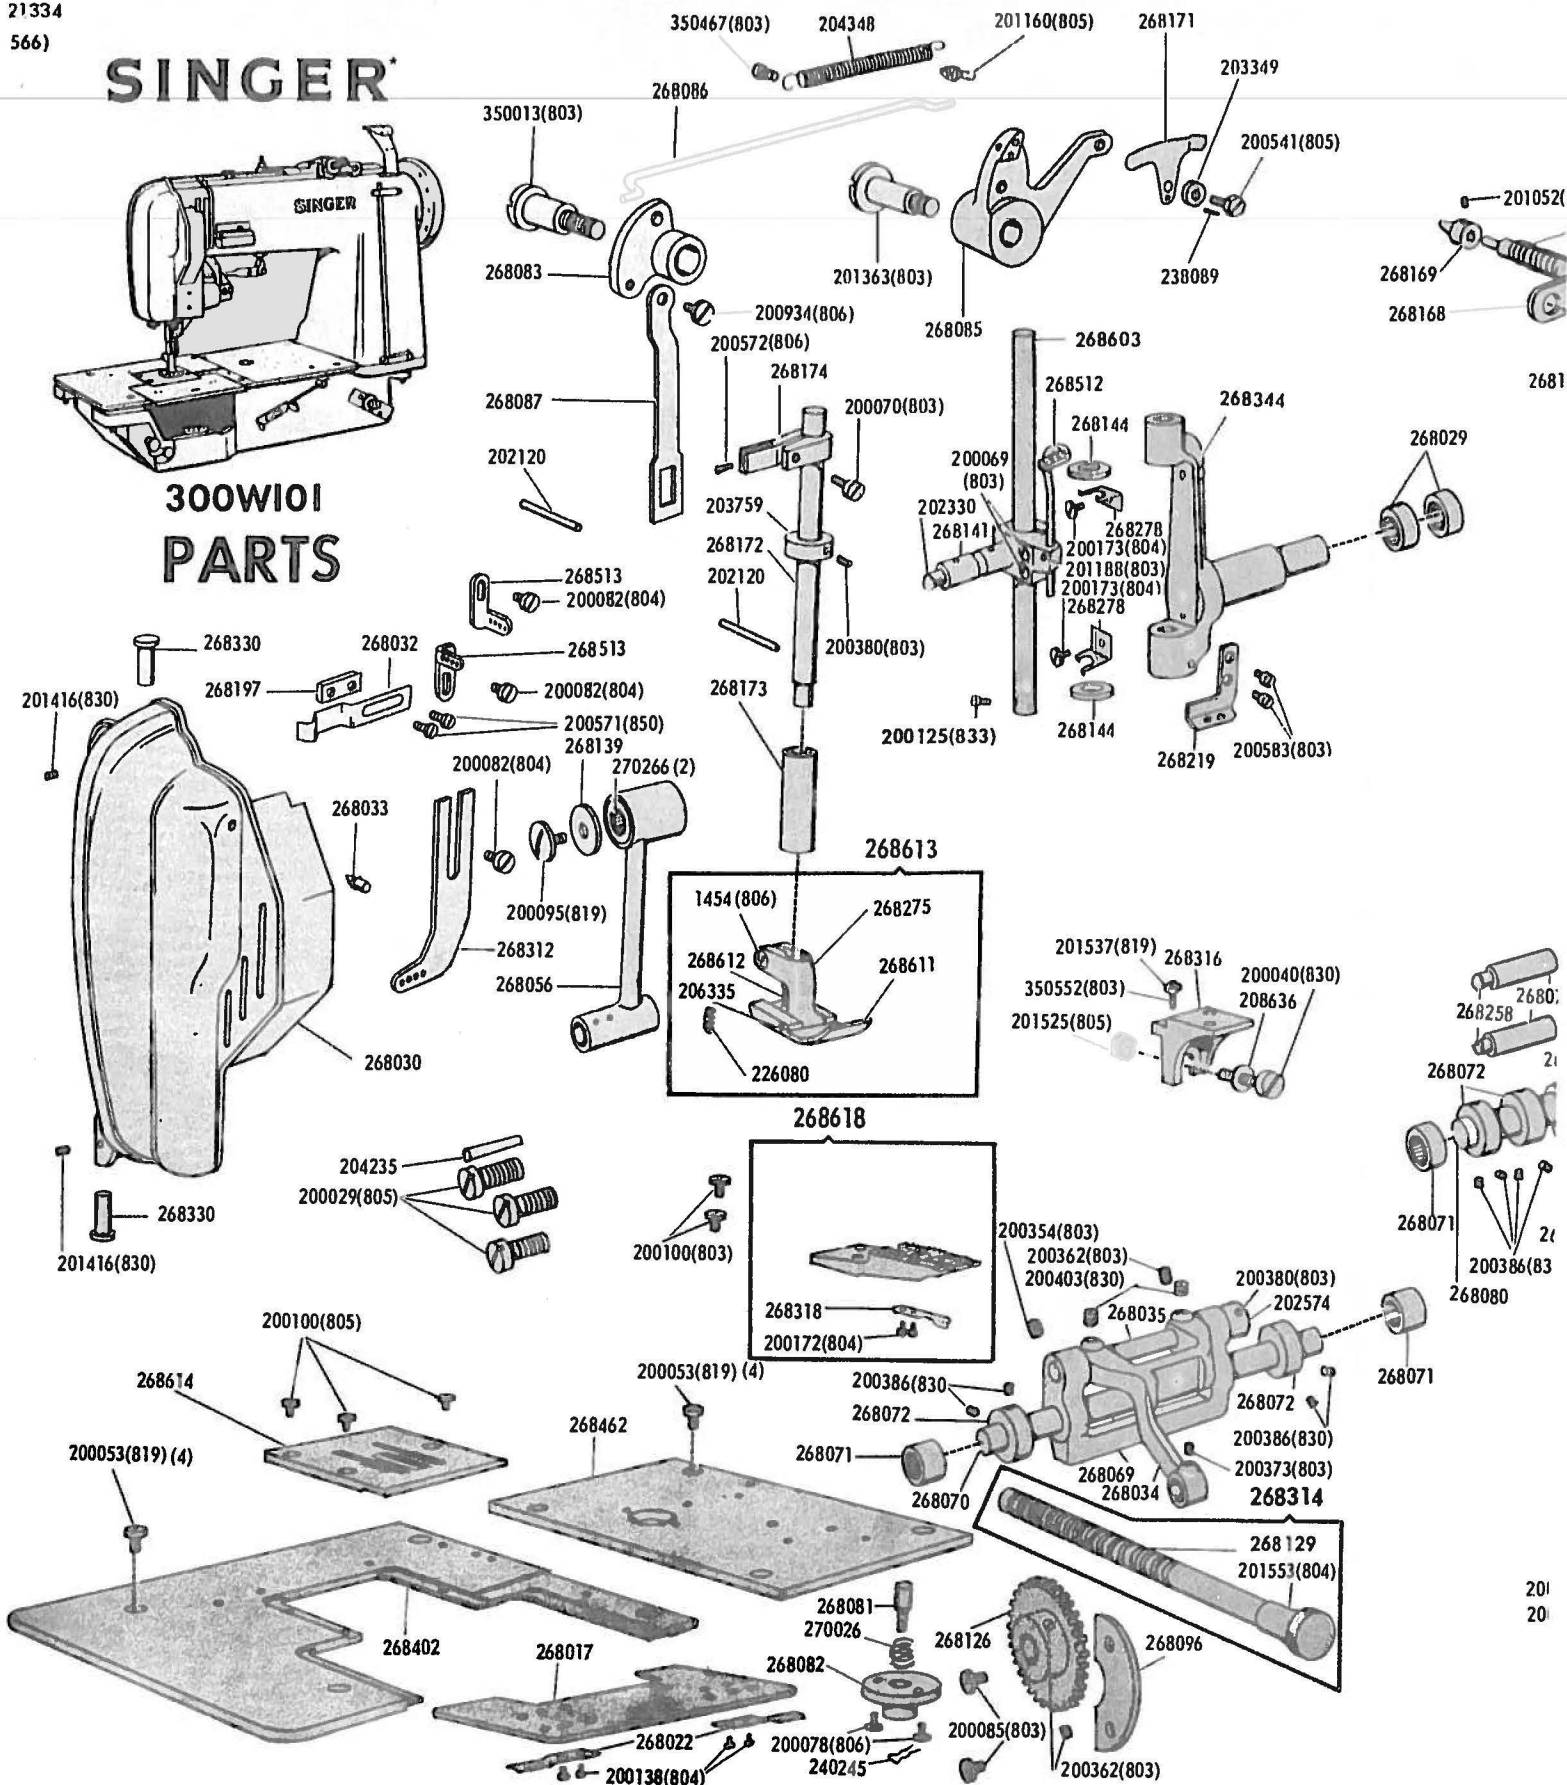

NUMERICAL LIST OF PARTS 300W101 MACHINE

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1454(806)	Presser Foot Shank Pinch Screw	200386(830)	Feed Driving Rock Shaft Collar Set Screw (4)	268022	Bed Plate Slide Spring (2)
2102	Needle Thread Tension Disc (2)	200394(803)	Feed Lifting Eccentric Set Screw (2)	268024	Arm Shaft Ball Bearing (back)
8582	Arm Position Pin (2)	200403(830)	Spreader Driving Crank Set Screw	268024	Bed Shaft Ball Bearing
10148	Looper Thread Tension Spring	200403(830)	Feed Bar Set Screw (2)	268028	Bed Shaft Connection Belt Pulley with two 201254(803)
268129	Looper Throw-out Rack Rod	200444(803)	Looper Throw-out Gear Locking Plunger Stop Screw	268029	Bed Shaft Needle Bearing (2)
268314	Looper Throw-out Rack Rod 268129 with 201553(804)	200541(805)	Needle Thread Tension Releasing Plate Screw	268029	Needle Bar Rock Frame Needle Bearing (2)
32572	Needle Thread Tension Releasing Disc	200562(805)	Looper Thread Tension Bracket Screw (2)	268030	Face Plate with 268033 and two 201416(830)
50169(809)	Looper Thread Guide (top of Arm) Bracket Screw (2)	200571(805)	Face Plate Lock Spring Screw (2)	268032	Face Plate Lock Spring
50326(803)	Needle Thread Tension Stud	200572(806)	Presser Bar Guide Bracket Adjusting Screw	268033	Face Plate Lock Stud
51570(830)	Needle Thread Tension Thumb Nut	200573(804)	Looper Driving Crank Oil Stop Screw	268034	Feed Bar with 200373(803) and two 200403(830)
54279	Needle Thread Tension Thread Guide (double)	200578(850)	Looper Thread Guide (top of arm) Bracket Screw (2)	268035	Feed Bar Hinge Pin
59537	Needle Thread Tension Spring Bushing (front)	200583(803)	Needle Bar Rock Frame Thread Guide Screw (2)	268044	Arm Shaft Oil Stop Ball Spring (rear)
59538	Needle Thread Tension Spring Bushing (back)	200934(806)	Foot Lifter Lifting Link Hinge Screw	268044	Bed Shaft Oil Stop Ball Spring
59539	Needle Thread Tension Stud 50326(803) with 51570(803)	200987(819)	Looper Thread Tension Stud	268045	Spreader Driving Eccentric with two 200364(803)
67425	Looper Carrier Crank Clamping Stud Washer	201020(805)	Spreader Driving Connection Cap Screw (2)	268046	Spreader Driving Eccentric Counter-balance with two 200364(803)
31741	Needle Thread Tension Spring	201052(833)	Needle Thread Tension Releaser Cap Set Screw	268047	Feed Lifting Eccentric with 268077 and two 200394(803)
41220(869)	Needle Guard Set Screw	201160(805)	Foot Lifter Lever Spring Screw Eye	268048	Machine Pulley (aluminum alloy casting) for "V" belt (outside diam. of belt groove 2.9 in.) with 200327(803) and 200328(803)
00004(805)	Arm Screw (4)	201188(803)	Needle Thread Guide (on Needle Bar Connecting Stud) Set Screw	268049	Machine Pulley 268048 with 268024
00029(805)	Arm Head Screw (3)	201254(803)	Bed Shaft Connection Belt Pulley Set Screw (2)	268051	Looper Thread Guide
00035(804)	Looper Thread Guide Screw	201254(803)	Arm Shaft Connection Belt Pulley Set Screw (2)	268052	Looper Thread Take-up Rod
00035(805)	Spreader Bar Bearing Screw (2)	201256(830)	Feed Lifting Crank Pinch Screw	268053	Spreader Driving Rock Shaft with 200064(806)
00040(830)	Feed Dog Shank Screw	201363(803)	Foot Lifter Lever Hinge Screw	268054	Bed Shaft with 268044, 268214, 268265 and 350534(803)
00047(804)	Arm Shaft Ball Bearing (back) Housing Screw (3)	201416(830)	Face Plate Hinge Stud Set Screw (2)	268056	Needle Bar Connecting Link 268055 with two 270266
00047(805)	Needle Thread Tension Bracket Screw (2)	201418(803)	Feed Lifting Rock Shaft Crank Position Screw	268060	Feed Driving Connection
00053(819)	Bed Plate Screw (8)	201477(803)	Looper Throw-out Gear Locking Plunger Screw Bushing	268060	Needle Bar Rock Frame Driving Connection
00054(803)	Looper Thread Tube Clamp Screw (4)	201522(805)	Needle Bar Rock Frame Driving Connection Hinge Stud Nut	268061	Needle Bar Rock Frame Driving Connection 268060 with 268063
00058(803)	Needle Bar Rock Frame Driving Arm Pinch Screw (2)	201522(805)	Feed Lifting Connection Hinge Stud Nut	268061	Feed Driving Connection 268060 with 268063
00061(833)	Feed Lifting Rock Shaft Crank Pinch Screw (2)	201524(805)	Looper Carrier Crank Clamping Stud Nut	268062	Feed Driving Connection Hinge Stud with 268258
00061(833)	Feed Driving Rock Shaft Crank Pinch Screw (2)	201525(805)	Feed Dog Shank Screw Lock Nut	268062	Feed Lifting Connection Hinge Stud with 268258
00064(806)	Looper Thread Take-up Rod Set Screw	201537(819)	Feed Dog Shank Adjusting Screw Lock Nut	268062	Needle Bar Rock Frame Driving Connection Hinge Stud with 268258
00069(803)	Needle Bar Connecting Stud Pinch Screw (2)	201553(804)	Looper Throw-out Rack Rod Thumb Nut	268063	Feed Driving Connection Needle Bearing
00070(803)	Presser Bar Guide Bracket Pinch Screw	201572(819)	Looper Thread Tension Thumb Nut	268063	Needle Bar Rock Frame Driving Connection Needle Bearing
30078(805)	Arm Side Cover Screw (3)	201620(804)	Looper Throw-out Gear Locking Plunger Thumb Nut	268063	Spreader Driving Connection Needle Bearing
30078(806)	Feed Regulating Stud Socket Screw (2)	201736(805)	Spreader Driving Rock Shaft Screw Stud Nut	268064	Feed Driving Eccentric
30082(804)	Needle Thread Guide Screw (3)	202005	Arm Screw Washer (4)	268064	Needle Bar Rock Frame Driving Eccentric
30085(803)	Looper Carrier Shaft Bushing (left) Position Plate Screw (2)	202120	Presser Bar Lever Stop Pin	268065	Feed Driving Eccentric Adjusting Disc
30089(803)	Looper Carrier Crank Hinge Pin Pinch Screw	202120	Foot Lifter Lifting Link Stop Pin	268065	Needle Bar Rock Frame Driving Eccentric Adjusting Disc
30095(819)	Needle Bar Connecting Link Gap Washer Screw	202253	Arm Shaft Connection Belt Pulley Spring Flange (2)	268066	Feed Driving Eccentric Adjusting Disc Spring
30098(806)	Looper Throw-out Safety Latch Spring Bracket Screw (2)	202330	Needle Bar Connecting Stud Oil Packing (wick)	268066	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring
30100(803)	Feed Dog Screw (2)	202574	Feed Bar Hinge Pin Collar with 200380(803)	268067	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382(833)
30100(805)	Throat Plate Screw (3)	203349	Needle Thread Tension Releasing Plate Screw Washer	268067	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring Collar with two 200382(833)
30123(804)	Needle Bar Rock Frame Driving Connection Cap Screw	203759	Presser Bar Stop Collar with 200380(803)	268069	Feed Driving Rock Frame with 200354(803) and 200362(803)
30123(804)	Feed Driving Connection Cap Screw	204235	Arm Head Position Pin	268070	Feed Driving Rock Shaft
30125(833)	Needle Set Screw	204348	Foot Lifter Lever Spring	268071	Feed Driving Rock Shaft Needle Bearing (2)
30138(804)	Bed Plate Slide Spring Screw (4)	204365	Needle Thread Tension Releaser Spring	268071	Feed Lifting Rock Shaft Needle Bearing (2)
30172(804)	Loop Deflector Screw (2)	204925	Spreader Screw Washer	268071	Spreader Driving Rock Shaft Needle Bearing (2)
30173(804)	Needle Bar Oiling Felt Holder Screw (2)	206335	Looper Driving Crank Oil Hole Cover Screw Washer	268072	Feed Driving Rock Shaft Collar with two 200386(830) (2)
30226(805)	Presser Bar Spring Support Screw	206336	Presser Foot Hinge Pin	268072	Feed Lifting Rock Shaft Collar with two 200386(830) (2)
30303(819)	Looper Driving Crank Oil Hole Cover Screw	206336	Looper Holder Screw Washer	268072	Spreader Driving Rock Shaft Collar with two 200386(830) (2)
30327(803)	Machine Pulley Set Screw	214529	Feed Dog Shank Screw Washer	268073	Feed Driving Rock Shaft Crank with two 200061(833)
30328(803)	Machine Pulley Position Screw	226080	Needle Bar Rock Frame Regulating Stud Spring	268075	Feed Lifting Connection
30337(803)	Needle Bar Rock Frame Regulating Stud Sleeve Set Screw	226206	Presser Foot Plate Spring	268077	Feed Lifting Crank with 200373(803) and 201256(830)
30344(830)	Looper Driving Crank Position Screw (2)	228448	Needle Thread Tension Releasing Pin	268078	Feed Lifting Eccentric Lubricating Pad (wood)
30346(803)	Needle Bar Crank Set Screw	238089	Machine Locating Stud (4)	268079	Feed Lifting Link
30354(803)	Needle Bar Crank Position Screw	240245	Needle Thread Tension Releasing Plate Pin	268080	Feed Lifting Link Hinge Pin with 268258 (2)
30354(803)	Feed Driving Rock Frame Position Screw	241763	Feed Regulating Stud Retaining Spring	268080	Feed Regulating Stud
30354(803)	Looper Carrier Shaft Bushing Position Screw (2)	241763	Feed Driving Eccentric Friction Plate Screw Set Screw Packing (brass) (2)	268082	Feed Regulating Stud Socket
30362(803)	Looper Driving Crank Set Screw	244048	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw Set Screw Packing (brass) (2)	268083	Foot Lifter Bell Crank
30362(803)	Looper Throw-out Gear Set Screw (2)	250265	Looper Thread Tension Disc (2)	268085	Foot Lifter Lever with 238089
30362(803)	Looper Carrier Shaft Bushing Set Screw (2)	263572	Looper Throw-out Gear Locking Plunger Spring	268086	Foot Lifter Lever Rod
30362(803)	Feed Driving Rock Frame Set Screw	264709	Spreader Driving Rock Shaft Screw Stud Oil Packing (wick)	268087	Foot Lifter Lifting Link
30364(803)	Spreader Driving Eccentric Set Screw (2)	267623	Needle Bar Rock Frame Regulating Stud Cap with 200364(803)	268094	Looper Carrier Shaft 268093 with 268095 and 268097
30364(803)	Spreader Driving Eccentric Counter-balance Set Screw (2)	267623	Feed Driving Eccentric Friction Plate	268096	Looper Carrier Shaft Bushing (left) Position Plate
30364(803)	Needle Bar Rock Frame Regulating Stud Cap Set Screw	268003	Needle Bar Rock Frame Driving Eccentric Friction Plate	268098	Looper Driving Connection
30364(803)	Looper Throw-out Gear Locking Plunger Stop Screw Set Screw	268004	Arm Shaft with 268009, 268044, 268264 two each 268214 and 350534(803)	268099	Looper Carrier Needle Bearing (2)
30373(803)	Spreader Driving Crank Position Screw	268005	Arm Shaft Ball Bearing (back) Housing	268099	Looper Driving Connection Needle Bearing
30373(803)	Feed Lifting Link Hinge Pin Set Screw (2)	268006	Arm Shaft Ball Bearing (front)		
30378(803)	Needle Bar Crank Position Screw Check Screw	268008	Arm Shaft Connection Belt Pulley with two each 201254(803) and 202253		
30380(803)	Spreader Holder Set Screw (2)	268009	Arm Shaft Oil Slinger with 350171(803)		
30380(803)	Presser Bar Stop Collar Set Screw	268010	Arm Shaft Oil Stop Ball Spring (front)		
30380(830)	Feed Bar Hinge Pin Collar Set Screw	268017	Arm Side Cover		
30382(833)	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring Collar Set Screw (2)		Bed Plate Slide with two 268022 and four 200138(804)		
30382(833)	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw (2)				
30386(830)	Looper Throw-out Safety Latch Collar Set Screw (2)				
30386(803)	Spreader Driving Rock Shaft Collar Set Screw (4)				
30386(803)	Feed Lifting Rock Shaft Collar Set Screw (4)				

PART NO.	DESCRIPTION
268102	Looper Driving Crank Oil Hole Cover
268111	Looper Thread Guide (top of Arm)
268121	Bracket
268121	Looper Thread Tension Bracket
268121	Spacing Collar (2)
268121	Needle Thread Tension Bracket
268123	Spacing Collar (2)
268123	Looper Thread Tube with two 268125
268124	Looper Thread Tube Clamp (2)
268125	Looper Thread Tube Thread Bushing (2)
268126	Looper Throw-out Gear with two 200362(803)
268127	Looper Throw-out Gear Locking Plunger
268131	Looper Throw-out Safety Latch
268132	Looper Throw-out Safety Latch Spring
268133	Looper Throw-out Safety Latch Spring Bracket
268603	Needle Bar
268139	Needle Bar Connecting Link Cap Washer
268141	Needle Bar Connecting Stud with 201188(803), 202330 and two 200069(803)
268142	Needle Bar Crank with 200346(803), 200354(803) and 200378(803)
268143	Needle Bar Crank 268142 with 268005
268144	Needle Bar Oiling Felt (2)
268148	Needle Bar Rock Frame Regulating Stud
268149	Needle Bar Rock Frame Regulating Stud Sleeve
268150	Needle Bar Rock Frame Regulating Stud complete, Nos. 214529, 264709, 268148 and 268149
268161	Needle Bar Rock Frame Driving Arm with two 200058(803)
268162	Spreader Point
268167	Needle Thread Tension Bracket
268168	Needle Thread Tension Releaser
268169	Needle Thread Tension Releaser Cap with 201052(833)
268171	Needle Thread Tension Releasing Plate (adjustable)
268172	Presser Bar
268173	Presser Bar Bushing
268174	Presser Bar Guide Bracket with 200070(803) and 200572(806)
268176	Presser Bar Spring
268181	Spreader Bar
268184	Spreader Bar Bearing
268185	Spreader Holder with two 200380(803)
268186	Spreader Driving Connection with two 201020(805)
268187	Spreader Driving Crank with 200373(803) and 200403(830)
268190	Spreader Driving Pin
268197	Face Plate Lock Spring Plate
268198	Feed Lifting Rock Shaft Crank with 201418(803) and two 200061(833)
268199	Looper Throw-out Safety Latch Collar with two 200386(830)
268208	Looper Carrier Crank Hinge Pin with 268258
268214	Arm Shaft Oil Stop Ball 5/32 in. diam. (2)
268214	Bed Shaft Oil Stop Ball
268216	Looper Driving Connection 268098 with 268099
268219	Needle Bar Rock Frame Thread Guide
268220	Spreader Driving Eccentric Thrust Washer (2)
268233	Spreader Driving Connection 268186 with 268063 and 351876
268258	Feed Driving Connection Hinge Stud Oil Packing (wick)
268258	Feed Lifting Connection Hinge Stud Oil Packing (wick)
268258	Feed Lifting Link Hinge Pin Oil Packing (wick) (2)
268258	Looper Carrier Crank Hinge Pin Oil Packing (wick)
268258	Needle Bar Rock Frame Driving Connection Hinge Stud Oil Packing (wick)
268261	Bed Shaft Connection Belt Pulley 268028 with 268024
268263	Needle Thread Tension complete, Nos. 32572, 59537, 59538, 59539, 131741 and two 2102
268264	Arm Shaft Oil Control Rod (wood)
268265	Bed Shaft Oil Control Rod (wood)
268270	Arm Shaft Connection Belt (reinforced neoprene)
268275	Presser Foot Shank with 1454(806)
268277	Looper Driving Crank with 200362(803) 200573(804) and two 200344(830)
268278	Needle Bar Oiling Felt Holder (2)
268344	Needle Bar Rock Frame
268306	Presser Bar Spring Cushion Spring
268307	Looper Carrier Crank with 200089(803)
268308	Looper Carrier Crank Clamping Stud
268310	Needle Guard
268312	Needle Thread Guide (on Arm Head)
268313	Looper Throw-out Gear Locking Plunger Handle
268315	Feed Driving Flange with 267623, two each 241763, 350467(803), 350477(830) and 350548(803)
268315	Needle Bar Rock Frame Driving Flange with 267623, two each 241763, 350467(803), 350477(830) and 350548(803)
268316	Feed Dog Shank with 201537(819) and 350552(803)

PART NO.	DESCRIPTION
268318	Loop Deflector
268330	Face Plate Hinge Stud (2)
268331	Looper Thread Tension Bracket
268332	Looper Thread Tension complete, Nos. 10148, 200987(819), 201572(819) and two 244048
268333	Looper Thread Tension Thread Guide
268367	Looper Carrier
268368	Looper Carrier 268367 with two 268099
268369	Looper with 141220(869)
268370	Looper and Needle Guard complete, Nos. 268310 and 268369
268373	Looper Thread Guide (on bed at looper) for all gauges from 3/16 to 2 inches
268402	Bed Plate (left)
268462	Bed Plate (right)
268505	Looper Thread Guide (top of Arm)
268506	Looper Thread Guide (top of Arm)
	Bracket 268111 with 268505 and two 50169(809)
268512	Needle Thread Guide (on Needle Bar Connecting Stud)
268513	Needle Thread Guide (on side of Arm) (2)
268602	Looper Holder with two 350478(803)
268611	Presser Foot Plate
268612	Presser Foot Plate Heel Spring
268613	Presser Foot (spring hinged) complete, 46 needle hole, Nos. 206335, 226080, 268275, 268611 and 268612
268614	Throat Plate
268618	Feed Dog, 46 needle hole, for needle sizes 20 and 22 (teeth cut 15 to the inch) with 268318 and two 200172(804), for 268614
268638	Spreader with 268162
270026	Feed Regulating Stud Spring
270266	Needle Bar Connecting Link Needle Bearing (2)
340466(803)	Spreader Driving Rock Shaft Screw Stud with 263572
350013(803)	Foot Lifter Bell Crank Hinge Screw
350149(803)	Spreader Screw
350171(803)	Arm Shaft Oil Slinger Set Screw
350267(805)	Looper Holder Screw
350381(803)	Presser Bar Spring Adjusting Screw
350467(803)	Presser Bar Spring Adjusting Screw Set Screw
350467(803)	Needle Bar Rock Frame Driving Flange Set Screw (2)
350467(803)	Feed Driving Flange Set Screw (2)
350468(805)	Looper Thread Guide (on bed at looper) Screw
350477(830)	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw Set Screw (2)
350477(830)	Feed Driving Eccentric Friction Plate Screw Set Screw (2)
350478(803)	Looper Set Screw
350478(803)	Looper Adjusting Screw
350534(803)	Bed Shaft Oil Stop Ball Screw
350534(803)	Arm Shaft Oil Stop Ball Screw (2)
350548(803)	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw (2)
350548(803)	Feed Driving Eccentric Friction Plate Screw (2)
350552(803)	Feed Dog Shank Adjusting Screw
351876	Spreader Driving Rock Shaft Screw Stud Ball Bearing

ACCESSORIES

PART NO.	DESCRIPTION
265307	Bed Hinge Connection (2)
350598	Bed Hinge Connection Screw (4)
228731	Drip Pan
200019(805)	Drip Pan Screw (4)
232365	Foot Lifter Treadle Chain, 41-1/2 in. long
268340	Looper Threading Wire
228452	Machine Base Oil Drain Jar complete
228444	Machine Cushion (neoprene)
41400	Machine Rest Pin (wood)
228733	Machine Rest (left)
228734	Machine Rest (right)
Cat. No.	
3260	Needles (62x57) Size 22 (6)
228491	Pressure Oilier
228745	Thread Unwinder complete
120341	Tweezers
21887	Wrench

STYLE OF FINISH:

When ordering screws, nuts and similar parts include new code numbers which follow part numbers in list.

NEW	OLD	DESCRIPTION
803	C	Hardened only
804	D	Polished only
805	E	Soft, Not Polished
806	F	Hardened and Polished
819	X	Black Oxide for Iron and Steel
830	A. L.	Heat Treated for Toughness
833	A. L. X.	Hardened and Black Oxide for Iron and Steel
869	--	Commercial Finish for Allen type Screws