




SINGER

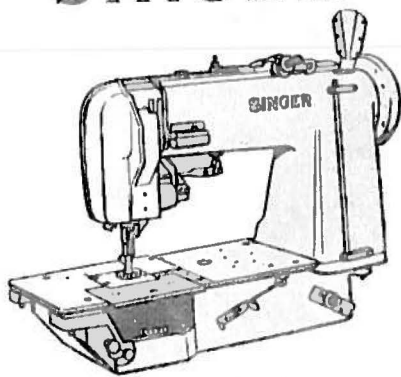


300W104

PARTS

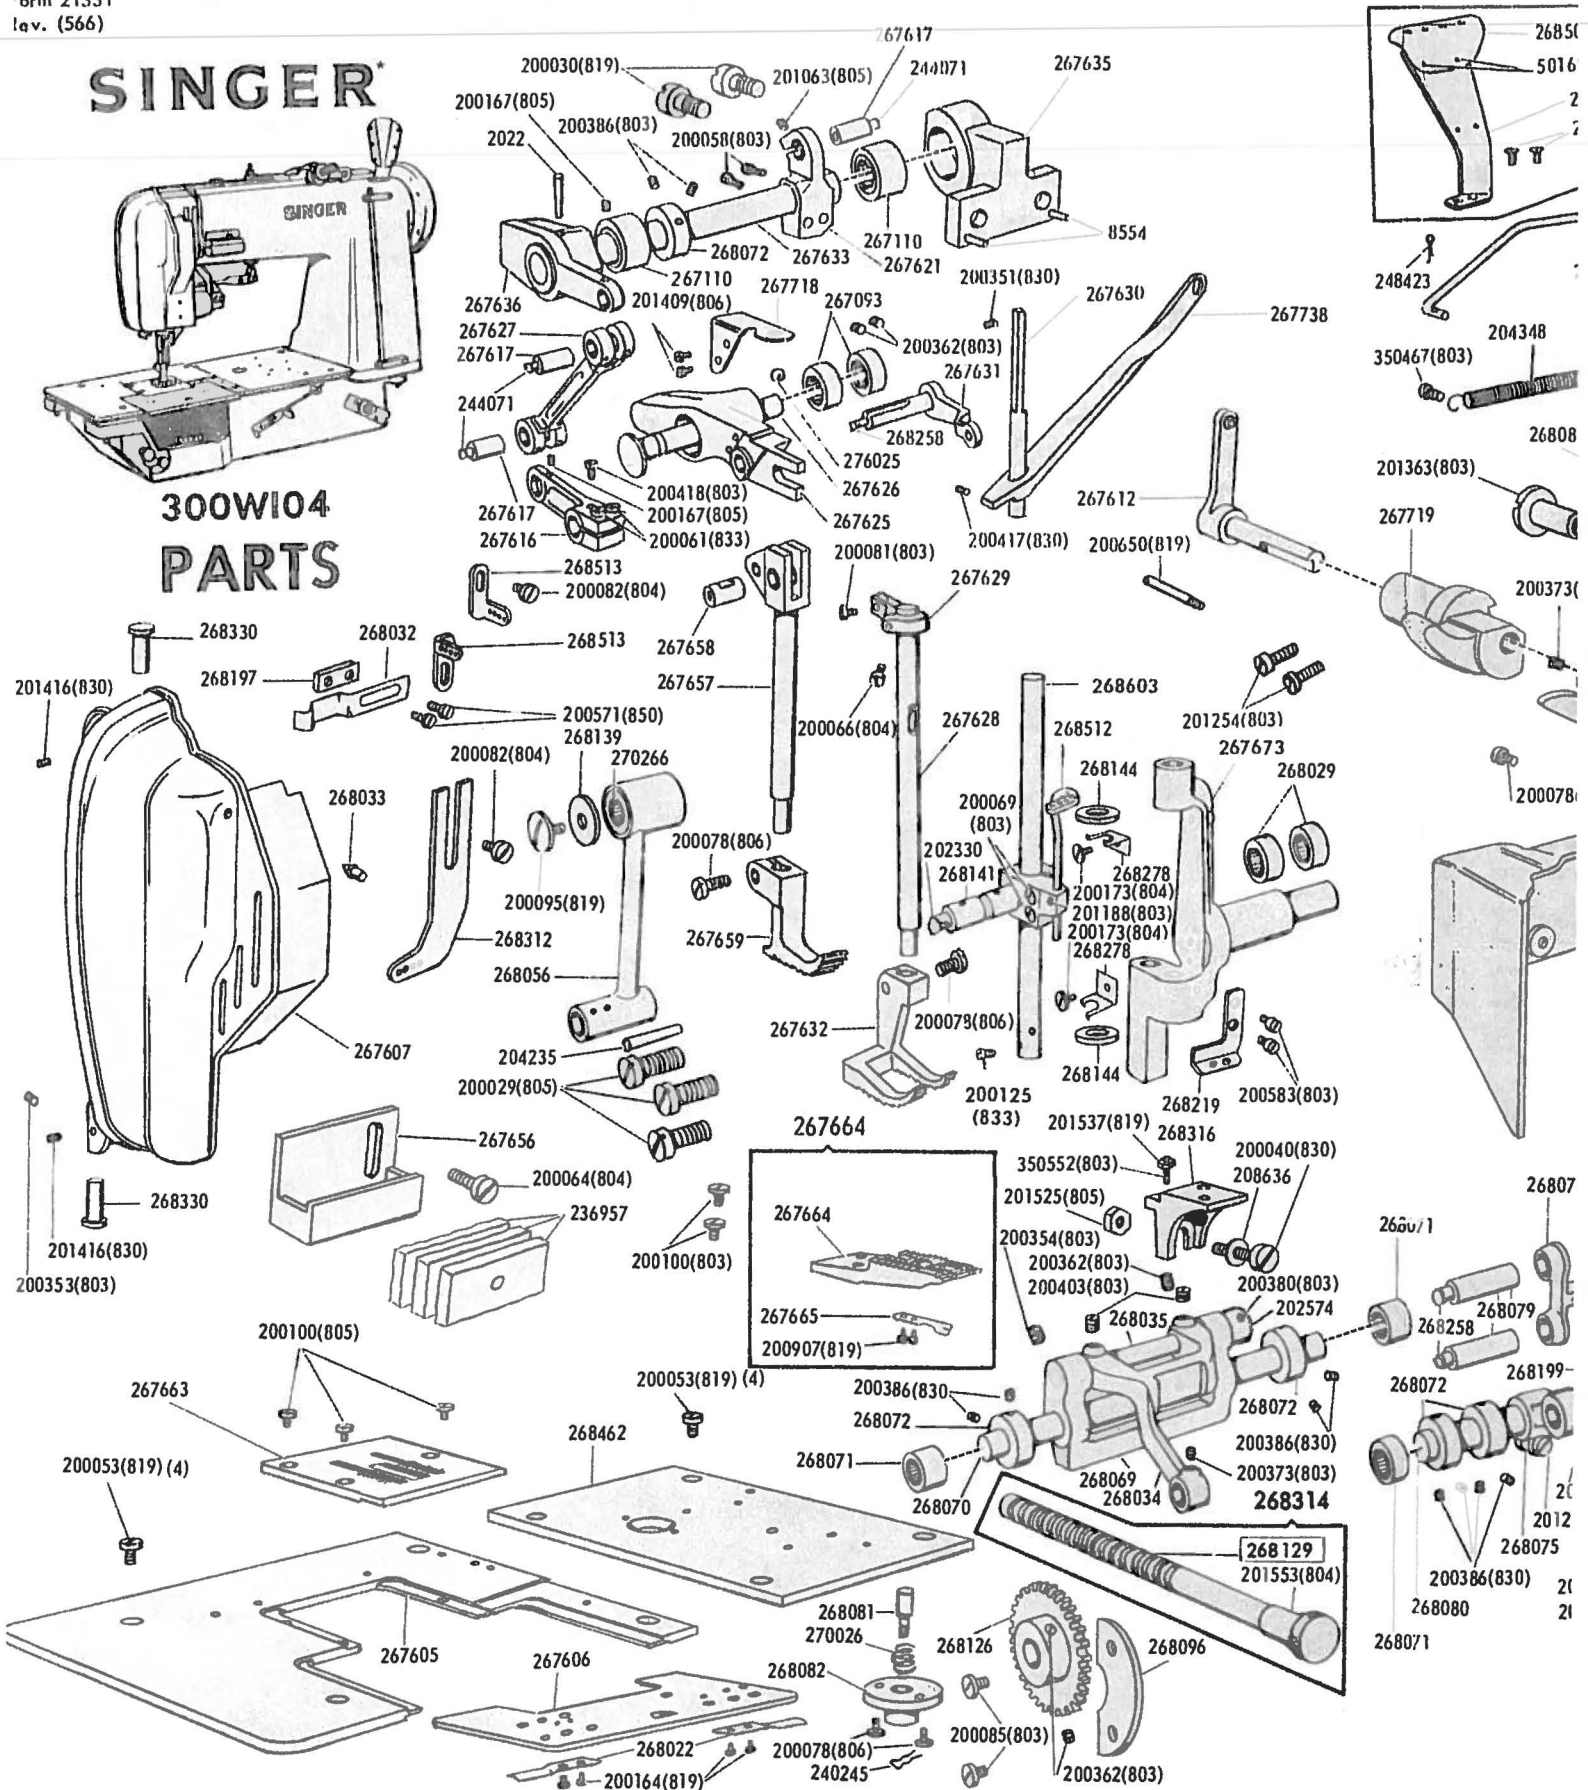

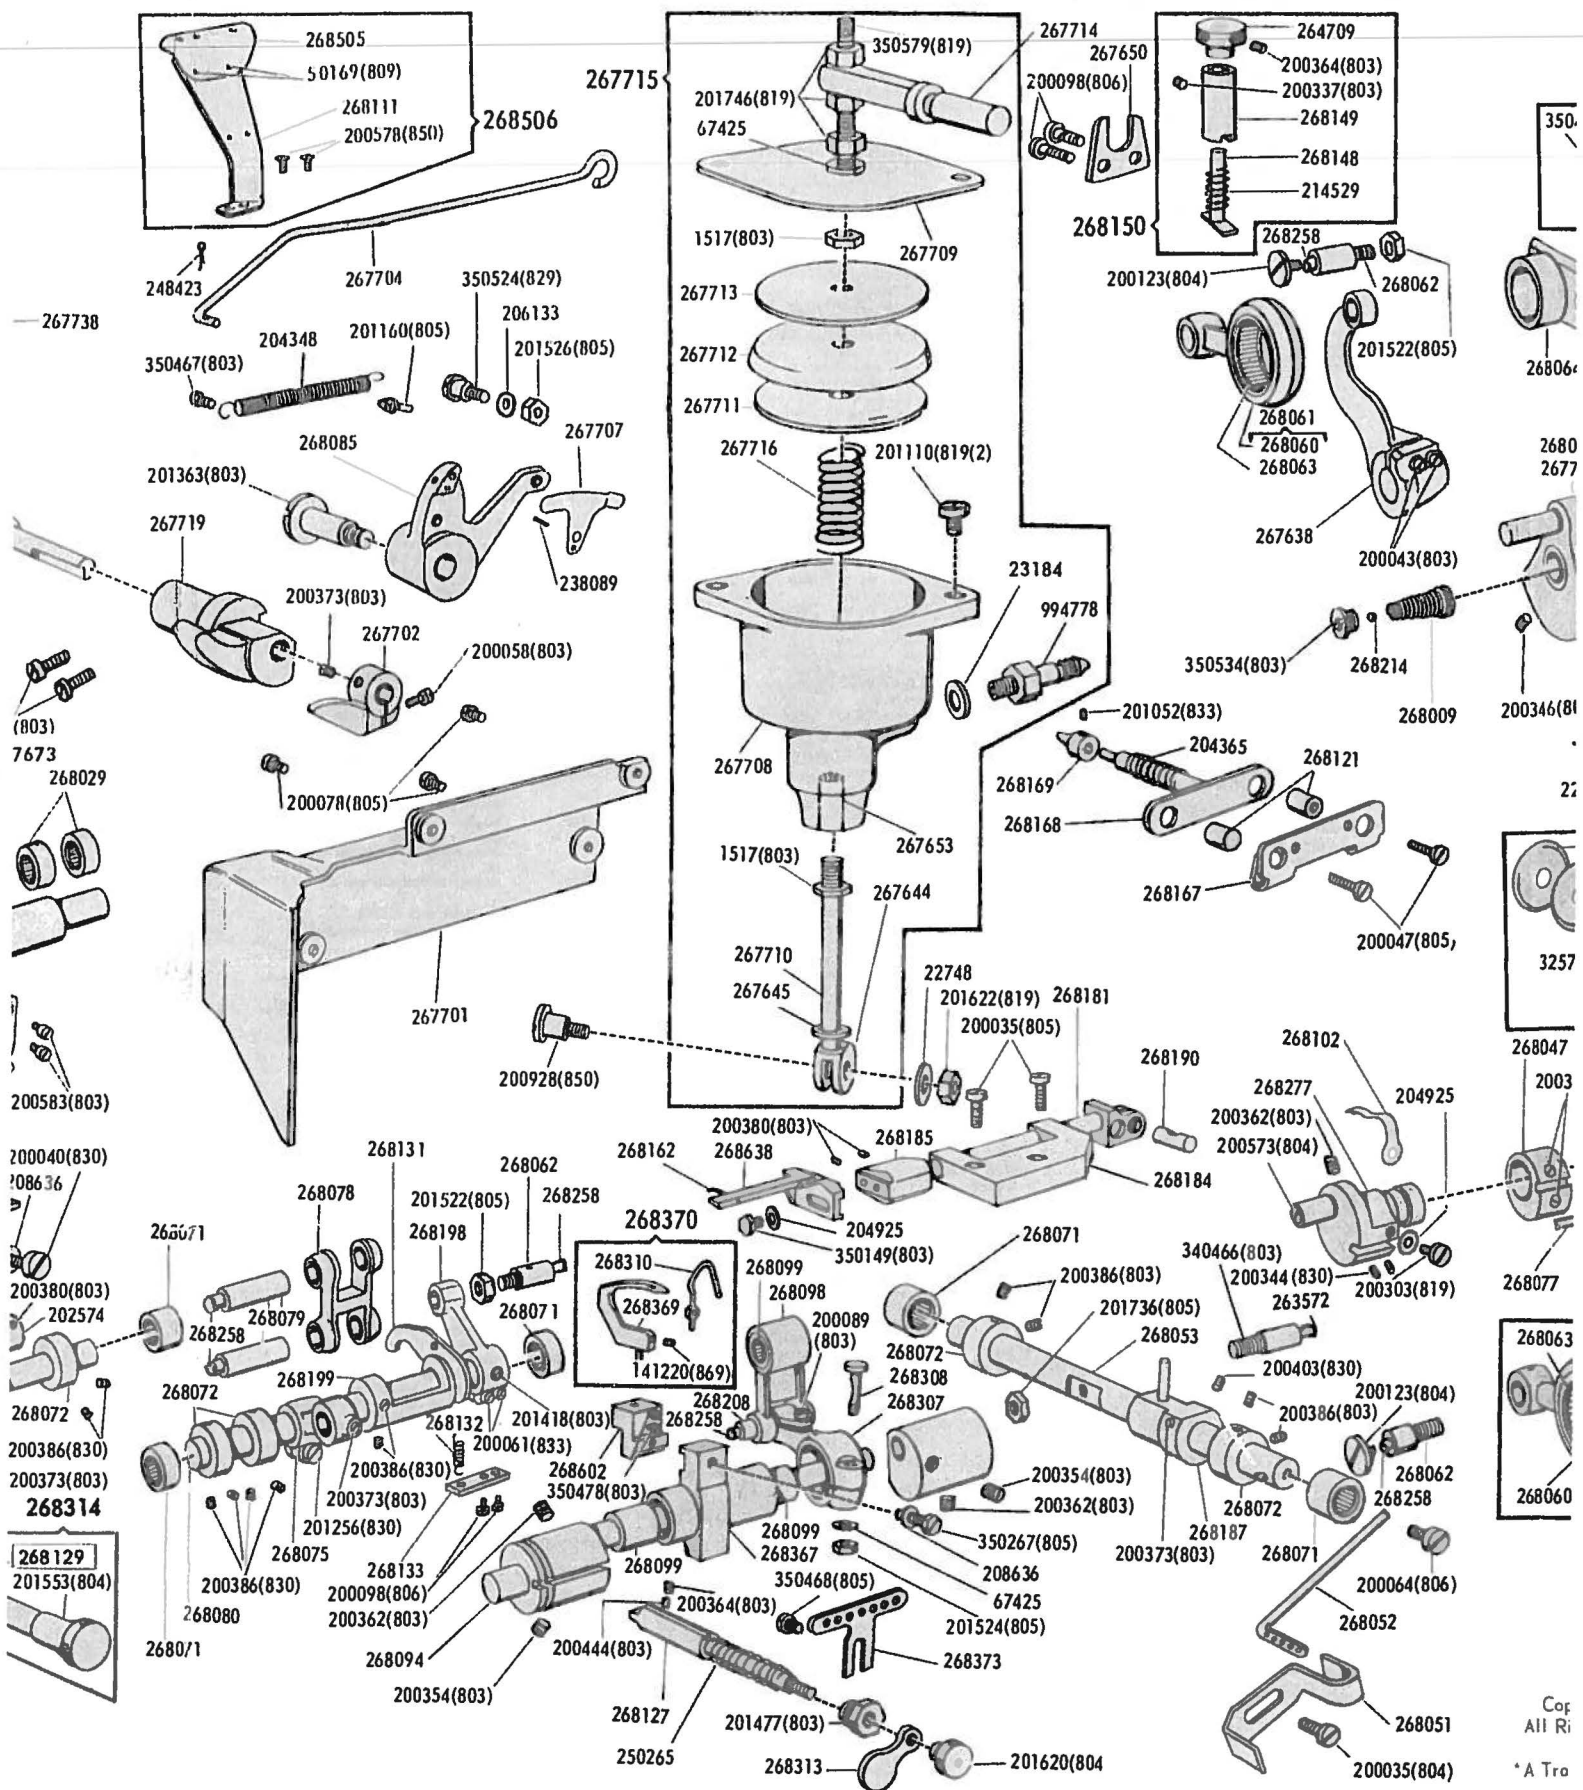

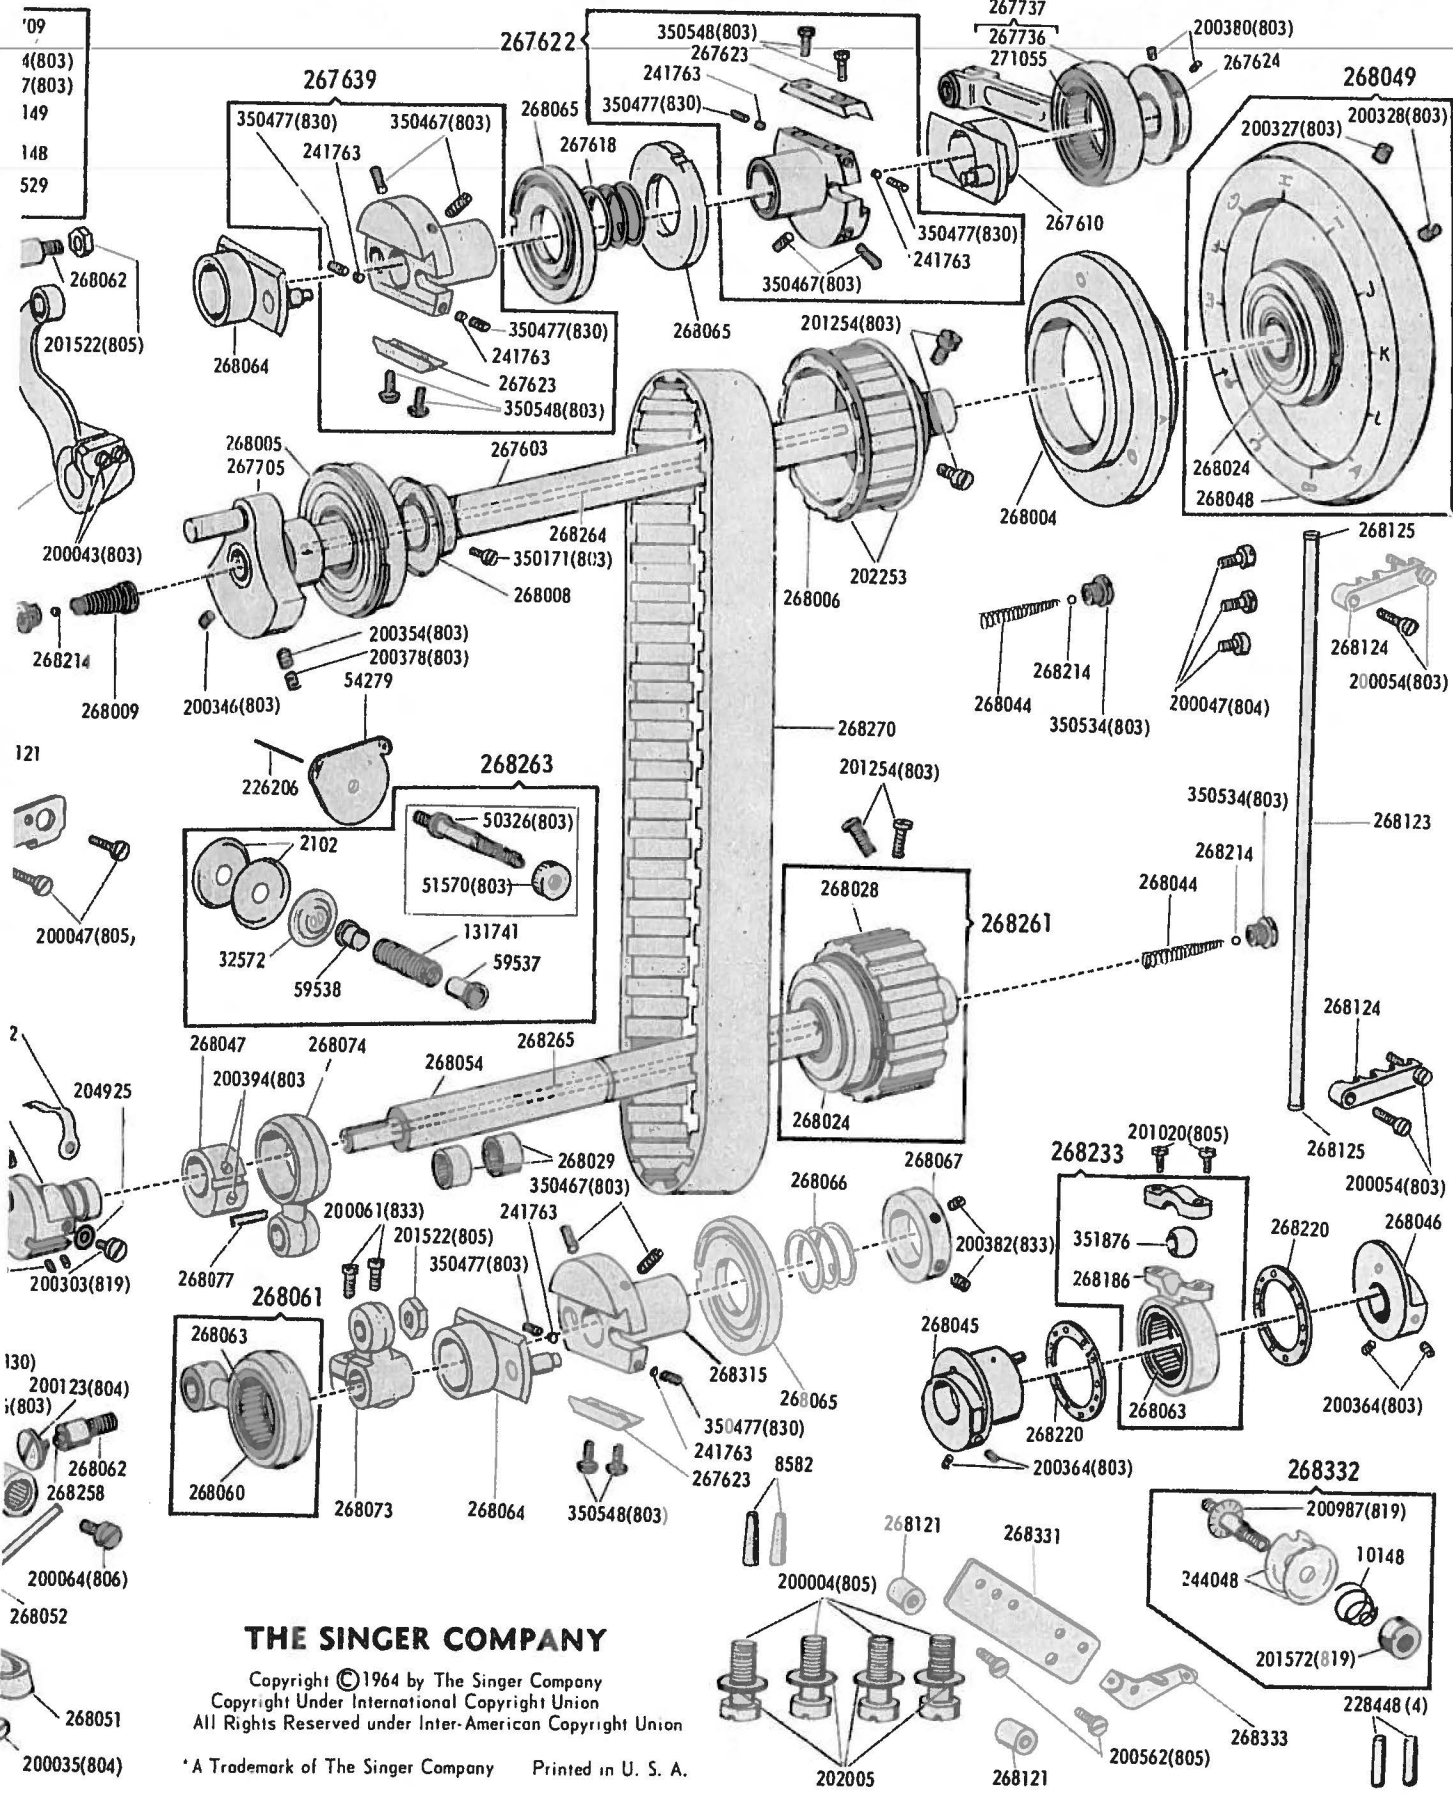

NUMERICAL LIST OF PARTS 300W104 MACHINE

VRT NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
517(803)	Presser Bar Pressure Cylinder	200362(803)	Looper Driving Crank Set Screw	204235	Arm Head Position Pin
1022	Plunger Nut (2)	200362(803)	Looper Throw-out Gear Set Screw (2)	204348	Foot Lifter Lever Spring
102	Lifting Rock Shaft Crank Pin	200364(803)	Spreader Driving Eccentric Counter-balance Set Screw (2)	204365	Needle Thread Tension Releaser Spring
1554	Needle Thread Tension Disc (2)	200364(803)	Spreader Driving Eccentric Set Screw (2)	204925	Looper Driving Crank Oil Hole Cover
1582	Lifting Rock Shaft Bracket Position Pin (2)	200364(803)	Looper Throw-out Gear Locking	204925	Screw Washer
1148	Arm Position Pin (2)	200364(803)	Plunger Stop Screw Set Screw	206133	Spreader Screw Washer
8129	Looper Thread Tension Spring	200364(803)	Needle Bar Rock Frame Regulating Stud Cap Set Screw	208636	Foot Lifter Lever Rod H'ng Screw Washer
8314	Looper Throw-out Rack Rod with 201553(804)	200373(803)	Feed Lifting Link Hinge Pin Set Screw (2)	208636	Feed Dog Shank Screw Washer
2748	Presser Bar Spring Arm Hinge Screw Washer	200373(803)	Foot Lifter Arm Set Screw	214529	Looper Holder Screw Washer
2572	Needle Thread Tension Releasing Disc	200373(803)	Spreader Driving Crank Position Screw	226206	Needle Bar Rock Frame Regulating Stud Spring
3169(809)	Looper Thread Guide (top of Arm) Bracket Screw (2)	200378(803)	Needle Bar Crank Position Screw Check Screw	228448	Needle Thread Tension Releasing Pin
3326(803)	Needle Thread Tension Stud	200380(803)	Feed Bar Hinge Pin Collar Set Screw	236957	Machine Locating Stud (4)
1570(803)	Needle Thread Tension Thumb Nut	200380(803)	Lifting Eccentric Spacing Collar Set Screw (2)	238089	Thread Lubricator Oil Pad (felt) (3)
4279	Needle Thread Tension Thread Guide (double)	200380(803)	Spreader Holder Set Screw (2)	240245	Needle Thread Tension Releasing Plate Pin
9537	Needle Thread Tension Spring Bushing (front)	200382(833)	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw (2)	241763	Feed Regulating Stud Retaining Spring
9538	Needle Thread Tension Spring Bushing (back)	200386(830)	Feed Driving Rock Shaft Collar Set Screw (4)	241763	Feed Driving Eccentric Friction Plate Screw Set Screw Packing (brass) (2)
9539	Needle Thread Tension Stud 50326(803) with 51570(803)	200386(803)	Feed Lifting Rock Shaft Collar Set Screw (4)	241763	Lifting Eccentric Friction Plate Screw Set Screw Packing (brass) (2)
7425	Looper Carrier Crank Clamping Stud Washer	200386(803)	Lifting Rock Shaft Collar Set Screw (2)	244048	Needle Bar Rock Frame Regulating Eccentric Friction Plate Screw Set Screw Packing (brass) (2)
7425	Presser Bar Pressure Cylinder Support Stud Nut Lock Washer	200386(830)	Looper Throw-out Safety Latch Collar Set Screw (2)	244048	Screw Packing (brass) (2)
1741	Needle Thread Tension Spring	200386(803)	Spreader Driving Rock Shaft Collar Set Screw (4)	244071	Looper Thread Tension Disc (2)
1220(869)	Needle Guard Set Screw	200394(803)	Feed Lifting Eccentric Set Screw (2)	244071	Lifting Eccentric Connection Hinge Pin Oil Packing (wick)
0004(805)	Arm Screw (4)	200403(803)	Feed Bar Set Screw (2)	250265	Lifting Link Hinge Pin Oil Packing (wick)
0029(805)	Arm Head Screw (3)	200403(830)	Spreader Driving Crank Set Screw	263572	Looper Throw-out Gear Locking Plunger Spring
0030(819)	Lifting Rock Shaft Bracket Screw (2)	200417(830)	Lifting Presser Bar Guide Rod Set Screw (lower)	263572	Spreader Driving Rock Shaft Screw Stud Oil Packing (wick)
0035(804)	Looper Thread Guide Screw	200418(803)	Lifting Crank Set Screw	264709	Needle Bar Rock Frame Regulating Stud Cap with 200364(803)
0035(805)	Spreader Bar Bearing Screw (2)	200444(803)	Looper Throw-out Gear Locking Plunger Stop Screw	267093	Lifting Lever Needle Bearing (2)
0040(830)	Feed Dog Shank Screw	200562(805)	Looper Thread Tension Bracket Screw (2)	267110	Lifting Rock Shaft Needle Bearing (2)
0043(803)	Needle Bar Rock Frame Driving Arm Pinch Screw (2)	200571(850)	Face Plate Lock Spring Screw (2)	267603	Arm Shaft with 268009, 268044, 268264, two each 268214 and 350534(803)
0047(804)	Arm Shaft Ball Bearing (back) Housing Screw (3)	200573(804)	Looper Driving Crank Oil Stop Screw	267605	Bed Plate (left)
0047(805)	Needle Thread Tension Bracket Screw (2)	200578(850)	Looper Thread Guide (top of arm) Bracket Screw (2)	267606	Bed Plate Slide with two 268022 and four 200164(819)
0053(819)	Bed Plate Screw (8)	200583(803)	Needle Bar Rock Frame Thread Guide Screw (2)	267607	Face Plate with 200353(803), 268033 and two 201416(830)
0054(803)	Looper Thread Tube Clamp Screw (4)	200650(819)	Foot Lifter Crank Stop Screw Stud	267610	Lifting Eccentric
0058(803)	Foot Lifter Arm Pinch Screw	200907(819)	Loop Deflector Screw (2)	267612	Foot Lifter Crank
0058(803)	Lifting Eccentric Connection Crank Pinch Screw (2)	200928(850)	Presser Bar Spring Arm Hinge Screw	267616	Lifting Crank with 200167(805), 200418(803) and two 200061(833)
0061(833)	Feed Driving Rock Shaft Crank Pinch Screw (2)	200987(819)	Looper Thread Tension Stud	267617	Lifting Eccentric Connection Hinge Pin with 244071
0061(833)	Feed Lifting Rock Shaft Crank Pinch Screw (2)	201020(805)	Spreader Driving Connection Cap Screw (2)	267617	Lifting Link Hinge Pin with 244071 (2)
0064(806)	Lifting Crank Pinch Screw	201052(833)	Needle Thread Tension Releaser Cap Set Screw	267618	Lifting Eccentric Adjusting Disc Spring
0064(806)	Looper Thread Take-up Rod Set Screw	201063(805)	Lifting Eccentric Connection Hinge Pin Pinch Screw	267621	Lifting Eccentric Connection Crank with 201063(805) and two 200058(803)
0064(804)	Thread Lubricator Screw	201110(819)	Presser Bar Pressure Cylinder Cap Screw (2)	267622	Lifting Eccentric Flange with 267623, two each 241763, 350467(803), 350477(830) and 350548(803)
0066(804)	Lifting Presser Bar Guide Block Pinch Screw	201160(805)	Foot Lifter Lever Spring Screw Eye	267623	Feed Driving Eccentric Friction Plate
0069(803)	Needle Bar Connecting Stud Pinch Screw (2)	201188(803)	Needle Thread Guide (on Needle Bar Connecting Stud) Set Screw	267623	Needle Bar Rock Frame Driving Eccentric Friction Plate
0078(805)	Arm Side Cover Screw (3)	201254(803)	Arm Shaft Connection Belt Pulley Set Screw (2)	267623	Lifting Eccentric Friction Plate
0078(806)	Feed Regulating Stud Socket Screw (2)	201254(803)	Bed Shaft Connection Belt Pulley Set Screw (2)	267624	Lifting Eccentric Spacing Collar with two 200380(803)
0078(806)	Lifting Presser Foot Pinch Screw	201254(803)	Presser Bar Spring Arm Fulcrum Set Screw (2)	267625	Lifting Lever with two 267093
0081(803)	Vibrating Presser Foot Pinch Screw	201256(830)	Feed Lifting Crank Pinch Screw	267626	Lifting Lever Hinge Stud
0081(803)	Lifting Presser Bar Guide Block Adjusting Screw	201363(803)	Foot Lifter Lever Hinge Screw	267627	Lifting Link
0082(804)	Needle Thread Guide Screw (2)	201409(806)	Presser Bar Spring Arm Ball Bearing Retainer Screw (2)	267628	Lifting Presser Bar
0085(803)	Looper Carrier Shaft Bushing (left) Position Plate Screw (2)	201416(830)	Face Plate Hinge Stud Set Screw (2)	267629	Lifting Presser Bar Guide Block with 200064(804) and 200081(803)
0089(803)	Looper Carrier Crank Hinge Pin Pinch Screw	201418(803)	Feed Lifting Rock Shaft Crank Position Screw	267630	Lifting Presser Bar Guide Rod
0095(819)	Needle Bar Connecting Link Cap Washer Screw	201477(803)	Looper Throw-out Gear Locking Plunger Screw Bushing	267631	Lifting Presser Bar Lifting Crank with 268258
0098(806)	Looper Throw-out Safety Latch Spring Bracket Screw (2)	201522(805)	Feed Driving Connection Hinge Stud Nut	267632	Lifting Presser Foot with 200078(806)
0098(806)	Presser Bar Pressure Cylinder Support Retainer Screw (2)	201522(805)	Feed Lifting Connection Hinge Stud Nut	267633	Lifting Rock Shaft
0100(803)	Feed Dog Screw (2)	201522(805)	Needle Bar Rock Frame Driving Connection Hinge Stud Nut	267634	Lifting Rock Shaft 267633 with 2022 and 267636
0100(805)	Throat Plate Screw (3)	201524(805)	Looper Carrier Crank Clamping Stud Nut	267635	Lifting Rock Shaft Bracket
0123(804)	Feed Driving Connection Cap Screw	201525(805)	Feed Dog Shank Screw Lock Nut	267636	Lifting Rock Shaft Crank with 200167(805)
0123(804)	Needle Bar Rock Frame Driving Connection Cap Screw	201526(805)	Foot Lifter Lever Rod Hinge Screw Nut	267639	Needle Bar Rock Frame
0125(833)	Needle Set Screw	201537(819)	Feed Dog Shank Adjusting Screw Lock Nut	267644	Needle Bar Rock Frame Driving Arm with two 200043(803)
0164(819)	Bed Plate Slide Spring Screw (4)	201553(804)	Looper Throw-out Rack Rod Thumb Nut	267645	Needle Bar Rock Frame Driving Arm with two 200043(803)
0167(805)	Lifting Link Hinge Pin Set Screw (2)	201572(819)	Looper Thread Tension Thumb Nut	267650	Needle Bar Rock Frame Driving Eccentric Flange with 267623, two each 241763, 350467(803), 350477(830) and 350548(803)
0173(804)	Needle Bar Oiling Felt Holder Screw (2)	201620(804)	Looper Throw-out Gear Locking Plunger Thumb Nut	267653	Presser Bar Spring Arm Fork
0303(819)	Looper Driving Crank Oil Hole Cover Screw	201622(819)	Presser Bar Spring Arm Hinge Screw Nut	267656	Presser Bar Spring Arm Fork Lock Washer (nylon)
0327(803)	Machine Pulley Set Screw	201736(805)	Spreader Driving Rock Shaft Screw Stud Nut	267657	Presser Bar Pressure Cylinder Support Retainer
0328(803)	Machine Pulley Position Screw	201746(819)	Presser Bar Pressure Cylinder Support Stud Nut (3)	267658	Presser Bar Pressure Cylinder Plunger Bushing
0337(803)	Needle Bar Rock Frame Regulating Stud Sleeve Set Screw	202005	Arm Screw Washer (4)	267659	Thread Lubricator with three 236957
0344(830)	Looper Driving Crank Position Screw (2)	202253	Arm Shaft Connection Belt Pulley Spring Flange (2)	267663	Vibrating Presser Bar
0346(803)	Needle Bar Crank Set Screw	202330	Needle Bar Connecting Stud Oil Packing (wick)	267664	Vibrating Presser Bar Hinge Stud
0351(830)	Lifting Presser Bar Guide Rod Set Screw (upper)	202574	Feed Bar Hinge Pin Collar with 200380(803)	267665	Vibrating Presser Foot with 200078(806)
0353(803)	Face Plate Hinge Stud Set Screw (long)			267666	Throat Plate
0354(803)	Feed Driving Rock Frame Position Screw			267665	Feed Dog, 40 needle hole, with 267665 and two 200907(819), for 267663
0354(803)	Looper Carrier Shaft Bushing Position Screw (2)			267665	Loop Deflector
0354(803)	Needle Bar Crank Position Screw			267701	Arm Side Cover
0362(803)	Feed Driving Rock Frame Set Screw				
0362(803)	Lifting Lever Hinge Stud Set Screw (2)				
0362(803)	Looper Carrier Shaft Bushing Set Screw (2)				

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
267702	Foot Lifter Arm with 200058(803) and 200373(803)	268069	Feed Driving Rock Frame with 200354(803) and 200362(803)	268258	Looper Carrier Crank Hinge Pin Oil Packing (wick)
267704	Foot Lifter Lever Rod with 248423	268070	Feed Driving Rock Shaft	268258	Needle Bar Rock Frame Driving Connection Hinge Stud Oil Packing (wick)
267705	Needle Bar Crank with 200346(803), 200354(803) and 200378(803)	268071	Feed Driving Rock Shaft Needle Bearing (2)		
267706	Needle Bar Crank 267705 with 268005	268071	Feed Lifting Rock Shaft Needle Bearing (2)	268261	Bed Shaft Connection Belt Pulley 268028 with 268024
267707	Needle Thread Tension Releasing Plate (adjustable)	268071	Spreader Driving Rock Shaft Needle Bearing (2)	268263	Needle Thread Tension complete, Nos. 32572, 59537, 59538, 59539, 131741 and two 2102
267708	Presser Bar Pressure Cylinder with 267653	268072	Feed Driving Rock Shaft Collar with two 200386(830) (2)	268264	Arm Shaft Oil Control Rod (wood)
267709	Presser Bar Pressure Cylinder Cap	268072	Feed Lifting Rock Shaft Collar with two 200386(803) (2)	268265	Bed Shaft Oil Control Rod (wood)
267710	Presser Bar Pressure Cylinder Plunger	268072	Lifting Rock Shaft Collar with two 200386(803)	268270	Arm Shaft Connection Belt (reinforced neoprene)
267711	Presser Bar Pressure Cylinder Plunger Disc	268072	Spreader Driving Rock Shaft Collar with two 200386(803) (2)	268277	Looper Driving Crank with 200362(803), 200573(804) and two 200344(830)
267712	Presser Bar Pressure Cylinder Plunger Washer (leather)	268073	Feed Driving Rock Shaft Crank with two 200061(833)	268278	Needle Bar Oiling Felt Holder (2)
267713	Presser Bar Pressure Cylinder Plunger Washer (steel)	268074	Feed Lifting Connection	268307	Looper Carrier Crank with 200089(803)
267714	Presser Bar Pressure Cylinder Support	268075	Feed Lifting Crank with 200373(803) and 201256(830)	268308	Looper Carrier Crank Clamping Stud
267715	Presser Bar Pressure Cylinder complete, Nos. 67425, 267644, 267645, 267708, 267709, 267710, 267711, 267712, 267713, 267716, 350579(819), 931758, 994778, two each 1517(803), 201110(819) and three 201746(819)	268077	Feed Lifting Eccentric Lubricating Pad (wood)	268310	Needle Guard
		268078	Feed Lifting Link	268312	Needle Thread Guide (on Arm Head)
267716	Presser Bar Spring	268079	Feed Lifting Link Hinge Pin with 268258 (2)	268313	Looper Throw-out Gear Locking Plunger Handle
267718	Presser Bar Spring Arm Ball Bearing Retainer	268080	Feed Lifting Rock Shaft	268315	Feed Driving Flange with 267623, two each 241763, 350467(803), 350477(830) and 350548(803)
267719	Presser Bar Spring Arm Fulcrum	268081	Feed Regulating Stud	268316	Feed Dog Shank with 201537(819) and 350522(803)
267736	Lifting Eccentric Connection	268082	Feed Regulating Stud Socket	268330	Face Plate Hinge Stud (2)
267737	Lifting Eccentric Connection 267736 with 271055	268083	Foot Lifter Lever with 238089	268331	Looper Thread Tension Bracket
267738	Presser Bar Spring Arm	268084	Looper Carrier Shaft 268093 with 268095 and 268097	268332	Looper Thread Tension complete, Nos. 10148, 200987(819), 201572(819) and two 244048
268004	Arm Shaft Ball Bearing (back) Housing	268096	Looper Carrier Shaft Bushing (left)	268333	Looper Thread Tension Thread Guide
268005	Arm Shaft Ball Bearing (front)	268098	Position Plate	268367	Looper Carrier
268006	Arm Shaft Connection Belt Pulley with two each 201254(803) and 202253	268099	Looper Driving Connection Needle Bearing	268368	Looper Carrier 268367 with two 268099
268008	Arm Shaft Oil Slinger with 350171(803)	268099	Looper Carrier Needle Bearing (2)	268369	Looper with 141220(869)
268009	Arm Shaft Oil Stop Ball Spring (front)	268102	Looper Driving Crank Oil Hole Cover	268370	Looper and Needle Guard complete, Nos. 268310 and 268369
268022	Bed Plate Slide Spring (2)	268111	Looper Thread Guide (top of Arm) Bracket	268373	Looper Thread Guide (on bed at looper) for all gauges from 3/16 to 2 inches
268024	Arm Shaft Ball Bearing (back)	268121	Looper Thread Tension Bracket Spacing Collar (2)	268462	Bed Plate (right)
268024	Bed Shaft Ball Bearing	268121	Needle Thread Tension Bracket Spacing Collar (2)	268505	Looper Thread Guide (top of Arm)
268028	Bed Shaft Connection Belt Pulley with two 201254(803)	268123	Looper Thread Tube with two 268125	268506	Looper Thread Guide (top of Arm) Bracket 268111 with 268505 and two 50169(809)
268029	Bed Shaft Needle Bearing (2)	268124	Looper Thread Tube Clamp (2)		
268029	Needle Bar Rock Frame Needle Bearing (2)	268125	Looper Thread Tube Thread Bushing (2)	268512	Needle Thread Guide (on Needle Bar Connecting Stud)
		268126	Looper Throw-out Gear with two 200362(803)	268513	Needle Thread Guide (on side of Arm) (2)
268032	Face Plate Lock Spring	268127	Looper Throw-out Gear Locking Plunger	268602	Looper Holder with two 350478(803)
268033	Face Plate Lock Stud	268131	Looper Throw-out Safety Latch		
268034	Feed Bar with 200373(803) and two 200403(830)	268132	Looper Throw-out Safety Latch Spring	268638	Spreader with 268162
268035	Feed Bar Hinge Pin	268133	Looper Throw-out Safety Latch Spring Bracket	270026	Feed Regulating Stud Spring
268044	Arm Shaft Oil Stop Ball Spring (rear)	268603	Needle Bar	270266	Needle Bar Connecting Link Needle Bearing (2)
268044	Bed Shaft Oil Stop Ball Spring	268139	Needle Bar Connecting Link Cap Washer	271055	Lifting Eccentric Connection Needle Bearing
268045	Spreader Driving Eccentric with two 200364(803)	268141	Needle Bar Connecting Stud with 201188(803), 202330 and two 200069(803)	276025	Presser Bar Spring Arm Ball Bearing
268046	Spreader Driving Eccentric Counter-balance with two 200364(803)	268144	Needle Bar Oiling Felt (2)		
268047	Feed Lifting Eccentric with 268077 and two 200394(803)	268148	Needle Bar Rock Frame Regulating Stud	284423	Foot Lifter Lever Rod Cotter Pin
268048	Machine Pulley (aluminum alloy casting) for "V" belt (outside diameter of belt groove 2.9 inches) with 200327(803) and 200328(803)	268149	Needle Bar Rock Frame Regulating Stud Sleeve	340466(803)	Spreader Driving Rock Shaft Screw Stud with 263572
268049	Machine Pulley 268048 with 268024	268150	Needle Bar Rock Frame Regulating Stud complete, Nos. 214529, 264709, 268148 and 268149	350149(803)	Spreader Screw
268051	Looper Thread Guide			350171(803)	Arm Shaft Oil Slinger Set Screw
268052	Looper Thread Take-up Rod	268162	Spreader Point	350267(805)	Looper Holder Screw
268053	Spreader Driving Rock Shaft with 200064(806)	268167	Needle Thread Tension Bracket	350467(803)	Feed Driving Flange Set Screw (2)
		268168	Needle Thread Tension Releaser	350467(803)	Foot Lifter Lever (back) Spring Screw
268054	Bed Shaft with 268044, 266214, 268265 and 350534(803)	268169	Needle Thread Tension Releaser Cap with 201052(833)	350467(803)	Lifting Eccentric Flange Set Screw (2)
268056	Needle Bar Connecting Link 268055 with two 270266	268181	Spreader Bar	350468(805)	Needle Bar Rock Frame Driving Eccentric Flange Set Screw (2)
268060	Feed Driving Connection	268184	Spreader Bar Bearing	350477(830)	Looper Thread Guide (on bed at looper) Screw
268060	Needle Bar Rock Frame Driving Connection	268185	Spreader Holder with two 200380(803)	350477(830)	Feed Driving Eccentric Friction Plate Screw Set Screw (2)
268061	Feed Driving Connection 268060 with 268063	268186	Spreader Driving Connection with two 201020(805)	350477(830)	Lifting Eccentric Friction Plate Screw Set Screw (2)
268061	Needle Bar Rock Frame Driving Connection 268060 with 268063	268187	Spreader Driving Crank with 200373(803) and 200403(830)	350478(803)	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw Set Screw (2)
268062	Feed Driving Connection Hinge Stud with 268258	268190	Spreader Driving Pin	350478(803)	Looper Set Screw
268062	Feed Lifting Connection Hinge Stud with 268258	268197	Face Plate Lock Spring Plate	350478(803)	Looper Adjusting Screw
268062	Needle Bar Rock Frame Driving Connection Hinge Stud with 268258	268198	Feed Lifting Rock Shaft Crank with 201418(803) and two 200061(833)	350524(819)	Foot Lifter Lever Rod Hinge Screw
268063	Feed Driving Connection Needle Bearing	268199	Looper Throw-out Safety Latch Collar with two 200386(830)	350534(803)	Arm Shaft Oil Stop Ball Screw (2)
268063	Needle Bar Rock Frame Driving Connection Needle Bearing	268208	Looper Carrier Crank Hinge Pin with 268258	350534(803)	Bed Shaft Oil Stop Ball Screw
268063	Spreader Driving Connection Needle Bearing	268214	Arm Shaft Oil Stop Ball 5/32 in. diam. (2)	350548(803)	Feed Driving Eccentric Friction Plate Screw (2)
268064	Feed Driving Eccentric	268214	Bed Shaft Oil Stop Ball	350548(803)	Lifting Eccentric Friction Plate Screw (2)
268064	Needle Bar Rock Frame Driving Eccentric	268216	Looper Driving Connection 268098 with 268099	350552(803)	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw (2)
268065	Feed Driving Eccentric Adjusting Disc	268219	Needle Bar Rock Frame Thread Guide	350579(819)	Feed Dog Shank Adjusting Screw
268065	Lifting Eccentric Adjusting Disc	268220	Spreader Driving Eccentric Thrust Washer (2)		Presser Bar Pressure Cylinder Support Stud
268066	Feed Driving Eccentric Adjusting Disc Spring	268233	Spreader Driving Connection 268186 with 268063 and 351876	351876	Spreader Driving Rock Shaft Screw Stud Ball Roller
268067	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382(833)	268258	Feed Driving Connection Hinge Stud Oil Packing (wick)	23184	Presser Bar Pressure Cylinder
		268258	Feed Lifting Connection Hinge Stud Oil Packing (wick)	994778	Hose Connection Washer
		268258	Feed Lifting Link Hinge Pin Oil Packing (wick) (2)		Presser Bar Pressure Cylinder Hose Connection
		268258	Lifting Presser Bar Lifting Crank Oil Packing (wick)		

ACCESSORIES

PART NO.	DESCRIPTION
994719	Air Compressor for Electric Transmitters Nos. S47 and S69
995475	Air Filter
160137	Air Hose
265307	Bed Hinge Connection (2)
350598	Bed Hinge Connection Screw (4)
228731	Drip Pan
200019	Drip Pan Screw (4)
232365	Foot Lifter Treadle Chain 41-1/2 in. long
268340	Looper Threading Wire
228452	Machine Base Oil Drain Jar complete
228444	Machine Cushion (neoprene)
228733	Machine Rest (left)
228734	Machine Rest (right)
41400	Machine Rest Pin
Cat. No.	
4112	Needles (62 x 59) Size 23 (6)
267722	Presser Bar Pressure Control Valve complete
228491	Pressure Oiler
228745	Thread Unwinder complete
120341	Tweezers
21887	Wrench