

HISTORICAL COPY
DO NOT REMOVE

MACHINE NO. 300w124

REVISED 9-30-59

Dept. 40
53 (2)
61
70
83-1
86-1
88-1 (2)
92
92-7
92-17

MACHINE NO. 300w124

200078X	Arm Side Cover Screw (4)
#268751	Bed with 268184 and two 200035E
268707	Bed Plate (left)
268018	Bed Plate (right)
200053X	Bed Plate Screw (8)
268017	Bed Plate Slide with two 268022 and four 200138D
268022	Bed Plate Slide Spring
200138D	Bed Plate Slide Spring Screw
268735	Bed Shaft with 268044, 268214, 268711 and 350534C
268024	Bed Shaft Ball Bearing
268028	Bed Shaft Connection Belt Pulley with two 201254C
268261	Bed Shaft Connection Belt Pulley 268028 with 268024
201254C	Bed Shaft Connection Belt Pulley Set Screw
268029	Bed Shaft Needle Bearing (2)
268734	Bed Shaft Needle Bearing (center)
268711	Bed Shaft Oil Control Rod (wood)
268214	Bed Shaft Oil Stop Ball
350534C	Bed Shaft Oil Stop Ball Screw
268044	Bed Shaft Oil Stop Ball Spring
267607	Face Plate with 200353C, 268033 and two 201416C
268330	Face Plate Hinge Stud (2)
201416C	Face Plate Hinge Stud Set Screw
200353C	Face Plate Hinge Stud Set Screw (long)
268032	Face Plate Lock Spring

MACHINE NO. 380w124

268064	Feed Driving Eccentric
268065	Feed Driving Eccentric Adjusting Disc
268066	Feed Driving Eccentric Adjusting Disc Spring
268067	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382ALX
200382ALX	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw
267623	Feed Driving Eccentric Friction Plate
350548C	Feed Driving Eccentric Friction Plate Screw
350477C	Feed Driving Eccentric Friction Plate Screw Set Screw
241763	Feed Driving Eccentric Friction Plate Screw Set Screw Packing (brass)
268315	Feed Driving Flange with 267623, two each 241763, 350467C, 350477C and 350548C
350467C	Feed Driving Flange Set Screw
268069	Feed Driving Rock Frame with 200354C and 200362C
200354C	Feed Driving Rock Frame Position Screw
200362C	Feed Driving Rock Frame Set Screw
268733	Feed Driving Rock Shaft
268072	Feed Driving Rock Shaft Collar with two 200386C (2)
200386C	Feed Driving Rock Shaft Collar Set Screw
268073	Feed Driving Rock Shaft Crank with two 200061ALX
200061ALX	Feed Driving Rock Shaft Crank Pinch Screw
268071	Feed Driving Rock Shaft Needle Bearing (2)
268074	Feed Lifting Connection
268062	Feed Lifting Connection Hinge Stud with 268258

MACHINE NO.300w124

201522E	Feed Lifting Connection Hinge Stud Nut
268258	Feed Lifting Connection Hinge Stud Oil Packing (wick)
268075	Feed Lifting Crank with 200373C and 201256C
201256C	Feed Lifting Crank Pinch Screw
268047	Feed Lifting Eccentric with 268077 and two 200394C
268077	Feed Lifting Eccentric Lubricating Pad (wood)
200394C	Feed Lifting Eccentric Set Screw
268078	Feed Lifting Link
268079	Feed Lifting Link Hinge Pin with 268258 (2)
268258	Feed Lifting Link Hinge Pin Oil Packing (wick)
200373C	Feed Lifting Link Hinge Pin Set Screw
268713	Feed Lifting Rock Shaft
268072	Feed Lifting Rock Shaft Collar with two 200386C (2)
200386C	Feed Lifting Rock Shaft Collar Set Screw
268198	Feed Lifting Rock Shaft Crank with 201418C and two 200061ALX
200061ALX	Feed Lifting Rock Shaft Crank Pinch Screw
201418C	Feed Lifting Rock Shaft Crank Position Screw
268071	Feed Lifting Rock Shaft Needle Bearing (2)
268081	Feed Regulating Stud
240245	Feed Regulating Stud Retaining Spring
268082	Feed Regulating Stud Socket
200078F	Feed Regulating Stud Socket Screw (2)
270026	Feed Regulating Stud Spring
267702	Foot Lifter Arm with 200058C and 200373C

MACHINE NO. 300w124

200058C	Foot Lifter Arm Pinch Screw
200373C	Foot Lifter Arm Set Screw
267612	Foot Lifter Crank
200650X	Foot Lifter Crank Stop Screw Stud
268714	Foot Lifter Lever (back)
267613	Foot Lifter Lever (front) with 267614
267614	Foot Lifter Lever (front) Hinge Pin
201363C	Foot Lifter Lever Hinge Screw
267704	Foot Lifter Lever Rod with 248423
248423	Foot Lifter Lever Rod Cotter Pin
268715	Foot Lifter Lever Rod (rear)
350548C	Foot Lifter Lever Rod (rear) Hinge Screw (long)
201526E	Foot Lifter Lever Rod (rear) Hinge Screw (long) Nut (2)
206133	Foot Lifter Lever Rod (rear) Hinge Screw (long) Washer
350524X	Foot Lifter Lever Rod (rear) Hinge Screw (short)
204348	Foot Lifter Lever Spring
201160C	Foot Lifter Lever Spring Screw Eye
350467C	Foot Lifter Lever Spring Screw
267616	Lifting Crank with 200167E, 200418C and two 200061ALX
200061ALX	Lifting Crank Pinch Screw
200418C	Lifting Crank Set Screw
268064	Lifting Eccentric
268065	Lifting Eccentric Adjusting Disc

MACHINE NO. 300w124

267618	Lifting Eccentric Adjusting Disc Spring
267619	Lifting Eccentric Connection
267620	Lifting Eccentric Connection 267619 with 268063
267621	Lifting Eccentric Connection Crank with 201063E and two 200058C
200058C	Lifting Eccentric Connection Crank Pinch Screw
267617	Lifting Eccentric Connection Hinge Pin with 244071
244071	Lifting Eccentric Connection Hinge Pin Oil Packing (wick)
201063E	Lifting Eccentric Connection Hinge Pin Pinch Screw
268063	Lifting Eccentric Connection Needle Bearing
267622	Lifting Eccentric Flange with 267623, two each 241763, 350467C 350477C and 350548C
350467C	Lifting Eccentric Flange Set Screw
267623	Lifting Eccentric Friction Plate
350548C	Lifting Eccentric Friction Plate Screw
350477C	Lifting Eccentric Friction Plate Screw Set Screw
241763	Lifting Eccentric Friction Plate Screw Set Screw Packing (brass)
267624	Lifting Eccentric Spacing Collar with two 200380C
200380C	Lifting Eccentric Spacing Collar Set Screw
267625	Lifting Lever with two 267093
267626	Lifting Lever Hinge Stud
200362C	Lifting Lever Hinge Stud Set Screw (2)
267093	Lifting Lever Needle Bearing
267627	Lifting Link
267617	Lifting Link Hinge Pin with 244071 (2)

MACHINE NO.300w124

244071	Lifting Link Hinge Pin Oil Packing (wick)
200167E	Lifting Link Hinge Pin Set Screw
267628	Lifting Presser Bar
267629	Lifting Presser Bar Guide Block with 200066D and 200081C
200081C	Lifting Presser Bar Guide Block Adjusting Screw
200066D	Lifting Presser Bar Guide Block Pinch Screw
267630	Lifting Presser Bar Guide Rod
200417C	Lifting Presser Bar Guide Rod Set Screw (lower)
200351C	Lifting Presser Bar Guide Rod Set Screw (upper)
267631	Lifting Presser Bar Lifting Crank with 268258
268258	Lifting Presser Bar Lifting Crank Oil Packing (wick)
267632	Lifting Presser Foot with 200078F
200078F	Lifting Presser Foot Pinch Screw
267633	Lifting Rock Shaft
267634	Lifting Rock Shaft 267633 with 2022 and 267636
267635	Lifting Rock Shaft Bracket
8554	Lifting Rock Shaft Bracket Position Pin
200030X	Lifting Rock Shaft Bracket Screw
268072	Lifting Rock Shaft Collar with two 200386C
200386C	Lifting Rock Shaft Collar Set Screw
267636	Lifting Rock Shaft Crank with 200167E
2022	Lifting Rock Shaft Crank Pin
267110	Lifting Rock Shaft Needle Bearing (2)
267665	Loop Deflector

MACHINE NO.300w124

200907X	Loop Deflector Screw
268309	Looper with 200377C
350478C	Looper Adjusting Screw
268716	Looper Carrier
268717	Looper Carrier 268716 with two 268099
268307	Looper Carrier Crank with 200089C
268308	Looper Carrier Crank Clamping Stud
201524E	Looper Carrier Crank Clamping Stud Nut
67425	Looper Carrier Crank Clamping Stud Washer
268208	Looper Carrier Crank Hinge Pin with 268258
268258	Looper Carrier Crank Hinge Pin Oil Packing (wick)
200089C	Looper Carrier Crank Hinge Pin Pinch Screw
268099	Looper Carrier Needle Bearing
268718	Looper Carrier Positioning Sleeve with 200386C
200386C	Looper Carrier Positioning Sleeve Set Screw
*268719	Looper Carrier Shaft
268720	Looper Carrier Shaft 268719 with 268721 and 268722
*268721	Looper Carrier Shaft Bushing (left) (eccentric) with 200354C and 200362C
268096	Looper Carrier Shaft Bushing (left) Position Plate
200085C	Looper Carrier Shaft Bushing (left) Position Plate Screw (2)
268311	Looper and Needle Guard complete Nos. 268309 and 268310
268722	Looper Carrier Shaft Bushing (right) (eccentric) with 200354C and 200362C
200354C	Looper Carrier Shaft Bushing Position Screw

MACHINE NO. 300w124

200362C	Looper Carrier Shaft Bushing Set Screw
268098	Looper Driving Connection
268216	Looper Driving Connection 268098 with 268099
268099	Looper Driving Connection Needle Bearing
268277	Looper Driving Crank with 200362C, 200573C and two 200344AL
268102	Looper Driving Crank Oil Hole Cover
200303X	Looper Driving Crank Oil Hole Cover Screw
204925	Looper Driving Crank Oil Hole Cover Screw Washer
200573D	Looper Driving Crank Oil Stop Screw
200344AL	Looper Driving Crank Position Screw
200362C	Looper Driving Crank Set Screw
268602	Looper Holder with two 350478C
350267E	Looper Holder Screw
208636	Looper Holder Screw Washer
350478C	Looper Set Screw
268051	Looper Thread Guide
200578XC	Looper Thread Guide (top of Arm) Bracket Screw (2)
268296	Looper Thread Guide (on Bed at Looper)
350468E	Looper Thread Guide (on Bed at Looper) Screw
268723	Looper Thread Guide (rear) (2)
200035D	Looper Thread Guide (rear) Screw (4)
200035D	Looper Thread Guide Screw
268052	Looper Thread Take-up Rod
200064F	Looper Thread Take-up Rod Set Screw

MACHINE NO. 300w124

268331	Looper Thread Tension Bracket
200562E	Looper Thread Tension Bracket Screw (2)
268121	Looper Thread Tension Bracket Spacing Collar (2)
244048	Looper Thread Tension Disc
10148	Looper Thread Tension Spring
200987X	Looper Thread Tension Stud
268333	Looper Thread Tension Thread Guide
201572X	Looper Thread Tension Thumb Nut
268332	Looper Thread Tension complete, Nos. 10148, 200987X, 201572X and two 244048
268123	Looper Thread Tube with two 268125
268124	Looper Thread Tube Clamp (2)
200054C	Looper Thread Tube Clamp Screw (4)
268125	Looper Thread Tube Thread Bushing
268126	Looper Throw-out Gear with two 200362D
268127	Looper Throw-out Gear Locking Plunger
268313	Looper Throw-out Gear Locking Plunger Handle
201477C	Looper Throw-out Gear Locking Plunger Screw Bushing
250265	Looper Throw-out Gear Locking Plunger Spring
200444C	Looper Throw-out Gear Locking Plunger Stop Screw
200364C	Looper Throw-out Gear Locking Plunger Stop Screw Set Screw
201620D	Looper Throw-out Gear Locking Plunger Thumb Nut
200362C	Looper Throw-out Gear Set Screw
268129	Looper Throw-out Rack Rod

MACHINE NO. 300w124

268314	Looper Throw-out Rack Rod 268129 with 201553D
201553D	Looper Throw-out Rack Rod Thumb Nut
268131	Looper Throw-out Safety Latch
268199	Looper Throw-out Safety Latch Collar with two 200386C
200386C	Looper Throw-out Safety Latch Collar Set Screw
268132	Looper Throw-out Safety Latch Spring
268133	Looper Throw-out Safety Latch Spring Bracket
200098F	Looper Throw-out Safety Latch Spring Bracket Screw (2)
228448	Machine Locating Stud (4)
268048	Machine Pulley "V" belt groove, (outside diam. of belt groove 2.9 in.) with 200327C and 200328C
268049	Machine Pulley 268048 with 268024
200328C	Machine Pulley Position Screw
200327C	Machine Pulley Set Screw
268603	Needle Bar with 200125ALX
*268055	Needle Bar Connecting Link
268056	Needle Bar Connecting Link 268055 with two 270266
268139	Needle Bar Connecting Link Cap Washer
200095X	Needle Bar Connecting Link Cap Washer Screw
270266	Needle Bar Connecting Link Needle Bearing
268141	Needle Bar Connecting Stud with 201183C, 202423 and two 200069C
202423	Needle Bar Connecting Stud Oil Packing (wick)
200069C	Needle Bar Connecting Stud Pinch Screw
267705	Needle Bar Crank with 200346C, 200354C and 200378C

MACHINE NO. 300w124

267706	Needle Bar Crank 267705 with 268005
200354C	Needle Bar Crank Position Screw
200378C	Needle Bar Crank Position Screw Check Screw
200346C	Needle Bar Crank Set Screw
268144	Needle Bar Oiling Felt (2)
268278	Needle Bar Oiling Felt Holder (2)
200173D	Needle Bar Oiling Felt Holder Screw (2)
267637	Needle Bar Rock Frame
267638	Needle Bar Rock Frame Driving Arm with two 200043C
200043C	Needle Bar Rock Frame Driving Arm Pinch Screw
268060	Needle Bar Rock Frame Driving Connection
268061	Needle Bar Rock Frame Driving Connection 268060 with 268063
200123D	Needle Bar Rock Frame Driving Connection Cap Screw
268062	Needle Bar Rock Frame Driving Connection Hinge Stud with 268258
201522E	Needle Bar Rock Frame Driving Connection Hinge Stud Nut
268258	Needle Bar Rock Frame Driving Connection Hinge Stud Oil Packing (wick)
268063	Needle Bar Rock Frame Driving Connection Needle Bearing
268064	Needle Bar Rock Frame Driving Eccentric
268065	Needle Bar Rock Frame Driving Eccentric Adjusting Disc
267618	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring
267639	Needle Bar Rock Frame Driving Eccentric Flange with 267623, two each 241763, 350467C, 350477C and 350548C
350467C	Needle Bar Rock Frame Driving Eccentric Flange Set Screw

MACHINE NO. 300w124

267623	Needle Bar Rock Frame Driving Eccentric Friction Plate
350548E	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw
350477C	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw Set Screw
241763	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw Set Screw Packing (brass)
268029	Needle Bar Rock Frame Needle Bearing (2)
268148	Needle Bar Rock Frame Regulating Stud
264709	Needle Bar Rock Frame Regulating Stud Cap with 200364C
200364C	Needle Bar Rock Frame Regulating Stud Cap Set Screw
268149	Needle Bar Rock Frame Regulating Stud Sleeve
200337C	Needle Bar Rock Frame Regulating Stud Sleeve Set Screw
214529	Needle Bar Rock Frame Regulating Stud Spring
268150	Needle Bar Rock Frame Regulating Stud complete, Nos. 214529, 264709, 268148 and 268149
268219	Needle Bar Rock Frame Thread Guide
200583X	Needle Bar Rock Frame Thread Guide Screw (2)
268310	Needle Guard
200377C	Needle Guard Set Screw
200125ALX	Needle Set Screw
268312	Needle Thread Guide (on Arm Head)
268512	Needle Thread Guide (on Needle Bar Connecting Stud)
201188C	Needle Thread Guide (on Needle Bar Connecting Stud) Set Screw
268513	Needle Thread Guide (on side of Arm) (2)
200082D	Needle Thread Guide Screw (3)

MACHINE NO. 300w124

268167	Needle Thread Tension Bracket
200047E	Needle Thread Tension Bracket Screw (2)
268121	Needle Thread Tension Bracket Spacing Collar (2)
2102	Needle Thread Tension Disc
268168	Needle Thread Tension Releaser
268169	Needle Thread Tension Releaser Cap with 201052ALX
201052ALX	Needle Thread Tension Releaser Cap Set Screw
204365	Needle Thread Tension Releaser Spring
268725	Needle Thread Tension Releasing Arm with 201160E and 238089
201363C	Needle Thread Tension Releasing Arm Hinge Screw
32572	Needle Thread Tension Releasing Disc
226206	Needle Thread Tension Releasing Pin
267707	Needle Thread Tension Releasing Plate (adjustable)
238089	Needle Thread Tension Releasing Plate Pin
131741	Needle Thread Tension Spring
59538	Needle Thread Tension Spring Bushing (back)
59537	Needle Thread Tension Spring Bushing (front)
50326C	Needle Thread Tension Stud
59539	Needle Thread Tension Stud 50326C with 51570C
54279	Needle Thread Tension Thread Guide (double)
51570C	Needle Thread Tension Thumb Nut
268263	Needle Thread Tension complete, Nos. 32572, 59537 to 59539, 131741 and two 2102
267708	Presser Bar Pressure Cylinder with 267653

MACHINE NO. 300w124

267709	Presser Bar Pressure Cylinder Cap
201110X	Presser Bar Pressure Cylinder Cap Screw
994778	Presser Bar Pressure Cylinder Hose Connection
931758	Presser Bar Pressure Cylinder Hose Connection Washer
267710	Presser Bar Pressure Cylinder Plunger
267653	Presser Bar Pressure Cylinder Plunger Bearing
267711	Presser Bar Pressure Cylinder Plunger Disc
1517C	Presser Bar Pressure Cylinder Plunger Nut
267712	Presser Bar Pressure Cylinder Plunger Washer (leather)
267713	Presser Bar Pressure Cylinder Plunger Washer (steel)
267714	Presser Bar Pressure Cylinder Support
267650	Presser Bar Pressure Cylinder Support Retainer
200098F	Presser Bar Pressure Cylinder Support Retainer Screw (2)
350579X	Presser Bar Pressure Cylinder Support Stud
201746X	Presser Bar Pressure Cylinder Support Stud Nut
67425	Presser Bar Pressure Cylinder Support Stud Nut Lock Washer
267715	Presser Bar Pressure Cylinder complete, Nos. 67425, 267644, 267645, 267708 to 267713, 267716, 350579X, 931758, 994778, two each 1517C, 201110X and three 201746X
267716	Presser Bar Spring
267717	Presser Bar Spring Arm
276025	Presser Bar Spring Arm Ball Bearing'
267718	Presser Bar Spring Arm Ball Bearing Retainer
201409F	Presser Bar Spring Arm Ball Bearing Retainer Screw (2)

MACHINE NO. 300w124

267644	Presser Bar Spring Arm Fork
267645	Presser Bar Spring Arm Fork Lock Washer (nylon)
267719	Presser Bar Spring Arm Fulcrum
201254C	Presser Bar Spring Arm Fulcrum Set Screw (2)
267647	Presser Bar Spring Arm Hinge Buffer (leather)
268620	Spreader with 268162
268181	Spreader Bar
268184	Spreader Bar Bearing
200035E	Spreader Bar Bearing Screw
268186	Spreader Driving Connection with two 201020E
268233	Spreader Driving Connection 268186 with 268063 and 351876
201020E	Spreader Driving Connection Cap Screw
268063	Spreader Driving Connection Needle Bearing
268187	Spreader Driving Crank with 200373C and 200403C
200373C	Spreader Driving Crank Position Screw
200403C	Spreader Driving Crank Set Screw
268045	Spreader Driving Eccentric with two 200364C
268046	Spreader Driving Eccentric Counter Balance with two 200364C
200364C	Spreader Driving Eccentric Counter Balance Set Screw
200364C	Spreader Driving Eccentric Set Screw
268220	Spreader Driving Eccentric Thrust Washer (2)
268190	Spreader Driving Pin
268053	Spreader Driving Rock Shaft with 200064F
268072	Spreader Driving Rock Shaft Collar with two 200386C (2)

MACHINE NO. 300w124

200386C	Spreader Driving Rock Shaft Collar Set Screw
268071	Spreader Driving Rock Shaft Needle Bearing (2)
350466C	Spreader Driving Rock Shaft Screw Stud
351876	Spreader Driving Rock Shaft Screw Stud Ball Roller
201736E	Spreader Driving Rock Shaft Screw Stud Nut
268730	Spreader Holder with two 200380C
200380C	Spreader Holder Set Screw
268162	Spreader Point
200544C	Spreader Screw
204925	Spreader Screw Washer
267656	Thread Lubricator with 50608R, 139017, 350549C and three 236957
236957	Thread Lubricator Oil Pad (felt)
350549C	Thread Lubricator Oil Pad Regulating Screw
50608R	Thread Lubricator Plug Screw
139017	Thread Lubricator Plug Screw Washer
200064D	Thread Lubricator Screw
267663	Throat Plate, for 267664
200100E	Throat Plate Screw (3)
267657	Vibrating Presser Bar
267658	Vibrating Presser Bar Hinge Stud
267659	Vibrating Presser Foot with 200078F
200078F	Vibrating Presser Foot Pinch Screw

ACCESSORIES
FOR
MACHINE NO. 300w124

994719	Air Compressor for Electric Transmitters S47 and S69
995475	Air Filter
160137	Air Hose
228732	Drip Pan
200019E	Drip Pan Screw (2)
52843	Drip Pan Screw Washer (leather) (4)
265306	Foot Lifter and Starting Treadle complete
268340	Looper Threading Wire
228452	Machine Base Oil Drain Jar complete
228444	Machine Cushion (neoprene) (4)
41400	Machine Rest Pin (wood)
228733	Machine Support (left)
228734	Machine Support (right)
62x59	Needles #23 (6)
228491	Pressure Oiler with 228715
225498	Screw Driver
228476	Screw Driver (Bobbin Case)
255542	Screw Driver
228745	Thread Unwinder complete
228451	Tweezers
202511	Wrench
249820	Wrench
255540	Wrench

ACCESSORIES
FOR
MACHINE NO. 300w124

267722	Presser Bar Pressure Control Valve complete
265307	Bed Hinge Connection (2)
350598E	Bed Hinge Connection Screw (4)
228715	Nozzle Tip, for Pressure Oiler 228491
268506	Looper Thread Guide (top of Arm) Bracket 263111 with 268505 and two 50169J