

Form 2936w

(147)

Printed in U. S. A.

LIST OF PARTS



MACHINE No. 300w201

THE SINGER MANUFACTURING COMPANY

Copyright, U. S. A., 1946 and 1947
by The Singer Manufacturing Co.
All Rights Reserved for all Countries

INDEX

	Page
Accessories	17
Foot Lifter Treadle	18
Machine No.300w201	5
Numerical List of Parts	19
Thread Unwinder	18

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished, Nickel Plated and Buffed.
- B. Polished, Nickel Plated and Buffed.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.
- J. Nickel Plated only.
- R. Merlized.
- X. Black Oxide.
- XC. Hardened and Black Oxide.
- Y. Black Nickel only.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series:

 
200001 to 201500 and 350001 to 351500 are Screw Numbers.
201501 to 201800 and 351501 to 351800 are Nut Numbers.
201801 to 202000 and 351801 to 352000 are Roller Numbers.
202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished when repairs are made at the factory.

LIST OF PARTS COMPLETE
FOR

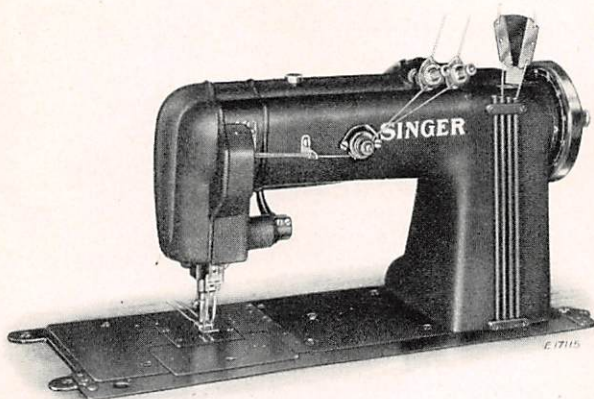

MACHINE No. 300w201

TWO THREAD CHAIN STITCH

TWO NEEDLES TWO LOOPERS

COMPOUND FEED

For Attaching Bibs to Overalls, Taping Awnings,
Stitching Tarpaulins, Tents, Seat Covers and
Similar Work on Medium and Heavy Fabrics.

Made in gauges from $\frac{3}{16}$ to $2\frac{1}{2}$ inches.

No.	Plate	Name
*268001	-----	Arm with 204235, 268002, 268004, three each 200029E and 200047D
*268002	-----	Arm Head with 202120
204235	18607	" " Position Pin
200029E	18607	" " Screw
8582	18607	" Position Pin (2)
200004E	18607	" Screw (4)
202005	18607	" " Washer (4)
268003	18601	" Shaft with 268009, 268214 and 350465C
268209	18601	Arm Shaft Air Vent Body with 232382
268212	18601	" " " " Packing Washer
268210	18601	" " " " Cap
232382	18601	" " " " Position Pin
268211	18601	" " " " Spring
201735E	18601	" " " " Thumb Nut
268213	18601	Arm Shaft Air Vent complete, Nos. 201735E and 268209 to 268211

SEWING MACHINES & SUPPLIES

57 W. 25 ST. N.Y.C. CH 2-8887

PARTS FOR MACHINE No. 300w201

No.	Plate	Name
268024	18601	Arm Shaft Ball Bearing (back)
268004	18601	" " " " " Housing
200047D	18601	" " " " " "
		Screw
268005	18601	Arm Shaft Ball Bearing (front)
268196	18601	" " Connection Belt
268006	18601	" " " " Pulley with
		two each 201254C and 202253
201254C	18601	Arm Shaft Connection Belt Pulley Set
		Screw
202253	18601	Arm Shaft Connection Belt Pulley
		Spring Flange
268007	18601	Arm Shaft Counter Balance with 200354C
		and 200362C
200354C	18601	Arm Shaft Counter Balance Position
		Screw
200362C	18601	Arm Shaft Counter Balance Set Screw
268264	18601	" " Oil Control Rod (wood)
268008	18601	" " " Slinger with 350171C
350171C	18601	" " " " Set Screw
268214	18601	" " " Stop Ball 5/32 in.diam.
268009	18601	" " " " Spring
350465C	18601	" " " " Screw
268010	18607	" Side Cover
200113H	18607	" " " Screw (3)
268011	18601	Balance Wheel "V" belt groove (out-
		side diam.of belt groove 2.9 in.)
		with 201346AL and 350107AL
268012	18601	Balance Wheel 268011 with 268024
350107AL	18601	" " Position Screw
201346AL	18601	" " Set Screw
*268014	-----	Bed with 268184,two each 200035E and
		225887
268015	18607	Bed Plate (left),for gauges from 3/16
		to 1-1/2 inch
268018	18607	Bed Plate (right)
200092D	18607	" " Screw (8)
268019	18607	" " Slide with two 268022,for
		gauges from 3/16 to 1-1/2 inch
268022	18607	Bed Plate Slide Spring
268023	18602	" Shaft
268209	18602	" " Air Vent Body with 232382
268212	18602	" " " " Packing Washer
268210	18602	" " " " Cap
232382	18602	" " " " Position Pin
268211	18602	" " " " Spring
201735E	18602	" " " " Thumb Nut
268213	18602	Bed Shaft Air Vent complete,Nos.
		201735E and 268209 to 268211
268024	18602	Bed Shaft Ball Bearing
268028	18602	" " Connection Belt Pulley with
		202253 and two 201254C
268261	18602	Bed Shaft Connection Belt Pulley
		268028 with 268024
201254C	18602	Bed Shaft Connection Belt Pulley Set
		Screw

PARTS FOR MACHINE No. 300w201

7

No.	Plate	Name
202253	18602	Bed Shaft Connection Belt Pulley Spring Flange
268007	18602	Bed Shaft Counter Balance with 200354C and 200362C (2)
200354C	18602	Bed Shaft Counter Balance Position Screw
200362C	18602	Bed Shaft Counter Balance Set Screw
268029	18602	" " Needle Bearing (2)
268265	18602	" " Oil Control Rod (wood)
268030	18607	Face Plate with 268033 and two 201416C
268031	18607	" " Hinge Pin (2)
201416C	18607	" " " " Set Screw
268032	18607	" " Lock Spring
268197	18607	" " " " Plate
200571XC	18607	" " " " Screw (2)
268033	18607	" " " Stud
268034	18603	Feed Bar with 200373C and two 200403C
268035	18603	" " Hinge Pin
200403C	18603	" " Set Screw
268036	18609	" Dog, 46 needle hole, for needle sizes 20 and 22 in 1/4 and 9/32 in. gauge with 350120C, for 268200
268037	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 3/8 in. gauge with 350120C, for 268201
268041	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 1/2 in. gauge with 350120C, for 268247
268038	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 3/4 in. gauge with 350120C, for 268202
268042	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 7/8 in. gauge with 350120C, for 268248
268039	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 1 in. gauge with 350120C, for 268203
350120C	18609	Feed Dog Adjusting Screw
200040C	18603	" " Screw
208636	18603	" " " Washer
268060	18603	" Driving Connection
268061	18603	" " " 268060 with 268063
200123D	18603	Feed Driving Connection Cap Screw
268062	18603	" " " Hinge Stud
201522E	18603	" " " " Nut
268063	18603	" " " Needle Bearing
268064	18602	" " Eccentric
268065	18602	" " " Adjusting Disc
268066	18602	" " " " " "
		Spring
268067	18602	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382C
200382C	18602	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw

PARTS FOR MACHINE No. 300w201

No.	Plate	Name
350477C	18602	Feed Driving Eccentric Friction Adjusting Screw
350101C	18602	Feed Driving Eccentric Friction Adjusting Screw Set Screw
268068	18602	Feed Driving Flange with two each 350101C, 350467C and 350477C
350467C	18602	Feed Driving Flange Set Screw
268069	18603	" " Rock Frame with 200354C and 200362C
200354C	18603	Feed Driving Rock Frame Position Screw
200362C	18603	" " " " Set Screw
268070	18603	" " " Shaft
268072	18603	" " " Collar with two 200386C (2)
200386C	18603	Feed Driving Rock Shaft Collar Set Screw
268073	18603	Feed Driving Rock Shaft Crank with 201418C and two 200061C
200061C	18603	Feed Driving Rock Shaft Crank Pinch Screw
201418C	18603	Feed Driving Rock Shaft Crank Position Screw
268071	18603	Feed Driving Rock Shaft Needle Bearing (2)
268074	18603	Feed Lifting Connection
268062	18603	" " " Hinge Stud
201522E	18603	" " " " Nut
268075	18603	" " Crank with 200373C and 201256C
201256C	18603	Feed Lifting Crank Pinch Screw
268047 268266	18604	" " Eccentric with 268077 and two 201052C
268077	18604	Feed Lifting Eccentric Lubricating Pad (wood)
201052C	18604	Feed Lifting Eccentric Set Screw
268078	18603	" " Link
268079	18603	" " " Hinge Pin with 268258 (2)
268258	18603	Feed Lifting Link Hinge Pin Oil Packing (wick)
200373C	18603	Feed Lifting Link Hinge Pin Set Screw
268080	18603	" " Rock Shaft
268072	18603	" " " Collar with two 200386C (2)
200386C	18603	Feed Lifting Rock Shaft Collar Set Screw
268198	18603	Feed Lifting Rock Shaft Crank with 201418C and two 200061C
200061C	18603	Feed Lifting Rock Shaft Crank Pinch Screw
201418C	18603	Feed Lifting Rock Shaft Crank Position Screw
268071	18603	Feed Lifting Rock Shaft Needle Bearing (2)
268081	18602	Feed Regulating Stud
240245	18602	" " " Retaining Spring

No.	Plate	Name
268082	18602	Feed Regulating Stud Socket
200078F	18602	" " " " Screw (2)
270026	18602	" " " Spring
268083	18607	Foot Lifter Bell Crank
350013C	18607	" " " " Hinge Screw
268085	18607	" " Lever with 238089
201363C	18607	" " " Hinge Screw
268086	18607	" " " Rod
204348	18607	" " " Spring
201160E	18607	" " " " Screw Eye
268087	18607	" " Lifting Link
200934F	18607	" " " " Hinge Screw
202120	18607	" " " " Stop Pin
268088	18610	Looper (2)
350478C	18610	" Adjusting Screw
268090	18604	" Carrier
268205	18604	" " 268090 with two 268099
268091	18604	" " Crank with 200089C
268092	18604	" " " Clamping Stud
201524E	18604	" " " " " Nut
67425	18604	" " " " " Washer
268208	18604	" " " Hinge Pin with 268258
268258	18604	" " " " " Oil Packing (wick)
200089C	18604	Looper Carrier Crank Hinge Pin Pinch Screw
268099	18604	Looper Carrier Needle Bearing
*268093	18604	" " Shaft
268094	18604	Looper Carrier Shaft 268093 with 268095 and 268097
*268095	18604	Looper Carrier Shaft Bushing (left) (eccentric) with 200354C and 200362C
268096	18604	Looper Carrier Shaft Bushing (left) Position Plate
200085C	18604	Looper Carrier Shaft Bushing (left) Position Plate Screw (2)
*268097	18604	Looper Carrier Shaft Bushing (right) (eccentric) with 200354C and 200362C
200354C	18604	Looper Carrier Shaft Bushing Position Screw
200362C	18604	Looper Carrier Shaft Bushing Set Screw
268098	18604	" Driving Connection
268216	18604	" " " 268098 with 268099
268099	18604	Looper Driving Connection Needle Bearing
268100	18604	Looper Driving Crank with 200354C, 200362C and 200373C
268102	18604	Looper Driving Crank Oil Hole Cover
200303H	18604	" " " " " " Screw
204925	18604	Looper Driving Crank Oil Hole Cover Screw Washer
200373C	18604	Looper Driving Crank Oil Stop Screw
200354C	18604	" " " Position Screw
200362C	18604	" " " Set Screw

PARTS FOR MACHINE No. 300w201

No.	Plate	Name
268103	18610	Looper Holder 1/4 and 9/32 in.gauge with four 350478C
268104	-----	Looper Holder 3/8 in.gauge with four 350478C
268108	-----	Looper Holder 1/2 in.gauge with four 350478C
268105	-----	Looper Holder 3/4 in.gauge with four 350478C
268217	-----	Looper Holder 7/8 in.gauge with four 350478C
268106	-----	Looper Holder 1 in.gauge with four 350478C
350267E	18610	Looper Holder Screw
209636	18610	" " " Washer
350478C	18610	" Set Screw
268112	18608	" Thread Guide
139158	18608	" " " (top of arm)
268111	18608	" " " " " " Bracket
268218	18608	" " " " " " "
		268111 with two 139158 and four 229J
200578XC	18608	Looper Thread Guide (top of arm) Bracket Screw (2)
229J	18608	Looper Thread Guide (top of arm) Screw
268110	18610	" " " (on bed at looper) for 1/4 and 9/32 in.gauge
268251	-----	Looper Thread Guide (on bed at looper) for 3/8 and 1/2 in.gauge
268252	-----	Looper Thread Guide (on bed at looper) for 3/4 and 7/8 in.gauge
268253	-----	Looper Thread Guide (on bed at looper) for 1 in.gauge
350468E	18610	Looper Thread Guide (on bed at looper) Screw
200035D	18608	Looper Thread Guide Screw
268114	18602	" " Take-up Driving Connection
268079	18602	" " " " "
		Hinge Stud with 268258
268258	18602	Looper Thread Take-up Driving Connection Hinge Stud Oil Packing (wick)
200098F	18602	Looper Thread Take-up Driving Connection Hinge Stud Set Screw
268113	18602	Looper Thread Take-up Driving Eccentric with 200378C and 201220C
201220C	18602	Looper Thread Take-up Driving Eccentric Position Screw
200378C	18602	Looper Thread Take-up Driving Eccentric Set Screw
268115	18602	Looper Thread Take-up Lever with 200098F and two 201052C
268116	18602	Looper Thread Take-up Lever Hinge Stud
268072	18602	" " " " "
		Collar with two 200386C
200386C	18602	Looper Thread Take-up Lever Hinge Stud Collar Set Screw
200362C	18602	Looper Thread Take-up Lever Hinge Stud Set Screw

PARTS FOR MACHINE No. 300w201

11

No.	Plate	Name
268118	18608	Looper Thread Take-up Thread Guide
350132C	18608	" " " " "
		Screw
268119	18608	Looper Thread Take-up Thread Guide
		Support Stud
200394C	18608	Looper Thread Take-up Thread Guide
		Support Stud Set Screw
268117	18602	Looper Thread Take-up Rod
201052C	18602	" " " " Set Screw
268120	18608	" Thread Tension Bracket
200564E	18608	" " " " Screw (2)
268121	18608	" " " " Spacing
		Collar (2)
2455	18608	Looper Thread Tension Disc
39789	18603	" " " Spring
418D	18608	" " " Stud
268122	18608	" " " Thread Guide (2)
1562J	18608	" " " Thumb Nut
268262	18608	Looper Thread Tension complete, Nos.
		418D, 1562J, 39789 and two 2455 (2)
268123	18608	Looper Thread Tube with two 268125 (4)
268124	18608	" " " Clamp (2)
200054C	18608	" " " Screw (4)
268125	18608	" " " Thread Bushing
268126	18604	" Throw-out Gear with two 200362C
268127	18604	" " " Locking Plunger
201477C	18604	" " " " "
		Screw Bushing
250265	18604	Looper Throw-out Gear Locking Plunger
		Spring
200444C	18604	Looper Throw-out Gear Locking Plunger
		Stop Screw
200364C	18604	Looper Throw-out Gear Locking Plunger
		Stop Screw Set Screw
201620D	18604	Looper Throw-out Gear Locking Plunger
		Thumb Nut
200362C	18604	Looper Throw-out Gear Set Screw
268129	18604	" " Rack Rod
201553D	18604	" " " Thumb Nut
268131	18603	" " Safety Latch
268199	18603	" " " Collar with
		two 200386C
200386C	18603	Looper Throw-out Safety Latch Collar
		Set Screw
268132	18603	Looper Throw-out Safety Latch Spring
268133	18603	" " " " "
		Bracket
200098F	18603	Looper Throw-out Safety Latch Spring
		Bracket Screw (2)
228448	18613	Machine Locating Stud (4)
268136	18606	Needle Bar
268137	18606	" " Connecting Link
268138	18606	" " " 268137
		with two 268140
268139	18606	Needle Bar Connecting Link Cap Washer
201185D	18606	" " " " " "
		Screw

PARTS FOR MACHINE No. 300w201

No.	Plate	Name
268140	18606	Needle Bar Connecting Link Needle Bearing
268141	18606	Needle Bar Connecting Stud with 202423, 201188C and two 200069C
202423	18606	Needle Bar Connecting Stud Oil Packing (wick)
200069C	18606	Needle Bar Connecting Stud Pinch Screw
268142	18601	" " Crank with 200346C, 200354C 200378C and 200379C
268143	18601	Needle Bar Crank 268142 with 268005
200379C	18601	" " " Oil Hole Plug Screw
200354C	18601	" " " Position Screw
200378C	18601	" " " " " Check Screw
200346C	18601	Needle Bar Crank Set Screw
268144	18606	" " Oiling Felt
268145	18606	" " " " Holder
200173D	18606	" " " " " Screw (2)
268146	18606	" " Rock Frame
268147	18606	" " " " Driving Arm with two 200058C
200058C	18606	Needle Bar Rock Frame Driving Arm Pinch Screw
268060	18601	Needle Bar Rock Frame Driving Connection
268061	18601	Needle Bar Rock Frame Driving Connection 268060 with 268063
200123D	18606	Needle Bar Rock Frame Driving Connection Cap Screw
268062	18606	Needle Bar Rock Frame Driving Connection Hinge Stud
201522E	18606	Needle Bar Rock Frame Driving Connection Hinge Stud Nut
268063	18601	Needle Bar Rock Frame Driving Connection Needle Bearing
268064	18601	Needle Bar Rock Frame Driving Eccentric
268065	18601	" " " " " " " Adjusting Disc
268066	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring
268067	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring Collar with two 200382C
200382C	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring Collar Set Screw
350477C	18601	Needle Bar Rock Frame Driving Eccentric Friction Adjusting Screw
350101C	18601	Needle Bar Rock Frame Driving Eccentric Friction Adjusting Screw Set Screw
268068	18601	Needle Bar Rock Frame Driving Flange with two each 350101C, 350467C and 350477C
350467C	18601	Needle Bar Rock Frame Driving Flange Set Screw

No.	Plate	Name
268029	18C06	Needle Bar Rock Frame Needle Bearing (2)
268148	18601	Needle Bar Rock Frame Regulating Stud
264709	18601	" " " " " "
		Cap with 200364C
200364C	18601	Needle Bar Rock Frame Regulating Stud Cap Set Screw
268149	18601	Needle Bar Rock Frame Regulating Stud Sleeve
200337C	18601	Needle Bar Rock Frame Regulating Stud Sleeve Set Screw
214529	18601	Needle Bar Rock Frame Regulating Stud Spring
268150	18601	Needle Bar Rock Frame Regulating Stud complete, Nos. 214529, 264709, 268148 and 268149
268219	18610	Needle Bar Rock Frame Thread Guide, for 1/4 and 9/32 in. gauge
268254	-----	Needle Bar Rock Frame Thread Guide, for 3/8 and 1/2 in. gauge
268255	-----	Needle Bar Rock Frame Thread Guide, for 3/4 and 7/8 in. gauge
268256	-----	Needle Bar Rock Frame Thread Guide, for 1 in. gauge
200583C	18610	Needle Bar Rock Frame Thread Guide Screw (2)
268151	18610	Needle Holder, in gauges 1/4 and 9/32 in. with two 50014F
268152	-----	Needle Holder 3/8 in. gauge with two 50014F
268153	-----	Needle Holder 1/2 in. gauge with two 50014F
268154	-----	Needle Holder 3/4 in. gauge with two 50014F
268155	-----	Needle Holder 7/8 in. gauge with two 50014F
268156	-----	Needle Holder 1 in. gauge with two 50014F
50014F	18610	Needle Set Screw
268163	18608	" Thread Guide (on arm head)
268166	18608	" " " (on side of arm)
268164	18606	" " " (on Needle Bar Connecting Link)
200379C	18606	Needle Thread Guide (on Needle Bar Connecting Link) Set Screw
268165	18606	Needle Thread Guide (on Needle Bar Connecting Stud)
201188C	18606	Needle Thread Guide (on Needle Bar Connecting Stud) Set Screw
200082D	18608	Needle Thread Guide Screw (2)
201733XC	18608	" " Nipper Adjusting Collar with 350101H
350101H	18608	Needle Thread Nipper Adjusting Collar Screw
268221	18608	Needle Thread Nipper Bearing
268222	18608	" " " " Plate

HARRY WELANSKY
SEWING MACHINES & SUPPLIES

No.	Plate	Name
200082D	18609	Needle Thread Nipper Bearing Plate Screw (2)
268223	18608	Needle Thread Nipper Disc (2)
268224	18608	" " " " Washer (vellumoid)
268225	18601	Needle Thread Nipper Eccentric with two 200394C
268226	18601	Needle Thread Nipper Eccentric Connect- ion
268228	18601	Needle Thread Nipper Eccentric Connect- ion 268226 and 268227
268227	18601	Needle Thread Nipper Eccentric Connect- ion Needle Bearing
268259	18601	Needle Thread Nipper Eccentric Flange
201403H	18601	" " " " " " Screw
200394C	18601	Needle Thread Nipper Eccentric Set Screw
268229	18608	Needle Thread Nipper Plunger with 350496C
268230	18608	Needle Thread Nipper Plunger Cap
268231	18608	" " " " " " Hinge Pin
350496C	18608	" " " " " " " Set Screw
222613	18608	Needle Thread Nipper Spring
268232	18608	" " " " " " Plunger
201537H	18608	" " " " " " " Nut (2)
350483E	18608	Needle Thread Nipper Spring Plunger Screw Bearing
268167	18608	Needle Thread Tension Bracket
200047E	18608	" " " " " " Screw (2)
268121	18608	" " " " " " Spacing Collar (2)
2102	18608	Needle Thread Tension Disc
268168	18608	" " " " " " Releaser
268169	18608	" " " " " " Cap with 201052C
201052C	18608	Needle Thread Tension Releaser Cap Set Screw
204365	18608	Needle Thread Tension Releaser Spring
32572	18608	" " " " " " Releasing Disc
226206	18608	" " " " " " Pin (2)
268171	18607	" " " " " " Plate (adjustable)
238089	18607	Needle Thread Tension Releasing Plate Pin
200541E	18607	Needle Thread Tension Releasing Plate Screw
203349	18607	Needle Thread Tension Releasing Plate Screw Washer
131741	18608	Needle Thread Tension Spring
59538	18608	" " " " " " Bushing (back)

No.	Plate	Name
59537	18608	Needle Thread Tension Spring Bushing (front)
50326C	18608	Needle Thread Tension Stud
59539	18608	" " " " 50326C with 51570C
131696	18608	Needle Thread Tension Thread Guide (double) (2)
51570C	18608	Needle Thread Tension Thumb Nut
268263	18608	Needle Thread Tension complete, Nos. 32572, 59537 to 59539, 131741 and two 2102 (2)
268172	18606	Presser Bar
268173	18606	" " Bushing
268174	18606	" " Guide Bracket with 200572F, 201216C and 351875
200572F	18606	Presser Bar Guide Bracket Adjusting Screw
201216C	18606	Presser Bar Guide Bracket Pinch Screw
351875	18606	" " " " Roller
268175	18606	" " Lifter
201276D	18606	" " " Hinge Screw
222119	18606	" " " Stop Pin
268176	18607	" " Spring
350469C	18607	" " " Adjusting Screw
201485C	18607	" " " " " Set Screw
200935F	18607	Presser Bar Spring Support Screw
203759	18606	" " Stop Collar with 200380C
200380C	18606	" " " " Set Screw
230795	18609	" Foot Hinge Pin
268235	18609	" " Plate, for 268236
268237	-----	" " " " 268238
268239	-----	" " " " 268240
268241	-----	" " " " 268242
268243	-----	" " " " 268244
268245	-----	" " " " 268246
268234	18609	" " Shank with 1454E
1454E	18609	" " " Pinch Screw
268236	18609	Presser Foot (hinged) complete, 46 needle hole, in 1/4 and 9/32 in. gauge Nos. 230795, 268234 and 268235
268238	-----	Presser Foot (hinged) complete, 46 needle hole, in 3/8 in. gauge Nos. 230795, 268234 and 268237
268240	-----	Presser Foot (hinged) complete, 46 needle hole, in 1/2 in. gauge Nos. 230795, 268234 and 268239
268242	-----	Presser Foot (hinged) complete, 46 needle hole, in 3/4 in. gauge Nos. 230795, 268234 and 268241
268244	-----	Presser Foot (hinged) complete, 46 needle hole, in 7/8 in. gauge Nos. 230795, 268234 and 268243
268246	-----	Presser Foot (hinged) complete, 46 needle hole, in 1 in. gauge Nos. 230795, 268234 and 268245

No.	Plate	Name
268177	18610	Spreader, 1/4 and 9/32 in. gauge
268178	-----	" 3/8 in. gauge
268249	-----	" 1/2 in. gauge
268179	-----	" 3/4 in. gauge
268250	-----	" 7/8 in. gauge
268180	-----	" 1 in. gauge
268181	18605	" Bar
268184	18605	" " Bearing
225887	18605	" " " Position Pin
200035E	18605	" " " Screw
268186	18605	" Driving Connection with two 201020C
268233	18605	Spreader Driving Connection 268186 with 268063 and 351876
201020C	18605	Spreader Driving Connection Cap Screw
268063	18605	" " " Needle Bearing
268187	18605	" " Crank with 200373C and 200403C
200373C	18605	Spreader Driving Crank Position Screw
200403C	18605	" " " Set Screw
268188	18602	" " Eccentric with two 200364C
268189	18602	Spreader Driving Eccentric Counter Balance with two 200364C
201063E	18602	Spreader Driving Eccentric Counter Balance Screw (2)
200364C	18602	Spreader Driving Eccentric Counter Balance Set Screw
200364C	18602	Spreader Driving Eccentric Set Screw
268220	18602	" " " Thrust Washer (2)
268190	18605	Spreader Driving Pin
268191	18605	" " Rock Shaft
268072	18605	" " " Collar with two 200386C (2)
200386C	18605	Spreader Driving Rock Shaft Collar Set Screw
268071	18605	Spreader Driving Rock Shaft Needle Bearing (2)
350466C	18605	Spreader Driving Rock Shaft Screw Stud
351876	18605	" " " " " "
		Ball Roller
201736C	18605	Spreader Driving Rock Shaft Screw Stud Nut
268185	18605	Spreader Holder with two 200380C
200380C	18605	" " Set Screw
350149C	18605	" Screw
204925	18605	" " Washer
268200	18609	Throat Plate, 1/4 and 9/32 in. gauge, for 268036
268201	-----	Throat Plate 3/8 in. gauge, for 268037
268247	-----	" " 1/2 in. gauge, for 268041
268202	-----	" " 3/4 in. gauge, for 268038
268248	-----	" " 7/8 in. gauge, for 268042
268203	-----	" " 1 in. gauge, for 268039
200100E	18609	" " Screw (3)

ACCESSORIES

No.	Plate	Name
62 x 45	-----	Needles, six, sizes 20 and 22
*225483	-----	Screw Driver Handle, for 250522
*250521	-----	" " Blade, for 250522
250522	18611	Screw Driver complete, Nos. 225483 and 250521
228451	18611	Tweezers
228443	18612	Drip Pan
200019E	18612	" " Screw (2)
210805	18612	" " " Washer (2)
52843	18612	" " " " (leather) (4)
131185	18612	Machine Base Oil Drain Jar (glass)
131191	18612	" " " " " Cap
131217	18612	" " " " " Clamp
		131188 with 131189
131188	18612	Machine Base Oil Drain Jar Clamp
131189	18612	" " " " " " Lever
1247C	18612	" " " " " " Screw
131266	18612	" " " " " " Nipple
		(short)
228452	18612	Machine Base Oil Drain Jar complete, Nos. 131185, 131191, 131217, 131266 and two 1247C
228444	18613	Machine Cushion (neoprene) (4)
228320	18613	" " (felt) (4)
228445	18613	" Cut-out Cover with 36737
36737	18613	" " " Ball
228446	18613	" " " Hinge Plate
200184H	18613	" " " " " Screw (2)
200268H	18613	" " " " " Screw
204030	18613	" " " " " Spring
		Washer
228447	18613	Machine Cut-out Cover Latch Plate
200566H	18613	" " " " " " Screw
		(2)
228456	18613	Machine Cut-out Cover Latch Spring
228449	18613	" Support (left) with two wood screws 1-1/4 in., No. 12, F.H.B.
228450	18613	Machine Support (right) with two wood screws 1-1/4 in., No. 12, F.H.B.
120342	18611	Oiler (copper plated) with 120343
120343	18611	" Spout (3-1/2 in. long)
225498	18611	Screw Driver (7-1/4 in. long)
255542	18611	" " (8 in. blade)
225554	18611	Wrench (steel)
42850	18611	"

HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST., N.Y.C. CH. 3-8887

FOOT LIFTER TREADLE

No.	Plate	Name
14372	18614	Treadle
228474	18614	" Chain 34 in.long with two 202784
202784	18614	Treadle Chain Hook
14373	18614	" Extension
50581R	18614	" " Screw
2718R	18614	" " Washer
17881	18614	" Shaft
14374	18614	" Spring
14375	18614	" Stand
14376	18614	Foot Lifter Treadle complete,Nos. 2718R,14372 to 14375,17881,50581R and two wood screws 1-1/4 in.,No. 12,F.H.

THREAD UNWINDER

FOR FOUR SPOOLS

225257	18615	Spool Rest (for two spools) with 201018C
150203	18615	Spool Rest Cushion (felt)
225388	18615	" " Rod
200383C	18615	" " " Set Screw
201018C	18615	" " Set Screw
259658	18615	" Stand with 200383C
225391	18615	Thread Guide
201696H	18615	" " Lock Nut
225326	18615	" " Position Cup
225324	18615	" " Rod with 208AL and 225322
208AL	18615	" " " Screw
225322	18615	" " " Washer
*150057	18615	" Separator
150058	18615	" " 150057 with 150059
150059	18615	" " Bracket
150060	18615	" " " Arm with 164X and 9525
164X	18615	Thread Separator Bracket Arm Clamping Screw
9525	18615	Thread Separator Bracket Arm Clamping Screw Washer
164X	18615	Thread Separator Bracket Arm Screw
9525	18615	" " " " " "
		Washer
150061	18615	Thread Separator complete,Nos.164X, 9525,150058 and 150060
150062	18615	Thread Unwinder complete,Nos.150061, 201696H,225324,225326,225388,259658, two 225257,three wood screws 7/8 in. No.12 and four 150203 and 225391

**NUMERICAL
LIST
OF PARTS**

From the library of: Superior Sewing Machine & Supply LLC

NUMERICAL LIST OF PARTS

No.	Plate	Name
164X	18615	Thread Unwinder Thread Separator Bracket Arm Clamping Screw, for 150060
164X	18615	Thread Unwinder Thread Separator Bracket Arm Screw, for 150061
208AL	18615	Thread Unwinder Thread Guide Rod Screw, for 225324
229J	18608	Looper Thread Guide (top of arm) Screw, for 268218
418D	18608	Looper Thread Tension Stud, for 268262
1247C	18612	Machine Base Oil Drain Jar Clamp Screw, for 228452
1454E	18609	Presser Foot Shank Pinch Screw, for 268234
1562J	18608	Looper Thread Tension Thumb Nut, for 268262
2102	18608	Needle Thread Tension Disc, for 268263
2455	18608	Looper Thread Tension Disc, for 268262
2718R	18614	Foot Lifter Treadle Extension Screw Washer, for 14376
8582	18607	Arm Position Pin
9525	18615	Thread Unwinder Thread Separator Bracket Arm Clamping Screw Washer, for 150060
9525	18615	Thread Unwinder Thread Separator Bracket Arm Screw Washer, for 150061
		Nos. 14372 to 14375, for 14376
14372	18614	Foot Lifter Treadle
14373	18614	" " " Extension
14374	18614	" " " Spring
14375	18614	" " " Stand
14376	18614	Foot Lifter Treadle complete, Nos. 2718R, 14372 to 14375, 17881, 50581R and two wood screws 1-1/4 in., No. 12, F.H.
17881	18614	Foot Lifter Treadle Shaft, for 14376
32572	18608	Needle Thread Tension Releasing Disc, for 268263
36737	18613	Machine Cut-out Cover Ball, for 228445
39789	18608	Looper Thread Tension Spring, for 268262
42850	18611	Wrench
50014F	18610	Needle Set Screw, for 268151 to 268156
50326C	18608	" Thread Tension Stud, for 59539
50581R	18614	Foot Lifter Treadle Extension Screw, for 14376
51570C	18608	Needle Thread Tension Thumb Nut, for 59539

NUMERICAL LIST OF PARTS

No.	Plate	Name
52843	18612	Drip Pan Screw Washer (leather) Nos. 59537 to 59539, for 268263
59537	18608	Needle Thread Tension Spring Bushing (front)
59538	18608	Needle Thread Tension Spring Bushing (back)
59539	18608	Needle Thread Tension Stud 50326C with 51570C
67425	18604	Looper Carrier Crank Clamping Stud Washer
120342	18611	Oiler (copper plated) with 120343
120343	18611	" Spout (3-1/2 in. long), for 120342
131185	18612	Machine Base Oil Drain Jar (glass), for 228452
131188	18612	Machine Base Oil Drain Jar Clamp, for 131217
131189	18612	Machine Base Oil Drain Jar Clamp Lever, for 131217
131191	18612	Machine Base Oil Drain Jar Cap, for 228452
131217	18612	Machine Base Oil Drain Jar Clamp 131188 with 131189, for 228452
131266	18612	Machine Base Oil Drain Jar Nipple (short), for 228452
131696	18608	Needle Thread Tension Thread Guide (double)
131741	18608	Needle Thread Tension Spring, for 268263
139158	18608	Looper Thread Guide (top of arm), for 268218
*150057	18615	Thread Unwinder Thread Separator, for 150058
150058	18615	Thread Unwinder Thread Separator 150057 with 150059, for 150061
150059	18615	Thread Unwinder Thread Separator Bracket, for 150058
150060	18615	Thread Unwinder Thread Separator Bracket Arm with 164X and 9525, for 150061
150061	18615	Thread Unwinder Thread Separator com- plete, Nos. 164X, 9525, 150058 and 150060, for 150062
150062	18615	Thread Unwinder complete, Nos. 150061, 201696H, 225324, 225326, 225388, 259658, two 225257, three wood screws 7/8 in. No. 12 and four 150203 and 225391
150203	18615	Thread Unwinder Spool Rest Cushion (felt), for 150062
200004E	18607	Arm Screw
200019E	18612	Drip Pan Screw
200029E	18607	Arm Head Screw, for 268001
200035D	18608	Looper Thread Guide Screw
200035E	18605	Spreader Bar Bearing Screw, for 268014
200040C	18603	Feed Dog Screw
200047D	18601	Arm Shaft Ball Bearing (back) Housing Screw, for 268001

NUMERICAL LIST OF PARTS

21

No.	Plate	Name
200047E	18608	Needle Thread Tension Bracket Screw
200054C	18608	Looper Thread Tube Clamp Screw
200058C	18606	Needle Bar Rock Frame Driving Arm Pinch Screw, for 268147
200061C	18603	Feed Driving Rock Shaft Crank Pinch Screw, for 268073
200061C	18603	Feed Lifting Rock Shaft Crank Pinch Screw, for 268198
200069C	18606	Needle Bar Connecting Stud Pinch Screw, for 268141
200078F	18602	Feed Regulating Stud Socket Screw
200082D	18608	Needle Thread Guide Screw
200082D	18608	" " Nipper Bearing Plate Screw
200085C	18604	Looper Carrier Shaft Bushing (left) Position Plate Screw
200089C	18604	Looper Carrier Crank Hinge Pin Pinch Screw, for 268091
200092D	18607	Bed Plate Screw
200098F	18602	Looper Thread Take-up Driving Connect- ion Hinge Stud Set Screw, for 268115
200098F	18603	Looper Throw-out Safety Latch Spring Bracket Screw
200100E	18609	Throat Plate Screw
200113H	18607	Arm Side Cover Screw
200123D	18603	Feed Driving Connection Cap Screw
200123D	18606	Needle Bar Rock Frame Driving Connect- ion Cap Screw
200173D	18606	Needle Bar Oiling Felt Holder Screw
200184H	18613	Machine Cut-out Cover Hinge Plate Screw
200268H	18613	" " " " Screw
200303H	18604	Looper Driving Crank Oil Hole Cover Screw
200337C	18601	Needle Bar Rock Frame Regulating Stud Sleeve Set Screw
200346C	18601	Needle Bar Crank Set Screw, for 268142
200354C	18601	Arm Shaft Counter Balance Position Screw, for 268007
200354C	18602	Bed Shaft Counter Balance Position Screw, for 268007
200354C	18603	Feed Driving Rock Frame Position Screw, for 268069
200354C	18604	Looper Carrier Shaft Bushing Position Screw, for 268095 and 268097
200354C	18604	Looper Driving Crank Position Screw, for 268100
200354C	18601	Needle Bar Crank Position Screw, for 268142
200362C	18601	Arm Shaft Counter Balance Set Screw, for 268007
200362C	18602	Bed Shaft Counter Balance Set Screw, for 268007
200362C	18603	Feed Driving Rock Frame Set Screw, for 268069

HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0887

NUMERICAL LIST OF PARTS

No.	Plate	Name
200362C	18604	Looper Carrier Shaft Bushing Set Screw, for 268095 and 268097
200362C	18604	Looper Driving Crank Set Screw, for 268100
200362C	18602	Looper Thread Take-up Lever Hinge Stud Set Screw
200362C	18604	Looper Throw-out Gear Set Screw, for 268126
200364C	18604	Looper Throw-out Gear Locking Plunger Stop Screw Set Screw
200364C	18601	Needle Bar Rock Frame Regulating Stud Cap Set Screw, for 264709
200364C	18602	Spreader Driving Eccentric Counter Balance Set Screw, for 268189
200364C	18602	Spreader Driving Eccentric Set Screw, for 268188
200373C	18603	Feed Lifting Link Hinge Pin Set Screw, for 268034 and 268075
200373C	18604	Looper Driving Crank Oil Stop Screw, for 268100
200373C	18605	Spreader Driving Crank Position Screw, for 268187
200378C	18602	Looper Thread Take-up Driving Eccentric Set Screw, for 268113
200378C	18601	Needle Bar Crank Position Screw Check Screw, for 268142
200379C	18601	Needle Bar Crank Oil Hole Plug Screw, for 268142
200379C	18606	Needle Thread Guide (on Needle Bar Connecting Link) Set Screw
200380C	18606	Presser Bar Stop Collar Set Screw, for 203759
200380C	18605	Spreader Holder Set Screw, for 268185
200382C	18602	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw, for 268067
200382C	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring Collar Set Screw, for 268067
200383C	18615	Thread Unwinder Spool Rest Rod Set Screw, for 259658
200386C	18603	Feed Driving Rock Shaft Collar Set Screw, for 268072
200386C	18603	Feed Lifting Rock Shaft Collar Set Screw, for 268072
200386C	18602	Looper Thread Take-up Lever Hinge Stud Collar Set Screw, for 268072
200386C	18603	Looper Throw-out Safety Latch Collar Set Screw, for 268199
200386C	18605	Spreader Driving Rock Shaft Collar Set Screw, for 268072
200394C	18608	Looper Thread Take-up Thread Guide Support Stud Set Screw
200394C	18601	Needle Thread Nipper Eccentric Set Screw, for 268225
200403C	18603	Feed Bar Set Screw, for 268034
200403C	18605	Spreader Driving Crank Set Screw, for 268187

NUMERICAL LIST OF PARTS

23

No.	Plate	Name
200444C	18604	Looper Throw-out Gear Locking Plunger Stop Screw
200541E	18607	Needle Thread Tension Releasing Plate Screw
200564E	18608	Looper Thread Tension Bracket Screw
200566H	18613	Machine Cut-out Cover Latch Plate Screw
200571XC	18607	Face Plate Lock Spring Screw
200572F	18606	Presser Bar Guide Bracket Adjusting Screw, for 268174
200578XC	18608	Looper Thread Guide (top of arm) Bracket Screw
200583C	18610	Needle Bar Rock Frame Thread Guide Screw
200934F	18607	Foot Lifter Lifting Link Hinge Screw
200935F	18607	Presser Bar Spring Support Screw
201018C	18615	Thread Unwinder Spool Rest Set Screw, for 225257
201020C	18605	Spreader Driving Connection Cap Screw, for 268186
201052C	18604	Feed Lifting Eccentric Set Screw, for 268266
201052C	18602	Looper Thread Take-up Rod Set Screw, for 268115
201052C	18608	Needle Thread Tension Releaser Cap Set Screw, for 268169
201063E	18602	Spreader Driving Eccentric Counter Balance Screw
201160E	18607	Foot Lifter Lever Spring Screw Eye
201185D	18606	Needle Bar Connecting Link Cap Washer Screw
201188C	18606	Needle Thread Guide (on Needle Bar Connecting Stud) Set Screw, for 268141
201216C	18606	Presser Bar Guide Bracket Pinch Screw, for 268174
201220C	18602	Looper Thread Take-up Driving Eccentric Position Screw, for 268113
201254C	18601	Arm Shaft Connection Belt Pulley Set Screw, for 268006
201254C	18602	Bed Shaft Connection Belt Pulley Set Screw, for 268028
201256C	18603	Feed Lifting Crank Pinch Screw, for 268075
201276D	18606	Presser Bar Lifter Hinge Screw
201346AL	18601	Balance Wheel Set Screw, for 268011
201363C	18607	Foot Lifter Lever Hinge Screw
201403H	18601	Needle Thread Nipper Eccentric Flange Screw
201416C	18607	Face Plate Hinge Pin Set Screw, for 268030
201418C	18603	Feed Driving Rock Shaft Crank Position Screw, for 268073
201418C	18603	Feed Lifting Rock Shaft Crank Position Screw, for 268198
201477C	18604	Looper Throw-out Gear Locking Plunger. Screw Bushing

NUMERICAL LIST OF PARTS

No.	Plate	Name
201485C	18607	Presser Bar Spring Adjusting Screw Set Screw
201522E	18603	Feed Driving Connection Hinge Stud Nut
201522E	18603	" Lifting Connection Hinge Stud Nut
201522E	18606	Needle Bar Rock Frame Driving Connection Hinge Stud Nut
201524E	18604	Looper Carrier Crank Clamping Stud Nut
201537H	18603	Needle Thread Nipper Spring Plunger Nut
201553D	18604	Looper Throw-out Rack Rod Thumb Nut
201620D	18604	" " Gear Locking Plunger Thumb Nut
201696H	18615	Thread Unwinder Thread Guide Lock Nut, for 150062
201733XC	18603	Needle Thread Nipper Adjusting Collar with 350101H
201735E	18601	Arm Shaft Air Vent Cap Spring Thumb Nut, for 268213
201735E	18602	Bed Shaft Air Vent Cap Spring Thumb Nut, for 268213
201736C	18605	Spreader Driving Rock Shaft Screw Stud Nut
202005	18607	Arm Screw Washer
202120	18607	Foot Lifter Lifting Link Stop Pin, for 268002
202253	18601	Arm Shaft Connection Belt Pulley Spring Flange, for 268006
202253	18602	Bed Shaft Connection Belt Pulley Spring Flange, for 268028
202423	18606	Needle Bar Connecting Stud Oil Packing (wick), for 268141
202784	18614	Foot Lifter Treadle Chain Hook, for 228474
203349	18607	Needle Thread Tension Releasing Plate Screw Washer
203759	18606	Presser Bar Stop Collar with 200380C
204030	18613	Machine Cut-out Cover Hinge Screw Spring Washer
204235	18607	Arm Head Position Pin, for 268001
204348	18607	Foot Lifter Lever Spring
204365	18608	Needle Thread Tension Releaser Spring
204925	18604	Looper Driving Crank Oil Hole Cover Screw Washer
204925	18605	Spreader Screw Washer
208636	18603	Feed Dog Screw Washer
208636	18610	Looper Holder Screw Washer
210805	18612	Drip Pan Screw Washer
214529	18601	Needle Bar Rock Frame Regulating Stud Spring, for 268150
222119	18606	Presser Bar Lifter Stop Pin
222613	18603	Needle Thread Nipper Spring
225257	18615	Thread Unwinder Spool Rest (for two spools) with 201018C, for 150062
225322	18615	Thread Unwinder Thread Guide Rod Washer, for 225324
225324	18615	Thread Unwinder Thread Guide Rod with 208AL and 225322, for 150062

NUMERICAL LIST OF PARTS

25

No.	Plate	Name
225326	18615	Thread Unwinder Thread Guide Position Cup, for 150062
225388	18615	Thread Unwinder Spool Rest Rod, for 150062
225391	18615	Thread Unwinder Thread Guide, for 150062
*225483	-----	Screw Driver Handle, for 250522
225498	18611	Screw Driver (7-1/4 in. long)
225554	18611	Wrench (steel)
225887	18605	Spreader Bar Bearing Position Pin, for 268014
226206	18608	Needle Thread Tension Releasing Pin
228320	18613	Machine Cushion (felt)
228443	18612	Drip Pan
228444	18613	Machine Cushion (neoprene)
228445	18613	" Cut-out Cover with 36737
228446	18613	" " " Hinge Plate
228447	18613	" " " Latch Plate
228448	18613	" Locating Stud
228449	18613	" Support (left) with two wood screws 1-1/4 in., No. 12, F.H.B.
228450	18613	Machine Support (right) with two wood screws 1-1/4 in., No. 12, F.H.B.
228451	18611	Tweezers
228452	18612	Machine Base Oil Drain Jar complete, Nos. 131185, 131191, 131217, 131266 and two 1247C
228456	18613	Machine Cut-out Cover Latch Spring
228474	18614	Foot Lifter Treadle Chain 34 in. long with two 202784
230795	18609	Presser Foot Hinge Pin, for 268236, 268238, 268240, 268242, 268244 and 268246
232382	18601	Arm Shaft Air Vent Cap Position Pin, for 268209
232382	18602	Bed Shaft Air Vent Cap Position Pin, for 268209
238089	18607	Needle Thread Tension Releasing Plate Pin, for 268085
240245	18602	Feed Regulating Stud Retaining Spring
250265	18604	Looper Throw-out Gear Locking Plunger Spring
*250521	-----	Screw Driver Blade, for 250522
250522	18611	Screw Driver complete, Nos. 225483 and 250521
255542	18611	Screw Driver (8 in. blade)
259658	18615	Thread Unwinder Spool Stand with 200383C, for 150062
264709	18601	Needle Bar Rock Frame Regulating Stud Cap with 200364C, for 268150
*268001	-----	Arm with 204235, 268002, 268004, three each 200029E and 200047D
*268002	-----	Arm Head with 202120, for 268001
268003	18601	" Shaft with 268009, 268214 and 350465C
268004	18601	Arm Shaft Ball Bearing (back) Housing, for 268001

NUMERICAL LIST OF PARTS

No.	Plate	Name
268005	18601	Arm Shaft Ball Bearing (front), for 268143
268006	18601	Arm Shaft Connection Belt Pulley with two each 201254C and 202253
268007	18601	Arm Shaft Counter Balance with 200354C and 200362C
268007	18602	Bed Shaft Counter Balance with 200354C and 200362C
268008	18601	Arm Shaft Oil Slinger with 350171C
268009	18601	" " " Stop Ball Spring, for 268003
268010	18607	Arm Side Cover
268011	18601	Balance Wheel "V" belt groove (out- side diam. of belt groove 2.9 in.) with 201346AL and 350107AL, for 268012
268012	18601	Balance Wheel 268011 with 268024
*268014	-----	Bed with 268184, two each 200035E and and 225887
268015	18607	Bed Plate (left), for gauges from 3/16 to 1-1/2 inch
268018	18607	Bed Plate (right)
268019	18607	" " Slide with two 268022, for gauges from 3/16 to 1-1/2 inch
268022	18607	Bed Plate Slide Spring, for 268019
268023	18602	" Shaft
268024	18601	Arm Shaft Ball Bearing (back), for 268012
268024	18602	Bed Shaft Ball Bearing, for 268261
268028	18602	" " Connection Belt Pulley with 202253 and two 201254C, for 268261
268029	18602	Bed Shaft Needle Bearing
268029	18606	Needle Bar Rock Frame Needle Bearing
268030	18607	Face Plate with 268033 and two 201416C
268031	18607	" " Hinge Pin
268032	18607	" " Lock Spring
268033	18607	" " Stud, for 268030
268034	18603	Feed Bar with 200373C and two 200403C
268035	18603	" " Hinge Pin
268036	18609	" Dog, 46 needle hole, for needle sizes 20 and 22 in 1/4 and 9/32 in. gauge with 350120C, for 268200
268037	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 3/8 in. gauge with 350120C, for 268201
268038	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 3/4 in. gauge with 350120C, for 268202
268039	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 1 in. gauge with 350120C, for 268203
268041	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 1/2 in. gauge with 350120C, for 268247
268042	-----	Feed Dog, 46 needle hole, for needle sizes 20 and 22 in 7/8 in. gauge with 350120C, for 268248

NUMERICAL LIST OF PARTS

27

No.	Plate	Name
268060	18603	Feed Driving Connection, for 268061
268060	18601	Needle Bar Rock Frame Driving Connection, for 268061
268061	18603	Feed Driving Connection 268060 with 268063
268061	18601	Needle Bar Rock Frame Driving Connection 268060 with 268063
268062	18603	Feed Driving Connection Hinge Stud
268062	18603	" Lifting Connection Hinge Stud
268062	18606	Needle Bar Rock Frame Driving Connection Hinge Stud
268063	18603	Feed Driving Connection Needle Bearing, for 268061
268063	18601	Needle Bar Rock Frame Driving Connection Needle Bearing, for 268061
268063	18605	Spreader Driving Connection Needle Bearing, for 268233
268064	18602	Feed Driving Eccentric
268064	18601	Needle Bar Rock Frame Driving Eccentric
268065	18602	Feed Driving Eccentric Adjusting Disc
268065	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc
268066	18602	Feed Driving Eccentric Adjusting Disc Spring
268066	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring
268067	18602	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382C
268067	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring Collar with two 200382C
268068	18602	Feed Driving Flange with two each 250101C, 350467C and 350477C
268068	18601	Needle Bar Rock Frame Driving Flange with two each 350101C, 350467C and 350477C
268069	18603	Feed Driving Rock Frame with 200354C and 200362C
268070	18603	Feed Driving Rock Shaft
268071	18603	" " " " Needle Bearing
268071	18603	" Lifting Rock Shaft Needle Bearing
268071	18605	Spreader Driving Rock Shaft Needle Bearing
268072	18603	Feed Driving Rock Shaft Collar with two 200386C
268072	18603	Feed Lifting Rock Shaft Collar with two 200386C
268072	18602	Looper Thread Take-up Lever Hinge Stud Collar with two 200386C
268072	18605	Spreader Driving Rock Shaft Collar with two 200386C
268073	18603	Feed Driving Rock Shaft Crank with 201418C and two 200061C
268074	18603	Feed Lifting Connection
268075	18603	" " Crank with 200373C and 201256C

NUMERICAL LIST OF PARTS

No.	Plate	Name
268077	18604	Feed Lifting Eccentric Lubricating Pad (wood), for 268266
268078	18603	Feed Lifting Link
268079	18603	" " " Hinge Pin with 268258
268079	18602	Looper Thread Take-up Driving Connection Hinge Stud with 268258
268080	18603	Feed Lifting Rock Shaft
268081	18602	" Regulating Stud
268082	18602	" " " Socket
268083	18607	Foot Lifter Bell Crank
268085	18607	" " Lever with 238089
268086	18607	" " " Rod
268087	18607	" " Lifting Link
268088	18610	Looper
268090	18604	" Carrier, for 268205
268091	18604	" " Crank with 200089C
268092	18604	" " Clamping Stud
*268093	18604	" " Shaft, for 268094
268094	18604	" " " 268093 with 268095 and 268097
*268095	18604	Looper Carrier Shaft Bushing (left) (eccentric) with 200354C and 200362C, for 268094
268096	18604	Looper Carrier Shaft Bushing (left) Position Plate
*268097	18604	Looper Carrier Shaft Bushing (right) (eccentric) with 200354C and 200362C, for 268094
268098	18604	Looper Driving Connection, for 268216
268099	18604	" Carrier Needle Bearing, for 268205
268099	18604	Looper Driving Connection Needle Bearing, for 268216
268100	18604	Looper Driving Crank with 200354C, 200362C and 200373C
268102	18604	Looper Driving Crank Oil Hole Cover
268103	18610	" Holder 1/4 and 9/32 in. gauge with four 350478C
268104	-----	Looper Holder 3/8 in. gauge with four 350478C
268105	-----	Looper Holder 3/4 in. gauge with four 350478C
268106	-----	Looper Holder 1 in. gauge with four 350478C
268108	-----	Looper Holder 1/2 in. gauge with four 350478C
268110	18610	Looper Thread Guide (on bed at looper) for 1/4 and 9/32 in. gauge
268111	18608	Looper Thread Guide (top of arm) Bracket, for 268218
268112	18608	Looper Thread Guide

NUMERICAL LIST OF PARTS

29

No.	Plate	Name
268113	18602	Looper Thread Take-up Driving Eccentric with 200378C and 201220C
268114	18602	Looper Thread Take-up Driving Connection
268115	18602	Looper Thread Take-up Lever with 200098F and two 201052C
268116	18602	Looper Thread Take-up Lever Hinge Stud
268117	18602	" " " Rod
268118	18608	" " " Thread Guide
268119	18608	" " " " " Support Stud
268120	18608	Looper Thread Tension Bracket
268121	18608	" " " " " Spacing Collar
268121	18608	Needle Thread Tension Bracket Spacing Collar
268122	18608	Looper Thread Tension Thread Guide
268123	18608	" " " Tube with two 268125
268124	18608	" " " Clamp
268125	18608	" " " Thread Bushing, for 268123
268126	18604	Looper Throw-out Gear with two 200362C
268127	18604	" " " Locking Plunger
268129	18604	" " " Rack Rod
268131	18603	" " " Safety Latch
268132	18603	" " " " " Spring
268133	18603	" " " " " Bracket
268136	18606	Needle Bar
268137	18606	" " " Connecting Link, for 268138
268138	18606	" " " " " 268137 with two 268140
268139	18606	Needle Bar Connecting Link Cap Washer
268140	18606	" " " " " Needle Bearing, for 268138
268141	18606	Needle Bar Connecting Stud with 202423, 201188C and two 200069C
268142	18601	Needle Bar Crank with 200346C, 200354C, 200378C and 200379C, for 268143
268143	18601	Needle Bar Crank 268142 with 268005
268144	18606	" " " Oiling Felt
268145	18606	" " " " " Holder
268146	18606	" " " Rock Frame
268147	18606	" " " " " Driving Arm with two 200058C
268148	18601	Needle Bar Rock Frame Regulating Stud, for 268150
268149	18601	Needle Bar Rock Frame Regulating Stud Sleeve, for 268150
268150	18601	Needle Bar Rock Frame Regulating Stud complete, Nos. 214529, 264709, 268148 and 268149
268151	18610	Needle Holder, in gauges 1/4 and 9/32 in. with two 50014F
268152	-----	Needle Holder 3/8 in. gauge with two 50014F

HARRY WELANSKY

SEWING MACHINES & SUPPLIES

57 W. 25 ST. N.Y.C. CH. 3-8887

NUMERICAL LIST OF PARTS

No.	Plate	Name
268153	-----	Needle Holder 1/2 in.gauge with two 50014F
268154	-----	Needle Holder 3/4 in.gauge with two 50014F
268155	-----	Needle Holder 7/8 in.gauge with two 50014F
268156	-----	Needle Holder 1 in.gauge with two 50014F
268163	18608	Needle Thread Guide (on arm head)
268164	18606	" " " (on Needle Bar Connecting Link)
268165	18606	Needle Thread Guide (on Needle Bar Connecting Stud)
268166	18608	Needle Thread Guide (on side of arm)
268167	18608	" " Tension Bracket
268168	18608	" " " Releaser
268169	18608	" " " Cap with 201052C
268171	18607	Needle Thread Tension Releasing Plate (adjustable)
268172	18606	Presser Bar
268173	18606	" " Bushing
268174	18606	" " Guide Bracket with 200572F, 201216C and 351875
268175	18606	Presser Bar Lifter
268176	18607	" " Spring
268177	18610	Spreader, 1/4 and 9/32 in.gauge
268178	-----	" 3/8 in.gauge
268179	-----	" 3/4 in.gauge
268180	-----	" 1 in.gauge
268181	18605	" Bar
268184	18605	" " Bearing, for 268014
268185	18605	" Holder with two 200380C
268186	18605	" Driving Connection with two 201020C, for 268233
268187	18605	Spreader Driving Crank with 200373C and 200403C
268188	18602	Spreader Driving Eccentric with two 200364C
268189	18602	Spreader Driving Eccentric Counter Balance with two 200364C
268190	18605	Spreader Driving Pin
268191	18605	" " Rock Shaft
268196	18601	Arm Shaft Connection Belt
268197	18607	Face Plate Lock Spring Plate
268198	18603	Feed Lifting Rock Shaft Crank with 201418C and two 200061C
268199	18603	Looper Throw-out Safety Latch Collar with two 200386C
268200	18609	Throat Plate, 1/4 and 9/32 in.gauge, for 268036
268201	-----	Throat Plate, 3/8 in.gauge, for 268037
268202	-----	" " 3/4 in.gauge, for 268038
268203	-----	" " 1 in.gauge, for 268039
268205	18604	Looper Carrier 268090 with two 268099

NUMERICAL LIST OF PARTS

31

No.	Plate	Name
268208	18604	Looper Carrier Crank Hinge Pin with 268258
Nos. 268209 to 268211, for 268213		
268209	18601	Arm Shaft Air Vent Body with 232382
268209	18602	Bed Shaft Air Vent Body with 232382
268210	18601	Arm Shaft Air Vent Cap
268210	18602	Bed Shaft Air Vent Cap
268211	18601	Arm Shaft Air Vent Cap Spring
268211	18602	Bed Shaft Air Vent Cap Spring
268212	18601	Arm Shaft Air Vent Body Packing Washer
268212	18602	Bed Shaft Air Vent Body Packing Washer
268213	18601	Arm Shaft Air Vent complete, Nos. 201735E and 268209 to 268211
268213	18602	Bed Shaft Air Vent complete, Nos. 201735E and 268209 to 268211
268214	18601	Arm Shaft Oil Stop Ball 5/32 in. diam., for 268003
268216	18604	Looper Driving Connection 268098 with 268099
268217	-----	Looper Holder 7/8 in. gauge with four 350478C
268218	18608	Looper Thread Guide (top of arm) Bracket 268111 with two 139158 and four 229J
268219	18610	Needle Bar Rock Frame Thread Guide, for 1/4 and 9/32 in. gauge
268220	18602	Spreader Driving Eccentric Trust Washer
268221	18608	Needle Thread Nipper Bearing
268222	18608	" " " " Plate
268223	18608	" " " Disc
268224	18608	" " " Washer (vellumoid)
268225	18601	Needle Thread Nipper Eccentric with two 200394C
268226	18601	Needle Thread Nipper Eccentric Connect- ion, for 268228
268227	18601	Needle Thread Nipper Eccentric Connect- ion Needle Bearing, for 268228
268228	18601	Needle Thread Nipper Eccentric Connect- ion 268226 with 268227
268229	18608	Needle Thread Nipper Plunger with 350496C
268230	18608	Needle Thread Nipper Plunger Cap
268231	18608	" " " " Hinge Pin
268232	18608	" " " Spring Plunger
268233	18605	Spreader Driving Connection 268186 with 268063 and 351876
268234	18609	Presser Foot Shank with 1454E, for 268236, 268238, 268240, 268242, 268244 and 268246
268235	18609	Presser Foot Plate, for 268236
268236	18609	Presser Foot (hinged) complete, 46 needle hole, in 1/4 and 9/32 in. gauge, Nos. 230795, 268234 and 268235

NUMERICAL LIST OF PARTS

No.	Plate	Name
268237	-----	Presser Foot Plate, for 268238
268238	-----	Presser Foot (hinged) complete, 46 needle hole, in 3/8 in. gauge, Nos. 230795, 268234 and 268237
268239	-----	Presser Foot Plate, for 268240
268240	-----	Presser Foot (hinged) complete, 46 needle hole, in 1/2 in. gauge, Nos. 230795, 268234 and 268239
268241	-----	Presser Foot Plate, for 268242
268242	-----	Presser Foot (hinged) complete, 46 needle hole, in 3/4 in. gauge, Nos. 230795, 268234 and 268241
268243	-----	Presser Foot Plate, for 268244
268244	-----	Presser Foot (hinged) complete, 46 needle hole, in 7/8 in. gauge, Nos. 230795, 268234 and 268243
268245	-----	Presser Foot Plate, for 268246
268246	-----	Presser Foot (hinged) complete, 46 needle hole, in 1 in. gauge, Nos. 230795, 268234 and 268245
268247	-----	Throat Plate, 1/2 in. gauge, for 268041
268248	-----	" " 7/8 in. gauge, for 268042
268249	-----	Spreader, 1/2 in. gauge
268250	-----	" 7/8 in. gauge
268251	-----	Looper Thread Guide (on bed at looper) for 3/8 and 1/2 in. gauge
268252	-----	Looper Thread Guide (on bed at looper) for 3/4 and 7/8 in. gauge
268253	-----	Looper Thread Guide (on bed at looper) for 1 in. gauge
268254	-----	Needle Bar Rock Frame Thread Guide, for 3/8 and 1/2 in. gauge
268255	-----	Needle Bar Rock Frame Thread Guide, for 3/4 and 7/8 in. gauge
268256	-----	Needle Bar Rock Frame Thread Guide, for 1 in. gauge
268258	18603	Feed Lifting Link Hinge Pin Oil Packing (wick), for 268079
268258	18604	Looper Carrier Crank Hinge Pin Oil Packing (wick), for 268208
268258	18602	Looper Thread Take-up Driving Connect- ion Hinge Stud Oil Packing (wick), for 268079
268259	18601	Needle Thread Nipper Eccentric Flange
268261	18602	Bed Shaft Connection Belt Pulley 268028 with 268024
268262	18608	Looper Thread Tension complete, Nos. 418D, 1562J, 39789 and two 2455
268263	18608	Needle Thread Tension complete, Nos. 32572, 59537 to 59539, 131741 and two 2102
268264	18601	Arm Shaft Oil Control Rod (wood)
268265	18602	Bed Shaft Oil Control Rod (wood)
268266	18604	Feed Lifting Eccentric with 268077 and two 201052C
270026	18602	Feed Regulating Stud Spring
350013C	18607	Foot Lifter Bell Crank Hinge Screw

NUMERICAL LIST OF PARTS

33

No.	Plate	Name
350101C	18602	Feed Driving Eccentric Friction Adjusting Screw Set Screw, for 268068
350101C	18601	Needle Bar Rock Frame Driving Eccentric Friction Adjusting Screw Set Screw, for 268068
350101H	18608	Needle Thread Nipper Adjusting Collar Screw, for 201733XC
350107AL	18601	Balance Wheel Position Screw, for 268011
350120C	18609	Feed Dog Adjusting Screw, for 268036 to 268039, 268041 and 268042
350132C	18608	Looper Thread Take-up Thread Guide Screw
350149C	18605	Spreader Screw
350171C	18601	Arm Shaft Oil Slinger Set Screw, for 268008
350267E	18610	Looper Holder Screw
350465C	18601	Arm Shaft Oil Stop Screw, for 268003
350466C	18605	Spreader Driving Rock Shaft Screw Stud
350467C	18602	Feed Driving Flange Set Screw, for 268068
350467C	18601	Needle Bar Rock Frame Driving Flange Set Screw, for 268068
350468E	18610	Looper Thread Guide (on bed at looper) Screw
350469C	18607	Presser Bar Spring Adjusting Screw
350477C	18602	Feed Driving Eccentric Friction Adjusting Screw, for 268068
350477C	18601	Needle Bar Rock Frame Driving Eccentric Friction Adjusting Screw, for 268068
350478C	18610	Looper Adjusting Screw, for 268103 to 268106, 268108 and 268217
350478C	18610	Looper Set Screw, for 268103 to 268106, 268108 and 268217
350483E	18608	Needle Thread Nipper Spring Plunger Screw Bearing
350496C	18608	Needle Thread Nipper Plunger Hinge Pin Set Screw, for 268229
351875	18606	Presser Bar Guide Bracket Roller, for 268174
351876	18605	Spreader Driving Rock Shaft Screw Stud Ball Roller, for 268233

 
HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0887

ILLUSTRATIONS
OF
PARTS


ILLUSTRATIONS

OF

PARTS

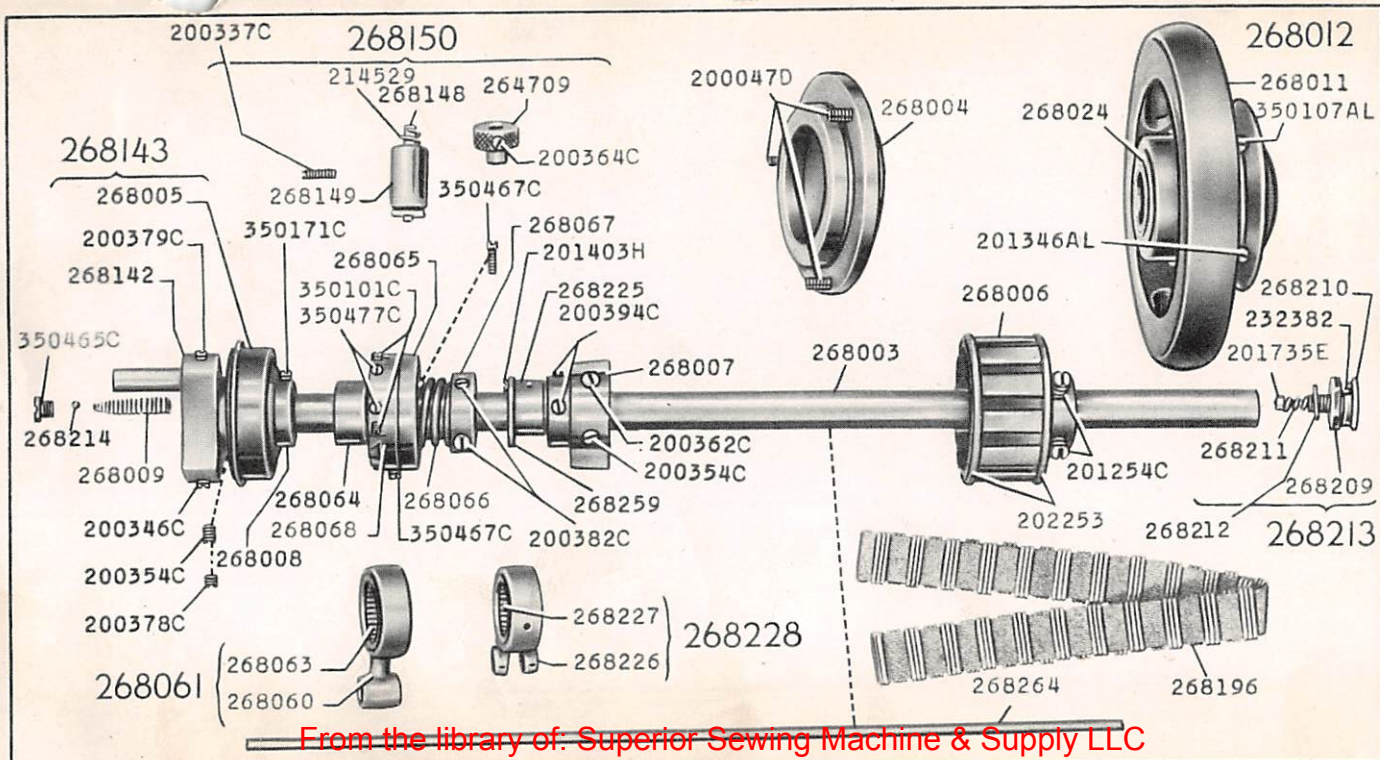


18601 - 1/3

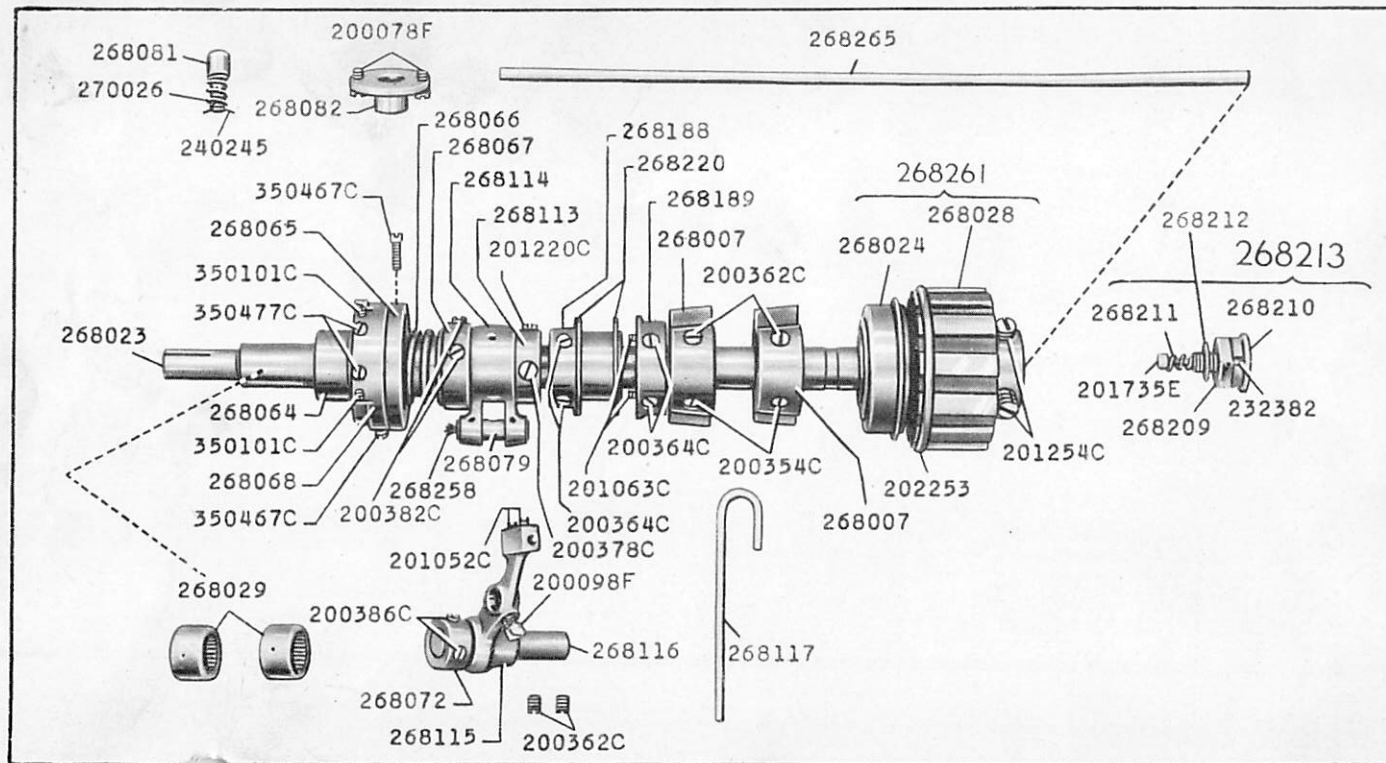 


18602 - 3/8




From the library of: Superior Sewing Machine & Supply LLC

 18603 - 1/2

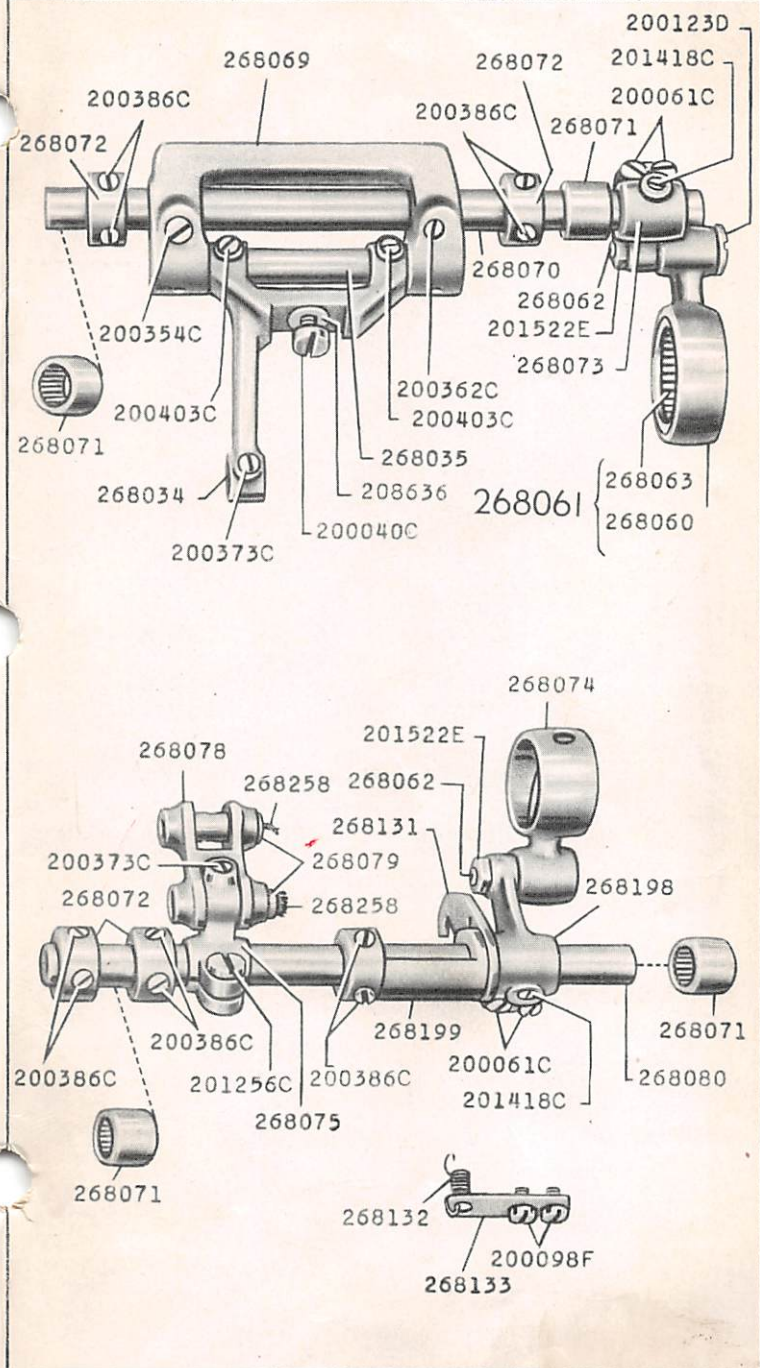


18604 - 1/2

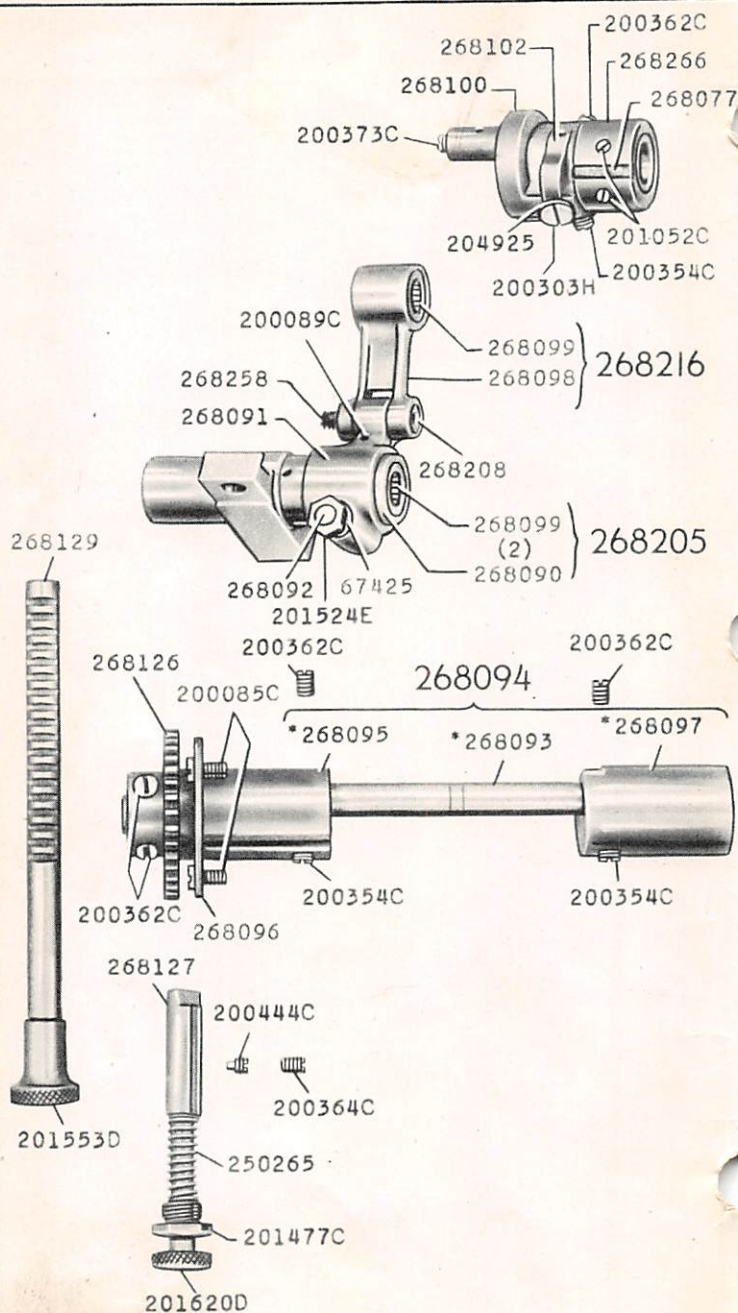 

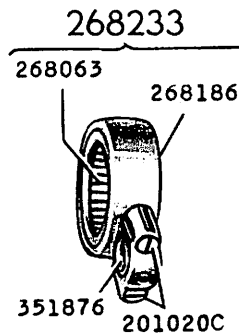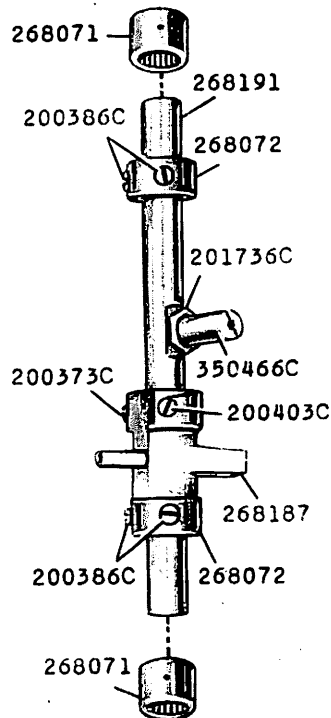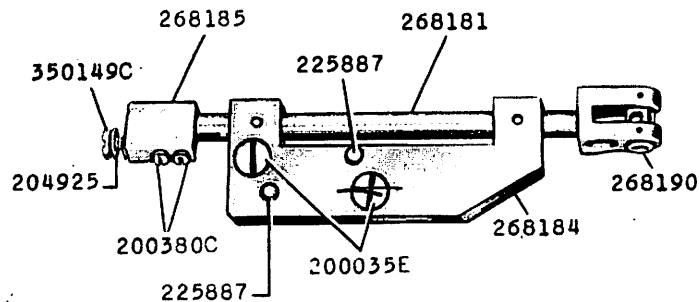   


18605 - 1/2

 From the library of: Superior Sewing Machine & Supply LLC

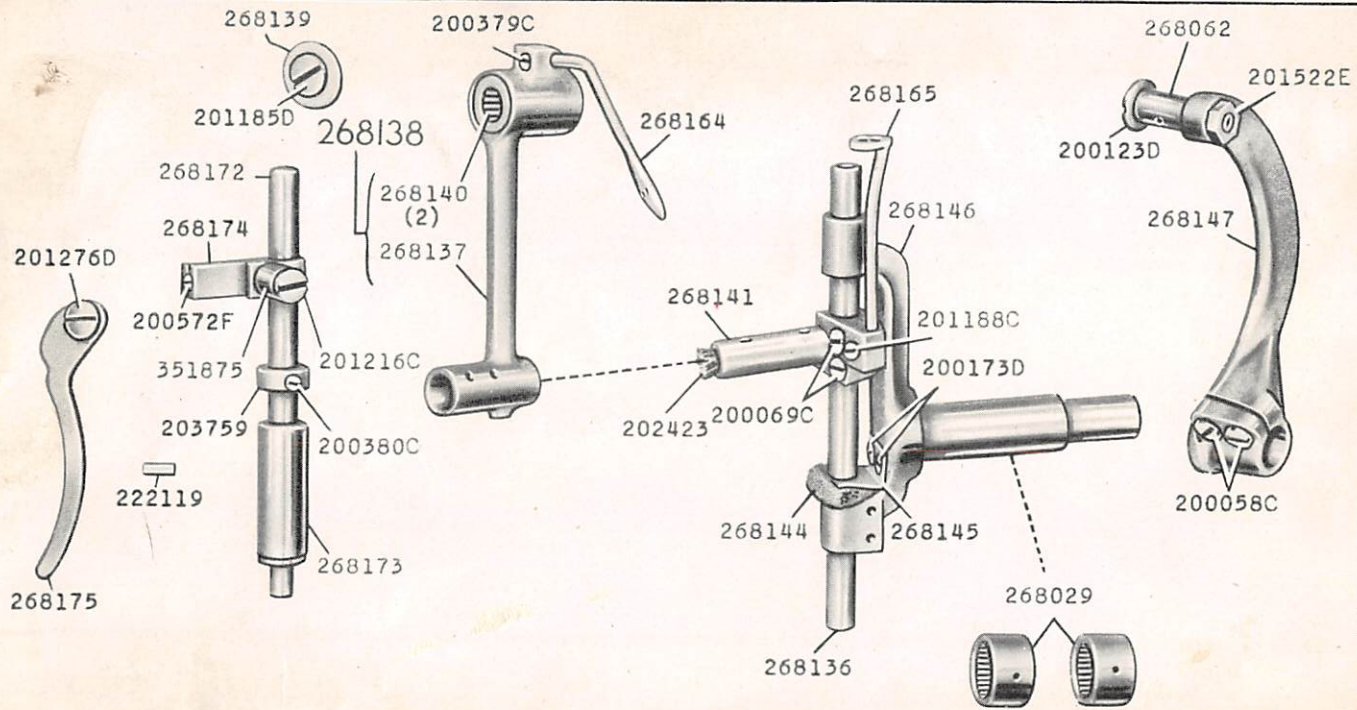


18606 - 1/2

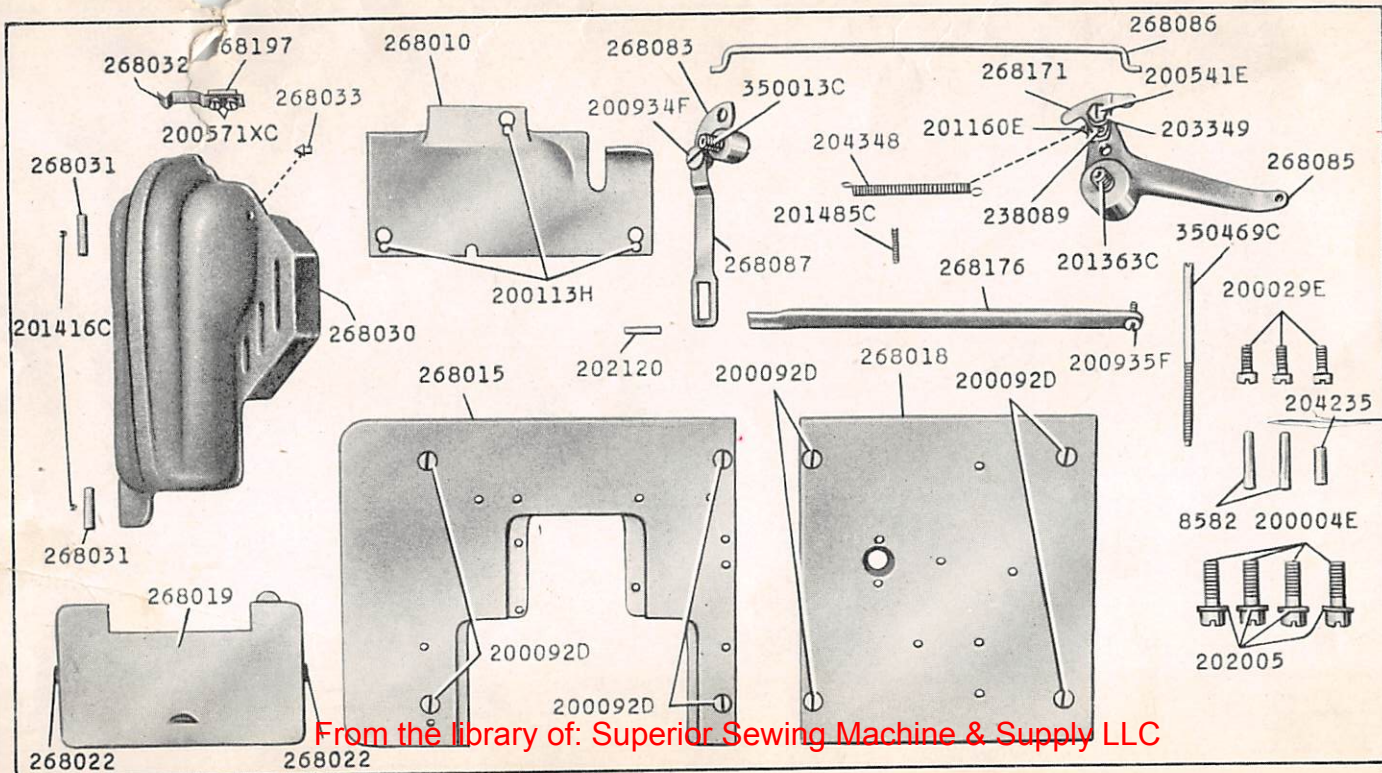 

From the library of: Superior Sewing Machine & Supply LLC

 HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. 10011
18607-1/4-0887

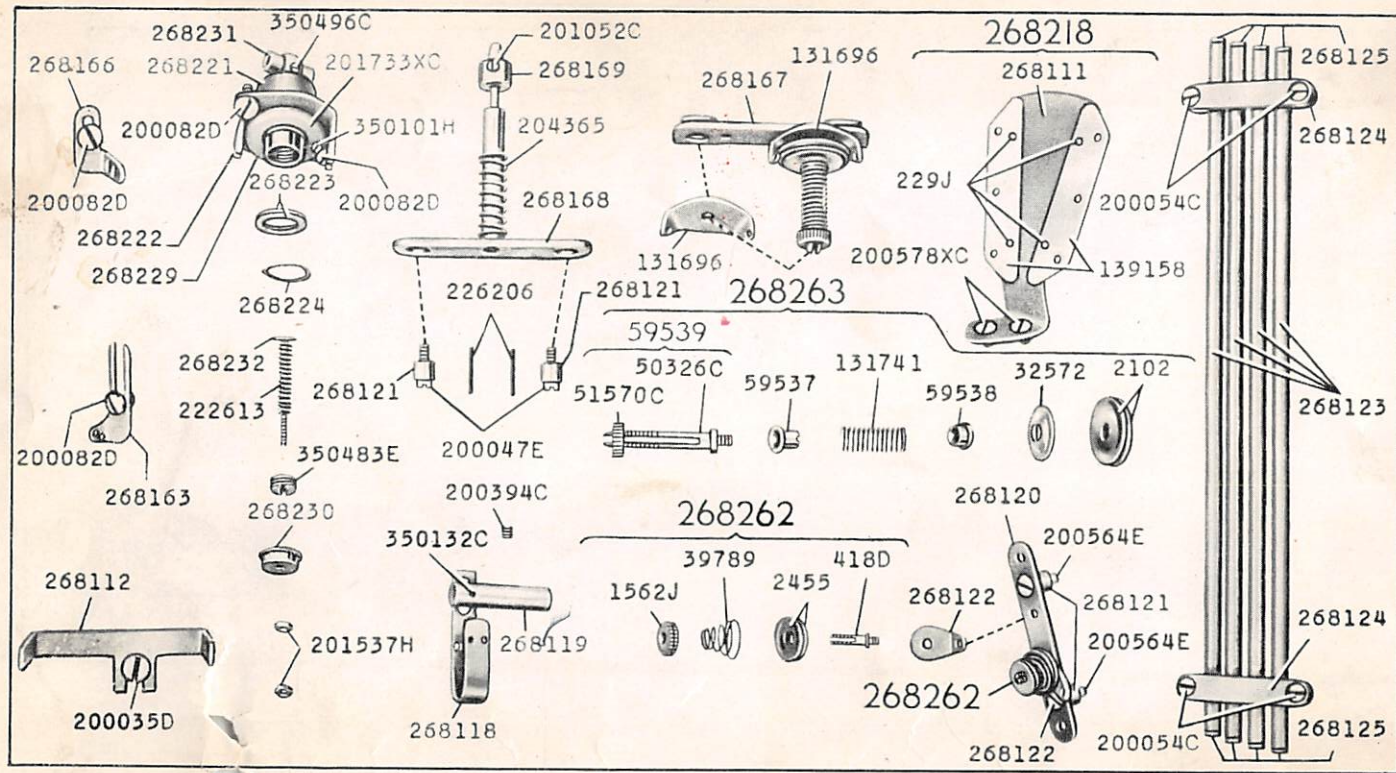

18608 - 3/8

 
200100E

268200-1/4-9/32
268201-3/8
268247-1/2

268202-3/4
268248-7/8
268203-1

268036-1/4-9/32
268037-3/8
268041-1/2
268038-3/4
268042-7/8
268039-1

268236-1/4-9/32
268238-3/8
268240-1/2
268242-3/4
268244-7/8
268246-1

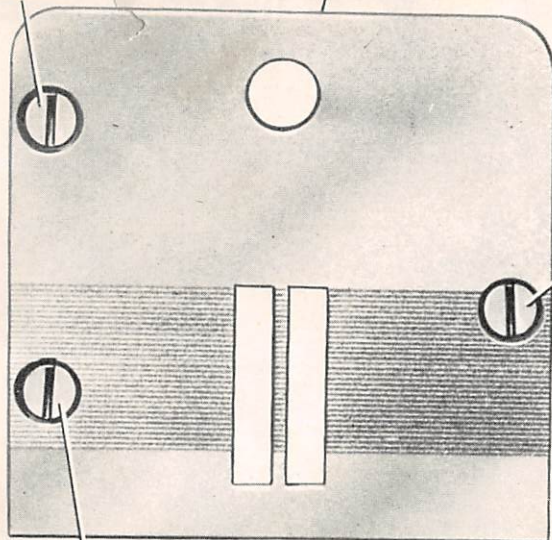


200100E

350120C

200100E

 HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 E. 25 ST. N.Y.C. CH. 3-0887

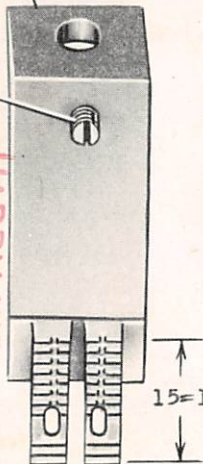


15=1

1454E

268234

 230795

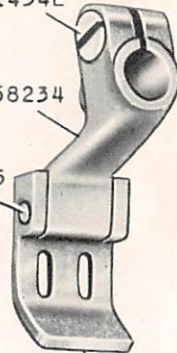

268235-1/4-9/32
268237-3/8
268239-1/2
268241-3/4
268243-7/8
268245-1

18609

 


268151-1/4-9/32
268152-3/8
268153-1/2
268154-3/4
268155-7/8
268156-1




50014F


268103-1/4-9/32
268104-3/8
268108-1/2
268105-3/4
268217-7/8
268106-1

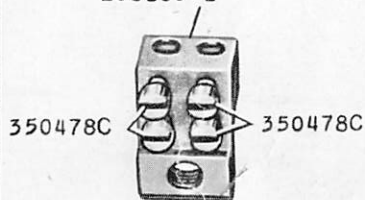


350267E

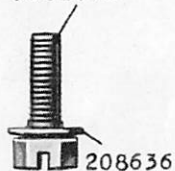 

 
268219-1/4-9/32
268254-3/8-1/2
268255-3/4-7/8
268256-1

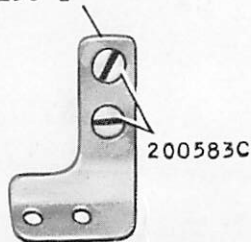

 268177-1/4-9/32
268178-3/8
268249-1/2
268179-3/4
268250-7/8
268180-1

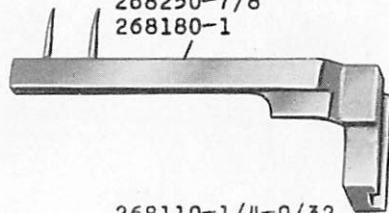

 268110-1/4-9/32
268251-3/8-1/2
268252-3/4-7/8
268253-1

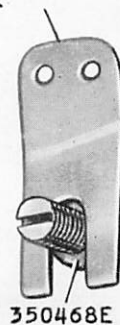

18610

18611 - 1/2

255542



 
225498



228451



120342

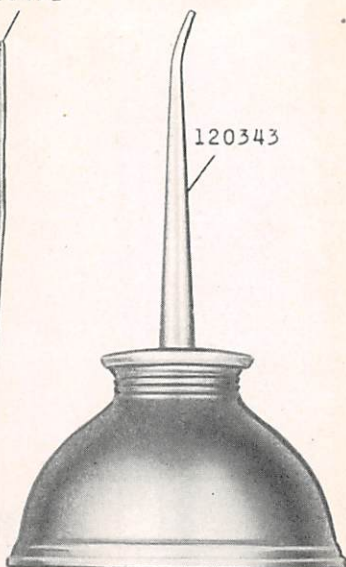


120343

HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0887

250522




 225554




42850





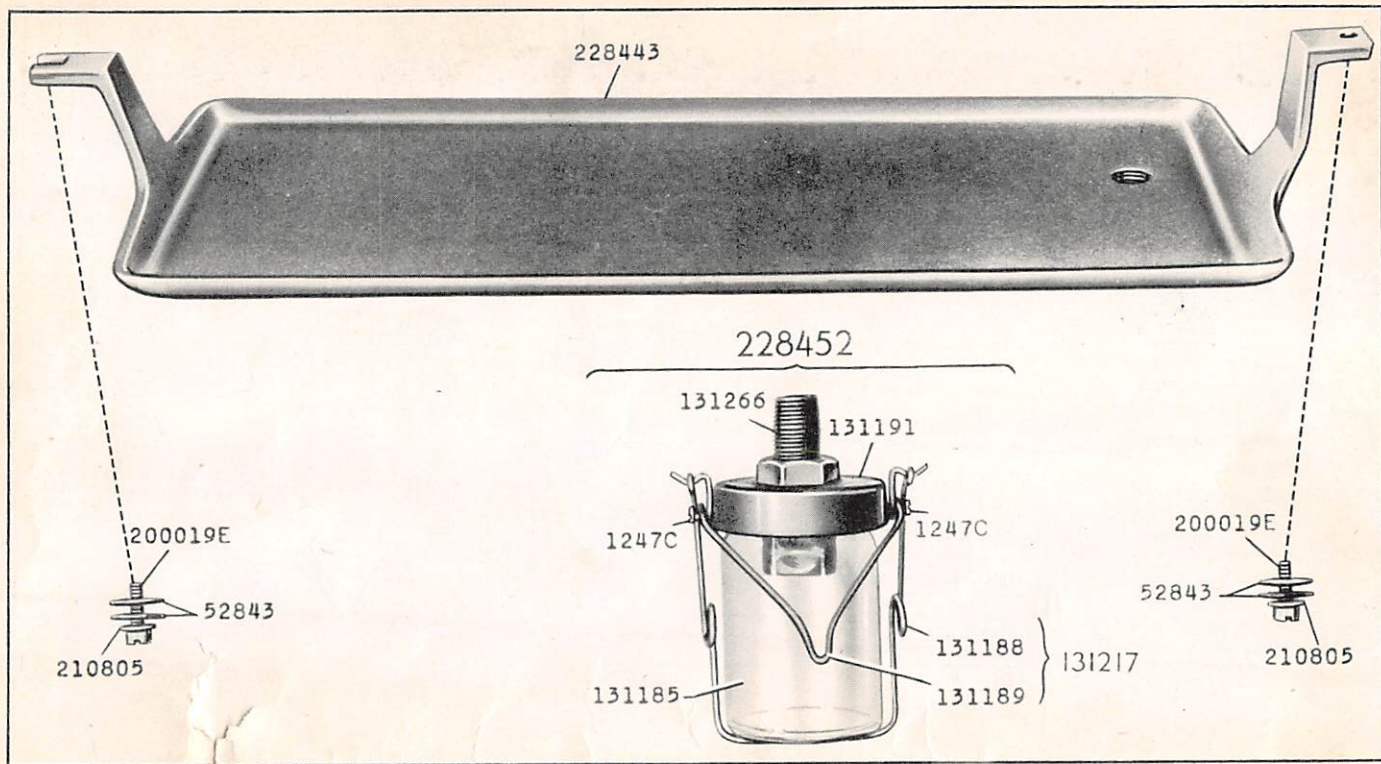 

18612 - 1/3

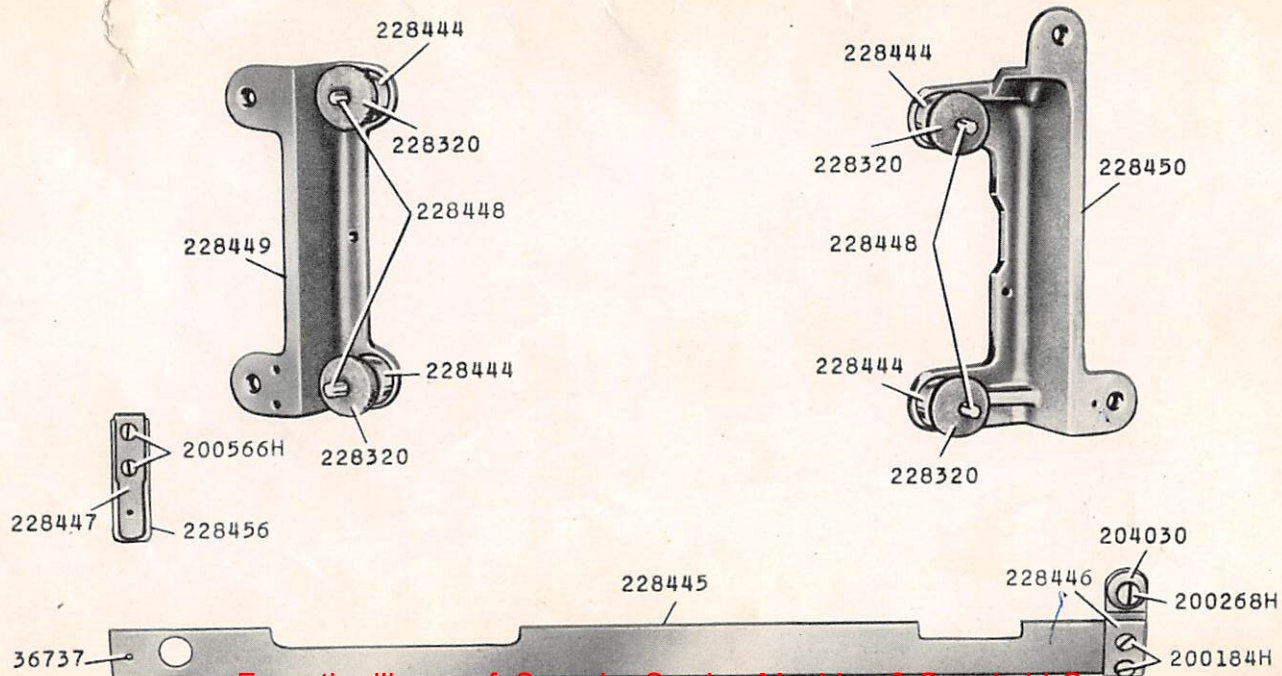 

  From the library of: Superior Sewing Machine & Supply LLC

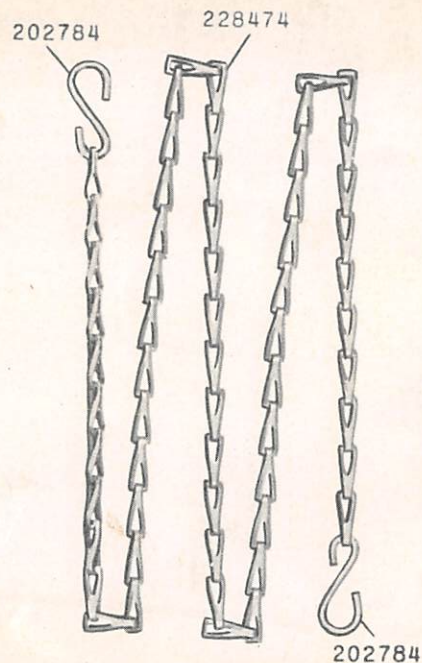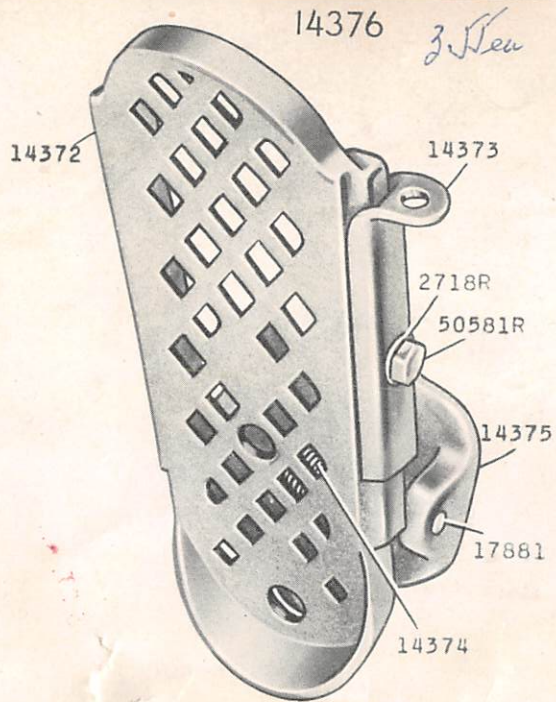

18614 - 1/2