Singer 31-52 Singer 31-62 M 18955 (236)

LIST or PARTS



MACHINES Nos. 31-52 and 31-62

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires ciling and when in continuous use, it should be ciled at least twice each day with Singer Manufacturing Sewing Machine Oil (Cloth and Leather).

> Copyright, U. S. A., 1933 and 1936 by The Singer Manufacturing Co. All Rights Reserved for all Countries

INDEX

		Page
	Attachments and Accessories	18
	Belt Guard	19
	Binders	24
	Bobbin Winders	19
	Driving Attachment	22
	Folders	25
	Foot Lifter Parts	43
	Guides	27
	Hemmer	28
	Knee Lifter Parts	42
	Lap Seam Fellers	28
	Machine Base	18
١	Machine No. 31-52	
	Machine No. 31-62	16
	Numerical List of Parts	4.5
ĺ	Presser Feet	31
	Presser Foot Extensions	33
	Presser Foot Strip Gauge	33
	Quilters	33
ı	Rufflers	34
	Shirt Closing Parts.	37
	Spool Fixture (Wire)	41
	•	
	Spool Holder	39
	Tape Holders	39
ı	Tape Spool Fixture (Wire)	40
	Throat Plates and Feed Dogs	38
	Thread Unwinder	44
	Wrenches	44

INSTRUCTIONS FOR ORDERING

In ordering from this list, use CNLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed

B-Polished, Nickel Plated and Buffed

C-Hardened Only

D-Polished Only

E-Soft, Not Polished

F-Hardened and Polished

G-Bright Rumbled and Nickel Plated

H-Blued

J-Nickel Plated Only

K-Hardened and Nickel Plated

L-Brass Plated

M-0x1d1zed

N-Japanned, Dull

P-Japanned, Bright

R-Merlized

T-Copper Plated

T.A-Hardened, Polished, Copper and Nickel Plated and Buffed

T.B-Copper and Nickel Plated and Polished

T.J-Copper and Nickel Plated Only

T.K-Hardened, Copper and Nickel Plated

T.M-Copper Plated and Oxidized

T.L-Copper and Brass Plated

U-Zinc Plated

V-Silver Plated

W-Polished and Nickel Plated

Y-Black Nickel Plated Only

Z-Chromium Plated

Z.B-Polished, Nickel Plated, Buffed and Chromium Plated Z.J-Nickel and Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:


1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers

1501 to 1600 and 51501 to 51800 are Nut Numbers 1801 to 2000 and 51801 to 52000 are Roller Numbers 2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO EE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE FOR

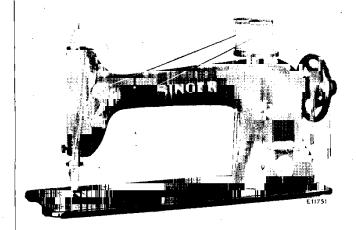

MACHINE No. 31-52

FOR CLOTH. GAUGES FROM 1/32 TO 1 1/4 INCHES. HIGH RAISE DROP FEED. SPEED 2000 R. P. M.

37.0	83 - 4 -	No
No.	Plate	Name
• 20 013		Arm with 11104, 15404 and two 15405
8582	8645	" Dowel Pin
12453	8645	" Oil Tube for intermediate bearing
15783		" " " 11119
11119	8645	" " 15783 with 52045, for oiling
		19156
12454	8645	Arm Oil Tube with 132590, for oiling 12409
24131	8645	" " " 52045, for oiling 19275
52045	8645	" " Packing (wick)
132590	8645	" " " (wick)
748E	8645	" Screw (back)
. 854E	8645	" " (front)
12427	8677	" Shaft
•11104		" Bushing (front)
12357	8649	" " Flanged Bushing (back)
. 448C	8645	" " " Set Screw.

No.	Plate	Name
144D	8645	Arm Shaft Screw
12480	8649	" Side Cap
219D	5773	" " Screw
12193	8648	" Cover
51224D	8645	" " Thumb Screw
2415	8648	" Spool Bracket
15063	8648	" " 2415 with two 12403
145D	8645	" " Screw
12403	8681	" " " Spool Pin and Thread
		Eyelet
11241	8681	Arm Spool Bracket Spool Pin Washer
		(cloth)
12358	8677	Balance Wheel (power) light rim, 2 3/16
		in. pulley, with two 448C
4370	8677	Balance Wheel (stand) heavy rim, 2 3/4
		in. pulley with two 448C
448C	8645	Balance Wheel Set Screw
*20014		Bed
20197	8648	Crank Connecting Rod with two 896C
896¢	8645	" Cap Screw
908C	864 5	Hinge Screw
1619E	8645	MIT
19304		Face Plate
19305	8649	Face Plate complete, Nos. 19155, 19304
		and 19327
190D	2070	Face Plate Screw
19327	8672	" Thread Guard (lower) with
,		12152
12152	8672	Face Plate Thread Guard (lower) Rivet
62624	8672	(upper)
19155		42020
		with 12152
12152	8672	Face Plate Thread Guard (upper) Rivet
51224D	8645	" Thumb Screw
19111	8649	Feed Bar
313C	8672	" " Screw Center
1519E	8672	
3033	8672	" Connecting Link
375C	5772	Hinge Screw
1518E	5772	" Dog, 13 teeth (16 teeth to the inch)
19338	786	with 19118, for 19287, for general
		WORK
00108	. 000	Feed Dog, 10 teeth (16 teeth to the inch)
20103	800	with 19118, for 43964
20373	8652	Feed Dog, 10 teeth (16 teeth to the inch)
20010	0002	with 19118, for 20375, for edge
		stitching on curves, for shirt
		bosoms
		=000m0t114444444

		•
No.	Plate	Name
20383	8652	Feed Dog, 13 teeth (16 teeth to the inch)
00004	2254	with 19118, for 20384
20294	8659	Feed Dog, 15 teeth (16 teeth to the inch)
3.0550	200	with 19118, for 20081
19 3 39	786	Feed Dog, 9 teeth (16 teeth to the inch)
		with 19118, for 19288, for general
19482	0050	work
19402	8659	Feed Dog, 12 teeth (16 teeth to the inch)
		with 19118, for 19484, for rounding
19479	0050	overgaiters
194/9	8658	Feed Dog, 7 teeth (16 teeth to the inch)
		with 19118, for 19481, for staying
20086	700	overgaiters
20000	799	Feed Dog, 9 teeth (18 teeth to the inch)
		with 19118, for 20087, for heavy
24449	8658	bolting cloth
See See	9038	Feed Dog, 15 teeth (16 teeth to the inch)
		with 19118, for 24450, for rounding
20068	8653	overgaiters
20000	0000	Feed Dog, 18 teeth (16 teeth to the inch)
		with 19118, for 20069, for boning
20072	8653	and corset strips
	0000	Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 20073
19343	789	Feed Dog, 14 teeth (18 teeth to the inch)
		with 19118, for 19290, for general
		work
19341	789	Feed Dog, 16 teeth (16 teeth to the inch)
		with 19118, for 19291, for knit
		goods and general work
20391	2085	Feed Dog, 16 teeth (16 teeth to the inch)
		with 19118, for 20392
20074	797	Feed Dog, 16 teeth (16 teeth to the inch)
		with 19118, for 20075, for knit
		goods and general work
20316	8654	Feed Dog, 14 teeth (16 teeth to the inch)
		with 19118, for 20079
20084	799	Feed Dog, 14 teeth (16 teeth to the inch)
		with 19118, for 20085, for general
		work
20279	2077	Feed Dog, 16 teeth (16 teeth to the inch)
	•	with 19118, for 20280, for knit
2020		goods and general work.
1910	8653	Feed Dog Screw
19116 19117	8672	Spring
19117	8672	Hook for 19120
TATTO	8672	" " " Feed Dogs
		· · · · · · · · · · · · · · · · · · ·

5	F.	RRIS FOR PROBLEM NO. 51-00		P	ARIB
No.	Plate	Name	No.	Plate	
19275	8649	Feed and Feed Lifting Eccentric with	12384	1144	Ne
		446C	ļ		
446C	8672	Feed and Feed Lifting Eccentric Set	1904	1144	Ne
20400	0040	Screw			
12429	8648	" Hinge Screw	453C	8646	Ne
375C	57 72	" " " Nut.	20188	8649	
1518E	5772		10650	8646	
12374	8677	" Lifting Rock Shaft	858C	8646	
20015		3043J,12374 and 19120	9361	8646	
3043J	8664	Feed Lifting Rock Shaft Crank (back)	19276	8646	
30433	500-	with 462C	2273 209F	8646	
2049	5772	Feed Lifting Rock Shaft Crank (back) Pin	1	8212	٥-
462C	8672	" " " Bet	•19386 19387	8649	08
4020	0072	Screw	19307		Os
19120	8649	Feed Lifting Rock Shaft Crank (front)	12388	8649	08
404-7		with 157E, 19117, 19121 and 19122	878D	8 64 6	0.5
157E	8672	Feed Lifting Rock Shaft Crank (front)	0,00	0040	
	= /-	Clamping Screw	12459	8646	08
19121	8672	Feed Lifting Rock Shaft Crank (front)	1	5040	0.5
		Roller	448C	8645	08
19122	8672	Feed Lifting Rock Shaft Crank (front)			•
		Roller Pin	4784	8646	056
43976	8648	Feed Lifting Rock Shaft Crank Connecting	20016	8677	
		Rod (cast iron) with two 966E	19496		
966E	8672	Feed Lifting Rock Shaft Crank Connecting	19388	8646	080
		Rod Cap Screw			
375C	5772	Feed Lifting Rock Shaft Crank Connecting	2049	5772	080
		Rod Hinge Screw	457C	8646	
1518E	5772	Feed Lifting Rock Shaft Crank Connecting	19389	8646	
		Rod Hinge Screw Nut	226D	2070	
30 7C	8672	Feed Lifting Rock Shaft Screw Center			
1513E	8672	Nuc.	12424	8646	080
3039	8649	Kegniaror			
1128E	8672	" Hinge Screw	9690	8646	Osc
818D	8672	Thumb Strew			
12379	8677	" Rock Shaft	1518E	5772	0sc
20333		29633			
29633	8664	Feed Rock Shaft Crank with 157J	19390		Osc
29033 157J	8672	" " Clamping Screw			
307C	8672	" " Screw Center	1000		_
1513E	8672	H H H Nut	12391	8664	Pre
18014	8664	Needle Bar (hollow)	12326	8646	
12382	1144	" Connecting Link with 794E	453C	8646	11
794E	1144	" " " Adjusting	52016 6890	8664	1
		Screw	1520E	8646	
•12383		Needle Bar Connecting Stud	12327	8646 8671	
			12061	90 /T	

No.	Plate	Name
12384	1144	Needle Bar Connecting Stud complete, Nos.
		453C, 1904 and 12383
1904	1144	Needle Bar Connecting Stud Roller (roll-
		er only)
453C	8646	Needle Bar Connecting Stud Set Screw
20188	8649	" Crank with 858C and 1085C
1065C	8646	" Position Screw
858C	8646	" " Set Screw
936E	8646	" Screw Bushing
19276	8646	" Clamp with two 209F
2273	8646	Pin
209F	8212	Set Screw
•19386	8649	Oscillating Rock Shaft
19387		Oscillating Rock Shaft complete, Nos.
		4784,12388 and 19386
12388	8649	Oscillating Rock Shaft Hinge Pin
878D	8646	" " " " Oil Hole
	3040	. VII note
12459	8646	Stop Screw Oscillating Rock Shaft Hinge Pin Oil
	0040	Hole Stop Samu Marker (3-14)
448C	8645	Hole Stop Screw Washer (leather) Oscillating Rock Shaft Hinge Pin Set
-100	0040	Schen dock guart Hinge blu Set
4784	8646	Screw Oscillating Rock Shaft Oil Pad
20016	8677	" Chose
19496		" Shaft
19388	8646	" CrankOscillating Shaft Crank complete, No:3.
		457C, 1518E, 19390 and 19496
2049	5772	Oscillating Shaft Crank Pin
457C	8646	Set Screw
19389	8646	" " Slide Block
226D	2070	" " " Cap
		Screw
12424	8646	Oscillating Shaft Crank Slide Block Cap
		Screw Washer
969C	8646	Oscillating Shaft Crank Slide Block
		Screw Stud
1518E	5772	Oscillating Shaft Crank Slide Block
		Screw Stud Nut
19390		Oscillating Shaft Crank Slide Block com-
		plete, Nos. 226D, 969C, 12424 and
		19389
12391	8664	Presser Bar (hollow)
12326	8646	" Guide Bracket with 453C
453C	8646	
52016	8664	Set Screw
6890	8646	Lifter
1520E	8646	Screw
12327	8671	Nut
		" Lifting and Releasing Lever
		Bracket

No.	Plate	Name
11167	8664	Presser Bar Spring (light) .051 wire
	te: No.	11167 is sent with this machine unless
240	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	another spring is specified on order.
12139	8664	Presser Bar Spring (medium) .055 wire
20023	8664	" " (heavy) .063 wire
11170	8646	" " Washer
19128	8665	" Foot, for general work
19216	8668	" with 228D, for strip gauge
19480	8665	" for staying overgaiters,
		for 19479
19483	8665	Presser Foot, for rounding overgaiters,
		for 19482
120157	8665	Presser Foot (double tube) for two
		strips
20046	8665	Presser Foot (tube)
20050	1224	" " for taping
20052	1224	" for outside stays and
		strips
20053	1224	Presser Foot (strip) for boning
20171	8665	" (tube) for cording and cov-
		ering one cord with strip
20374	8665	Presser Foot with guide on bottom to the
		right of needle holes, for 20373
20302	8665	Presser Foot with guide on bottom to the
		right of needle holes
26276	8667	Presser Foot Hinge Pin
20044		" Plate
26275		" Shank
20045	8667	Presser Foot (hinged) complete, Nos.
		20044,26275 and 26276
26276	8667	Presser Foot Hinge Pin
20047		" Plate
20048		8hank
26231	8667	Spring
20049	1224	Presser Foot (spring hinged) tube, com-
	•	plete, Nos. 20047,20048,26231 and
		26276
18055	8667	Presser Foot Hinge Pin
20129		Plate
20130		Shank
20131	8667	Presser Foot (hinged) complete, hollowed
		across bottom between needle holes
		and heel, for riding seams, for gen- eral work, Nos. 18055,20129 and
00055	0000	20130 Presser Foot Hinge Pin
26276	8667	" Plate
20168		
20169		" "Shank

No.	Plate	Name
20170	8667	Presser Foot (hinged) complete, 5/32 in.
		and above, for rounding overgaiters,
		Nos. 20168,20169 and 26276
26276	8667	Presser Foot Hinge Pin
44186		" Plate
20169		" Shank
44187	8867	Presser Foot (hinged) complete for 1/8
	•	in. gauge and below, for rounding
		overgaiters, Nos. 20169,26276 and
		44186
26276	8667	Presser Foot Hinge Pin
43894		" Plate
20048		" Shank
26231	8667	" Spring
43 895	8667	Presser Foot (spring hinged) tube, com-
		plete for taping, Nos. 20048,26231,
		26276 and 43894
26276	8667	Presser Foot Hinge Pin
43973		" Plate
43974		Shank
26231	8667	" Spring
4397 5	8667	Presser Foot (spring hinged) complete,
		for bolting cloth, Nos. 26231,26276,
190D	2070	43973 and 43974
688E	8682	Pressure Regulating Thumb Screw
19131	8651	Shuttle (inside) Bobbin
62606		" " Case
19310	8651	" " Latch and
		Position Finger
2521	1255	Shuttle (inside) Bobbin Case Latch and
		Position Finger Spring
59 2E	8651	Shuttle (inside) Bobbin Case Latch and
		Position Finger Stop Screw
19312	8651	Shuttle (inside) Bobbin Case complete,
		Nos. 591F,592E,2521,19149,1931C and
		62606
19136	8651	Shuttle (inside) Body
591 F	8651	" Tension Regulating
		Screw
19149	8651	Shuttle (inside) Tension Spring
19324	8651	" 1 11/16 in. diam., Nos.
10197	0051	19131,19136 and 19312
19131	8651	Shuttle (outside) Bobbin
626 08 19 3 11	8651	" " Case"
19011	0001	Position Finger
2521	1255	Shuttle (outside) Bobbin Case Latch and
		Position Finger Spring
		reader whreads.

No.	Plate	Name	1		
592E	8651	Shuttle (outside) Bobbin Case Latch and	No.	Plate	Name
		Position Finger Stop Screw	, 19145	8673	Shuttle Race Slide (inside)
19313	8651	Shuttle (outside) Bobbin Case complete,	19146	8673	(outside) for 7/16
		Nos. 591F,592E,2521,19172,19311 and			in. gauge and below
		62608	19281	8673	Shuttle Race Slide (outside) for 15/32
19171	8650	Shuttle (outside) Body for 19326			in. to 15/16 in. gauge
19137	8650	" " 19325	19385	8673 🍜	Shuttle Race Slide (outside) for 31/32
591F	8651	" Tension Regulating			in. to 1 1/4 in. gauge
		Screw	19147	8650	Shuttle Race Slide Friction Spring
19172	8650	Shuttle (outside) Tension Spring	651E	8650	Screw
19326	8650	Shuttle (outside) 1 11/16 in. diam., for	19148	8673	" " Guide (back) with
200-0	5555	1/32 in. to 13/64 in. gauge, Nos.			651E and 19147
		19131,19171 and 19313	19185	8673	Shuttle Race Slide Guide (front) with
19325	8650	Shuttle (outside) 1 11/16 in. diam., for			651E and 19147
20000	0000	7/32 in. gauge and above, Nos. 19131	691F	865 0	Shuttle Race Slide Guide Screw
		19137 and 19313	2921	1146	Tension Disc
19139	8664	Shuttle Driver with two 453C	19191	1146	" Plate, for upper tension, with
2049	5772	Pin			19231
453C	8646	" Set Screw	134D	8650	Tension Plate Screw
24490		" Race Body with 19316, for 24493.	1560C	1146	" Regulating Thumb Nut
19315			19192	1146	" Releaser
19379		19310, 101 19323.	43944	8649	" Releasing Lever
19316	1213	10f 84015	12398	8650	" " Hinge Pin
19010	1910	" Loop Separator for 19315	12329	8650	" " Spring
24492	1241	and 24490	19193	1146	" (intermediate)
19309	1213	Shuttle Race Needle Guard for 24493	19231	1146	" Hinge
19009	1210	. Dila Cacer			Block
		24013	2269	1146	Tension Releasing Lever (intermediate)
10530	1241	Shuttle Race Needle Guard Screw			Hinge Pin
19317	1213	" Ring (inside) for 19323,	19194	1146	Tension Releasing Lever (intermediate)
		24013 and 24493			Spring
19381	8664	Shuttle Race Ring (outside) for 24493	916C	1146	Tension Screw Stud
19318	1213	19020	44209		" " 916C with 1560C
		and 24013	1547D	1146	" " Nut
2532	1245	Shuttle Race Ring Position Pin	2923	1146	" Spring
2533	8664	Spring	19195	1146	Tension (upper) complete with Tension
90 7 D	8650	Screw			Release, Nos. 2269,19191,19193,19194
24493	1241	Shuttle Race complete, for 1/32 in. to			two each 1547D,2923,19192,44209 and
		5/64 in. gauge, Nos. 19317,19381,			four 2921
		24490,24492, two each 907D,1053D,	12149	8671	Thread Guard for 19162
		2533 and four 2532	19159	8671	" Guide Body
19323	1213	Shuttle Race complete, for 3/32 in. to	19161	8671	" " Cap
		5/32 in. gauge, Nos. 19309,19315,	19160	8671	" Roller
		19317,19318, two each 907D,1053D,	905D	8671	" Screw
		2533 and four 2532	19162		Thread Guide complete (roller) Nos. 905D
24013	8664	Shuttle Race complete, for 11/64 in.	1		and 19159 to 19161
		gauge and above, Nos. 19309,19317,	24129	1144	Thread Take-up Crank
		19318,19379, two each 907D,1053D,	3094	1144	" " Wedge
		2533 and four 2532	690E	1144	" " Screw
145F	8645	Shuttle Race Screw	19156	1144	" Lever

No.	Plate	Name
775E	1144	Thread Take-up Lever Cap Screw
12166	1144	" " Hinge Pin
12409	1144	" " Link
11204	1144	" " " Hinge Pin
435C	8671	" " " " " Set
		Screw
19157	1144	Thread Take-up Lever complete, Nos.12166 12409 and 19156
19158	8671	Thread Take-up Spring (music wire)
7336	8671	" Regulator
448C	8645	" " Bet Screw
19287	786	Throat Plate for 1/32 in. to 3/16 in. gauge for 19338
43964	2082	Throat Plate (flush) for 3/32 in. to 1/8
40004		in. gauge, for 20103
20375	8652	Throat Plate for 3/32 in. to 3/16 in. gauge for 20373
20384	8652	Throat Plate for 3/32 in. to 3/16 in.
		gauge for 20383
20081	8659	Throat Plate for 3/32 in. to 1/4 in.
		gauge for 20294
19288	786	Throat Plate for 3/32 in. to 5/16 in. gauge for 19339
19484	8659	Throat Plate with 240D,19485, 19486 and 25786, for 1/8 in. to 1/4 in. gauge,
70403	0450	for 19482
19481	8658	5/16 in. gauge, for 19479
20087	799	Throat Plate for 3/16 in. to 5/18 in.
20001	100	gauge, for 20086
244 50	8658	Throat Plate with 240D, 19485, 19486 and 25786, for 3/16 in. to 5/16 in. gauge
		for 24449
20069	8653	Throat Plate for 3/16 in. to 1/2 in. gauge, for 20068
20073	8653	Throat Plate for 3/16 in. to 1/2 in.
19290	789	gauge, for 20072 Throat Plate for 7/32 in. to 1/2 in.
10000		gauge, for 19343
19291	789	Throat Plate for 7/32 in. to 5/8 in. gauge, for 19341
20392	2085	Throat Plate with 240D, 19485, 19486 and 25786, for 17/32 in. gauge, for 20391, for under strip
00075	797	Throat Plate for 17/32 in. to 13/16 in.
20075	191	gauge, for 20074
20079	8654	Throat Plate for 17/32 in. to 13/16 in.
BUU 19	0004	gauge, for 20316

No.	Plate	Name
20085	799	Throat Plate for 27/32 in. to 1 1/4 in.
		gauge, for 20084
20280	2077	Throat Plate for 27/32 in. to 1 1/4 in.
		gauge, for 20279
19485	2085	Throat Plate Arm for 19484,20392 and
		24450
25786	2085	Throat Plate Arm Rivet
691 F	8650	"
4515	8682	" Spring Guide for 19481
19486	2085	" " " 19484,20392
		and 24450
240D	8662	Throat Plate Spring Guide Screw for
		19484,20392 and 24450
•15404		Trade Mark
15405		" Rivet
44212	8678	Drip Pan with four 1 in. wire nails

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles.

MACHINE No. 31-62

FOR STITCHING IN LIGHT AND MEDIUM WEIGHT FABRICS.
GAUGES FROM 3/32 TO 1 1/4 INCHES. DROP FEED. ALTERNATING PRESSERS. SPEED 2000 R.P.M.

NOTE: THIS MACHINE IS THE SAME AS THE 31-52 MACHINE WITH THE FOLLOWING EXCEPTIONS.

No.	Plate	Name
•43948		Arm with 11104, 15404 and two 15405, in
		place of 20013
20475		Face Plate
20395	8670	Face Plate complete, Nos. 19155,19327
		and 20475, in place of 19305
219F	5773	Face Plate Screw, in place of 190D
12 3 91	8664	Lifting Presser Bar (hollow)
19356	5772	" Bell Crank
199D	5772	Cap Screw
1935.7	5772	COULTEC C-
		ing Link
199D	5772	Lifting Presser Bar Bell Crank Connect-
		ing Link Cap Screw
19358	5772	Lifting Presser Bar Bell Crank Driving
		Arm
2049	5772	Lifting Presser Bar Bell Crank Driving
		Arm Pin
19 3 59	5772	Lifting Presser Bar Bell Crank Driving
		Arm Shaft
19 36 0	8669	Lifting Presser Bar Bell Crank Driving
		Arm Shaft Bracket
19361		Lifting Presser Bar Bell Crank Driving
		Arm Shaft Bracket complete, Nos.2049
2050	5000	and 19358 to 19360
965D	5773	Lifting Presser Bar Bell Crank Driving
10000	~ ~ ~ ~	Arm Shaft Bracket Screw
19362	5772	Lifting Presser Bar Bell Crank Driving
POCO	5772	Arm Eccentric Connection
375C	5772	Lifting Presser Bar Bell Crank Driving
24589	0000	Arm Eccentric Connection Hinge Screw Lifting Presser Bar Guide Bracket with
∠4 009	8669	453C
453C	8646	
40 <i>0</i> 0	0040	Lifting Presser Bar Guide Bracket Set
		DGI-AM

No.	Plate	Name			
43956		Lifting Presser Bar Guide Bracket com-			
		plete, Nos. 19356,19357,24589,43949			
		and three 199D			
245 90	8669	Lifting Presser Bar Guide Bracket Sup-			
2000		port			
1750	8650	Lifting Presser Bar Guide Bracket Sup-			
4055	CORO	port Screw			
4855	5772	Lifting Presser Bar Lifter			
689C	8646	Screw			
1520E 12327	8 64 6 8 67 1	" Nut			
12027	9071	Litting and Releas-			
11167	9664	ing Lever Bracket			
11107	3004	Lifting Presser Bar Spring (light) .051			
No	te: No	wire			
	. NO	. 11167 is sent with this machine unless another spring is specified on order.			
12139	8664	Lifting Presser Bar Spring (medium) .055			
14100	0004	wire			
20023	8664	Lifting Presser Bar Spring (heavy) .063			
		wire			
11170	8646	Lifting Presser Bar Spring Washer			
20482	5773	Foot			
193D	5773	" " Screw			
19365	8669	Needle Bar Crank and Lifting Eccentric			
		with 448C and 743C, in place of 20188			
7430	5773	Needle Bar Crank and Lifting Eccentric			
		Position Screw			
448¢	8645	Needle Bar Crank and Lifting Eccentric			
		Set Screw			
43 9 4 9	5773	Vibrating Presser Bar			
19367	5573	" " Cap			
199F	5772	" "Screw for 43949			
219F	5773	" " " 19367			
19368	5773	" Cushion (rawhide).			
19369	5773	" Spring			
335D	5773	Screw			
20483	5773	" Foot			
2170	5773	" " Screw			
		•			

19

No.	Plate	Name
19219	8675	Bed Frame Cushion (leather)
158C	8675	" " Screw
19220	8675	" " Spring
19226	8675	" " Hinge Connection
19398		" " " 19226 with
		211E and 19397
19397	8675	Bed Frame Hinge Connection Cap
211E	8675	" " " " Bcrew
16555	8675	" Plate
14010	8675	" Rivet
20067	819	" with two each 16555,19398, four
		each 19219,19220, six each 14010, wood
		screws 1 1/4 in. No. 12 and eight
		158C

ATTACHMENTS AND ACCESSORIES

No.	Plate	Name
NO. 51075E	8675	Machine Hinge Bolt with 51581E
51581E		Nut
6055	8675	washer
44180		Machine Hinge complete, Nos. 6055,12361,
		44139 and 51075E
12361	8675	Machine Hinge Connection
44139	8675	" Plate
44140		Machine Hinge complete, Nos. 12361,44139
		and merlized wood screw 1 1/4 in.No.
		14
12405	8675	Machine Rest (felt)
41400	8680	" Pin (wood)
120346	8680	Oiler (copper plated) with 120347
120347	8680	" Spout, 8 1/2 in. long
26026	8680	Screw Driver (large)
26485	8680	" (small)
120341	8680	Tweezers (curved)

BELT GUARD

No.	Plate	Name
41929	8677	Belt Guard
8418	8686	" Button
8419	8647	" " Washer (leather)
8420		" " 8418 with 8419 and
		wood screws 1 1/4 in. No. 9 R.H.B
41930	8686	Belt Guard Hinge
41931		Belt Guard complete, Nos. 8420,41929, two
		41930 and four wood screws 3/4 in.
		No.9

BOBBIN WINDERS

BOBBIN WINDER

FOR NO. 4370

No.	Plate	Name
15072	8647	Bobbin Position Pin
12168	8685	Bracket
69 2 D	8647	" Screw for 12172
12169	8685	Frame
12171	8685	Frame complete, Nos. 333D,5960,5961,5963
	•	12169 and 15077
32D	8647	Frame Hinge Screw
5960	8685	Friction Wheel (leather)
5961	8685	" Washer
333D	8647	" " Screw
15077	8685	Spindle with 15072
5963	8685	" Flange
12170	8685	Spring
180F	8647	" Screw
12172		Bobbin Winder complete, Nos. 32D, 180F,
		12168, 12170 and 12171

BOBBIN WINDER FOR NO. 12358

NOTE: THIS BOBBIN WINDER IS THE SAME AS NO. 12172 WITH THE FOLLOWING EXCEPTIONS.

No.	Plate	Name
20307	8685	Frame, in place of 12169
20308	8685	Frame complete, Nos. 333D,5960,5961,5963
		15077 and 20307, in place of 12171
20309		Bobbin Winder complete, Nos. 32D, 180F,
		12168 12170 and 2020a

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR NO. 19131

FOR POWER TABLE

No.	Plate	Name
225433	8678	Bobbin Winder and Tension Bracket Base
225453	8686	Frame with 202277 and 225438
225454	8686	" Hinge Pin
202277	8676	" Oil Packing (wick)
225438	8676	" Well Cap
225455	86 86	" Spring
225456	8676	" Plunger
202473	8686	Pulley with 200380C
200380C	8676	" Set Screw
225381	8686	Spindle
225444	8686	Stop Latch
200056E	8676	" Screw
225458	8686	" Thumb Lever
225459	8676	" " Hinge Stud
225459	8676	" Joint Stud
202478	8686	" Trip Lever
200299H	8676	" Hinge Screw
225461	8686	Tension Bracket with 201499B
200082D	86 76	" Screw
228026	8676	" " Washer

No.	Plate	Name
2102	8676	Tension Disc
202407	8676	" Spring
201499B	8686	" Stud
201572B	8676	" Thumb Nut
225462		Tension Bracket complete, Nos. 201572B, 202407,225481 and two 2102
225382	86 78	Bobbin Winder complete, Nos. 200056E, 200082D,200299H,202473,202478,225381 225433,2254444,225453 to 225456, 225458,225462,228026,two each 225459 and wood screws 3/4 in. No. 12 R.H.B

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR NO. 19131 FOR STAND

No.	Plate	Name
27540	8669	Base
15072	8647	Bobbin Position Pin
27302	8669	Frame
50356D	8676	" Hinge Screw
1620J	8676	" " Nut.
27303	8676	"Spring
27541	8669	Pulley
2784 9		Spindle
27538	8669	27849 with 15072,27850 and 41828
•2785 0		" Collar
41828	8647	" " Pin
27306	8686	Spool Pin
27307	8686	" Stand
27308	8686	Spool Stand complete, Nos. 418E.1562J.
		2106,10141,11241,27306,27307 and two
		each 2455 and wood screws 1 in. No.
		10
11241	8681	Spool Washer (cloth)
27587	8686	Stop Latch
35D	8647	" " Hinge Screw
2455	8647	Tension Disc
1562J	8647	" Regulating Thumb Nut
418E	8647	" Screw Stud
10141	8647	" Spring
2106	8647	" Thread Guide

	WI	

No. 27875	Plate	Name Bobbin Winder, Nos. 35D,1620J,27302, 27303,27538,27540,27541,27587,50356D
27876		and two wood screws 1 in. No. 7 Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 27875

DRIVING ATTACHMENT

No.	Plate	Name
16592	8687	Balance Wheel (friction) with 7958,16524
*		and two 4350
16524		Balance Wheel Friction Ring (leather)
7958	8674	" " Stop Pin
24355	8683	" 011 Cover
2100	8674	" " " Screw
435C	8671	" Set Screw
15072	8647	Bobbin Position Pin for 15077
16514	8685	" Winder Frame
32D	8647	" " Hinge Screw
16515	8685	Bobbin Winder Frame complete, Nos. 333D,
		5960,5961,5963,15077 and 16514
5960	8685	Bobbin Winder Friction Wheel (leather)
5961	8685	" " Washer
333D	8647	Screw
15077	8685	" Spindle with 15072
5963	8685	" " Flange
27306	8686	" " Spool Pin
27307	8686	" "Stand
27308	8686	Bobbin Winder Spool Stand complete, Nos.
		418E,1562J.2106.10141.11241.27306.
		27307 and two each 2455 and wood
		screws 1 in. No. 10
11241	8681	Bobbin Winder Spool Washer (cloth)
12170	8685	Spring
180 F	8647	Screw
19258	8683	Stop Laten with 152F and
		1550H
152F	8674	Bobbin Winder Stop Latch Adjusting Screw
1550H	2070	37.4
		Nut
75D	8674	Bobbin Winder Step Latch Hinge Screw " " Spring
27303	8676	" " Stop Pin
2269	1146	" Tension Disc
2455	8647	" " Regulating Thumb
15 62 J	8647	Regulating intuit
		Nut

DRIVING ATTACHMENT

No.	Plate	Name
418E	8647	Bobbin Winder Tension Screw Stud
10141	8647	Spring Thread Guide
2106	8647	" " Thread Guide
16530	8685	Bracket
692D	8647	" Screw
12458	8687	Drip Pan with four 1 in. wire nails for
		20141
16518	8687	Driving Arm with 2269,2928 and two 15132
2928	8674	" Brake (leather)
15132	8674	" " Rivet
12178	8674	" Friction Plug (wood)
427E	8674	" " " Adjusting
		Screw
1508C	8674	Driving Arm Friction Plug Adjusting
		Screw Nut
693D	8683	Driving Arm Hinge Screw
1579C	8683	" Nut
12475	8687	" Pitman
20371	8683	" " Crank
2022	8674	" " Pin
20372	8683	" " Spring
65D	8674	1111150 001 0
19260		Driving Arm complete, Nos. 32D,75D,180F,
		427E,693D,1508C,1579C,12170,12178,
		16515,16518,16530,19258 and 27303
16594	8683	Driving Friction Pulley, 2 5/16 in.diam.
		with 861D and 10236
10236	8674	Driving Friction Pulley Center Bearing
861D	8647	" " Oil Hole Plug
		Screw
27072		Shaft Driving Pulley (sectional, grooved)
		12 in. diam., 1 3/16 in. bore, with
		two 597C, for 20141
597C	8674	Shaft Driving Pulley Clamping Screw
12479	8683	Starting Crank
2022	8674	" Pin
12477	8683	" " Shaft
•44176		" " 12477 with 12479,
		20371 and two 2022
126036	8678	Treadle
126205	8683	" Bracket (left)
126206		Treadle Bracket (left) complete, Nos.
		23258,126205,126207,126208 and two
		wood screws 1 in. No. 14
126207	8683	Treadle Bracket (left) Hook
23258	8674	" " " Friction
**		Washer
126208	8674	Treadle Bracket (left) Hook Rivet

From the library of: Superior Sewing Machine & Supply LLC

23

BINDERS

27072,27308,44176,126213 and two 65D

FOR MACHINE NO. 31-62

No.	Plate	Name
35691	1248	Binder on Slide 18114, for 1/2 in. to
		1 1/2 in. ribbon binding, for blan-
		kets
35692	8677	Binder on Slide 18114, for 1 9/16 in. to
		2 1/2 in. ribbon binding, for blan-
		ets
35693	8677	Binder on Slide 18114, for 2 9/16 in. to
		3 1/2 in. ribbon binding, for blan-
		keta
18114	8673	Binder Slide
35694	1249	Feed Dog with 21 teeth (16 teeth to the
		inch) with 19118, for 35691 to 35693
		and 35695
19118	8672	Feed Dog Spring Hook
35696	1249	Lifting Presser Foot for 35691
35698	1249	" " " 35692 and 35693
35695	1249	Throat Plate for 3/16 in. to 5/16 in.
		gauge, for 35691 to 35694
35697	1249	Vibrating Presser Foot for 35691
356 99	1249	" " " 35692 and 35693

FOLDERS

EDGE FOLDERS

No.	Plate	Name
2696	5 2660	Edge Folder (left hand) on Slide com-
		plete, with right hand upper guide,
		for folding bobbinette curtains and
		inserting edge of lace
2893	4 2660	Edge Folder (right hand) and Slide com-
		plete, with left hand upper guide,
		for folding bobbinette curtains and
		inserting edge of lace
3 508	0 2679	Edge Folder, to turn the goods in, use
		with 35081
3508	1 2679	Presser Foot (hinged) strip folding, with
		tape guide, for 35080
3530	0 867 9	Edge Folder (left hand) on Slide com-
		plete, to turn edge under with right
		hand lower guide, for turning silk
		bolting cloth and stitching cotton
		webbing and ticking
3599	4 5794	Edge Folder (double) on Slide 18114
1811	4 8673	" " Slide

STRIP FOLDERS

No.	Plate	Name
·26412		Strip Folder
18114	8673	" " \$11de
26413	8679	" on Slide, Nos. 18114 and
		26412
No	te: Wh	en ordering No. 26413, give gauge required
35102	2681	Strip Folder on Slide 18114, for folding
		strip so that both edges will meet
		in center, for belt loops for trousers
35103	2681	Presser Foot (tube) for 35102
		- ·
35132	8679	Strip Folder on Slide 18114 to turn both
		edges up, so that the edges will
		meet in center, for garters
35133	2686	Presser Foot (strip folding) to turn
		under both edges 1/4 in., for gar-
		ters, for 35132
35702	1251	Strip Folder on Slide 18114 with lining
		guide, for making side straps for
		trousers

26		STRIP FOLDERS				STRIP FOLDER 27
No.	Plate	Neme	-	No.	Plate	Name
35703	1251	Presser Foot for 35702	Ì	36493	8679	Strip Folder (lower and upper) complete
35801	1254	Strip Folder on Slide 18114, with guides				with Edge Guide, for banding knee
		for steel and interlining				pants, Nos. 793B, 1425B, 1443B and
26276	8667	Presser Foot Hinge Pin				36490 to 36492
35802		" Plate for 35804	- 4/6	36606	8655	Feed Dog, 21 teeth (16 teeth to the inch)
35803		" Shank for 35804				with 19118, for 36493 and 36607
35804	1254	Presser Foot (hinged) complete for 35801 Nos. 26276,35802 and 35803		36494	8654	Feed Dog,21 teeth (16 teeth to the inch) with 19118, for 36493 and 36496
35878	1254	Strip Folder on Slide 18114, with guide		19118	8672	Feed Dog Spring Hook
		for interlining		36495	8655	Lifting Presser Foot for 36493
38077	5796	Strip Folder on Slide 18114, for light		36496	8654	Throat Plate, for 17/32 in. to 13/16 in.
		material, for making straps				gauge, for 36493 and 36494
36078	5796	Presser Foot for 36077	1	36607	8655	Throat Plate, for 3/8 in. to 1/2 in.
			.			gauge, for 36493 and 36606
				36497	8655	Vibrating Presser Foot for 36493
		STRIP FOLDER				,
						(
		FOR MACHINE NO. 31-52				GUIDES
No.	Plate	Name				GUIDE
120193	8661	Feed Dog, 12 teeth (16 teeth to the inch)	1			
		with 19118, for 120195 and 120196	İ		i.	FOR MACHINE NO. 31-52
19118	8672	Feed Dog Spring Hook	; 1			
120194	8661	Presser Foot for 120196	. i			
120195	8661	Throat Plate for 1/2 in. to 3/4 in.gauge	,]	No.	Plate	Name
		for 120193 and 120196	'	19230	8679	Guide
18114	8673	Strip Folder Slide	.	207F	8647	Screw for 19230
120196	8661	on 18114, for hemming the	:	7071	8647	" " Washer for 19230
		right hand edge and turning over the				
		left hand edge, for army shirts				
		,	`			
						GUIDES (Hinged)
				,		OOIDES (Hilliged)
		STRIP FOLDER		FOR C	LOSING F	RONT SEAMS ON STRAIGHT FRONT CORSETS
		FOR MACHINE NO. 31-62		No.	Plate	Name
				36224	2059	Guide (right hand) for 35287
No.	Plate	Name		36225	2059	" " Hinge Plate for 35287
36490	8679	Edge Guide		50094D	2059	" " " Screw for 35287
1443B	8647	" " Screw	.	35287	2059	Guide (hinged) right hand complete, Nos.
38491	8679	Strip Folder (lower) on Slide	1.			36224,36225 and 50094D
36492	8679	" (upper) on Bracket		35288	. 2059	Presser Foot with guide on bottom to the
1425B	8647	" " Screw				left of needle holes, for 35287
7938	8647	" " Thumb Screw		36226	2059	Guide (left hand) for 35289
				36227	2059	" " Hinge Plate for 35289.

28

8650

651E

		Name
No.	Plate	
50094D	2059	Guide (left hand) Hinge Screw for 35289.
35289	2059	Guide (hinged) left hand, complete, Nos. 36226,36227 and 50094D
35290	2059	Presser Foot with guide on bottom to the right of needle holes, for 35289
35301	8679	Shuttle Race Slide Guide (front) with 651E and 19147, for 35287 and 35289.
19147	8650	Shuttle Race Slide Guide (front) Spring.

EDGE GUIDE

No. 35945	Plate	Name
		5794
		grooved for taping

STAY GUIDE

No.	Plate	Name
26266	8681	Stay Guide Plate (lower)
26267	8681	" " (upper)
19 3 F	5773	" Screw for 26268
7071	8647	" " Washer for 26268
26268		Stay Guide complete, Nos.26266 and 26267

HEMMER

No.	Plate	Name
19343	789	Feed Dog, 14 teeth (16 teeth to the inch)
		with 19118, for 19290 and 35561
19118	8672	Feed Dog Spring Hook
35556	1245	Presser Foot (left)
35557	1245	" (right)
7308	1245	" Bracket
7309	1245	" Cap
220D	1245	" Screw
62527	8650	" " Hinge Pin
35558	1245	" Shank (left) with 7311

Name Plate No. Presser Foot Shank (right) with 7311.... 1245 35559 Hinge Connection.... 7310 1245 1245 106D Pin..... 1245 7311 Presser Foot (compensating) complete for 35560 1245

HEMMER

35561, Nos. 106D,220D,7308 to 7310, 35556 to 35559 and two 62527..... Throat Plate, for 7/32 in. to 1/2 in. 789 19290 gauge, for 19343 and 35561..... Hemmer (double) on Slide, for 3/32 in. to 35561 1245 3/16 in. hem, for hemming two pieces

in one operation, for shirt ruffles, etc..... Hermer on Shank, for handkerchief work... 8681 120367 " 1/32 in. to 1/8 in. 8681 120452

gauge, for Windsor ties.....

WHEN ORDERING LAP SEAM FELLERS GIVE GAUGE REQUIRED AND SEND SAMPLE OR DESCRIPTION OF MATERIAL WITH ORDER.

LAP SEAM FELLERS

No.	Plate	Name
19340	8656	Feed Dog, 13 teeth (16 teeth to the inch)
		with 19118, for 19190
24462	8656	Feed Dog, 13 spiked teeth (16 teeth to
		the inch) with 19118, for 19190
20076	797	Feed Dog, 13 teeth (16 teeth to the inch)
		with 19118, for heavy lap seam fell-
		er, for 20077
20088	800	Feed Dog, 13 teeth (16 teeth to the inch)
		with 19118, for heavy lap seamfell-
		er, for 20089
20103	800	Feed Dog, 10 teeth (16 teeth to the inch)
		with 19118, for 20104
20195	8657	Feed Dog, 15 teeth (16 teeth to the inch)
		with 19118, for 20196
19274	788	Feed Dog, 14 teeth (16 teeth to the inch)
		with 19118, for 19283
19344	788	Feed Dog, 14 teeth (16 teeth to the inch)
		with 19118, for 19289
20086	799	Feed Dog, 9 teeth (16 teeth to the inch)
		with 19118, for 43965

		-
No.	Plate	. Name
26574	8666	Presser Foot, for gathering
26887	5 64 6	" (strip folding) with two
		tubes, for stitching two rows of
		soutache braid on the folded strip
26276	8667	Presser Foot Hinge Pin
28801		" Plate
26275		" " Shank
28802	8666	Presser Foot (hinged) strip folding,complete, Nos. 26275,26276 and 28801
28995	267 0	Presser Foot, for braiding
35071	267 0	" (strip folding) for folding
		strip and inserting piping on each
		edge of strip
35083.	2681	Presser Foot (strip folding) for straight cut goods, to turn under the right and left edges 5/16 in., with guide, for interlining
35111	267 0	Presser Foot with upper and lower strip folder, for 1/4 in, to 5/8 in.gauge.
35194	5646	Presser Foot, for gathering
35259	2679	" " (strip folding) with tape guide
35362	8666	Presser Foot with upper and lower strip
35542	1003	Presser Foot (tube) for strip, with two tubes for braid, to stitch braid to each edge of strip
35835	8666	Presser Foot (strip folding) with tongue slotted for interlining and guide, for steel
26276	8667	Presser Foot Hinge Pin
35885		" " Plate
35886		" " Shank
35887	5 7 97	Presser Foot (strip folding) hinged, com-
		plete, with guide for draw string, Nos. 26276, 35885 and 35886
26276	8667	Presser Foot Hinge Pin
36295		" Plate
20048		" Shank
26231	8667	" Spring
36296	1003	Presser Foot (tube) spring hinged, com-
	1000	plete, with guide, for opening seams, Nos. 20048, 26231, 26276 and 36295.
36297	5798	Presser Foot with upper and lower strip folder, for 11/16 in. to 1 1/4 in. gauge
120157	8665	Presser Foot (double tube) for two strips

PRESSER FOOT EXTENSIONS

No.	Plate	Name
19216	8668	Presser Foot with 228D
26279	8668	" Extension, 1/16 in., for 19216
26280	8668	Presser Foot Extension, 1/8 in., for 19216
26281	8668	Presser Foot Extension, 1/4 in., for 19216
26282	8668	Presser Foot Extension, 3/8 in., for 19216
26283	8668	Presser Foot Extension, 1/2 in., for 19216
228D	8212	Presser Foot Extension Screw

PRESSER FOOT STRIP GAUGE

No.	Plate	1	Name
19216	8668	Presser Foot with	h 228D
25967	8668	" · " Str:	ip Gauge for 19216
228D	8212	и и и	" Screw

QUILTERS

No.	Plate	· Name
28659	8681	Quilter Guide for 28660
25992	8681	" Holder with two 207F
207F	8647	" " Set Screw
207F	8647	" Set Screw
28660	8681	Quilter complete, Nos. 25992 and 28659
120479	8212	" Guide (left) for 120485
120480	8212	" (right) for 120485
120481	8212	" Bracket for 120482
120482		" " 120481 with 120483
		and two 209C, for 120485
209C	8212	Quilter Guide Bracket Set Screw
120483	8212	" Disengaging Sleeve for
		120482
120484	8212	Quilter Guide Disengaging Sleeve Spring.
602D	8647	# # B II II D
		Bcrew
209¢	8212	Quilter Guide Set Screw
120485		Quilter complete, Nos. 602D, 120479, 120480
		120482 and 120484

RUFFLERS

RUFFLER No. 35305

RUFFLER (POWER) WITH LEVER FOR THROWING RUFFLING BLADE INTO ACTION, FOR INTERMITTENT RUFFLING, FOR SHIRT YOKINGS, ETC.

No.	Plate	Name
28590	2070	Driving Lever
1101C	2070	" " Hinge Screw
16470	2070	" " Nut
28591	2070	" Spring
28592	2070	" Collar
35302	2070	Frame
35306		Needle Clamp Body
26228	2069	" Roller
209F	8212	" " Screw
35307	2069	Needle Clamp complete, Nos. 26228, 35306
		and two 209F
35303	2070	Presser Foot
185H	2070	" Screw
35304	2070	Ruffling Blade
24203	2070	" Holder
226J	2070	" " Cap Screw
24204	2070	" " Spring
24205	2070	" " Stop
24206	2070	" Stud
1550H	2070	" " Nut
28607	2070	" Stop
28600	2070	" Lever
560B	2070	" " Adjusting Thumb
		Screw,
1603E	2070	Ruffling Blade Lever Adjusting Thumb
		Screw Nut
1049D	2070	Ruffling Blade Lever Stop Screw
665J	2070	" Screw
28601	2070	Starting Lever with 190D
190D	2070	" Clamping Screw
35305	2069	Ruffler complete for 35308, Nos. 185H,
		226J,560B,1049D,1101C,1550H,1603E,
		1647C,24203 to 24206,28590 to 28592,
		28600,28601,28607,35302 to 35304,
		35307 and two 665J
35311	2072	Edge Folder (left hand) on Slide com-
		plete, to turn the goods up with
		separating blade and right hand up-
		per guide, for 35305
36321	2662	Feed Dog, 16 teeth (16 teeth to the inch)
		with 19118, for 35305 and 36322

No.	Plate	Name
36323	2663	Feed Dog, 16 teeth (16 teeth to the inch)
		with 19118, for 35305 and 36324
3 5312	2072	Ruffling Blade for 35311
35308	2071	Strip Folder on Slide 18114, with upper
		right hand edge folder to turn the
		goods under, with separating blade
		and guide, for draw string, for 35305
3 5309	2071	Strip Folder on Slide 18114, with separ-
		ating blade and guide, for draw
		string, for 35305
18114	8673	Strip Folder Slide
3531 0	2071	" Guide on Slide 18114, with guide,
		for draw string, for 35305
18114	8673	Strip Guide Slide
36322	2662	Throat Plate, for 17/32 in. to 13/16 in.
		gauge, for 35305 and 36321
36324	2663	Throat Plate, for 27/32 in. to 1 1/4 in.
		gauge, for 35305 and 36323

RUFFLER No. 35812

RUFFLER (POWER) WITH LEVER FOR THROWING RUFFLING BLADE INTO ACTION, FOR INTERMITTENT RUFFLING, FOR SHIRT YOKINGS, ETC.

No.	Plate			Name		
28590	2070	Driving	Leve:	r		
1101C	2070	11	Я	Hinge	Screw.	
1647C	2070	**	н	"		Nut
28591	2070	u	ıt	Spring		
28592	2070	u	11	"		r
28593	1255	Frame				
35306		Needle	Clamp	Body		
26228	2069	Ħ	n			
209F	8212	u	Ħ			
35307	2069	Needle	Clamp	complet	e, Nos.	. 26228,35306
		and	two 2	209F		
35807	. 1255	Presser	Foot	(left).		· · · · · · · · · · · · · · · · · · ·
185H	2070	н	st		Screw.,	
62527	8650	11	U	(right)	Hinge	P1n
35808		н	. 11	u .	_	
28596		h	н	A		• • • • • • • • • • • • • • • • • • • •
28597	1255	10	• н	11	91	Cap
198D	1255	. 11	'n	19	£1.	" Screw
2656	1255	N	a	18	Ħ	Spring
706J	1255	**	**	*1	91	Stop Screw

36

No.	Plate	Name	N
2521	1255	Presser Foot (right) Spring	28
35809	1255	Presser Foot (right) complete, Nos. 2521	28
		28596, 35808 and 62527	3 5
35810	1255	Ruffling Blade	35
24203	2070	" Holder	26
226J	2070	" " Cap Screw	
24204	2070	" " Spring	35
24205	2070	" " " Stop	
24206	2070	" " " Stud	35
1550H	2070	" " " Nut	
28607	2070	" " Stop	36
35811	1255	" Lever	24
560B	2070	" " Adjusting Thumb	
		Screw	24
1603E	2070	Ruffling Blade Lever Adjusting Thumb	24
		Screw Nut	24
10 4 9D	2070	Ruffling Blade Lever Stop Screw	1
665J	2070	" " Screw	28
28601	2070	Starting Lever with 190D	36
190D	2070	" Clamping Screw	
35812	1255	Ruffler complete for 35813, Nos.185H,	İ
		· 226J,560B,706J,1049D,1101C,1550H,	1
		1603E,1647C,2656,24203 to 24206,	ŀ
		28590 to 28593,28597,28601,28607,	1
		35307,35807,35809 to 35811, two 665J	ŀ
		and three 198D	28
35813	1256	Double Edge Folder (right hand) with	
		separating blade, for ruffling shirt	36
		body and putting in yoke, for 35812.	!
35814	8663	Feed Dog, 8 teeth (16 teeth to the inch)	ŀ
		with 19118, for 35812 and 35815	
19118	8672	Feed Dog Spring Hook	
3 5815	8663	Throat Plate, for 3/16 in. to 3/8 in.	18
		gauge, for 35812 and 35814	35

RUFFLER No. 36004

RUFFLER (POWER) WITH LEVER FOR THROWING RUFFLING BLADE INTO ACTION, FOR INTERMITTENT RUFFLING, FOR SHIRT YOKINGS, ETC.

No.	Plate			Nam	В
28590	2070	Driving	Lever	• • • • • •	
1101C	2070	je -	17	Hinge	Screw
1647C	2070	es	11	u	" Nut

No.	Plate	Name
NO. 28591	2070	Driving Lever Spring
28592	2070	" " Collar
35302	2070	
35308	2070	Frame Needle Clamp Body
26228	2069	and the second s
209F		" Roller
	8212	" Screw Neg 00000 75706
35307	2069	Needle Clamp complete, Nos. 26228, 35306
acaoa	2070	and two 209F
35303		
185H	2070	" " Screw
36002	5795	Ruffling Blade
24203	2070	HOLDER
226J	2070	Cap Screw
24204	2070	Spring
24205	2070	Stop
24206	2070	Stud
1550H	2070	Nutricia
28607	2070	Stop
36003	5795	Lever
560B	2070	" " Adjusting Thumb
		Screw
1603E	2070	Ruffling Blade Lever Adjusting Thumb
		Screw Nut
1049D	2070	Ruffling Blade Lever Stop Screw
665J	2070	" Screw
28601	2070	Starting Lever with 190D
190 D	2070	" Clamping Screw
36004	5795	Ruffler complete for 35308, Nos. 185H,
		226J,560B,1049D,1101C,1550H,1603E,
		1647C,24203 to 24206,28590 to 28592,
		28601,28607,35302,35303,35307,36002,
		36003 and two 665J
18114	8673	Strip Folder Slide
35308	2071	" on Slide 18114, with upper
		right hand edge folder to turn the
		goods under, with separating blade
		and guide for draw string, for 36004

SHIRT CLOSING PARTS

FOR MACHINE NO. 31-52

No.	Plate	Name
20317	8662	Feed Dog, 15 teeth (16 teeth to the inch)
		with 19118, for 20318
19118	8672	Feed Dog Spring Hook
26487	8662	Hemmer (foot) for felling
6267	8662	" Folder for 26487

No.	Plate			Nai	пе			
25888	8662	Hemmer	Tongu	e for a	26487			
No	te: Wh	en orderi	ng No	s. 626'	7 or 25	888, g1	ve wi	dth
		of hem require		0. of 1	Hemmer	for whi	ch it	. 1s
20318	8662	Throat	Plate	, for	1/32 :	in. to	1/4	in.
		gau	ige, w	nth 26	53, for	20317.		
26488	8662	Throat	Plate	Cloth	Guide.			
102D	8662	14	n	**	19	Hinge S	crew.	
2653	8662	17	14-	и.	. 11	Stop Pi	n	
26489	8662	**	14	Spring	g Guide			
240D	8662	n	н	11		Screw.		•••

THROAT PLATES AND FEED DOGS

FOR MACHINE NO. 31-52

No.	Plate	Name
26725	1328	Feed Dog, 10 teeth (16 teeth to the inch)
		with 19118, for 26726,36310,36311
		and 36543
19118	8672	Feed Dog Spring Hook
26726	1328	Throat Plate, for 5/32 in. to 1/2 in.
		gauge, for under strip, for 26725
36310	2086	Throat Plate, for 5/32 in. to 1/2 in.
		 gauge, for two under strips, for
		26725
36311	2086	Throat Plate, for 5/32 in. to 1/2 in.
		gauge, for two under strips, with
		adjustable under strip guide, for
		26725
36543	8660	Throat Plate, for 5/32 in. to 1/2 in.
		gauge, with adjustable under strip
		guide, for 26725
36312	2086	Feed Dog, 10 teeth (16 teeth to the inch)
		with 19118, for 36313 to 36316
19118	8672	Feed Dog Spring Hook
36313	2086	Throat Plate, for 17/32 in. to 13/16 in.
		gauge, for under strip, for 36312
36314	5800	Throat Plate, for 17/32 in. to 13/16 in.
		gauge, for two under strips, for
		36312
36315	5800	Throat Plate, for 17/32 in. to 13/16 in.
		gauge, with adjustable under strip
		guide, for 36312

No.	Plate	Name
36316	8660	Throat Plate, for 17/32 in. to 13/16 in. gauge, for two under strips, with adjustable under strip guide, for 36312
36317	5802	Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 36318
19118	8672	Feed Dog Spring Hook
36318	5802	Throat Plate, for 53/64 in. to 1 1/4 in. gauge, for under strip, for 36317

SPOOL HOLDER

(DISC)

No.	Plate	Name
26763	8670	Bracket with 219F and 50053D
219F	5773	" Screw
5005 3D	8663	" Thumb Screw
19066	8670	Spindle
19067	8670	" Thread Guiding Disc
691 F	8650	" Screw
26764	8670	Spool Holder complete, Nos. 691F,19066, 19067 and 26763

TAPE HOLDERS

TAPE HOLDER

(5 IN. DISC)

No.	Plate	Name
36795	2116	Tape Holder Body
36796	2116	" Cover
55D	8663	" " Hinge Screw
28994	2116	Tape Holder complete, Nos. 55D, 36795,
•		36796 and two wood screws 1 1/4 in.
		No. 10

TAPE HOLDER

(8 IN. DISC)

No.	Plate	Name
26061	989	Bracket Wire with Disc
26062	989	Disc (adjustable) with 35925 and 51224D.

No.	Plate	Name
35925	8663	Disc Hub
51224D	8645	" Thumb Screw
26325	8669	Foot with 736J and three wood screws 1
	•	in. No. 12
736J	8663	Foot Screw
2 60 6 3	989	Tape Holder (straight) complete for 26065, Nos. 26061 and 26062
26065	·- 	Tape Holder with Foot complete, Nos.

TAPE HOLDER (10 IN. DISC)

No.	Plate	Name

26066	989	Bracket Wire
26067		Bracket Wire complete, Nos. 26066, 26068
		and 26072
26068	989	Disc
26069	989	" Hub
26070		" Rivet for 26071
26071		Disc complete, Nos. 26068 and 26069
26064	8669	Foot with 736J and three wood scraws 1
		in. No. 12
736J	8663	Foot Screw
26072	989	Tape Guide
26073	8663	Tension Adjusting Collar with 51224B
51224B	8645	" Thumb Screw
13211	8663	" Spring
26074	989	Tape Holder (offset) complete for 26343,
		Nos. 13211,26067,26071 and 26073
26343		Tape Holder with Foot complete, Nos.
		26064 and 26074

TAPE SPOOL FIXTURE (Wire)

No.	Plate	Name
4516	8684	Tape Spool Fixture (wire) with fixed
		cone
4518	8684	Tape Spool Fixture Cone
1541B	8684	" " Regulating Thumb Nut.
8019	3684	" " " Spring
4517	8684	Tape Spool Fixture (wire) with fixed
		cone complete, Nos. 1541B,4516,4518
		and 8019

SPOOL FIXTURE (Wire)

No.	Plate	Name
4715	8684	Spool Fixture (wire) with two 10145
4717	8684	" Flange
10145	8684	" Thread Eyelet
4718	8684	" " Washer (felt)
4716	8684	Spool Fixture complete, for two spools,
		Nos. 4715, two 4717 and three 4718

FOOT LIFTER PARTS

No.	Plate	Name
5596	8682	Bell Crank
56848		" 5596 with 5599 and 5601
5599	8682	" Bracket
178E	-8 67 6	" " Screw
5601	8676	" Hinge Pin
5735	8682	" Spring
5598	8682	Bell Crank complete, Nos. 5735 and 56848
5 67 0		Chain, length 26 in. to 35 in. with
•		56864 and 56865
No	te: Wr	men ordering No. 5670, state length required
4879	8682	Chain Connecting Link for 4885
56864	8682	" Hook (large)
56865	8682	" (small)
12237	8682	Lifting Lever with 448C, for 20008
20340	8682	" " 448C, for 43928
12415	8682	" Connecting Rod
12416	8682	" " Joint
76D	8676	" " Hinge
		Screw
1521E	8676	Lifting Lever Connecting Rod Lock Nut
80 SD	8676	" Hinge Screw
12241	8671	" Link for 20008
• 21301	5773	" 43928
766D	8671	" " Hinge Screw
12240	8682	" Pin for 20008
19372	5773	" " 43928
448C	8645	" " Set Screw
2763	819	Rock Shaft
12242	819	" Hanger with two wood screws 1
		in. No. 10
6337	819	Rock Shaft Lifting Bracket with two 3560
12243	819	" " " Hook for 5598
7125	819	" " " 5 67 0

Name

Plate

42		FOOT LIFTER PARTS
No.	Plate	Name
356C	8671	Rock Shaft Lifting Bracket Hook Set
		Screw
356C	8671	Rock Shaft Lifting Bracket Set Screw
2770	ل ا	" Stop Dog with 356C
35.6C	3671	" " " Set Screw
4880	819	Rock Shaft complete, Nos. 2763,2770,7125
		12243 and two each 6337 and 12242
4881	819	Treadle
4882	8682	" Shaft
4883	8682	" Spring
4884	819	" Stand
4885	819	Treadle complete, Nos. 4879,4881 to 4884
		and two wood screws 1 in. No. 16
20008		Foot Lifter complete for 31-52 Machine,
		Nos. 76D,766D,802D,1521E,4880,4885,
		5598,5670,12237,12240,12241,12415,
		12416 and two 178E
43928		Foot Lifter complete for 31-62 Machine,
		Nos. 76D,766D,802D,1521E,4880,4885,

KNEE LIFTER PARTS

5598,5670,12415,12416,19372,20340, 21301 and two 178E.....

No.	Plate	Name
5596	8682	Bell Crank
56848		" 5596 with 5599 and 5601
5599	8682	" " Bracket
178E	8676	" " Screw
5601	8676	" Hinge Pin
5735	86.82	" " Spring
5598	8682	Bell Crank complete, Nos. 5735 and 56848
12237	8682	Lifting Lever with 448C, for 12445 and
		20466
20340	8682	Lifting Lever with 448C, for 20341 and
		43931
12415	8682	Lifting Lever Connecting Rod
12416	8682	" " Joint
76D	8676	" " " " Hinge
		Screw
1521E	8676	Lifting Lever Connecting Rod Lock Nut
802D	8676	" Hinge Screw
12241	8671	" Link for 12445 and 20466
21301	5773	" " " 20341 and 43931
766D	8671	" " Hinge Screw
.12240	8682	" Pin for 12445 and 20466

19372	5773	Lifting Lever Pin for 20341 and 43931
448C	8645	" Set Screw
2763	819	Rock Shaft for 12250
20091	8688	" " 20465
7539	8688	" Hanger with two wood screws 1
		in. No. 10, for 12250
2764	8688	Rock Shaft Hanger (back) with two wood
		screws 1 in. No. 10, for 20465
16128	8688	Rock Shaft Hanger (front) with two wood
		screws 1 in. No. 10, for 20465
2765	8688	Rock Shaft Knee Arm
2766	8688	" " " Hub with 356C, for
		2768
20462	8688	Rock Shaft Knee Arm Hub with 356C, for
		20463
356C	8671	Rock Shaft Knee Arm Hub Set Screw
2768		Rock Shaft Knee Arm complete for 12250,
		Nos. 2765 to 2767
20463		Rock Shaft Knee Arm complete for 20465,
		Nos. 2765, 2767 and 20462
2767	8688	Rock Shaft Knee Plate with 356C
356C	8671	" " Set Screw
20464	8688	" Lifting Arm with 356C for
		20465
356C	8671	Rock Shaft Lifting Arm Set Screw
6337	819	" " Bracket with two 3560
		for 12250
2778	8688	Rock Shaft Lifting Bracket Hook for
		12250
356C	8671	Rock Shaft Lifting Bracket Hook Set
		Screw
356C	8671	Rock Shaft Lifting Bracket Set Screw
2770	819	" Stop Dog with 356C
356C	8671	Set Screw
12250	8688	Rock Shaft complete for 12445 and 120341
		Nos. 2763,2768,2778,6337 and two
		each 2770 and 7539
20465	3688	Rock Shaft complete for 20466 and 43931,
•		Nos. 2764,16128,20091,20463,20464
		and two 2770
12445		Knee Lifter complete (power table or
		stand No. 25265) for 31-52 Machine,
		Nos. 76D,766D,802D,1521E,5598,12237,
		12240,12241,12250,12415,12416 and
		two 178E
20341		Knee Lifter complete (power table or
	100	stand No. 25265) for 31-62 Machine,
		Nos. 76D,766D,802D,1521E,5598,12250,

12415,12416,19372,20340,21301 and

No.	Plate	Name
20466		Knee Lifter complete (stand No. 25255)
		for 31-52 Machine, Nos. 76D, 766D,
		802D,1521E,5598,12237,12240,12241,
		12415,12416,20465 and two 178E
43931		Knee Lifter complete (stand No. 25255)
		for 31-62 Machine, Nos. 76D,766D,
		802D,1521E,5598,12415,12416,19372,
		20340,20465,21301 and two 178E

THREAD UNWINDER

FOR TWO SPOOLS OR TWO LARGE CONES OF THREAT

No.	Plate	Name
225257	20335	Spool Rest with 201018C
150203	20335	" Cushion (felt)
225388	20335	" Rod
200383C	8671	" " Set Screw
2010180	8671	" Set Screw
202490	20335	" Stand with 200383C
225391	20335	Thread Guide
201696J	8671	" Lock Nut
225326	20335	" Position Cup
225324	20335	" Rod with 208E and 225322
208E	8671	" " Screw
225322	8671	" " Washer
225258	20335	Thread Unwinder complete, Nos. 201696J,
		202490,225257,225324,225326,225388,
		two each 150203,225391 and three
		wood screws 7/8 in. No. 12
27739	8670	Thread Cone (wood) for large cones
225390	8670	" Holder, for inverted cones
No	te: Nos	. 27739 and 225390 are used with, but not
		included in 225258.

WRENCHES

No.	Plate	Name		
19221	8680 .	Wrench	for	936 and 1619
8909	8680	н.	11	1513 and 1518
8908	8680	п -	11	1520

No.	Plate	Name
32D	8647	Bobbin Winder Frame Hinge Screw for
		12172, 19260 and 20309
35D	8647	Bobbin Winder Stop Latch Hinge Screw for 27875
· 55D	8663	Tape Holder Cover Hinge Screw for 28994.
65D	8674	Driving Arm Pitman Hinge Screw for 20141
75D	8674	Bobbin Winder Stop Latch Hinge Screw for 19260
76D	8676	Lifting Lever Connecting Rod Joint Hinge Screw for 12445,20008,20341,20486, 43928 and 43931
1020	8662	Throat Plate Cloth Guide Hinge Screw for 31-52 Machine, for shirt closing parts
106D	1245	Presser Foot Shank Hinge Connection Screw for 35560
134D	8650	Tension Plate Screw
144D	8 64 5	Arm Shaft Screw
145D	8645	" Spool Bracket Screw
145F	8645	Shuttle Race Screw
152F	8674	Bobbin Winder Stop Latch Adjusting Screw for 19258
157E	8672	Feed Lifting Rock Shaft Crank (front) Clamping Screw for 19120
157J	8672	Feed Rock Shaft Crank Clamping Screw for 29633
158C	8675	Bed Frame Cushion Screw for 20067
175D	8650	Lifting Presser Bar Guide Bracket Sup- port Screw for 31-62 Machine
178E	8676	Bell Crank Bracket Screw for 12445,20008 20341,20466,43928 and 43931
180F	8647	Bobbin Winder Spring Screw for 12172, 19260 and 20309
185H	2070	Presser Foot (left) Screw for 35812
185H	2070	" Screw for 35305 and 36004
190D	2070	Face Plate Screw for 31-52 Machine
190D	2070	Presser Foot Screw
190 D	2070	Ruffler Starting Lever Clamping Screw for 28601
191¢	8653	Feed Dog Screw
193D	5773	Lifting Presser Foot Screw for 31-62 Ma- chine
193F	5773	Stay Guide Screw for 26268

No.	Plate	Name
198D	1255	Presser Foot (right) Shank Cap Screw for
		35812
199D	5772	Lifting Presser Bar Bell Crank Cap Screw
		for 43956
199D	5772	Lifting Presser Bar Bell Crank Connect-
		ing Link Cap Screw for 43956
19 9F	5772	Vibrating Presser Bar Cap Screw for
		43949
207F	8647	Guide Screw for 19230
207F	8647	Quilter Guide Holder Set Screw for 25992
207F	8647	" Set Screw for 25992
208E	8671	Thread Unwinder Thread Guide Rod Screw
		for 225324
209F	8212	Needle Set Screw for 19276
209F	8212	Ruffler Needle Clamp Screw for 35307
209C	8212	Quilter Guide Bracket Set Screw for
		120482
209C	8212	Quilter Guide Set Screw for 120482
210D	8674	Driving Attachment Balance Wheel Oil
		Cover Screw for 20141
211E	8675	Bed Frame Hinge Connection Cap Screw for
		19398
2170	5773	Vibrating Presser Bar Foot Screw for
		31-62 Machine
219D	5773	Arm Side Cap Screw
219F	5773	Face Plate Screw for 31-62 Machine
219F	5773	Spool Holder Bracket Screw for 26763
219F	5773	Vibrating Presser Bar Cap Screw for
		19367
220D	1245	Presser Foot Cap Screw for 35560
226D	2070	Oscillating Shaft Crank Slide Block Cap
		Screw for 19390
226J	2070	Ruffling Blade Holder Cap Screw for
		35305,35812 and 36004
228D	8212	Presser Foot Extension Screw for 19216
228D	8212	" Strip Gauge Screw for 19216
240D	8662	Throat Plate Spring Guide Screw for
		19484,20392,24450 and for shirt
		closing parts
307C	8672	Feed Lifting Rock Shaft Screw Center
3 070	8672	" Rock Shaft Screw Center
3130	8672	Bar Screw Center
333D	8647	Bobbin Winder Friction Wheel Washer
		Screw for 12171,16515 and 20308
335D	5773	Vibrating Presser Bar Spring Screw for
		31-62 Machine
356C	8671	Rock Shaft Knee Arm Hub Set Screw for
		2766 and 20462

No.	Plate	Name
356C	8671	Rock Shaft Knee Plate Set Screw for 2767
356C	8671	" Lifting Arm Set Screw for 20464
356C	8671	Rock Shaft Lifting Bracket Hook Set Screw for 6337
356C	8671	Rock Shaft Lifting Bracket Set Screw for 6337.
356C	8671	Rock Shaft Stop Dog Set Screw for 2770
361C	8674	Driving Attachment Treadle Pitman Rod
3620	8674	Clamp Screw for 80223
2020	00/4	Driving Attachment Treadle Stop Collar Set Screw for 2762
375C	5772	Feed Connecting Link Hinge Screw
375C	5772	" Forked Connection Hinge Screw
375C	5772	" Lifting Rock Shaft Crank Connecting
375C	5772	Rod Hinge Screw Lifting Presser Bar Bell Crank Driving Arm Eccentric Connection Hinge Screw
405E	8647	for 31-62 Machine Lap Seam Feller Folder Slide Spring
		Screw
418E	8647	Bobbin Winder Tension Screw Stud for 27308
427E	8674	Driving Arm Friction Plug Adjusting Screw for 19260
435C	8671	Driving Attachment Balance Wheel Set
435C	8671	Screw for 16592 Thread Take-up Lever Link Hinge Pin Set
446C	8672	Screw Feed and Feed Lifting Eccentric Set
448C	8645	Screw for 19275Arm Shaft Flanged Bushing (back) Set
448C	8645	ScrewBalance Wheel Set Screw for 4370 and
448C	8645	12358 Lifting Lever Pin Set Screw for 12237
		and 20340
448C	8645	Needle Bar Crank and Lifting Eccentric Set Screw for 19365
448C	8645	Oscillating Rock Shaft Hinge Pin Set Screw
448C	8645	Thread Take-up Spring Regulator Set
453C	8646	ScrewLifting Presser Bar Guide Bracket Set
453C	8646	Screw for 24589 Needle Bar Connecting Stud Set Screw for
453C	8646	12384 Presser Bar Guide Bracket Set Screw for 12326

No.	Plate	Name
453C	8646	Shuttle Driver Set Screw for 19139
457C	8646	Oscillating Shaft Crank Set Screw for
462C	8672	19388 Feed Lifting Rock Shaft Crank (back) Set
560B	2070	Screw for 3043J Ruffling Blade Lever Adjusting Thumb
591F	8651	Screw for 35305, 35812 and 36004 Shuttle (inside) Tension Regulating
591 F	8651	Screw for 19312 Shuttle (outside) Tension Regulating
		Screw for 19313
592E	8651	Shuttle (inside) Bobbin Case Latch and Position Finger Stop Screw for 19312
59 2E	8651	Shuttle (outside) Bobbin Case Latch and Position Finger Stop Screw for 19313
59 7 C	8674	Driving Attachment Shaft Driving Pulley Clamping Screw for 27072
602D	8647	Quilter Guide Disengaging Sleeve Spring Screw for 120485
651E	8650	Shuttle Race Slide Friction Spring Screw
651E	8650	for 19148, 19185 and 19189 Shuttle Race Slide Guide (front) Spring
665J	207 0	Screw for 35301 Ruffling Blade Screw for 35305,35812 and 36004
688E	8682	Pressure Regulating Thumb Screw
689C	8646	Lifting Presser Bar Lifter Screw for
		31-62 Machine
689C	8646	Presser Bar Lifter Screw
690E	1144	Thread Take-up Crank Wedge Screw
691F	8650	Shuttle Race Slide Guide Screw
691 F	8650	Spool Holder Spindle Thread Guiding Disc Screw for 26764
691F	8650	Throat Plate Screw
692D	8647	Bobbin Winder Bracket Screw for 12172 and 20141
693D	8683	Driving Arm Hinge Screw for 19260
706J	1255	Presser Foot (right) Shank Stop Screw for 35812
736 J	. 8663	Tape Holder Foot Screw for 26064 and 26325.
7430	5773	
748E	8645	Arm Screw (back)
766D	8671	Lifting Lever Link Hinge Screw for 12445 20008,20341,20466,43928 and 43931
775E	1144	Thread Take-up Lever Cap Screw
793B	8647	Strip Folder (upper) Thumb Screw for
		36493

No.	Plate	Name
794E	1144	Needle Bar Connecting Link Adjusting
		Screw for 12382
802D	8676	Lifting Lever Hinge Screw for 12445,
		20008,20341,20466,43928 and 43931
818D	8672	Feed Regulator Thumb Screw
854E	8645	Arm Screw (front)
858C	8646	Needle Bar Crank Set Screw for 20188
861D	8647	Driving Friction Pulley Oil Hole Plug
		Screw for 16594
878D	8646	Oscillating Rock Shaft Hinge Pin Oil
0100	0040	Hole Stop Screw
896C	8645	Crank Connecting Rod Cap Screw for 20197
	8671	Thread Guide Screw for 19162
905D		
90 7D	8650	Shuttle Race Ring Spring Screw for 19323
	22.45	24013 and 24493
908C	8645	Crank Connecting Rod Hinge Screw
91 4F	8647	Shuttle Race Slide Guide Screw for 19189
916C	1146	Tension Screw Stud for 44209
936E	8646	Needle Bar Screw Bushing
965D	5773	Lifting Presser Bar Bell Crank Driving
		Arm Shaft Bracket Screw for 31-62
		Machine
966E	8672	Feed Lifting Rock Shaft Crank Connecting
	-	Rod Cap Screw for 43976
969C	8646	Oscillating Shaft Crank Slide Block
		Screw Stud for 19390
1049D	2070	Ruffling Blade Lever Stop Screw for
		35305, 35812 and 36004
1053D	1241	Shuttle Race Needle Guard Screw for
		19323, 24013 and 24493
1065C	8646	Needle Bar Crank Position Screw for
		20188
1101C	2070	Ruffler Driving Lever Hinge Screw for
		35305, 35812 and 36004
1128E	8672	Feed Regulator Hinge Screw
1425B	8647	Strip Folder (upper) Screw for 36493
1443B	8647	Edge Guide Screw for 36493
1508C	8674	Driving Arm Friction Plug Adjusting
20000	50,1	Screw Nut for 19260
1513E	8672	Feed Lifting Rock Shaft Screw Center Nut
1513E	8672	" Rock Shaft Screw Center Nut
1518E	5772	" Connecting Link Hinge Screw Nut
1518E	5772	" Forked Connection Hinge Screw Nut
1518£	5772	
TOTOR	0/12	Fifting wook pitale clank conneceting
15105	F-000	Rod Hinge Screw Nut
1518E	5772	Oscillating Shaft Crank Slide Block
	0.000	Screw Stud Nut for 19388
1519E	8672	Feed Bar Screw Center Nut
		,

		1	i		NUMERICAL LIST OF PARTS 51
No.	Plate	Name		5 0 . 4	
1520E	8646	Lifting Presser Bar Lifter Screw Nut for	No. 2532	Plate	Name
		31-62 Machine	2002	1245	Shuttle Race Ring Position Pin for 19323
1520E	8646	Presser Bar Lifter Screw Nut	2533	8664	24013 and 24493
1521E	8676	Lifting Lever Connecting Rod Lock Nut	2000	0004	Shuttle Race Ring Spring for 19323,24013
		for 12445,20008,20341,20466,43928	2653	8662	and 24493 Throat Plate Cloth Guide Stop Pin for
		and 43931	2000	0002	20318
1541B	8684	Tape Spool Fixture Regulating Thumb Nut	2656	1255	Presser Foot (right) Shank Spring for
		for 4517	2000	1200	35812
15470	1146	Tension Screw Stud Nut for 19195	2762	8687	
1550H	2070	Bobbin Winder Stop Latch Adjusting Screw	2002	0007	Driving Attachment Treadle Stop Collar
		Nut for 19258	2763	819	with 3620, for 14233
1550H	2070	Ruffling Blade Holder Stud Nut for 35305	2764	8688	Rock Shaft for 4880 and 12250
		35812 and 36004	2704	0000	Rock Shaft Hanger (back) with two wood
1560C	1146	Tension Regulating Thumb Nut for 44209	2765	8688	screws 1 in. No. 10, for 20465
15 62 J	8647	Bobbin Winder Tension Regulating Thumb	2766	8688	Rock Shaft Knee Arm for 2768 and 20463 " " Hub with 356C, for
		Nut for 27308	2,00	0000	nub with 3500, for
1579C	8683	Driving Arm Hinge Screw Nut for 19260	2767	8688	2768
1603E	2070	Ruffling Blade Lever Adjusting Thumb	, 5,0,	0000	Rock Shaft Knee Plate with 356C, for 2768 and 20463
		Screw Nut for 35305,35812 and 36004.	2768		Rock Shaft Knee Arm complete for 12250,
1619E	8645	Crank Connecting Rod Hinge Screw Nut	1 2.00		Nos. 2765 to 2767
1620J	8676	Bobbin Winder Frame Hinge Screw Nut for	2770	819	Rock Shaft Stop Dog with 356C, for 4880,
30400	0000	27875	1	V10	12250 and 20465
1647C	2070	Ruffler Driving Lever Hinge Screw Nut	2778	8688	Rock Shaft Lifting Bracket Hook for
1004	77.44	for 35305, 35812 and 36004	1		12250
1904	1144	Needle Bar Connecting Stud Roller (roll-	2921	1146	Tension Disc for 19195
2022	8674	er only) for 12384	2923	1146	" Spring for 19195
2022	8674	Driving Arm Pitman Crank Pin for 44176	2928	8674	Driving Arm Brake (leather) for 16518
ಏ∪ಏವ	00/4	Driving Attachment Starting Crank Pin	3033	8672	Feed Connecting Link
0040	F 2200	for 44176	3039	8649	Regulator
2049	5772	Feed Lifting Rock Shaft Crank (back) Pin	3043J	8664	" Lifting Rock Shaft Crank (back)
2049	5772	Lifting Presser Bar Bell Crank Driving			with 4620, for 20015
2049	5772	Arm Pin for 19361	3094	1144	Thread Take-up Crank Wedge
2049	5772 5772	Oscillating Shaft Crank Pin	4370	8677	Balance Wheel (stand) heavy rim 2 3/4
2102	8676	Shuttle Driver Pin			in. pulley, with two 448C
2102	8647	Bobbin Winder Tension Disc for 225462	4515	8682	Throat Plate Spring Guide for 19481
200	0047	in ead Guide for	4516	8684	Tape Spool Fixture (wire) with fixed
2269	1146	27308.			cone for 4517
2200	1140	Bobbin Winder Stop Latch Stop Pin for	4517	8684	Tape Spool Fixture (wire) with fixed
2269	1146	Tension Pelegging / array (data array)	•		cone complete, Nos. 1541B,4516,4518
2200	1140	Tension Releasing Lever (intermediate)			and 8019
2273	8646	Hinge Pin for 19195 Needle Clamp Pin	4518	8684	Tape Spool Fixture Cone for 4517
2415	8648	Arm Spool Bracket for 15063	4715	8684	Spool Fixture (wire) with two 10145, for
2455	8647	Bobbin Winder Tension Disc for 27308			4716
2521	1255	Presser Foot (right) Spring for 35809	4716	8684	Spool Fixture (wire) complete, for two
2521	1255	Shuttle (inside) Bobbin Case Latch and			spools, Nos. 4715, two 4717 and three
		Position Finger Spring for 19312			4718
2521	1255.	Shuttle (outside) Bobbin Case Latch and	4717	8684	Spool Fixture Flange for 4716
		Position Finger Spring for 19313	4718	8684	Washer (felt) for 4716
			4784	8646	Oscillating Rock Shaft Oil Pad for 19387
			1		

No.	Plate	Name
4855	5772	Lifting Presser Bar Lifter for 31-62 Ma-
		chine
4879	8682	Chain Connecting Link for 4885
4880	819	Rock Shaft complete for 20008 and 43928,
		Nos. 2763,2770,7125,12243 and two
		each 6337 and 12242
4881	819	Treadle for 4885
4882	8682	" Shaft for 4885
4883	8682	" Spring for 4885
4884	819	* Stand for 4885
4885	819	Treadle complete for 20008 and 43928,
2000	010	Nos. 4879,4881 to 4884 and two wood
		screws 1 in. No. 16
5596	8682	Bell Crank for 56848
5598	8682	Bell Crank complete for 12445, 20008,
2090	0002	
		20341,20466,43928 and 43931, Nos.
5500	0000	5735 and 56848
5599	8682	Bell Crank Bracket for 56848
5601	8676	" " Hinge Pin for 56848
567 0		Chain, length 26 in. to 35 in. with
		56864 and 56865, for 20008 and 43928
5735	8682	Bell Crank Spring for 5598
5960	8685	Bobbin Winder Friction Wheel (leather)
		for 12171, 16515 and 20308
5961	8685	Bobbin Winder Friction Wheel Washer for
		12171, 16515 and 20308
5963	8685	Bobbin Winder Spindle Flange for 12171,
		16515 and 20308
6055	8675	Driving Attachment Treadle Pitman Rod
		(lower) Spring Washer for 14233
6055	8675	Machine Hinge Bolt Nut Washer for 44180
		(Attachments and Accessories)
6267	8662	Hemmer Folder for 26487, for shirt clos-
		ing parts, for 31-52 Machine
6337	819	Rock Shaft Lifting Bracket with two 356C
		for 4880 and 12250
7071	8647	Guide Screw Washer for 19230
7071	8647	Stay Guide Screw Washer for 26268
7125	819	Rock Shaft Lifting Bracket Hook for 4880
		and 5670
7308	1245	Presser Foot Bracket for 35560
7309	1245	" Cap for 35560
7310	1245	" Shank Hinge Connection for
1010	TOTO	35560
7311	1245	Presser Foot Shank Pin for 35558 and
1911	TEMO	35559
7336	8671	
		Thread Take-up Spring Regulator
7539	8688	Rock Shaft Hanger with two wood screws 1
		in. No. 10, for 12250

No.	Plate	Name
7958	8674	Driving Attachment Balance Wheel Fric-
		tion Ring Stop Pin for 16592
8019	8684	Tape Spool Fixture Spring for 4517
8418	8686	Belt Guard Button for 8420
8419	8647	" " Washer (leather) for
		8420
8420		Belt Guard Button 8418 with 8419 and
		wood screws 1 1/4 in. No. 9 R.H.B.,
		for 41931
8582	8645	Arm Dowel Pin
8908	8680	Wrench for 1520 (Attachments and Acces-
		sories)
8909	8680	Wrench for 1513 and 1518 (Attachments
		and Accessories)
10141	8647	Bobbin Winder Tension Spring for 27308
10145	8684	Spool Fixture Thread Eyelet for 4715
10236	8674	Driving Friction Pulley Center Bearing
433304		for 16594
•11104		43948
11110	8645	Arm 011 Tube 15793 with 52045, for oil-
11119	5045	ing 19156
11167	8664	Lifting Presser Bar Spring (light) .051
11107	3004	wire, for 31-62 Machine
11167	8664	Presser Bar Spring (light) .051 wire
11170	8646	Lifting Presser Bar Spring Washer for
111.0	0040	31-62 Machine
11170	8646	Presser Bar Spring Washer
11204	1144	Thread Take-up Lever Link Hinge Pin
11241	8681	Arm Spool Bracket Spool Pin Washer
		(cloth)
11241	8681	Bobbin Winder Spool Washer (cloth) for
		27308
12139	8664	Lifting Presser Bar Spring (medium) .055
		wire, for 31-62 Machine
12139	8664	Presser Bar Spring (medium) .055 wire
12149	8671	Thread Guard for 19162
12152	8672	Face Plate Thread Guard (lower) Rivet
		for 19327
12152	8672	Face Plate Thread Guard (upper) Rivet
		for 19155
12166	1144	Thread Take-up Lever Hinge Pin for 19157
12168	8685	Bobbin Winder Bracket for 12172 and
		20309
12169	8685	Bobbin Winder Frame for 12171
12170	8685	" " Spring for 12172, 19260
x.		and 20309

No.	Plate	Name
12171	8685	Bobbin Winder Frame complete for 12172, Nos. 333D, 5960, 5961, 5963, 12169
		and 15077
12172	,	Bobbin Winder complete for 4370, Nos.320 180F, 12168, 12170 and 12171
12178	8674	Driving Arm Friction Plug (wood) for 19260
12193	8648	Arm Side Cover
12237	8682	Lifting Lever with 448C, for 12445, 20008
		and 20486
12240	8682	Lifting Lever Pin for 12445, 20008 and 20486.
12241	8671	Lifting Lever Link for 12445, 20008 and 20486
12242	819	Rock Shaft Hanger with two wood screws 1 in. No. 10, for 4880
12243	819	Rock Shaft Lifting Bracket Hook for 4880
	020	and 5598
12250	8688	Rock Shaft complete, for 12445 and 20341
		Nos. 2763,2768,2778,6337 and two
		each 2770 and 7539
12326	8646	Presser Bar Guide Bracket with 4530
12327	8671	Lifting Presser Bar Lifting and Releas- ing Lever Bracket, for 31-62 Machine
12327	8671	Presser Bar Lifting and Releasing Lever Bracket
12329	865 0	Tension Releasing Lever Spring
12357	8649	Arm Shaft Flanged Bushing (back)
12358	8677	Balance Wheel (power) light rim 2 3/16
		in. pulley, with two 448C
12361	8675	Machine Hinge Connection for 44140 and 44180 (Attachments and Accessories).
12374	8677	Feed Lifting Rock Shaft for 20015
12379	8677	" Rock Shaft for 20333
•12382	1144	Needle Bar Connecting Link with 794E
12383		Stud for 12384
12384	1144	Needle Bar Connecting Stud complete, Nos. 453C, 1904 and 12383
12388	8649	Oscillating Rock Shaft Hinge Pin for 19387
12391	8664	Lifting Presser Bar (hollow) for 31-62 Machine
.12391	8664	Presser Bar (hollow)
12398	8650	Tension Releasing Lever Hinge Pin
12403	8681	Arm Spool Bracket Spool Pin and Thread Eyelet for 15063
12405	867 5	Machine Rest (felt) Attachments and Accessories
12409	1144	Thread Take-up Lever Link for 19157

No.	Plate	Name
12415	8682	Lifting Lever Connecting Rod for 12445, 20008,20341,20466,43928 and 43931
12416	8682	Lifting Lever Connecting Rod Joint for 12445,20008,20341,20466,43928 and 43931
12424	8646	Oscillating Shaft Crank Slide Block Cap Screw Washer for 19390
12427	8677	Arm Shaft
12429	8 64 8	Feed Forked Connection
12445		Knee Lifter complete (power table or
	,	stand No. 25265) for 31-52 Machine.
		Nos. 76D,766D,802D,1521E,5598,12237.
		12240,12241,12250,12415,12416 and two 178E
12453	8645	Arm 011 Tube for intermediate bearing
12454	8645	with 132590, for oiling
		12409
12458	8687	Drip Pan with four 1 in. wire mails for 20141
12459	8646	Oscillating Rock Shaft Hinge Pin Oil
		Hole Stop Screw Washer (leather)
12475	8687	Driving Arm Pitman for 20141
12477	8683	" Attachment Starting Crank Shaft, for 44176
12479	8683	Driving Attachment Starting Crank for
12480	0040	44176
13211	8649	Arm Side Cap
10211	8663	Tape Holder Tension Adjusting Spring for 26074
14010	8675	Bed Frame Hinge Plate Rivet for 20067
14081	8687	Driving Attachment Treadle Pitman Rod (upper) for 14233
14233	8687	Driving Attachment Treadle Pitman com-
		plete, for 126213, Nos. 2762, 6055, 14081, 27637, 80223 and 150208
15063	8648	Arm Spool Bracket 2415 with two 12403
15072	8647	Bobbin Winder Bobbin Position Pin for 15077 and 27538.
15077	8685	Bobbin Winder Spindle with 15072, for
		12171, 16515 and 20308
15132	8674	Driving Arm Brake Rivet for 16518
15404		Trade Mark for 20013 and 43948
15405		" Rivet for 20013 and 43948
15783		Arm 011 Tube for 11119
16128	8688	Rock Shaft Hanger Front with two wood
		screws 1 in. No. 10, for 20465
16514	8685	Bobbin Winder Frame for 16515
		`

No.	Plate	Name	No.	Plate	Name (40044)
16515	8685	Bobbin Winder Frame complete, for 19260,	19136	8651	Shuttle (inside) Body for 19324
		Nos. 333D, 5960, 5961, 5963, 15077	19137	8650	(outside) Body for 19525
		and 16514	19139	8664	Driver with two 453C
16518	8687	Driving Arm with 2269, 2928 and two	19145	8673	" Race Slide (inside)"
		15132, for 19260	19146	8673	(outside) for 7/16
16524		Driving Attachment Balance Wheel Fric-			in. gauge and below
		tion Ring (leather) for 16592	19147	865 0	Shuttle Race Slide Friction Spring for
16530	8685	Driving Attachment Bracket for 19260			19148, 19185 and 19189
16555	867 5	Bed Frame Hinge Plate for 20067	19147	8650	Shuttle Race Slide Guide (front) Spring
16592	8687	Driving Attachment Balance Wheel (fric-			for 35301
		tion) with 7958,16524 and two 435C,	19148	8673	Shuttle Race Slide Guide (back) with
		for 20141,			651E and 19147
16594	8683	Driving Friction Pulley, 2 5/16 in.diam.	19149	8651	Shuttle (inside) Tension Spring for
		with 861D and 10236, for 20141			19312
18014	8664	Needle Bar (hollow)	19155		Face Plate Thread Guard (upper) 62624
18055	8667	Presser Foot Hinge Pin for 20131			with 12152, for 19305 and 20395
18114	8673	Binder Slide for 35691 to 35693	19156	1144	Thread Take-up Lever for 19157
18114	8673	Edge Folder Slide for 35994	19157	1144	Thread Take-up Lever complete, Nos. 12166
18114	8673	Lap Seam Feller Folder Slide for 26272,			12409 and 19156
		26397,26565 and 36880	19158	8671	Thread Take-up Spring (music wire)
18114	8673	Strip Folder Slide for 26413,35102,35132	19159	8671	" Guide Body for 19162
		35308,35309,35702,35801,35878, 36077	19160	8671	" Roller for 19162
		and 120196	19161	8671	" Cap for 19162
18114	8673	Strip Guide Slide for 35310	19162		Thread Guide complete (roller) Nos. 905D
19066	8670	Spool Holder Spindle for 26764			and 19159 to 19161
19067	8670	" " Thread Guiding Disc	19171	8650	Shuttle (outside) Body for 19326
		for 26764	19172	8650	" Tension Spring for
19111	8649	Feed Bar	ľ		19313
19116	8672	" Dog Spring	19185	8673	Shuttle Race Slide Guide (front) with
19117	8672	" " Hook for 19120			651E and 19147
19118	8672	" " " 19274,19338,	19189	8681	Shuttle Race Slide Guide (front) with
		19339,19340,19341,19343,19344,19479,			651E and 19147, for lap seam feller.
		19482,20068,20072,20074,20076,20084,	19190	8656	Throat Plate, for 7/32 in. to 1/2 in.
		20086,20088,20103,20195,20279,20294,			gauge, for 19340 and 24462, for lap
		20316,20317,20373,20383,20387,20391,			seam feller
		24449,24462,26725,35694,35814,36312,	19191	1146	Tension Plate for upper tension, with
		36317,36321,36323,36494,36606 and			19231, for 19195
		120293	19192	1146	Tension Releaser for 19195
19120	8649	Feed Lifting Rock Shaft Crank (front)	19193	1146	" Releasing Lever (intermediate)
_		with 157E, 19117, 19121 and 19122,			for 19195
		for 20015	19194	1146	Tension Releasing Lever (intermediate)
19121	8672	Feed Lifting Rock Shaft Crank (front)			Spring for 19195
		Roller for 19120	19195	11 4 6	Tension (upper) complete with tension
19122	8672	Feed Lifting Rock Shaft Crank (front)			release, Nos. 2269,19191,19193,19194
		Roller Pin for 19120			two each 1547D,2923,19192,44209 and
19128	8665	Presser Foot, for general work			four 2921
19131	8651	Shuttle (inside) Bobbin for 19324	19216	8668	Presser Foot with 228D, for strip gauge,
19131	8651	" (outside) Bobbin for 19325 and			for 25967
		19326	19219	8675	Bed Frame Cushion (leather) for 20067

No	Plate	Name
No. 19 22 0	8675	Bed Frame Cushion Spring for 20067
19220	1 8680	Wrench for 936 and 1619 (Attachments and
Tasst	9090	Accessories)
19226	8675	Bed Frame Hinge Connection for 19398
19230	8679	Guide for 31-52 Machine
19230	1148	Tension Releasing Lever (intermediate)
19201	1140	Hinge Block for 19191
19258	8683	Bobbin Winder Stop Latch with 152F and
19800	0000	1550H, for 19260
19260		Driving Arm complete for 20141, Nos. 32D
13800		75D, 180F, 427E, 693D, 1508C, 1579C, 12170
		12178,16515,16518,16530, 19258 and
		27303
19274	788	Feed Dog, 14 teeth (16 teeth to the inch)
10074	,,,,	with 19118, for 19283, for lap seam
		feller
19275	8649	Feed and Feed Lifting Eccentric with
200.0	00.20	4460
19276	8646	Needle Clamp with two 209F
19281	8673	Shuttle Race Slide (outside) for 15/32
		in. to 15/16 in. gauge
19283	788	Throat Plate, for 15/64 in. to 9/16 in
		gauge, for 19274, for lap seam fell-
		er
19287	786	Throat Plate, for 1/32 in. to 3/16 in.
		gauge, for 19338
19288	786	Throat Plate, for 3/32 in. to 5/16 in.
	•	gauge, for 19339
19289	788	Throat Plate, for 3/32 in. to 3/8 in.
		gauge, for 19344, for lap seam fell-
		er
19290	7 89	Throat Plate, for 7/32 in. to 1/2 in.
		gauge, for 19343 and 35561
19291	789	Throat Plate, for 7/32 in. to 5/8 in.
		gauge, for 19341
19294	8647	Lap Seam Feller Folder Slide Spring
19304		Face Plate for 19305
19305	8649	Face Plate complete, for 31-52 Machine
		Nos. 19155, 19304 and 19327
19309	1213	Shuttle Race Needle Guard for 19323 and
		24013
19310	8651	Shuttle (inside) Bobbin Case Latch and
		Position Finger for 19312
19311	8651	Shuttle (outside) Bobbin Case Latch and
10010	0053	Position Finger for 19313
19312	8651	Shuttle (inside) Bobbin Case complete,
		for 19324, Nos. 591F,592E,2521,19149
		19310 and 62606

- ·	Plate	Name
No.		Shuttle (outside) Bobbin Case complete,
19313	8651	for 19325 and 19326, Nos. 591F,592E,
		2521,19172,19311 and 62608
		Shuttle Race Body with 19316, for 19323.
19315		" Loop Separator for 19315
19316	1213	and 24490
	2027	Shuttle Race Ring (inside) for 19323,
19317	1213	24013 and 24493
	1016	Shuttle Race Ring (outside) for 19323
19318	1213	and 24013
	2016	Shuttle Race complete, for 3/32 in. to
19323	1213	5/32 in. gauge, Nos. 19309,19315,
		19317,19318, two each 907D,1053D,
		2533 and four 2532
	0053	Shuttle (inside) 1 11/16 in. diam., Nos.
19324	8651	19131,19136 and 19312
1000	DOEO	Shuttle (outside) 1 11/16 in. diam. for
19325	8650	7/32 in. gauge and above, Nos. 19131
		19137 and 19313
7.0500	8650	Shuttle (outside) 1 11/16 in. diam., for
19326	9000	1/32 in. to 13/64 in. gauge, Nos.
		19131, 19171 and 19313
10000	8672	Face Plate Thread Guard (lower) with
19327	0012	12152, for 19305 and 20395
10070	786	Feed Dog, 13 teeth (16 teeth to the inch)
19338	700	with 19118, for 19287, for general
		work
19339	786	Feed Bog. 9 teeth (16 teeth to the inch)
19009	,00	with 19118, for 19288, for general
		work
19340	8656	Feed Dog. 13 teeth (16 teeth to the inch)
13040	0000	with 19118, for 19190, for lap seam
		feller
19341	789	Feed Dog. 16 teeth (16 teeth to the inch)
10041	, , ,	with 19118, for 19291, for knit
		goods and general work
19343	789	Feed Dog. 14 teeth (16 teeth to the inch)
10010		with 19118, for 19290 and 35561, for
		general work
19344	788	Feed Dog. 14 teeth (16 teeth to the inch)
		with 19118, for 19289, for lap seam
		feller
19356	5772	Lifting Presser Bar Bell Crank for 43956
19357	5772	" " " " Connecting
		Link for 43956
19358	5772	Lifting Presser Bar Bell Crank Driving
•-	•	Arm for 19361
19359	5772	Lifting Presser Bar Bell Crank Driving
		Arm Shaft for 19381

•		
No.	Plate	Name
19360	8669	Lifting Presser Bar Bell Crank Driving
10000	5000	Arm Shaft Bracket for 19361
19361		Lifting Presser Bar Bell Crank Driving
15001		Arm Shaft Bracket complete, for
		31-62 Machine Nos.2049 and 19358 to
		19360
19362	5772	Lifting Presser Bar Bell Crank Driving
19002	3/16	Arm Eccentric Connection for 31-62
		Machine
19365	8669	Needle Bar Crank and Lifting Eccentric
19300	0003	with 448C and 743C, for 31-62 Ma-
19367	5773	chine
1930/	3773	
3.0760	cono	chine
19 368	5773	Vibrating Presser Bar Cushion (rawhide),
30760	cono	for 31-62 Machine
19369	5773	Vibrating Presser Bar Spring for 31-62
30770	coor	Machine
19372	5773	
3.0770		43931Shuttle Race Body for 24013
19379		
19381	8664	" Ring (outside) for 24493
19385	8673	Silde (ontside) for 31/32
		in. to 1 1/4 in. gauge
•19386	8649	Oscillating Rock Shaft for 19387
19387		Oscillating Rock Shaft complete, Nos.
		4784,12388 and 19386
19388	8646	Oscillating Shaft Crank complete, Nos.
		457C, 1518E, 1939O and 19496
19389	8646	Oscillating Shaft Crank Slide Block for
		19390
19390		Oscillating Shaft Crank Slide Block com-
		plete, for 19388, Nos. 226D,969C,
		12424 and 19389
19397	8675	Bed Frame Hinge Connection Cap for 19398
19398		19226 With
		211E and 19397, for 20067
19479	8658	Feed Dog, 7 teeth (16 teeth to the inch)
		with 19118, for 19481, for staying
		overgaiters
19480	8665	Presser Foot, for 19479, for staying
		overgaiters
19481	8658	Throat Plate with 4515, for 1/8 in. to
		5/16 in. gauge, for 19479
19482	86 59	Feed Dog, 12 teeth (16 teeth to the inch)
		with 19118, for 19484, for rounding
		overgaiters
19483	8665	Presser Foot, for 19482, for rounding
		overgaiters

No.	Plate	Name
19484	8659	Throat Plate with 240D, 19485, 19486 and
		25786, for 1/8 in. to 1/4 in. gauge,
		for 19482
19485	2085	Throat Plate Arm for 19484,20392 and
		24450
19486	2085	Throat Plate Spring Guide for 19484,
		20392 and 24450
19496		Oscillating Shaft Crank for 19388
20008		Foot Lifter complete, for 31-52 Machine
		Nos. 76D, 766D, 802D, 1521E, 4880, 4885,
		5598, 5670, 12237,12240,12241,12415,
		12416 and two 178E
•20013		Arm with 11104, 15404 and two 15405, for
		31-52 Machine
•20014		Bed
20015		Feed Lifting Rock Shaft complete, Nos.
		3043J, 12374 and 19120
20016	8677	Oscillating Shaft
20023		Lifting Presser Bar Spring (heavy) .063
		wire, for 31-62 Machine
20023	8664	Presser Bar Spring (heavy) .063 wire
20044		" Foot Plate for 20045
20045	8667	Presser Foot (hinged) complete, Nos.
20040	0007	20044, 26275 and 26276
20046	8665	Presser Foot (tube)
20047		" " Plate for 20049
20048		" Shank for 20049, 36296 and
20030		43895
20049	1224	Presser Foot (spring hinged) tube, com-
F00-±0	1001	plete, Nos. 20047,20048,26231 and
		26276
20050	1224	Presser Foot (tube) for taping
20052	1224	" for outside stays and strips
20053	1224	" (strip) for boning
20067	819	Bed Frame with two each 16555,19398,four
20001	010	each 19219,19220, six each 14010
		wood screws 1 1/4 in. No. 12 and
		eight 158C
20068	8653	Feed Dog, 18 teeth (16 teeth to the inch)
20000	0000	with 19118, for 20069, for boning
		and corset strips
20069	8653	Throat Plate, for 3/16 in. to 1/2 in.
20009	0000	gauge, for 20068
20072	8653	Feed Dog, 14 teeth (16 teeth to the inch)
20072	0000	with 19118, for 20073
00000	0657	Throat Plate, for 3/16 in. to 1/2 in.
20073	8653	-
00004	non	gauge, for 20072 Feed Dog,16 teeth (16 teeth to the inch)
20074	797	with 19118, for 20075, for knit goods
		and general work

62		NUMERICAL LIST OF PARTS
No.	Plate	Name
20075	797	Throat Plate, for 17/32 in. to 13/16 in. gauge, for 20074
20076	797	Feed Dog, 13 teeth (16 teeth to the inch) with 19118, for 20077, for heavy lap seam feller
20077	7 97	Throat Plate, for 17/32 in. to 13/16 in. gauge, for 20076, for heavy lap seam feller
20079	8654	Throat Plate, for 17/32 in. to 13/16 in. gauge, for 20316
20081	8654	Throat Plate, for 3/32 in. to 1/4 in. gauge, for 20294
20084	799	Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 20085, for general work
20085	7 99	Throat Plate, for 27/32 in. to 1 1/4 in. gauge, for 20084
20086	79 9	Feed Dog, 9 teeth (16 teeth to the inch) with 19118, for 20087 and 43965, for heavy bolting cloth and lap seam feller
20087	799	Throat Plate, for 3/16 in. to 5/16 in. gauge, for 20086
20088	800	Feed Dog, 13 teeth (16 teeth to the inch) with 19118, for 20089, for heavy lap seam feller
20089	800	Throat Plate, for 27/32 in. to 1 1/4 in. gauge, for 20088, for heavy lap seam feller
20091	8688	Rock Shaft for 20465
20103	800	Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 20104 and 43964, for lap seam feller
20104	800	Throat Plate, for 3/32 in. to 1/8 in. gauge, for 20103, for lap seam feller
20129		Presser Foot Plate for 20131
20130		" " Shank for 20131
20131	8667	Presser Foot (hinged) complete, hollowed across bottom between needle holes and heel for riding seams, for general work, Nos. 18055,20129 and 20130
20141		Driving Attachment with Bobbin Winder and Treadle complete, Nos. 210D,692D, 12475,16592,16594,19260,20372,24355, 27072,27308,44176,126213 and two 65D.
20168		Presser Foot Plate for 20170
20169		" Shank for 20170 and 44187

No.	Plate	Name
20170	8667	Presser Foot (hinged) complete, 5/32 in.
		and above, for rounding overgaters, Nos. 20168, 20169 and 26276
20171	8665	Presser Foot (tube) for cording and cov-
		ering one cord with strip
20188	8649	Needle Bar Crank with 858C and 1065C, for
		31-52 Machine
2 0195	8657	Feed Dog, 15 teeth (18 teeth to the inch)
, ,		with 19118, for 20196, for lap seam feller.
20196	8657	Throat Plate, for 3/16 in. to 1/2 in.
20100	0001	gauge, for 20195, for lap seam fell-
20197	8648	Crank Connecting Rod with two 896C
20197	2077	Feed Dog, 16 teeth (16 teeth to the inch)
20219	. 2011	with 19118, for 20280, for knit
		goods and general work
20280	2077	Throat Plate, for 27/32 in. to 1 1/4 in.
20000	2011	gauge, for 20279
20294	8659	Feed Dog, 15 teeth (16 teeth to the inch)
		with 19118, for 20081
20302	8665	Presser Foot with guide on bottom to the
		right of needle holes
20307	8685	Bobbin Winder Frame for 20308
20308	8685	Bobbin Winder Frame complete for 20309,
		Nos. 333D,5960,5961,5963,15077 and 20307.
20309		Bobbin Winder complete, for 12358, Nos.
		32D,180F,12168,12170 and 20308
20316	8654	Feed Dog, 14 teeth (16 teeth to the inch)
		with 19118, for 20079
20317	8662	Feed Dog, 15 teeth (16 teeth to the inch)
		with 19118, for 20318, for shirt
		closing parts, for 31-52 Machine
20318	8662	Throat Plate, for 1/32 in. to 1/4 in.
		gauge, with 2653, for 20317, for
		shirt closing parts, for 31-52 Ma-
		chine
20333		Feed Rock Shaft complete, Nos. 12379 and
		29633
20340	8682	Lifting Lever with 448C, for 20341,43928
		and 43931
20341		Knee Lifter complete, (power table or
		stand No. 25265) Nos. 76D,766D,802D,
		1521E,5598,12250,12415,12416,19372,
20371	00.00	20340,21301 and two 178E
	8683	Driving Arm Pitman Crank for 44176
20372	8683	" " " Spring for 20141

		•
No.	Plate	Name
20373	8652	Feed Dog, 10 teeth (16 teeth to the inch)
		with 19118, for 20375, for edge
		stitching on curves, for shirt bo-
		SOMS
20374	8665	Presser Foot with guide on bottom to the
	0050	right of needle holes, for 20373 Throat Plate, for 3/32 in. to 3/16 in.
20375	8652	
00000	8652	gauge, for 20373 Feed Dog, 13 teeth (16 teeth to the inch)
20383	\$00a	with 19118, for 20384
20384	8652	Throat Plate, for 3/32 in. to 3/16 in.
20004	0002	gauge, for 20383
20387	8657	Feed Dog, 16 spiked teeth (16 teeth to
2000,	0001	the inch) with 19118, for 20388, for
		heavy lap seam feller
20388	8657	Throat Plate, for 33/64 in. to 13/16 in.
		gauge, for 20387, for heavy lap seam
		feller
20391	2085	Feed Dog, 16 teeth (16 teeth to the inch)
		with 19118, for 20392
20392	2085	Throat Plate with 240D, 19485, 19486, and
		25786, for 17/32 in. gauge, for 20391
		for under strip
20395	8670	Face Plate Complete, for 31-62 Machine,
		Nos. 19155,19327 and 20475
20462	8688	Rock Shaft Knee Arm Hub with 356C, for 20463
20463		Rock Shaft Knee Arm complete for 20465,
20403		Nos. 2765, 2767 and 20462
20464	8688	Rock Shaft Lifting Arm with 356C, for
#0.40.4	0000	20465
20465	8688	Rock Shaft complete, for 20466 and 43931
		Nos. 2764,16128, 20091, 20463,20464
		and two 2770
20466		Knee Lifter complete (stand No. 25255)
		for 31-52 Machine, Nos. 76D,766D,
		802D,1521E,5598,12237,12240,12241,
		12415,12416,20465 and two 178E
20475		Face Plate for 20395
20482	5773	Lifting Presser Foot for 31-62 Machine
20483	5773	Vibrating Presser Bar Foot for 31-62 Ma-
	- man	chine
21301	5773	Lifting Lever Link for 20341, 43928 and
OTOE	OFTA	43931 Driving Attachment Treadle Bracket
23258	8674	(left) Hook Friction Washer for
		126206

No.	Plate	Name
24013	8664	Shuttle Race complete, for 11/64 in gauge
		and above, Nos. 19309,19317,19318,
		19379, two each 907D, 1053D, 2533 and
		four 2532
24129	1144	Thread Take-up Crank
24131	8 64 5	Arm Oil Tube with 52045, for oiling 19275
24203	2070	Ruffling Blade Holder for 35305,35812
24204	2070	and 36004
K4K04	2010	Ruffling Blade Holder Spring for 35305, 35812 and 36004
24205	2070	Ruffling Blade Holder Spring Stop for
		35305,35812 and 36004
24206	2070	Ruffling Blade Holder Stud for 35305,
		35812 and 36004
24355	8683	Driving Attachment Balance Wheel Oil
		Cover for 20141
2444 9	8658	Feed Dog, 15 teeth (16 teeth to the inch)
		with 19118, for 24450, for rounding
24450	8658	overgalters
24400	0000	25786, for 3/16 in. to 5/16 in.gauge
		for 24449
24462	8656	Feed Dog, 13 spiked teeth (16 teeth to
		the inch) with 19118, for 19190, for
		lap seam feller
24490		Shuttle Race Body with 19316, for 24493.
24492	1241	" Needle Guard for 24493
24493	1241	Shuttle Race complete, for 1/32 in. to
		5/64 in. gauge, Nos. 19317, 19381,
		24490,24492, two each 907D,1053D,
04500	0000	2533 and four 2532
24 589	3669	Lifting Presser Bar Guide Bracket with 453C, for 43956
24590	8669	Lifting Presser Bar Guide Bracket Sup-
2000	0000	port for 31-62 Machine
25786	2085	Throat Plate Arm Rivet for 19484, 20392
		and 24450
25888	8662	Hemmer Tongue for 26487, for shirt clos-
		ing parts, for 31-52 Machine
25967	8668	Presser Foot Strip Gauge for 19216
25992	8681	Quilter Guide Holder with two 207F, for
		28600
26026	8680	Screw Driver (large) Attachments and Ac-
00002	000	cessories
26061	989	Tape Holder Bracket Wire with Disc, for 28063
26062	989	Tape Holder Disc (adjustable) with 35925
2000	500.	and 51224D, for 26063

90		NUMERICAL LIST OF PARTS			NUMERICAL LIST OF PARTS 87
No.	Plate	Name	No.	Plate	Name
26063	989	Tape Holder (straight) complete, for	26383	8656	Presser Foot (hinged) complete, for X
		26065, Nos. 26061 and 26062			heavy, XX heavy and XXX heavy lap
26064	8669	Tape Holder Foot with 736J and three			seam feller, Nos. 26276,26382 and
,		wood screws 1 in. No. 12, for 26343.	I		26395
26065		Tape Holder with Foot (8 in. disc) com-	26395		Presser Foot Shank for 26383
		plete, Nos. 26063 and 26325	•26396		Lap Seam Feller Folder for 26397
26066	989	Tape Holder Bracket Wire for 26067	26397	8681	Lap Seam Feller (left hand) complete,
26067		Tape Holder Bracket Wire complete, for			Nos. 18114 and 26396
		26074, Nos. 26066,26068 and 26072	26404	1224	Presser Foot (tube) for reeding
26068	989	Tape Holder Disc for 26067 and 26071	26405		" Plate for 26406
26069	989	" " Hub for 26071	26406	1224	Presser Foot (tube) hinged complete, for
2607 0		" " Rivet for 26071			reeding, Nos. 26275,26276 and 26405.
26071		Tape Holder Disc complete for 26074, Nos.	26407	1224	Presser Foot, for double strips (tube)
		26068 and 26069			for reeding
26072	989	Tape Holder Tape Guide for 26067	26408	1224	Presser Foot, for double strips (tube)
26073	8663	" Tension Adjusting Collar	26409		" Plate for 26410
		with 51224B, for 26074	26410	1224	Presser Foot, for double strips (tube)
26074	989	Tape Holder (offset) complete, for 26343	1		hinged complete, Nos. 26275, 26276
		Nos. 13211,26067,26071 and 26073			and 26409
26228	2069	Ruffler Needle Clamp Roller for 35307	26411	8666	Presser Foot (strip folding) for cording
26231	86 67	Presser Foot Spring for 20049, 36296,	•26412		Strip Folder for 26413
		43895 and 43975	26413	8679	" on Slide, Nos. 18114 and
26266	8681	Stay Guide Plate (lower) for 26268			26412
26267	8681	" " (upper) for 26268	26414	8666	Presser Foot (strip folding) for opening
2626 8		Stay Guide complete, Nos. 26266 and 26267			seams and enclosing folded edges
• 2 6 2 69		Lap Seam Feller Folder for 26272	26415	8666	Presser Foot (strip folding) for short
26272	8681	Lap Seam Feller (right hand) complete,	1		strips
		Nos. 18114 and 26269	26416	8666	Presser Foot (strip folding) with guide
26275		Presser Foot Shank for 20045,26406,26410			for opening seams
		26418,26519,28802 and 35196	26417		Presser Foot Plate for 26418
26276	8667	Presser Foot Hinge Pin for 20045, 20049,	26418	8666	Presser Foot (strip folding) hinged com-
		20170,26383,26406,26410,26418,26519,	İ		plete, with guide for opening seams,
		28802,35196,35804,35887,36296,43895,			Nos. 26275, 26276 and 26417
:		43975 and 44187	26485	8680	Screw Driver (small) Attachments and Ac-
26279	8668	Presser Foot Extension, 1/16 in., for			cessories
		19216	26487	8662	Hemmer (foot) for felling, for shirt
26280	8668	Presser Foot Extension, 1/8 in., for			closing parts, for 31-52 Machine
		19216	26488	8662	Throat Plate Cloth Guide for shirt clos-
26281	8668	Presser Foot Extension, 1/4 in., for	· ·		ing parts, for 31-52 Machine
		19216	2648 9	8662	Throat Plate Spring Guide, for shirt
26262	8668	Presser Foot Extension, 3/8 in., for			closing parts, for 31-52 Machine
		19216	26518		Presser Foot Plate for 26519
26283	8668	Presser Foot Extension, 1/2 in., for	26519	2679	Presser Foot (hinged tube) complete, for
00500	0000	19216			double strips, for reeding, Nos.
26325	8669	Tape Holder Foot with 736J and three	1		26275,26276 and 26518
00040		wood screws 1 in. No. 12, for 26065.	26565	2071	Lap Seam Feller (right hand) on Slide
2634 3		Tape Holder with Foot (10 in. disc) com-			18114 to fold top only
00000		plete, Nos. 26064 and 26074	26574	8666	Presser Foot for gathering
26382	· -	Presser Foot Plate for 26383			

		•
No.	Plate	Name
26725	1328	Feed Dog, 10 teeth (16 teeth to the inch)
		with 19118, for 26726,36310,36311
Octoo	1800	and 36543, for 31-52 Machine
26726	1328	Throat Plate, for 5/32 in. to 1/2 in.
		gauge, for under strip, for 26725, for 31-52 Machine
26763	8670	Spool Holder Bracket with 219F and
		50053D, for 26764
26764	8670	Spool Holder (disc) complete, Nos. 691F, 19066,19067 and 26763
26887	5646	Presser Foot (strip folding) with two
		tubes, for stitching two rows of
1 1		soutache braid on the folded strip
26965	2660	Edge Folder (left hand) on slide com-
		plete, with right hand upper guide,
		for folding bobbinette curtains and
		inserting edge of lace
27072		Driving Attachment Shaft Driving Pulley
		(sectional grooved) 12 in. diam.,
		1 3/16 in. bore, with two 597C, for
		20141
27302	8669	Bobbin Winder Frame for 27875
27303	8676	" Spring for 27875
27303	8676	" Stop Latch Spring for 19260
27306	8686	Bobbin Winder Spool Pin for 27308
27307	8686	" " Stand for 27308
27308	8686	Bobbin Winder Spool Stand complete, for
		20141 and 27876, Nos. 418E,1562J,
		2106,10141,11241,27306,27307 and two
		each 2455 and wood screws 1 in. No.
		10
27538	8669	Bobbin Winder Spindle 27849 with 15072,
		27850 and 41828, for 27875
27540	8669	Bobbin Winder Base for 27875
27541	8669	Pulley for 27875
27587	8686	Stop Laten for 27875
27637	8687	Driving Attachment Treadle Pitman Rod (lower) for 14233
27739	867 0	Thread Cone (wood) for large cones, for
21103	0070	225258
•27849		Bobbin Winder Spindle for 27538
2785 0		" " Collar for 27538
27875		" Nos. 35D, 1620J, 27302, 27303
		27538,27540,27541,27587,50356D and
		two wood screws 1 in. No. 7, for
		27876

No.	Plate	Name
27876		Bobbin Winder (swinging automatic, right
		hand) complete, for 19131 for stand
		Nos. 27308 and 27875
28590	2070	Ruffler Driving Lever for 35305, 35812 and 36004
28591	2070	Ruffler Driving Lever Spring for 35305, 35812 and 36004.
28592	2 0 7 0	Ruffler Driving Lever Spring Collar for 35305, 35812 and 36004
28593	1255	Ruffler Frame for 35812
28596		Presser Foot (right) Shank for 35809
28597	1255	" " " Cap for 35812
28600	2070	Ruffling Blade Lever for 35305
28601	2070	Ruffler Starting Lever with 190D, for 35305, 35812 and 36004
28607	2070	Puffling Plade Holder Char for 76705
20007	2070	Ruffling Blade Holder Stop for 35305, 35812 and 36004
28659	8681	Quilter Guide for 28660
28660	8681	Quilter complete, Nos. 25992 and 28659.
28801		Presser Foot Plate for 28802
28802	8666	
20002	0000	Presser Foot (hinged) strip folding complete, Nos. 26275,26276 and 28801
28934	2660	Edge Folder (right hand) on slide com-
		plete, with left hand upper guide,
		for folding bobbinette curtains and
		inserting edge of lace
28994	2116	Tape Holder (5 in. disc) complete, Nos.
		55D,36795,36796 and two wood screws 1 1/4 in. No. 10
28995	2670	Presser Foot, for braiding
29633	8664	Feed Rock Shaft Crank with 157J, for
		20333
35071	267 0	Presser Foot (strip folding) for folding
		strip and inserting piping on each
25000	0000	edge of strip
35 080	2679	Edge Folder to turn the goods in, use with 35081
3 5081	2679	Presser Foot (hinged) strip folding with
35083	2681	tape guide, for 35080 Presser Foot strip folding for
00000	2002	straight cut goods to turn under the right and left edges 5/16 in., with guide for interlining
35102	2681	Strip Folder on Slide 18114, for folding strip so that both edges will meet in the center, for belt loops for
35103	2681	trousers Presser Foot (tube) for 35102

70		NUMERICAL LIST OF PARTS
No.	Plate	Name
35111	2670	Presser Foot with upper and lower strip folder, for 1/4 in. to 5/8 in. gauge.
35132	8679	Strip Folder on Slide 18114 to turn
		both edges up, so that the edges will
35133	2685	meet in center, for garters Presser Foot (strip folding) to turn
00,100	2000	under both edges 1/4 in., for garters
		for 35132
35194 35195	5646	Presser Foot, for gathering " Plate for 35196
35196	8656	Presser Foot (hinged) complete, for 3/32
		in. to 3/8 in. gauge, for light, med-
		ium and heavy lap seam feller, Nos. 26275, 26276 and 35195
35259	2679	Presser Foot (strip folding) with tape
35287	2059	guideGuide (hinged) right hand complete, for
, 3080 r	2009	closing front seams on straight front
		corsets, Nos. 36224,36225 and 50094D.
35288	2059	Presser Foot with guide on bottom to the left of needle holes, for 35287
35289	2059	Guide (hinged) left hand complete, for
		closing front seams on straight front
35290	2059	corsets, Nos. 36226,36227 and 50094D. Presser Foot with guide on bottom to the
00230	2000	right of needle holes, for 35289
35300	8679	Edge Folder (left hand) on slide com-
		plete, to turn edge under with right hand lower guide, for turning silk
		bolting cloth and stitching cotton
acan.		webbing and ticking
35301	8679	Shuttle Race Slide Guide (front) with 651E and 19147, for 35287 and 35289
35302	2070	Ruffler Frame for 35305 and 36004
35303 35304	2070 2 0 70	Presser Foot for 35305 and 36004 Ruffling Blade for 35305
35305	2069	Ruffler (power) complete, with lever, for
		throwing ruffling blade into action,
		for intermittent ruffling, for shirt yokings, etc., for 35308, Nos. 185H,
		226J,560B,1049D,1101C,1550H,1603E,
		16470,24203 to 24206,28590 to 28592,
		28600,28601,28607,35302 to 35304, 35307 and two 665J
35306		Ruffler Needle Clamp Body for 35307
353 0 7	2069	Ruffler Needle Clamp complete, Nos.26228
		35306 and two 209F, for 35305, 35812 and 36004

		•
No.	Plate	Name
35308	2071	Strip Folder on Slide 18114, with upper
		right hand edge folder to turn the goods under, with separating blade
		and guide for draw string, for 35305
		and 36004
35309	2071	Strip Folder on Slide 18114 with sepa-
		rating blade and guide for draw string, for 35305
3 5310	2071	Strip Guide on Slide 18114, with guide
		for draw string, for 35305
35311	2072	Edge Folder (left hand) on Slide com-
		plete, to turn the goods up with
		separating blade and right hand up- per guide, for 35305
35312	2072	Ruffling Blade for 35311
35362	8666	Presser Foot with upper and lower strip
	0000	folder
35542	1003	Presser Foot (tube) for strip with two
		tubes for braid, to stitch braid to
		each edge of strip
35556	1245	Presser Foot (left) for 35560
35557	1245	" (right) for 35560
35558	1245	" "Shank (left) with 7311 for
		35560
3 5 5 59	1245	Presser Foot Shank (right) with 7311 for 35560
3 5560	1245	Presser Foot (compensating) complete for
		35561, Nos. 106D,220D,7308 to 7310, 35556 to 35559 and two 62527
35561	1245	Hemmer (double) on Slide, for 3/32 in.to
		3/16 in. hem, for hemming two pieces
		in one operation for skirt ruffler.
		etc
35691	1248	Binder on Slide 18114, for 1/2 in. to
		1 1/2 in. ribbon binding, for blan-
		kets, for 31-62 Machine
35692	8677	Binder on Slide 18114, for 1 9/16 in. to
		2 1/2 in. ribbon binding, for blan-
•		kets, for 31-62 Machine
3 5693	8677	Binder on Slide 18114, for 2 9/16 in. to
		3 1/2 in. ribbon binding, for blan-
3 5004	1010	kets, for 31-62 Machine
35694	1249	Feed Dog,21 teeth (16 teeth to the inch)
		with 19118, for 35691 to 35693 and 35695
35695	1249	Throat Plate for 3/16 in. to 5/16 in.
		gauge, for 35691 to 35694
35696	1249	Lifting Presser Foot for 35691

No.	Plate	Name
35697	1249	Vibrating Presser Foot for 35691
35698	1249	Lifting Presser Foot for 35692 and 35693
35699	1249	Vibrating Presser Foot for 35692 and 35693
35702	1251	Strip Folder on Slide 18114 with lining
. 20,		guide, for making side straps for trousers
35703	1251	Presser Foot for 35702
35801	1254	Strip Folder on Slide 18114 with guides,
•		for steel and interlining
35802		Presser Foot Plate for 35804
35803		" " Shank for 35804
35804	1254	Presser Foot (hinged) complete, for 35801, Nos. 26276,35802 and 35803
35807	1255	Presser Foot (left) for 35812
35808		" (right) Plate for 35809
35809	1255	Presser Foot (right) complete for 35812,
		Nos. 2521,28596,35808 and 62527
35810	1255	Ruffling Blade for 35812
35811	1255	" Lever for 35812
35812	1255	Ruffler (power) complete, with lever for
		throwing ruffling blade into action, for intermittent ruffling, for shirt yokings, etc., for 35813, Nos. 185H, 226J,560B,706J,1C49D,1101C,1550H, 1603E,1647C,2656,24203 to 24206, 28590 to 28593,28597,28601,28607, 35307,35807,35809 to 35811, two 665J and three 198D.
35813	1256	Double Edge Folder (right hand) with separating blade, for ruffling shirt
35814	8663	body and putting in yoke, for 35812. Feed Dog, 8 teeth (16 teeth to the inch) with 19118, for 35812 and 35815
35815	8663	Throat Plate, for 3/16 in. to 3/8 in. gauge, for 35812 and 35814
35835	8666	Presser Foot (strip folding) with tongue slotted for interlining and guide for steel
35878	1254	Strip Folder on Slide 18114 with guide for interlining
35885		Presser Foot Plate for 35887
35886		" " Shank for 35887
35887	5797	Presser Foot (strip folding) hinged.com-
	- · • ·	plete, with guide for draw string, Nos. 26276,35885 and 35886
35925	8663	Tape Holder Disc Hub for 26062

No.	Plate	Name
35945	5794	Edge Guide (double) on slide, left hand
		lower, right hand upper, slide
		grooved for taping
35994	5794	Edge Folder (double) on slide 18114
36002	57 95 .	Ruffling Blade for 38004
36003	5 7 95	" Lever for 36004
36004	5 7 95	Ruffler (power) complete, with lever, for
		throwing ruffling blade into action,
		for intermittent ruffling, for shirt
		yokings, etc., for 35308, Nos. 185H,
		226J,560B,1049D,1101C,1550H,1603E,
_		1647C,24203 to 24206,28590 to 28592,
		28601,28607,35302,35303,35307,36002,
		36003 and two 685J
36077	5796	Strip Folder on slide 18114, for light
= 40000	5500	material, for making straps
36078 36089	5796 5797	Presser Foot for 36077
20009	5/9/	" (strip folding) for long
36224	2059	stripsGuide (right hand) for 35287
36225	2059	" " Hinge Plate for 35287
36226	2059	" (left hand) for 35289
36227	2059	" " Hinge Plate for 35289.
36295		Presser Foot Plate for 36296
36296	1003	Presser Foot (tube) spring hinged com-
		plete, with guide for opening seams,
		Nos. 20048,26231,26276 and 36295
36297	5798	Presser Foot with upper and lower strip
		folder, for $11/16$ in. to $1 1/4$ in.
		gauge
36310	2086	Throat Plate, for 5/32 in. to 1/2 in.
		gauge, for two under strips, for
		26725, for 31-52 Machine
36311	2086	Throat Plate, for 5/32 in. to 1/2 in.
		gauge, for two under strips with ad-
		justable under strip guide, for
36312	2086	26725, for 31-52 Machine
SUSTE	2000	Feed Dog, 10 teeth (16teeth to the inch)
		with 19118, for 36313 to 36316, for 31-52 Machine
36313	2086	Throat Plate, for 17/32 in. to 13/16 in.
00010	2000	gauge, for under strip, for 36312,
		for 31-52 Machine
36314	5800	Throat Plate, for 17/32 in. to 13/16 in.
		gauge, for two under strips, for
		36312, for 31-52 Machine
36315	5800	Throat Plate, for 17/32 in. to 13/16 in.
		gauge, with adjustable under strip
		guide, for 36312, for 31-52 Machine.

		•
No.	Plate	Name
36316	8660	Throat Plate, for 17/32 in. to 13/16 in.
		gauge, for two under strips with ad-
		justable under strip guide, for
		36312, for 31-52 Machine
36317	5802	Feed Dog, 10 teeth (16 teeth to the inch)
		with 19118, for 36318, for 31-52 Ma-
		chine
36318	5802	Throat Plate, for 53/64 in. to 1 1/4 in.
		gauge, for under strip, for 36317,
		for 31-52 Machine
36321	2662	Feed Dog, 6 teeth (16 teeth to the inch)
		with 19118, for 35305 and 36322
36322	2662	Throat Plate, for 17/32 in. to 13/16 in.
		gauge, for 35305 and 36321
36323	2663	Feed Dog, 6 teeth (16 teeth to the inch)
		with 19118, for 35305 and 36324
36324	2663	Throat Plate, for 27/32 in. to 1 1/4 in.
		gauge, for 35305 and 36323
364 90	8679	Edge Guide for 36493 strip Folder (lower) on Slide for 36493.
36491	8679	" (upper) on Bracket for
36492	8679	36493
36493	867 9	Strip Folder (lower and upper) complete,
20493	0079	with edge guide, for 31-62 Machine,
		for banding knee pants, Nos. 793B,
		1425B,1443B and 36490 to 36492
36494	8654	Feed Dog, 21 teeth (16 teeth to the inch)
00.00		with 19118, for 36493 and 36496
36495	8655	Lifting Presser Foot for 36493
36496	8654	Throat Plate, for 17/32 in. to 13/16 in.
		gauge, for 36493 and 36494
36497	8655	Vibrating Presser Foot for 36493
36543	8660	Throat Plate, for 5/32 in. to 1/2 in.
		gauge with adjustable under strip
		guide, for 26725, for 31-52 Machine.
36606	8655	Feed Dog, 21 teeth (16 teeth to the inch)
		with 19118, for 38493 and 38607
36607	8655	Throat Plate, for 3/8 in. to 1/2 in.
		gauge, for 36493 and 36606
36795	2116	Tape Holder Body for 28994
36796	2116	" Cover for 28994
36 880	8681	Lap Seam Feller (left hand) on Slide
42.400	0000	18114 to fold top only Machine Rest Pin (wood) Attachments and
41400	8680	Accessories
47.000	8647	Bobbin Winder Spindle Collar Pin for
41828	0047	27538
41929	8677	Belt Guard for 41931
41939	8686	" " Hinge for 41931
41900	0000	

No.	Plate	Name
41931		Belt Guard complete, Nos. 8420, 41929,
		two 41930 and four wood screws 3/4
		in. No. 9
43894		Presser Foot Plate for 43895
43 895	8667	Presser Foot (spring hinged) tube com-
		plete, for taping Nos. 20048,26231,
		26276 and 43894
43 928		Foot Lifter complete, for 31-62 Machine,
	***	Nos. 76D, 766D, 802D, 1521E, 4880, 4885,
		5598,5670,12415,12416,19372,20340,
42023		21301 and two 178E
43931		Knee Lifter complete (stand No. 25255)
		for 31-62 Machine, Nos. 76D, 766D,
		802D,1521E,5598,12415,12416,19372,
43944	8649	20340,20485,21301 and two 178E Tension Releasing Lever
•43948		Arm with 11104,15404 and two 15405, for
20010		31-62 Machine
43949	5773	Vibrating Presser Bar for 43956
43956		Lifting Presser Bar Guide Bracket com-
		plete, for 31-62 Machine, Nos. 19356
		19357,24589,43949 and three 199D
43964	2082	Throat Plate (flush) for 3/32 in. to 1/8
		in. gauge, for 20103
43 965	2082	Throat Plate, for 3/16 in. to 5/16 in.
		gauge, for 20086, for lap seam fell-
		er
43973		Presser Foot Plate for 43975
43974		" Shank for 43975
43975	8667	Presser Foot (spring hinged) complete,
		for bolting cloth, Nos. 26231,26276,
43976	8648	43973 and 43974
40970	0040	Feed Lifting Rock Shaft Crank Connecting
44139	8675	Rod (cast iron) with two 968E Machine Hinge Plate for 44140 and 44180
431 00	00.0	(Attachments and Accessories)
44140		Machine Hinge complete, Nos. 12361,44139
		and merlized wood screw 1 1/4 in.No.
		14 (Attachments and Accessories)
•44176		Driving Attachment Starting Crank Shaft
		12477 with 12479,20371 and two 2022,
		for 20141
44180		Machine Hinge complete, Nos. 6055,12361,
		44139 and 51075E (Attachments and
•		Accessories)
44186		Presser Foot Plate for 44187
44187	. 8667	Presser Foot (hinged) complete, for 1/8
	•	in. gauge and below for rounding
		overgaiters, Nos.20169,26276 and
		44186

No.	Plate	Name
44209		Tension Screw Stud 916C with 1560C, for
		19195
44212	8678	Drip Pan with four 1 in. wire nails
46681	8683	Driving Attachment Treadle Bracket
FOOFER	8663	(right) for 60502 Spool Holder Bracket Thumb Screw for
50053D	9000	26763
50094D	2059	Guide (left hand) Hinge Screw for 35289.
50094D	2059	" (right hand) Hinge Screw for 35287
50356D	8676	Bobbin Winder Frame Hinge Screw for
		27875
51075E	8675	Machine Hinge Bolt with 51581E, for
		44180 (Attachments and Accessories).
51224D	8645	Arm Side Cover Thumb Screw
51224D	8645	Face Plate Thumb Screw
51224D	864 5	Tape Holder Disc Hub Thumb Screw for
		26062
51224B	8645	Tape Holder Tension Adjusting Collar Thumb Screw for 26073
51581E		Machine Hinge Bolt Nut for 51075E (At-
CIOCIE		tachments and Accessories)
52016	8664	Presser Bar Lifter
52045	8645	Arm Oil Tube Packing (wick) for 11119
4		and 24131
56848		Bell Crank 5596 with 5599 and 5601, for
		5598
56864	8682	Chain Hook (large) for 5670
56865	8682	" (small) for 5870
60502		Driving Attachment Treadle Bracket
		(right) 48681 with two wood screws 1
	. 0050	in. No. 14, for 126209
62527	8 6 50	Presser Foot Hinge Pin for 35560 (right) Hinge Pin for 35809
62527 62606	965 0	Shuttle (inside) Bobbin Case for 19312
62608		" (outside) Bobbin Case for 19313.
62624	8672	Face Plate Thread Guard (upper) for
	*****	19155
80223	8687	Driving Attachment Treadle Pitman Rod
		Clamp with 361C, for 14233
120157	8665	Presser Foot (double tube) for two
		strips
120193	8661	Feed Dog, 12 teeth (16 teeth to the inch)
		with 19118, for 120195 and 120196
120194	8661	Presser Foot for 120196
120195	8661	Throat Plate, for 1/2 in. to 3/4 in.
100100	0001	gauge, for 120193 and 120196
120196	8661	Strip Folder on 18114, for 31-52 Machine for hemming the right hand edge and
		turning over the left hand edge, for
		army shirts

No.	Plate	Name
120341	8680	Tweezers (curved) Attachments and Acces-
		sories
120346	8680	Oiler (copper plated) with 120347 (At-
		tachments and Accessories)
120347	8680	Oiler Spout, 8 1/2 long, for 120346 (At-
		tachments and Accessories)
120387	8681	Hemmer on Shank, for handkerchief work
120452	8681	1/32 in. to 1/8 in.
		gauge, for Windsor ties
120479	8212	Quilter Guide (left) for 120485
120480	8212 8212	(right) for 120485
120481 120482	0212	" Bracket for 120482
120402		TSC40T MICH TSC400
120483	8212	and two 2090, for 120485 Quilter Guide Disengaging Sleeve, for
120400	OSIS	120482
120484	8212	Quilter Guide Disengaging Sleeve Spring
		for 120485
120485		Quilter complete, Nos. 602D, 120479, 120480
		120482 and 120484
126036	8678	Driving Attachment Treadle for 126209
126205	8683	" " Bracket (left)
		for 126206
-126206		Driving Attachment Treadle Bracket
		(left) complete, for 126209, Nos. 23258,126205,126207,126208 and two
		wood screws 1 in. No. 14
126207	8683	Driving Attachment Treadle Bracket
, -	****	(left) Hook for 126206
126208	8674	Driving Attachment Treadle Bracket
		(left) Hook Rivet for 126206
126209		Driving Attachment Treadle complete for
		126213, Nos. 60502,126036 and 126206
126213		Driving Attachment Treadle and Pitman
		complete for 20141, Nos. 14233 and
132590	8645	126209
150203	20335	Arm Oil Tube Packing (wick) for 12454 Thread Unwinder Spool Rest Cushion
100203	20000	(felt) for 225258
150208	8685	Driving Attachment Treadle Pitman Rod
10000	5550	(lower) Spring for 14233
200056E	8676	Bobbin Winder Stop Latch Screw for
		225382
200082D	8676	Bobbin Winder Tension Bracket Screw for
		225382
200299H	8676	Bobbin Winder Stop Latch Trip Lever
		Hinge Screw for 225382
200380C	8676	Bobbin Winder Pulley Set Screw for
		202473
		•

7 8		NUMERICAL LIST OF PARTS
No.	Plate	Name
2003830	8671	Thread Unwinder Spool Rest Rod Set Screw for 202490
201018C	8671	Thread Unwinder Spool Rest Set Screw for 225257.
201499B	8686	Bobbin Winder Tension Stud for 225461
201572B	8676	" " Thumb Nut for 225462.
20169 6 J	8671	Thread Unwinder Thread Guide Lock Nut for 225258
202277	8676	Bobbin Winder Frame Oil Packing (wick) for 225453
202407	8676	Bobbin Winder Tension Spring for 225462.
202473	8686	" Pulley with 200380C, for 225382
202478	8686	Bobbin Winder Stop Latch Trip Lever for 225382
202490	2 0 33 5	Thread Unwinder Spool Stand with 200383C for 225258
225257	20335	Thread Unwinder Spool Rest with 201018C, for 225258
225258	20335	Thread Unwinder complete, for two spools
		or two large cones of thread, Nos. 201696J,202490,225257,225324,225326, 225388, two each 150203,225391 and
		three wood screws 7/8 in. No. 12
225322	8671	Thread Unwinder Thread Guide Rod Washer for 225324
225324	20335	Thread Unwinder Thread Guide Rod with 208E and 225322, for 225258
225326	20335	Thread Unwinder Thread Guide Position Cup for 225258
225381	8686	Bobbin Winder Spindle for 225382
225382	8678	Bobbin Winder (swinging automatic, right hand) complete, for 19131, for power table, Nos. 200056E,200082D,200299H,
•		202473,202478,225381,225433,225444,
		225453 to 225456,225458,225462, 228026, two each 225459 and wood
225388	20335	screws 3/4 in. No. 12 R.H.B Thread Unwinder Spool Rest Rod for
225390	867 0	225258 Thread Cone Holder for inverted cones,
225391	20335	for 225258
225433	8678	Bobbin Winder and Tension Bracket Base
225438	8676	for 225382 Bobbin Winder Frame Oil Well Cap for
NO CHOU	90.10	POODIN WINGEL FLANGE OIL MEIT CED LOL

NUMERICAL LIST OF PARTS

79


No.	Plate	Name
225444	8686	Bobbin Winder Stop Latch for 225382
225453	8686	" Frame with 202277, 225438,
		for 225382
225454	8686	Bobbin Winder Frame Hinge Pin for 225382
225455	8676	" " Spring for 225382
225456	8676	" " " Plunger for
		225382
225458	8686	Bobbin Winder Stop Latch Thumb Lever for
		225382
225459	8676	Bobbin Winder Stop Latch Thumb Lever
		Hinge Stud for 225382
225459	8676	Bobbin Winder Stop Latch Thumb Lever
		Joint Stud for 225382
225461	8686	Bobbin Winder Tension Bracket with
		201499B, for 225462
225482		Bobbin Winder Tension Bracket complete
		for 225382, Nos. 201572B,202407,
		225461 and two 2102
228026	8676	Bobbin Winder Tension Bracket Screw
		Washer for 225382

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1


Needles in Containers marked
"For Singer Machines"
are not Singer made needles.

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1


Needles in Containers marked "For Singer Machines" are not Singer made needles.

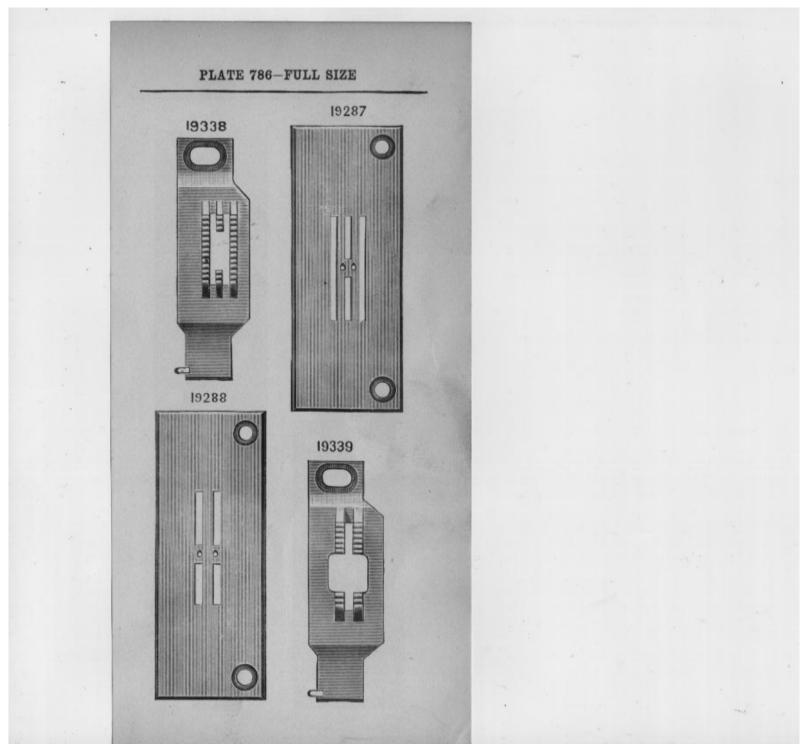


From the library of: Superior Sewing Machine & Supply LLC

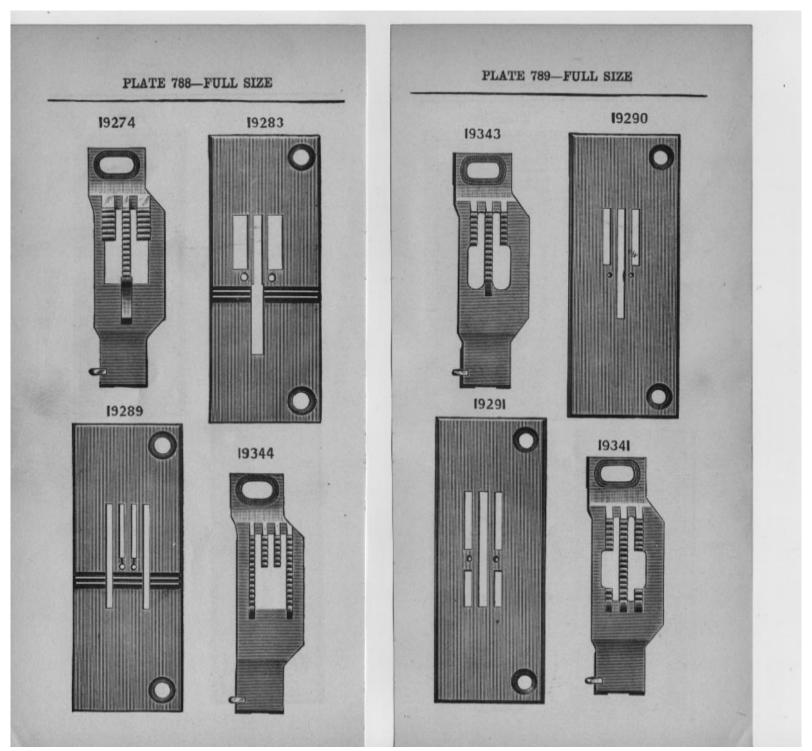


From the library of: Superior Sewing Machine & Supply LLC

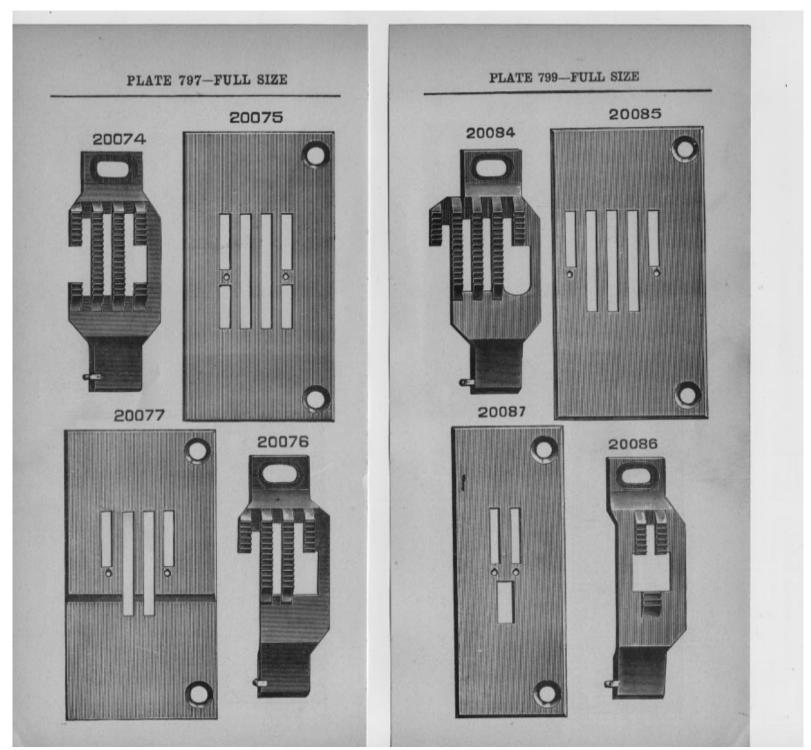


From the library of: Superior Sewing Machine & Supply LLC

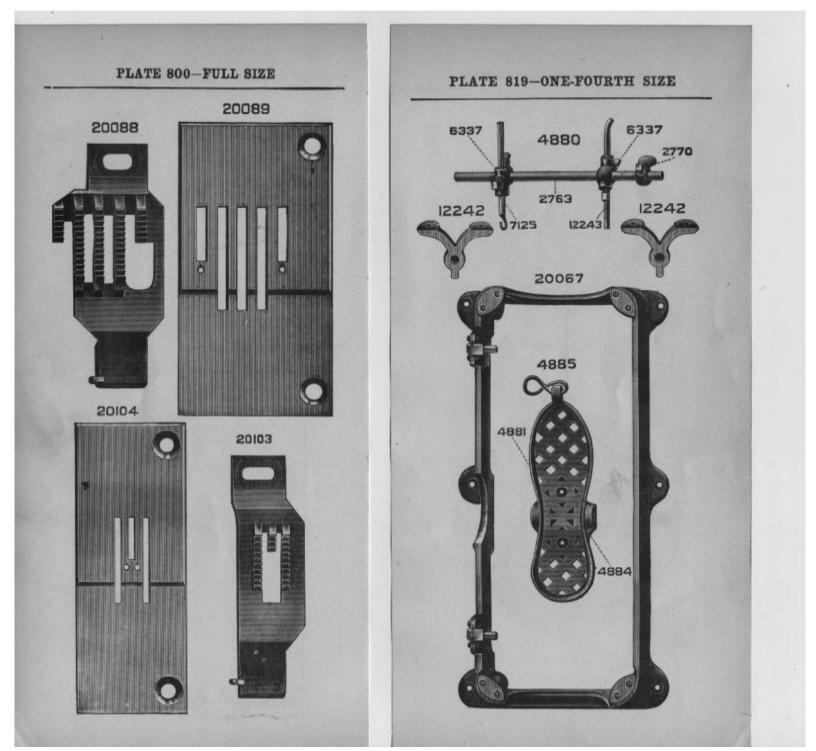


From the library of: Superior Sewing Machine & Supply LLC

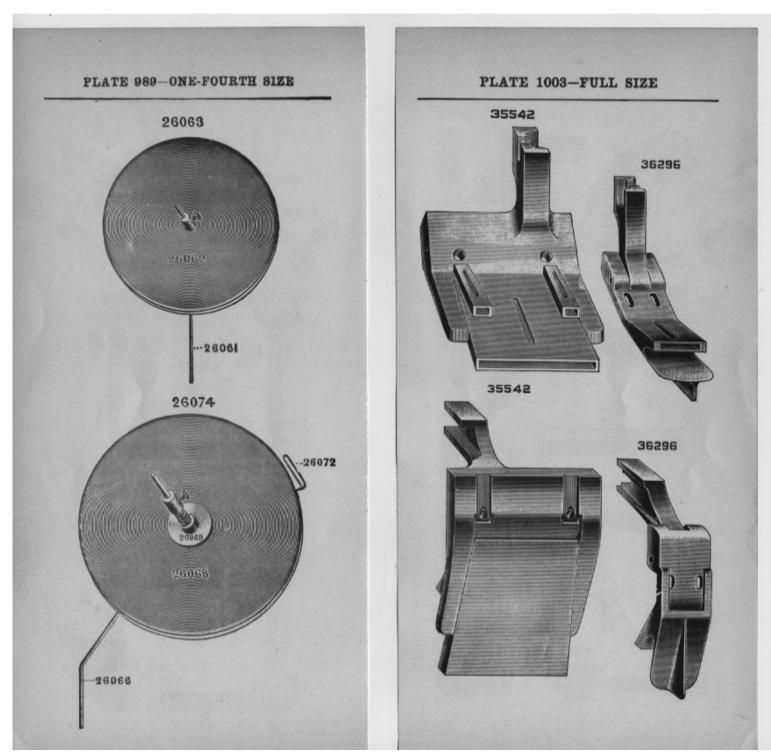


From the library of: Superior Sewing Machine & Supply LLC

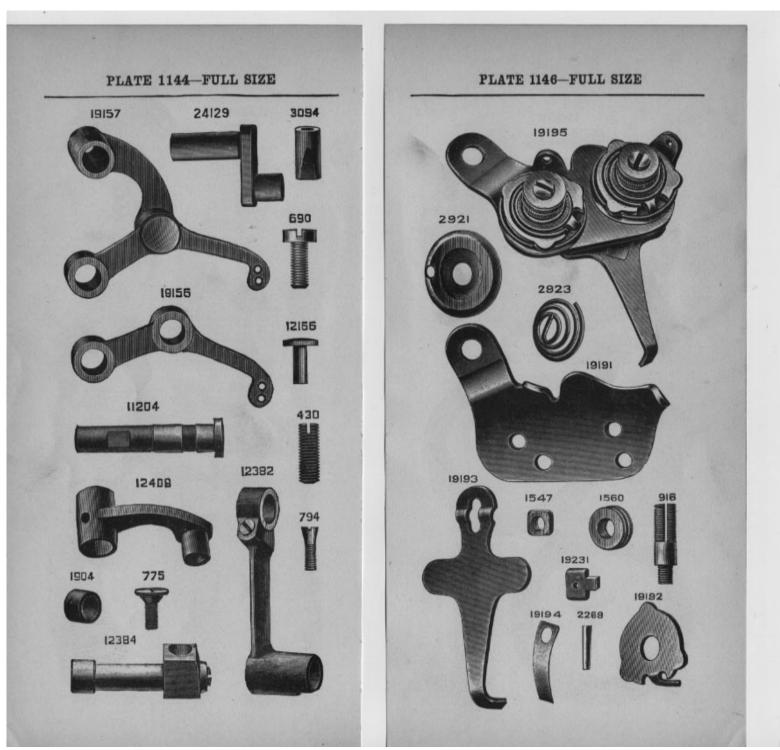


From the library of: Superior Sewing Machine & Supply LLC

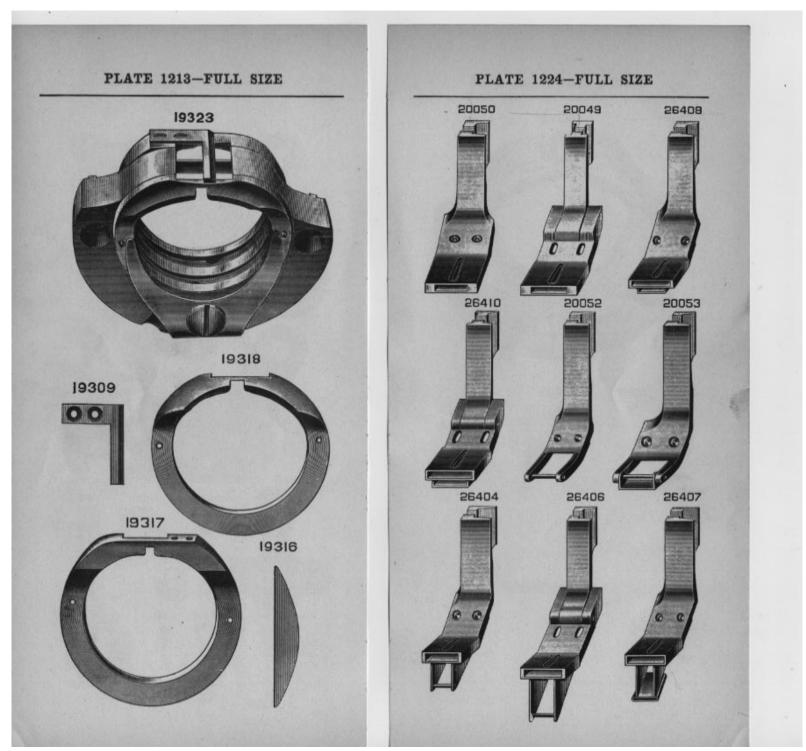


From the library of: Superior Sewing Machine & Supply LLC

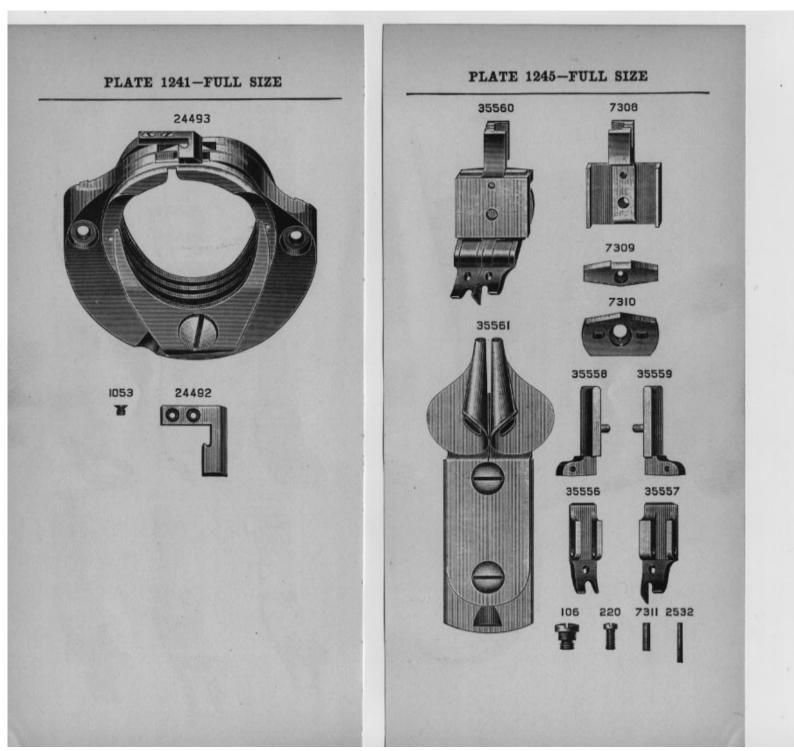


From the library of: Superior Sewing Machine & Supply LLC

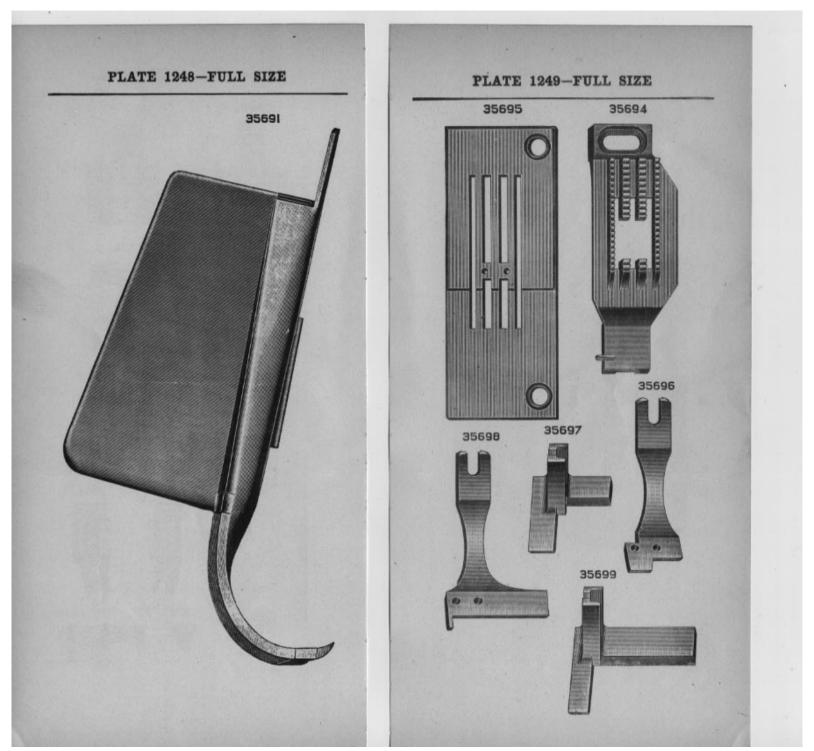


From the library of: Superior Sewing Machine & Supply LLC

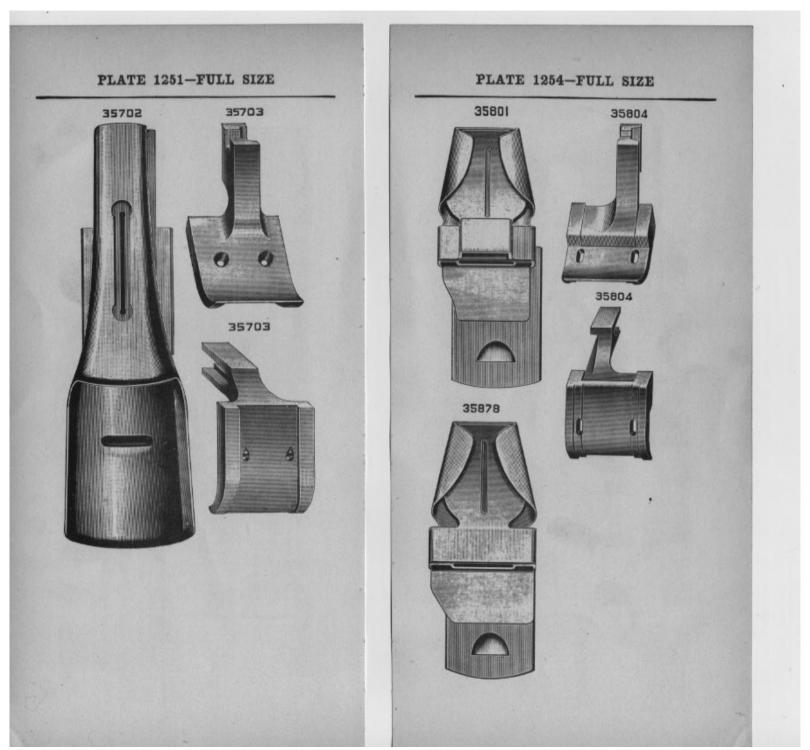


From the library of: Superior Sewing Machine & Supply LLC

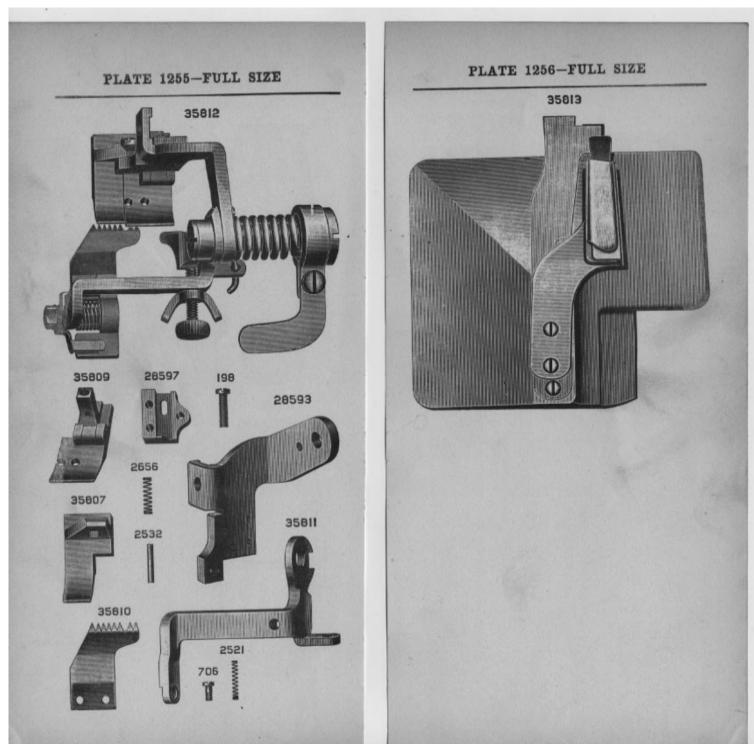


From the library of: Superior Sewing Machine & Supply LLC

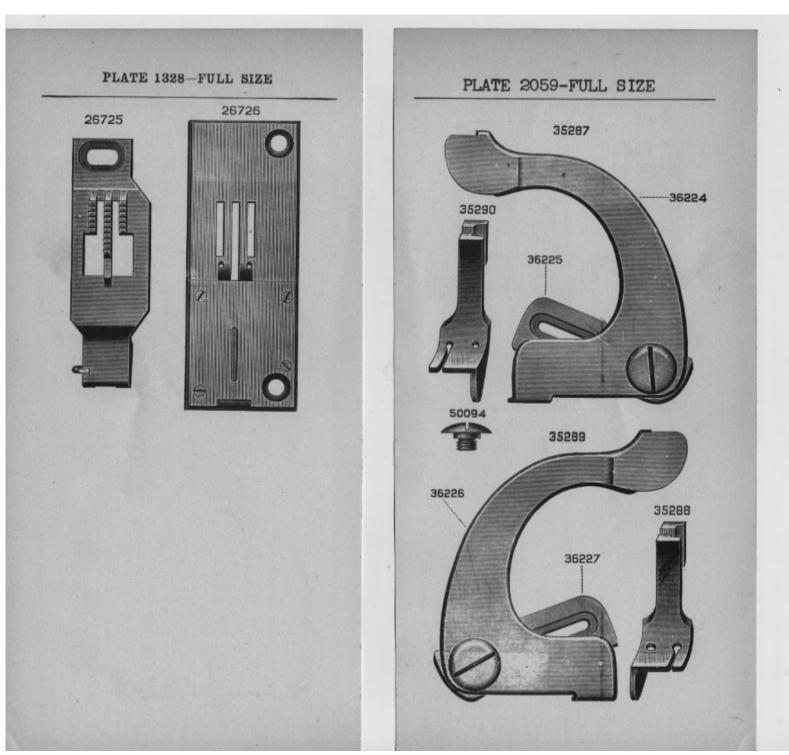


From the library of: Superior Sewing Machine & Supply LLC

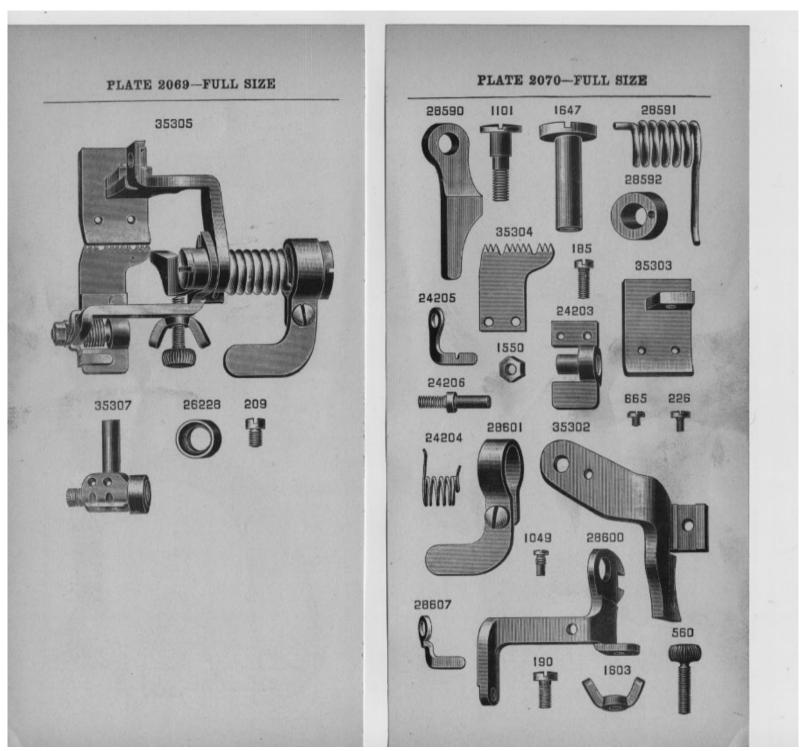


From the library of: Superior Sewing Machine & Supply LLC

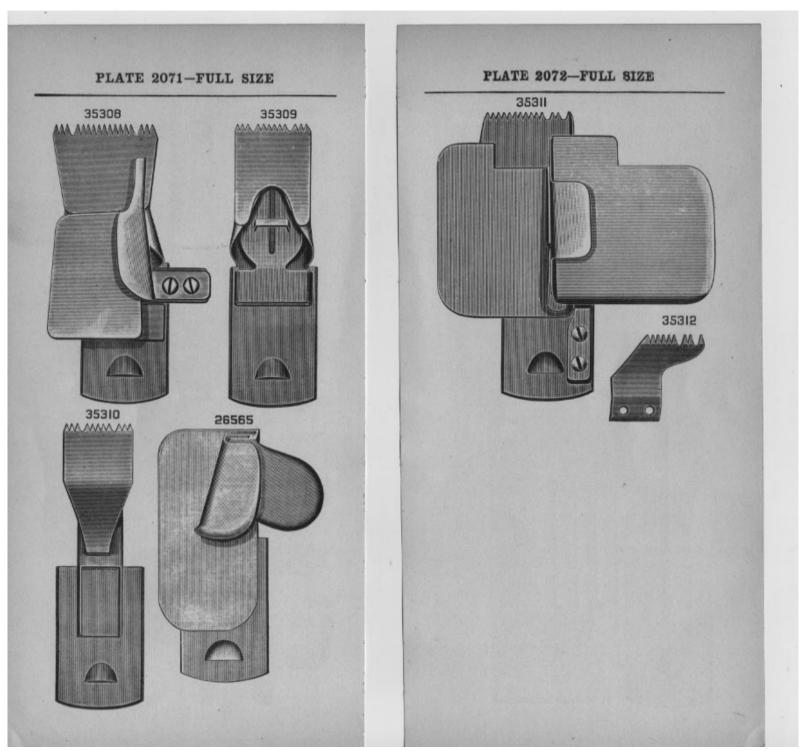


From the library of: Superior Sewing Machine & Supply LLC

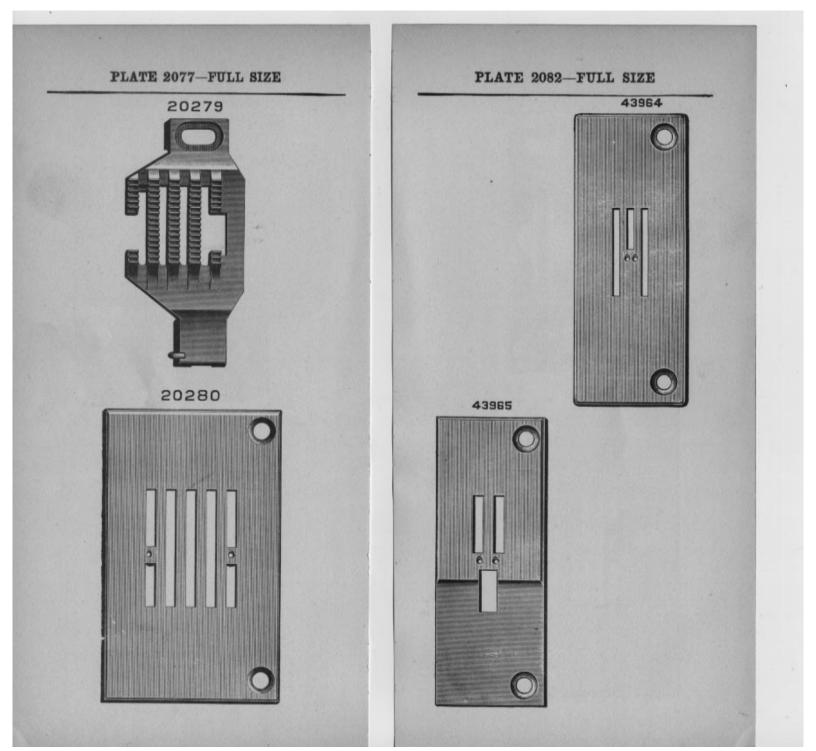


From the library of: Superior Sewing Machine & Supply LLC

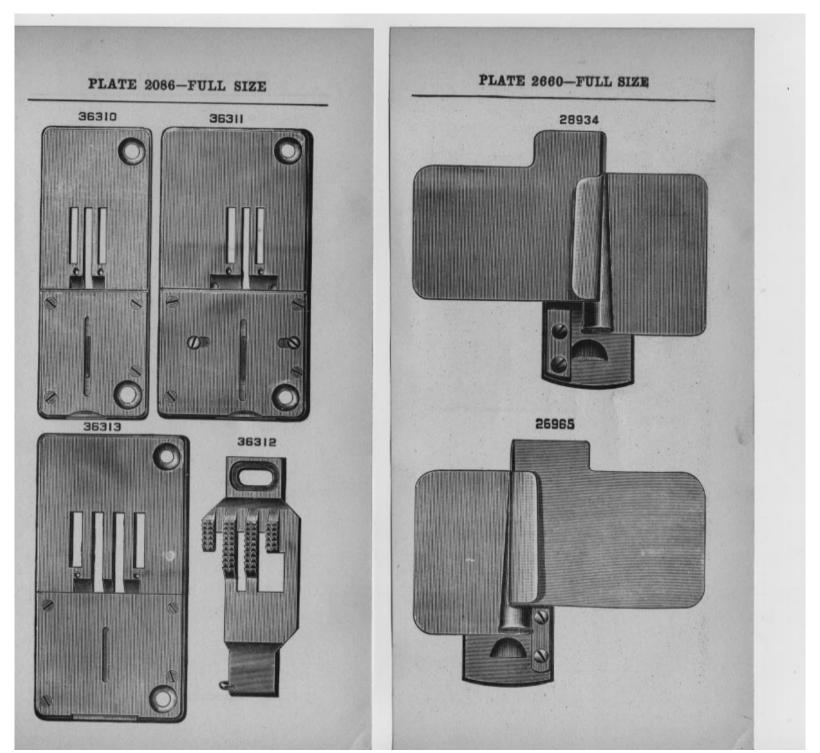


From the library of: Superior Sewing Machine & Supply LLC

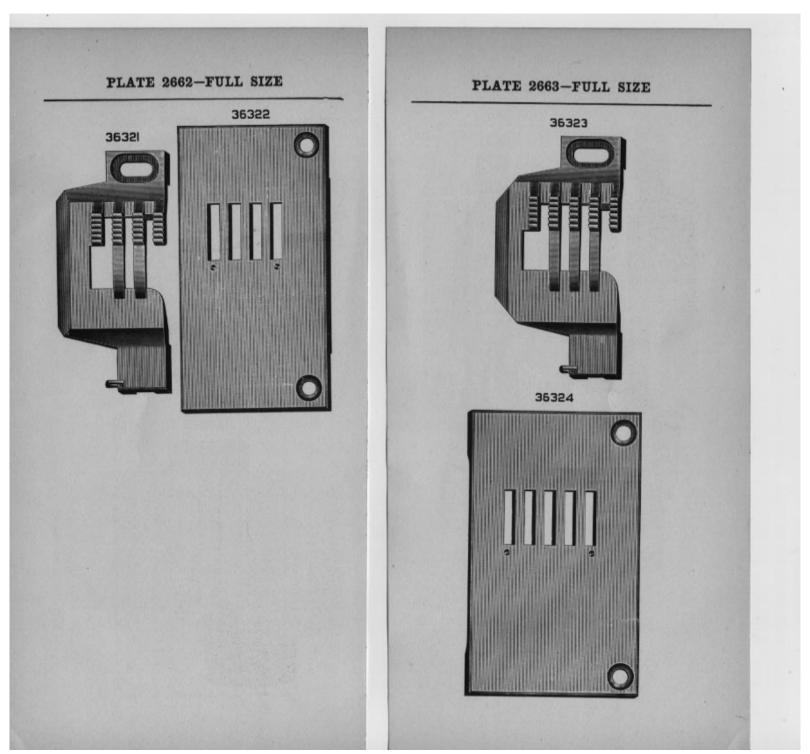


From the library of: Superior Sewing Machine & Supply LLC

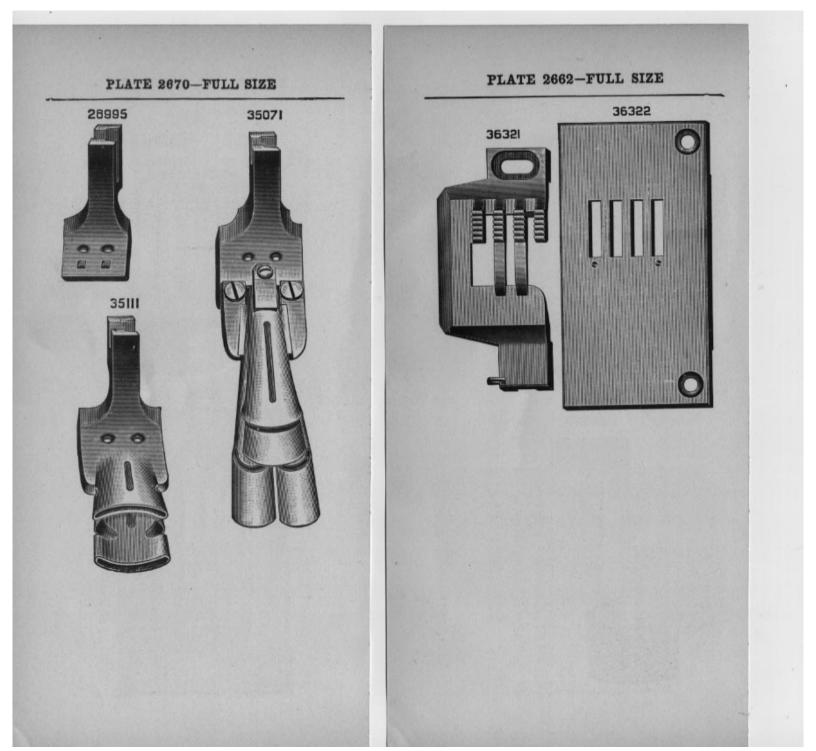


From the library of: Superior Sewing Machine & Supply LLC

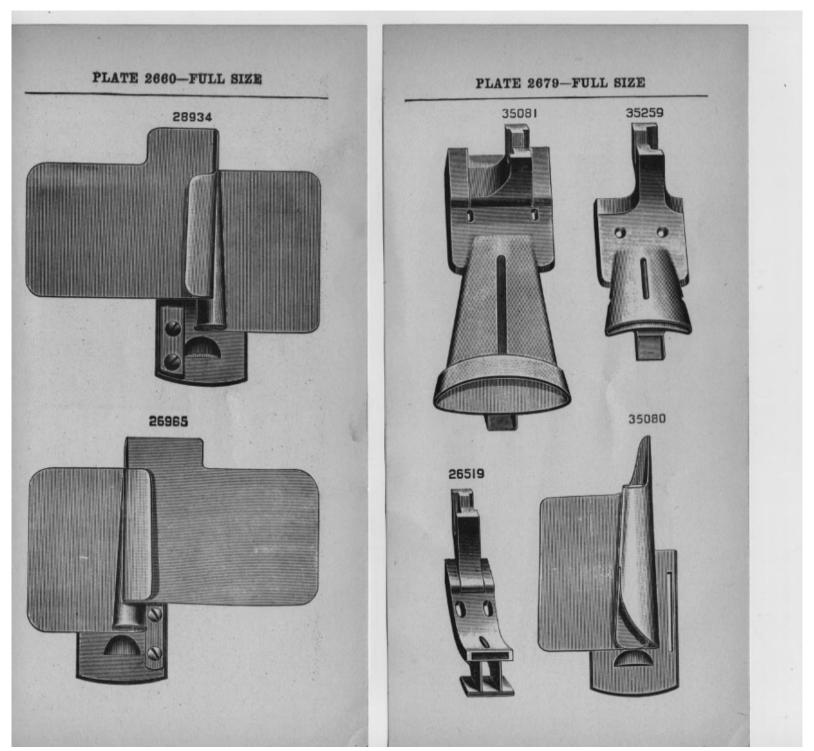


From the library of: Superior Sewing Machine & Supply LLC

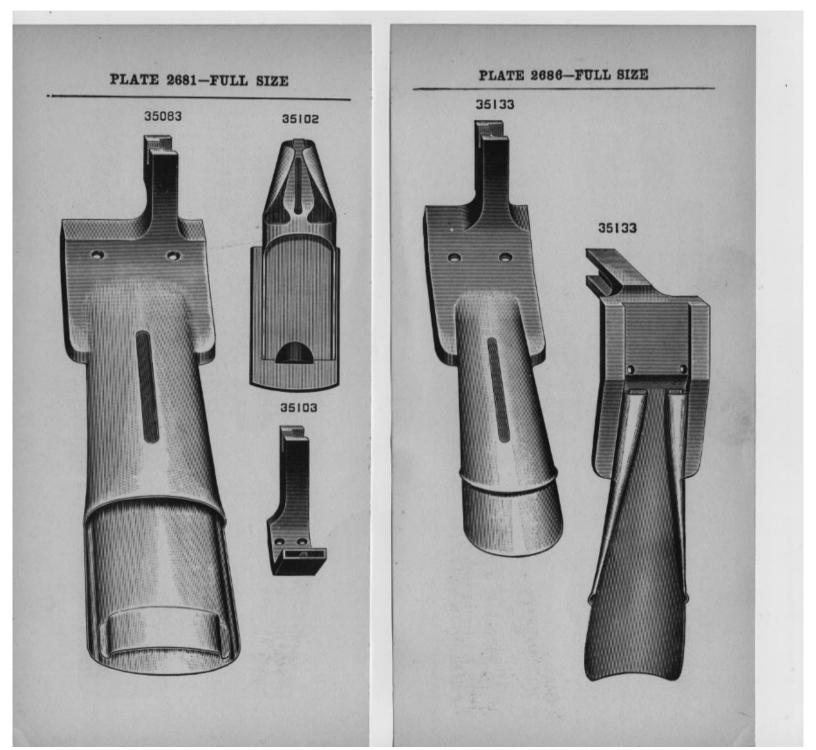


From the library of: Superior Sewing Machine & Supply LLC

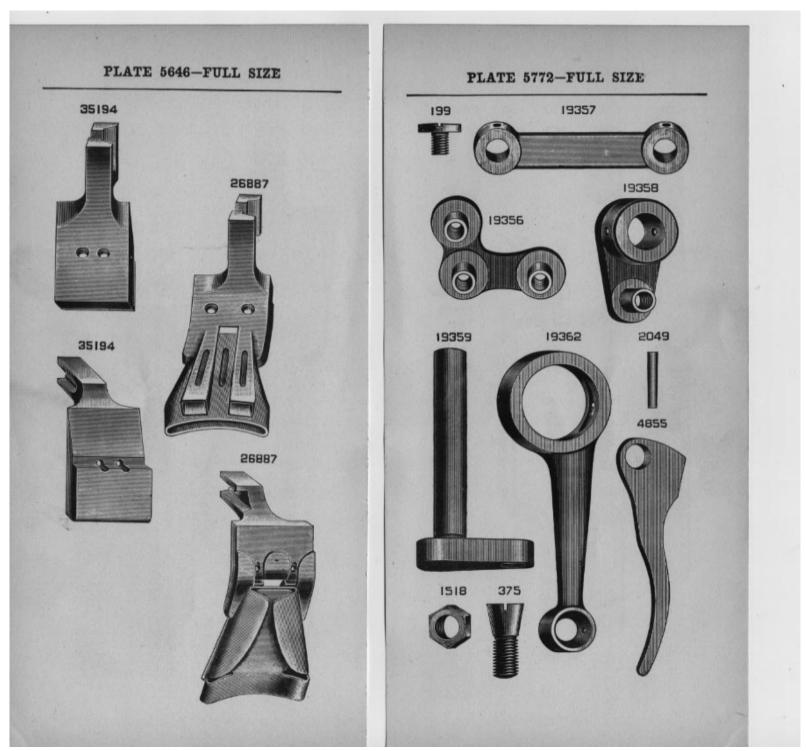


From the library of: Superior Sewing Machine & Supply LLC

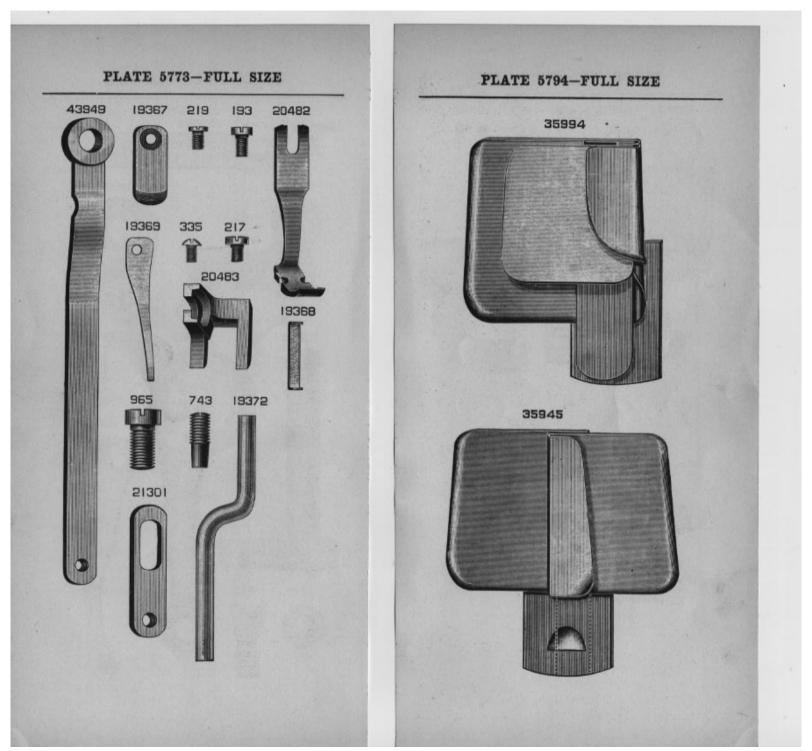


From the library of: Superior Sewing Machine & Supply LLC

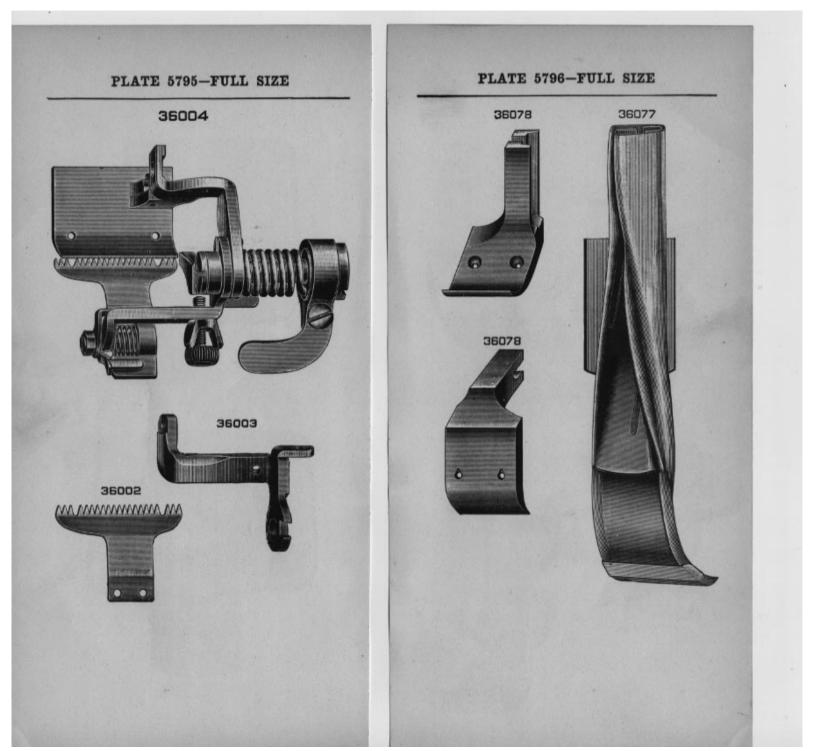


From the library of: Superior Sewing Machine & Supply LLC

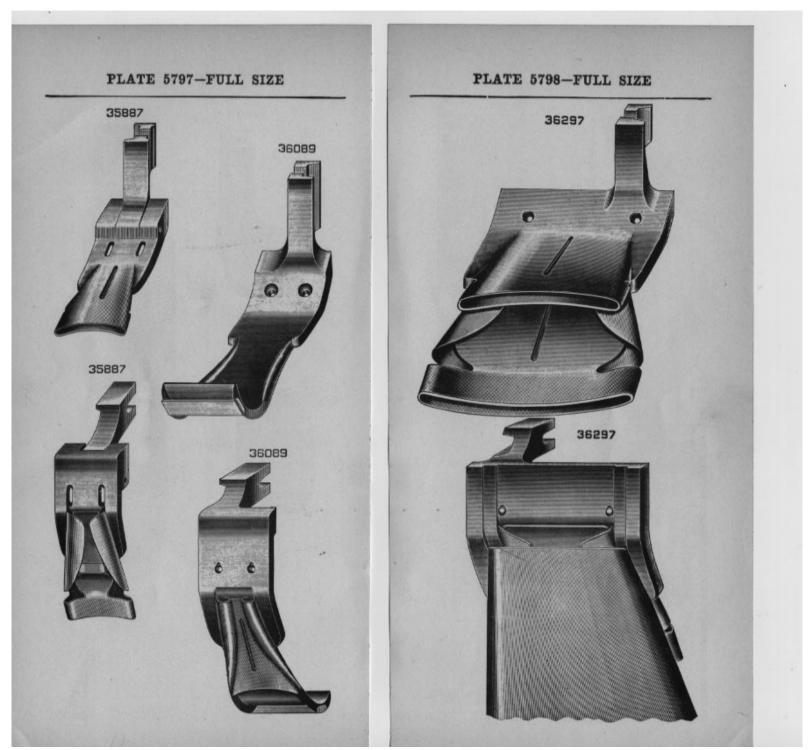


From the library of: Superior Sewing Machine & Supply LLC

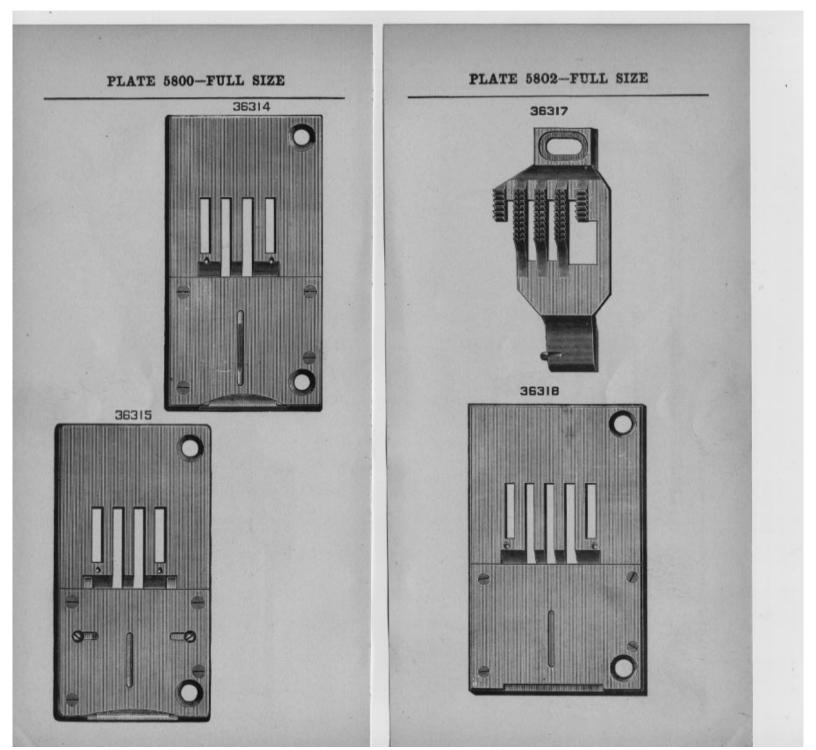


From the library of: Superior Sewing Machine & Supply LLC

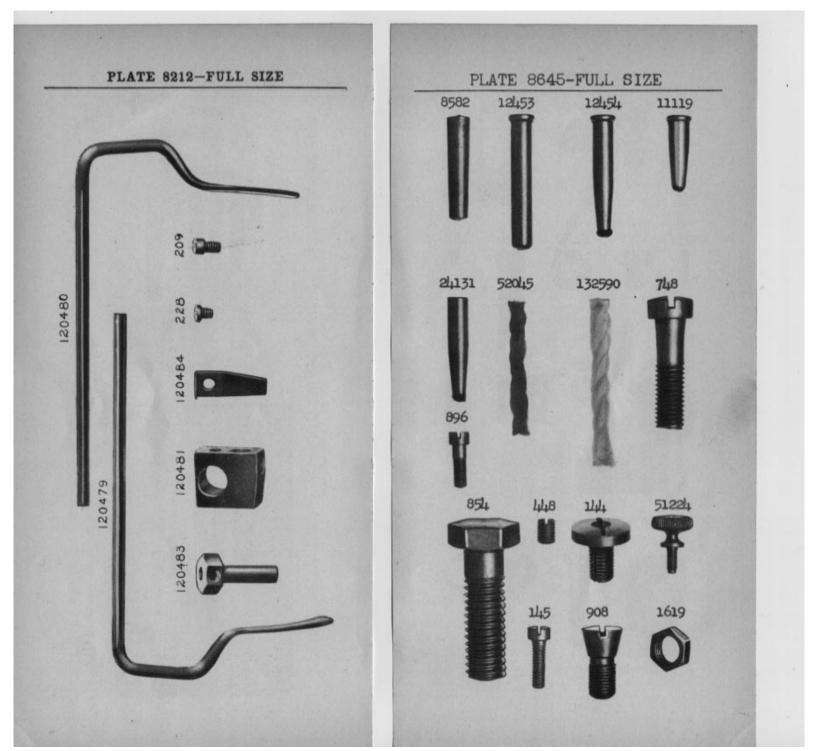


From the library of: Superior Sewing Machine & Supply LLC

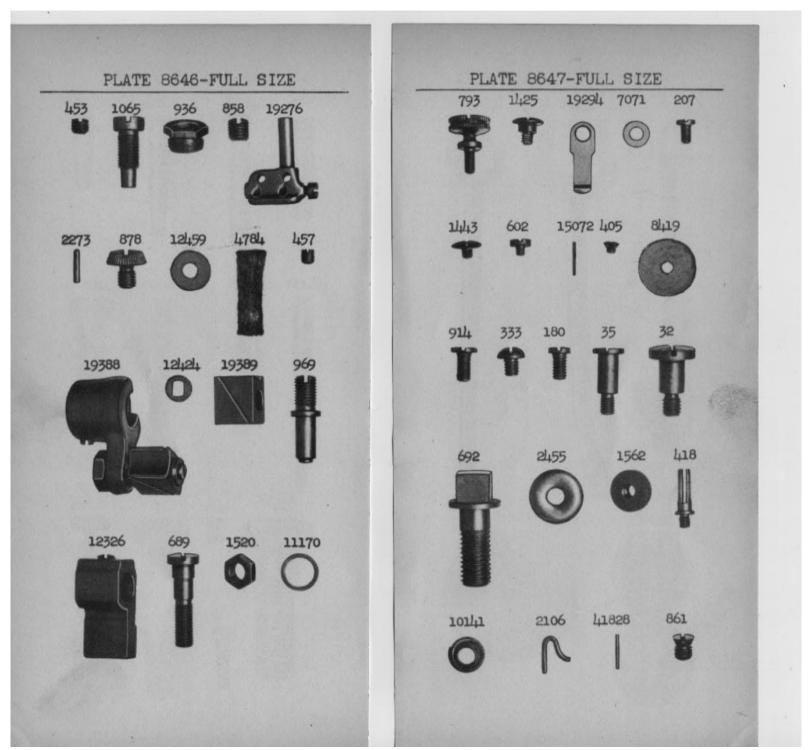


From the library of: Superior Sewing Machine & Supply LLC

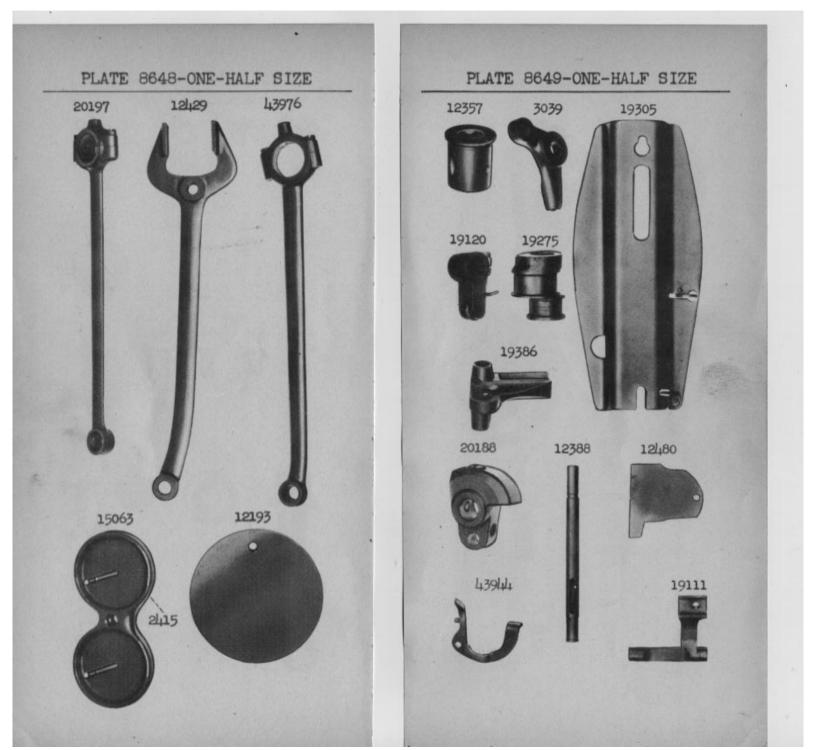


From the library of: Superior Sewing Machine & Supply LLC

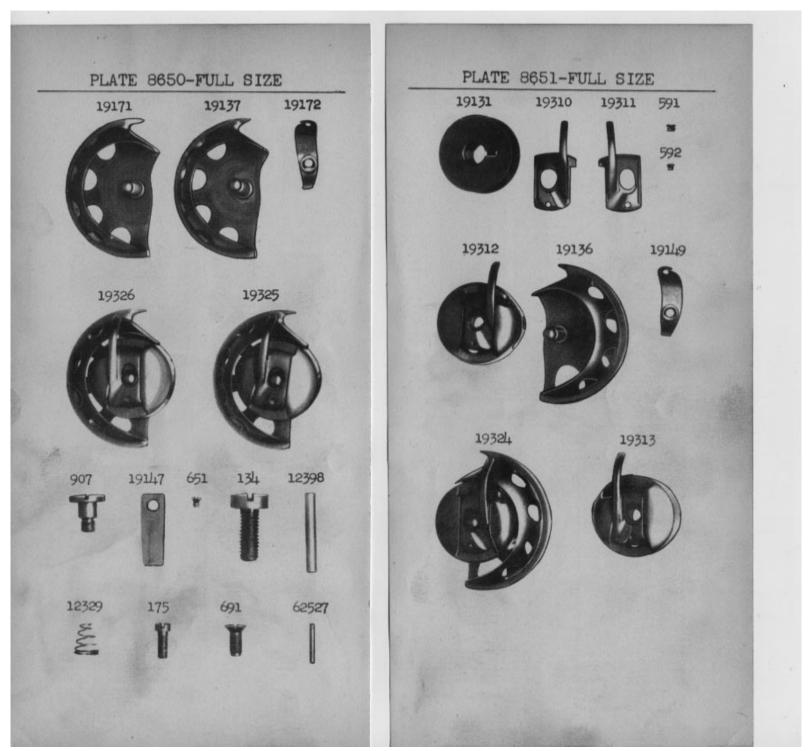


From the library of: Superior Sewing Machine & Supply LLC

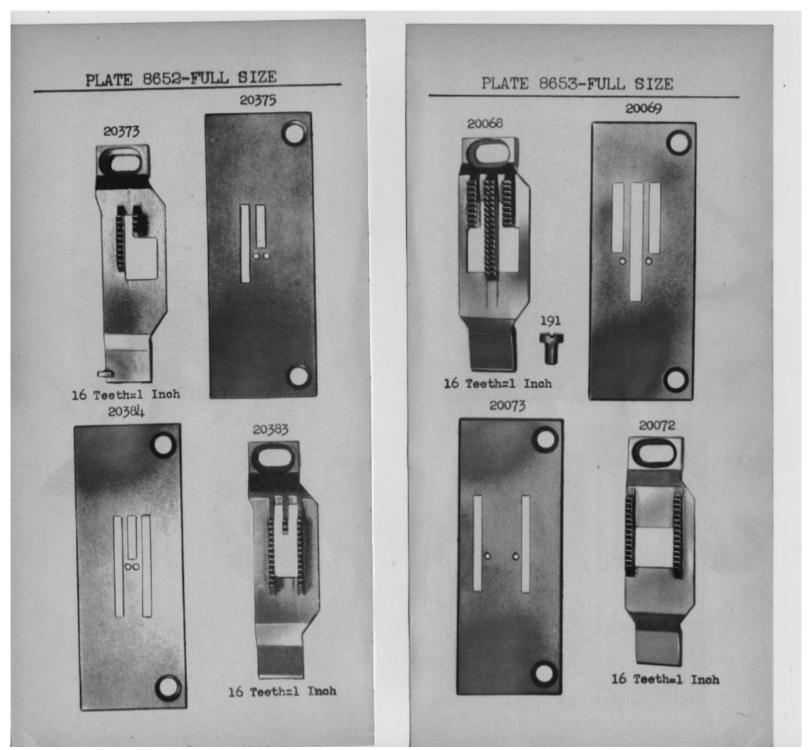


From the library of: Superior Sewing Machine & Supply LLC

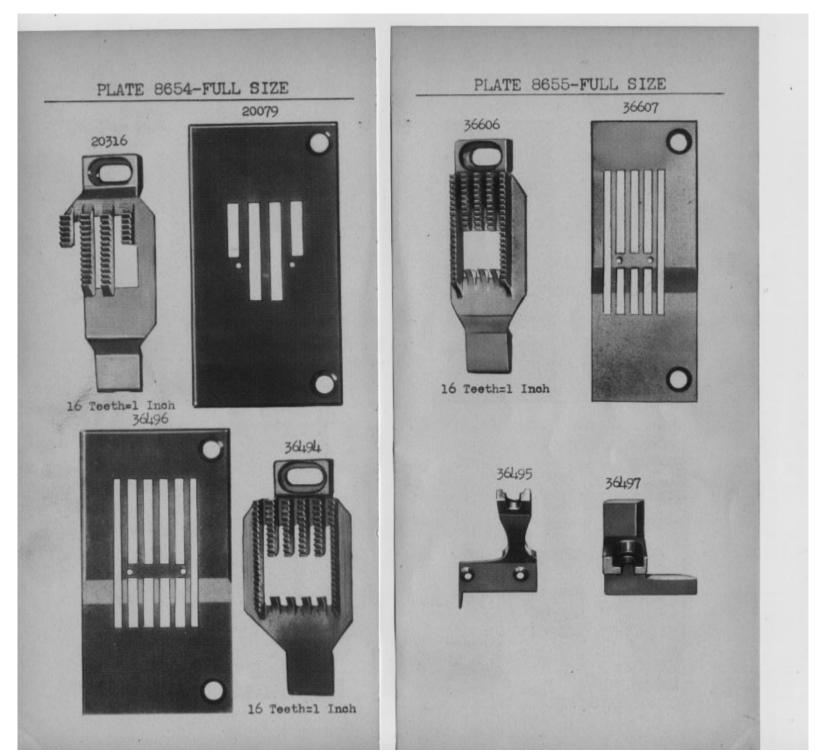


From the library of: Superior Sewing Machine & Supply LLC

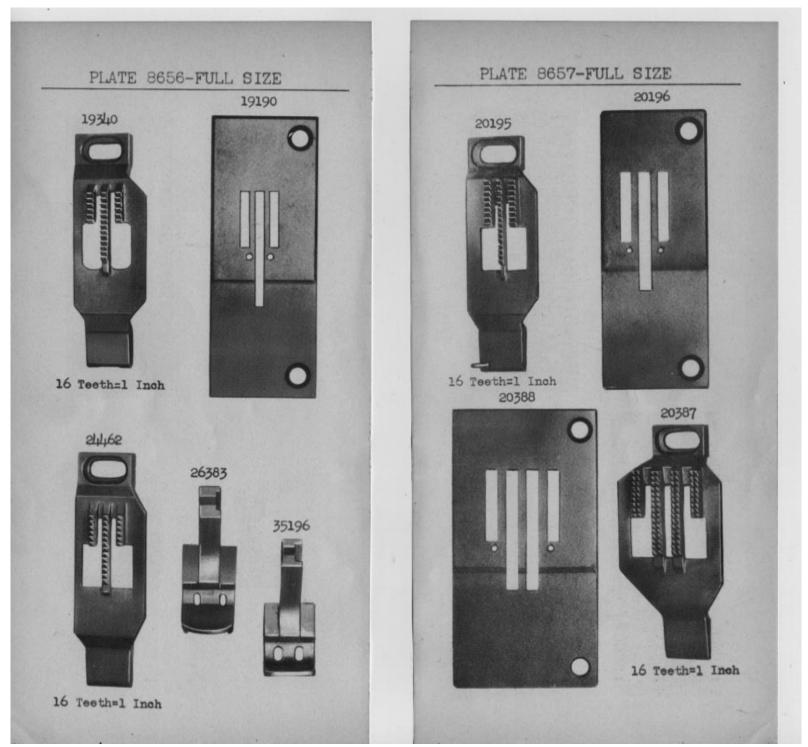


From the library of: Superior Sewing Machine & Supply LLC

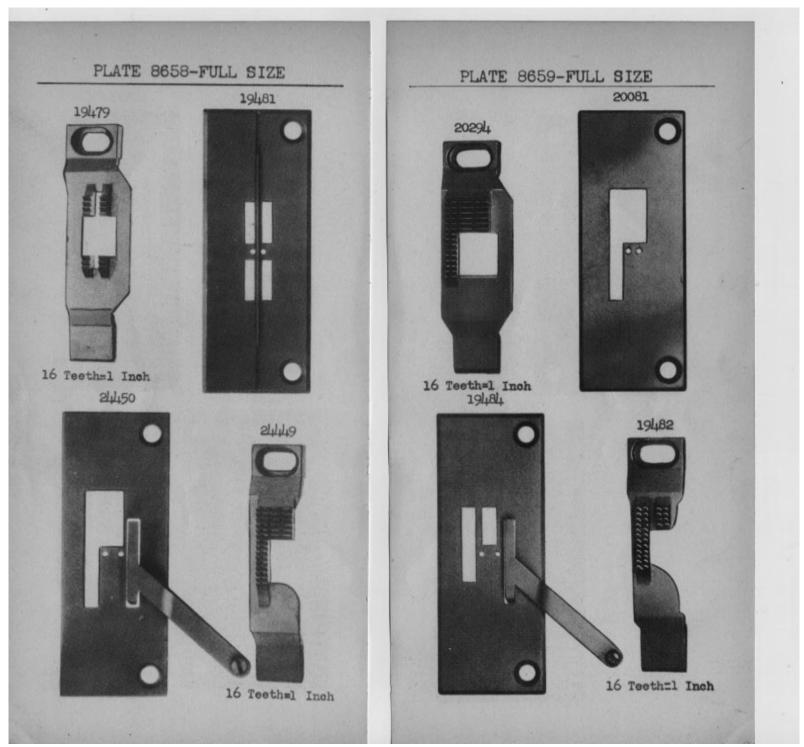


From the library of: Superior Sewing Machine & Supply LLC

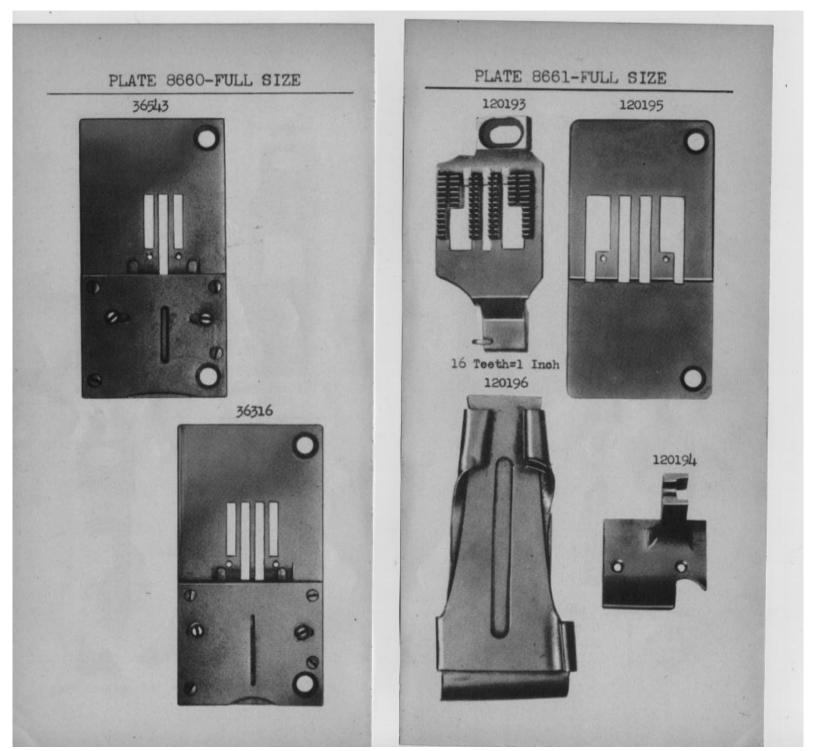


From the library of: Superior Sewing Machine & Supply LLC

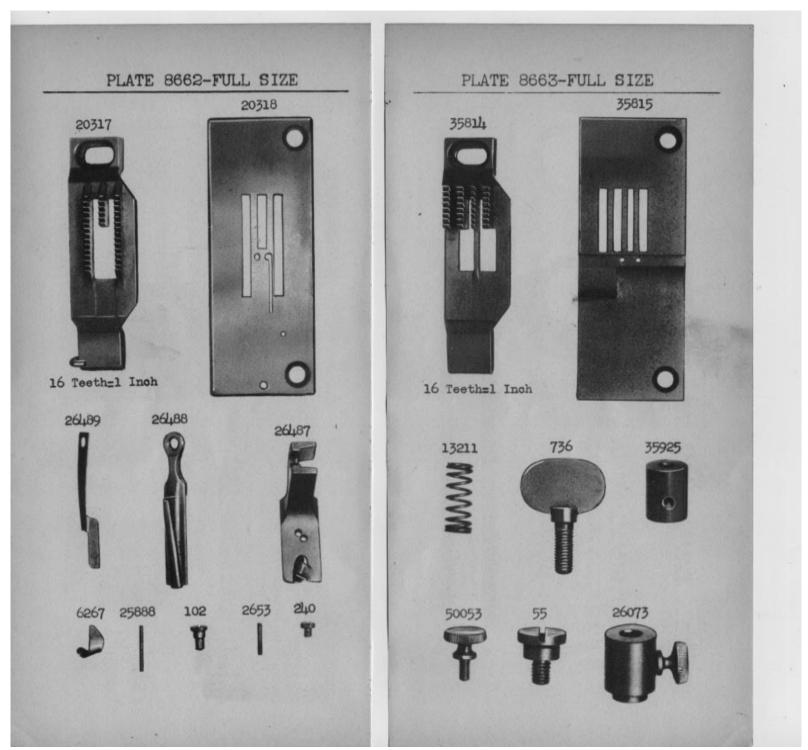


From the library of: Superior Sewing Machine & Supply LLC

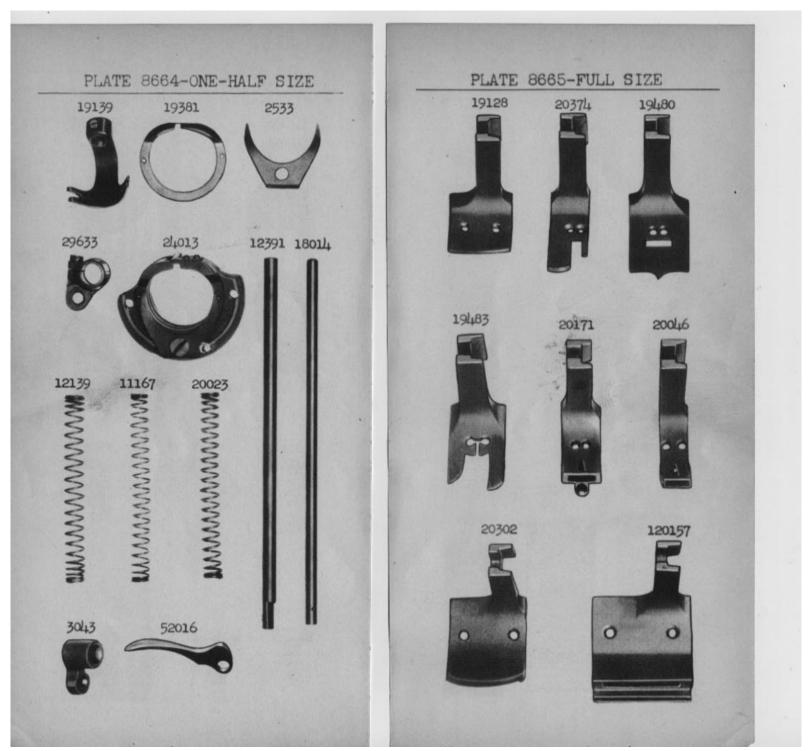


From the library of: Superior Sewing Machine & Supply LLC

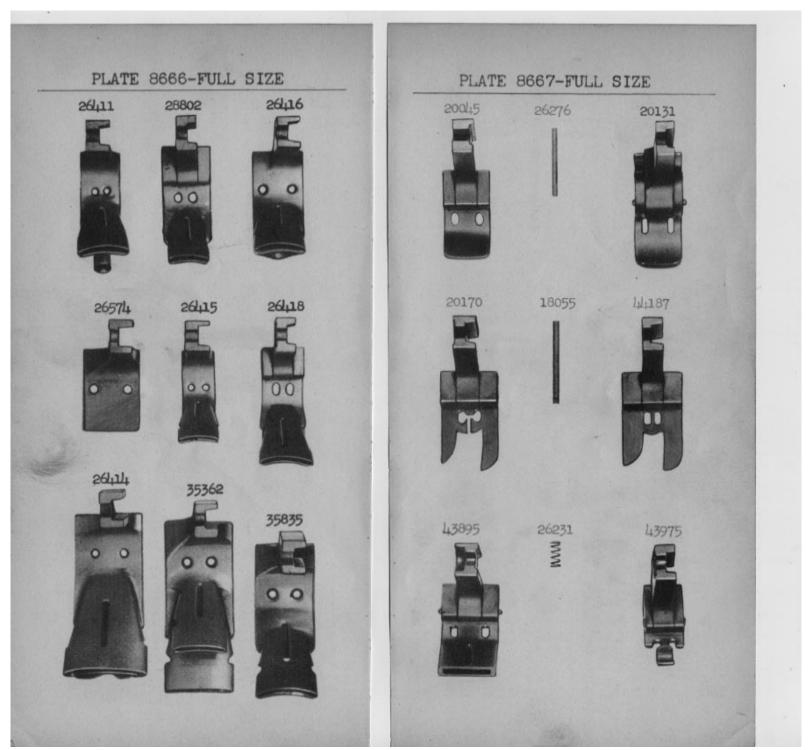


From the library of: Superior Sewing Machine & Supply LLC

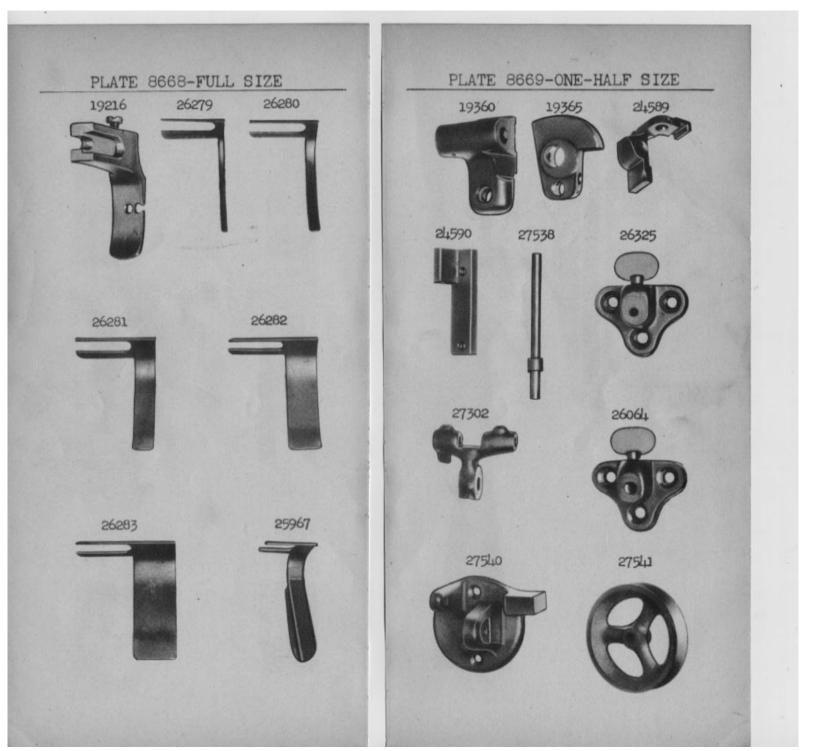


From the library of: Superior Sewing Machine & Supply LLC

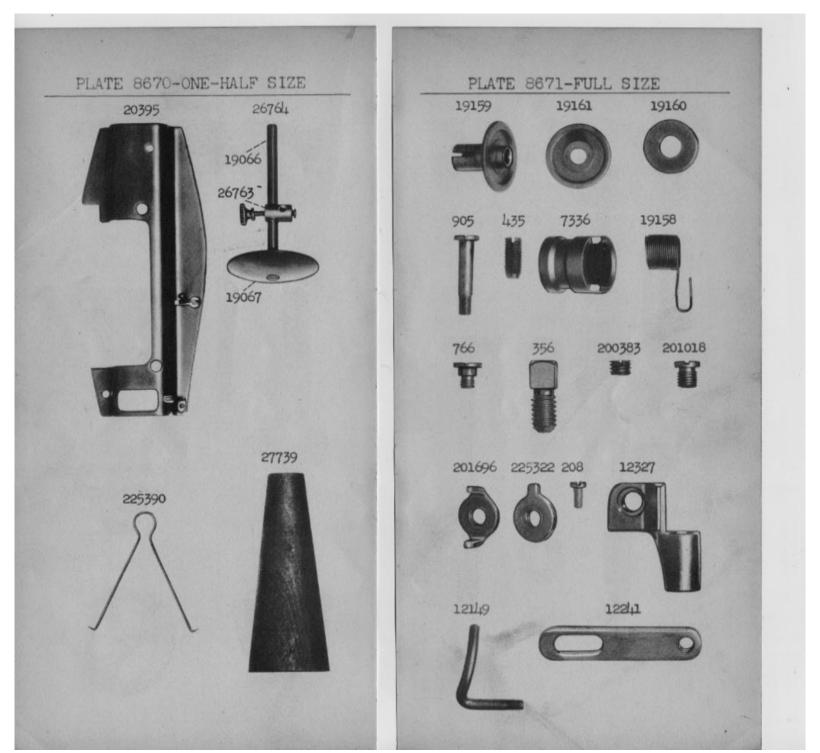


From the library of: Superior Sewing Machine & Supply LLC

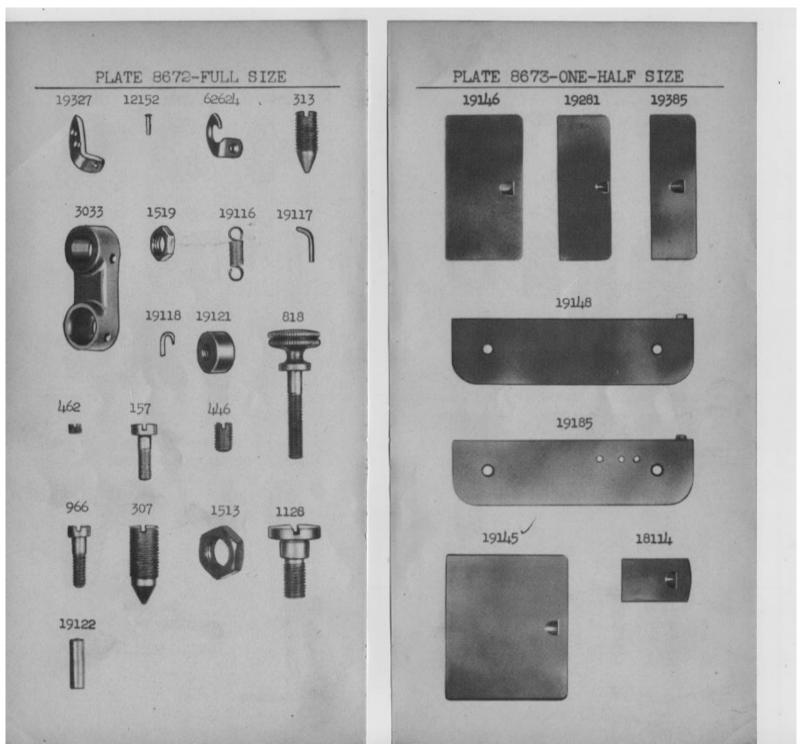

From the library of: Superior Sewing Machine & Supply LLC

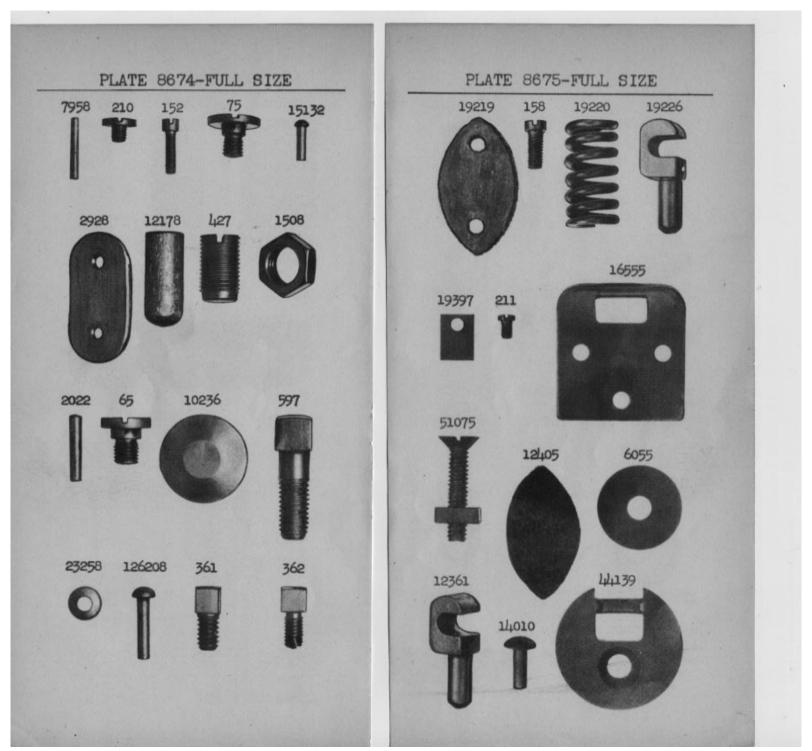


From the library of: Superior Sewing Machine & Supply LLC

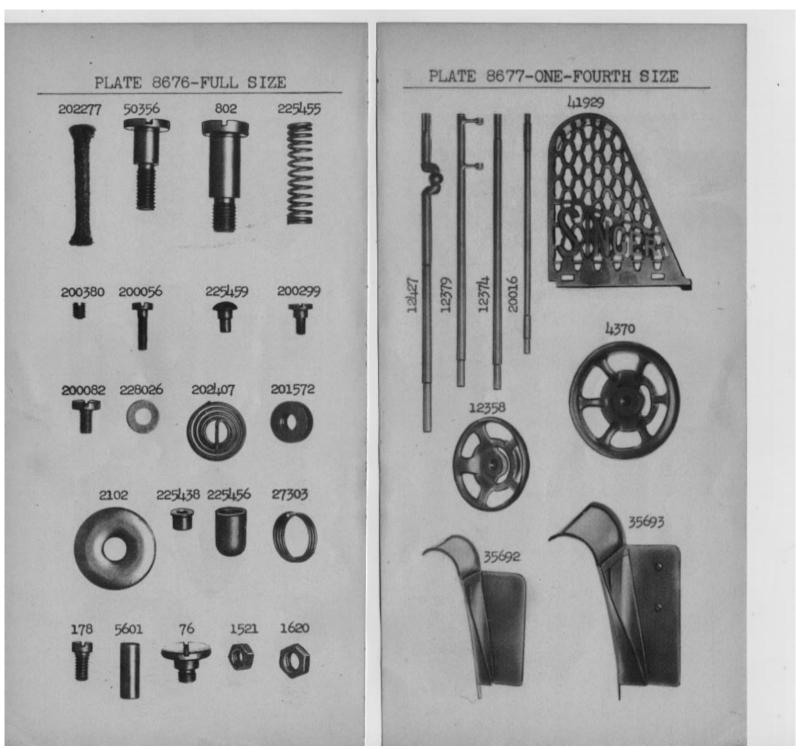


From the library of: Superior Sewing Machine & Supply LLC




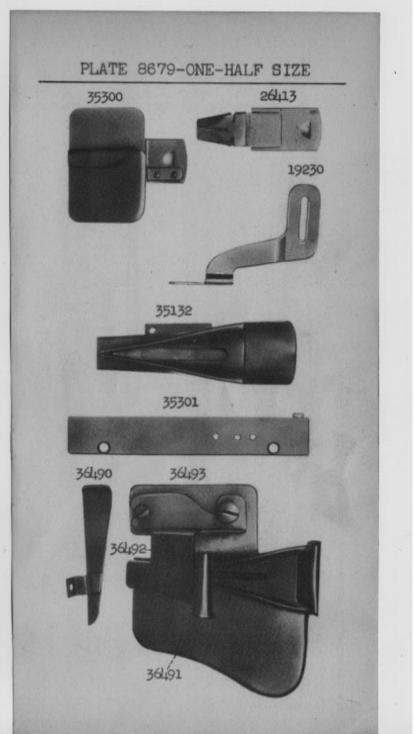

From the library of: Superior Sewing Machine & Supply LLC

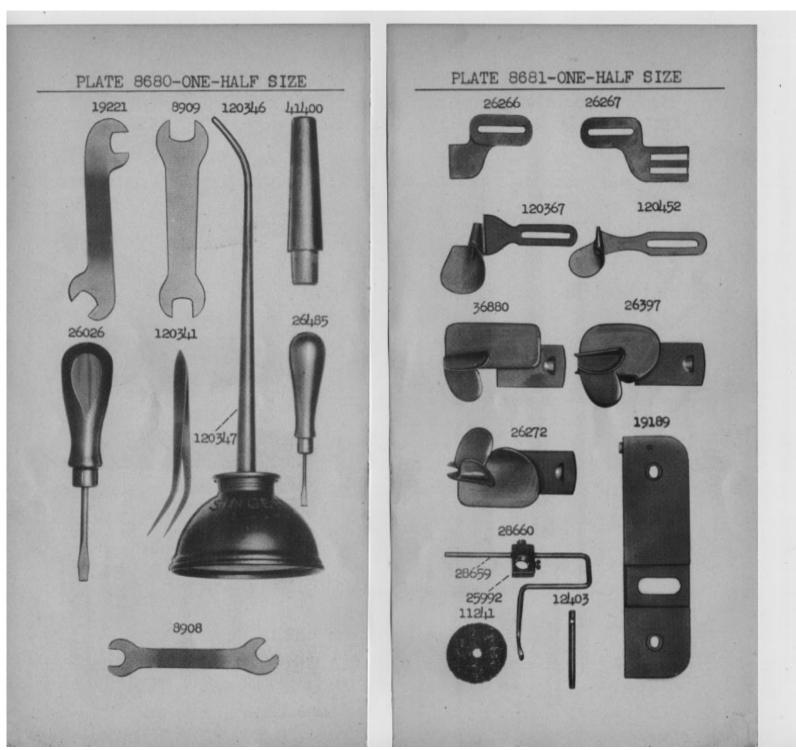

From the library of: Superior Sewing Machine & Supply LLC

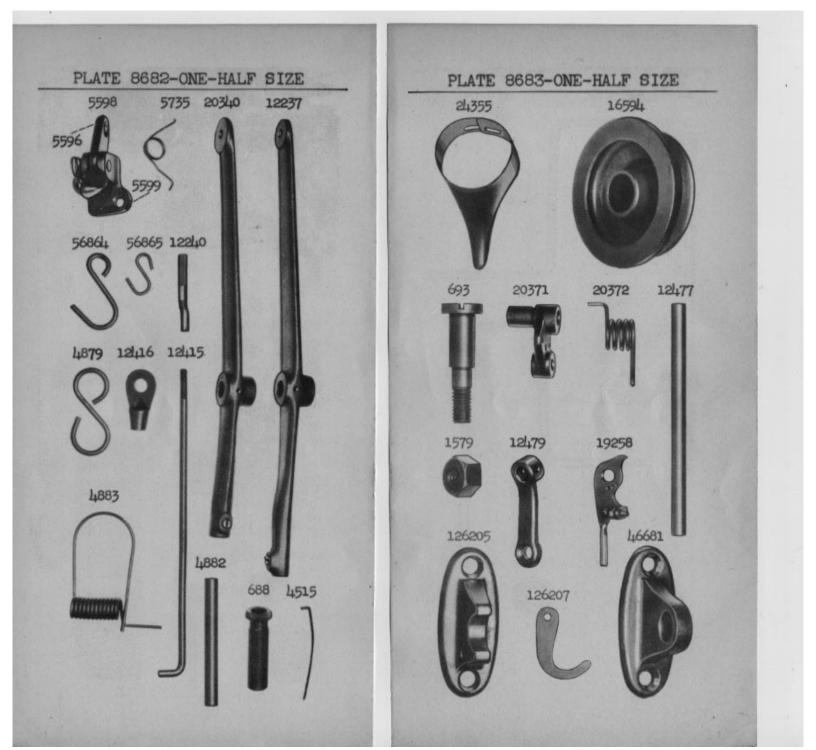

From the library of: Superior Sewing Machine & Supply LLC

