

ILLUSTRATED

PARTS LIST

FOR



SINGER*

MACHINE

457UX143


* A Trademark of THE SINGER COMPANY
Copyright © 1987 SINGER SEWING MACHINE COMPANY
All Rights Reserved Throughout The World

From the library of: Superior Sewing Machine & Supply LLC

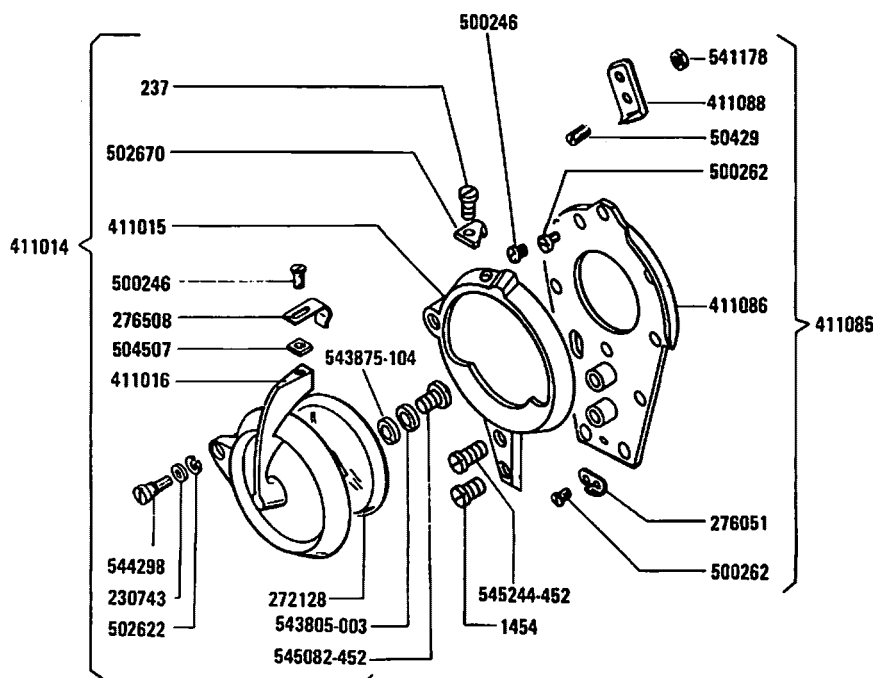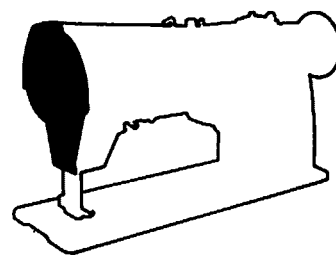


237-833	THREAD CUTTER (ON ROTARY TAKE-UP GUARD) SCREW
1454-850	ROTARY TAKE-UP GUARD SCREW (SHORT)
50429-833	THREAD CUTTER (ON FACE PLATE) ADJUSTING SCREW
230743	ROTARY TAKE-UP GUARD HINGE SCREW SPRING WASHER
272128	ROTARY TAKE-UP GUARD COVER WINDOW
276051	THREAD GUIDE (ON FACE PLATE)
276508	ROTARY TAKE-UP GUARD SPRING CATCH
411014	ROTARY TAKE-UP GUARD CPL. NOS., 237, 230743, 272128, 276508, 411015, 411016, 500246, 502622, 502670 504507, 543805-003, 543875-104, 544298 AND 545082-452
411015	ROTARY TAKE-UP GUARD
411016	ROTARY TAKE-UP GUARD COVER
411085	FACE PLATE CPL. NOS., 50429, 276051, 411086, 411088, 541178 AND TWO 500262
411086	FACE PLATE

411088	THREAD CUTTER (ON FACE PLATE)
500246-850	FACE PLATE SCREW (8)
500246-850	ROTARY TAKE-UP GUARD SPRING CATCH SCREW
500262-833	THREAD GUIDE (ON FACE PLATE) SCREW
500262-833	THREAD CUTTER (ON FACE PLATE) SCREW
502622	ROTARY TAKE-UP GUARD HINGE SCREW SPRING WASHER
502670	THREAD CUTTER (ON ROTARY TAKE-UP GUARD)
504507	SPRING CATCH SCREW NUT
541178	THREAD CUTTER (ON FACE PLATE) ADJUSTING SCREW NUT
543805-003	ROTARY TAKE-UP COVER WINDOW WASHER
543875-104	ROTARY TAKE-UP GUARD COVER WINDOW SCREW WASHER
544298	ROTARY TAKE-UP GUARD HINGE SCREW
545082-452	ROTARY TAKE-UP GUARD COVER WINDOW SCREW
545244-452	ROTARY TAKE-UP GUARD SCREW (LONG)

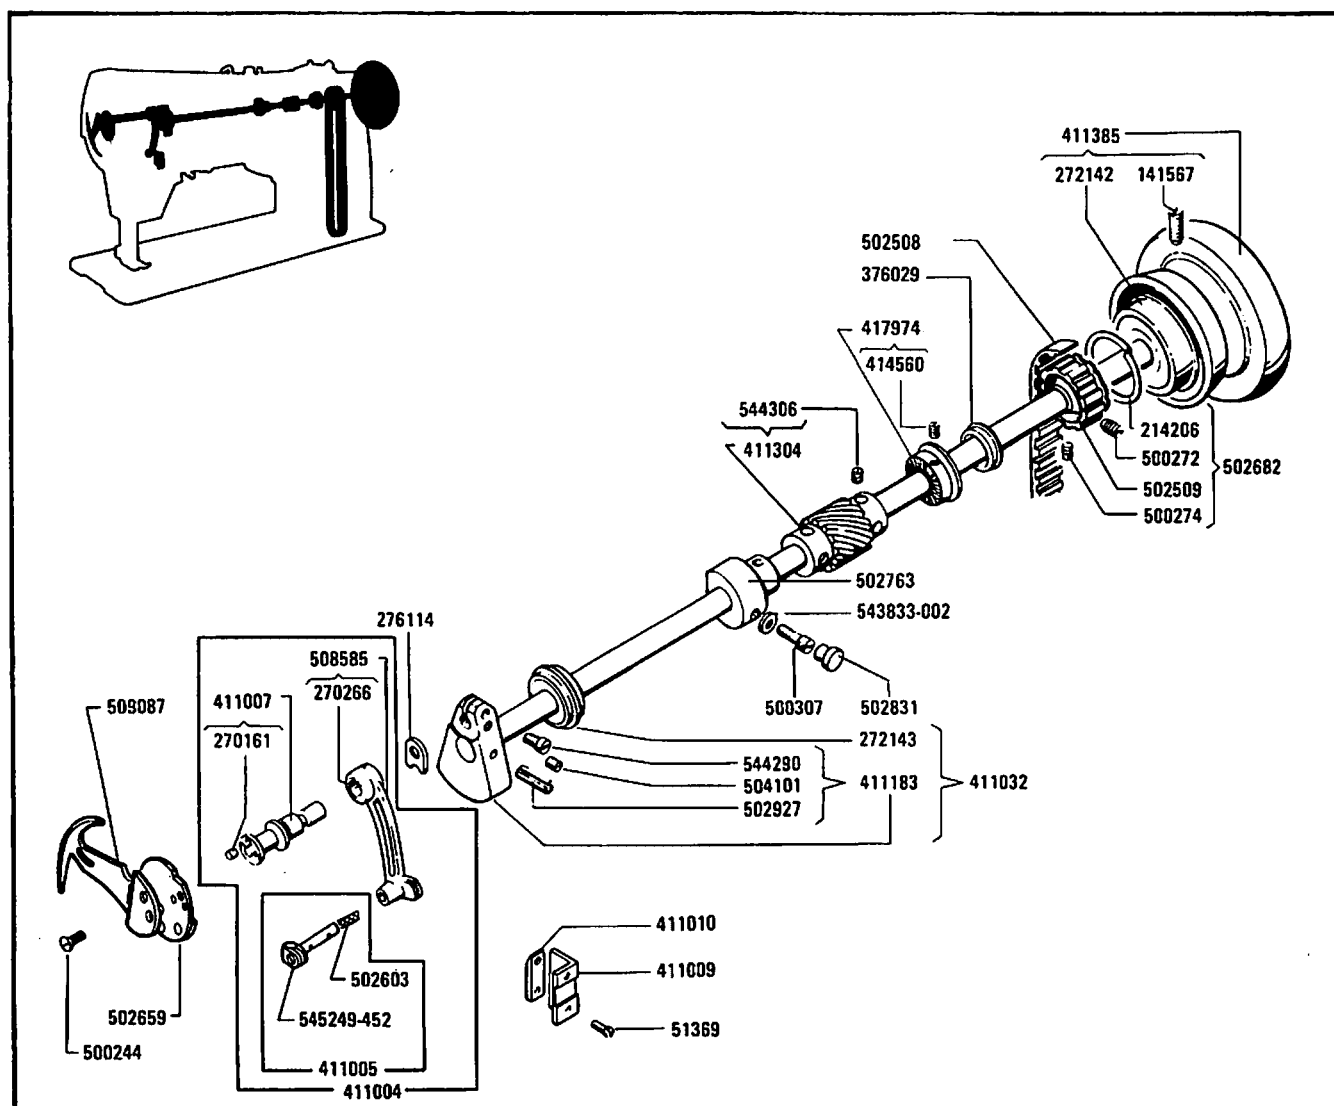


51369-850	NEEDLE BAR CONNECTING LINK CLAMPING PLATE SCREW (2)
141567-833	MACHINE PULLEY SET SCREW (2)
214206	ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE
270161	NEEDLE BAR CRANK STUD PIN
270266	NEEDLE BAR CONNECTING LINK NEEDLE BEARING
272142	MACHINE PULLEY BALL BEARING
272143	ARM SHAFT BALL BEARING
276114	NEEDLE BAR CONNECTING LINK THRUST WASHER
376029	ARM SHAFT OIL SHIELD
411004	NEEDLE BAR CONNECTING STUD, CONNECTING LINK CPL. NOS., 411005, 411007 AND 508585
411005	NEEDLE BAR CONNECTING STUD WITH 502603 AND 545249-452
411007	NEEDLE BAR CRANK STUD WITH 270161
411009	NEEDLE BAR CONNECTING LINK GUIDE BLOCK
411010	NEEDLE BAR CONNECTING LINK CLAMP PLATE
411032	ARM SHAFT CPL. NOS., AND 411183
411183	ARM SHAFT AND NEEDLE BAR CRANK WITH 502297, 504101 AND 544290
411304	NEEDLE VIBRATING WORM GEAR WITH FOUR 544306
411385	MACHINE PULLEY WITH 272142 AND TWO 141567


414560	BOBBIN WINDER DRIVING WHEEL SCREW (2)
417974	BOBBIN WINDER DRIVING WHEEL WITH TWO 414560
500244	ROTARY TAKE-UP SCREW (2)
500272-830	ARM SHAFT CONNECTION BELT PULLEY SET SCREW
500274-833	ARM SHAFT CONNECTION BELT PULLEY POSITION SCREW
500307-850	ARM SHAFT BUSHING (CENTER) SCREW
502508	ARM SHAFT CONNECTION BELT
502509	ARM SHAFT CONNECTION BELT PULLEY
502603	NEEDLE BAR CONNECTING STUD OIL WICK
502659	ROTARY TAKE-UP MOUNTING DISC
502682	ARM SHAFT CONNECTION BELT PULLEY CPL. NOS., 214206, 500272, 500274 AND 502509
502763	ARM SHAFT BUSHING (CENTER)
502831	ARM SHAFT BUSHING (CENTER) SCREW PLUG
502927	NEEDLE BAR CRANK POSITION PIN
504101	NEEDLE BAR CRANK STUD POSITION SCREW
508585	NEEDLE BAR CONNECTING LINK WITH 270266
509087	ROTARY TAKE-UP
543833-002	ARM SHAFT BUSHING (CENTER) SCREW GASKET
544290	NEEDLE BAR CRANK STUD PINCH SCREW
544306	NEEDLE VIBRATING WORM GEAR SET SCREW (4)
545249-452	NEEDLE BAR CONNECTING STUD SCREW

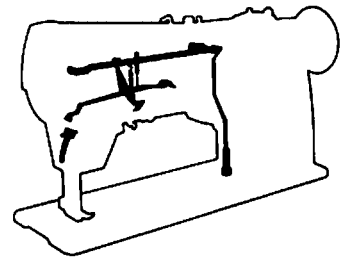

500312-850	LIGHT STUD HOLE SCREW PLUG (FOR UN-USED HOLE)
502516	PRESSER BAR SPRING WICK
502586	KNEE LIFTER LIFTING ROD SPRING
502653	PRESSER BAR SPRING
502662	TENSION RELEASER SPRING
504509-452	TENSION RELEASER ADJUSTING SCREW LOCK NUT
543801-005	KNEE LIFTER LIFTING ROD GRIP RING (2)
543809-002	KNEE LIFTER ROCK FRAME HINGE PIN
544292	KNEE LIFTER ROCK FRAME SCREW
544295	TENSION RELEASER ADJUSTING SCREW
544296	TENSION RELEASER HINGE SCREW
545153	KNEE LIFTER ROCK FRAME HINGE LOCK SCREW
545205-452	KNEE LIFTER LIFTING ROD COLLAR SET SCREW
545754	LIGHT STUD HOLE SCREW PLUG GASKET



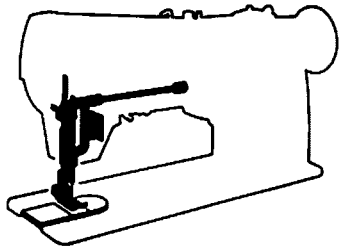


502584 KNEE LIFTER LIFTING LINK
502594 NEEDLE BAR OIL FELT CORD
502597 NEEDLE BAR THREAD GUIDE
502608 NEEDLE BAR OIL FELT
502672 NEEDLE BAR YOKE BEARING (BACK)
502674 NEEDLE BAR YOKE BEARING (FRONT)
502930 NEEDLE BAR YOKE GUIDE SEAL (FRONT AND REAR) (2)
502948 PRESSER BAR WITH 500256
502993 NEEDLE BAR
503682 THROAT PLATE
508506 BED SLIDE SPRING
508507 BED SLIDE WITH 508506 AND TWO 238
508652 PRESSER BAR BUSHING
508879-002 NEEDLE BAR YOKE CPL. NOS., 502594, 502608, 502993 AND 508880
508880 NEEDLE BAR YOKE
508883 NEEDLE BAR YOKE GUIDE (REAR)
508884 NEEDLE BAR YOKE GUIDE (FRONT)
544301 NEEDLE BAR YOKE GUIDE SET SCREW (2)
545180-452 NEEDLE BAR THREAD GUIDE SET SCREW

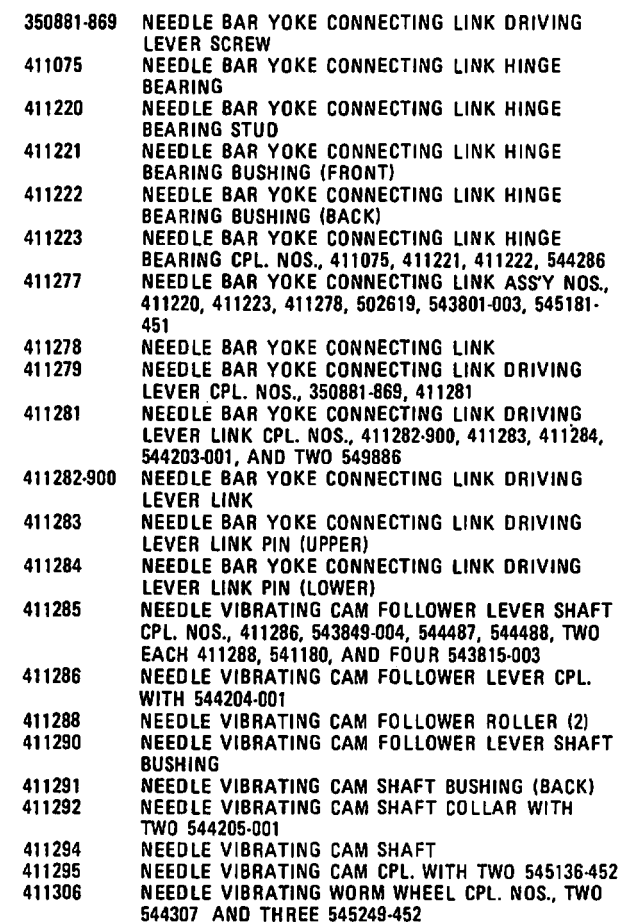



PART NO.	DESCRIPTION
----------	-------------

PART NO.	DESCRIPTION
----------	-------------

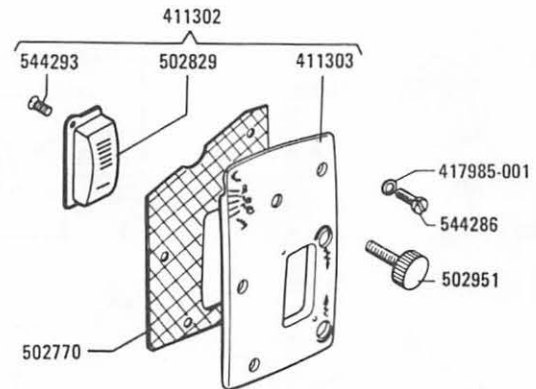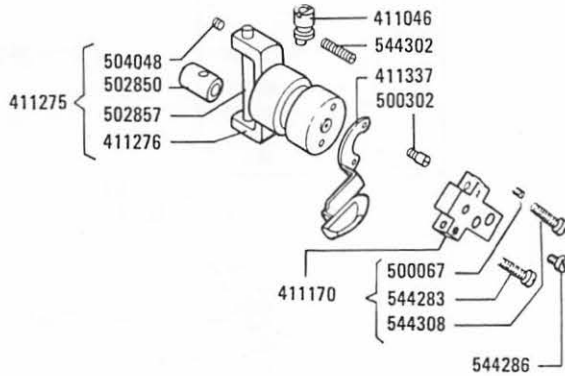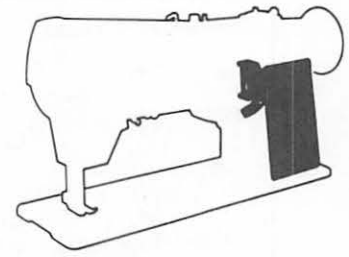


411046	NEEDLE POSITION ADJUSTING CAM REGULATING STUD
411170	NEEDLE POSITION ADJUSTING CAM SLIDE BLOCK BRACKET CPL. NOS., 544283, 544308 AND TWO 500067
411275	NEEDLE BAR YOKE CONNECTING LINK CARRIER FRAME AND BLOCK CPL. NOS., 411276, 502850, 502857 AND TWO 504048
411276	NEEDLE BAR YOKE CONNECTING LINK CARRIER FRAME
411302	ARM COVER (FRONT) CPL. NOS., 411303, 502829 AND TWO 544293
411303	ARM COVER (FRONT)
411337	NEEDLE POSITION ADJUSTING LEVER
417985-001	ARM COVER (FRONT) SCREW GASKET RING (3)
500067-833	NEEDLE POSITION ADJUSTING CAM STOP SCREW SET SCREW (2)
500302-850	NEEDLE POSITION ADJUSTING ECCENTRIC STOP SCREW (2)

502770	ARM COVER (FRONT) GASKET
502829	STITCH LENGTH INDICATOR PLATE
502850	NEEDLE BAR YOKE CONNECTING LINK SLIDE BEARING
502857	NEEDLE BAR YOKE CONNECTING LINK SLIDE STUD
502951-850	NEEDLE POSITION ADJUSTING CAM SET SCREW
504048	NEEDLE BAR YOKE CONNECTING LINK CARRIER FRAME SLIDE STUD SET SCREW (2)
544283	NEEDLE POSITION ADJUSTING CAM STOP SCREW (UPPER)
544286	NEEDLE POSITION ADJUSTING CAM SLIDING BLOCK BRACKET SCREW (2)
544286	ARM COVER (FRONT) SCREW (3)
544293	STITCH LENGTH INDICATOR PLATE SCREW (2)
544302-850	NEEDLE POSITION ADJUSTING CAM REGULATING STUD SET SCREW
544308	NEEDLE POSITION ADJUSTING CAM STOP SCREW (LOWER)

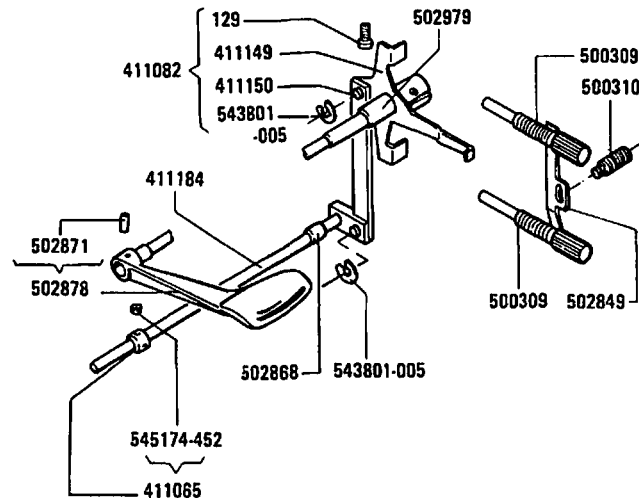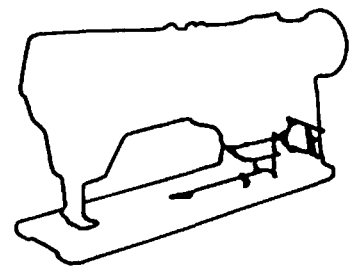





129-850	FEED REGULATING SHAFT INDICATOR LEVER SCREW
411065	FEED REGULATING CONNECTION SHAFT COLLAR WITH TWO 545174-452
411082	FEED REGULATING SHAFT INDICATOR CPL. NOS., 129, 411149, 411150 AND 543801-005
411149	FEED REGULATING SHAFT INDICATOR LEVER
411150	FEED REGULATING SHAFT INDICATOR LEVER CONNECTING LINK
411184	FEED REGULATING CONNECTION SHAFT
500309-850	FEED REGULATING SHAFT INDICATOR STOP SCREW (2)
500310-833	FEED REGULATING RETAINING SPRING SCREW

502849	FEED REGULATING SHAFT INDICATOR STOP SCREW RETAINING SPRING
502868	FEED REGULATING CONNECTION SHAFT BUSHING
502871	FEED REGULATING SHAFT LEVER POSITION PIN
502878	FEED REGULATING SHAFT LEVER WITH 502871
502979	FEED REGULATING SHAFT SPACER
543801-005	FEED REGULATING SHAFT INDICATOR LEVER HINGE STUD RETAINER
543801-005	FEED REGULATING CONNECTION SHAFT CRANK LINK RETAINING RING
545174-452	FEED REGULATING CONNECTION SHAFT COLLAR SET SCREW (2)

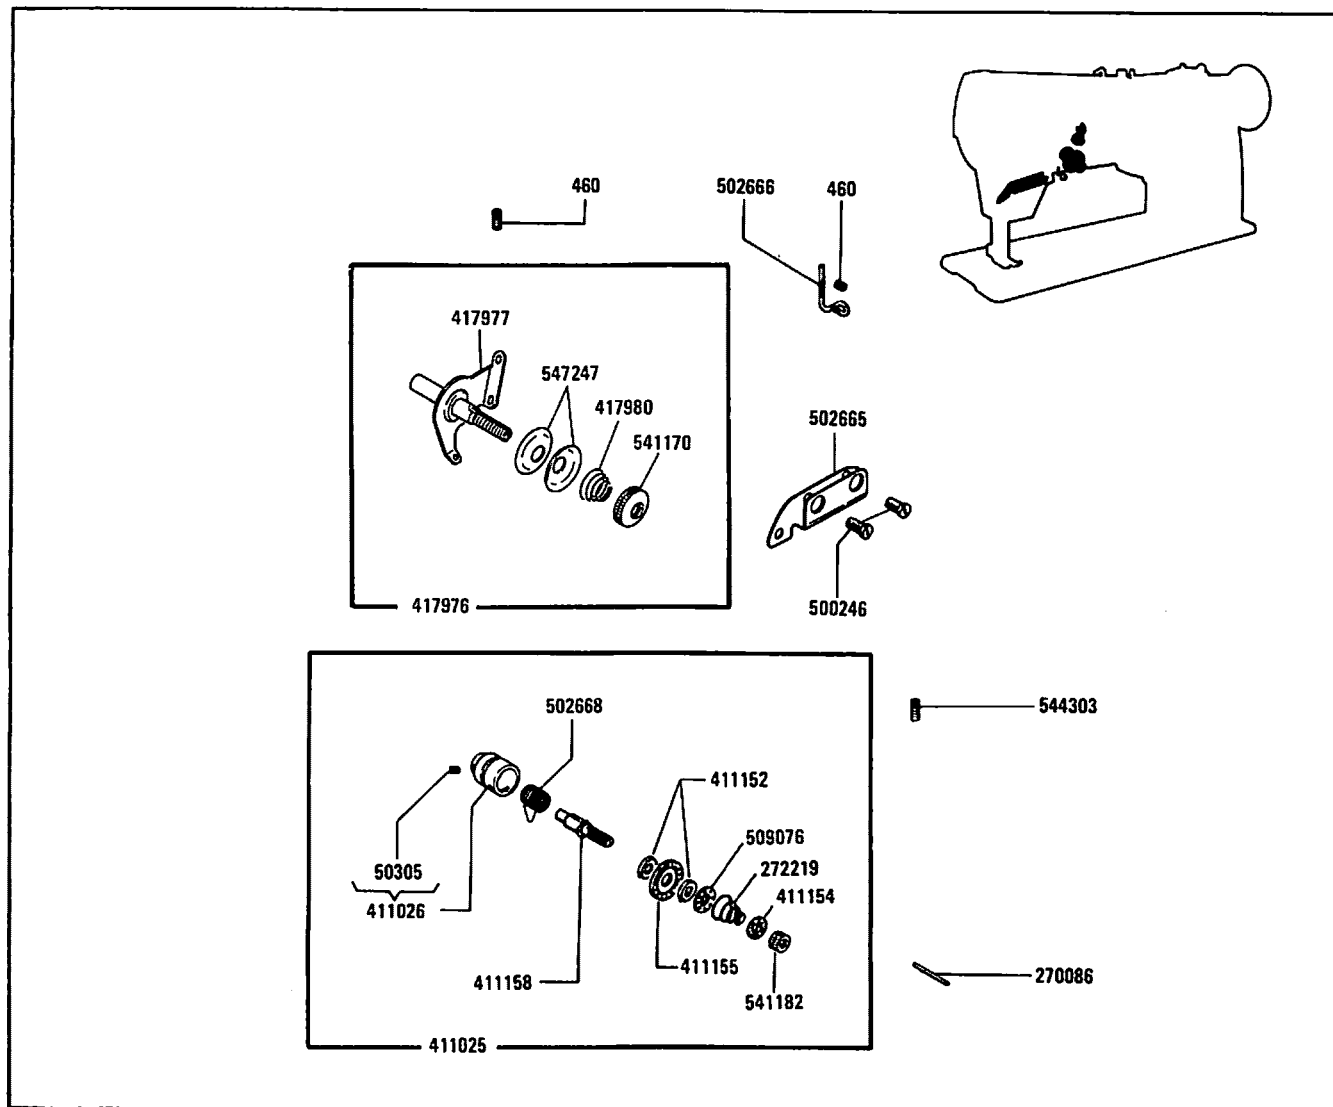



460-833 THREAD PULL OFF SET SCREW
 460-833 PRETENSION BRACKET SET SCREW
 50305-850 TENSION STUD SET SCREW
 270086 TENSION RELEASING PIN
 272219 TENSION SPRING
 411025 TENSION CPL. NOS., 272219, 411026, 411154, 411155,
 411158, 502668, 509076, 541182 AND TWO 411152
 411026 THREAD TAKE-UP SPRING REGULATOR WITH 50305
 411152 TENSION FELT WASHER (2)
 411154 TENSION THUMB NUT LOCK WASHER
 411155 TENSION WHEEL
 411158 TENSION STUD
 417976 PRETENSION CPL. NOS., 417977, 417980, 541170
 AND TWO 547247

  417977 PRETENSION BRACKET
 417980 PRETENSION SPRING
 500246-850 THREAD GUIDE SCREW (2)
 502665 THREAD GUIDE
 502666 THREAD PULL OFF
 502668 THREAD TAKE-UP SPRING
 509076 TENSION RELEASING DISC
 541170 PRETENSION ADJUSTING NUT
 541182 TENSION THUMB NUT
 544303 THREAD REGULATOR SET SCREW
 547247 PRETENSION DISC (2)

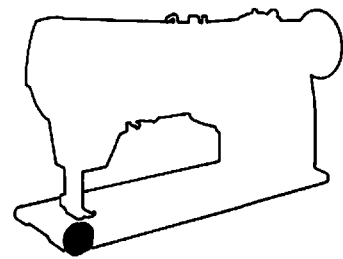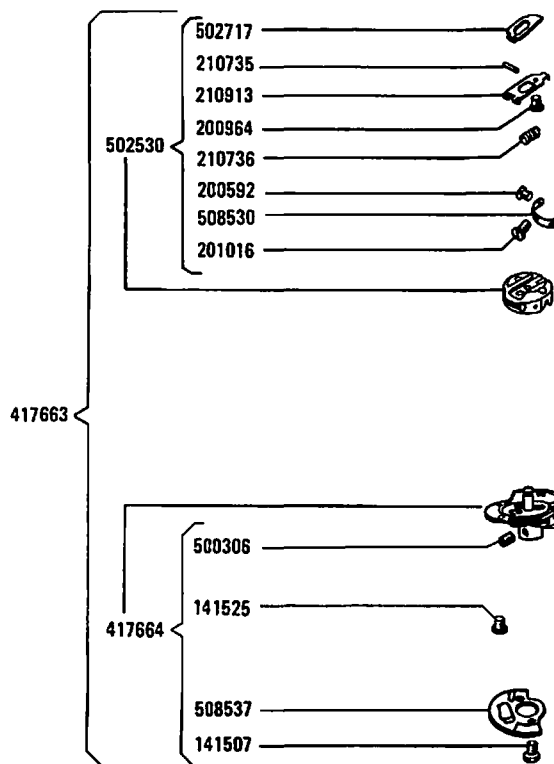






190-850	BOBBIN CASE STOP SCREW
141507-803	HOOK NEEDLE GUARD AND COUNTERBALANCE SCREW
141525-806	HOOK GIB SCREW (3)
200592-803	BOBBIN CASE CAP TENSION SPRING SCREW
200964-803	BOBBIN CASE LATCH STOP SCREW
201016-803	BOBBIN CASE CAP TENSION SPRING REGULATING SCREW
210735	BOBBIN CASE FULCRUM PIN
210736	BOBBIN CASE LATCH SPRING
210913	BOBBIN CASE LATCH
233028-452	BOBBIN

417663	HOOK AND BOBBIN CASE CPL. NOS., 502530 AND 417664
417664	HOOK WITH 141507, 508537, TWO 500306 AND THREE 141525
500306-869	HOOK SET SCREW (2)
502530	BOBBIN CASE CAP WITH 200592, 200964, 201016, 210735, 210736, 210913, 502717 AND 508530
502536	BOBBIN CASE STOP
502717	BOBBIN CASE LATCH LEVER
508530	BOBBIN CASE CAP TENSION SPRING
508537	HOOK NEEDLE GUARD AND COUNTERBALANCE

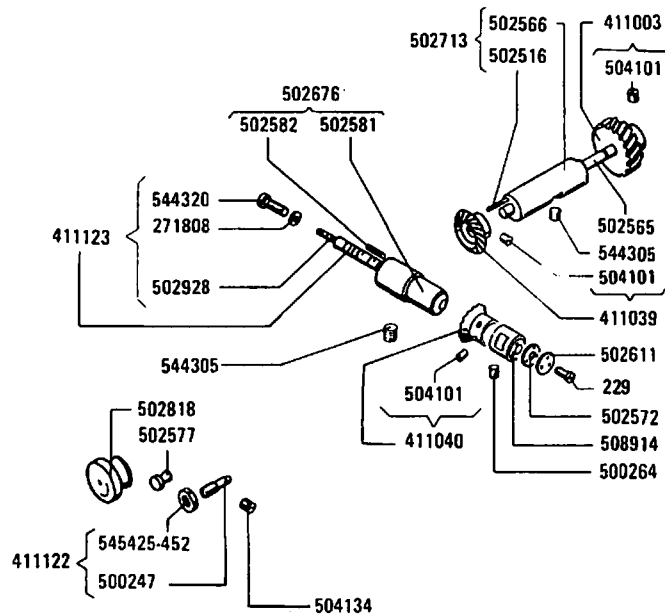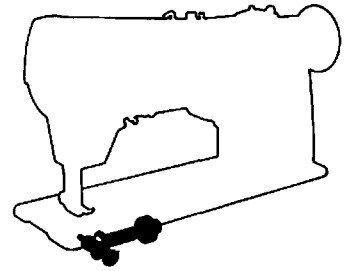


229	HOOK SHAFT BUSHING (FRONT) CAP SCREW (3)
271808	HOOK SHAFT OIL FILTER WICK HOLDER SEAL
411003	HOOK DRIVING SHAFT HELICAL GEAR WITH TWO 504101
411039	HOOK DRIVING SHAFT BEVEL GEAR WITH TWO 504101
411040	HOOK SHAFT BEVEL GEAR WITH TWO 504101
411122	HOOK OIL REGULATING SCREW CPL. NOS., 500247 AND 545425-452
411123	HOOK SHAFT WITH 271808, 502928 AND 544320
500247-833	HOOK OIL REGULATING SCREW
500264-833	HOOK SHAFT BUSHING (FRONT) SET SCREW
502516	HOOK DRIVING SHAFT BUSHING WICK
502565	HOOK DRIVING SHAFT
502566	HOOK DRIVING SHAFT BUSHING
502572	HOOK SHAFT BUSHING CAP GASKET
502577	HOOK SHAFT GEAR BOX PLUG
502581	HOOK SHAFT BUSHING (BACK)


502582	HOOK SHAFT BUSHING (BACK) WICK
502611	HOOK SHAFT BUSHING CAP
502676	HOOK SHAFT BUSHING (BACK) CPL. NOS., 502581 AND 502582
502713	HOOK DRIVING SHAFT BUSHING CPL. NOS., 502516 AND 502566
502818	HOOK SHAFT GEAR BOX VENT CAP
502928	HOOK SHAFT OIL FILTER FELT
504101	HOOK DRIVING SHAFT HELICAL GEAR SET SCREW (2)
504101	HOOK DRIVING SHAFT BEVEL GEAR SET SCREW (2)
504101	HOOK SHAFT BEVEL GEAR SET SCREW (2)
504134	HOOK OIL BYPASS PLUG SCREW
508914	HOOK SHAFT BUSHING (FRONT)
544305	HOOK DRIVING SHAFT BUSHING SET SCREW
544305	HOOK SHAFT BUSHING (BACK) SET SCREW
544320	HOOK SHAFT OIL FILTER WICK HOLDER
545425-452	HOOK OIL REGULATING SCREW LOCK NUT

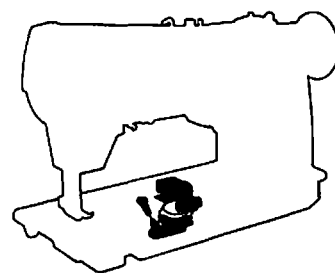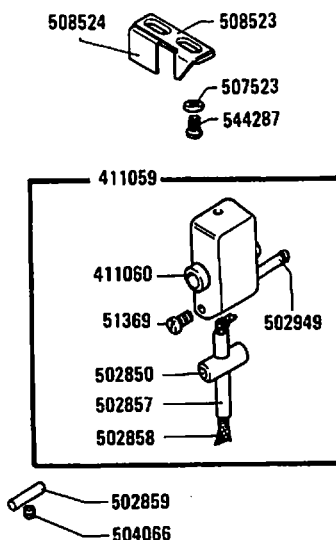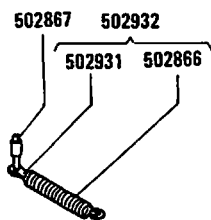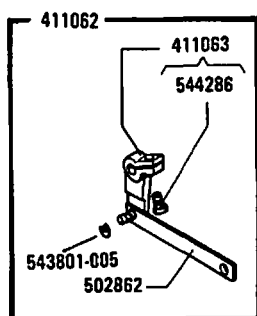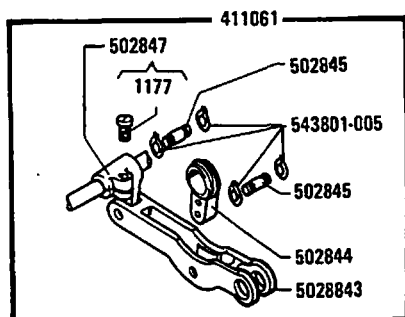

1177-850	FEED DRIVING CONNECTION CRANK PINCH SCREW
51369-850	FEED DRIVING CONNECTION CARRIER FRAME SLIDE STUD SET SCREW
411059	FEED DRIVING CONNECTION CARRIER FRAME CPL. NOS., 51369, 411060, 502850, 502857, 502858 AND 502949
411060	FEED DRIVING CONNECTION CARRIER FRAME
411061	FEED DRIVING CONNECTION CPL. NOS., 502843, 502844, 502847, TWO 502845 AND FOUR 543801-005
411062	FEED REGULATING CONNECTION SHAFT CRANK AND LINK CPL. NOS., 411063, 502862 AND 543801-005
411063	FEED REGULATING CONNECTION SHAFT CRANK WITH 544286
502843	FEED DRIVING CONNECTION LEVER
502844	FEED DRIVING CONNECTION LINK
502845	FEED DRIVING CONNECTION LEVER HINGE PIN (2)
502847	FEED DRIVING CONNECTION CRANK WITH 1177
502850	FEED DRIVING CONNECTION LEVER SLIDE BEARING
502857	FEED DRIVING CONNECTION CARRIER FRAME SLIDE STUD
502858	FEED DRIVING CONNECTION CARRIER FRAME SLIDE STUD OIL WICK
502859	FEED DRIVING CONNECTION CARRIER FRAME BEARING STUD (LEFT)
502860	FEED DRIVING CONNECTION CARRIER FRAME BEARING STUD (RIGHT)
502862	FEED REGULATING CONNECTION SHAFT CRANK LINK


502866	FEED DRIVING CONNECTION CARRIER FRAME SPRING
502867	FEED DRIVING CONNECTION CARRIER FRAME SPRING STUD (BED SIDE)
502931	FEED DRIVING CONNECTION CARRIER FRAME SPRING RETAINER
502932	FEED DRIVING CONNECTION CARRIER FRAME SPRING CPL. NOS., 502866 AND 502931
502949	FEED DRIVING CONNECTION CARRIER FRAME SPRING STUD
504066-452	FEED DRIVING CONNECTION CARRIER FRAME STUD (LEFT) SET SCREW
507523	FEED DRIVING CONNECTION CARRIER FRAME STOP SCREW WASHER (2)
508523	FEED DRIVING CONNECTION CARRIER FRAME STOP (BACK)
508524	FEED DRIVING CONNECTION CARRIER FRAME STOP (FRONT)
543801-005	FEED DRIVING CONNECTION LEVER HINGE PIN RETAINER (4)
543801-005	FEED REGULATING CONNECTION SHAFT CRANK LINK RETAINING RING
544286	FEED REGULATING CONNECTION SHAFT CRANK PINCH SCREW
544287	FEED DRIVING CONNECTION CARRIER FRAME STOP SCREW (2)
544307	FEED DRIVING CONNECTION CARRIER FRAME STUD (RIGHT) SET SCREW

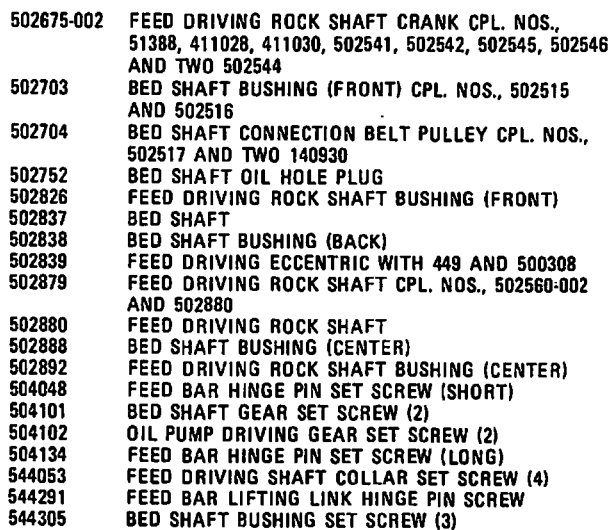

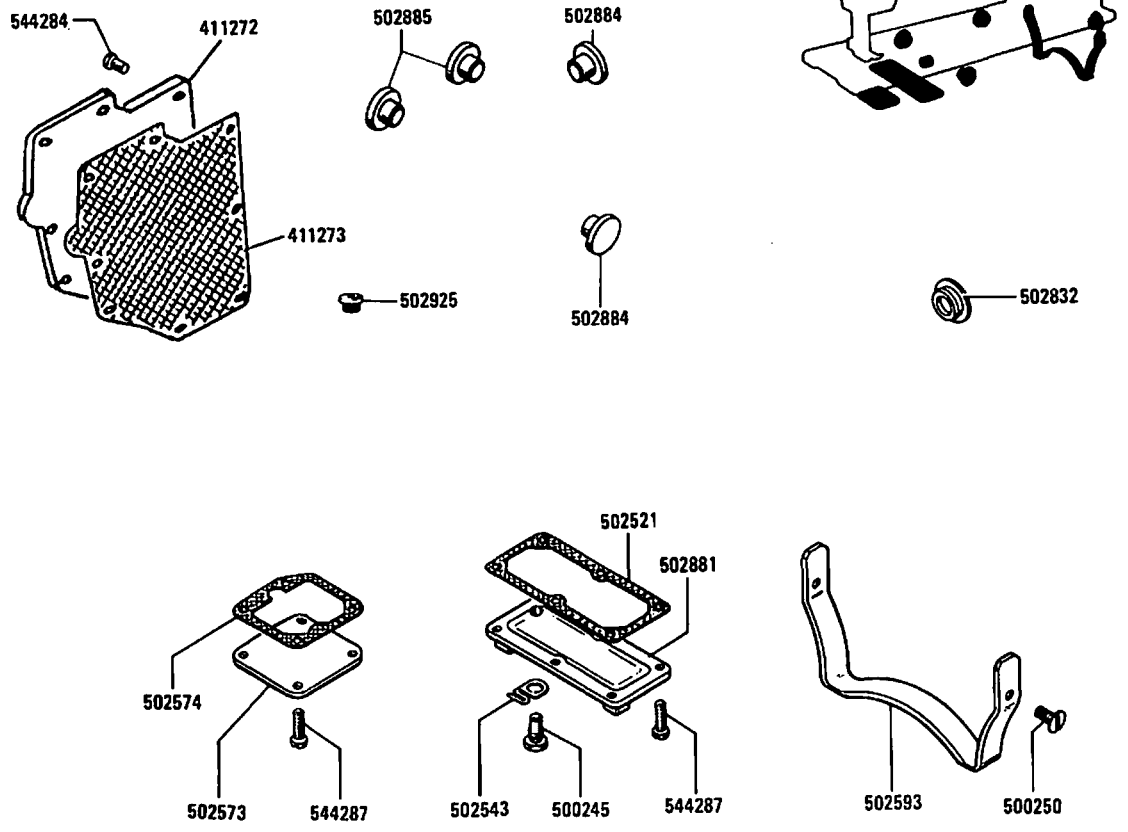


411272 ARM COVER (BACK)
 411273 ARM COVER (BACK) GASKET
 500245-850 BED SHAFT GEAR BOX COVER DRAIN SCREW
 500250 MACHINE LEG SCREW (2)
 502521 BED SHAFT GEAR BOX COVER GASKET
 502543 FEED BAR HINGE PIN OILING FELT CLAMP
 502573 HOOK SHAFT GEAR BOX COVER
 502574 HOOK SHAFT GEAR BOX COVER GASKET
 502593 MACHINE LEG

502832 FEED REGULATING SHAFT PLUG
 502881 BED SHAFT GEAR BOX COVER
 502884 BED PLUG (FRONT AND REAR SIDE) (2)
 502885 BED PLUG (BACK) (2)
 502925 BED PLUG SCREW
 544284 ARM COVER SCREW (8)
 544287 BED SHAFT GEAR BOX COVER SCREW (6)
 544287 HOOK SHAFT GEAR BOX COVER SCREW (4)

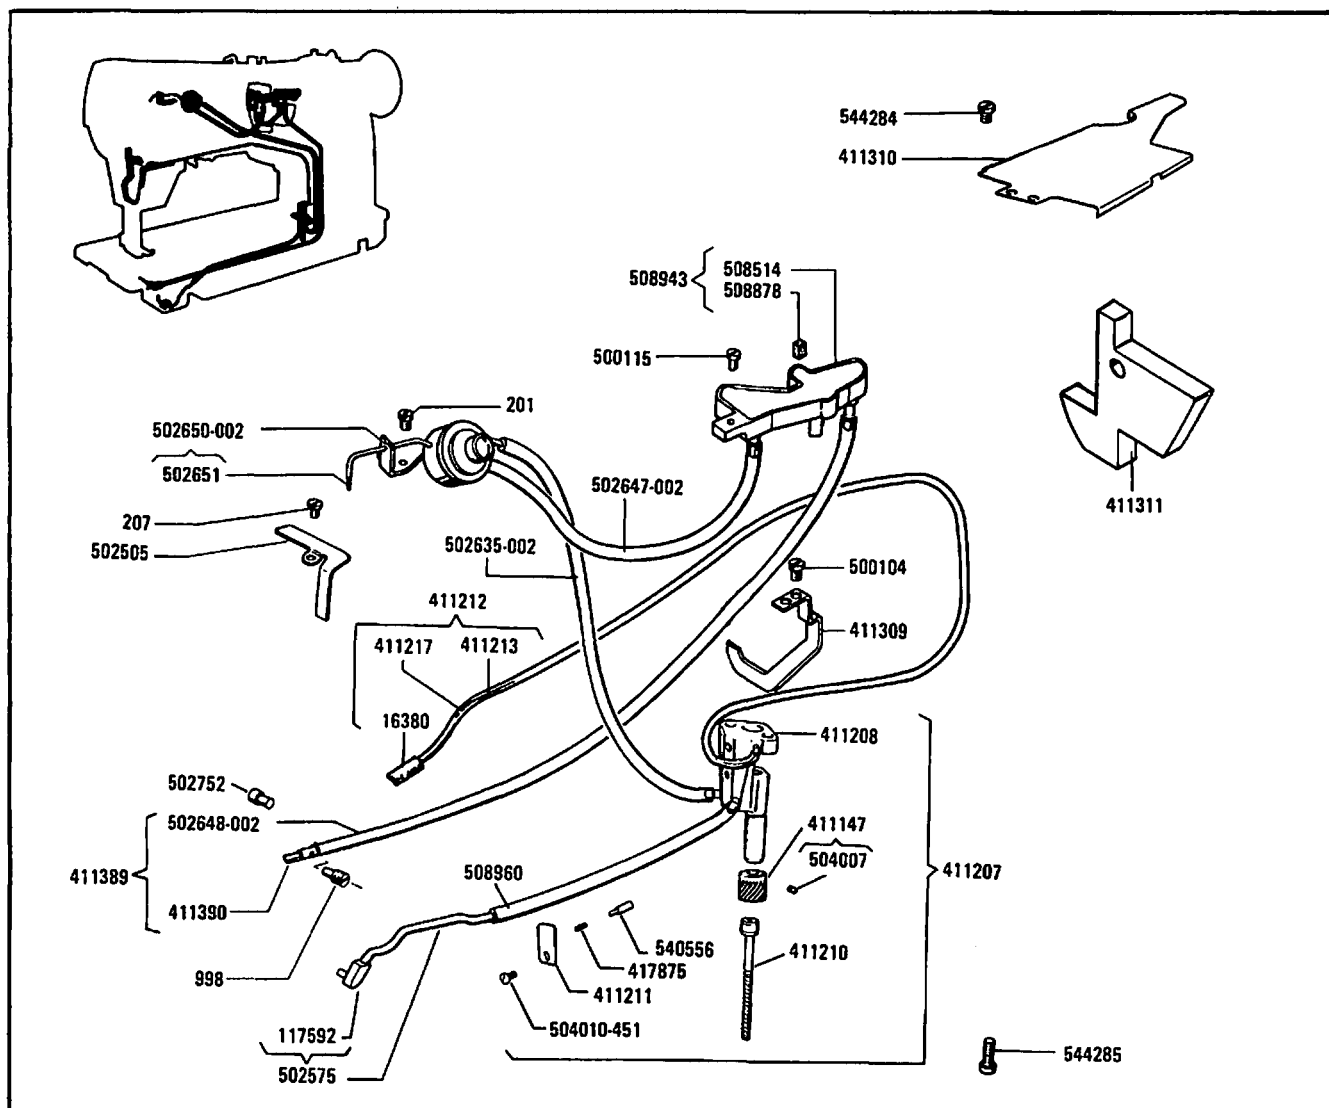


201-850	OIL SIGHT BODY SCREW (2)
207-850	HEAD END OIL DRAIN WICK CLAMP SCREW
998-833	OIL RETURN TUBE SCREW
16380	OIL REMOVING LINT SCREEN
117592	HOOK SHAFT GEAR BOX OIL PIPE CONNECTOR
411147	OIL PUMP GEAR WITH TWO 504007
411207	OIL PUMP BODY CPL. NOS., 411147, 411208, 411210, 411211, 504010-451, 540556 AND 417875
411208	OIL PUMP BODY
411210	OIL PUMP SCREW SHAFT
411211	OIL REMOVING PUMP PISTON SPRING BRACKET
411212	OIL REMOVING TUBE, OIL REMOVING LINT SCREEN CPL. NOS., 16380, 411213 AND 411217
411213	OIL REMOVING TUBE
411217	OIL REMOVING TUBE WIRE
411309	ARM OIL SHIELD (AERATED PLASTIC) RETAINER OIL GUARD
411310	OIL GUARD
411311	ARM OIL SHIELD (AERATED PLASTIC)
411389	OIL RETURN TUBE LOWER (LONG) CPL. NOS., 502648-002 AND 411390
411390	OIL RETURN TUBE
417875	OIL REMOVING PUMP PISTON SPRING

500104-850	ARM OIL SHIELD (AERATED PLASTIC) RETAINER SCREW (2)
500115-850	OIL-DISTRIBUTOR PLATE SCREW
502505	HEAD END OIL DRAIN WICK CLAMP (FRONT)
502575	HOOK SHAFT GEAR BOX OIL PIPE WITH 117592
502635-002	OIL DELIVERY TUBE
502647-002	OIL RETURN TUBE UPPER (SHORT)
502648-002	OIL RETURN TUBE LOWER (LONG)
502650-002	OIL SIGHT BODY WITH 502651
502651	OIL SIGHT WICK
502752	BED SHAFT BUSHING (CENTER) OIL HOLE PLUG
504007	OIL PUMP GEAR SET SCREW (2)
504010-451	OIL REMOVING PUMP PISTON SPRING BRACKET SET SCREW
508514	OIL DISTRIBUTOR PLATE
508878	OIL DISTRIBUTOR PLATE FOAM PAD
508943	OIL DISTRIBUTOR PLATE CPL. NOS., 508514 AND 508878
508960	HOOK SHAFT GEAR BOX OIL PIPE
540556	OIL REMOVING PUMP PISTON
544284	OIL GUARD SCREW (2)
544285	OIL PUMP MOUNTING SCREW (2)

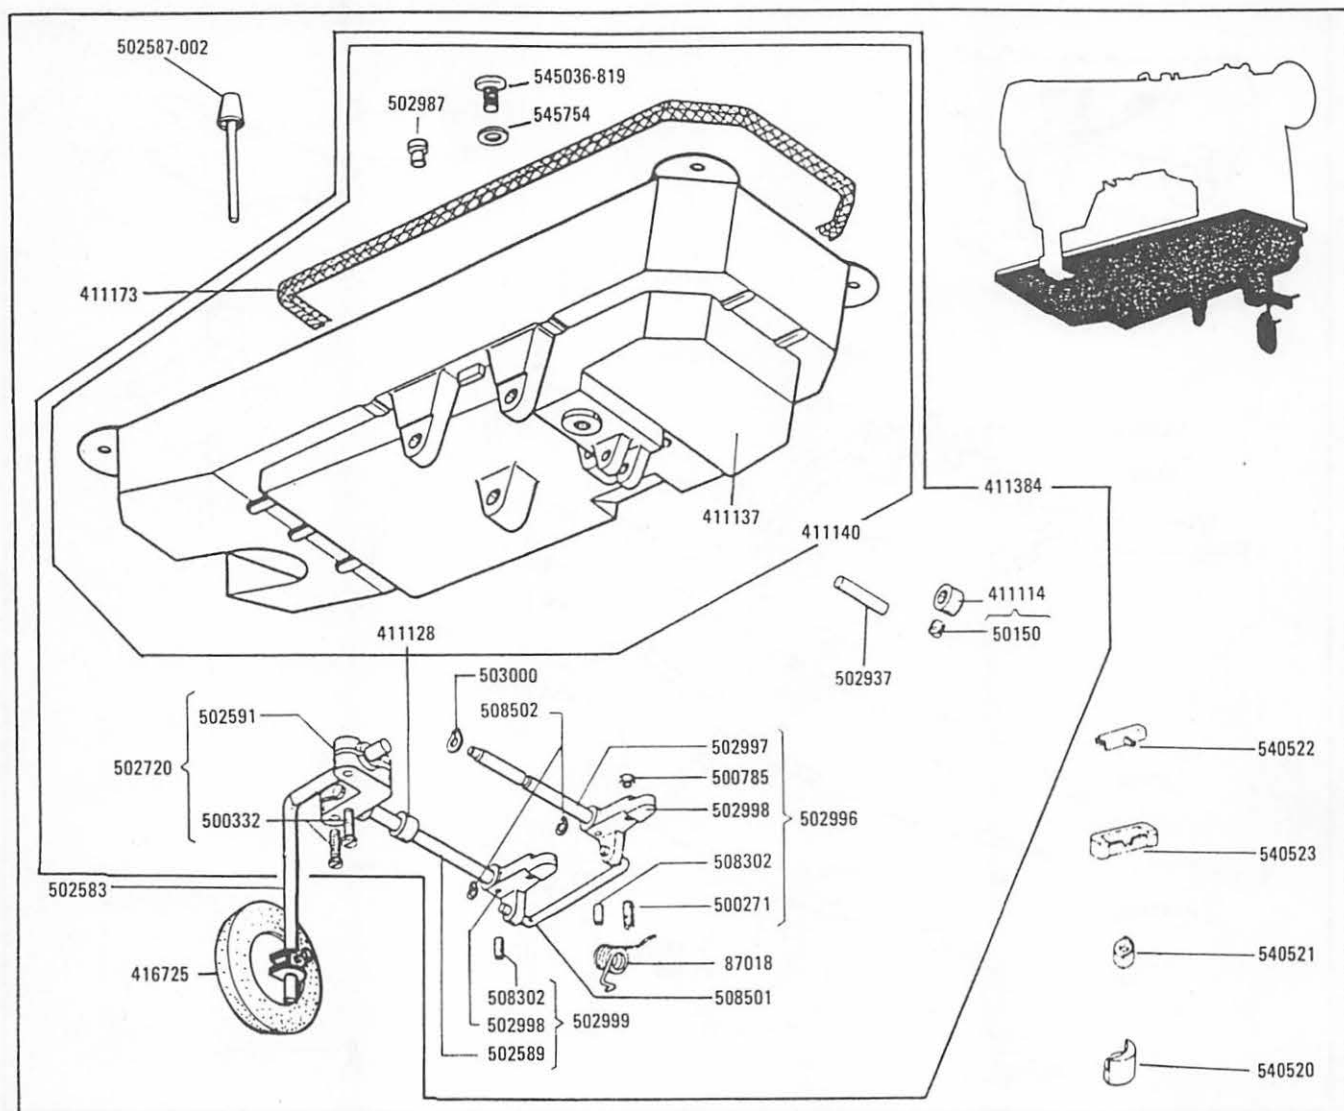

50150-833	FEED REVERSING FOOT CONTROL LEVER PIN COLIAR SET SCREW
87018	KNEE LIFTER RETURNING SPRING
411114	FEED REVERSING FOOT CONTROL LEVER PIN COLIAR WITH 50150
411128	KNEE LIFTER ROCK SHAFT SPACER
411137	MACHINE BASE AND OIL RESERVOIR
411140	MACHINE BASE AND OIL RESERVOIR (CPL.) NOS., 411128, 411137, 502987, 545036-819 AND 545754
411173	MACHINE BASE AND OIL RESERVOIR CUSHION
411384	OIL RESERVOIR AND KNEE LIFTER ASS'Y NOS., 87018, 411114, 411140, 502720, 502937, 502996, 502999, 503000, 508501 AND TWO 508502
416725	KNEE LIFTER KNEE PLATE CPL.
500271-833	KNEE LIFTER CONTROL SHAFT CRANK STOP SCREW
500332-850	KNEE LIFTER ROCK SHAFT HUB PINCH SCREW (2)
500785-850	KNEE LIFTER CONTROL SHAFT CRANK STOP SCREW NUT
502583	KNEE LIFTER KNEE PLATE ARM
502587-002	KNEE LIFTER PLUNGER
502589	KNEE LIFTER ROCK SHAFT
502591	KNEE LIFTER ROCK SHAFT HUB
502720	KNEE LIFT BROCK SHAFT HUB WITH TWO 500332
502937	FEED REVERSING FOOT CONTROL LEVER PIN







502987	FEED REVERSING PLUNGER HOLE PLUG
502996	KNEE LIFTER CONTROL SHAFT CPL. NOS., 500271, 500785, 502997, 502998 AND 508302
502997	KNEE LIFTER CONTROL SHAFT
502998	KNEE LIFTER CONTROL SHAFT CRANK
502998	KNEE LIFTER SHAFT CRANK
502999	KNEE LIFTER ROCK SHAFT CPL. NOS., 502589, 502998 AND 508302
503000	KNEE LIFTER CONTROL SHAFT GRIP RING
508302	KNEE LIFTER CONTROL SHAFT CRANK PIN
508302	KNEE LIFTER ROCK SHAFT CRANK PIN
508501	KNEE LIFTER ROCK SHAFT CONNECTION
508502	KNEE LIFTER ROCK SHAFT CONNECTION GRIP RING
540520	MACHINE BASE AND OIL RESERVOIR CUSHION (FRONT) WITH TWO WIRE NAIL (2)
540521	MACHINE BASE AND OIL RESERVOIR CUSHION (BACK) WITH TWO WIRE NAIL (2)
540522	MACHINE HINGE (2)
540523	MACHINE HINGE CONNECTION CUSHION (2)
545036-819	MACHINE BASE AND OIL RESERVOIR DRAIN PLUG SCREW
545754	MACHINE BASE AND OIL RESERVOIR DRAIN PLUG SCREW GASKET

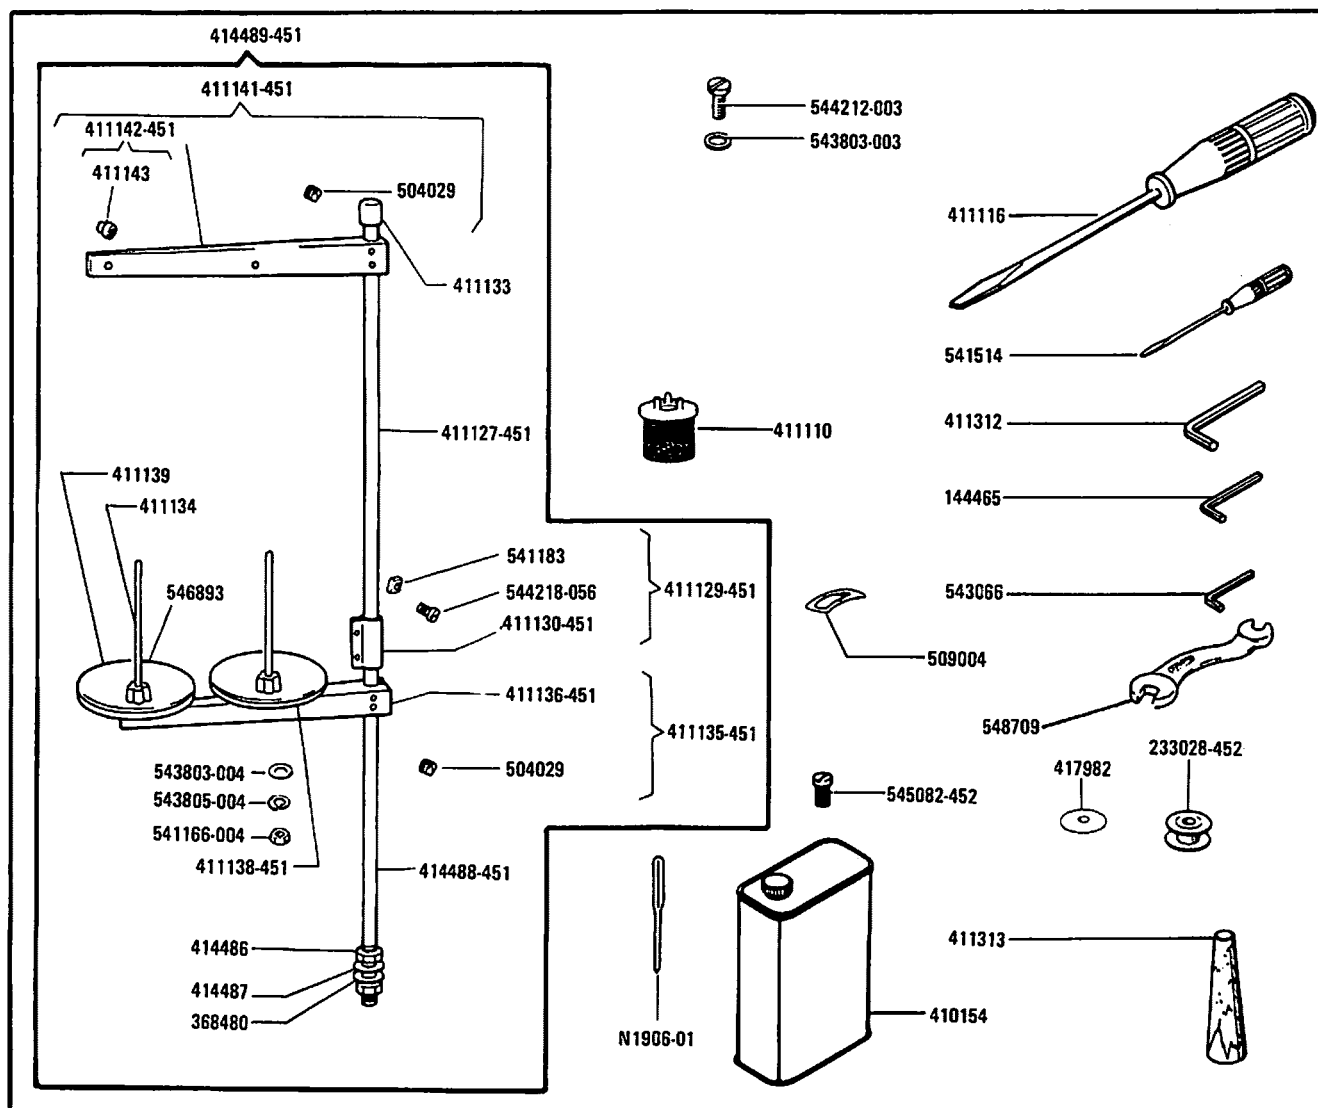

N1906-01 NEEDLE (CAT. NO. 1906-01, #12) (5)
 144465 WRENCH (1/8 INCH HEXAGON)
 233028-452 BOBBIN (2)
 368480 THREAD UNWINDER ROD RUBBER CUSHION (2)
 410154 OIL CAN (750CC FILLED WITH SINGER TYPE "C" OIL)
 411110 OIL FILTER
 411116 SCREW DRIVER (LARGE)
 411127-451 THREAD UNWINDER ROD
 411129-451 THREAD UNWINDER ROD CONNECTION CPL. NOS., 411130-451, TWO EACH 541183 AND 544218-056
 411130-451 THREAD UNWINDER ROD CONNECTION
 411133 THREAD UNWINDER ROD CAP
 411134 THREAD UNWINDER SPOOL (2)
 411135-451 THREAD UNWINDER SPOOL CARRIER ARM CPL. NOS., 411136-451 AND TWO 504029
 411136-451 THREAD UNWINDER SPOOL CARRIER ARM
 411138-451 THREAD UNWINDER SPOOL CARRIER PLATE (2)
 411139 THREAD UNWINDER SPOOL CARRIER PLATE CUSHION (2)
 411141-451 THREAD UNWINDER THREAD GUIDE CPL. NOS., 411142-451 AND TWO 504029
 411142-451 THREAD UNWINDER THREAD GUIDE WITH TWO 411143
 411143 THREAD UNWINDER THREAD GUIDE EYELET (2)
 411312 WRENCH (4mm HEXAGON)
 411313 MACHINE REST PIN (WOOD)
 414486 THREAD UNWINDER ROD LOCK NUT (2)
 414487 THREAD UNWINDER ROD LOCK NUT WASHER (2)
 414488-451 THREAD UNWINDER ROD

414489-451 THREAD UNWINDER (2-SPOOLS) CPL. NOS., 411127-451, 411129-451, 411133, 411135-451, 411141-451, 414488-451, TWO EACH 368480, 411134, 411138-451, 411139, 414486, 414487, 541166-004, 543803-004, 543805-004 AND 546893
 417982 ANTISPILLAGE SPACER
 504029 THREAD UNWINDER SPOOL CARRIER ARM SET SCREW (2)
 509004 THREAD UNWINDER THREAD GUIDE SET SCREW (2)
 541166-004 BOBBIN CASE ANTISPILLAGE SPRING
 541183 THREAD UNWINDER SPOOL LOCK NUT (2)
 541183 THREAD UNWINDER ROD CONNECTION SCREW NUT (2)
 541514 SCREW DRIVER (SMALL)
 543066 WRENCH (2mm HEXAGON)
 543803-003 MACHINE GRINDING WIRE SCREW WASHER
 543803-004 THREAD UNWINDER SPOOL LOCK NUT WASHER (2)
 543805-004 THREAD UNWINDER SPOOL LOCK NUT SPRING WASHER (2)
 544212-003 MACHINE GRINDING WIRE SCREW
 544218-056 THREAD UNWINDER ROD CONNECTION SCREW (2)
 545082-452 ATTACHMENT SCREW
 546893 THREAD UNWINDER SPOOL HOLDER (2)
 548709 WRENCH (8mm/10mm)

  
 


457U OPTIONAL PARTS

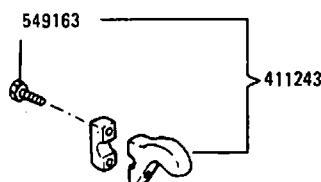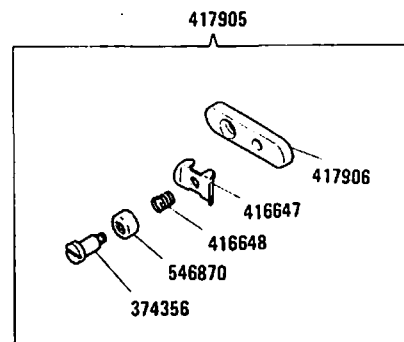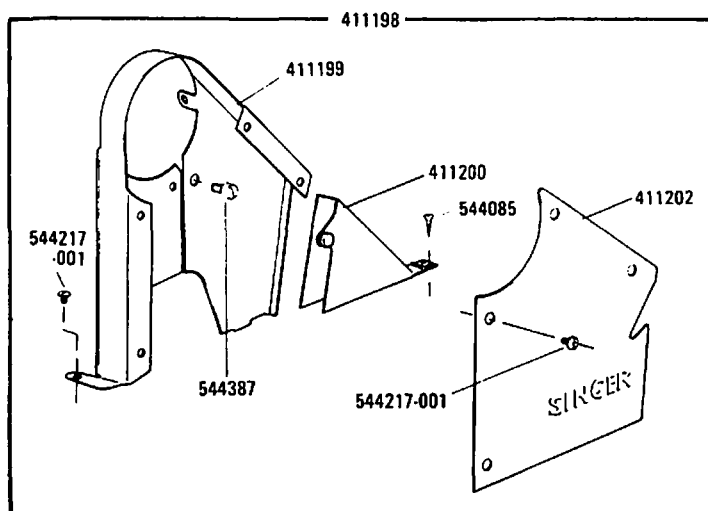

N1906-01	NEEDLE (CAT. NO. 1906-01, #14)
374356	NEEDLE THREAD NIPPER HINGE SCREW
411198	BELT GUARD CPL. NOS., 411199, 411200, 411202, 544837, TWO 544085 AND EIGHT 544217-001
411199	BELT GUARD
411200	BELT GUARD (LOWER)
411202	BELT GUARD PLATE
411243	FOOT CONTROL REVERSE FEED BLOCK WITH 549163
416647	NEEDLE THREAD NIPPER THREAD GUIDE
416648	NEEDLE THREAD NIPPER SPRING

417905	NEEDLE THREAD NIPPER CPL. NOS., 374356, 416647, 416648, 417906 AND 546870
417906	NEEDLE THREAD NIPPER PLATE
503818	PRESSER FOOT
503822	PRESSER FOOT
544085	BELT GUARD (LOWER) SCREW (WOOD) (2)
544217-001	BELT GUARD SCREW (SMALL) (4)
544217-001	BELT GUARD PLATE SCREW (4)
544387	BELT GUARD SCREW (LARGE)
546870	NEEDLE THREAD NIPPER SPRING CAP
549163	FOOT CONTROL REVERSE FEED BLOCK SCREW

    457UX143 OPTIONAL CAMS

PART NO.	DESCRIPTION	STITCH PATTERN	MAX. PATTERN WIDTH (mm)A	MAX. PATTERN THICKNESS(mm)B
411358	12-STITCH OPEN SC- ALLOP CAM		8.0	2.4
411360	24-STITCH CRESCENT SCALLOP CAM		8.0	3.6
411362	3 STEP ZIGZAG CAM		8.0	—
411364	BLIND STITCH CAM (6 STITCHES)		5.0	—
411394	PLAIN ZIGZAG CAM		5.0	—
411396	BLIND STITCH CAM (4 STITCHES)		5.0	—
411462	2 STEP ZIGZAG CAM		8.0	—
411464	24-STITCH EVEN SC- ALLOP CAM		8.0	3.4
411480	BLIND STITCH CAM (8 STITCHES)		5.0	—
411482	BLIND STITCH CAM (12 STITCHES)		5.0	—

* ABOVE OPTIONAL CAMS ARE INTERCHANGEABLE WITH STANDARD CAM(P/N 411295)
FOR 24 STITCH EVEN SCALLOP STITCH (MAX. PATTERN WIDTH 8.0 mm / MAX.
PATTERN THICKNESS 2.6 mm)