

HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 23 ST. N.Y.C. CH. 3-0887

PRICE LIST

OF

PARTS



MACHINES

OF

CLASS 51w

THE SINGER MANUFACTURING COMPANY

INDEX

	PAGE
ACCESSORIES.....	66
BOBBIN WINDER	66
FEED DOGS.....	69
FOOT LIFTER PARTS.....	67
HEMMER FEET.....	78
KNIFE GRINDER.....	80
MACHINE No. 51 w 25.....	7
“ “ 51 w 26.....	16
“ “ 51 w 27.....	25
“ “ 51 w 28.....	34
“ “ 51 w 29.....	43
“ “ 51 w 30.....	53
“ “ 51 w 31.....	65
NUMERICAL LIST OF PARTS.....	83
PRESSER FEET.....	70
ROLLER PRESSERS.....	72
THROAT PLATES.....	74
UNDER DRIVER.....	81
WOOD BASE.....	79
WORK PLATE PLATFORM.....	79

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.


202001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE
FOR

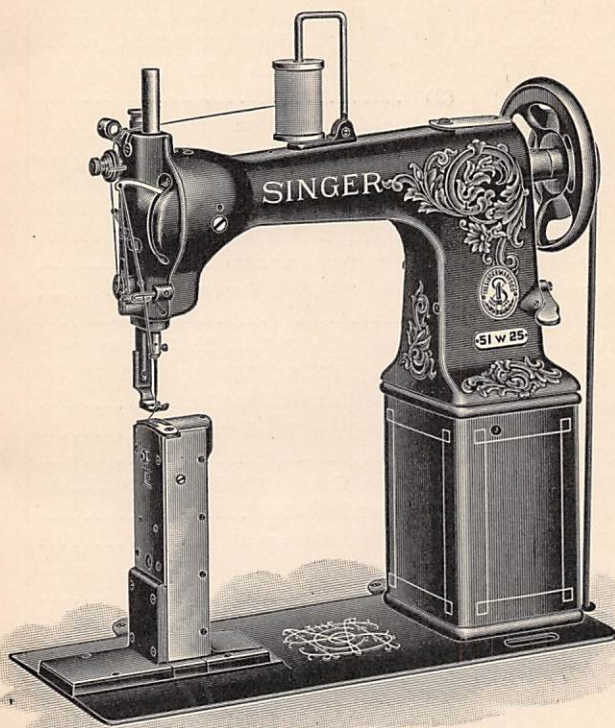

MACHINE No. 51 w 25

DROP FEED

For General Cloth Work, Shirts, Underwear, Corsets,
Tailoring, Etc.

No.	Plate	Name	Each
*204161	—	Arm	\$ —
*204412	—	“ 204161 with 200439c, 202036 and 204705	—
*213434	—	Arm Base	—
200010E	11763	“ “ Screw (3)	06
202005	12374	“ “ “ Washer (3)	01
204163	12344	“ Cap	10

No.	Plate	Name	Each
200278H	12311	Arm Cap Screw	\$ 05
202248H	12351	" " " Washer	05
200963E	12311	" Screw (3)	06
202005	12374	" " Washer (3)	01
203202	11760	" Shaft	1 75
204705	12361	" " Bushing (front)	35
200439C	12311	" " " Position Screw.....	05
213432	11760	" " Connection with four 200054E (2)	60
200054E	12351	Arm Shaft Connection Screw.....	03
202299	—	" " Oil Packing (wick) (2).....	01
204805	11760	Balance Wheel, 5½ in. diam. (belt groove 3 in. diam.) with 200328c and 200335c	1 00
200062H	12311	Balance Wheel Adjusting Screw.....	07
200328C	12311	" " Position Screw	04
200335C	12311	" " Set Screw	04
*221201	—	Bed	—
*221202	—	" 221201 with 203248, 203249, two each 200362C, 200516E, 200840E and 202299	—
202258	12153	Bed Hinge Connection (2).....	08
200570E	12311	" " " Screw (4)	05
203208	12312	Bobbin	05
203210	12312	" Case Base with 202056, 203211 to 203213 and 203216	55
203211	12312	Bobbin Case Base Latch	05
*202056	12312	" " " " Pin	—
203212	12312	" " " " Plunger	02
203213	12312	" " " " Spring	01
203209	12312	" " Cap with 200984F, 203214, 203215 and two 200594F.....	25
203214	12312	Bobbin Case Tension Spring	10
200984F	12312	" " " " Regulating Screw	04
200594F	12312	Bobbin Case Tension Spring Screw....	02
203215	12312	" " Thread Guide	05
200594F	12312	" " " " Screw	02
203216	12312	" " Washer (cloth)....Per 100	25
203217	12312	Bobbin Case complete, Nos. 203209 and 203210	80
204184	11760	Face Plate with 200355H, 200368H, 202090, 204185, 204281 and two 200397H.....	75
200053C	12311	Face Plate Screw	04
204185	12378	" " Thread Guide	03
200397H	12349	" " " " Set Screw	02
204186	11760	Face Plate complete, Nos. 200135C, 200309E, 200319C, 200577H, 204059, 204184, 204267, 204272 and 204277 to 204280	2 40

No.	Plate	Name	Each
213426	11762	Feed Bar	\$ 50
213425	—	" " 213426 with 200214E, 201525E and 221508	1 00
200214E	12378	Feed Bar Hinge Screw	12
201525E	12378	" " " " Nut	03
212628	12240	" Dog	1 00
203609	11762	" " Lever with 200098E	60
200362C	12311	" " " Adjusting Screw	03
201524E	12378	" " " " Check Nut	03
200263D	11763	Feed Dog Lever Hinge Screw	08
201528E	11763	" " " " " Nut	04
221207	11761	" " " Post	2 50
221208	11761	" " " " 221207 with 200265E, 201525E, 203609, 203610, 221211, 221212, four each 200054E and 200578H	6 25
221209	11761	Feed Dog Lever Post Cover (back)	40
221226	11761	" " " " " (front)	40
200159B	—	" " " " " " Clamp Screw	04
221211	11761	Feed Dog Lever Post Cover (side) with 200362C and 201524E	1 25
200583H	11763	Feed Dog Lever Post Cover (back or front) Screw	02
200578H	11763	Feed Dog Lever Post Cover (side) Screw	05
200024C	11763	" " " " Screw (2)	04
221212	11761	" " " " Support	1 50
200054E	12351	" " " " " Screw	03
200008C	12321	" " " " " " (2)	07
203637	11763	" " " " " " Washer (2)	02
203610	11763	Feed Dog Lever Slide Block	15
200265E	11763	" " " " " Hinge Screw	06
201525E	12378	" " " " " " " Nut	03
200098E	12351	Feed Dog Screw	03
213428	11763	" Driving Cam with 200382C and 200437C	50
213429	11762	Feed Driving Cam Fork Lever with 204195 and 204293	85
213427	11762	Feed Driving Cam Fork Lever Connec- tion with 200668C and 201525E	35
204194	11763	Feed Driving Cam Fork Lever Connec- tion Clamp with 200031C	45
200031C	12311	Feed Driving Cam Fork Lever Connec- tion Clamp Pinch Screw	04
200668C	12378	Feed Driving Cam Fork Lever Connec- tion Clamp Screw Stud	06

No.	Plate	Name	Each
201525E	12378	Feed Driving Cam Fork Lever Connection Clamp Screw Stud Nut	\$ 03
200002E	12378	Feed Driving Cam Fork Lever Connection Hinge Screw	07
201522E	12378	Feed Driving Cam Fork Lever Connection Hinge Screw Nut	03
*204195	—	Feed Driving Cam Fork Lever Shaft	—
204197	11763	" " " " " "	
		Collar with 200113F	15
200113F	12374	Feed Driving Cam Fork Lever Shaft Collar Set Screw	03
204293	12374	Feed Driving Cam Fork Lever Shaft Position Pin	01
204196	12351	Feed Driving Cam Fork Lever Shaft Sleeve (split)	25
200043C	12311	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw	04
201524E	12378	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut	03
213693	11762	Feed Driving Cam Fork Lever complete, Nos. 204194 and 213429	1 30
200437C	12311	Feed Driving Cam Position Screw.....	06
200382C	11142	" " " Set Screw	02
204199	12371	" " Rock Shaft	35
213495	—	" " " " 204199 with 200002E, 201522E and 213427	80
202305C	12351	Feed Driving Rock Shaft Center (2)	06
200043C	12311	" " " " " Set Screw (2)	04
221508	11763	Feed Driving Rock Shaft Crank with two 200383c	35
200383C	12311	Feed Driving Rock Shaft Crank Set Screw	02
203235	12374	Feed Lifting Cam with 202126.....	75
204202	12374	" " " Fork with 200027E ..	75
200027E	12378	" " " " Pinch Screw ...	04
202126	12374	" " " Position Pin	01
200045C	12378	" " " Screw	03
203305	11762	" " Rock Shaft	30
203315	11762	" " " " 203305 with 203238	65
202305C	12351	" " " " Center (2).....	06
200043C	12311	" " " " " Set Screw (2)	04
202276	12374	" " " " Slide Block	15
203238	12374	" " " " " 202276 with 200243E and 201531E	35
200243E	12378	Feed Lifting Rock Shaft Slide Block Hinge Screw	08
201531E	12374	Feed Lifting Rock Shaft Slide Block Hinge Screw Nut	03

No.	Plate	Name	Each
204206	—	Feed Regulating Handle	\$ 10
204207	12361	" " " 204206 with 200098F, 202622, 204208 to 204210 and 204213	55
204208	12351	Feed Regulating Handle Adjustable Stop	05
200098F	12351	" " " " "	
		Screw	03
204209	12351	Feed Regulating Handle Position Pin..	01
204210	11763	" " " Shaft	20
204211	11763	" " " " Crank with 200078c	20
213433	11762	Feed Regulating Handle Shaft Crank Link	25
200271E	12311	Feed Regulating Handle Shaft Crank Link Hinge Screw (lower).....	05
200291E	12351	Feed Regulating Handle Shaft Crank Link Hinge Screw (upper).....	05
200078c	12351	Feed Regulating Handle Shaft Crank Set Screw	03
204213	12351	Feed Regulating Handle Shaft Sleeve (split)	15
200362c	12311	Feed Regulating Handle Shaft Sleeve Set Screw	03
202622	11763	Feed Regulating Handle Shaft Sleeve Washer	01
202036	12378	Feed Regulating Handle Stop Pin.....	01
213902	—	Feed Regulating Handle complete, Nos. 200291E, 204207, 204211 and 213433....	1 05
227307	11760	Foot Lifter Lifting Lever.....	20
227479	—	" " " " 227307 with 200262H	30
227353	—	Foot Lifter Lifting Lever 227479 with 227273	85
200262H	11763	Foot Lifter Lifting Lever Hinge Screw..	10
227475	11760	" " " " Rod with 202302	10
227273	—	" " " " 2 2 7 4 7 5 with 206628, 227227 and 227576.....	55
204126	12321	Foot Lifter Lifting Lever Rod Clamp with two 200530c	20
227316	12388	Foot Lifter Lifting Lever Rod Clamp Hook	05
227576	12388	Foot Lifter Lifting Lever Rod Clamp Hook 227316 with 204126.....	25
200530c	12321	Foot Lifter Lifting Lever Rod Clamp Set Screw	05
202302	12321	Foot Lifter Lifting Lever Rod Cotter Pin	01
206628	12388	Foot Lifter Lifting Lever Rod Spring	05

No.	Plate	Name	Each
227227	12388	Foot Lifter Lifting Lever Rod Spring Collar with 200113F	\$ 15
200113F	12374	Foot Lifter Lifting Lever Rod Spring Collar Set Screw	03
*203239	—	Hook (sewing)	—
203240	12312	" 203239 with 200600F, 200616F and 203251	2 20
203290	12312	Hook and Bobbin Case complete, Nos. 203217 and 203240	3 00
203242	12344	Hook Bevel Gear, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Gear Set Screw	02
203242	12344	" " Pinion, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Pinion Set Screw	02
203306	11768	" Counter Shaft	45
203244	12374	" " Collar with two 200393c	20
200393c	12374	Hook Counter Shaft Collar Set Screw ..	02
203245	12344	" " " Driving Gear, 44 teeth, with 200362c and 200439c	1 00
213154	—	Hook Counter Shaft Driving Gear 203245 with 200045c and 203235	1 80
200439c	12311	Hook Counter Shaft Driving Gear Position Screw	05
200362c	12311	Hook Counter Shaft Driving Gear Set Screw	03
203246	12344	Hook Counter Shaft Gear, 22 teeth, with two 200383c	75
200383c	12311	Hook Counter Shaft Gear Set Screw	02
202299	—	" " " Oil Packing (wick)	01
200840E	12311	" " " " " " Stop Screw	01
203247	12371	Hook Driving Shaft	1 60
203248	12361	" " " Bearing with 202299	20
202299	—	" " " " Oil Packing (wick)	01
202126	12374	Hook Driving Shaft Bearing Position Pin	01
200516E	12311	" " " " Screw	08
203249	12344	" " " Bushing (eccentric)	25
202299	—	" " " " Oil Packing (wick)	01
200362c	12311	Hook Driving Shaft Bushing Set Screw	03
213141	11764	" " " Collar with two 200393c	20
200393c	12374	Hook Driving Shaft Collar Set Screw...	02
203251	12312	" Gib	40
200600F	12312	" " Hinge Screw	02
200616F	12312	" " Screw	02

No.	Plate	Name	Each
203625	11761	Hook Post	\$3 00
221227	11761	" " 203625 with 200159B, 200555H, 202299, 203242, 203254, 203290, 203619, 221209, 221215, 221226 and eight 200583H	9 50
202299	—	Hook Post Oil Packing (wick).....	01
200008C	12321	" " Screw (2)	07
203637	11763	" " Washer (2)	02
221215	11762	" " Slide	40
203619	11761	" Socket	80
200555H	12312	" " Screw	05
203254	12312	" Washer	20
221224	11761	Hook Post complete, Nos. 221208 and 221227	15 75
208613	—	Needle Bar (hollow)	75
204247	11768	" " 208613 with 200125F, 200175E and 204250	80
204248	11764	Needle Bar Connecting Link.....	35
200658C	12351	" " " Hinge Screw Stud	10
201519C	12351	Needle Bar Connecting Link Hinge Screw Stud Nut	03
204249	12374	Needle Bar Connecting Stud with 200072C and 202277	40
202277	—	Needle Bar Connecting Stud Oil Packing (wick)	01
200072C	12374	Needle Bar Connecting Stud Pinch Screw	03
213435	11764	" " Guard	25
204326	—	" " Packing Cord (2)..Per 100	25
200504E	12378	" " Screw Bushing (lower)....	05
204250	11764	" " Thread Guide	03
200175E	11764	" " " " Screw	02
200125F	12374	" Set Screw	02
204251	12361	Presser Bar (hollow) with 200074F.....	80
204252	12374	" " Lifter	20
200550C	12311	" " " Hinge Screw	08
204253	10441	" " Lifting Bracket with 200086C	40
200086C	12374	" " " " Pinch Screw..	03
204254	10441	" " " " Position Guide	30
200362C	12311	" " " " " "	
		Set Screw	03
204327	—	Presser Bar Packing Washer (felt) Per 100	25
200504E	12378	Presser Bar Screw Bushing (lower)....	05
204255	10441	" " Spring	10
200491B	12344	" " Thumb Screw (pressure reg- ulating)	25
202090	12349	Presser Foot Hinge Pin.....	01
229083	—	" " Plate	65

No.	Plate	Name	Each
200074 _F	12374	Presser Foot Screw	\$ 03
202924	—	" " Shank	60
229084	11766	Presser Foot (hinged) complete, Nos. 202090, 202924 and 229083.....	1 25
202068	12153	Spool Holder Base	15
200575 _H	12311	" " " Screw	05
204296	12153	" " Wire	10
200079 _H	12311	" " " Hinge Screw	02
204297	12153	Spool Holder complete, Nos. 200079 _H , 202068 and 204296	25
212920	—	Take-up Cam with 200335 _C and 200430 _C	1 35
203268	11768	" " 212920 with 200383 _C , 200658 _C and 201519 _C	1 50
203172	12351	Take-up Cam Friction Washer	05
200430 _C	12311	" " Position Screw	08
200383 _C	12311	" " " Check Screw	02
200335 _C	12311	" " Set Screw	04
204262	12378	" Lever with 204265	60
206556	—	" " 204262 with 204263	75
204263	12378	" " Bearing with 204264	15
204264	11769	" " Position Pin	01
200042 _F	12311	" " " Screw	05
204265	—	" " Oil Guard	05
201816	12351	" " Roller	12
204266	12378	Take-up Lever complete, Nos. 200042 _F , 201816 and 206556	90
202402	12349	Tension Disc	05
202090	12349	" " Position Pin	01
204267	12378	" Release Lever	05
200309 _E	12349	" " " Screw	04
202075	12349	" " Plunger	03
215609	—	" " Slide	18
204268	12378	" " 215609 with 204269..	20
204269	12374	" " Spring	02
202407	12349	" Spring	05
200632 _B	12349	" Stud	20
200397 _H	12349	" " Set Screw	02
201572 _B	12349	" Thumb Nut	04
204271	12349	" Washer	05
204272	12349	Tension complete, Nos. 200632 _B , 201572 _B , 202075, 202407, 204271 and two 202402	50
215610	—	Thread Controller Adjusting Collar.....	10
204273	11769	" " " " 215610 with 200684 _H (for Presser Bar).....	15
200684 _H	11769	Thread Controller Adjusting Collar Screw	04
204274	12349	Thread Controller Plate	12
200577 _H	12311	" " " Screw	02
202098	12349	" " Roller	05

No.	Plate	Name	Each
204275	12349	Thread Controller Roller Guard	\$ 10
202084	12349	" " " " Washer	01
200300C	12349	" " " Screw	04
204276	12349	" " Spring	03
204333	12349	" " " Guard	08
200581H	12349	" " " " Screw	02
204277	11769	" " " Stop	15
204278	11769	" " " " Driving Gear.	10
200319C	12349	" " " " " "	
		Hinge Screw	04
200135C	12349	Thread Controller Spring Stop Screw...	03
204279	11769	" " " Stud with	
		204925	10
200355H	12319	Thread Controller Spring Stud Set Screw	03
204925	11769	" " " " Washer..	01
205987	12349	Thread Controller complete, Nos. 200300c, 200581H, 202084, 202098, 204274, 204275 and 204333	42
204280	12349	Thread Controller and Spring complete, Nos. 204276 and 205987.....	45
202413	12378	Thread Guide	05
204281	12349	" Retainer Guide Wire	01
202091	12349	" " Sleeve	05
202092	12349	" " Spring	01
204058B	12349	" " Stud	07
200368H	12349	" " " Set Screw	02
204059	12349	Thread Retainer complete, Nos. 202091, 202092 and 204058B	15
212626	12240	Throat Plate, 50 needle hole, for needle sizes 3 to 5.....	1 50
200577H	12311	Throat Plate Screw (2).....	02

LIST OF PARTS COMPLETE

FOR

MACHINE No. 51 w 26

DROP FEED. ALTERNATING PRESSERS

For Tailoring, Etc.

No.	Plate	Name	Each
*204471	—	Arm	\$ —
*204417	—	" 204471 with 200439c, 202036 and 204705	—
*213434	—	Arm Base	—
200010E	11763	" " Screw (3)	06
202005	12374	" " Washer (3)	01
204163	12344	" Cap	10
200278H	12311	" " Screw	05
202248H	12351	" " Washer	05
200963E	12311	" " Screw (3)	06
202005	12374	" " Washer (3)	01
213001	12371	" Shaft	1 85
204705	12361	" " Bushing (front)	35
200439C	12311	" " " Position Screw	05
213432	11760	" " Connection with four 200054E (2)	60
200054E	12351	Arm Shaft Connection Screw	03
202299	—	" " Oil Packing (wick) (2)	01
204805	11760	Balance Wheel 5½ in. diam. (belt groove 3 in. diam.) with 200328c and 200335c	1 00
200062H	12311	Balance Wheel Adjusting Screw	07
200328C	12311	" " " Position Screw	04
200335C	12311	" " " Set Screw	04
*221201	—	Bed	—
*221202	—	" 221201 with 203248, 203249, two each 200362c 200516E, 200840E and 202299..	—
202258	12153	Bed Hinge Connection (2)	08
200570E	12311	" " " Screw (4)	05
203208	12312	Bobbin	05
203210	12312	" Case Base with 202056, 203211 to 203213 and 203216	55
203211	12312	Bobbin Case Base Latch	05
*202056	12312	" " " " Pin	—
203212	12312	" " " " Plunger	02
203213	12312	" " " " Spring	01

No.	Plate	Name	Each
203209	12312	Bobbin Case Cap with 200984F, 203214, 203215 and two 200594F.....	\$ 25
203214	12312	Bobbin Case Tension Spring.....	10
200984F	12312	" " " " Regulating Screw	04
200594F	12312	Bobbin Case Tension Spring Screw....	02
203215	12312	" " Thread Guide	05
200594F	12312	" " " " Screw	02
203216	12312	" " Washer (cloth)Per 100	25
203217	12312	Bobbin Case complete, Nos. 203209 and 203210	30
204473	12371	Face Plate with 200366H, 200368H, 200685E, 202087, 202090, 204185, 204281 and two 200397H	90
200053C	12311	Face Plate Screw	04
204185	12378	" " Thread Guide	03
200397H	12349	" " " " Set Screw	02
204474	12371	Face Plate complete, Nos. 200309E, 200577H, 202088, 204059, 204272, 204280, 204473 and 204486	2 25
213426	11762	Feed Bar	50
213425	—	" " 213426 with 200214E, 201525E and 221508	1 00
200214E	12378	Feed Bar Hinge Screw.....	12
201525E	12378	" " " " Nut	03
212629	12240	" Dog	1 00
203609	11762	" " Lever with 200098E.....	60
200362C	12311	" " " Adjusting Screw	03
201524E	12378	" " " " Check Nut	03
200263D	11763	" " " Hinge Screw	08
201528E	11763	" " " " Nut	04
221207	11761	" " " Post	2 50
221208	11761	" " " " 221207 with 200265E, 201525E, 203609, 203610, 221211, 221212, four each 200054E and 200578H	6 25
221209	11761	Feed Dog Lever Post Cover (back).....	40
221226	11761	" " " " " (front)	40
200159B	—	" " " " " " Clamp Screw	04
221211	11761	Feed Dog Lever Post Cover (side) with 200362C and 201524E.....	1 25
200583H	11763	Feed Dog Lever Post Cover (back or front) Screw	02
200578H	11763	Feed Dog Lever Post Cover (side) Screw	05
200024C	11763	" " " " Screw (2).....	04
221212	11761	" " " " Support	1 50
200054E	12351	" " " " " Screw	03
200008C	12321	" " " " " " (2) ..	07
203637	11763	" " " " " " Washer (2)	02

No.	Plate	Name	Each
203610	11763	Feed Dog Lever Slide Block	\$ 15
200265E	11763	" " " " " Hinge Screw	06
201525E	12378	" " " " " " "	
		Nut	0
200098E	12351	Feed Dog Screw	02
213428	11763	" Driving Cam with 200382c and 200437c	50
213429	11762	Feed Driving Cam Fork Lever with 204195 and 204293	85
213427	11762	Feed Driving Cam Fork Lever Con- nection with 200668c and 201525E.....	35
204194	11763	Feed Driving Cam Fork Lever Con- nection Clamp with 200031c.....	45
200031c	12311	Feed Driving Cam Fork Lever Con- nection Clamp Pinch Screw.....	04
200668c	12378	Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud.....	06
201525E	12378	Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud Nut	03
200002E	12378	Feed Driving Cam Fork Lever Con- nection Hinge Screw	07
201522E	12378	Feed Driving Cam Fork Lever Con- nection Hinge Screw Nut.....	0
*204195	—	Feed Driving Cam Fork Lever Shaft	—
204197	11763	" " " " " "	
		Collar with 200113F	15
200113F	12374	Feed Driving Cam Fork Lever Shaft Collar Set Screw	03
204293	12374	Feed Driving Cam Fork Lever Shaft Position Pin	01
204196	12351	Feed Driving Cam Fork Lever Shaft Sleeve (split)	25
200043c	12311	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw	04
201524E	12378	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut	03
213693	11762	Feed Driving Cam Fork Lever complete, Nos. 204194 and 213429	1 30
200437c	12311	Feed Driving Cam Position Screw.....	06
200382c	11142	" " " Set Screw	02
204199	12371	" " Rock Shaft	
213495	—	" " " 204199 with 200002E, 201522E and 213427	80
202305c	12351	Feed Driving Rock Shaft Center (2)	06
200043c	12311	" " " " " Set Screw (2)	04
221508	11763	Feed Driving Rock Shaft Crank with two 200383c	35

No.	Plate	Name	Each
200383c	12311	Feed Driving Rock Shaft Crank Set Screw	\$ 02
203235	12374	Feed Lifting Cam with 202126	75
204202	12374	" " " Fork with 200027E.....	75
200027E	12378	" " " " Pinch Screw	04
202126	12374	" " " Position Pin	01
200045c	12378	" " " Screw	03
203305	11762	" " Rock Shaft	30
203315	11762	" " " " 203305 with 203238	65
202305c	12351	Feed Lifting Rock Shaft Center (2)	06
200043c	12311	" " " " " Set Screw (2)	04
202276	12374	Feed Lifting Rock Shaft Slide Block....	15
203238	12374	" " " " " "	
		202276 with 200243E and 201531E.....	35
200243E	12378	Feed Lifting Rock Shaft Slide Block Hinge Screw	08
201531E	12374	Feed Lifting Rock Shaft Slide Block Hinge Screw Nut	03
204206	—	Feed Regulating Handle	10
204207	12361	" " " 204206 with 200098F, 202622, 204208 to 204210 and 204213	55
204208	12351	Feed Regulating Handle Adjustable Stop	05
200098F	12351	" " " " "	
		Screw	03
204209	12351	Feed Regulating Handle Position Pin..	01
204210	11763	" " " Shaft	20
204211	11763	" " " " Crank with 200078c	20
213433	11762	Feed Regulating Handle Shaft Crank Link	25
200271E	12311	Feed Regulating Handle Shaft Crank Link Hinge Screw (lower).....	05
200291E	12351	Feed Regulating Handle Shaft Crank Link Hinge Screw (upper).....	05
200078c	12351	Feed Regulating Handle Shaft Crank Set Screw	03
204213	12351	Feed Regulating Handle Shaft Sleeve (split)	15
200362c	12311	Feed Regulating Handle Shaft Sleeve Set Screw	03
202622	11763	Feed Regulating Handle Shaft Sleeve Washer	01
202036	12378	Feed Regulating Handle Stop Pin.....	01
213902	—	Feed Regulating Handle complete, Nos. 200291E, 204207, 204211 and 213433....	1 05
227307	11760	Foot Lifter Lifting Lever.....	20

No.	Plate	Name	Each
227479	—	Foot Lifter Lifting Lever 227307 with 200262H	\$ 30
227353	—	Foot Lifter Lifting Lever 227479 with 227273	8
200262H	11763	Foot Lifter Lifting Lever Hinge Screw.	1
227475	11760	" " " " Rod with 202302	10
227273	—	" " " " " 227475 with 206628, 227227 and 227576.....	55
204126	12321	Foot Lifter Lifting Lever Rod Clamp with two 200530c	20
227316	12388	Foot Lifter Lifting Lever Rod Clamp Hook	05
227576	12388	Foot Lifter Lifting Lever Rod Clamp Hook 227316 with 204126.....	25
200530c	12321	Foot Lifter Lifting Lever Rod Clamp Set Screw	05
202302	12321	Foot Lifter Lifting Lever Rod Cotter Pin	01
206628	12388	Foot Lifter Lifting Lever Rod Spring	05
227227	12388	" " " " " "	
		Collar with 200113F	15
200113F	12374	Foot Lifter Lifting Lever Rod Spring Collar Set Screw	0
*203239	—	Hook (sewing)	
203240	12312	" 203239 with 200600F, 200616F and 203251	2 20
203290	12312	Hook and Bobbin Case complete, Nos. 203217 and 203240	3 00
203242	12344	Hook Bevel Gear, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Gear Set Screw	02
203242	12344	" " Pinion, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Pinion Set Screw.....	02
203306	11768	" Counter Shaft	45
203244	12374	" " " Collar with two 200393c	20
200393c	12374	Hook Counter Shaft Collar Set Screw..	02
203245	12344	" " " Driving Gear, 44 teeth, with 200362c and 200439c.....	1 00
213154	—	Hook Counter Shaft Driving Gear 203245 with 200045c and 203235.....	1
200439c	12311	Hook Counter Shaft Driving Gear Position Screw	05
200362c	12311	Hook Counter Shaft Driving Gear Set Screw	03
203246	12344	Hook Counter Shaft Gear, 22 teeth, with two 200383c	75
200383c	12311	Hook Counter Shaft Gear Set Screw....	02

No.	Plate	Name	Each
202299	—	Hook Counter Shaft Oil Packing (wick)	\$ 01
200840F	12311	" " " " " "	
		Stop Screw	10
203247	12371	Hook Driving Shaft	1 60
203248	12361	" " " Bearing with 202299	20
202299	—	" " " " Oil Packing (wick)	01
202126	12374	Hook Driving Shaft Bearing Position Pin	01
200516E	12311	" " " " Screw	08
203249	12344	" " " Bushing (eccentric)	25
202299	—	" " " " Oil Packing (wick)	01
200362C	12311	Hook Driving Shaft Bushing Set Screw..	03
213141	11764	" " " Collar with two 200393C	20
200393C	12374	Hook Driving Shaft Collar Set Screw..	02
203251	12312	" Gib	40
200600F	12312	" " Hinge Screw	02
200616F	12312	" " Screw	02
203625	11761	" Post	3 00
221227	11761	" " 203625 with 200159B, 200555H, 202299, 203242, 203254, 203290, 203619, 221209, 221215, 221226 and eight 200583H	9 50
202299	—	Hook Post Oil Packing (wick).....	01
200008C	12321	" " Screw (2)	07
203637	11763	" " " Washer (2)	02
221215	11762	" " Slide	40
203619	11761	" Socket	80
200555H	12312	" " Screw	05
203254	12312	" Washer	20
221224	11761	Hook Post complete, Nos. 221208 and 221227	15 75
204475	12376	Lifting Lever with 200122H.....	1 00
208389	—	" " 204475 with 200935F, 201534E, 204478 and 206659	2 10
213004	11764	Lifting Lever Driving Crank	80
204478	12376	" " " " Link	40
200122H	12351	" " " " " Stop Screw	03
200400C	12351	Lifting Lever Driving Crank Position Screw	04
200387C	12376	Lifting Lever Driving Crank Position Screw Set Screw	02
204479	11764	Lifting Lever Driving Crank Position Screw Set Screw Packing (brass)....	01
200181D	12376	Lifting Lever Stop Screw	03
204480	12374	" " Stud Lifting Bracket with 200086C and 200181D	75

No.	Plate	Name	Each
208390	—	Lifting Lever Stud Lifting Bracket 204480 with 208389	\$ 2 85
200086c	12374	Lifting Lever Stud Lifting Bracket Pinch Screw	0
204595	12376	Lifting Presser Foot	1 25
200074F	12374	" " " Screw	03
204483	12361	Needle Bar (hollow) with 200125F, 200587E and 204487	80
204484	12351	Needle Bar Connecting Link with 200188c	50
200188c	12376	" " " " Pinch Screw	02
204249	12374	" " " Stud with 200072c and 202277	40
202277	—	Needle Bar Connecting Stud Oil Packing (wick)	01
200072c	12374	Needle Bar Connecting Stud Pinch Screw	03
213435	11764	" " Guard	25
204326	—	" " Packing Cord (2) ..Per 100	25
200504E	12378	" " Screw Bushing (lower)....	05
204487	12351	" " Thread Guide	25
200587E	12351	" " " " Screw	02
200125F	12374	" Set Screw	02
204251	12361	Presser Bar (hollow) with 200074F.....	80
204252	12374	" " Lifter	20
200550c	12311	" " " Hinge Screw	08
204481	12351	" " Lifting Bracket Position Guide	35
200362c	12311	Presser Bar Lifting Bracket Position Guide Set Screw	03
204327	—	Presser Bar Packing Washer (felt) Per 100	25
200504E	12378	Presser Bar Screw Bushing (lower)....	05
204482	11142	" " Spring	15
200491B	12344	" " Thumb Screw (pressure regulating)	25
201506B	12376	Presser Bar Thumb Screw Check Nut.	06
202068	12153	Spool Holder Base	15
200575H	12311	" " " Screw	05
204296	12153	" " Wire	10
200079H	12311	" " " Hinge Screw	02
204297	12153	Spool Holder complete, Nos. 200079H, 202068 and 204296	2
213925	11768	Take-up Cam with 200347c, 200383c, 200387c, 200400c, 200430c and 204479..	1 75
203172	12351	Take-up Cam Friction Washer.....	05
200430c	12311	" " Position Screw	08
200383c	12311	" " " " Check Screw	02
200347c	12376	" " Set Screw	03
213005	12361	Take-up Cam complete, Nos. 204484, 213004 and 213925	3 00

No.	Plate	Name	Each
204262	12378	Take-up Lever with 204265	\$ 60
206556	—	" " 204262 with 204263	75
204263	12378	" " Bearing with 204264.....	15
204264	11769	" " " Position Pin	01
200042F	12311	" " " Screw	05
204265	—	" " Oil Guard	05
201816	12351	" " Roller	12
204266	12378	Take-up Lever complete, Nos. 200042F, 201816 and 206556	90
202402	12349	Tension Disc	05
202090	12349	" " Position Pin	01
204486	11769	" Release Lever	05
200685E	12376	" " " Position Screw ...	03
200309E	12349	" " " Screw	04
202075	12349	" " Plunger	03
215609	—	" " Slide	18
204268	12378	" " " 215609 with 204269...	20
204269	12374	" " " Spring	02
202407	12349	" Spring	05
200632B	12349	" Stud	20
200397H	12349	" " Set Screw	02
201572B	12349	" Thumb Nut	04
204271	12349	" Washer	05
204272	12349	Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402.	50
204274	12349	Thread Controller Plate	12
200577H	12311	" " " Screw	02
202098	12349	" " Roller	05
204275	12349	" " " Guard	10
202084	12349	" " " " Washer	01
200300C	12349	" " " Screw	04
204276	12349	" " Spring	03
204333	12349	" " " Guard	08
200581H	12349	" " " " Screw	02
202087	12349	" " " Stop	03
202088	12349	" " " Stud with 204925..	10
200366H	12349	" " " " Set Screw ...	02
204925	11769	" " " " Washer	01
205987	12349	Thread Controller complete, Nos. 200300C, 200581H, 202084, 202098, 204274, 204275 and 204333	42
204280	12349	Thread Controller and Spring complete, Nos. 204276 and 205987	45
202413	12378	Thread Guide	05
204281	12349	" Retainer Guide Wire	01
202091	12349	" " Sleeve	05
202092	12349	" " Spring	01
204058B	12349	" " Stud	07
200368H	12349	" " " Set Screw	02

No.	Plate	Name	Each
204059	12349	Thread Retainer complete, Nos. 202091, 202092 and 204058B	\$ 15
221232	12240	Throat Plate, 46 needle hole, for needle sizes 5 to 7	1 50
200577H	12311	Throat Plate Screw (2)	02
206660	—	Vibrating Presser Bar	45
206659	12376	" " " 206660 with 204493 and two 200138D	60
200935F	11771	Vibrating Presser Bar Hinge Screw....	08
201534H	12374	" " " " " Nut	03
229838	12376	" " " Position Stop	50
200053C	12311	" " " " " Screw	04
204493	12376	Vibrating Presser Bar Spring.....	10
200138D	12374	" " " " Screw	02
204620	12376	" " Foot	1 00
200098F	12351	" " " Screw	03
203357	11769	" " " " Washer	01

LIST OF PARTS COMPLETE

FOR

MACHINE No. 51 w 27

DROP FEED. ALTERNATING PRESSERS

For Shoes, Gloves and Other Light Leather Work.

No.	Plate	Name	Each
*204471	—	Arm	\$ —
*204417	—	" 204471 with 200439c, 202036 and 204705	—
*213434	—	Arm Base	—
200010E	11763	" " Screw (3)	06
202005	12374	" " " Washer (3)	01
204163	12344	" Cap	10
200278H	12311	" " Screw	05
202248H	12351	" " " Washer	05
200963E	12311	" Screw (3)	06
202005	12374	" " Washer (3)	01
213001	12371	" Shaft	1 85
204705	12361	" " Bushing (front)	35
200439c	12311	" " " Position Screw	05
213432	11760	" " Connection with four 200054E (2)	60
200054E	12351	Arm Shaft Connection Screw	03
202299	—	" " Oil Packing (wick) (2).....	01
204805	11760	Balance Wheel 5½ in. diam. (belt groove 3 in. diam.) with 200328c and 200335c	1 00
200062H	12311	Balance Wheel Adjusting Screw	07
200328c	12311	" " Position Screw	04
200335c	12311	" " Set Screw	04
*221201	—	Bed	—
*221202	—	" 221201 with 203248, 203249, two each 200362c, 200516E, 200840E and 202299..	—
202258	12153	Bed Hinge Connection (2)	08
200570E	12311	" " " Screw (4)	05
203208	12312	Bobbin	05
203210	12312	" Case Base with 202056, 203211 to 203213 and 203216	55
203211	12312	Bobbin Case Base Latch	05
*202056	12312	" " " " Pin	—
203212	12312	" " " " Plunger	02
203213	12312	" " " " Spring	01

No.	Plate	Name	Each
203209	12312	Bobbin Case Cap with 200984F, 203214, 203215 and two 200594F	\$ 25
203214	12312	Bobbin Case Tension Spring	10
200984F	12312	" " " " Regulating Screw	04
200594F	12312	Bobbin Case Tension Spring Screw.....	02
203215	12312	" " Thread Guide	05
200594F	12312	" " " " Screw	02
203216	12312	" " Washer (cloth)....Per 100	25
203217	12312	Bobbin Case complete, Nos. 203209 and 203210	80
204473	12371	Face Plate with 200366H, 200368H, 200685E, 202087, 202090, 204185, 204281 and two 200397H	90
200053C	12311	Face Plate Screw	04
204185	12378	" " Thread Guide	03
200397H	12349	" " " " Set Screw	02
203773	11760	Face Plate complete, Nos. 200113F, 200309E, 200577H, 202088, 203357, 204059, 204272, 204280, 204473, 204486 and 204644	2 50
213426	11762	Feed Bar	50
213425	—	" " 213426 with 200214E, 201525E and 221508	1 00
200214E	12378	Feed Bar Hinge Screw.....	12
201525E	12378	" " " " Nut	03
212637	12241	" Dog	75
203609	11762	" " Lever with 200098E	60
200362C	12311	" " " Adjusting Screw	03
201524E	12378	" " " " Check Nut	03
200263D	11763	" " " Hinge Screw	08
201528E	11763	" " " " Nut	04
221207	11761	" " " Post	2 50
221208	11761	" " " " 221207 with 200265E 201525E, 203609, 203610, 221211, 221212, four each 200054E and 200578H	6 25
221209	11761	Feed Dog Lever Post Cover (back).....	40
221226	11761	" " " " " (front)	40
200159B	—	" " " " " Clamp Screw	04
221211	11761	Feed Dog Lever Post Cover (side) with 200362C and 201524E	1 25
200583H	11763	Feed Dog Lever Post Cover (back or front) Screw	02
200578H	11763	Feed Dog Lever Post Cover (side) Screw	05
200024C	11763	" " " " Screw (2)	04
221212	11761	" " " " Support	1 50
200054E	12351	" " " " Screw	03
200008C	12321	" " " " " (2)...	07

No.	Plate	Name	Each
203637	11763	Feed Dog Lever Post Support Screw Washer (2)	\$ 02
203610	11763	Feed Dog Lever Slide Block	15
200265E	11763	" " " " " Hinge Screw	06
201525E	12378	" " " " " " " "	
		Nut	03
200098E	12351	Feed Dog Screw	03
213428	11763	" Driving Cam with 200382c and 200437c	50
213429	11762	Feed Driving Cam Fork Lever with 204195 and 204293	85
213427	11762	Feed Driving Cam Fork Lever Connection with 200668c and 201525E	35
204194	11763	Feed Driving Cam Fork Lever Connection Clamp with 200031c	45
200031c	12311	Feed Driving Cam Fork Lever Connection Clamp Pinch Screw	04
200668c	12378	Feed Driving Cam Fork Lever Connection Clamp Screw Stud.....	06
201525E	12378	Feed Driving Cam Fork Lever Connection Clamp Screw Stud Nut.....	03
200002E	12378	Feed Driving Cam Fork Lever Connection Hinge Screw	07
201522E	12378	Feed Driving Cam Fork Lever Connection Hinge Screw Nut	03
*204195	—	Feed Driving Cam Fork Lever Shaft....	—
204197	11763	" " " " " " Collar with 200113F	15
200113F	12374	Feed Driving Cam Fork Lever Shaft Collar Set Screw	03
204293	12374	Feed Driving Cam Fork Lever Shaft Position Pin	01
204196	12351	Feed Driving Cam Fork Lever Shaft Sleeve (split)	25
200043c	12311	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw	04
201524E	12378	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut.....	03
213693	11762	Feed Driving Cam Fork Lever complete, Nos. 204194 and 213429	1 30
200437c	12311	Feed Driving Cam Position Screw	06
200382c	11142	" " " Set Screw	02
204199	12371	" " Rock Shaft	35
213495	—	" " " " 204199 with 200002E, 201522E and 213427.....	80
202305c	12351	Feed Driving Rock Shaft Center (2).	06
200043c	12311	" " " " " Set Screw (2)	04

No.	Plate	Name	Each
227479	—	Foot Lifter Lifting Lever 227307 with 200262H	\$ 30
227353	—	Foot Lifter Lifting Lever 227479 with 227273	85
200262H	11763	Foot Lifter Lifting Lever Hinge Screw.	10
227475	11760	" " " " Rod with 202302	10
227273	—	" " " " " 227475 with 206628, 227227 and 227576	55
204126	12321	Foot Lifter Lifting Lever Rod Clamp with two 200530c	20
227316	12388	Foot Lifter Lifting Lever Rod Clamp Hook	05
227576	12388	Foot Lifter Lifting Lever Rod Clamp Hook 227316 with 204126.....	25
200530c	12321	Foot Lifter Lifting Lever Rod Clamp Set Screw	05
202302	12321	Foot Lifter Lifting Lever Rod Cotter Pin	01
206628	12388	Foot Lifter Lifting Lever Rod Spring	05
227227	12388	" " " " " " " Collar with 200113F	15
200113F	12374	Foot Lifter Lifting Lever Rod Spring Collar Set Screw	03
*203463	—	Hook (sewing)	—
203464	11241	" 203463 with 200600r, 200616F and 203251	2 20
203465	11241	Hook and Bobbin Case complete, Nos. 203217 and 203464	3 00
203242	12344	Hook Bevel Gear, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Gear Set Screw.....	02
203242	12344	" " Pinion, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Pinion Set Screw.....	02
203306	11768	" Counter Shaft	45
203244	12374	" " " Collar with two 200393c	20
200393c	12374	Hook Counter Shaft Collar Set Screw..	02
203245	12344	" " " Driving Gear, 44 teeth, with 200362c and 200439c.....	1 00
213157	—	Hook Counter Shaft Driving Gear 203245 with 200045c and 213007	1 80
200439c	12311	Hook Counter Shaft Driving Gear Position Screw	05
200362c	12311	Hook Counter Shaft Driving Gear Set Screw	03
203246	12344	Hook Counter Shaft Gear, 22 teeth, with two 200383c	75
200383c	12311	Hook Counter Shaft Gear Set Screw....	02


No.	Plate	Name	Each
202299	—	Hook Counter Shaft Oil Packing (wick)	\$ 01
200840E	12311	" " " " " "	
		Stop Screw	10
203247	12371	Hook Driving Shaft	1 60
203248	12361	" " " Bearing with 202299.	20
202299	—	" " " " Oil Packing (wick)	01
202126	12374	Hook Driving Shaft Bearing Position Pin	01
200516E	12311	" " " " Screw.....	08
203249	12344	" " " Bushing (eccentric).	25
202299	—	" " " " Oil Packing (wick)	01
200362C	12311	Hook Driving Shaft Bushing Set Screw.	03
213141	11764	" " " Collar with two 200393C	20
200393C	12374	Hook Driving Shaft Collar Set Screw..	02
203251	12312	" Gib	40
200600F	12312	" " Hinge Screw	02
200616F	12312	" " Screw	02
203625	11761	" Post	3 00
221228	—	" " 203625 with 200159B, 200555H, 202299, 203242, 203465, 203619, 203718, 221209, 221215, 221226 and eight 200583H	9 50
202299	—	Hook Post Oil Packing (wick).....	01
200008C	12321	" " Screw (2)	07
203637	11763	" " " Washer (2)	02
221215	11762	" " Slide	40
203619	11761	" Socket	80
200555H	12312	" " Screw	05
203718	11241	" Washer	20
221225	—	Hook Post complete, Nos. 221208 and 221228	15 75
204475	12376	Lifting Lever with 200122H.....	1 00
208389	—	" " 204475 with 200935F, 201534E, 204478 and 206659.....	2 10
213004	11764	Lifting Lever Driving Crank.....	80
204478	12376	" " " " Link	40
200122H	12351	" " " " " Stop Screw	03
200400C	12351	Lifting Lever Driving Crank Position Screw	04
200387C	12376	Lifting Lever Driving Crank Position Screw Set Screw	02
204479	11764	Lifting Lever Driving Crank Position Screw Set Screw Packing (brass)....	01
200181D	12376	Lifting Lever Stop Screw	03
204480	12374	" " Stud Lifting Bracket with 200086C and 200181D	75

No.	Plate	Name	Each
208390	—	Lifting Lever Stud Lifting Bracket 204480 with 208389	\$ 2 85
200086C	12374	Lifting Lever Stud Lifting Bracket Pinch Screw	03
204606	11765	Lifting Presser Foot	1 00
200074F	12374	" " " Screw	03
204483	12361	Needle Bar (hollow) with 200125F, 200587E and 204487	80
204484	12351	Needle Bar Connecting Link with 200188C	50
200188C	12376	" " " " Pinch Screw	02
204249	12374	" " " Stud with 200072C and 202277	40
202277	—	Needle Bar Connecting Stud Oil Packing (wick)	01
200072C	12374	Needle Bar Connecting Stud Pinch Screw	03
213435	11764	" " Guard	25
204326	—	" " Packing Cord (2) ..Per 100	25
200504E	12378	" " Screw Bushing (lower)....	05
204487	12351	" " Thread Guide	25
200587E	12351	" " " " Screw	02
200125F	12374	" Set Screw	02
204251	12361	Presser Bar (hollow) with 200074F.....	80
204252	12374	" " Lifter	20
200550C	12311	" " " Hinge Screw	08
204481	12351	" " Lifting Bracket Position Guide	35
200362C	12311	Presser Bar Lifting Bracket Position Guide Set Screw	03
204327	—	Presser Bar Packing Washer (felt) Per 100	25
200504E	12378	Presser Bar Screw Bushing (lower)....	05
204482	11142	" " Spring	15
200491B	12344	" " Thumb Screw (pressure reg- ulating)	25
201506B	12376	Presser Bar Thumb Screw Check Nut..	06
202068	12153	Spool Holder Base	15
200575H	12311	" " " Screw	05
204296	12153	" " Wire	10
200079H	12311	" " " Hinge Screw	02
204297	12153	Spool Holder complete, Nos. 200079H, 202068 and 204296	25
213008	11768	Take-up Cam with 200347C, 200383C, 200387C, 200400C, 200430C and 204479..	1 75
203172	12351	Take-up Cam Friction Washer.....	05
200430C	12311	" " Position Screw	08
200383C	12311	" " " Check Screw	02
200347C	12376	" " Set Screw	03
213923	11768	Take-up Cam complete, Nos. 204484, 213004 and 213008	3 00

No.	Plate	Name	Each
203270	11769	Take-up Lever with 204265.....	\$ 60
203291	—	" " 203270 with 204263.....	75
204263	12378	" " Bearing with 204264	01
204264	11769	" " " Position Pin	01
200042F	12311	" " " Screw	05
204265	—	" " Oil Guard	05
201816	12351	" " Roller	12
203271	11769	Take-up Lever complete, Nos. 200042F, 201816 and 203291	90
202402	12349	Tension Disc	05
202090	12349	" " Position Pin	01
204486	11769	" Release Lever	05
200685E	12376	" " " Position Screw ...	03
200309E	12349	" " " Screw	04
202075	12349	" " Plunger	03
215609	—	" " Slide	18
204268	12378	" " " 215609 with 204269....	20
204269	12374	" " " Spring	02
202407	12349	" Spring	05
200632B	12349	" Stud	20
200397H	12349	" " Set Screw	02
201572B	12349	" Thumb Nut	04
204271	12349	" Washer	05
204272	12349	Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402..	50
204274	12349	Thread Controller Plate	12
200577H	12311	" " " Screw	02
202098	12349	" " Roller	05
204275	12349	" " " Guard	10
202084	12349	" " " " Washer ...	01
200300C	12349	" " " Screw	04
204276	12349	" " Spring	03
204333	12349	" " " Guard	08
200581H	12349	" " " " Screw	02
202087	12349	" " " Stop	03
202088	12349	" " " Stud with 204925..	10
200366H	12349	" " " " Set Screw ...	02
204925	11769	" " " " Washer	01
205987	12349	Thread Controller complete, Nos. 200300C, 200581H, 202084, 202098, 204274, 204275 and 204333	42
204280	12349	Thread Controller and Spring complete, Nos. 204276 and 205987	45
202413	12378	Thread Guide	05
204329	—	" Oiler (felt)	01
204644	11769	" " Bracket with 204329	25
200113F	12374	" " " Screw	03
203357	11769	" " " " Washer	01
204281	12349	" Retainer Guide Wire	01

No.	Plate	Name	Each
202091	12349	Thread Retainer Sleeve	\$ 05
202092	12349	" " Spring	01
204058B	12349	" " Stud	07
200368H	12349	" " Set Screw	02
204059	12349	Thread Retainer complete, Nos. 202091, 202092 and 204058B	15
212635	12241	Throat Plate, 50 needle hole, for needle sizes 3 to 5	1 50
200577H	12311	Throat Plate Screw (2)	02
206660	—	Vibrating Presser Bar	45
206659	12376	" " " 206660 with 204493 and two 200138D	60
200935F	11771	Vibrating Presser Bar Hinge Screw.....	08
201534E	12374	" " " " " Nut	03
229838	12376	" " " Position Stop	50
200053C	12311	" " " " " Screw	04
204493	12376	Vibrating Presser Bar Spring.....	10
200138D	12374	" " " " Screw	02
206676	13042	" " Foot	1 00
200098F	12351	" " " Screw	03
203357	11769	" " " " Washer	01

LIST OF PARTS COMPLETE FOR

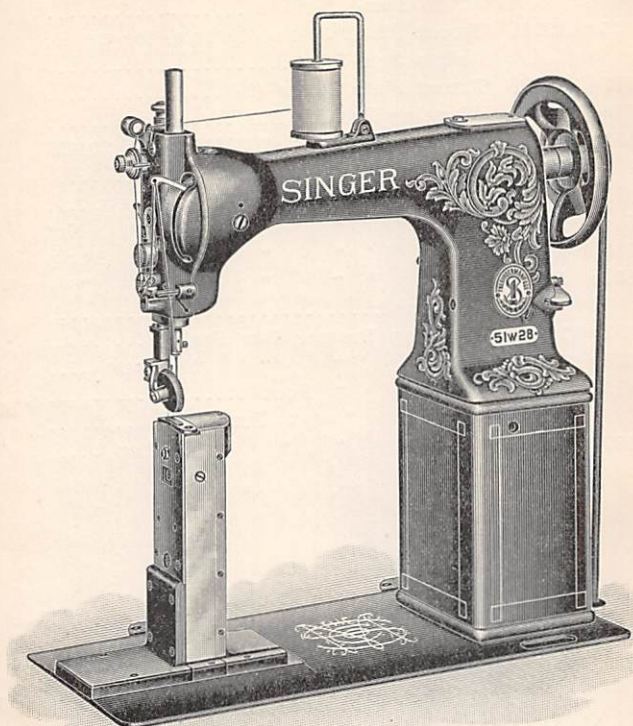

MACHINE No. 51 w 28

DROP FEED. ROLLER PRESSER

For Vamping, Stitching in Gores, Stitching Back Stays
on Shoes, Etc.

No.	Plate	Name	Each
*204161	—	Arm	\$ —
*204412	—	“ 204161 with 200439c, 202036 and 204705	—
*213434	—	Arm Base	—
200010E	11763	“ “ Screw (3)	06
202005	12374	“ “ “ Washer (3)	01

No.	Plate	Name	Each
204163	12344	Arm Cap	\$ 10
200278H	12311	" " Screw	05
202248H	12351	" " Washer	05
200963E	12311	" Screw (3)	06
202005	12374	" " Washer (3)	01
203202	11760	" Shaft	1 75
204705	12361	" " Bushing (front)	35
200439C	12311	" " " Position Screw	05
213432	11760	" " Connection with four 200054E (2)	60
200054E	12351	Arm Shaft Connection Screw	03
202299	—	" " Oil Packing (wick) (2).....	01
204805	11760	Balance Wheel 5½ in. diam. (belt groove 3 in. diam.) with 200328C and 200335C	1 00
200062H	12311	Balance Wheel Adjusting Screw.....	07
200328C	12311	" " " Position Screw	04
200335C	12311	" " " Set Screw	04
*221201	—	Bed	—
*221202	—	" 221201 with 203248, 203249, two each 200362C, 200516E, 200840E and 202299..	—
202258	12153	Bed Hinge Connection (2)	08
200570E	12311	" " " " Screw (4)	05
203208	12312	Bobbin	05
203210	12312	" Case Base with 202056, 203211 to 203213 and 203216	55
203211	12312	Bobbin Case Base Latch	05
*202056	12312	" " " " Pin	—
203212	12312	" " " " Plunger	02
203213	12312	" " " " Spring	01
203209	12312	" " Cap with 200984F, 203214, 203215 and two 200594F	25
203214	12312	Bobbin Case Tension Spring.....	10
200984F	12312	" " " " " Regulating Screw	04
200594F	12312	Bobbin Case Tension Spring Screw.....	02
203215	12312	" " Thread Guide	05
200594F	12312	" " " " " Screw	02
203216	12312	" " Washer (cloth)Per 100	25
203217	12312	Bobbin Case complete, Nos. 203209 and 203210	80
204184	11760	Face Plate with 200355H, 200368H, 202090, 204185, 204281 and two 200397H.....	75
200053C	12311	Face Plate Screw	04
204185	12378	" " Thread Guide	03
200397H	12349	" " " " " Set Screw	02
204300	11760	Face Plate complete, Nos. 200113F, 200135C, 200309E, 200319C, 200577H, 204059, 204184, 204267, 204272, 204277 to 204280 and 204330	2 65

No.	Plate	Name	Each
200002E	12378	Feed Driving Cam Fork Lever Connection Hinge Screw	\$ 07
201522E	12378	Feed Driving Cam Fork Lever Connection Hinge Screw Nut.....	03
*204195	—	Feed Driving Cam Fork Lever Shaft....	—
204197	11763	" " " " " " Collar with 200113F	15
200113F	12374	Feed Driving Cam Fork Lever Shaft Collar Set Screw	03
204293	12374	Feed Driving Cam Fork Lever Shaft Position Pin	01
204196	12351	Feed Driving Cam Fork Lever Shaft Sleeve (split)	25
200043C	12311	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw	04
201524E	12378	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut.....	03
213693	11762	Feed Driving Cam Fork Lever complete, Nos. 204194 and 213429.....	1 30
200437C	12311	Feed Driving Cam Position Screw	06
200382C	11142	" " " Set Screw	02
204199	12371	" " Rock Shaft	35
213495	—	" " " " 204199 with 200002E, 201522E and 213427	80
202305C	12351	Feed Driving Rock Shaft Center (2).	06
200043C	12311	" " " " " Set Screw (2)	04
221508	11763	Feed Driving Rock Shaft Crank with two 200383C	35
200383C	12311	Feed Driving Rock Shaft Crank Set Screw	02
213007	11763	Feed Lifting Cam with 202126	75
204202	12374	" " " Fork with 200027E..	75
200027E	12378	" " " " Pinch Screw....	04
202126	12374	" " " Position Pin	01
200045C	12378	" " " Screw	03
203305	11762	" " Rock Shaft	30
203315	11762	" " " " 203305 with 203238	65
202305C	12351	" " " " Center (2)	06
200043C	12311	" " " " " Set Screw (2)	04
202276	12374	Feed Lifting Rock Shaft Slide Block	15
203238	12374	" " " " " " 202276 with 200243E and 201531E.....	35
200243E	12378	Feed Lifting Rock Shaft Slide Block Hinge Screw	08
201531E	12374	Feed Lifting Rock Shaft Slide Block Hinge Screw Nut	03
204206	—	Feed Regulating Handle	10

No.	Plate	Name	Each
204207	12361	Feed Regulating Handle 204206 with 200098F, 202622, 204208 to 204210 and 204213	\$ 55
204208	12351	Feed Regulating Handle Adjustable Stop	05
200098F	12351	" " " " "	
		Screw	03
204209	12351	Feed Regulating Handle Position Pin...	01
204210	11763	" " " Shaft	20
204211	11763	" " " " Crank with 200078c	20
213433	11762	Feed Regulating Handle Shaft Crank Link	25
200271E	12311	Feed Regulating Handle Shaft Crank Link Hinge Screw (lower).....	05
200291E	12351	Feed Regulating Handle Shaft Crank Link Hinge Screw (upper).....	05
200078c	12351	Feed Regulating Handle Shaft Crank Set Screw	03
204213	12351	Feed Regulating Handle Shaft Sleeve (split)	15
200362c	12311	Feed Regulating Handle Shaft Sleeve Set Screw	03
202622	11763	Feed Regulating Handle Shaft Sleeve Washer	01
202036	12378	Feed Regulating Handle Stop Pin.....	01
213902	—	Feed Regulating Handle complete, Nos. 200291E, 204207, 204211 and 213433..	1 05
227307	11760	Foot Lifter Lifting Lever.....	20
227479	—	" " " " 227307 with 200262H	30
227353	—	Foot Lifter Lifting Lever 227479 with 227273	85
200262H	11763	Foot Lifter Lifting Lever Hinge Screw	10
227475	11760	" " " " Rod with 202302	10
227273	—	Foot Lifter Lifting Lever Rod 227475 with 206628, 227227 and 227576.....	55
204126	12321	Foot Lifter Lifting Lever Rod Clamp with two 200530c	20
227316	12388	Foot Lifter Lifting Lever Rod Clamp Hook	05
227576	12388	Foot Lifter Lifting Lever Rod Clamp Hook 227316 with 204126.....	25
200530c	12321	Foot Lifter Lifting Lever Rod Clamp Set Screw	05
202302	12321	Foot Lifter Lifting Lever Rod Cotter Pin	01
206628	12388	" " " " " Spring ...	05
227227	12388	" " " " " " Col- lar with 200113F	15

No.	Plate	Name	Each
200113F	12374	Foot Lifter Lifting Lever Rod Spring Collar Set Screw	\$ 03
*203463	—	Hook (sewing)	—
203464	11241	" 203463 with 200600F, 200616F and 203251	2 20
203465	11241	Hook and Bobbin Case complete, Nos. 203217 and 203464	3 00
203242	12344	Hook Bevel Gear, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Gear Set Screw	02
203242	12344	" " Pinion, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Pinion Set Screw	02
203306	11768	" Counter Shaft	45
203244	12374	" " " Collar with two 200393c	20
200393c	12374	Hook Counter Shaft Collar Set Screw..	02
203245	12344	" " " Driving Gear, 44 teeth, with 200362c and 200439c	1 00
213157	—	Hook Counter Shaft Driving Gear 203245 with 200045c and 213007.....	1 80
200439c	12311	Hook Counter Shaft Driving Gear Posi- tion Screw	05
200362c	12311	Hook Counter Shaft Driving Gear Set Screw	03
203246	12344	Hook Counter Shaft Gear, 22 teeth, with two 200383c	75
200383c	12311	Hook Counter Shaft Gear Set Screw....	02
202299	—	" " " Oil Packing (wick).	01
200840E	12311	" " " " " "	
		Stop Screw	10
203247	12371	Hook Driving Shaft	1 60
203248	12361	" " " Bearing with 202299	20
202299	—	" " " " Oil Packing (wick)	01
202126	12374	Hook Driving Shaft Bearing Position Pin	01
200516E	12311	" " " " Screw	08
203249	12344	" " " Bushing (eccentric).	25
202299	—	" " " " Oil Packing (wick)	01
200362c	12311	Hook Driving Shaft Bushing Set Screw	03
213141	11764	" " " Collar with two 200393c	20
200393c	12374	Hook Driving Shaft Collar Set Screw..	02
203251	12312	" Gib	40
200600F	12312	" " Hinge Screw	02
200616F	12312	" " Screw	02
203625	11761	" Post	3 00


No.	Plate	Name	Each
221228	—	Hook Post 203625 with 200159B, 200555H, 202299, 203242, 203465, 203619, 203718, 221209, 221215, 221226 and eight 200583H	\$ 9 50
202299	—	Hook Post Oil Packing (wick)	01
200008C	12321	" " Screw (2)	07
203637	11763	" " " Washer (2)	02
221215	11762	" " Slide	40
203619	11761	" Socket	80
200555H	12312	" " Screw	05
203718	11241	" Washer	20
221225	—	Hook Post complete, Nos. 221208 and 221228	15 75
208613	—	Needle Bar (hollow)	75
204247	11768	" " 208613 with 200125F, 200175E and 204250	80
204248	11764	Needle Bar Connecting Link.....	35
200658C	12351	" " " " Hinge Screw Stud	10
201519C	12351	Needle Bar Connecting Link Hinge Screw Stud Nut	03
204249	12374	Needle Bar Connecting Stud with 200072C and 202277	40
202277	—	Needle Bar Connecting Stud Oil Packing (wick)	01
200072C	12374	Needle Bar Connecting Stud Pinch Screw	03
213435	11764	" " Guard	25
204326	—	" " Packing Cord (2)...Per 100	25
200504E	12378	" " Screw Bushing (lower)....	05
204250	11764	" " Thread Guide	03
200175E	11764	" " " " Screw	02
200125F	12374	" Set Screw	02
204252	12374	Presser Bar Lifter	20
200550C	12311	" " " Hinge Screw	08
204253	10441	" " Lifting Bracket with 200086C	40
200086C	12374	Presser Bar Lifting Bracket Pinch Screw	03
204254	10441	" " " " Position Guide	30
200362C	12311	Presser Bar Lifting Bracket Position Guide Set Screw	03
204327	—	Presser Bar Packing Washer (felt) Per 100	25
200504E	12378	Presser Bar Screw Bushing (lower)....	05
204258	12378	" " Spring (heavy)	10
200491B	12344	" " Thumb Screw (pressure regulating)	25
201906	11155	Roller Presser 1½ in. diam., ⅜ in. face (fine), with 200548F and 201534H....	40
202839	11767	Roller Presser Arm	20

No.	Plate	Name	Each
204567	11155	Roller Presser Arm 202839 with 201906.	\$ 60
202560	12225	" " " Bracket (swing)....	60
202838	—	" " " " 202560 with	
		200096D and 204567	1 20
200675C	12225	Roller Presser Arm Bracket Position	
		Screw Stud	05
202558	12225	Roller Presser Arm Bracket Spring.....	02
202559	12225	" " " " " Stop	05
200141F	12225	" " " " " " "	
		Screw	02
200096D	12225	Roller Presser Arm Screw	03
204495	12225	" " Bar	35
200548H	11155	" " Hinge Screw	10
201534H	12374	" " " " Nut	03
204496	—	Roller Presser and Bar complete, Nos.	
		200675C, 202558, 202559, 202838, 204495	
		and two 200141F	1 70
202068	12153	Spool Holder Base	15
200575H	12311	" " " Screw	05
204296	12153	" " Wire	10
200079H	12311	" " " Hinge Screw	02
204297	12153	Spool Holder complete, Nos. 200079H,	
		202068 and 204296	25
213006	11768	Take-up Cam with 200335C, 200383C,	
		200430C, 200658C and 201519C.....	1 50
203172	12351	Take-up Cam Friction Washer.....	05
200430C	12311	" " Position Screw	08
200383C	12311	" " " " Check Screw	02
200335C	12311	" " Set Screw	04
203270	11769	" Lever with 204265.....	60
203291	—	" " 203270 with 204263.....	75
204263	12378	" " Bearing with 204264.....	15
204264	11769	" " " Position Pin	01
200042F	12311	" " " Screw	05
204265	—	" " Oil Guard	05
201816	12351	" " Roller	12
203271	11769	Take-up Lever complete, Nos. 200042F,	
		201816 and 203291	90
202402	12349	Tension Disc	05
202090	12349	" " Position Pin	01
204267	12378	" Release Lever	05
200309E	12349	" " " Screw	04
202075	12349	" " Plunger	03
215609	—	" " Slide	18
204268	12378	" " " 215609 with 204269..	20
204269	12374	" " " Spring	02
202407	12349	" Spring	05
200632B	12349	" Stud	20
200397H	12349	" " Set Screw	02

No.	Plate	Name	Each
201572B	12349	Tension Thumb Nut	\$ 04
204271	12349	" Washer	05
204272	12349	Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402.	50
215610	—	Thread Controller Adjusting Collar.....	10
204273	11769	" " " " 215610 with 200684H, (for Presser Bar)	15
200684H	11769	Thread Controller Adjusting Collar Screw	04
204274	12349	" " Plate	12
200577H	12311	" " " Screw	02
202098	12349	" " Roller	05
204275	12349	" " " Guard	10
202084	12349	" " " " Washer	01
200300C	12349	" " " Screw	04
204276	12349	" " Spring	03
204333	12349	" " " Guard	08
200581H	12349	" " " " Screw	02
204277	11769	" " " Stop	15
204278	11769	" " " " Driving Gear.	10
200319C	12349	" " " " " "	
		Hinge Screw	04
200135C	12349	Thread Controller Spring Stop Screw...	03
204279	11769	" " " Stud with 204925	10
200355H	12319	Thread Controller Spring Stud Set Screw	03
204925	11769	" " " " Washer	01
205987	12349	Thread Controller complete, Nos. 200300C, 200581H, 202084, 202098, 204274, 204275 and 204333	42
204280	12349	Thread Controller and Spring complete, Nos. 204276 and 205987	45
202413	12378	Thread Guide	05
204329	—	" Oiler (felt)	01
204330	12225	" " Bracket with 204329.....	25
200113F	12374	" " " Screw	03
204281	12349	" Retainer Guide Wire	01
202091	12349	" " Sleeve	05
202092	12349	" " Spring	01
204058B	12349	" " Stud	07
200368H	12349	" " " Set Screw	02
204059	12349	Thread Retainer complete, Nos. 202091, 202092 and 204058B	1
212635	12241	Throat Plate, 50 needle hole, for needle sizes 3 to 5.....	1 50
200577H	12311	Throat Plate Screw (2).....	02

LIST OF PARTS COMPLETE

FOR

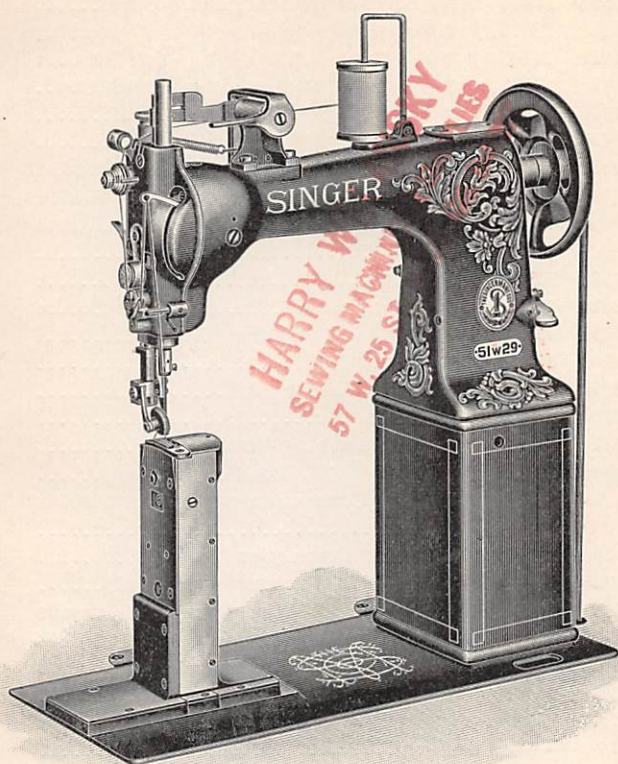**MACHINE No. 51 w 29**

DROP FEED. ROLLER PRESSER

For Stitching a Seam and Trimming the Edges at One Operation.

For Leather and Gloves.

No.	Plate	Name	Each
*204441	—	Arm	\$ —
*208363	—	“ 204441 with 200439c, 202036 and 204351	—
*213434	—	Arm Base	—
200010E	11763	“ “ Screw (3)	06

No.	Plate	Name	Each
202005	12374	Arm Base Screw Washer (3).....	\$ 01
204344	10472	" Bracket with 200326c.....	55
200189H	11771	" " Screw (3)	04
204442	10472	" " Switch Handle with 200889 and 201842	1 45
200859B	10476	Arm Bracket Switch Handle Stud.....	30
204346	10475	" " " " " Bushing	55
201528H	11763	" " " " " Nut....	04
204347	10476	" " " " " Spring..	02
204443	11142	" " " Spring	05
204349	10475	" " " " Hook	01
204445	10472	Arm Bracket complete, Nos. 200391c, 200859B, 201528H, 204344, 204346, 204347, 204442, 204443, 204448 and 204450	6 40
204163	12344	Arm Cap	10
200278H	12311	" " Screw	05
202248H	12351	" " " Washer	05
200963E	12311	" Screw (3)	06
202005	12374	" " Washer (3)	01
203202	11760	" Shaft	1 75
204351	11142	" " Bushing (front)	35
200439C	12311	" " " Position Screw	05
213432	11760	" " Connection with four 200054E (2)	60
200054E	12351	Arm Shaft Connection Screw.....	03
202299	—	" " Oil Packing (wick) (2).....	01
204805	11760	Balance Wheel 5½ in. diam, (belt groove 3 in. diam.), with 200328c and 200335c	1 00
200062H	12311	Balance Wheel Adjusting Screw	07
200328c	12311	" " Position Screw	04
200335c	12311	" " Set Screw	04
*221201	—	Bed	—
*221202	—	" 221201 with 203248, 203249, two each 200362c, 200516E, 200840E and 202299..	—
202258	12153	Bed Hinge Connection (2)	08
200570E	12311	" " " Screw (4).....	05
203208	12312	Bobbin	05
203210	12312	" Case Base with 202056, 203211 to 203213 and 203216	55
203211	12312	Bobbin Case Base Latch	05
*202056	12312	" " " " Pin	—
203212	12312	" " " " Plunger	02
203213	12312	" " " " Spring	01
203209	12312	" " Cap with 200984F, 203214, 203215 and two 200594F	25
203214	12312	Bobbin Case Tension Spring	10
200984F	12312	" " " " Regulating Screw	04

No.	Plate	Name	Each
200594F	12312	Bobbin Case Tension Spring Screw.....	\$ 02
203215	12312	" " Thread Guide	05
200594F	12312	" " " " Screw	02
203216	12312	" " Washer (cloth).....Per 100	25
203217	12312	Bobbin Case complete, Nos. 203209 and 203210	80
204184	11760	Face Plate with 200355H, 200368H, 202090, 204185, 204281 and two 200397H	75
200053C	12311	Face Plate Screw	04
204185	12378	" " Thread Guide	03
200397H	12349	" " " " Set Screw	02
204186	11760	Face Plate complete, Nos. 200135C, 200309E, 200319C, 200577H, 204059, 204184, 204267, 204272 and 204277 to 204280	2 40
213426	11762	Feed Bar	50
213425	—	" " 213426 with 200214E, 201525E and 221508	1 00
200214E	12378	Feed Bar Hinge Screw.....	12
201525E	12378	" " " " Nut	03
212637	12241	" Dog	75
203609	11762	" " Lever with 200098E	60
200362C	12311	" " " Adjusting Screw	03
201524E	12378	" " " " Check Nut	03
200263D	11763	" " " Hinge Screw	08
201528E	11763	" " " " Nut	04
221207	11761	" " " Post	2 50
221208	11761	" " " " 221207 with 200265E, 201525E, 203609, 203610, 221211, 221212, four each 200054E and 200578H.....	6 25
221209	11761	Feed Dog Lever Post Cover (back).....	40
221226	11761	" " " " " (front)	40
200159B	—	" " " " " " Clamp Screw	04
221211	11761	Feed Dog Lever Post Cover (side) with 200362C and 201524E	1 25
200583H	11763	Feed Dog Lever Post Cover (back or front) Screw	02
200578H	11763	Feed Dog Lever Post Cover (side) Screw	05
200024C	11763	" " " " Screw (2)	04
221212	11761	" " " " Support	1 50
200054E	12351	" " " " " Screw	03
200008C	12321	" " " " " " (2)	07
203637	11763	" " " " " " Washer (2)	02
203610	11763	Feed Dog Lever Slide Block	15
200265E	11763	" " " " " Hinge Screw	06
201525E	12378	" " " " " " " "	03

No.	Plate	Name	Each
200098E	12351	Feed Dog Screw	\$ 03
213428	11763	" Driving Cam with 200382c and 200437c	50
213429	11762	Feed Driving Cam Fork Lever with 204195 and 204293	85
213427	11762	Feed Driving Cam Fork Lever Con- nection with 200668c and 201525E.....	35
204194	11763	Feed Driving Cam Fork Lever Con- nection Clamp with 200031c	45
200031c	12311	Feed Driving Cam Fork Lever Con- nection Clamp Pinch Screw.....	04
200668c	12378	Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud.....	06
201525E	12378	Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud Nut.....	03
200002E	12378	Feed Driving Cam Fork Lever Con- nection Hinge Screw	07
201522E	12378	Feed Driving Cam Fork Lever Con- nection Hinge Screw Nut.....	03
*204195	—	Feed Driving Cam Fork Lever Shaft	—
204197	11763	" " " " " "	15
200113F	12374	Collar with 200113F	03
204293	12374	Feed Driving Cam Fork Lever Shaft Posi- tion Pin	01
204196	12351	Feed Driving Cam Fork Lever Shaft Sleeve (split)	25
200043c	12311	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw	04
201524E	12378	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut	03
213693	11762	Feed Driving Cam Fork Lever complete, Nos. 204194 and 213429	1 30
200437c	12311	Feed Driving Cam Position Screw.....	06
200382c	11142	" " " Set Screw	02
204199	12371	" " Rock Shaft	35
213495	—	" " " " 204199 with 200002E, 201522E and 213427.....	80
202305c	12351	Feed Driving Rock Shaft Center (2).	06
200043c	12311	" " " " " Set Screw (2)	0
221508	11763	Feed Driving Rock Shaft Crank with two 200383c	35
200383c	12311	Feed Driving Rock Shaft Crank Set Screw	02
213007	11763	Feed Lifting Cam with 202126.....	75
204202	12374	" " " Fork with 200027E....	75
200027E	12378	" " " " Pinch Screw	04

No.	Plate	Name	Each
202126	12374	Feed Lifting Cam Position Pin	\$ 01
200045C	12378	" " " Screw	03
203305	11762	" " Rock Shaft	30
203315	11762	" " " " 203305 with 203238	65
202305C	12351	" " " " Center (2)	06
200043C	12311	" " " " " Set Screw	
		(2)	04
202276	12374	Feed Lifting Rock Shaft Slide Block	15
203238	12374	" " " " " "	
		202276 with 200243E and 201531E.....	35
200243E	12378	Feed Lifting Rock Shaft Slide Block	
		Hinge Screw	08
201531E	12374	Feed Lifting Rock Shaft Slide Block	
		Hinge Screw Nut	03
204206	—	Feed Regulating Handle	10
204207	12361	" " " 204206 with	
		200098F, 202622, 204208 to 204210 and	
		204213	55
204208	12351	Feed Regulating Handle Adjustable Stop	05
200098F	12351	" " " " "	
		Screw	03
204209	12351	Feed Regulating Handle Position Pin..	01
204210	11763	" " " Shaft	20
204211	11763	" " " " Crank with	
		200078C	20
213433	11762	Feed Regulating Handle Shaft Crank	
		Link	25
200271E	12311	Feed Regulating Handle Shaft Crank	
		Link Hinge Screw (lower).....	05
200291E	12351	Feed Regulating Handle Shaft Crank	
		Link Hinge Screw (upper)	05
200078C	12351	Feed Regulating Handle Shaft Crank	
		Set Screw	03
204213	12351	Feed Regulating Handle Shaft Sleeve	
		(split)	15
200362C	12311	Feed Regulating Handle Shaft Sleeve	
		Set Screw	03
202622	11763	Feed Regulating Handle Shaft Sleeve	
		Washer	01
202036	12378	Feed Regulating Handle Stop Pin.....	01
213902	—	Feed Regulating Handle complete, Nos.	
		200291E, 204207, 204211 and 213433....	1 05
227543	11760	Foot Lifter Lifting Lever.....	20
227480	—	" " " " 227543 with	
		200262H	30
227356	—	Foot Lifter Lifting Lever 227480 with	
		227273	85
200262H	11763	Foot Lifter Lifting Lever Hinge Screw	10
227475	11760	" " " " Rod with 202302	10


No.	Plate	Name	Each
227273	—	Foot Lifter Lifting Lever Rod 227475 with 206628, 227227 and 227576.....	\$ 55
204126	12321	Foot Lifter Lifting Lever Rod Clamp with two 200530c	20
227316	12388	Foot Lifter Lifting Lever Rod Clamp Hook	05
227576	12388	Foot Lifter Lifting Lever Rod Clamp Hook 227316 with 204126	25
200530c	12321	Foot Lifter Lifting Lever Rod Clamp Set Screw	05
202302	12321	Foot Lifter Lifting Lever Rod Cotter Pin	01
206628	12388	" " " " " Spring	05
227227	12388	" " " " " " "	
		Collar with 200113F	15
200113F	12374	Foot Lifter Lifting Lever Rod Spring Col- lar Set Screw	03
*203463	—	Hook (sewing)	—
203464	11241	" 203463 with 200600F, 200616F and 203251	2 20
203465	11241	Hook and Bobbin Case complete, Nos. 203217 and 203464	3 00
203242	12344	Hook Bevel Gear, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Gear Set Screw.....	02
203242	12344	" " Pinion, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Pinion Set Screw.....	02
203306	11768	" Counter Shaft	45
203244	12374	" " " Collar with two 200393c	20
200393c	12374	Hook Counter Shaft Collar Set Screw..	02
203245	12344	" " " Driving Gear, 44 teeth, with 200362c and 200439c	1 00
213157	—	Hook Counter Shaft Driving Gear 203245 with 200045c and 213007.....	1 80
200439c	12311	Hook Counter Shaft Driving Gear Posi- tion Screw	05
200362c	12311	Hook Counter Shaft Driving Gear Set Screw	03
203246	12344	Hook Counter Shaft Gear, 22 teeth, with two 200383c	75
200383c	12311	Hook Counter Shaft Gear Set Screw....	02
202299	—	" " " Oil Packing (wick)..	01
200840E	12311	" " " " " "	
		Stop Screw	10
203247	12371	Hook Driving Shaft	1 60
203248	12361	" " " Bearing with 202299.	20
202299	—	" " " " Oil Packing (wick)	01

No.	Plate	Name	Each
200825	—	Knife Bar Driving Cam Roller Screw Stud	\$ 10
201528H	11763	Knife Bar Driving Cam Roller Screw Stud Nut	04
200347C	12376	Knife Bar Driving Cam Set Screw.....	03
204452	11764	" Holder	1 00
200094F	10476	" " Screw	02
200126F	10476	" Screw (2)	02
213770	11768	Needle Bar (hollow) with 200125F, 200590H and 213771	80
204248	11764	Needle Bar Connecting Link.....	35
200658C	12351	" " " " Hinge Screw Stud	10
201519C	12351	Needle Bar Connecting Link Hinge Screw Stud Nut	03
204249	12374	Needle Bar Connecting Stud with 200072C and 202277	40
202277	—	Needle Bar Connecting Stud Oil Packing (wick)	01
200072C	12374	Needle Bar Connecting Stud Pinch Screw	03
213435	11764	" " Guard	25
204326	—	" " Packing Cord (2)..Per 100	2
200868	11764	" " Screw Bushing (lower)	05
213771	11764	" " Thread Guide	03
200590H	11764	" " " " Screw	02
200125F	12374	" Set Screw	02
204252	12374	Presser Bar Lifter	20
200550C	12311	" " " Hinge Screw	08
204455	11771	" " Lifting Bracket with 200387C	40
204254	10441	Presser Bar Lifting Bracket Position Guide	30
200362C	12311	Presser Bar Lifting Bracket Position Guide Set Screw	03
200387C	12376	Presser Bar Lifting Bracket Set Screw	02
204327	—	" " Packing Washer (felt)	Per 100 25
200868	11764	" " Screw Bushing (lower)....	05
204258	12378	" " Spring (heavy)	10
200493B	11771	" " Thumb Screw (pressure regulating)	5
201910	12225	Roller Presser $\frac{1}{8}$ in. diam., $\frac{1}{8}$ in. face (coarse) with 200551F and 201534H..	25
204328	—	Roller Presser Arm	20
204570	12225	" " " 204328 with 201910..	45
202560	12225	" " " Bracket (swing) ...	60
204575	—	" " " 202560 with 200096D and 204570	1 10

No.	Plate	Name	Each
200675C	12225	Roller Presser Arm Bracket Position Screw Stud	\$ 05
202558	12225	Roller Presser Arm Bracket Spring....	02
202559	12225	" " " " " Stop	05
200141F	12225	" " " " " "	
		Screw	02
200096D	12225	Roller Presser Arm Screw	03
204495	12225	" " Bar	35
200551F	12225	" " Hinge Screw	10
201534H	12374	" " " " Nut	03
204576	—	Roller Presser and Bar complete, Nos. 200675C, 202558, 202559, 204495, 204575 and two 200141F	1 50
202068	12153	Spool Holder Base	15
200575H	12311	" " " Screw	05
204296	12153	" " Wire	10
200079H	12311	" " " Hinge Screw.....	02
204297	12153	Spool Holder complete, Nos. 200079H, 202068 and 204296	25
213006	11768	Take-up Cam with 200335C, 200383C, 200430C, 200658C and 201519C	1 50
200430C	12311	Take-up Cam Position Screw	08
200383C	12311	" " " " Check Screw	02
200335C	12311	" " Set Screw	04
203270	11769	" Lever with 204265	60
203291	—	" " 203270 with 204263	75
204263	12378	" " Bearing with 204264	15
204264	11769	" " " Position Pin	01
200042F	12311	" " " Screw	05
204265	—	" " Oil Guard	05
201816	12351	" " Roller	12
203271	11769	Take-up Lever complete, Nos. 200042F, 201816 and 203291	90
202402	12349	Tension Disc	05
202090	12349	" " Position Pin	01
204267	12378	" Release Lever	05
200309E	12349	" " " Screw	04
202075	12349	" " Plunger	03
204456	11769	" " Slide	20
204457	11142	" " " Spring	02
202407	12349	" Spring	05
200632B	12349	" Stud	20
200397H	12349	" " Set Screw	02
201572B	12349	" Thumb Nut	04
204271	12349	" Washer	05
204272	12349	Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402	50
204458	11769	Thread Controller Adjusting Collar with 200684H (for Presser Bar)	15

No.	Plate	Name	Each
200684H	11769	Thread Controller Adjusting Collar Screw	\$ 04
204274	12349	" " Plate	12
200577H	12311	" " " Screw	02
202098	12349	" " Roller	01
204275	12349	" " " Guard	10
202084	12349	" " " " Washer	01
200300C	12349	" " " Screw	04
204276	12349	" " Spring	03
204333	12349	" " " Guard	08
200581H	12349	" " " " Screw	02
204277	11769	" " " Stop	15
204278	11769	" " " " Driving Gear	10
200319C	12349	" " " " " " " "	
		Hinge Screw	04
200135C	12349	Thread Controller Spring Stop Screw....	03
204279	11769	" " " Stud with 204925	10
200355H	12319	" " " " Set Screw ..	03
204925	11769	" " " " Washer	01
205987	12349	Thread Controller complete, Nos. 200300C, 200581H, 202084, 202098, 204274, 204275 and 204333	42
204280	12349	Thread Controller and Spring complete, Nos. 204276 and 205987.....	4
204459	11769	Thread Guide	02
204329	—	" Oiler (felt)	01
204330	12225	" " Bracket with 204329	25
200113F	12374	" " " Screw	03
204281	12349	" Retainer Guide Wire	01
202091	12349	" " Sleeve	05
202092	12349	" " Spring	01
204058B	12349	" " Stud	07
200368H	12349	" " " Set Screw	02
204059	12349	Thread Retainer complete, Nos. 202091, 202092 and 204058B	15
215771	11770	Throat Plate, 53 needle hole, for needle sizes 1 to 3½, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .045, .060 and .085 in. to right of seam	2 00
215772	11770	Throat Plate Knife Follower.....	12
200587D	12351	" " " " Screw	02
212664	11770	" " " " Spring	02
200178D	11770	" " " " " Screw	02
200577H	12311	" " Screw (2)	02

LIST OF PARTS COMPLETE
FOR

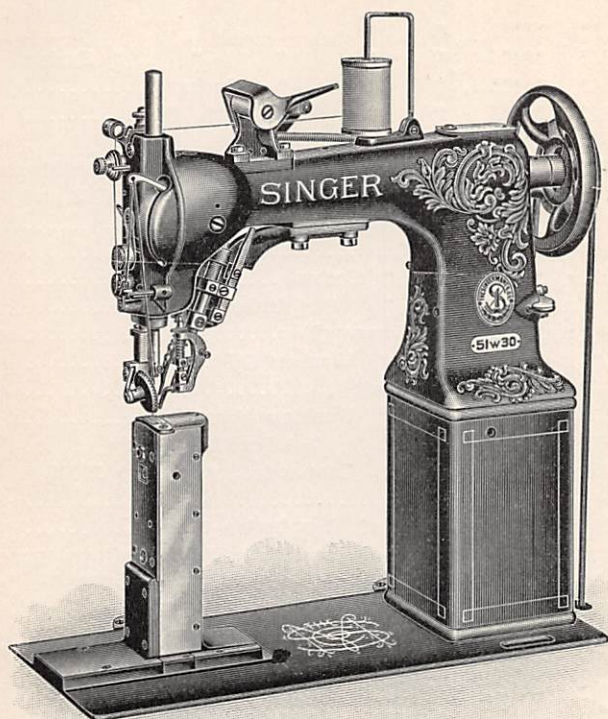

MACHINE No. 51 w 30

DROP FEED. ROLLER PRESSER

Oblique Underedge Trimmer. Trims Back of Needle.

For Leather.

No.	Plate	Name	Each
*204343	—	Arm	\$ —
*208361	—	" 204343 with 200439c, 202036 and 204351	—
*213434	—	Arm Base	—
200010E	11763	" " Screw (3)	06
202005	12374	" " " Washer (3)	01

No.	Plate	Name	Each
204344	10472	Arm Bracket with 200326c	\$ 55
200189H	11771	" " Screw (3)	04
204345	10471	" " Switch Handle with 200889 and 201842	1 45
200859B	10476	Arm Bracket Switch Handle Stud	30
204346	10475	" " " " " Bushing	55
201528H	11763	" " " " " Nut....	04
204347	10476	" " " " " Spring	02
204348	10475	" " " Spring	05
204349	10475	" " " " Hook	01
204321	10475	" " " " Pin	02
204350	10471	Arm Bracket complete, Nos. 200391c, 200859B, 201528H, 204344 to 204348 and 204376	3 75
204163	12344	Arm Cap	10
200278H	12311	" " Screw	05
202248H	12351	" " " Washer	05
200963E	12311	" Screw (3)	06
202005	12374	" " Washer (3)	01
203202	11760	" Shaft	1 75
204351	11142	" " Bushing (front)	35
200439c	12311	" " " Position Screw	05
213432	11760	" " Connection with four 200054E (2)	60
200054E	12351	Arm Shaft Connection Screw	03
204805	11760	Balance Wheel 5½ in. diam. (belt groove 3 in. diam.), with 200328c and 200335c	1 00
200062H	12311	Balance Wheel Adjusting Screw.....	07
200328c	12311	" " Position Screw	04
200335c	12311	" " Set Screw	04
*221201	—	Bed	—
*221202	—	" 221201 with 203248, 203249, two each 200362c, 200516E, 200840E and 202299..	—
202258	12153	Bed Hinge Connection (2).....	08
200570E	12311	" " " Screw (4)	05
203208	12312	Bobbin	05
203210	12312	" Case Base with 202056, 203211 to 203213 and 203216	55
203211	12312	Bobbin Case Base Latch.....	05
*202056	12312	" " " " Pin	—
203212	12312	" " " " Plunger	02
203213	12312	" " " " Spring	0
203209	12312	" " Cap with 200984F, 203214, 203215 and two 200594F.....	25
203214	12312	Bobbin Case Tension Spring.....	10
200984F	12312	" " " " Regulating Screw	04
200594F	12312	Bobbin Case Tension Spring Screw.....	02
203215	12312	" " Thread Guide	05

No.	Plate	Name	Each
200594F	12312	Bobbin Case Thread Guide Screw.....	\$ 02
203216	12312	" " Washer (cloth)Per 100	25
203217	12312	Bobbin Case complete, Nos. 203209 and 203210	80
204353	10471	Bracket (underedge) with 204411.....	1 25
200517B	10475	" Screw (2)	05
204354	10471	Bracket (underedge) complete, Nos. 200118F, 200229B, 200577H, 200888, 202603, 204233, 204353, 204361 to 204365, 204368, 204372, 204373, 204375, 213774, 213777 and two 200028B	10 50
204184	11760	Face Plate with 200355H, 200368H, 202090 204185, 204281 and two 200397H.....	75
200053C	12311	Face Plate Screw	04
204185	12378	" " Thread Guide	03
200397H	12349	" " " Set Screw	02
204300	11760	Face Plate complete, Nos. 200113F, 200135C, 200309E, 200319C, 200577H, 204059, 204184, 204267, 204272, 204277 to 204280 and 204330	2 65
213426	11762	Feed Bar	50
213425	—	" " 213426 with 200214E, 201525E and 221508	1 00
200214E	12378	Feed Bar Hinge Screw	12
201525E	12378	" " " " Nut	03
213920	11770	" Dog	75
203609	11762	" " Lever with 200098E	60
200362C	12311	" " " Adjusting Screw	03
201524E	12378	" " " " Check Nut	03
200263D	11763	" " " Hinge Screw	08
201528E	11763	" " " " Nut	04
221207	11761	" " " Post	2 50
221208	11761	" " " " 221207 with 200265E, 201525E, 203609, 203610, 221211, 221212, four each 200054E and 200578H.....	6 25
221209	11761	Feed Dog Lever Post Cover (back).....	40
221226	11761	" " " " " (front)	40
200159B	—	" " " " " " Clamp Screw	04
221211	11761	Feed Dog Lever Post Cover (side) with 200362C and 201524E.....	1 25
200583H	11763	Feed Dog Lever Post Cover (back or front) Screw	02
200578H	11763	Feed Dog Lever Post Cover (side) Screw	05
200024C	11763	" " " " Screw (2)	04
221212	11761	" " " " Support	1 50
200054E	12351	" " " " " Screw.....	03
200008C	12321	" " " " " " (2)	07
203637	11763	" " " " " " Washer	02

No.	Plate	Name	Each
203610	11763	Feed Dog Lever Slide Block	\$ 15
200265E	11763	" " " " " Hinge Screw	06
201525E	12378	" " " " " " "	
		Nut	03
200098E	12351	Feed Dog Screw	03
213428	11763	" Driving Cam with 200382C and 200437C	50
213429	11762	Feed Driving Cam Fork Lever with 204195 and 204293	85
213427	11762	Feed Driving Cam Fork Lever Con- nection with 200668C and 201525E.....	35
204194	11763	Feed Driving Cam Fork Lever Con- nection Clamp with 200031C	45
200031C	12311	Feed Driving Cam Fork Lever Con- nection Clamp Pinch Screw.....	04
200668C	12378	Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud	06
201525E	12378	Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud Nut.....	03
200002E	12378	Feed Driving Cam Fork Lever Con- nection Hinge Screw	07
201522E	12378	Feed Driving Cam Fork Lever Con- nection Hinge Screw Nut.....	03
*204195	—	Feed Driving Cam Fork Lever Shaft....	—
204197	11763	" " " " " " Col- lar with 200113F	15
200113F	12374	Feed Driving Cam Fork Lever Shaft Collar Set Screw	03
204293	12374	Feed Driving Cam Fork Lever Shaft Position Pin	01
204196	12351	Feed Driving Cam Fork Lever Shaft Sleeve (split)	25
200043C	12311	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw	04
201524E	12378	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut.....	03
213693	11762	Feed Driving Cam Fork Lever com- plete, Nos. 204194 and 213429.....	1 30
200437C	12311	Feed Driving Cam Position Screw.....	06
200382C	11142	" " " Set Screw	02
204199	12371	" " Rock Shaft	35
213495	—	" " " " 204199 with 200002E, 201522E and 213427	80
202305C	12351	Feed Driving Rock Shaft Center (2).	06
200043C	12311	" " " " " Set Screw (2)	04
221508	11763	Feed Driving Rock Shaft Crank with two 200383C	35

No.	Plate	Name	Each
200383c	12311	Feed Driving Rock Shaft Crank Set Screw	\$ 02
213007	11763	Feed Lifting Cam with 202126.....	75
204202	12374	" " " Fork with 200027E...	75
200027E	12378	" " " " Pinch Screw ...	04
202126	12374	" " " Position Pin	01
200045c	12378	" " " Screw	03
203305	11762	" " Rock Shaft	30
203315	11762	" " " " 203305 with 203238	65
202305c	12351	" " " " Center (2).....	06
200043c	12311	" " " " " Set Screw (2)	04
202276	12374	" " " " Slide Block	15
203238	12374	" " " " " " 202276 with 200243E and 201531E.....	35
200243E	12378	Feed Lifting Rock Shaft Slide Block Hinge Screw	08
201531E	12374	Feed Lifting Rock Shaft Slide Block Hinge Screw Nut	03
204206	—	Feed Regulating Handle	10
204207	12361	" " " 204206 with 200098F, 202622, 204208 to 204210 and 204213	55
204208	12351	Feed Regulating Handle Adjustable Stop	05
200098F	12351	" " " " " " Screw	03
204209	12351	Feed Regulating Handle Position Pin..	01
204210	11763	" " " Shaft	20
204211	11763	" " " " Crank with 200078c	20
213433	11762	Feed Regulating Handle Shaft Crank Link	25
200271E	12311	Feed Regulating Handle Shaft Crank Link Hinge Screw (lower).....	05
200291E	12351	Feed Regulating Handle Shaft Crank Link Hinge Screw (upper).....	05
200078c	12351	Feed Regulating Handle Shaft Crank Set Screw	03
204213	12351	Feed Regulating Handle Shaft Sleeve (split)	15
200362c	12311	Feed Regulating Handle Shaft Sleeve Set Screw	03
202622	11763	Feed Regulating Handle Shaft Sleeve Washer	01
202036	12378	Feed Regulating Handle Stop Pin.....	01
213902	—	Feed Regulating Handle complete, Nos. 200291E 204207, 204211 and 213433....	1 05
227543	11760	Foot Lifter Lifting Lever.....	20
227480	—	" " " " 227543 with 200262H	30

No.	Plate	Name	Each
227356	—	Foot Lifter Lifting Lever 227480 with 227273	\$ 85
200262H	11763	Foot Lifter Lifting Lever Hinge Screw..	10
227475	11760	" " " " Rod with 202302	10
227273	—	" " " " " 227475 with 206628, 227227 and 227576.....	55
204126	12321	Foot Lifter Lifting Lever Rod Clamp with two 200530c	20
227316	12388	Foot Lifter Lifting Lever Rod Clamp Hook	05
227576	12388	Foot Lifter Lifting Lever Rod Clamp Hook 227316 with 204126	25
200530c	12321	Foot Lifter Lifting Lever Rod Clamp Set Screw	05
202302	12321	Foot Lifter Lifting Lever Rod Cotter Pin	01
206628	12388	" " " " " Spring ..	05
227227	12388	" " " " " " Col- lar with 200113F	15
200113F	12374	Foot Lifter Lifting Lever Rod Spring Col- lar Set Screw	03
204355	10475	Guide Finger	20
204357	10473	" " Clamp with 200103D and 200136F	65
204358	10473	Guide Finger Clamp Bar	15
204359	10473	" " " " Carrier with 200875	1 75
213777	—	Guide Finger Clamp Bar Carrier 204359 with 204357, 204358, 204366 and 204367	3 00
204361	10473	Guide Finger Clamp Bar Carrier Latch	35
200802E	11764	" " " " " " Hinge Screw	10
204230	11764	Guide Finger Clamp Bar Carrier Latch Spring	02
204233	10473	Guide Finger Clamp Bar Carrier Latch Spring 204230 with 200802E	10
204364	10473	Guide Finger Clamp Bar Carrier Position Guide with 200078H and 200387c..	50
200078H	12351	Guide Finger Clamp Bar Carrier Position Guide Pinch Screw.....	03
200387c	12376	Guide Finger Clamp Bar Carrier Position Guide Set Screw	02
204363	10473	Guide Finger Clamp Bar Carrier Position Guide Slide	20
200577H	10473	Guide Finger Clamp Bar Carrier Position Guide Slide Screw.....	02
204362	10476	Guide Finger Clamp Bar Carrier Position Guide Suspending Collar with 200380c and 200381E	20

No.	Plate	Name	Each
200381E	10476	Guide Finger Clamp Bar Carrier Position Guide Suspending Collar Screw..	\$ 02
200380C	12319	Guide Finger Clamp Bar Carrier Position Guide Suspending Collar Set Screw	02
200785D	11764	Guide Finger Clamp Bar Carrier Screw (handle)	12
200875	10473	Guide Finger Clamp Bar Carrier Screw 200785D with 201537H	15
201537H	12319	Guide Finger Clamp Bar Carrier Screw (handle) Nut	03
204365	10473	Guide Finger Clamp Bar Carrier Spring	02
204366	10473	" " " " Position Guide with 200140H	40
200140H	11764	Guide Finger Clamp Bar Position Guide Screw	02
204367	10473	Guide Finger Clamp Bar Spring.....	02
200103D	10473	" " " Pinch Screw.....	02
200136F	11764	" " " Screw	02
204368	10473	" " Suspending Stop (adjustable)	20
200118F	11764	Guide Finger Suspending Stop Screw	02
202603	11764	" " " " " Washer	01
*203463	—	Hook (sewing)	—
203464	11241	" 203463 with 200600F, 200616F and 203251	2 20
203465	11241	Hook and Bobbin Case complete, Nos. 203217 and 203464	3 00
203242	12344	Hook Bevel Gear, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Gear Set Screw.....	02
203242	12344	" " Pinion, 24 teeth, with two 200383c	1 00
200383c	12311	Hook Bevel Pinion Set Screw.....	02
203306	11768	" Counter Shaft	45
203244	12374	" " " Collar with two 200393c	20
200393c	12374	Hook Counter Shaft Collar Set Screw...	02
203245	12344	" " " Driving Gear, 44 teeth, with 200362c and 200439c.....	1 00
213157	—	Hook Counter Shaft Driving Gear 203245 with 200045c and 213007.....	1 80
200439c	12311	Hook Counter Shaft Driving Gear Position Screw	05
200362c	12311	Hook Counter Shaft Driving Gear Set Screw	03
203246	12344	Hook Counter Shaft Gear, 22 teeth, with two 200383c	75

No.	Plate	Name	Each
200383c	12311	Hook Counter Shaft Gear Set Screw....	\$ 02
202299	—	" " " Oil Packing (wick) ..	01
200840E	12311	" " " " " " Stop	
		Screw	10
203247	12371	Hook Driving Shaft	1 60
203248	12361	" " " Bearing with 202299.	20
202299	—	" " " " Oil Packing	
		(wick)	01
202126	12374	Hook Driving Shaft Bearing Position Pin	01
200516E	12311	" " " " Screw	08
203249	12344	" " " Bushing (eccentric).	25
202299	—	" " " " Oil Packing	
		(wick)	01
200362c	12311	Hook Driving Shaft Bushing Set Screw.	03
213141	11764	" " " Collar with two	
		200393c	20
200393c	12374	Hook Driving Shaft Collar Set Screw..	02
203251	12312	" Gib	40
200600F	12312	" " Hinge Screw	02
200616F	12312	" " Screw	02
203625	11761	" Post	3 00
221228	—	" " 203625 with 200159B, 200555H,	
		202299, 203242, 203465, 203619, 203718,	
		221209, 221215, 221226 and eight	
		200583H	9 50
202299	—	Hook Post Oil Packing (wick)	01
200008c	12321	" " Screw (2)	07
203637	11763	" " " Washer (2)	02
221215	11762	" " Slide	40
203619	11761	" Socket	80
200555H	12312	" " Screw	05
203718	11241	" Washer	20
221225	—	Hook Post complete, Nos. 221208 and	
		221228	15 75
207805	11764	Knife	10
204369	10476	" Bar (hollow) with 200094F.....	50
213774	—	" " 204369 with 204342	1 50
204370	11142	" " Driving Cam with 200347c and	
		200434c	90
200434c	11142	Knife Bar Driving Cam Position Screw.	08
201816	12351	" " " " Roller	12
201808	11764	" " " " 201816	
		with 200825	22
201842	10475	Knife Bar Driving Cam Roller 201808 with	
		201528H	26
200825	—	Knife Bar Driving Cam Roller Screw	
		Stud	10
201528H	11763	Knife Bar Driving Cam Roller Screw	
		Stud Nut	04

No.	Plate	Name	Each
200347c	12376	Knife Bar Driving Cam Set Screw	\$ 03
204372	10476	" " " Connection with two	
		200387c	50
204375	10471	Knife Bar Driving Connection Pitman...	30
204376	10471	" " " " " Driv-	
		ing Bell Crank with 204349.....	80
200391c	10475	Knife Bar Driving Connection Pitman	
		Driving Bell Crank Position Screw....	02
200664H	11764	Knife Bar Driving Connection Pitman	
		Driving Bell Crank Screw Stud.....	07
200889	10475	Knife Bar Driving Connection Pitman	
		Driving Bell Crank Screw Stud 200664H	
		with 201528H	11
201528H	11763	Knife Bar Driving Connection Pitman	
		Driving Bell Crank Screw Stud Nut..	04
200326c	10476	Knife Bar Driving Connection Pitman	
		Driving Bell Crank Screw Stud Posi-	
		tion Adjusting Screw	05
200229B	10476	Knife Bar Driving Connection Pitman	
		Hinge Screw (lower)	10
200229B	10476	Knife Bar Driving Connection Pitman	
		Hinge Screw (upper)	10
200887	10476	Knife Bar Driving Connection Pitman	
		Hinge Screw 200229B (upper) with	
		201528H	14
201528H	11763	Knife Bar Driving Connection Pitman	
		Hinge Screw (upper) Nut.....	04
204373	10475	Knife Bar Driving Connection Position	
		Guide with 200890	1 00
200026B	11764	Knife Bar Driving Connection Position	
		Guide Pinch Screw	04
200890	10475	Knife Bar Driving Connection Position	
		Guide Pinch Screw 200026B with	
		201534H	07
201534H	12374	Knife Bar Driving Connection Position	
		Guide Pinch Screw Nut	03
200028B	10475	Knife Bar Driving Connection Position	
		Guide Screw	04
200387c	12376	Knife Bar Driving Connection Set Screw	02
204411	11764	" " Sleeve (split)	25
200043c	12311	" " " Set Screw	04
200888	10476	" " " " " 200043c with	
		201524E	07
201524E	12378	Knife Bar Sleeve Set Screw Nut	03
204381	10476	" Holder	95
204342	10476	" " 204381 with two 200126F....	1 00
200094F	10476	" " Screw	02
200126F	10476	" Screw	02

No.	Plate	Name	Each
204383	11768	Needle Bar (hollow) with 200125F, 200175E and 204250.....	\$ 80
204248	11764	Needle Bar Connecting Link	35
200658c	12351	" " " " Hinge Screw Stud	10
201519c	12351	Needle Bar Connecting Link Hinge Screw Stud Nut	03
204249	12374	Needle Bar Connecting Stud with 200072c and 202277	40
202277	—	Needle Bar Connecting Stud Oil Packing (wick)	01
200072c	12374	Needle Bar Connecting Stud Pinch Screw	03
213435	11764	" " Guard	25
204326	—	" " Packing Cord (2)....Per 100	25
200504E	12378	" " Screw Bushing (lower)	05
204250	11764	" " Thread Guide	03
200175E	11764	" " " " Screw	02
200125F	12374	" Set Screw	02
204252	12374	Presser Bar Lifter	20
200550c	12311	" " " Hinge Screw	08
204253	10441	" " Lifting Bracket with 200086c	40
200086c	12374	" " " " Pinch Screw..	03
204254	10441	" " " " Position Guide	30
200362c	12311	" " " " " "	
		Set Screw	03
204327	—	Presser Bar Packing Washer (felt)	Per 100 25
200504E	12378	Presser Bar Screw Bushing (lower)....	05
204258	12378	" " Spring (heavy)	10
200491B	12344	" " Thumb Screw (pressure regulating)	25
201907	11767	Roller Presser 1 $\frac{1}{4}$ in. diam., $\frac{5}{16}$ in. face (fine), with 200548F and 201534H....	40
202839	11767	Roller Presser Arm	20
204569	11767	" " " 202839 with 201907.	60
202560	12225	" " " Bracket (swing) ..	60
204436	—	" " " " 202560 with 200096b and 204569	1 25
200675c	12225	Roller Presser Arm Bracket Position Screw Stud	05
202558	12225	Roller Presser Arm Bracket Spring....	02
202559	12225	" " " " " Stop	05
200141F	12225	" " " " " "	
		Screw	02
200096b	12225	Roller Presser Arm Screw	03
204495	12225	" " Bar	35
200548F	11155	" " Hinge Screw	10
201534H	12374	" " " " Nut	03

No.	Plate	Name	Each
204437	—	Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 204436, 204495 and two 200141r	\$ 1 75
202068	12153	Spool Holder Base	15
200575H	12311	" " " Screw	05
204296	12153	" " Wire	10
200079H	12311	" " " Hinge Screw	02
204297	12153	Spool Holder complete, Nos. 200079H, 202068 and 204296	25
213006	11768	Take-up Cam with 200335c, 200383c, 200430c, 200658c and 201519c	1 50
200430c	12311	Take-up Cam Position Screw	08
200383c	12311	" " " " Check Screw	02
200335c	12311	" " Set Screw	04
203270	11769	" Lever with 204265	60
203291	—	" " 203270 with 204263	75
204263	12378	" " Bearing with 204264	15
204264	11769	" " " Position Pin	01
200042F	12311	" " " Screw	05
204265	—	" " Oil Guard	05
201816	12351	" " Roller	12
203271	11769	Take-up Lever complete, Nos. 200042F, 201816 and 203291	90
202402	12349	Tension Disc	05
202090	12349	" " Position Pin	01
204267	12378	" Release Lever	05
200309E	12349	" " " Screw	04
202075	12349	" " Plunger	03
215609	—	" " Slide	18
204268	12378	" " " 215609 with 204269....	20
204269	12374	" " " Spring	02
202407	12349	" Spring	05
200632B	12349	" Stud	20
200397H	12349	" " Set Screw	02
201572B	12349	" Thumb Nut	04
204271	12349	" Washer	05
204272	12349	Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402	50
215610	—	Thread Controller Adjusting Collar.....	10
204273	11769	" " " " 215610 with 200684H (for Presser Bar).....	15
200684H	11769	Thread Controller Adjusting Collar Screw	04
204274	12349	" " Plate	12
200577H	12311	" " " Screw	02
202098	12349	" " Roller	05
204275	12349	" " " Guard	10
202084	12349	" " " Washer	01
200300C	12349	" " " Screw	04

No.	Plate	Name	Each
204276	12349	Thread Controller Spring	\$ 03
204333	12349	" " " Guard	08
200581H	12349	" " " " Screw ...	02
204277	11769	" " " " Stop	1
204278	11769	" " " " Driving Gear	10
200319C	12349	Thread Controller Spring Stop Driving Gear Hinge Screw	04
200135C	12349	Thread Controller Spring Stop Screw..	03
204279	11769	" " " Stud with 204925	10
200355H	12319	Thread Controller Spring Stud Set Screw	03
204925	11769	" " " Washer ...	01
205987	12349	Thread Controller complete, Nos. 200300C, 200581H, 202084, 202098, 204274, 204275 and 204333	42
204280	12349	Thread Controller and Spring complete, Nos. 204276 and 205987	45
204329	—	Thread Oiler (felt)	01
204330	12225	" " Bracket with 204329	25
200113F	12374	" " " Screw	03
204281	12349	" Retainer Guide Wire	07
202091	12349	" " Sleeve	01
202092	12349	" " Spring	01
204058B	12349	" " Stud	07
200368H	12349	" " " Set Screw	02
204059	12349	Thread Retainer complete, Nos. 202091, 202092 and 204058B	15
212654	12244	Throat Plate, 50 needle hole, for needle sizes 3 to 5, with 200178D, 200587D, 212655 and 212664, trims back of needle and .015, .025, .035 and .050 in. to right of seam	2 00
212655	12244	Throat Plate Knife Follower.....	12
200587D	12351	" " " " Screw	02
212664	11770	" " " " Spring	02
200178D	11770	" " " " " Screw	02
200577H	12311	" " Screw (2)	02

MACHINE No. 51 w 31

DROP FEED. ROLLER PRESSER

Oblique Underedge Trimmer. Trims Abreast of Needle.

For Leather.

The same as Machine No. 51 w 30 with the following exceptions:

No.	Plate	Name	Each
204356	10475	Guide Finger, in place of 204355.....	\$ 20
212657	12244	Throat Plate, 50 needle hole, for needle sizes 3 to 5, with 200178D, 200587D, 212658 and 212664, trims opposite the needle and .050, .060 and .075 in. to right of seam, in place of 212654.....	2 00
212658	12244	Throat Plate Knife Follower, in place of 212655	12

ACCESSORIES

FOR MACHINE NO. 51 W 25

No.	Plate	Name	Each
203208	12312	Bobbin (5)	\$ 05
225497	12153	" Case Screw Driver	10
12 N 3	—	Needles, three each, sizes, 3 and 4.....	
		Per doz	20
225191	—	Drip Pan with four wood screws $\frac{1}{2}$ in., No. 5	30
200748H	12319	Machine Clamp Screw	10
225585H	12351	" " " Washer	02
201582B	12319	" " " Wing Nut	08
227488	12153	Machine Clamp complete, Nos. 200748H, 201582B and 225585H	20
41400	12153	Machine Rest Pin (wood)	04
225500	12153	Oiler with 225499	10
225499	12153	" Spout, $2\frac{3}{4}$ in. long.....	09
225498	12153	Screw Driver, $7\frac{1}{4}$ in. long.....	1
225554	12153	Wrench (steel)	10

BOBBIN WINDER

SWING AUTOMATIC RIGHT HAND

202470	12320	Bobbin Winder Base.....	15
202471	12320	“ “ Frame	15
200221E	12319	“ “ “ Hinge Screw	12
202472	12319	“ “ “ Spring	05
200161E	12319	“ “ “ “ Screw	04
202473	12320	“ “ Pulley with 200380c	20
200380c	12319	“ “ “ Set Screw	02
202474	12320	“ “ Spindle	15
227522	12319	“ “ Stop Latch	10
200056E	12319	“ “ “ “ Screw	03
202477	12319	“ “ “ “ Thumb Lever	15
200299H	12319	“ “ “ “ “ “	
		Hinge Screw	
200299H	12319	Bobbin Winder Stop Latch Thumb Lever Joint Screw	05
201537H	12319	Bobbin Winder Stop Latch Thumb Lever Joint Screw Nut	03
202478	12319	Bobbin Winder Stop Latch Trip Lever	10
200299H	12319	“ “ “ “ “ “	
		Hinge Screw	05

No.	Plate	Name	Each
227523	12320	Bobbin Winder complete, Nos. 200056E, 200161E, 200221E, 201537H, 202470 to 202474, 202477, 202478, 227522, three 200299H and two round head wood screws 1½ in. No. 14.....	\$1 35
202480	12320	Bobbin Winder Spool Holder Base with 200355H and 202484	15
202481	12320	Bobbin Winder Spool Holder Base Spool Pin	05
202482	12319	Bobbin Winder Spool Holder Tension Disc (lower or upper).....	02
200011E	12319	Bobbin Winder Spool Holder Tension Disc Screw	05
200355H	12319	Bobbin Winder Spool Holder Tension Disc Set Screw	03
202483	12319	Bobbin Winder Spool Holder Tension Disc Spring (brass)	01
202484	12319	Bobbin Winder Spool Holder Tension Disc Thread Guide	01
202485	12320	Bobbin Winder Spool Holder complete, Nos. 200011E, 202480, 202481, 202483, two 202482 and one wood screw 1 in., No. 13H	35
227524	—	Bobbin Winder and Spool Holder complete, Nos. 202485 and 227523.....	1 65

FOOT LIFTER

227952	11156	Foot Lifter Lever (left or right).....	25
227678	11156	" " " Chain, 48 in. long with 202784	25
227954	11155	Foot Lifter Lever Chain Hook (lower)	02
202784	11155	" " " " " (upper)	02
225016	11155	" " " Hinge Pin	01
227953	11156	" " " Stand with two wood screws 1 in. No. 13.....	10
227955	11156	Foot Lifter Lever (left or right) complete, Nos. 225016, 227678 and 227952 to 227954	60

(For Foot Lifter Parts used on Machine Head, see pages 11, 19, 28, 38, 47 and 57.)

FOR MACHINE NO. 51 W 26

Same as for No. 51 w 25 with the following exception:

6 N 3	—	Needles, two each, sizes 5, 6 and 7, in place of 12 N 3	20
-------	---	---	----

FOR MACHINES NOS. 51 W 27 AND 51 W 28

Same as for No. 51 w 25 with the following exception:

No.	Plate	Name	Each
12 N 2	—	Needles, two each, sizes $2\frac{1}{2}$, 3 and $3\frac{1}{2}$, in place of 12 N 3	Per doz \$ 20

FOR MACHINES NOS. 51 W 29, 51 W 30 AND 51 W 31

Same as for No. 51 w 25 with the following exceptions:

207805	11764	Knife	10
12 N 2	—	Needles, two each, sizes $2\frac{1}{2}$, 3 and $3\frac{1}{2}$, in place of 12 N 3.....	Per doz. 20

HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0887

FEED DOGS

No.	Plate	Name	Each
212628	12240	Feed Dog, for 212626 and 221232	\$1 00
212629	12240	" " " 212626 and 221232	1 00
212632	12240	" " " 212625, 212630, 212631, 212646 and 212647	75
212633	12240	Feed Dog, for 212625, 212630, 212631, 212646 and 212647	75
212637	12241	Feed Dog, for 212624, 212634 to 212636, 212640, 215771, 221230, 221231 and 221233 to 221236	75
212638	12241	Feed Dog, for 212624, 212634 to 212636, 212640, 215771, 221230, 221231 and 221233 to 221236	75
212639	12241	Feed Dog, for 212624, 212634 to 212636, 212640, 221230 and 221231	75
212645	12242	Feed Dog, for 212643 and 212644.....	75
213920	11770	" " " 212654, 212656, 212657 and 221237	75

PRESSER FEET

FOR MACHINE NO. 51 W 25

No.	Plate	Name	Each
229082	11766	Presser Foot	\$ 50
229084	11766	Presser Foot (hinged) complete, Nos. 202090, 202924 and 229083	1 25

FOR MACHINES NOS. 51 W 26 AND 51 W 27

204594	11765	Lifting Presser Foot, for 204620, 204634, 206698 and 229620	1 25
204595	12376	Lifting Presser Foot, for 204620, 204634, 206698 and 229620	1 25
204599	11765	Lifting Presser Foot, for 204620, 204634, 206698 and 229620	1 25
204605	11765	Lifting Presser Foot, for 206668, 206675, 206678, 206714 and 206719.....	1 00
204606	11765	Lifting Presser Foot, for 206676, 206699 and 206700	1 00
204612	11765	Lifting Presser Foot, for 204620, 204634, 206698, 206705, 206706 and 229620.....	1 25
206697	11765	Lifting Presser Foot, for 204620, 204634, 206698, 206701 and 229620.....	1 25
229625	11765	Lifting Presser Foot, for 204620, 204634, 206698, 206705, 206706 and 229620....	1 25
229633	11765	Lifting Presser Foot, for 206672, 206673, 206707 and 206715 to 206717.....	1 00
204620	12376	Vibrating Presser Foot, for 204594, 204595, 204599, 204612, 206697 and 229625	1 00
204634	13042	Vibrating Presser Foot, for 204594, 204595, 204599, 204612, 206697 and 229625	1 00
206668	13042	Vibrating Presser Foot, for 204605	1 00
206672	13042	" " " " 229633	1 00

No.	Plate	Name				Each
206673	13042	Vibrating	Presser	Foot,	for 229633	\$1 00
206675	13042	"	"	"	" 204605	1 00
206676	13042	"	"	"	" 204606	1 00
206678	13042	"	"	"	" 204605	1 00
206698	13042	"	"	"	" 204594,	
		204595,	204599,	204612,	206697 and	
		229625				1 00
206699	13043	Vibrating	Presser	Foot,	for 204606.....	1 00
206700	13043	"	"	"	" 204606	1 00
206701	11765	"	"	"	" 206697	1 00
206705	13043	Vibrating	Presser	Foot,	for 204612 and	
		229625				1 50
206706	13043	Vibrating	Presser	Foot,	for 204612 and	
		229625				1 00
206707	13043	Vibrating	Presser	Foot,	for 229633	1 00
206714	13043	"	"	"	" 204605	1 00
206715	13043	"	"	"	" 229633	1 00
206716	13043	"	"	"	" 229633	1 00
206717	13043	"	"	"	" 229633	1 00
206719	13042	"	"	"	" 204605	1 00
229620	13042	"	"	"	" 204594,	
		204595,	204599,	204612,	206697 and	
		229625				1 00

ROLLER PRESSERS

FOR MACHINES NOS. 51 W 28, 51 W 29, 51 W 30
AND 51 W 31

No.	Plate	Name	Each
201906	11155	Roller Presser, $1\frac{1}{4}$ in. diam., $\frac{3}{16}$ in. face (fine), with 200548F and 201534H.....	\$ 40
201907	11767	Roller Presser, $1\frac{1}{4}$ in. diam., $\frac{5}{32}$ in. face (fine), with 200548F and 201534H....	40
201908	11767	Roller Presser, $1\frac{1}{4}$ in. diam., $\frac{1}{8}$ in. face (fine), with 200548F and 201534H....	40
201909	11767	Roller Presser, $1\frac{1}{8}$ in. diam., $\frac{3}{16}$ in. face (coarse), with 200551F and 201534H....	25
201910	12225	Roller Presser, $1\frac{1}{8}$ in. diam., $\frac{1}{8}$ in. face (coarse), with 200551F and 201534H..	25
201911	11767	Roller Presser, 1 in. diam., $\frac{1}{8}$ in. face (coarse), with 200551F and 201534H..	35
201914	11155	Roller Presser, $\frac{5}{8}$ in. diam., $\frac{1}{8}$ in. face (coarse), with 200551F and 201534H....	25
201915	11767	Roller Presser $1\frac{1}{2}$ in. diam., $\frac{3}{32}$ in. face (coarse), with 200554F	20
201916	11767	Roller Presser, $\frac{1}{2}$ in. diam., $\frac{1}{16}$ in. face (fine), with 200554F	20
202839	11767	Roller Presser Arm	20
204328	—	" " "	20
204571	—	" " "	25
204573	—	" " "	25
204567	11155	" " " 202839 with 201906	60
204569	11767	" " " 202839 with 201907	60
204570	12225	" " " 204328 with 201910	45
204572	11155	" " " 204571 with 201914	45
204574	—	" " " 204573 with 201916	40
202560	12225	" " " Bracket (swing)....	60
202838	—	" " " " 202560 with 200096D and 204567	1 20
204436	—	Roller Presser Arm Bracket 202560 with 200096D and 204569.....	1 25
204575	—	Roller Presser Arm Bracket 202560 with 200096D and 204570	1 10
200675c	12225	Roller Presser Arm Bracket Position Screw Stud	05
202558	12225	Roller Presser Arm Bracket Spring.....	02
202559	12225	" " " " " Stop	05
200141F	12225	" " " " " " "	
		Screw	02
200096D	12225	Roller Presser Arm Screw.....	03

Roller Pressers

73

No.	Plate	Name	Each
204495	12225	Roller Presser Bar	\$ 35
200554F	11767	" " Hinge Screw	06
200551F	12225	" " " "	10
201534H	12374	" " " " Nut.....	03
204437	—	Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 204436, 204495 and two 200141F	1 75
204496	—	Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 202838, 204495 and two 200141F	1 70
204576	—	Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 204495, 204575 and two 200141F	1 50

THROAT PLATES

FOR MACHINE NO. 51 W 25

No.	Plate	Name	Each
212626	12240	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212628 and 212629....	\$1 50
221232	12240	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212628 and 212629	1 50
212630	12240	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212632 and 212633....	1 50
212631	12240	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212632 and 212633....	1 50

FOR MACHINE NO. 51 W 26

212625	12240	Throat Plate, 40 needle hole, for needle sizes 7 to 9, for 212632 and 212633....	1 50
212626	12240	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212628 and 212629....	1 50
221232	12240	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212628 and 212629	1 50
212630	12240	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212632 and 212633....	1 50
212631	12240	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212632 and 212633	1 50

FOR MACHINES NOS. 51 W 27 AND 51 W 28

No.	Plate	Name	Each
212624	12241	Throat Plate, 40 needle hole, for needle sizes 7 to 9, for 212637 to 212639.....	\$ 1 50
212634	12241	Throat Plate, 53 needle hole, for needle sizes 1 to 3½, for 212637 to 212639....	1 50
212635	12241	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212637 to 212639.....	1 50
212636	12241	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212637 to 212639.....	1 50
212640	11770	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212637 to 212639.....	1 50
212643	12242	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212645.....	1 50
212644	12242	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212645	1 50
212646	12242	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212632 and 212633....	1 50
212647	12242	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212632 and 212633....	1 50
221230	11770	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212637 to 212639....	1 50
221231	11770	Throat Plate, 40 needle hole, for needle sizes 7 to 9, for 212637 to 212639....	1 50

FOR MACHINE NO. 51 W 29

No.	Plate	Name	Each
221233	11770	Throat Plate, 60 needle hole, for needle sizes 0 to 1, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .028, .035, .045, .060 and .085 in. to right of seam, for 212637 and 212638	\$ 2 00
221234	11770	Throat Plate, 56 needle hole, for needle sizes 1 to 2, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .035, .045, .060 and .085 in. to right of seam, for 212637 and 212638	2 00
215771	11770	Throat Plate, 53 needle hole, for needle sizes 1 to 3½, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .045, .060 and .085 in. to right of seam, for 212637 and 212638	2 00
221235	11770	Throat Plate, 50 needle hole, for needle sizes 3 to 5, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .060 and .085 in. to right of seam, for 212637 and 212638	2 00
221236	11770	Throat Plate, 46 needle hole, for needle sizes 5 to 7, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .060 and .085 in. to right of seam, for 212637 and 212638	2 00
215772	11770	Throat Plate Knife Follower	12

FOR MACHINE NO. 51 W 30

No.	Plate	Name	Each
212654	12244	Throat Plate, 50 needle hole, for needle sizes 3 to 5, with 200178D, 200587D, 212655 and 212664, trims back of needle and .015, .025, .035 and .050 in. to right of seam, for 213920	\$2 00

FOR MACHINE NO. 51 W 31

212656	12244	Throat Plate, 53 needle hole, for needle sizes 1 to 3½, with 200178D, 200587D, 212658 and 212664, trims opposite the needle and .040, .050 and .060 in. to right of seam, for 213920	2 00
212657	12244	Throat Plate, 50 needle hole, for needle sizes 3 to 5, with 200178D, 200587D, 212658 and 212664, trims opposite the needle and .050, .060 and .075 in. to right of seam, for 213920	2 00
221237	12244	Throat Plate, 56 needle hole, for needle sizes 1 to 2, with 200178D, 200587D, 212658 and 212664, trims opposite the needle and .040, .050 and .060 in. to right of seam, for 213920	2 00

HEMMER FEET

FOR MACHINE NO. 51 W 25

No.	Plate	Name	Each
229844	11766	Hemmer Foot, for $\frac{1}{8}$ to $\frac{5}{16}$ in. hem.....	\$ 75
229845	11766	" " " $\frac{3}{16}$ to $\frac{3}{8}$ in. hem....	1 25

WORK PLATE PLATFORM

No.	Plate	Name	Each
213855	11772	Work Plate	\$2 00
200019c	11771	" " Arm Screw	06
202622	11763	" " " Washer	01
213856	11772	" " Bracket	25
200189c	11771	" " " Screw	04
200189c	11771	" " Screw	04
213857	11772	" " Slide (back)	35
203301	11772	" " " (front)	35
213858	11772	Work Plate complete, Nos. 200019c, 202622, 203301, 213855 to 213857 and four 200189c	3 25

WOOD BASE (FLAT)

227493	12153	Bed Hinge Plate 202259 with two wood screws $\frac{3}{4}$ in. No. 13H.....	08
225589	—	Machine Cushion (leather)	01
227902	—	Wood Base with two 227493, four 225589 and four wood screws $1\frac{1}{4}$ in. No. 10..	2 40

WOOD BASE (OBLIQUE)

227903	—	Wood Base with two 227493, four 225589 and nine wood screws $1\frac{1}{4}$ in. No. 10..	2 40
--------	---	--	------

KNIFE GRINDER

No.	Plate	Name	Each
206977	—	Emery Wheel, 2 in. diam.....	\$ 25
206962	11296	" " Driving Shaft	1 00
201510D	11771	" " " " Nut	05
204101	12321	" " " " Washer	02
200387C	10473	" " " " Oil Stop Screw	02
206963	11296	" " " " Pulley with two 200403C	35
200403C	11771	Emery Wheel Driving Shaft Pulley Set Screw	03
206969	11296	Emery Wheel Washer (paper)	01
206964	—	Knife Grinder Frame with 200577H and two 200387C	1 25
207029	11296	Knife Holder Slide Bracket with 200394C, 200457D and two 200473B	75
200457D	11771	Knife Holder Slide Bracket Adjusting Screw	10
206966	11296	Knife Holder Slide Bracket Adjusting Screw Slide Plate	15
200577H	10473	Knife Holder Slide Bracket Adjusting Screw Slide Plate Screw	02
200394C	11771	Knife Holder Slide Bracket Set Screw..	03
206967	11296	" " " " Shaft	20
207030	—	" " " " Stop Collar	04
207031	11771	" " " " " "	
		207030 with 200473B	10
200473B	11771	Knife Holder Slide Bracket Stop Collar Thumb Screw	06
200473B	11771	Knife Set Screw	06
207032	11296	Knife Grinder complete, Nos. 201510D, 204101, 206962 to 206964, 206966, 206967, 206977, 207029, 207031 and two 206969	4 00

UNDER DRIVER

BALL BEARING, RIGHT HAND, ROUND BELT, TWO SPEED

No.	Plate	Name	Each
227370	11126	Cone Pulley (grooved), two speed, 4 $\frac{3}{8}$ in. and 5 $\frac{1}{2}$ in. belt diam., with 227553.....	\$1 35
25362	12321	Cone Pulley Ball, size $\frac{1}{8}$ inch.....	02
204100	12321	" " " Bearing Cup	12
204101	12321	" " " Cap	02
204102	12321	" " " Retaining Spring	05
227553	12322	Cone Pulley Ball Cup complete, Nos. 204100 to 204102 and thirteen 25362...	45
202459	11126	Driving Pulley, 7 $\frac{1}{4}$ in. diam., with 202460 and 204105	75
202460	11126	Driving Pulley Friction Ring (leather)..	05
204105	12321	" " " " Stop Pin...	01
227743	—	" " Shaft (hollow) with 204109, 204110, 204112 and two 204111.....	60
202461	11126	Driving Pulley Shaft 227743 with 204107, 204108 and eleven 25303.....	1 00
25303	12321	Driving Pulley Shaft Ball, size $\frac{1}{4}$ inch	03
204107	12321	" " " " Cup	10
204108	12321	" " " " Cap	02
204109	—	" " " Oil Plug	01
204110	—	" " " Oiling Leather	02
204111	—	" " " " " Pin (leather)	01
204112	12322	Driving Pulley Shaft Oiling Wick.....	01
200524c	12321	" " " Set Screw	06
204113	12321	" " " Thimble	10
227734	11126	Frame with 200524c	80
202463	11126	Lever (compression) with 204117, two each 200524c and 202845	45
227735	11126	Lever Brake with 200524c, 204122 and two 200374c	35
227736	11126	Lever Brake 227735 with 200082d and 227737	60
227737	11126	Lever Brake Belt Guard	20
200082d	12321	" " " " Screw	03
204122	12322	" " Leather	05
200374c	12321	" " " Set Screw	02
200524c	12321	" " Set Screw	06
204123	12322	" " Spring	05
204117	12321	" Compression Plate	10
202845	12321	" " " Rivet	01
202464	11126	" " Shaft with 202302	20

Under Driver

No.	Plate	Name	Each
202302	12321	Lever Compression Shaft Cotter Pin....	\$ 01
200524c	12321	" " " Set Screw	06
27070	11126	Shaft Pulley (sectional, grooved), 10 in. diam., 1 $\frac{3}{8}$ in. bore, with two 597c.....	45
597c	11155	Shaft Pulley Clamping Screw.....	08
227976	11126	Treadle with 200540D	45
227977	11126	" 227976 with 227978	60
227978	11126	" Adjustable Connecting Slide	15
200540D	11155	" " " " Set Screw	10
202468	11126	Treadle Pitman Rod (lower or upper)..	05
204126	12321	" " " Clamp with two 200530c	20
200530c	12321	Treadle Pitman Rod Clamp Set Screw..	05
227980	11126	Treadle Pitman complete, Nos. 204126 and two 202468	30
204127	11126	Treadle Stand (left) with two wood screws 1 in. No. 13	08
204128	11126	Treadle Stand (right) with two wood screws 1 in. No. 13.....	08
227981	—	Treadle and Stand complete, Nos. 204127, 204128 and 227977	75
227982	—	Treadle and Pitman complete, Nos. 227980 and 227981	90
227740	—	Transmitter complete, Nos. 202459, 202461, 202463, 202464, 204113, 204123, 227370, 227734, 227736 and three wood screws 1 $\frac{1}{2}$ in. No. 15.....	3 00
227985	—	Under Driver (ball bearing) lever pres- sure, right hand, two speed, complete, Nos. 27070, 227740 and 227982	4 00

NUMERICAL LIST OF PARTS

NUMERICAL LIST OF PARTS
HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 23 ST. N.Y.C. CH. 3-0887

NUMERICAL LIST OF PARTS

No.	Plate	Name	Each
597c	11155	Under Driver Shaft Pulley Clamping Screw, for 27070	\$ 08
25303	12321	Under Driver Driving Pulley Shaft Ball, size $\frac{1}{4}$ in., for 202461.....	03
25362	12321	Under Driver Cone Pulley Ball, size $\frac{3}{16}$ in., for 227553	02
27070	11126	Under Driver Shaft Pulley (sectional, grooved), 10 in. diam., $1\frac{3}{16}$ in. bore, with two 597c, for 227985	45
41400	12153	Machine Rest Pin (wood).....	04
200002E	12378	Feed Driving Cam Fork Lever Connection Hinge Screw, for 213495.....	07
200008C	12321	Feed Dog Lever Post Support Screw....	07
200008C	12321	Hook Post Screw	07
200010E	11763	Arm Base Screw	06
200011E	12319	Bobbin Winder Spool Holder Tension Disc Screw, for 202485	05
200019C	11771	Work Plate Arm Screw, for 213858.....	06
200024C	11763	Feed Dog Lever Post Screw	04
200026B	11764	Knife Bar Driving Connection Position Guide Pinch Screw, for 200890.....	04
200027E	12378	Feed Lifting Cam Fork Pinch Screw, for 204202	04
200028B	10475	Knife Bar Driving Connection Position Guide Screw, for 204354.....	04
200031C	12311	Feed Driving Cam Fork Lever Connection Clamp Pinch Screw, for 204194...	04
200042F	12311	Take-up Lever Bearing Screw, for 203271 and 204266	05
200043C	12311	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw	04
200043C	12311	Feed Driving Rock Shaft Center Set Screw	04
200043C	12311	Feed Lifting Rock Shaft Center Set Screw	04
200043C	12311	Knife Bar Sleeve Set Screw, for 200888	04
200045C	12378	Feed Lifting Cam Screw, for 213154 and 213157	03
200053C	12311	Face Plate Screw	04
200053C	12311	Vibrating Presser Bar Position Stop Screw, for Machines Nos. 51 w 26 and 51 w 27	04
200054E	12351	Arm Shaft Connection Screw, for 213432	03

No.	Plate	Name	Each
200054E	12351	Feed Dog Lever Post Support Screw, for 221208	\$ 03
200056E	12319	Bobbin Winder Stop Latch Screw, for 227523	03
200062H	12311	Balance Wheel Adjusting Screw.....	07
200072C	12374	Needle Bar Connecting Stud Pinch Screw, for 204249.....	03
200074F	12374	Lifting Presser Foot Screw, for Machines Nos. 51 w 26 and 51 w 27.....	03
200074F	12374	Presser Foot Screw, for 204251.....	03
200078C	12351	Feed Regulating Handle Shaft Crank Set Screw, for 204211.....	03
200078H	12351	Guide Finger Clamp Bar Carrier Position Guide Pinch Screw, for 204364.....	03
200079H	12311	Spool Holder Wire Hinge Screw, for 204297	02
200082D	12321	Under Driver Lever Brake Belt Guard Screw, for 227736	03
200086C	12374	Lifting Lever Stud Lifting Bracket Pinch Screw, for 204480	03
200086C	12374	Presser Bar Lifting Bracket Pinch Screw, for 204253	03
200094F	10476	Knife Holder Screw, for 204369 and 204447	02
200096D	12225	Roller Presser Arm Screw, for 202838, 204436 and 204575	03
200098E	12351	Feed Dog Screw, for 203609.....	03
200098F	12351	" Regulating Handle Adjustable Stop Screw, for 204207	03
200098F	12351	Vibrating Presser Foot Screw, for Machines Nos. 51 w 26 and 51 w 27.....	03
200103D	10473	Guide Finger Clamp Pinch Screw, for 204357	02
200113F	12374	Feed Driving Cam Fork Lever Shaft Collar Set Screw, for 204197	03
200113F	12374	Foot Lifter Lifting Lever Rod Spring Collar Set Screw, for 227227.....	03
200113F	12374	Thread Oiler Bracket Screw, for 203773 and 204300	03
200118F	11764	Guide Finger Suspending Stop Screw, for 204354	02
200122H	12351	Lifting Lever Driving Crank Link Stop Screw, for 204475	03
200125F	12374	Needle Set Screw, for 204247, 204383, 204483 and 213770	02
200126F	10476	Knife Screw, for 204342	02
200135C	12349	Thread Controller Spring Stop Screw, for 204186 and 204300.....	03
200136F	11764	Guide Finger Clamp Screw, for 204357	02

No.	Plate	Name	Each
200138D	12374	Vibrating Presser Bar Spring Screw, for 206659	\$ 02
200140H	11764	Guide Finger Clamp Bar Position Guide Screw, for 204366	02
200141F	12225	Roller Presser Arm Bracket Spring Stop Screw, for 204437, 204496 and 204576	02
200159B	—	Feed Dog Lever Post Cover (front) Clamp Screw, for 221227 and 221228..	04
200161E	12319	Bobbin Winder Frame Spring Screw, for 227523	04
200175E	11764	Needle Bar Thread Guide Screw, for 204247 and 204383	02
200178D	11770	Throat Plate Knife Follower Spring Screw, for 212654, 212656, 212657, 215771 and 221233 to 221237	02
200181D	12376	Lifting Lever Stop Screw, for 204480...	03
200188C	12376	Needle Bar Connection Link Pinch Screw, for 204484	02
200189H	11771	Arm Bracket Screw.....	04
200189C	11771	Work Plate Bracket Screw, for 213858..	04
200189C	11771	" " Screw, for 213858.....	04
200214E	12378	Feed Bar Hinge Screw, for 213425.....	12
200221E	12319	Bobbin Winder Frame Hinge Screw, for 227523	12
200229B	10476	Knife Bar Driving Connection Pitman Hinge Screw (lower), for 204354.....	10
200229B	10476	Knife Bar Driving Connection Pitman Hinge Screw (upper), for 200887.....	10
200243E	12378	Feed Lifting Rock Shaft Slide Block Hinge Screw, for 203238.....	08
200262H	11763	Foot Lifter Lifting Lever Hinge Screw, for 227479 and 227480	10
200263D	11763	Feed Dog Lever Hinge Screw.....	08
200265E	11763	" " " Slide Block Hinge Screw, for 221208	06
200271E	12311	Feed Regulating Handle Shaft Crank Link Hinge Screw (lower)	05
200278H	12311	Arm Cap Screw	05
200291E	12351	Feed Regulating Handle Shaft Crank Link Hinge Screw (upper), for 213902	05
200299H	12319	Bobbin Winder Stop Latch Thumb Lever Hinge Screw, for 227523	05
200299H	12319	Bobbin Winder Stop Latch Thumb Lever Joint Screw, for 227523	05
200299H	12319	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 227523.....	05
200300C	12349	Thread Controller Roller Screw, for 205987	04
200309E	12349	Tension Release Lever Screw, for 203773, 204186, 204300 and 204474	04

Numerical List of Parts

No.	Plate	Name	Each
200319c	12349	Thread Controller Spring Stop Driving Gear Hinge Screw, for 204186 and 204300	\$ 04
200326c	10476	Knife Bar Bell Crank Driving Screw Stud Position Adjusting Screw, for 204344	05
200326c	10476	Knife Bar Driving Connection Pitman Driving Bell Crank Screw Stud Position Adjusting Screw, for Machines Nos. 51 w 30 and 51 w 31.....	05
200328c	12311	Balance Wheel Position Screw, for 204805	04
200335c	12311	Balance Wheel Set Screw, for 204805...	04
200335c	12311	Take-up Cam Set Screw, for 212920 and 213006	04
200347c	12376	Knife Bar Driving Cam Set Screw, for 204370	03
200347c	12376	Take-up Cam Set Screw, for 213008 and 213925	03
200355H	12319	Bobbin Winder Spool Holder Tension Disc Set Screw, for 202480.....	03
200355H	12319	Thread Controller Spring Stud Set Screw, for 204184	03
200362c	12311	Feed Dog Lever Adjusting Screw, for 221211	03
200362c	12311	Feed Regulating Handle Shaft Sleeve Set Screw	03
200362c	12311	Hook Counter Shaft Driving Gear Set Screw, for 203245	03
200362c	12311	Hook Driving Shaft Bushing Set Screw, for 221202	03
200362c	12311	Presser Bar Lifting Bracket Position Guide Set Screw	03
200366H	12349	Thread Controller Spring Stud Set Screw, for 204473	02
200368H	12349	Thread Retainer Stud Set Screw, for 204184 and 204473	02
200374c	12321	Under Driver Lever Brake Leather Set Screw, for 227735	02
200380c	12319	Bobbin Winder Pulley Set Screw, for 202473	02
200380c	12319	Guide Finger Clamp Bar Carrier Position Guide Suspending Collar Set Screw, for 204362	02
200381E	10476	Guide Finger Clamp Bar Carrier Position Guide Suspending Collar Screw, for 204362	02
200382c	11142	Feed Driving Cam Set Screw, for 213428	02

No.	Plate	Name	Each
200383c	12311	Feed Driving Rock Shaft Crank Set Screw, for 221508	\$ 02
200383c	12311	Hook Bevel Gear Set Screw, for 203242	02
200383c	12311	" " Pinion Set Screw, for 203242	02
200383c	12311	" Counter Shaft Gear Set Screw, for 203246	02
200383c	12311	Take-up Cam Position Screw Check Screw, for 203268, 213006, 213008 and 213925	02
200387c	12376	Guide Finger Clamp Bar Carrier Position Guide Set Screw, for 204364	02
200387c	10473	Knife Grinder Emery Wheel Driving Shaft Oil Stop Screw, for 206964.....	02
200387c	12376	Knife Bar Driving Connection Set Screw, for 204372	02
200387c	12376	Lifting Lever Driving Crank Position Screw Set Screw, for 213008 and 213925	02
200387c	12376	Presser Bar Lifting Bracket Set Screw, for 204455	02
200391c	10475	Knife Bar Bell Crank Position Screw, for 204445	02
200391c	10475	Knife Bar Driving Connection Pitman Driving Bell Crank Position Screw, for 204350	02
200393c	12374	Hook Counter Shaft Collar Set Screw, for 203244	02
200393c	12374	Hook Driving Shaft Collar Set Screw, for 213141	02
200394c	11771	Knife Grinder Knife Holder Slide Bracket Set Screw, for 207029	03
200397H	12349	Face Plate Thread Guide Set Screw, for 204184 and 204473.....	02
200397H	12349	Tension Stud Set Screw, for 204184....	02
200400c	12351	Lifting Lever Driving Crank Position Screw, for 213008 and 213925	04
200403c	11771	Knife Grinder Emery Wheel Driving Shaft Pulley Set Screw, for 206963...	03
200430c	12311	Take-up Cam Position Screw, for 212920, 213006, 213008 and 213925	08
200434c	11142	Knife Bar Driving Cam Position Screw, for 204370	08
200437c	12311	Feed Driving Cam Position Screw, for 213428	06
200439c	12311	Arm Shaft Bushing Position Screw, for 204412, 204417, 208361 and 208363.....	05
200439c	12311	Hook Counter Shaft Driving Gear Position Screw, for 203245	05
200457D	11771	Knife Grinder Knife Holder Slide Bracket Adjusting Screw, for 207029.....	10

No.	Plate	Name	Each
200473B	11771	Knife Grinder Knife Holder Slide Bracket Stop Collar Thumb Screw, for 207031	\$ 06
200473B	11771	Knife Grinder Knife Set Screw, for 207029	06
200491B	12344	Presser Bar Thumb Screw (pressure regulating)	25
200493B	11771	Presser Bar Thumb Screw (pressure regulating)	25
200504E	12378	Needle Bar Screw Bushing (lower)....	05
200504E	12378	Presser Bar Screw Bushing (lower)....	05
200516E	12311	Hook Driving Shaft Bearing Screw, for 221202	08
200517B	10475	Bracket Screw	05
200524C	12321	Under Driver Driving Pulley Shaft Set Screw, for 227734	06
200524C	12321	Under Driver Lever Brake Set Screw, for 227735	06
200524C	12321	Under Driver Lever Compression Shaft Set Screw, for 202463	06
200530C	12321	Foot Lifter Lifting Lever Rod Clamp Set Screw, for 204126	05
200530C	12321	Under Driver Treadle Pitman Rod Clamp Set Screw, for 204126.....	05
200540D	11155	Under Driver Treadle Adjustable Connecting Slide Set Screw, for 227976..	10
200548F	11155	Roller Presser Hinge Screw, for 201906 to 201908	10
200550C	12311	Presser Bar Lifter Hinge Screw.....	08
200551F	12225	Roller Presser Hinge Screw, for 201909 to 201911 and 201914.....	10
200554F	11767	Roller Presser Hinge Screw, for 201915 and 201916	06
200555H	12312	Hook Socket Screw, for 221227 and 221228	05
200570E	12311	Bed Hinge Connection Screw	05
200575H	12311	Spool Holder Base Screw	05
200577H	10473	Guide Finger Clamp Bar Carrier Position Guide Slide Screw, for 204354.....	02
200577H	10473	Knife Grinder Knife Holder Slide Bracket Adjusting Screw Slide Plate Screw, for 206964	02
200577H	12311	Thread Controller Plate Screw, for 203773, 204186, 204300 and 204474....	02
200577H	12311	Throat Plate Screw	02
200578H	11763	Feed Dog Lever Post Cover (side) Screw, for 221208	05
200581H	12349	Thread Controller Spring Guard Screw, for 205987	02

No.	Plate	Name	Each
200583H	11763	Feed Dog Lever Post Cover (back or front) Screw, for 221227 and 221228..	\$ 02
200587E	12351	Needle Bar Thread Guide Screw, for 204483	02
200587D	12351	Throat Plate Knife Follower Screw, for 212654, 212656, 212657, 215771 and 221233 to 221237	02
200590H	11764	Needle Bar Thread Guide Screw, for 213770	02
200594F	12312	Bobbin Case Tension Spring Screw, for 203209	02
200594F	12312	Bobbin Case Thread Guide Screw, for 203209	02
200600F	12312	Hook Gib Hinge Screw, for 203240 and 203464	02
200616F	12312	Hook Gib Screw, for 203240 and 203464	02
200632B	12349	Tension Stud, for 204272.....	20
200658C	12351	Needle Bar Connecting Link Hinge Screw Stud, for 203268 and 213006...	10
200664H	11764	Knife Bar Driving Connection Pitman Driving Bell Crank Screw Stud, for 200889	07
200664H	11764	Knife Bar Bell Crank Driving Screw Stud, for 200889	07
200668C	12378	Feed Driving Cam Fork Lever Connection Clamp Screw Stud, for 213427	06
200675C	12225	Roller Presser Arm Bracket Position Screw Stud, for 204437, 204496 and 204576	05
200684H	11769	Thread Controller Adjusting Collar Screw, for 204273 and 204458	04
200685E	12376	Tension Release Lever Position Screw, for 204473	03
200748H	12319	Machine Clamp Screw, for 227488	10
200785D	11764	Guide Finger Clamp Bar Carrier Screw (handle), for 200875	12
200802E	11764	Guide Finger Clamp Bar Carrier Latch Hinge Screw, for 204233	10
200825	—	Knife Bar Driving Cam Roller Screw Stud, for 201808	10
200840E	12311	Hook Counter Shaft Oil Packing (wick) Stop Screw, for 221202.....	10
200859B	10476	Arm Bracket Switch Handle Stud, for 204350 and 204445	30
200868	11764	Needle Bar Screw Bushing (lower)	05
200868	11764	Presser Bar Screw Bushing (lower)....	05
200875	10473	Guide Finger Clamp Bar Carrier Screw 200785D with 201537H, for 204359....	15

No.	Plate	Name	Each
200887	10476	Knife Bar Driving Connection Pitman Hinge Screw 200229B (upper) with 201528H	\$ 14
200888	10476	Knife Bar Sleeve Set Screw 200043c with 201524E, for 204354	07
200889	10475	Knife Bar Bell Crank Driving Screw Stud 200664H with 201528H, for 204442	11
200889	10475	Knife Bar Driving Connection Pitman Driving Bell Crank Screw Stud 200664H with 201528H, for 204345	11
200890	10475	Knife Bar Driving Connection Position Guide Pinch Screw 200026B with 201534H, for 204373	07
200935F	11771	Vibrating Presser Bar Hinge Screw, for 208389	08
200963E	12311	Arm Screw	06
200984F	12312	Bobbin Case Tension Spring Regulating Screw, for 203209	04
201506B	12376	Presser Bar Thumb Screw Check Nut..	06
201510D	11771	Knife Grinder Emery Wheel Driving Shaft Nut, for 207032	05
201519C	12351	Needle Bar Connecting Link Hinge Screw Stud Nut, for 203268 and 213006	03
201522E	12378	Feed Driving Cam Fork Lever Connection Hinge Screw Nut, for 213495....	03
201524E	12378	Feed Dog Lever Adjusting Screw Check Nut, for 221211	03
201524E	12378	Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut	03
201524E	12378	Knife Bar Sleeve Set Screw Nut, for 200888	03
201525E	12378	Feed Bar Hinge Screw Nut, for 213425..	03
201525E	12378	" Driving Cam Fork Lever Connection Clamp Screw Stud Nut, for 213427	03
201525E	12378	Feed Dog Lever Slide Block Hinge Screw Nut, for 221208	03
201528H	11763	Arm Bracket Switch Handle Stud Nut for 204350 and 204445	04
201528E	11763	Feed Dog Lever Hinge Screw Nut	04
201528H	11763	Knife Bar Bell Crank Driving Screw Stud Nut, for 200889	
201528H	11763	Knife Bar Driving Cam Roller Screw Stud Nut, for 201842	04
201528H	11763	Knife Bar Driving Connection Pitman Driving Bell Crank Screw Stud Nut, for 200889	04
201528H	11763	Knife Bar Driving Connection Pitman Hinge Screw (upper) Nut, for 200887.	04

Numerical List of Parts

91

No.	Plate	Name	Each
201531E	12374	Feed Lifting Rock Shaft Slide Block Hinge Screw Nut, for 203238.....	\$ 03
201534H	12374	Knife Bar Driving Connection Position Guide Pinch Screw Nut, for 200890..	03
201534H	12374	Roller Presser Hinge Screw Nut, for 201906 to 201911 and 201914.....	03
201534E	12374	Vibrating Presser Bar Hinge Screw Nut, for 208389	03
201537H	12319	Bobbin Winder Stop Latch Thumb Lever Joint Screw Nut, for 227523.....	03
201537H	12319	Guide Finger Clamp Bar Carrier Screw (handle) Nut, for 200875.....	03
201572B	12349	Tension Thumb Nut, for 204272	04
201582B	12319	Machine Clamp Screw Wing Nut, for 227488	08
201808	11764	Knife Bar Driving Cam Roller 201816 with 200825, for 201842	22
201816	12351	Knife Bar Driving Cam Roller, for 201808	12
201816	12351	Take-up Lever Roller, for 203271 and 204266	12
201842	10475	Knife Bar Driving Cam Roller 201808 with 201528H, for 204345 and 204442..	26
201906	11155	Roller Presser, $1\frac{1}{4}$ in. diam., $\frac{3}{8}$ in. face (fine), with 200548F and 201534H for 204567	40
201907	11767	Roller Presser, $1\frac{1}{4}$ in. diam., $\frac{5}{32}$ in. face (fine), with 200548F and 201534H, for 204569	40
201908	11767	Roller Presser, $1\frac{1}{4}$ in. diam., $\frac{1}{8}$ in. face (fine), with 200548F and 201534H, for Machines Nos. 51 w 28 to 51 w 31	40
201909	11767	Roller Presser, $1\frac{1}{8}$ in. diam., $\frac{3}{16}$ in. face (coarse), with 200551F and 201534H, for Machines Nos. 51 w 28 to 51 w 31	25
201910	12225	Roller Presser, $1\frac{1}{8}$ in. diam., $\frac{1}{8}$ in. face (coarse), with 200551F and 201534H, for 204570	25
201911	11767	Roller Presser, 1 in. diam., $\frac{1}{8}$ in. face (coarse), with 200551F and 201534H, for Machines Nos. 51 w 28 to 51 w 31..	35
201914	11155	Roller Presser, $\frac{5}{8}$ in. diam., $\frac{1}{4}$ in. face (coarse), with 200551F and 201534H, for 204572	25
201915	11767	Roller Presser, $1\frac{1}{8}$ in. diam., $\frac{5}{32}$ in. face (coarse), with 200554F, for Machines Nos. 51 w 28 to 51 w 31.....	20
201916	11767	Roller Presser, $\frac{1}{2}$ in. diam., $\frac{1}{16}$ in. face (fine), with 200554F, for 204574.....	20
202005	12374	Arm Base Screw Washer.....	01

No.	Plate	Name	Each
202005	12374	Arm Screw Washer	\$ 01
202036	12378	Feed Regulating Handle Stop Pin, for 204412, 204417, 208361 and 208363....	01
*202056	12312	Bobbin Case Base Latch Pin, for 203210	15
202068	12153	Spool Holder Base, for 204297	03
202075	12349	Tension Release Plunger, for 204272....	01
202084	12349	Thread Controller Roller Guard Washer, for 205987	03
202087	12349	Thread Controller Spring Stop, for 204473	10
202088	12349	Thread Controller Spring Stud with 204925, for 203773 and 204474.....	01
202090	12349	Presser Foot Hinge Pin, for 229084....	01
202090	12349	Tension Disc Position Pin, for 204184 and 204473	05
202091	12349	Thread Retainer Sleeve, for 204059....	01
202092	12349	" " Spring, for 204059.....	05
202098	12349	" Controller Roller, for 205987...	01
20212C	12374	Feed Lifting Cam Position Pin, for 203235 and 213007	01
202126	12374	Hook Driving Shaft Bearing Position Pin	01
202248H	12351	Arm Cap Screw Washer.....	01
202258	12153	Bed Hinge Connection.....	15
202276	12374	Feed Lifting Rock Shaft Slide Block, for 203238	01
202277	—	Needle Bar Connecting Stud Oil Packing (wick), for 204249	01
202299	—	Arm Shaft Oil Packing (wick), for Ma- chines Nos. 51 w 25 to 51 w 29.....	01
202299	—	Hook Counter Shaft Oil Packing (wick), for 221202	01
202299	—	Hook Driving Shaft Bearing Oil Packing (wick), for 203248	01
202299	—	Hook Driving Shaft Bushing Oil Packing (wick)	01
202299	—	Hook Post Oil Packing (wick), for 221227 and 221228	01
202302	12321	Foot Lifter Lifting Lever Rod Cotter Pin, for 227475	01
202302	12321	Under Driver Lever Compression Shaft Cotter Pin, for 202464	05
202305C	12351	Feed Driving Rock Shaft Center.....	05
202305C	12351	" Lifting Rock Shaft Center	05
202402	12349	Tension Disc, for 204272	05
202407	12349	" Spring, for 204272	05
202413	12378	Thread Guide, for Machines Nos. 51 w 25 to 51 w 28	75
202459	11126	Under Driver Driving Pulley 7½ in. diam., with 202460 and 204105, for 227740....	

Numerical List of Parts

93

No.	Plate	Name	Each
202460	11126	Under Driver Driving Pulley Friction Ring (leather), for 202459.....	\$ 05
202461	11126	Under Driver Driving Pulley Shaft 227743 with 204107, 204108 and eleven 25303, for 227740	1 00
202463	11126	Under Driver Lever (compression), with 204117, two each 200524c and 202845, for 227740	45
202464	11126	Under Driver Lever Compression Shaft with 202302, for 227740	20
202468	11126	Under Driver Treadle Pitman Rod (lower or upper), for 227980.....	05
Nos. 202470 to 202474, for 227523.			
202470	12320	Bobbin Winder Base	15
202471	12320	" " Frame	15
202472	12319	" " " Spring	05
202473	12320	" " Pulley with 200380c	20
202474	12320	" " Spindle	15
202477	12319	" " Stop Latch Thumb Lever, for 227523	15
202478	12319	Bobbin Winder Stop Latch Trip Lever, for 227523	10
Nos. 202480 to 202483, for 202485.			
202480	12320	Bobbin Winder Spool Holder Base with 200355H and 202484	15
202481	12320	Bobbin Winder Spool Holder Base Spool Pin	05
202482	12319	Bobbin Winder Spool Holder Tension Disc (lower or upper)	02
202483	12319	Bobbin Winder Spool Holder Tension Disc Spring (brass)	01
202484	12319	Bobbin Winder Spool Holder Tension Disc Thread Guide, for 202480	01
202485	12320	Bobbin Winder Spool Holder complete, Nos. 200011E, 202480, 202481, 202483, two 202482 and one wood screw 1 in. No. 13H, for 227524	35
202558	12225	Roller Presser Arm Bracket Spring, for 204437, 204496 and 204576	02
2559	12225	Roller Presser Arm Bracket Spring Stop, for 204437, 204496 and 204576	05
202560	12225	Roller Presser Arm Bracket (swing), for 202838, 204436 and 204575.....	60
202603	11764	Guide Finger Suspending Stop Screw Washer, for 204354	01
202622	11763	Feed Regulating Handle Shaft Sleeve Washer, for 204207	01

No.	Plate	Name	Each
202622	11763	Work Plate Arm Screw Washer, for 213858	\$ 01
202784	11155	Foot Lifter Lever Chain Hook (upper), for 227678	0
202838	—	Roller Presser Arm Bracket 202560 with 200096D and 204567, for 204496.....	1 20
202839	11767	Roller Presser Arm, for 204567 and 204569	20
202845	12321	Under Driver Lever Compression Plate Rivet, for 202463	01
202924	—	Presser Foot Shank, for 229084.....	60
203172	12351	Take-up Cam Friction Washer, for Machines Nos. 51 w 25 to 51 w 28.....	05
203202	11760	Arm Shaft, for Machines Nos. 51 w 25 and 51 w 28 to 51 w 31.....	1 75
203208	12312	Bobbin	05
203209	12312	" Case Cap with 200984F, 203214, 203215 and two 200594F, for 203217....	25
203210	12312	Bobbin Case Base with 202056, 203211 to 203213 and 203216, for 203217	55
Nos. 203211 to 203213, for 203210.			
203211	12312	Bobbin Case Base Latch.....	01
203212	12312	" " " " Plunger	01
203213	12312	" " " " Spring	01
203214	12312	" " Tension Spring, for 203209	10
203215	12312	" " Thread Guide, for 203209..	05
203216	12312	" " Washer (cloth), for 203210	Per 100 25
203217	12312	Bobbin Case complete, Nos. 203209 and 203210, for 203290 and 203465.....	80
203235	12374	Feed Lifting Cam with 202126, for 213154	75
203238	12374	" " Rock Shaft Slide Block 202276 with 200243E and 201531E, for 203315	35
*203239	—	Hook (sewing), for 203240	—
203240	12312	" 203239 with 200600F, 200616F and 203251, for 203290	2 20
203242	12344	Hook Bevel Gear, 24 teeth, with two 200383c	1 00
203242	12344	Hook Bevel Pinion, 24 teeth, with two 200383c, for 221227 and 221228.....	1 00
203244	12374	Hook Counter Shaft Collar with two 200393c	20
203245	12344	Hook Counter Shaft Driving Gear, 44 teeth, with 200362c and 200439c, for 213154 and 213157	1 00
203246	12344	Hook Counter Shaft Gear, 22 teeth, with two 200383c	75
203247	12371	Hook Driving Shaft	1 60

Numerical List of Parts

95

No.	Plate	Name	Each
203248	12361	Hook Driving Shaft Bearing with 202299, for 221202	\$ 20
203249	12344	Hook Driving Shaft Bushing (eccentric), for 221202	25
203251	12312	Hook Gib, for 203240 and 203464.....	40
203254	12312	" Washer, for 221227	20
203268	11768	Take-up Cam 212920 with 200383c, 200658c and 201519c, for Machine No. 51 w 25	1 50
203270	11769	Take-up Lever with 204265, for 203291..	60
203271	11769	Take-up Lever complete, Nos. 200042F, 201816 and 203291, for Machines Nos. 51 w 27 to 51 w 31.	90
203290	12312	Hook and Bobbin Case complete, Nos. 203217 and 203240, for 221227.....	3 00
203291	—	Take-up Lever 203270 with 204263, for 203271	75
203301	11772	Work Plate Slide (front), for 213858....	35
203305	11762	Feed Lifting Rock Shaft, for 203315....	30
203306	11768	Hook Counter Shaft	45
203315	11762	Feed Lifting Rock Shaft 203305 with 203238	65
203357	11769	Thread Oiler Bracket Screw Washer, for 203773	01
203357	11769	Vibrating Presser Foot Screw Washer..	01
*203463	—	Hook (sewing), for 203464.....	—
203464	11241	" 203463 with 200600R, 200616F and 203251, for 203465	2 20
203465	11241	Hook and Bobbin Case complete, Nos. 203217 and 203464, for 221228	3 00
203609	11762	Feed Dog Lever with 200098E, for 221208	60
203610	11763	" " " Slide Block, for 221208..	15
203619	11761	Hook Socket, for 221227 and 221228....	80
203625	11761	" Post, for 221227 and 221228.....	3 00
203637	11763	" " Screw Washer	02
203637	11763	Feed Dog Lever Post Support Screw Washer	02
203718	11241	Hook Washer, for 221228	20
3773	11760	Face Plate complete, Nos. 200113F, 200309E, 200577H, 202088, 203357, 204059, 204272, 204280, 204473, 204486 and 204644, for Machine No. 51 w 27..	2 50
204058B	12349	Thread Retainer Stud, for 204059.....	07
204059	12349	Thread Retainer complete, Nos. 202091, 202092 and 204058B, for 203773, 204186 204300 and 204474	15

Numerical List of Parts

No.	Plate	Name	Each
Nos. 204100 to 204102, for 227553.			
204100	12321	Under Driver Cone Pulley Ball Bearing Cup	\$ 12
204101	12321	Knife Grinder Emery Wheel Driving Shaft Nut Washer, for 207032	02
204101	12321	Under Driver Cone Pulley Ball Cap....	02
204102	12321	" " " " " Retain- ing Spring	05
204105	12321	Under Driver Driving Pulley Friction Ring Stop Pin, for 202459.....	01
204107	12321	Under Driver Driving Pulley Shaft Ball Cup, for 202461	10
204108	12321	Under Driver Driving Pulley Shaft Ball Cup Cap, for 202461.....	02
Nos. 204109 to 204112, for 227743.			
204109	—	Under Driver Driving Pulley Shaft Oil Plug	01
204110	—	Under Driver Driving Pulley Shaft Oil- ing Leather	02
204111	—	Under Driver Driving Pulley Shaft Oil- ing Leather Pin (leather).....	01
204112	12322	Under Driver Driving Pulley Shaft Oiling Wick	01
204113	12321	Under Driver Driving Pulley Shaft Thimble, for 227740	10
204117	12321	Under Driver Lever Compression Plate, for 202463	10
204122	12322	Under Driver Lever Brake Leather, for 227735	05
204123	12322	Under Driver Lever Brake Spring, for 227740	05
204126	12321	Foot Lifter Lifting Lever Rod Clamp with two 200530c, for 227576	26
204126	12321	Under Driver Treadle Pitman Rod Clamp with two 200530c, for 227980	20
204127	11126	Under Driver Treadle Stand (left) with two wood screws 1 in. No. 13, for 227981	08
204128	11126	Under Driver Treadle Stand (right) with two wood screws 1 in. No. 13, for 227981	
*204161	—	Arm, for 204412	
204163	12344	" Cap	10
204184	11760	Face Plate with 200355H, 200368H, 202090, 204185, 204281 and two 200397H, for 204186 and 204300	75
204185	12378	Face Plate Thread Guide, for 204184 and 204473	03

Numerical List of Parts

97

No.	Plate	Name	Each
204186	11760	Face Plate complete, Nos. 200135C, 200309E, 200319C, 200577H, 204059, 204184, 204267, 204272 and 204277 to 204280, for Machines Nos. 51 w 25 and 51 w 29	\$2 40
204194	11763	Feed Driving Cam Fork Lever Connection Clamp with 200031C, for 213693...	45
*204195	—	Feed Driving Cam Fork Lever Shaft, for 213429	—
204196	12351	Feed Driving Cam Fork Lever Shaft Sleeve (split)	25
204197	11763	Feed Driving Cam Fork Lever Shaft Collar with 200113F	15
204199	12371	Feed Driving Rock Shaft, for 213495....	35
204202	12374	" Lifting Cam Fork with 200027E....	75
204206	—	" Regulating Handle, for 204207	10
204207	12361	" Regulating Handle 204206 with 200098F, 202622, 204208 to 204210 and 204213, for 213902	55
Nos. 204208 to 204210, for 204207.			
204208	*12351	Feed Regulating Handle Adjustable Stop	05
204209	12351	" " " Position Pin ..	01
204210	11763	" " " Shaft	20
204211	11763	" " " " Crank with 200078C, for 213902.....	20
204213	12351	Feed Regulating Handle Shaft Sleeve (split), for 204207	15
204230	11764	Guide Finger Clamp Bar Carrier Latch Spring, for 204233.....	02
204233	10473	Guide Finger Clamp Bar Carrier Latch Spring 204230 with 200802E, for 204354	10
204247	11768	Needle Bar 208613 with 200125F, 200175E and 204250, for Machines Nos. 51 w 25 and 51 w 28	80
204248	11764	Needle Bar Connecting Link, for Machines Nos. 51 w 25 and 51 w 28 to 51 w 31	35
204249	12374	Needle Bar Connecting Stud with 200072C and 202277	40
204250	11764	Needle Bar Thread Guide, for 204247 and 204383	03
204251	12361	Presser Bar (hollow), with 200074F, for Machines Nos. 51 w 25 to 51 w 27.....	80
204252	12374	Presser Bar Lifter	20
204253	10441	" " Lifting Bracket with 200086C, for Machines Nos. 51 w 25, 51 w 28, 51 w 30 and 51 w 31.....	40

Numerical List of Parts

No.	Plate	Name	Each
204254	10441	Presser Bar Lifting Bracket Position Guide, for Machines Nos. 51 w 25 and 51 w 28 to 51 w 31	\$ 30
204255	10441	Presser Bar Spring, for Machine No. 51 w 25	10
204258	12378	Presser Bar Spring (heavy), for Machines Nos. 51 w 28 to 51 w 31.....	10
204262	12378	Take-up Lever with 204265, for 206556..	60
204263	12378	" " Bearing with 204264, for 203291 and 206556	15
204264	11769	Take-up Lever Bearing Position Pin, for 204263	01
204265	—	Take-up Lever Oil Guard, for 203270 and 204262	05
204266	12378	Take-up Lever complete, Nos. 200042F, 201816 and 206556, for Machines Nos. 51 w 25 and 51 w 26	90
204267	12378	Tension Release Lever, for 204186 and 204300	05
204268	12378	Tension Release Slide 215609 with 204269, for Machines Nos. 51 w 25 to 51 w 28, 51 w 30 and 51 w 31.....	20
204269	12374	Tension Release Slide Spring, for 204268	01
204271	12349	" Washer, for 204272.....	05
204272	12349	Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402, for 203773, 204186, 204300 and 204474..	50
204273	11769	Thread Controller Adjusting Collar 215610 with 200684H (for Presser Bar), for Machines Nos. 51 w 25, 51 w 28, 51 w 30 and 51 w 31	15
204274	12349	Thread Controller Plate, for 205987.....	12
204275	12349	" " Roller Guard, for 205987	10
204276	12349	" " Spring, for 204280	03
		Nos. 204277 to 204280, for 204186 and 204300.	
204277	11769	Thread Controller Spring Stop.....	15
204278	11769	" " " " Driving Gear	10
204279	11769	Thread Controller Spring Stud with 204925	10
204280	12349	Thread Controller and Spring complete, Nos. 204276 and 205987, for 203773 and 204474	45
204281	12349	Thread Retainer Guide Wire, for 204184 and 204473	01
204293	12374	Feed Driving Cam Fork Lever Shaft Position Pin, for 213429.....	01
204296	12153	Spool Holder Wire, for 204297.....	10

Numerical List of Parts

99

No.	Plate	Name	Each
204297	12153	Spool Holder complete, Nos. 200079H, 202068 and 204296	\$ 25
204300	11760	Face Plate complete, Nos. 200113F, 200135C, 200309E, 200319C, 200577H, 204059, 204184, 204267, 204272, 204277 to 204280 and 204330, for Machines Nos. 51 w 28, 51 w 30 and 51 w 31....	2 65
204321	10475	Arm Bracket Switch Spring Pin, for Ma- chines Nos. 51 w 30 and 51 w 31.....	02
204326	—	Needle Bar Packing Cord.....	Per 100 25
204327	—	Presser Bar Packing Washer (felt).....Per 100	25
204328	—	Roller Presser Arm, for 204570.....	20
204329	—	Thread Oiler (felt), for 204330 and 204644	01
204330	12225	Thread Oiler Bracket with 204329, for 204300	25
204333	12349	Thread Controller Spring Guard, for 205987	08
204342	10476	Knife Holder 204381 with two 200126F, for 213774	1 00
*204343	—	Arm, for 208361	—
Nos. 204344 to 204348, for 204350.			
204344	10472	Arm Bracket with 200326C, for 204445...	55
204345	10471	" " Switch Handle with 200889 and 201842	1 45
204346	10475	Arm Bracket Switch Handle Stud Bush- ing, for 204445	55
204347	10476	Arm Bracket Switch Handle Stud Spring, for 204445	02
204348	10475	Arm Bracket Switch Spring.....	05
204349	10475	" " " " Hook, for 204376 and 204450	01
204350	10471	Arm Bracket complete, Nos. 200391C, 200859B, 201528H, 204344 to 204348 and 204376, for Machines Nos. 51 w 30 and 51 w 31	3 75
204351	11142	Arm Shaft Bushing (front), for 208361 and 208363	35
204353	10471	Bracket (underedge) with 204411, for 204354	1 25
204354	10471	Bracket (underedge) complete, Nos. 200118F, 200229B, 200577H, 200888, 202603, 204233, 204353, 204361 to 204365, 204368, 204372, 204373, 204375 213774, 213777 and two 200028B, for Machines Nos. 51 w 30 and 51 w 31... 10	50

No.	Plate	Name	Each
204355	10475	Guide Finger, for Machine No. 51 w 30..	\$ 20
204356	10475	" " " " No. 51 w 31..	20
Nos. 204357 to 204359, for 213777.			
204357	10473	Guide Finger Clamp with 200103D and 200136F	65
204358	10473	Guide Finger Clamp Bar.....	15
204359	10473	" " " " Carrier with 200875	1 75
Nos. 204361 to 204365, for 204354.			
204361	10473	Guide Finger Clamp Bar Carrier Latch..	35
204362	10476	" " " " " Position Guide Suspending Collar with 200380c and 200381E	20
204363	10473	Guide Finger Clamp Bar Carrier Position Guide Slide	20
204364	10473	Guide Finger Clamp Bar Carrier Position Guide with 200078H and 200387c.....	50
204365	10473	Guide Finger Clamp Bar Carrier Spring	02
204366	10473	" " " " Position Guide with 200140H, for 213777.....	40
204367	10473	Guide Finger Clamp Bar Spring, for 213777	02
204368	10473	Guide Finger Suspending Stop (adjustable), for 204354	20
204369	10476	Knife Bar (hollow), with 200094F, for 213774	50
204370	11142	Knife Bar Driving Cam with 200347c and 200434c, for Machines Nos. 51 w 29 to 51 w 31	90
204372	10476	Knife Bar Driving Connection with two 200387c, for 204354.....	50
204373	10475	Knife Bar Driving Connection Position Guide with 200890, for 204354.....	1 00
204375	10471	Knife Bar Driving Connection Pitman, for 204354	30
204376	10471	Knife Bar Driving Connection Pitman Driving Bell Crank with 204349, for 204350	80
204381	10476	Knife Holder, for 204342	9
204383	11768	Needle Bar (hollow), with 200125F, 200175E and 204250, for Machines Nos. 51 w 30 and 51 w 31	80
204411	11764	Knife Bar Sleeve (split), for 204353....	25
*204412	—	Arm 204161 with 200439c, 202036 and 204705, for Machines Nos. 51 w 25 and 51 w 28	—

No.	Plate	Name	Each
*204417	—	Arm 204471 with 200439c, 202036 and 204705, for Machines Nos. 51 w 26 and 51 w 27	\$ —
204436	—	Roller Presser Arm Bracket 202560 with 200096D and 204569, for 204437.....	1 25
204437	—	Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 204436, 204495 and two 200141F, for Machines Nos. 51 w 28 to 51 w 31	1 75
*204441	—	Arm, for 208363	—
204442	10472	" Bracket Switch Handle with 200889 and 201842, for 204445	1 45
204443	11142	Arm Bracket Switch Spring, for 204445.	05
204445	10472	Arm Bracket complete, Nos. 200391c, 200859B, 201528H, 204344, 204346 204347, 204442, 204443, 204448 and 204450, for Machine No. 51 w 29.....	6 40
204447	10472	Knife Bar with 200094F, for 204448.....	1 15
204448	—	" " 204447 with 204452, for 204445	2 15
204449	11142	Knife Bar Bell Crank Bearing, for 204450	35
204450	10472	" " " " with 204349 and 204449, for 204445	1 15
204452	11764	Knife Holder, for 204448	1 00
Nos. 204455 to 204459, for Machine No. 51 w 29.			
204455	11771	Presser Bar Lifting Bracket with 200387c	40
204456	11769	Tension Release Slide	20
204457	11142	" " " Spring	02
204458	11769	Thread Controller Adjusting Collar with 200684H, (for Presser Bar)	15
204459	11769	Thread Guide	02
*204471	—	Arm, for 204417	—
204473	12371	Face Plate with 200366H, 200368H, 200685E, 202087, 202090, 204185, 204281 and two 200397H, for 203773 and 204474	90
204474	12371	Face Plate complete, Nos. 200309E, 200577H, 202088, 204059, 204272, 204280, 204473 and 204486, for Machine No. 51 w 26	2 25
204475	12376	Lifting Lever with 200122H, for 208389.	1 00
204478	12376	" " Driving Crank Link, for 208389	40
204479	11764	Lifting Lever Driving Crank Position Screw Set Screw Packing (brass), for 213008 and 213925	01
204480	12374	Lifting Lever Stud Lifting Bracket with 200086c and 200181D, for 208390.....	75

No.	Plate	Name	Each
		Nos. 204481 to 204483, for Machines Nos. 51 w 26 and 51 w 27.	
204481	12351	Presser Bar Lifting Bracket Position Guide	\$ 35
204482	11142	Presser Bar Spring	15
204483	12361	Needle Bar (hollow) with 200125F, 200587E and 204487.....	80
204484	12351	Needle Bar Connecting Link with 200188c, for 213005 and 213923.....	50
204486	11769	Tension Release Lever, for 203773 and 204474	05
204487	12351	Needle Bar Thread Guide, for 204483....	25
204493	12376	Vibrating Presser Bar Spring, for 206659	10
204495	12225	Roller Presser Bar, for 204437, 204496, and 204576	35
204496	—	Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 202838, 204495 and two 200141F, for Machines Nos. 51 w 28 to 51 w 31	1 70
204567	11155	Roller Presser Arm 202839 with 201906, for 202838	60
204569	11767	Roller Presser Arm 202839 with 201907, for 204436	60
204570	12225	Roller Presser Arm 204328 with 201910, for 204575	45
204571	—	Roller Presser Arm, for 204572.....	25
204572	11155	" " " 204571 with 201914, for Machines Nos. 51 w 28 to 51 w 31..	45
204573	—	Roller Presser Arm, for 204574.....	25
204574	11767	" " " 204573 with 201916, for Machines Nos. 51 w 28 to 51 w 31	40
204575	—	Roller Presser Arm Bracket 202560 with 200096D and 204570, for 204576.....	1 10
204576	—	Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 204495, 204575 and two 200141F, for Machines Nos. 51 w 28 to 51 w 31.....	1 50
204594	11765	Lifting Presser Foot, for 204620, 204634, 206698 and 229620	1 25
204595	12376	Lifting Presser Foot, for 204620, 204634, 206698 and 229620	1 25
204599	11765	Lifting Presser Foot, for 204620, 204634, 206698 and 229620	1 25
204605	11765	Lifting Presser Foot, for 206668, 206675, 206678, 206714 and 206719	1 00
204606	11765	Lifting Presser Foot, for 206676, 206699 and 206700	1 00
204612	11765	Lifting Presser Foot, for 204620, 204634, 206698, 206705, 206706 and 229620....	1 25

No.	Plate	Name	Each
204620	12376	Vibrating Presser Foot, for 204594, 204595, 204599, 204612, 206697 and 229625, for Machines Nos. 51 w 26 and 51 w 27	\$1 00
204634	13042	Vibrating Presser Foot, for 204594, 204595, 204599, 204612, 206697 and 229625, for Machines Nos. 51 w 26 and 51 w 27	1 00
204644	11769	Thread Oiler Bracket with 204329, for 203773	25
204705	12361	Arm Shaft Bushing (front), for 204412 and 204417	35
204805	11760	Balance Wheel 5½ in. diam. (belt groove 3 in. diam.), with 200328c and 200335c	1 00
204925	11769	Thread Controller Spring Stud Washer, for 202088 and 204279.....	01
205987	12349	Thread Controller complete, Nos. 200300c, 200581H, 202084, 202098, 204274, 204275 and 204333, for 204280	42
206556	—	Take-up Lever 204262 with 204263, for 204266	75
206628	12388	Foot Lifter Lifting Lever Rod Spring, for 227273	05
206659	12376	Vibrating Presser Bar 206660 with 204493 and two 200138D, for 208389.....	60
206660	—	Vibrating Presser Bar, for 206659.....	45
206668	13042	" " Foot, for 204605, for Machines Nos. 51 w 26 and 51 w 27.....	1 00
206672	13042	Vibrating Presser Foot, for 229633, for Machines Nos. 51 w 26 and 51 w 27...	1 00
206673	13042	Vibrating Presser Foot, for 229633, for Machines Nos. 51 w 26 and 51 w 27...	1 00
206675	13042	Vibrating Presser Foot, for 204605, for Machines Nos. 51 w 26 and 51 w 27...	1 00
206676	13042	Vibrating Presser Foot, for 204606, for Machines Nos. 51 w 26 and 51 w 27...	1 00
206678	13042	Vibrating Presser Foot, for 204605, for Machines Nos. 51 w 26 and 51 w 27...	1 00
206697	11765	Lifting Presser Foot, for 204620, 204634, 206698, 206701 and 229620.....	1 25
Nos. 206698 to 206701, for Machines Nos. 51 w 26 and 51 w 27.			
206698	13042	Vibrating Presser Foot, for 204594, 204595, 204599, 204612, 206697 and 229625	1 00
206699	13043	Vibrating Presser Foot, for 204606.....	1 00
206700	13043	" " " " 204606.....	1 00
206701	11765	" " " " 206697.....	1 00

Numerical List of Parts

No.	Plate	Name	Each
Nos. 206705 to 206707, for Machines Nos. 51 w 26 and 51 w 27.			
206705	13043	Vibrating Presser Foot, for 204612 and 229625	\$1 50
206706	13043	Vibrating Presser Foot, for 204612 and 229625	1 00
206707	13043	Vibrating Presser Foot, for 229633.....	1 00
Nos. 206714 to 206717, for Machines Nos. 51 w 26 and 51 w 27.			
206714	13043	Vibrating Presser Foot, for 204605.....	1 00
206715	13043	" " " " 229633.....	1 00
206716	13043	" " " " 229633.....	1 00
206717	13043	" " " " 229633.....	1 00
206719	13042	" " " " 204605, for Machines Nos. 51 w 26 and 51 w 27....	1 00
Nos. 206962 to 206964, for 207032.			
206962	11296	Knife Grinder Emery Wheel Driving Shaft	1 00
206963	11296	Knife Grinder Emery Wheel Driving Shaft Pulley with two 200403c.....	35
206964	—	Knife Grinder Frame with 200577H and two 200387c	1 25
206966	11296	Knife Grinder Knife Holder Slide Bracket Adjusting Screw Slide Plate, for 207032	15
206967	11296	Knife Grinder Knife Holder Slide Bracket Shaft, for 207032	20
206969	11296	Knife Grinder Emery Wheel Washer (paper) for 207032	01
206977	—	Knife Grinder Emery Wheel, 2 in. diam., for 207032	25
207029	11296	Knife Grinder Knife Holder Slide Bracket with 200394c, 200457D and two 200473B, for 207032	75
207030	—	Knife Grinder Knife Holder Slide Bracket Stop Collar, for 207031.....	04
207031	11771	Knife Grinder Knife Holder Slide Bracket Stop Collar 207030 with 200473B, for 207032	10
207032	11296	Knife Grinder complete, Nos. 201510D, 204101, 206962 to 206964, 206966, 206967, 206977, 207029, 207031 and two 206969	4 00
207805	11764	Knife, for Machines Nos. 51 w 29 to 51 w 31	10
*208361	—	Arm 204343 with 200439c, 202036 and 204351, for Machines Nos. 51 w 30 and 51 w 31	—
*208363	—	Arm 204441 with 200439c, 202036 and 204351, for Machine No. 51 w 29.....	—

Numerical List of Parts

105

No.	Plate	Name	Each
208389	—	Lifting Lever 204475 with 200935F, 201534E, 204478 and 206659, for 208390	\$2 10
208390	—	Lifting Lever Stud Lifting Bracket 204480 with 208389, for Machines Nos. 51 w 26 and 51 w 27	2 85
208613	—	Needle Bar (hollow), for 204247.....	75
212624	12241	Throat Plate, 40 needle hole, for needle sizes 7 to 9, for 212637 to 212639, for Machines Nos. 51 w 27 and 51 w 28....	1 50
212625	12240	Throat Plate, 40 needle hole, for needle sizes 7 to 9, for 212632 and 212633, for Machine No. 51 w 26.....	1 50
212626	12240	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212628 and 212629, for Machines Nos. 51 w 25 and 51 w 26....	1 50
212628	12240	Feed Dog, for 212626 and 221232.....	1 00
212629	12240	" " " 212626 and 221232.....	1 00
212630	12240	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212632 and 212633, for Machines Nos. 51 w 25 and 51 w 26....	1 50
212631	12240	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212632 and 212633, for Machines Nos. 51 w 25 and 51 w 26....	1 50
212632	12240	Feed Dog, for 212625, 212630, 212631, 212646 and 212647	75
212633	12240	Feed Dog, for 212625, 212630, 212631, 212646 and 212647	75
		Nos. 212634 to 212636, for Machines Nos. 51 w 27 and 51 w 28.	
212634	12241	Throat Plate, 53 needle hole, for needle sizes 1 to 3½, for 212637 to 212639....	1 50
212635	12241	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212637 to 212639.....	1 50
212636	12241	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212637 to 212639.....	1 50
212637	12241	Feed Dog, for 212624, 212634 to 212636, 212640, 215771, 221230, 221231 and 221233 to 221236	75
212638	12241	Feed Dog, for 212624, 212634 to 212636, 212640, 215771, 221230, 221231 and 221233 to 221236	75
212639	12241	Feed Dog, for 212624, 212634 to 212636, 212640, 221230 and 221231	75
		Nos. 212640 to 212647, for Machines Nos. 51 w 27 and 51 w 28.	
212640	11770	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212637 to 212639.....	1 50

No.	Plate	Name	Each
212643	12242	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212645	\$ 1 50
212644	12242	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212645	1 50
212645	12242	Feed Dog, for 212643 and 212644	75
212646	12242	Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212632 and 212633	1 50
212647	12242	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212632 and 212633	1 50
212654	12244	Throat Plate, 50 needle hole, for needle sizes 3 to 5, with 200178D, 200587D, 212655 and 212664, trims back of needle and .015, .025, .035 and .050 in. to right of seam, for 213920, for Machine No. 51 w 30	2 00
212655	12244	Throat Plate Knife Follower, for 212654	12
212656	12244	Throat Plate, 53 needle hole, for needle sizes 1 to 3½, with 200178D, 200587D, 212658 and 212664, trims opposite the needle and .040, .050 and .060 in. to right of seam, for 213920, for Machine No. 51 w 31	2 00
212657	12244	Throat Plate, 50 needle hole, for needle sizes 3 to 5, with 200178D, 200587D, 212658 and 212664, trims opposite the needle and .050, .060 and .075 in. to right of seam, for 213920, for Machine No. 51 w 31	2 00
212658	12244	Throat Plate Knife Follower, for 212656, 212657 and 221237	12
212664	11770	Throat Plate Knife Follower Spring, for 212654, 212656, 212657, 215771 and 221233 to 221237	02
212920	—	Take-up Cam with 200335c and 200430c, for 203268	1 35
213001	12371	Arm Shaft, for Machines Nos. 51 w 26 and 51 w 27	1 85
213004	11764	Lifting Lever Driving Crank, for 213005 and 213923	80
213005	12361	Take-up Cam complete, Nos. 204484, 213004 and 213925, for Machine No. 51 w 26	3 0
213006	11768	Take-up Cam with 200335c, 200383c, 200430c, 200658c and 201519c, for Machines Nos. 51 w 28 to 51 w 31	1 50
213007	11763	Feed Lifting Cam with 202126, for 213157	75
213008	11768	Take-up Cam with 200347c, 200383c, 200387c, 200400c, 200430c and 204479, for 213923	1 75

No.	Plate	Name	Each
213141	11764	Hook Driving Shaft Collar with two 200393c	\$ 20
213154	—	Hook Counter Shaft Driving Gear 203245 with 200045c and 203235, for Machines Nos. 51 w 25 and 51 w 26	1 80
213157	—	Hook Counter Shaft Driving Gear 203245 with 200045c and 213007, for Machines Nos. 51 w 27 to 51 w 31	1 80
213425	—	Feed Bar 213426 with 200214E, 201525E and 221508	1 00
213426	11762	Feed Bar, for 213425	50
213427	11762	" Driving Cam Fork Lever Connection with 200668c and 201525E, for 213495	35
213428	11763	Feed Driving Cam with 200382c and 200437c	50
213429	11762	Feed Driving Cam Fork Lever with 204195 and 204293, for 213693.....	85
213432	11760	Arm Shaft Connection with four 200054E	60
213433	11762	Feed Regulating Handle Shaft Crank Link, for 213902	25
*213434	—	Arm Base	—
213435	11764	Needle Bar Guard	25
213495	—	Feed Driving Rock Shaft 204199 with 200002E, 201522E and 213427.....	80
213693	11762	Feed Driving Cam Fork Lever complete, Nos. 204194 and 213429.....	1 30
213770	11768	Needle Bar (hollow) with 200125F, 200590H and 213771, for Machine No. 51 w 29	80
213771	11764	Needle Bar Thread Guide, for 213770....	03
213774	—	Knife Bar 204369 with 204342, for 204354	1 50
213777	—	Guide Finger Clamp Bar Carrier 204359 with 204357, 204358, 204366 and 204367 for 204354	3 00
Nos. 213855 to 213857, for 213858.			
213855	11772	Work Plate	2 00
213856	11772	" " Bracket	25
213857	11772	" " Slide (back)	35
213858	11772	Work Plate complete, Nos. 200019c, 202622, 203301, 213855 to 213857 and four 200189c (see page 79).....	3 25
213902	—	Feed Regulating Handle complete, Nos. 200291E, 204207, 204211 and 213433....	1 05
213920	11770	Feed Dog, for 212654, 212656, 212657 and 221237	75
213923	11768	Take-up Cam complete, Nos. 204484, 213004 and 213008, for Machine No. 51 w 27	3 00

No.	Plate	Name	Each
213925	11768	Take-up Cam with 200347c, 200383c, 200387c, 200400c, 200430c, and 204479, for 213005	\$1 75
215609	—	Tension Release Slide, for 204268.....	18
215610	—	Thread Controller Adjusting Collar, for 204273	10
215771	11770	Throat Plate, 53 needle hole, for needle sizes 1 to 3½, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .045, .060 and .085 in. to right of seam, for 212637 and 212638, for Machine No. 51 w 29.....	2 00
215772	11770	Throat Plate Knife Follower, for 215771 and 221233 to 221236	12
*221201	—	Bed, for 221202	—
*221202	—	" 221201 with 203248, 203249, two each 200362c, 200516E, 200840E and 202299..	—
221207	11761	Feed Dog Lever Post, for 221208.....	2 50
221208	11761	" " " " 221207 with 200265E, 201525E, 203609, 203610, 221211, 221212, four each 200054E and 200578H, for 221224 and 221225	6 25
221209	11761	Feed Dog Lever Post Cover (back), for 221227 and 221228	40
221211	11761	Feed Dog Lever Post Cover (side) with 200362c and 201524E, for 221208.....	1 25
221212	11761	Feed Dog Lever Post Support, for 221208	1 50
221215	11762	Hook Post Slide, for 221227 and 221228.	40
221224	11761	Hook Post complete, Nos. 221208 and 221227, for Machines Nos. 51 w 25 and 51 w 26	15 75
221225	—	Hook Post complete, Nos. 221208 and 221228, for Machines Nos. 51 w 27 to 51 w 31	15 75
221226	11761	Feed Dog Lever Post Cover (front), for 221227 and 221228	40
221227	11761	Hook Post 203625 with 200159B, 200555H, 202299, 203242, 203254, 203290, 203619, 221209, 221215, 221226, and eight 200583H, for 221224	9
221228	—	Hook Post 203625 with 200159B, 200555H, 202299, 203242, 203465, 203619, 203718, 221209, 221215, 221226 and eight 200583H, for 221225	9 50
221230	11770	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212637 to 212639, for Machines Nos. 51 w 27 and 51 w 28....	1 50

No.	Plate	Name	Each
221231	11770	Throat Plate, 40 needle hole, for needle sizes 7 to 9, for 212637 to 212639, for Machines Nos. 51 w 27 and 51 w 28....	\$1 50
221232	12240	Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212628 and 212629, for Machines Nos. 51 w 25 and 51 w 26 ...	1 50
		Nos. 221233 to 221236, for Machine No. 51 w 29.	
221233	11770	Throat Plate, 60 needle hole, for needle sizes 0 to 1, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .028, .035, .045, .060 and .085 in. to right of seam, for 212637 and 212638	2 00
221234	11770	Throat Plate, 56 needle hole, for needle sizes 1 to 2, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .035, .045, .060 and .085 in. to right of seam, for 212637 and 212638	2 00
221235	11770	Throat Plate, 50 needle hole, for needle sizes 3 to 5, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .060 and .085 in. to right of seam, for 212637 and 212638	2 00
221236	11770	Throat Plate, 46 needle hole, for needle sizes 5 to 7, with 200178D, 200587D, 212664 and 215772, trims opposite the needle and .060 and .085 in. to right of seam, for 212637 and 212638.....	2 00
221237	12244	Throat Plate, 56 needle hole, for needle sizes 1 to 2, with 200178D, 200587D, 212658 and 212664, trims opposite the needle and .040, .050 and .060 in. to right of seam, for 213920, for Machine No. 51 w 31	2 00
221508	11763	Feed Driving Rock Shaft Crank with two 200383c, for 213425	35
225016	11155	Foot Lifter Lever Hinge Pin, for 227955	01
225191	—	Drip Pan with four wood screws $\frac{1}{2}$ in. No. 5	30
225497	12153	Bobbin Case Screw Driver.....	10
225498	12153	Screw Driver, $7\frac{1}{4}$ in. long	15
225499	12153	Oiler Spout $2\frac{3}{4}$ in. long, for 225500.....	02
225500	12153	" with 225499	10
225554	12153	Wrench (steel)	10
225585H	12351	Machine Clamp Screw Washer, for 227488	02
225589	—	" Cushion (leather), for 227902 and 227903	01
227227	12388	Foot Lifter Lifting Lever Rod Spring Collar with 200113F, for 227273	15

No.	Plate	Name	Each
227273	—	Foot Lifter Lifting Lever Rod 227475 with 206628, 227227 and 227576, for 227353 and 227356	\$ 55
227307	11760	Foot Lifter Lifting Lever, for 227479....	20
227316	12388	" " " " Rod Clamp Hook, for 227576	05
227353	—	Foot Lifter Lifting Lever 227479 with 227273, for Machines Nos. 51 w 25 to 51 w 28	85
227356	—	Foot Lifter Lifting Lever 227480 with 227273, for Machines Nos. 51 w 29 to 51 w 31	85
227370	11126	Under Driver Cone Pulley (grooved), two speed, 4 $\frac{3}{8}$ in. and 5 $\frac{1}{2}$ in. belt diam., with 227553, for 227740	1 35
227475	11760	Foot Lifter Lifting Lever Rod with 202302, for 227273	10
227479	—	Foot Lifter Lifting Lever 227307 with 200262H, for 227353	30
227480	—	Foot Lifter Lifting Lever 227543 with 200262H, for 227356	30
227488	12153	Machine Clamp complete, Nos. 200748H, 201582B and 225585H	2
227493	12153	Bed Hinge Plate 202259 with two wood screws $\frac{3}{4}$ in., No. 13H, for 227902 and 227903	08
227522	12319	Bobbin Winder Stop Latch, for 227523..	10
227523	12320	Bobbin Winder complete, Nos. 200056E, 200161E, 200221E, 201537H, 202470 to 202474, 202477, 202478, 227522, three 200299H and two round head wood screws 1 $\frac{1}{2}$ in. No. 14, for 227524.....	1 35
227524	—	Bobbin Winder and Spool Holder complete, Nos. 202485 and 227523.....	1 65
227543	11760	Foot Lifter Lifting Lever, for 227480....	20
227553	12322	Under Driver Cone Pulley Ball Cup complete, Nos. 204100 to 204102 and thirteen 25362, for 227370	45
227576	12388	Foot Lifter Lifting Lever Rod Clamp Hook 227316 with 204126, for 227273..	25
227678	11156	Foot Lifter Lever Chain 48 in. long, with 202784, for 227955	2
227734	11126	Under Driver Frame with 200524c, for 227740	80
227735	11126	Under Driver Lever Brake with 200524c, 204122 and two 200374c, for 227736....	35
227736	11126	Under Driver Lever Brake 227735 with 200082D and 227737, for 227740.....	60

Numerical List of Parts

111

No.	Plate	Name	Each
227737	11126	Under Driver Lever Brake Belt Guard, for 227736	\$ 20
227740	—	Under Driver Transmitter complete, Nos. 202459, 202461, 202463, 202464, 204113, 204123, 227370, 227734, 227736 and three wood screws 1 $\frac{3}{4}$ in. No. 15, for 227985	3 00
227743	—	Under Driver Driving Pulley Shaft (hollow) with 204109, 204110, 204112 and two 204111, for 202461	60
227902	—	Wood Base (flat) with two 227493, four 225589 and four wood screws 1 $\frac{3}{4}$ in. No. 10 (see page 79)	2 40
227903	—	Wood Base (oblique) with two 227493, four 225589 and nine wood screws 1 $\frac{3}{4}$ in. No. 10 (see page 79)	2 40
Nos. 227952 to 227954, for 227955.			
227952	11156	Foot Lifter Lever (left or right)	25
227953	11156	" " " Stand with two wood screws 1 in. No. 13	10
227954	11155	Foot Lifter Lever Chain Hook (lower)	02
227955	11156	Foot Lifter Lever (left or right) com- plete, Nos. 225016, 227678 and 227952 to 227954	60
227976	11126	Under Driver Treadle with 200540b, for 227977	45
227977	11126	Under Driver Treadle 227976 with 227978, for 227981	60
227978	11126	Under Driver Treadle Adjustable Con- necting Slide, for 227977	15
227980	11126	Under Driver Treadle Pitman complete, Nos. 204126 and two 202468, for 227982	30
227981	—	Under Driver Treadle and Stand com- plete, Nos. 204127, 204128 and 227977, for 227982	75
227982	—	Under Driver Treadle and Pitman com- plete, Nos. 227980 and 227981, for 227985	90
227985	—	Under Driver (ball bearing) lever pres- sure, right hand, two speed complete, Nos. 27070, 227740 and 227982	4 00
229082	11766	Presser Foot, for Machine No. 51 w 25..	50
229083	—	" " Plate, for 229084	65
229084	11766	Presser Foot (hinged) complete, Nos. 202090, 202924 and 229083, for Machine No. 51 w 25	1 25


No.	Plate	Name	Each
229620	13042	Vibrating Presser Foot, for 204594, 204595, 204599, 204612, 206697 and 229625, for Machines Nos. 51 w 26 and 51 w 27\$ 1 00	
229625	11765	Lifting Presser Foot, for 204620, 204634, 206698, 206705, 206706 and 229620.....	1 25
229633	11765	Lifting Presser Foot, for 206672, 206673, 206707 and 206715 to 206717.....	1 00
229838	12376	Vibrating Presser Bar Position Stop, for Machines Nos. 51 w 26 and 51 w 27....	50
229844	11766	Hemmer Foot, for $\frac{1}{8}$ to $\frac{5}{32}$ in. hem, for Machine No. 51 w 25	75
229845	11766	Hemmer Foot, for $\frac{3}{16}$ to $\frac{3}{8}$ in. hem, for Machine No. 51 w 25	1 25

ILLUSTRATIONS

ILLUSTRATIONS

PLATE 10441—FULL SIZE

 204254



200491




204252



200336



204253

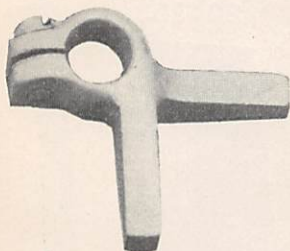

200550



204255



200074



200086




200362




PLATE 10471—ONE-HALF SIZE


204376

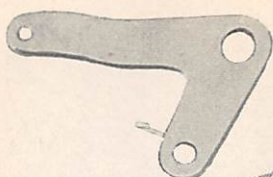


204350

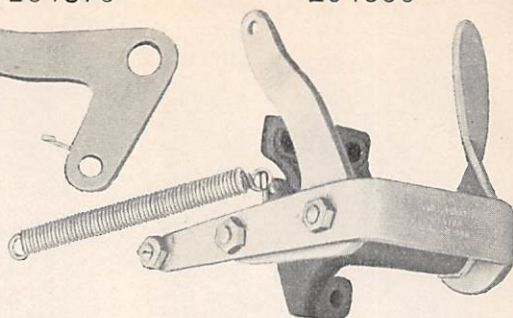

204345

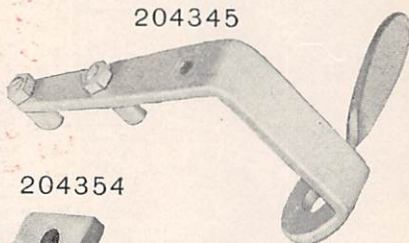

204354

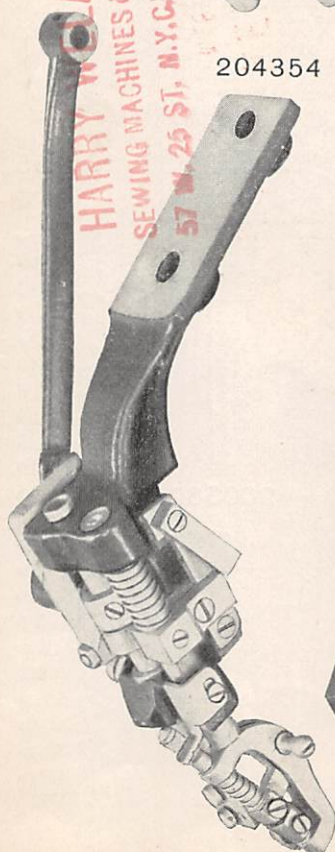

204353



204375



HARRY WOLANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0667

PLATE 10472—ONE-HALF SIZE

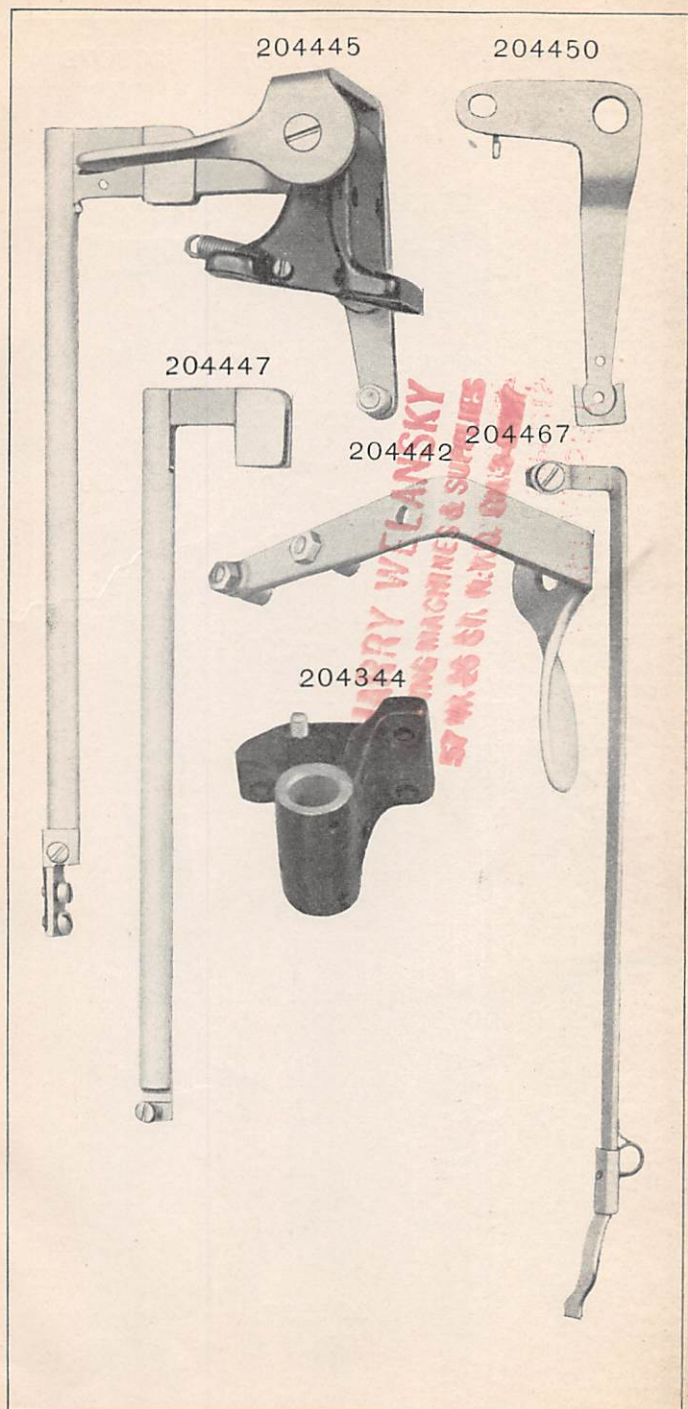


PLATE 10473—FULL SIZE

200577 200137 200387 200078



204361



204366



204364



200612



204365




204368




204233



204359

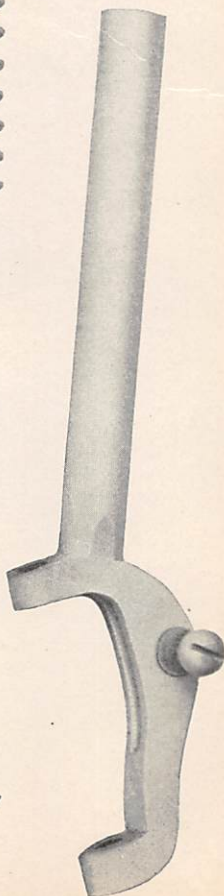


204357

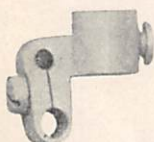


200103



 204358



204363

 

204367



200875



201537



PLATE 10475—FULL SIZE

200028



200889




201842



204321



204373

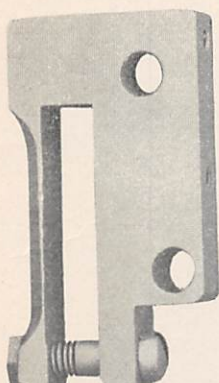

200890




204348




200391




204346

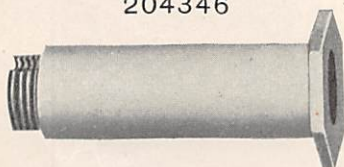

204355

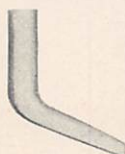

204356

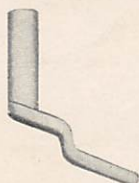

204349



200517

 


PLATE 10476—FULL SIZE

200887



200229



200094



200888




204372

204369



200859

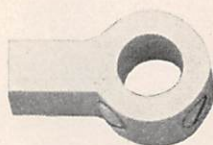

204347



204381



204342



200126



200326



200380



200381



204362



PLATE 11126-ONE-SIXTH SIZE

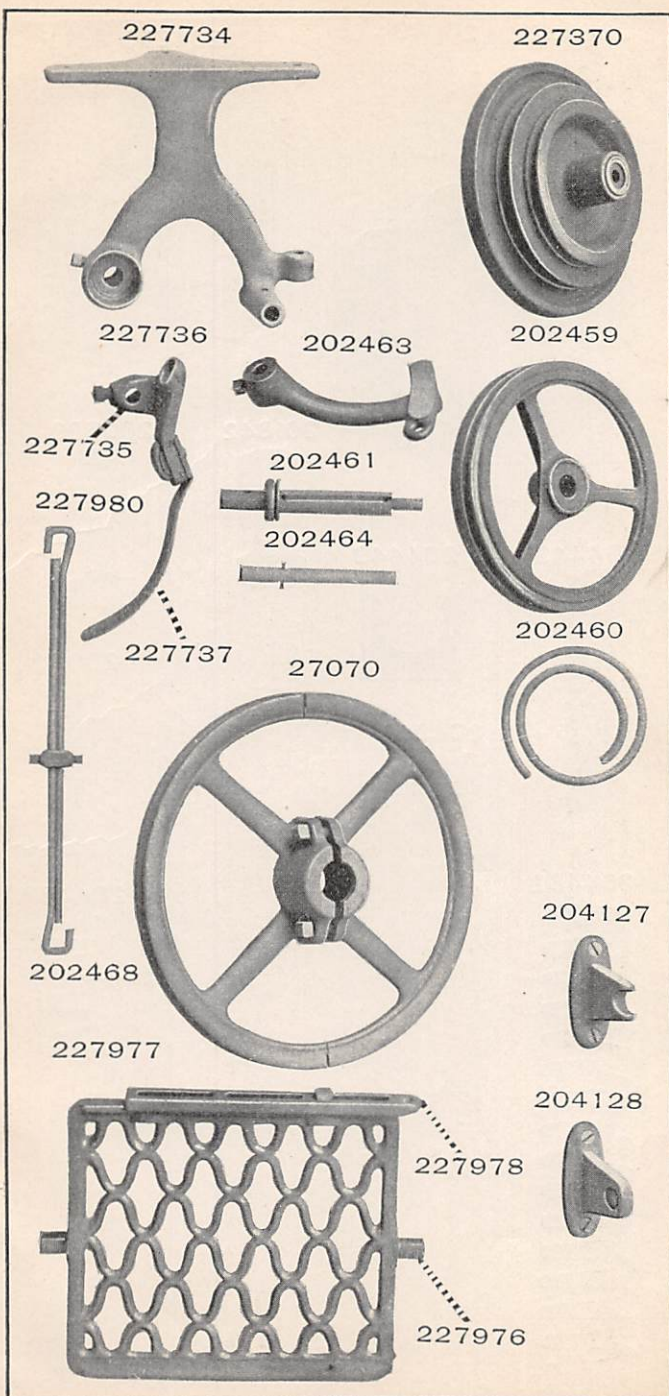


PLATE 11142 -FULL SIZE


200382




200434



204370

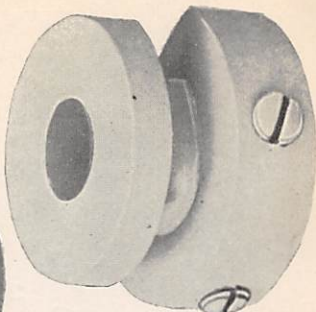

204351

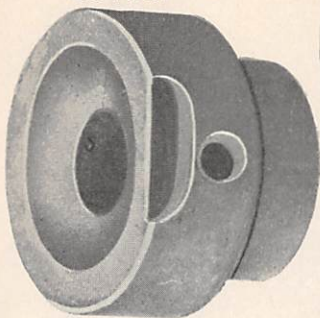

201842



200889



 
204443



204449



204349



200326



204482



204457



PLATE 11155 — FULL SIZE


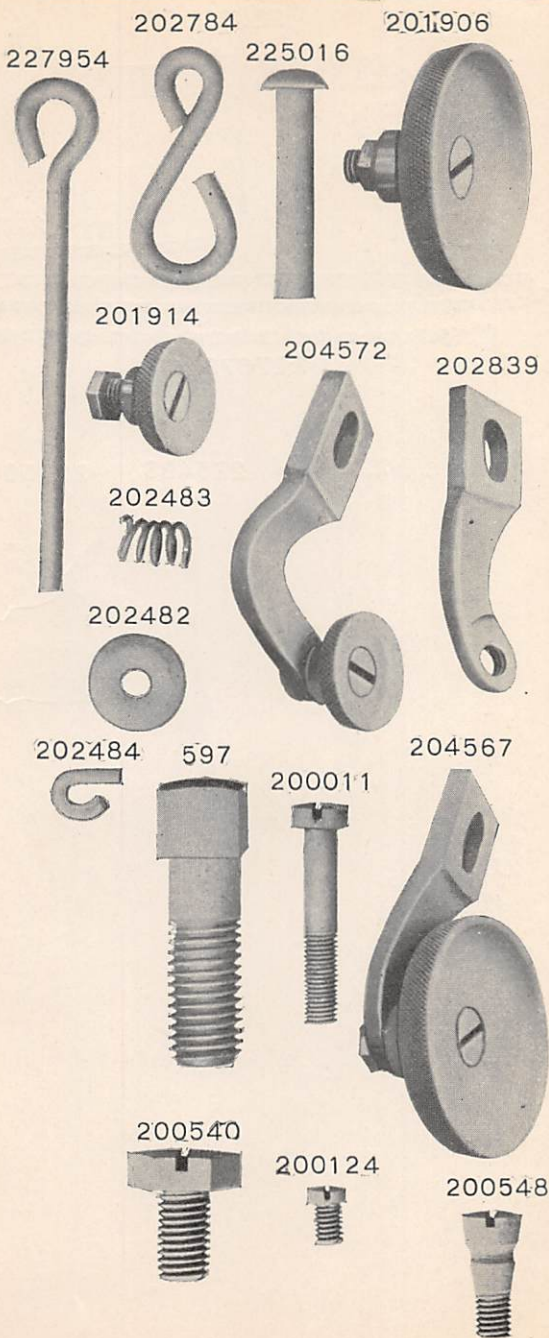


PLATE 11156 - ONE-FOURTH SIZE



225497

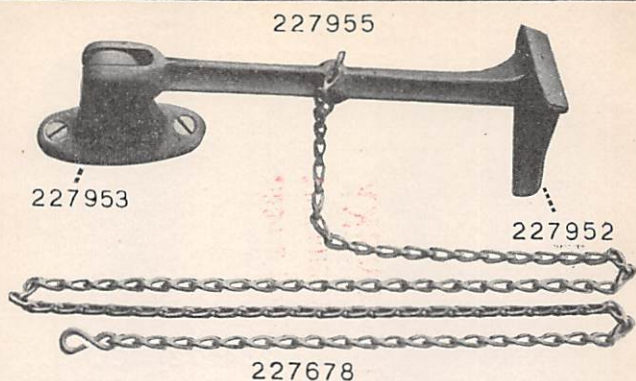

225498



225500



225499


225554




HARRY W. L. CHASE & SONS
SEWING MACHINES & SUPPLIES
129 W. 23 ST. N.Y.C. 10003
288-0300

HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0007


203718

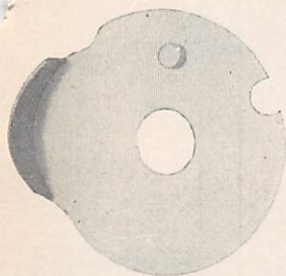

203718

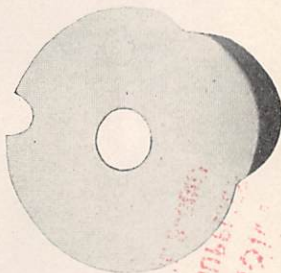

203464

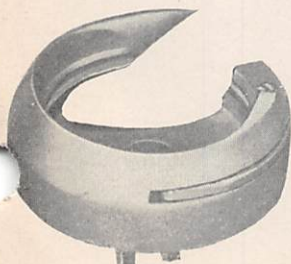

203465

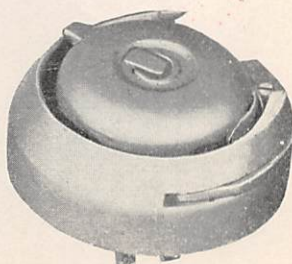


PLATE 11296-ONE-HALF SIZE

200457 200473 200394 200387 201510



204101

206963

206969

207031



207029

 
206966



206967



206962



207032


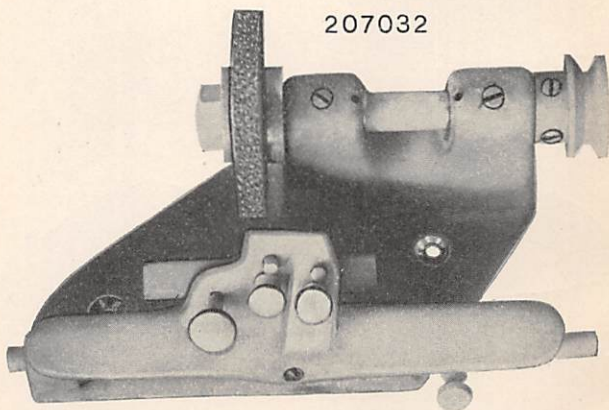


PLATE 11760—ONE-FOURTH SIZE

204184




204300

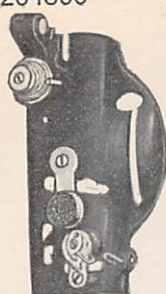


204186



 227475 213432




203773

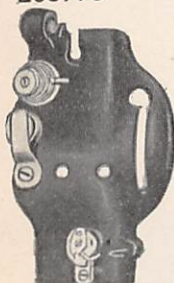

203202



204805

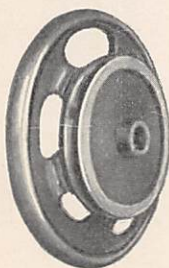

227543



227307



PLATE 11761—ONE-FOURTH SIZE

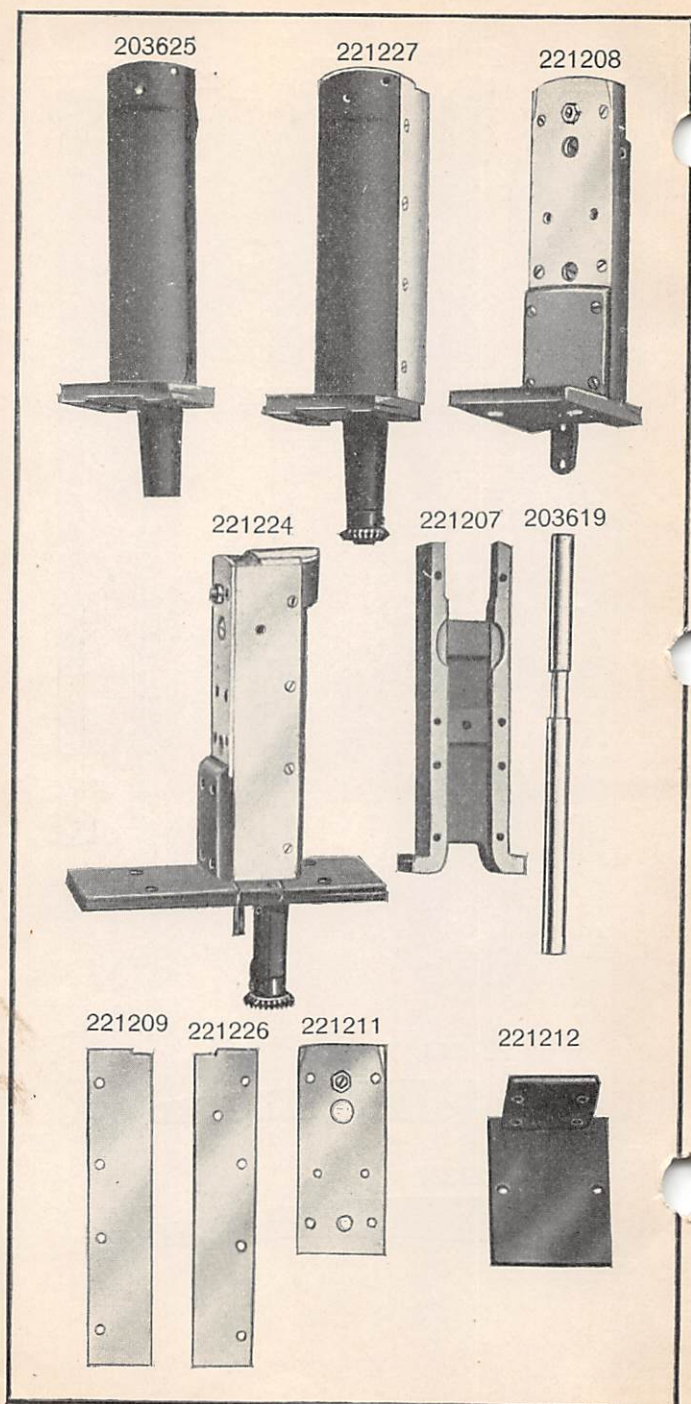


PLATE 11762—ONE-HALF SIZE

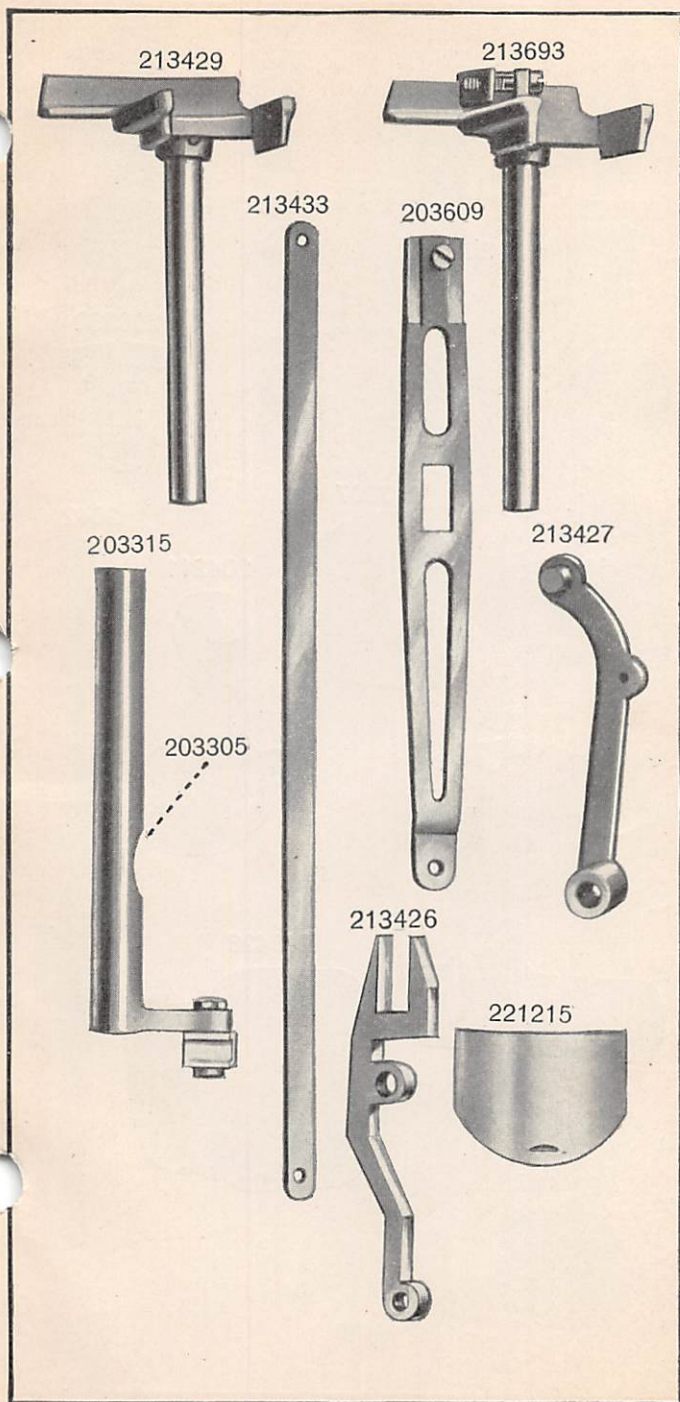


PLATE 11763—FULL SIZE

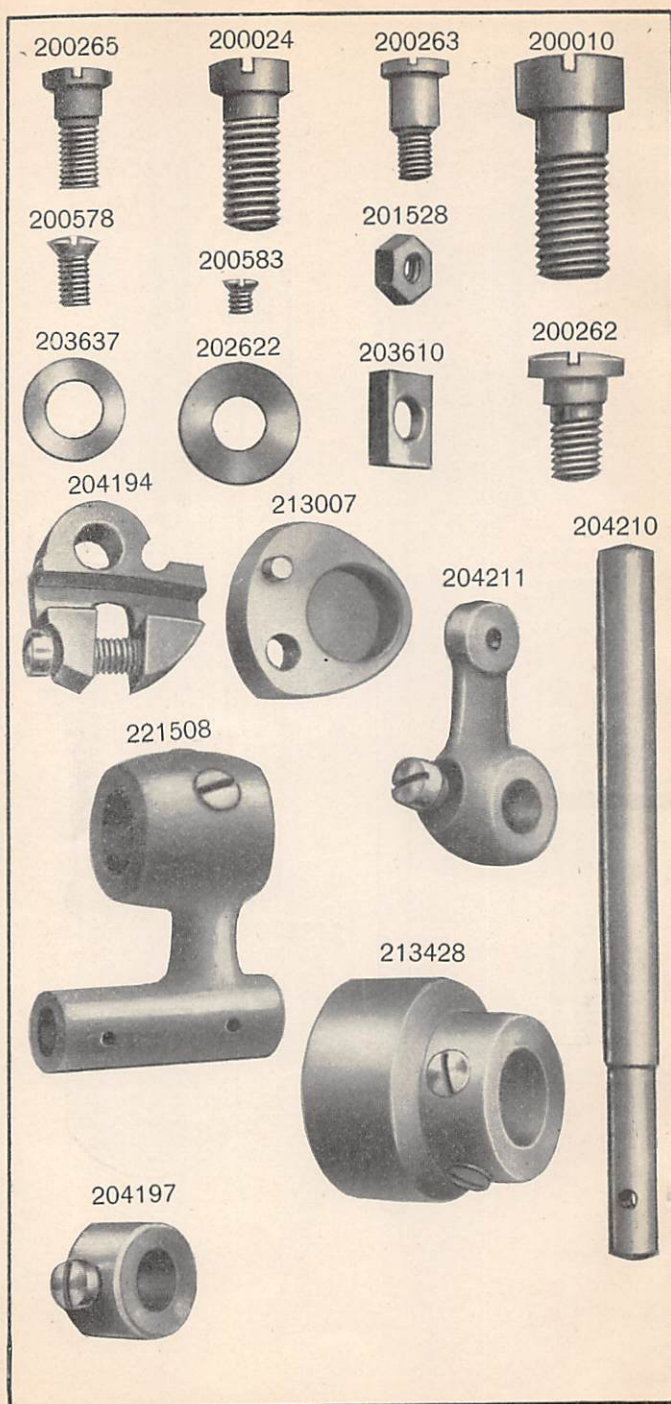


PLATE 12312 -FULL SIZE

200984



203214



200594




200616



200600



203254

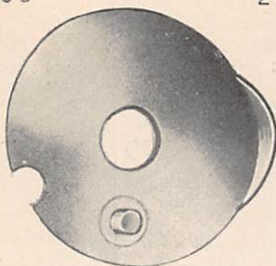


200555



203215




203208

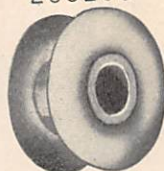

203251



203240

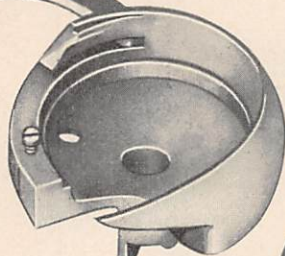

203216




203209




203210



203290

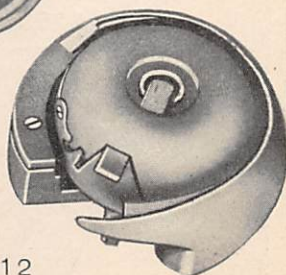

203217

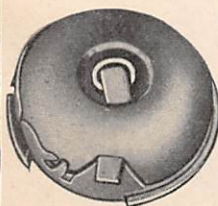

202056



203213



203212




203211



From the library of: Superior Sewing Machine & Supply LLC

PLATE 12320—ONE-HALF SIZE


202473

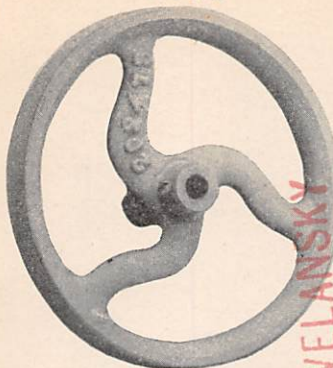

202474



 
202481



202485



227523

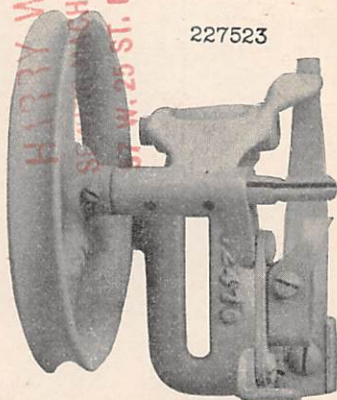

202480



202470



202471



PLATE 12321—FULL SIZE

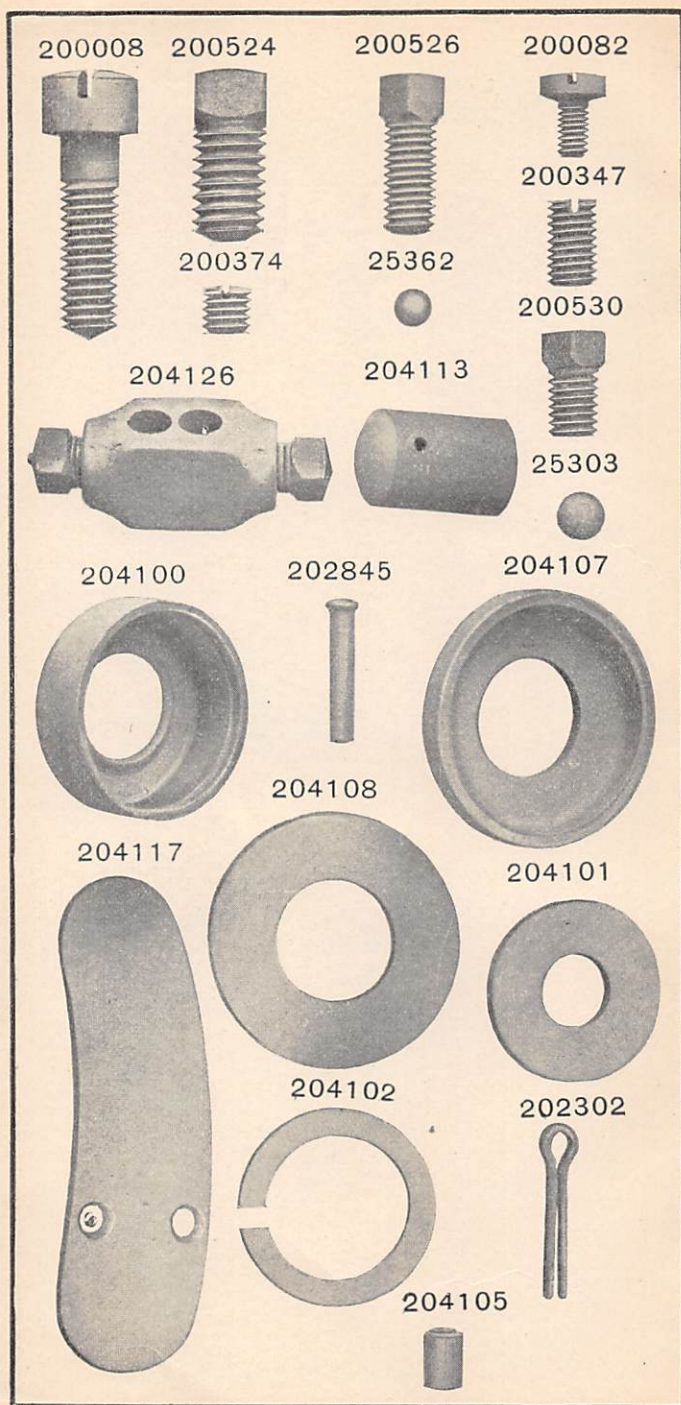


PLATE 12322—FULL SIZE

204122



204123



204112



227553



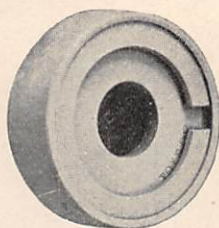


PLATE 12344—FULL SIZE

203249

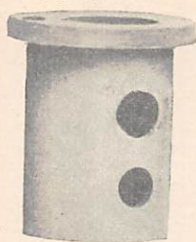


203246

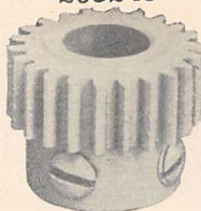

203242



204163

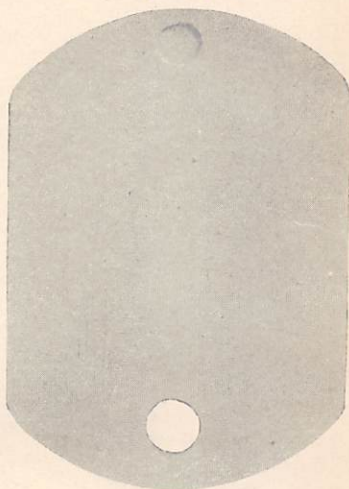

200491



203245

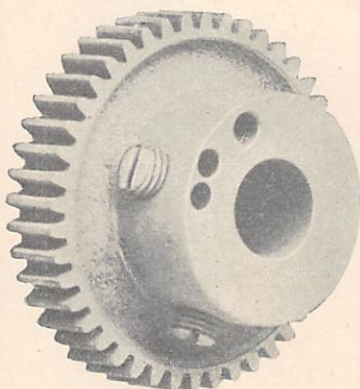


PLATE 12349—FULL SIZE

200319



200368



202402



202090



202092



204059



204058



204276



205987



200366



200581



202075




201572



204275



204272

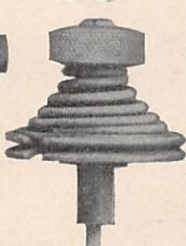

202088



204280



204333



202087



200632



204271



200135



202407



200300



200397



200309



204274



202098



204281



202091



202084



200204



PLATE 12351—FULL SIZE

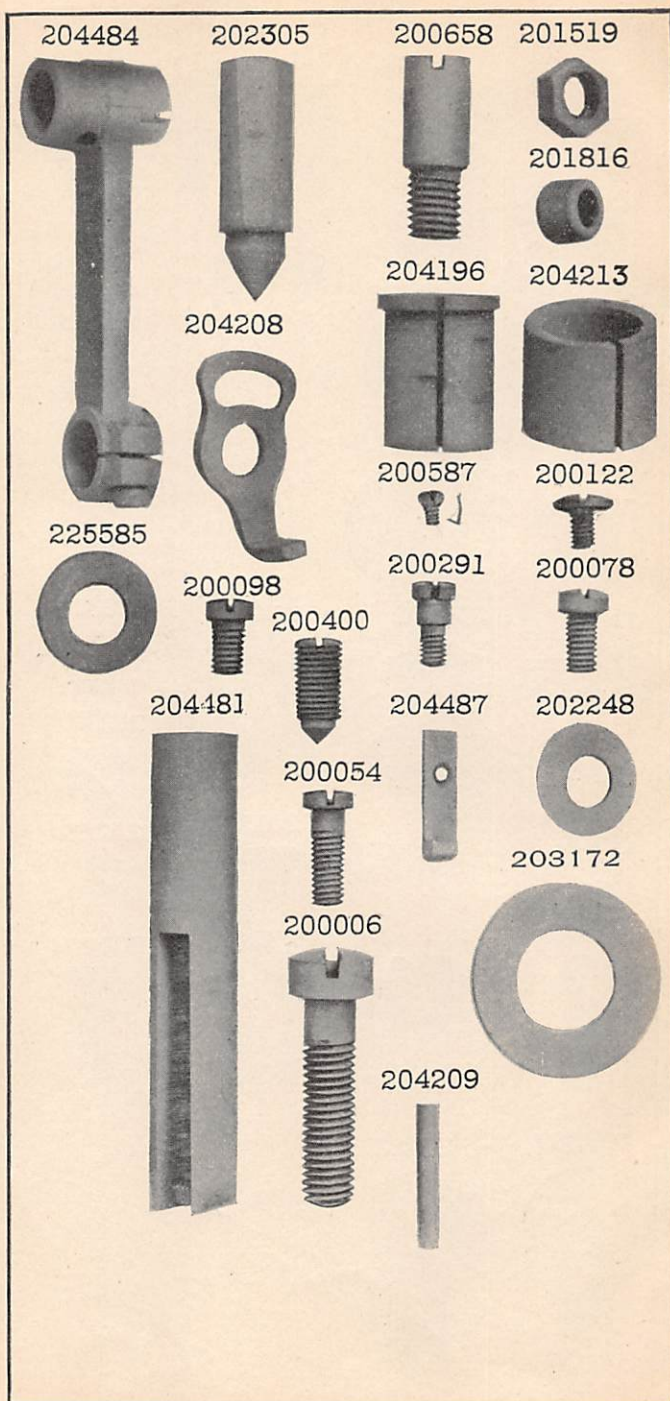


PLATE 12361—ONE-HALF SIZE


204483




204251



204705

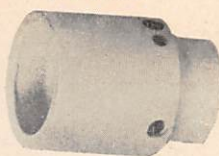


213005

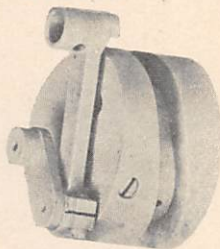


203248



 204207

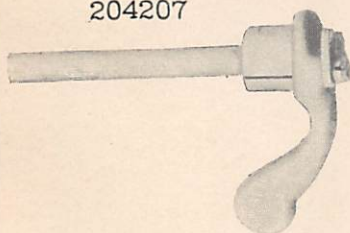



203247



213001



204199

204473



204474



HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0007

PLATE 12371—ONE-FOURTH SIZE

PLATE 11764—FULL SIZE

200026



200802



200785



200140



200868



200136



200664



200118



202603



200590



213771



200175



204250



204479



204230



204411



204452




213141



213435



213004

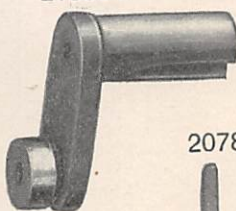

204248



207805



PLATE 11765—FULL SIZE

229625



206697




204606




204612




204599

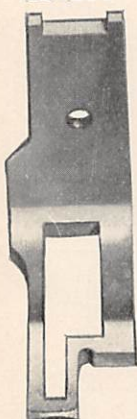

204594

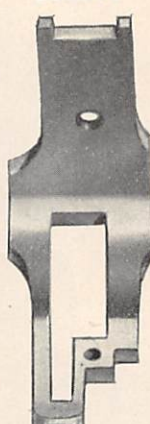

204605

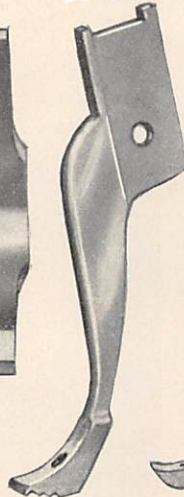

229633




206701



PLATE 11766—FULL SIZE

229082

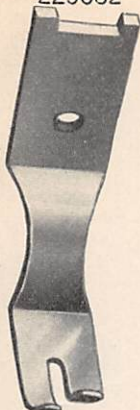

229084



229844



229845

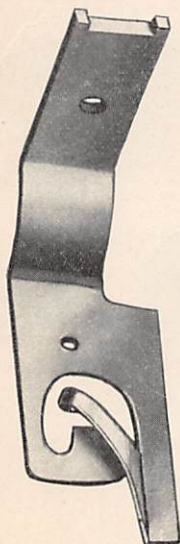


PLATE 11767—FULL SIZE

200554



201916



201915



201909



201907




201908



201911



204569

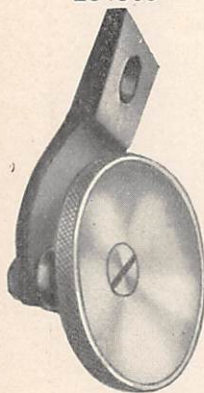

204574




202839




PLATE 11768—ONE-HALF SIZE


213925

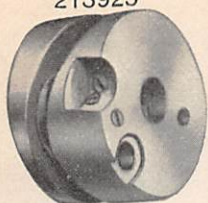


213006

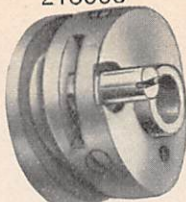

203268

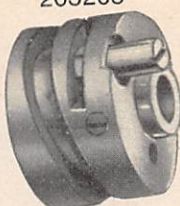

213008

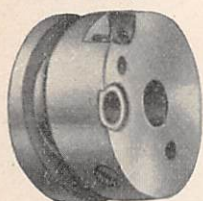

203306



204383



213770



204247



213923

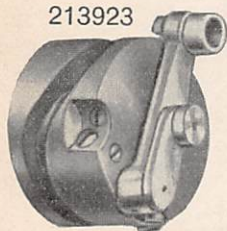


PLATE 11769—FULL SIZE

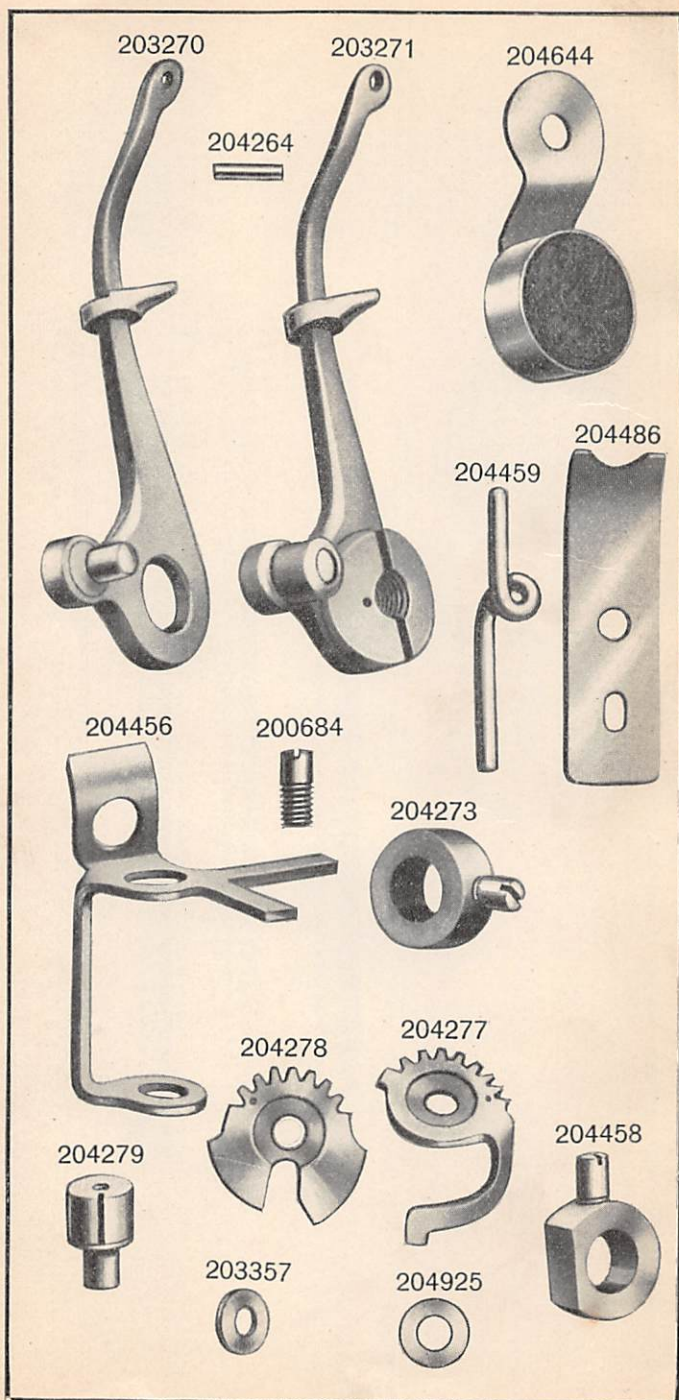


PLATE 11770—FULL SIZE

212664




215772



200178



215771
221233
221234
221235
221236

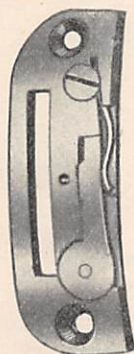

212640
221230
221231



213920

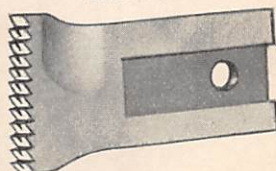


PLATE 11771—FULL SIZE

200189



200019



200394



200403



200935



200493



200473



200457



207031



201510




204455



HARRY W. LANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0007

PLATE 11772—ONE-FOURTH SIZE

213858

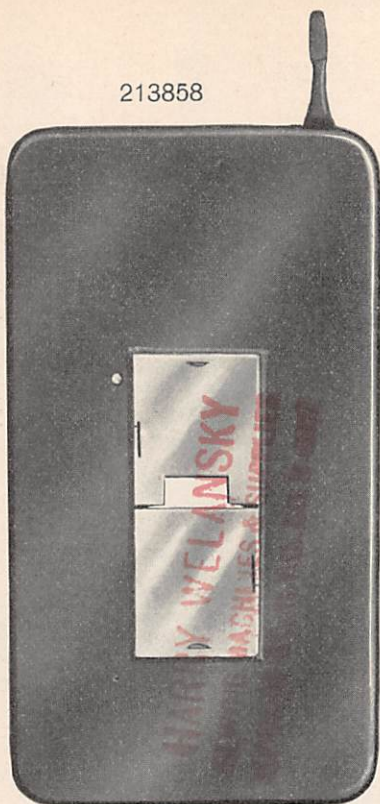


213855

213856



213857

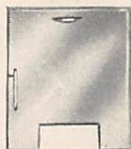

203301



PLATE 12153—ONE-HALF SIZE

41400



225498



227493



202258




225497



227488



204297

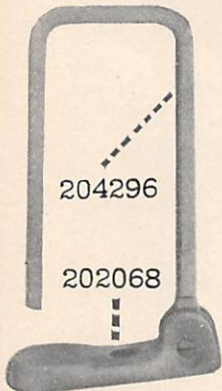

204296

202068

225554



225500



225499

PLATE 12225—FULL SIZE

204495



200675



200096



200551



200113




201534



200141



202560

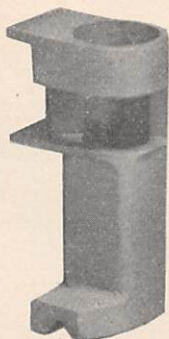

202558



201910



204570



202559




204330




PLATE 12240—FULL SIZE


212626
221232

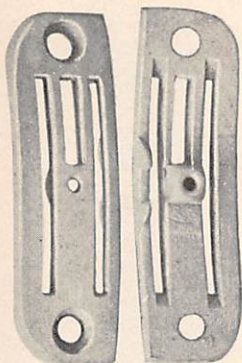


212628

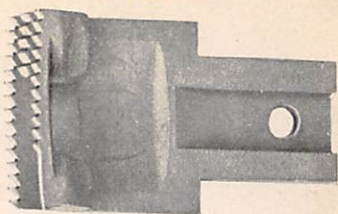

212629

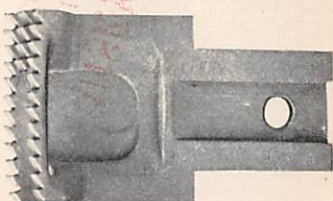


212632

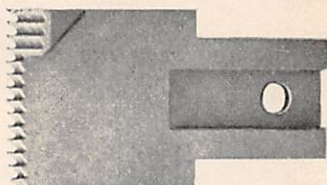

212630

212631

212625

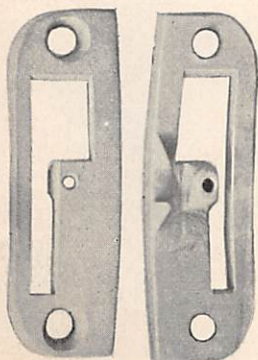

212633


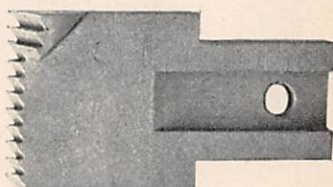


PLATE 12241—FULL SIZE

212624
212634
212635
212636



212624
212634
212635
212636

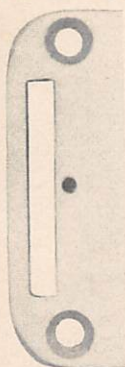


WELLSKY
SEWING MACHINES & SUPPLIES
147 W. 21 ST. N.Y.C. 10011
212 693 8100

212637



212638

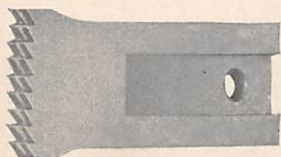

212639

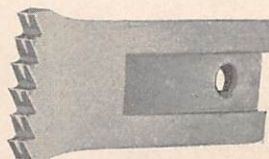


PLATE 12242—FULL SIZE


212643

212644




212643

212644

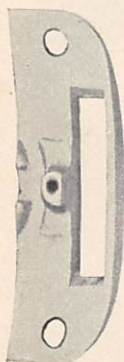

212645

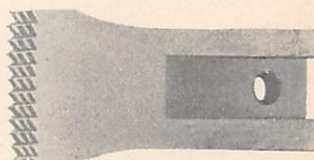

212646

212647

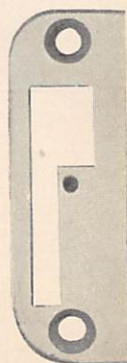


PLATE 12244—FULL SIZE


212654



212655



212656
212657
221237

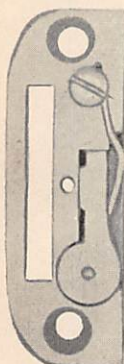

212658



PLATE 12311—FULL SIZE

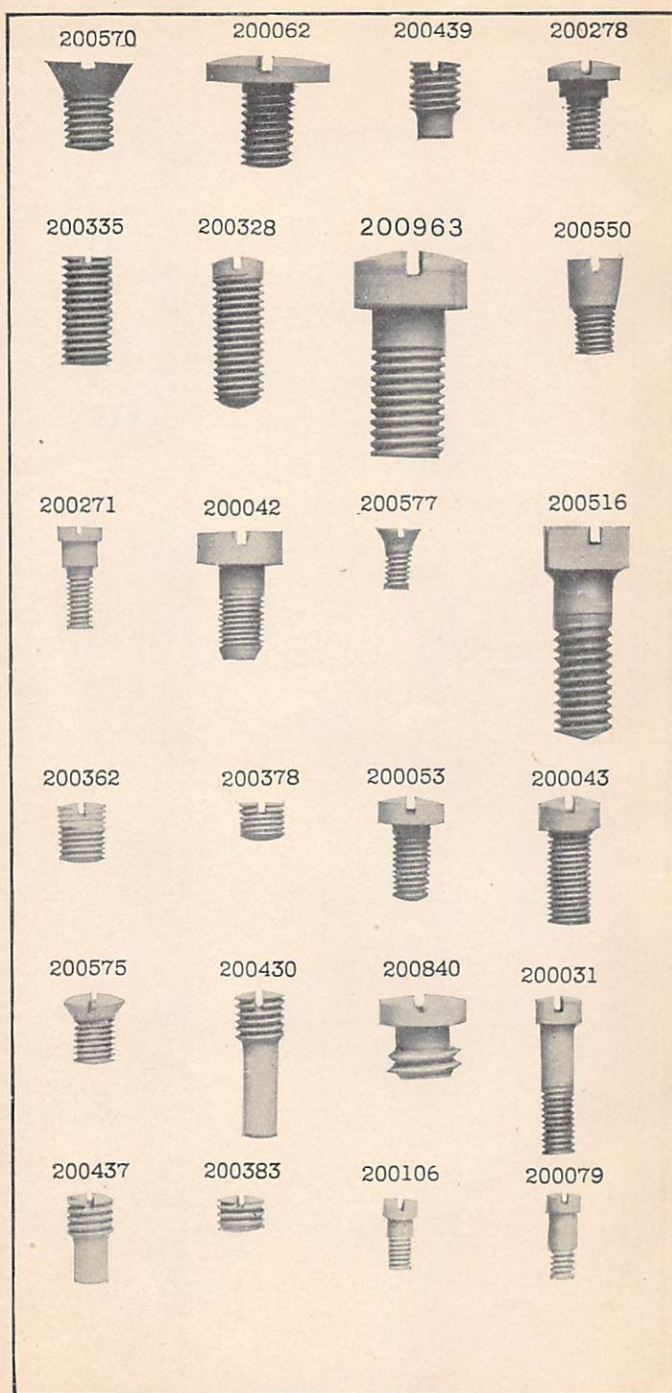


PLATE 12374—FULL SIZE

201531



201534



200113



200086



200074



200072



200393



200138



200125



204293



202126



202062



202276



203238



204249



204252



204269




203244



203250




204202

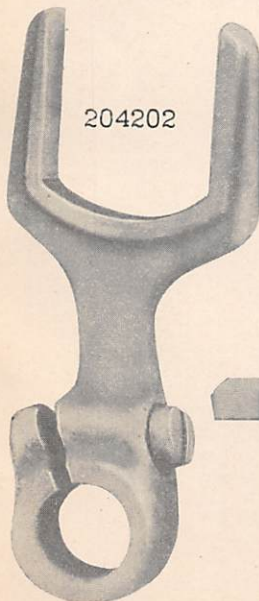

202005



203235

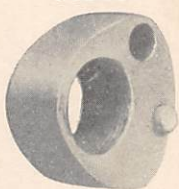

204480

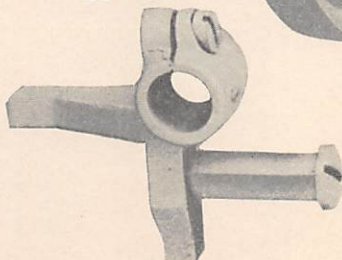


PLATE 12376—FULL SIZE

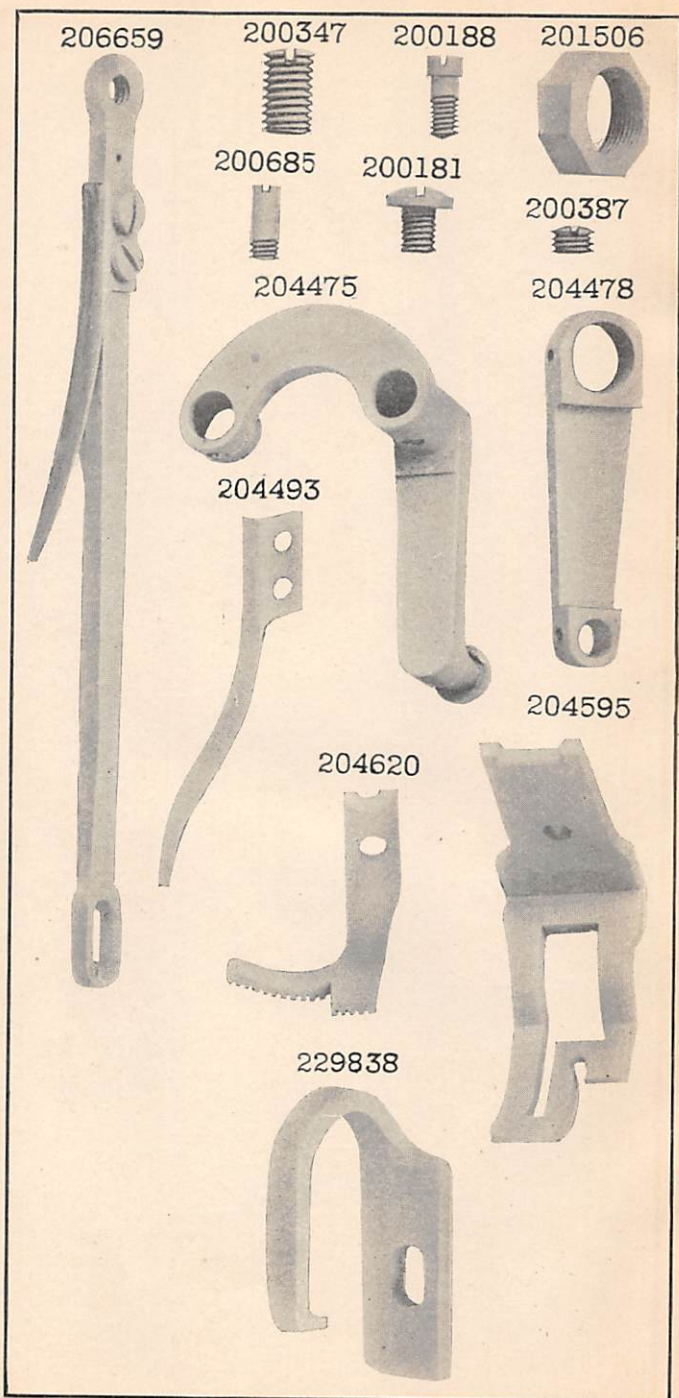


PLATE 12378—FULL SIZE

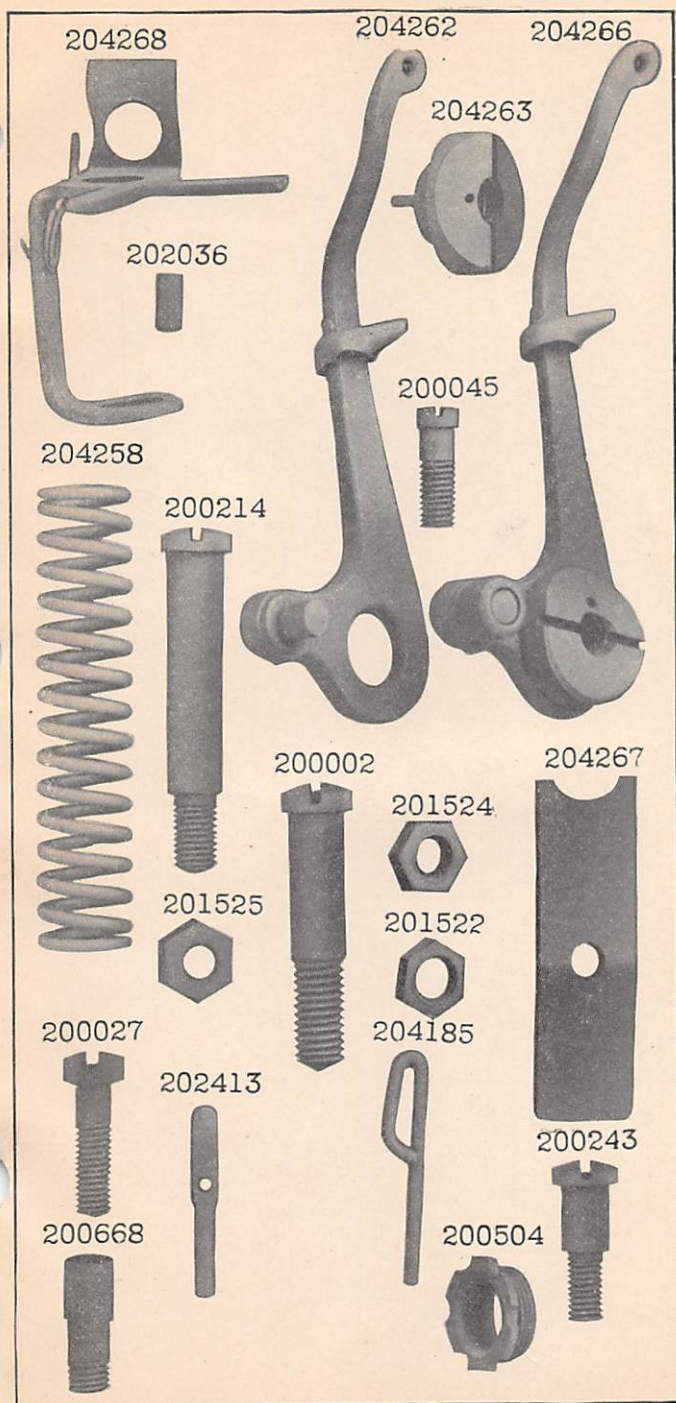


PLATE 12388—FULL SIZE

227227



202784




206628



225016



227576

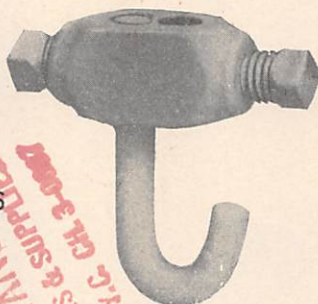

227316



HIPPY WELANSKI
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0007

PLATE 13042 -FULL SIZE

206719



229620



204620



206672



204634



206668



206673



206675



206676



206678



206698



PLATE 13043 -FULL SIZE

206699



206700



206705




206706



206707



206714

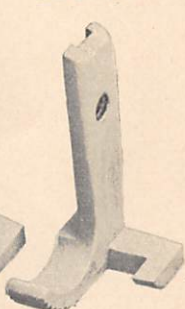

206715



206716



206717



