

LIST OF PARTS COMPLETE FOR NO. 62-30 MACHINE

For Knit Goods and other fabrics. Has one needle,
one looper. Has vertical trimmer, adjustable to
trim from $\frac{1}{16}$ to $\frac{3}{16}$ inch from needle by
compression between two moving
surfaces.

SUPERSEDES NO. 62-9 MACHINE

*46320	Arm, upper and lower (solid).....
23702	" Rock Shaft.....
38411	" " " Crank (back) with two 1497c.....
1497c	" " " " " Set Screw.....
38412	" " " " (front) with 443c.....
23724	" " " " " Pin.....
443c	" " " " " Set Screw.....
38413	" Rotary Shaft.....
38329	" " " Collar with two 457c.....
457c	" " " " " Set Screw.....
23872	" " " Flanged Bushing.....
159F	" " " " " Screw.....
4784	" " " Oil Pad (felt).....
144D	" " " Screw.....
17509	" Side Cover (lower).....
286D	" " " Thumb Screw.....
23933	" " " (upper).....
286D	" " " Thumb Screw.....
23873	Balance Wheel with two 430c.....
430c	" " " Set Screw.....
46321	Cloth Plate.....
691F	" " " Screw (left).....
1094F	" " " (right).....
46322H	" " " Slide (left).....
38419	" " " " " Spring.....
725H	" " " " " Screw.....
46323H	Cloth Plate Slide (left) complete, Nos. 38419, 46322H and two 725H.....
38296H	Cloth Plate Slide (right) with 1602H.....
286D	" " " " " Thumb Screw.....
1602H	" " " " " " Bushing....

46324	Cloth Plate complete, Nos. 286D, 38296H, 46321 and 46323H.....			
38422	Crank Connecting Rod with 38423 and two 158E...			
*38423	"	"	"	Cap.....
158E	"	"	"	" Screw.....
372C	"	"	"	Hinge Screw.....
1518E	"	"	"	" " Nut.....
46325	Cutting Lever.....			
46326	"	"	Adjusting Slide.....	
190D	"	"	"	" Screw.....
1389F	"	"	"	Screw.....
46327	"	"	Cap.....	
207F	"	"	"	" Screw.....
46328	"	"	Connection.....	
1099F	"	"	"	Hinge Screw.....
1247C	"	"	Hinge Screw.....	
38150	"	Plate.....		
1246C	"	"	Adjusting Screw.....	
1643D	"	"	"	" Thumb Nut.....
38152	"	"	"	Slide.....
207F	"	"	"	" Screw.....
46329	"	"	Bracket.....	
14026	"	"	"	Dowel Pin.....
46330	"	"	"	Holder.....
134D	"	"	"	" Screw.....
176D	"	"	"	Screw (lower).....
176D	"	"	"	" (upper).....
38155	"	"	Friction Plate.....	
1247C	"	"	"	" Screw.....
87F	"	"	Hinge Screw.....	
46331	Cutting Plate Bracket complete, Nos. 87F, 1246C, 1389F, 1643D, 38150, 38152, 38155, 46325 to 46327, 46329, two each 190D, 1247C and four 207F.....			
46110	Face Plate.....			
46111	"	"	Pin.....	
286D	"	"	Thumb Screw.....	
46332	Feed Bar with 231C.....			
46333	"	"	Bushing.....	
23726	"	"	Hinge Pin.....	
231C	"	"	Set Screw.....	
38426	"	"	Slide Block.....	
38427	"	Connecting Rod with 23865 and three 1057E..		
*23865	"	"	"	Cap.....
1057E	"	"	"	" Screw.....
23866	"	"	"	Hinge Pin (eccentric).....
1057E	"	"	"	" " Clamping Screw...
46334	"	Dog.....		
191C	"	"	Screw.....	

*38127	Feed Eccentric.....								
*23729	"	"	Body.....						
443C	"	"	"	Set Screw.....					
21331	"	"	Pressure Spring.....						
21332	"	"	"	"	Cap.....				
934D	"	"	"	"	"	Screw.....			
196F	"	"	Set Screw.....						
38128	Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C.....								
38429	Feed Lifting Eccentric with two 465C.....								
465C	"	"	"	Set Screw.....					
1103C	"	Regulating Screw.....							
38431	"	Rocking Frame.....							
38432	"	"	"	Bracket with two 465C.....					
123E	"	"	"	"	Screw.....				
38433	"	"	"	Hinge Pin.....					
465C	"	"	"	"	"	Set Screw.....			
46335	Looper with 590D and 38393.....								
38435	"	Bell Crank.....							
38436	"	"	"	Hinge Stud.....					
443C	"	"	"	"	"	Set Screw.....			
46101	"	"	"	Pitman with 46102, 46103 and four 187D.....					
777C	Looper Bell Crank Pitman Ball Screw Stud (lower)								
1636E	"	"	"	"	"	"	"	"	"
	Nut.....								
777C	Looper Bell Crank Pitman Ball Screw Stud (upper)								
1636E	"	"	"	"	"	"	"	"	"
	Nut.....								
*46102	Looper Bell Crank Pitman Cap (lower).....								
187D	"	"	"	"	"	"	Screw.....		
*46103	"	"	"	"	"	"	(upper).....		
187D	"	"	"	"	"	"	Screw.....		
38439	"	Carrier with 1143C and two 1147C.....							
38440	"	"	Hinge Pin.....						
1147C	"	"	"	Set Screw.....					
38441	Looper Carrier Pitman complete, Nos. 1697C, 1698C and 38445 to 38447.....								
50016C	Looper Carrier Pitman Ball Screw Stud (right).....								
1518E	"	"	"	"	"	"	"	Nut	
38442	"	"	"	"	"	"	Stud (left).....		
1147C	"	"	"	"	"	"	Set Screw..		
*42525	"	"	"	Cap (left).....					
187D	"	"	"	"	"	"	Screw.....		
*42524	"	"	"	"	"	"	(right).....		
187D	"	"	"	"	"	"	Screw.....		
*38443	"	"	"	End Bearing (left).....					
*38444	"	"	"	"	"	"	(right).....		

38445	Looper Carrier Pitman Head (left) Nos. 38442, 38443, 42525 and two 187D.....
38446	Looper Carrier Pitman Head (right) Nos. 38444, 42524, 50016c and two 187D.....
38447	Looper Carrier Pitman Rod.....
1697C	" " " " Nut (left).....
1698C	" " " " " (right).....
46042	" " Rock Shaft with two 175D.....
175D	" " " " Adjusting Screw.....
38450	" " " " Crank (forked) with 159E.....
159E	Looper Carrier Rock Shaft Crank Clamping Screw.....
38451	" " " " " Slide Block.....
46043	" " " " Hinge Pin.....
1508E	" " " " " Nut.....
129E	" " " " " Set Screw....
38452	" Eccentric with two 465C.....
46336H	" " Cover.....
335D	" " " Screw.....
465C	" " Set Screw.....
46104	" Needle Guard with 46105.....
46105	" " " Pin.....
229D	" " " Screw.....
1143C	" Set Screw.....
38453	" Shaft.....
38454	" " Bracket.....
123E	" " " Screw.....
391D	" " Screw.....
38393	" Thread Guard.....
590D	" " " Screw.....
38008	Needle Bar (hollow) with 857H.....
38456	" " Bushing.....
1133E	" " " Set Screw.....
38458	" " Connecting Link.....
38459	" " " " Hinge Stud.....
1520E	" " " " " " Nut.....
38460	" " " Stud with two 391E.....
391E	" " " " Clamping Screw.....
46337	" Guard.....
190D	" " Screw.....
857H	" Set Screw.....
46092	Presser Bar.....
46338	" " Bushing (lower).....
1133E	" " " " Set Screw.....
38456	" " " (upper).....
1133E	" " " " Set Screw.....
17541	" " Lifter.....
17542	" " " Hinge Pin.....

38466	Presser Bar Lifting Bracket with 453C and 892C...	
892C	" " " " Adjusting Screw.....	
453C	" " " " Set Screw.....	
38467	" " Spring (flat).....	
38468	" " Stud.....	
15261	" " Stop Collar with 237F.....	
237F	" " " " Set Screw.....	
11833	" Foot Hinge Pin.....	
38043	" " Plate.....	
23907	" " Shank.....	
38044	Presser Foot (hinged) complete, Nos. 11833, 23907 and 38043.....	
190D	Presser Foot Screw.....	
574D	Pressure Regulating Thumb Screw.....	
1539D	" " " " Lock Nut.....	
46169	Slack Thread Controller.....	
460C	" " " " Set Screw.....	
2102	Tension (under thread) Disc.....	
1560C	" " " " Regulating Thumb Nut....	
916F	" " " " Screw Stud.....	
10148	" " " " Spring.....	
17547	" " " " Thread Guide.....	
2102	" (upper thread) Disc.....	
1560C	" " " " Regulating Thumb Nut....	
916F	" " " " Screw Stud.....	
2103	" " " " Spring.....	
17547	" " " " Thread Guide.....	
38225	Thread (under) Eyelet (back).....	
190D	" " " " Screw.....	
38284	" " " (front).....	
46049	" " Nipper Cam with 465C.....	
465C	" " " " Set Screw.....	
38210	" " " " Spring (lower).....	
38211	" " " " (upper).....	
46247	" " " " " Stop.....	
176F	" " " " " Screw.....	
38475	" " Take-up with 465C.....	
465C	" " " " Set Screw.....	
38478	" " " " Staple with two each 590D and 38481.....	
46040	Thread (under) Take-up Staple Bracket with 910C.	
690D	" " " " " Screw.....	
46041	" " " " " Spring.....	
190D	" " " " " Screw.....	
910C	" " " " " Stop Screw.....	
38481	" " " " " Thread Guard.....	
590D	" " " " " " " Screw	
38482	" " " " " Stripper.....	

207D	Thread (under) Take-up Stripper Screw.....
38476	" " " Thread Guard (left).....
207D	" " " " " " Screw
38477	" " " " " (right).....
207D	" " " " " " Screw
38483	" (upper) Controller.....
206F	" " " Screw.....
46311	" " Eyelet.....
190D	" " " Screw.....
46312	" " Take-up with 223D.....
223D	" " " Clamping Screw.....
46339	Throat Plate for 46334.....
691F	" " Screw.....

ACCESSORIES

2015	Machine Cushion (rubber).....
—	1 3/4 in. Wood Screw No. 16, to secure machine to table.....
35859	Oiler with Cap and 35861.....
35860	" 35859 filled with oil.....
35861	" Spout, 3 1/2 in. long.....
26026	Screw Driver.....
38487	Threading Wire.....
35095	Tweezers, 6 in.
8908	Wrench for 1520.....
23766	" " 1508, 1518 and 1636.....
4822	" " 1697 and 1698.....

FOOT LIFTER PARTS

6439	Chain, 38 in. to 45 in.....
------	-----------------------------

NOTE.—When ordering 6439 give length required.

4879	Chain Connecting Link for 4885.....
23759	Lifting Lever.....
802D	" " Hinge Screw.....
23761	" " Spring.....
1002D	" " Stop Screw.....
4881	Treadle.....
4882	" Shaft.....
4883	" Spring.....
4884	" Stand.....
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....
23769	Foot Lifter complete, Nos. 802D, 1002D, 4885, 6439, 23759 and 23761.....

KNEE LIFTER PARTS

23759	Lifting Lever.....	
23760	" " Connecting Rod for 23768.....	
38384	" " " " " 38385.....	
802D	" " Hinge Screw.....	
23761	" " Spring.....	
1002D	" " Stop Screw.....	
2763	Rock Shaft.....	
12242	" " Hanger with two wood screws 1 in. No. 10.....	
6335	Rock Shaft Knee Arm.....	
6336	Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 6335.....	
2766	Rock Shaft Knee Arm Hub with 356C.....	
356C	" " " " " Set Screw.....	
2767	" " " Plate with 356C.....	
356C	" " " " Set Screw.....	
6337	" " Lifting Bracket with two 356C.....	
7125	" " " " Hook.....	
356C	" " " " " Set Screw.....	
356C	" " " " Set Screw.....	
2770	" " Stop Dog with 356C.....	
356C	" " " " Set Screw.....	
23767	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337, 7125 and two 12242.....	
23768	Knee Lifter complete (power table) Nos. 802D, 1002D, 23759 to 23761 and 23767.....	
38385	Knee Lifter complete (bench stand) Nos. 802D, 1002D, 23759, 23761 23767 and 38384.....	

THREAD UNWINDER

FOR TWO LARGE SPOOLS OR TWO LARGE CONES
OF THREAD

27623	Spool Pin.....	
155C	" " Set Screw.....	
41530	" Rest.....	
41531	" " 41530 with 1149C and two each 155C and 27623.....	
1149C	Spool Rest Set Screw.....	
27940	" Stand with 453C.....	
41514	" Weight, 4 in. diam., with 41515.....	
41515	" " Centre Pin.....	
27739	Thread Cone (wood).....	

41532	Thread Guard.....
41437	" " Rod, 30 in. long, with 735c.....
453C	" " " Set Screw.....
735C	" " Set Screw.....
41533	Thread Unwinder complete, Nos. 27940, 41437, 41531, 41532, two each 27739, 41514 and three wood screws 1 in. No. 12.....