Numbering Department August 5, 1909

LIST OF PARTS COMPLETE



No. 62=37 Machine

THE SINGER MANUFACTURING COMPANY

LIST OF PARTS COMPLETE

FOR

NO. 62-37 MACHINE

Two Needles, One Looper, elastic chain stitch, gauges from ½2 in. to ½6 in., roller presser. For vamping and foxing shoes.

FORMERLY 62 S. V. 18 MACHINE (SUPERSEDES 62-6 MACHINE)

**********					11. 15	
*38488						
23702	u		Shaft.			
38411	"	"	"		(back)	with two 1497c
1497c	"	, "	"	"	"	Set Screw
38412	"	"	"	"	(front)	with 443c
23724	"	"	"	и	"	Pin
443c	"	"	ш	и	u	Set Screw
38413	"	Rotar	y Sha	ft		
38329	"	ш	u	Colla	ar with	two 457c
457c	"	и	и	"		Screw
23872	и	"	"	Flan	ged Bu	shing
159F	и	"	"			" Screw
4784	"	u	"	Oil I	Pad (fel	lt)
144D	"	"	"	Scre	w	
17509	"	Side C	over			
286p	ш	"	м	"	Thum	b Screw
38489	"	"	"	(upper)		
38490	4	"	ш	"		with 38491 and two
		2609	92			
190p	Arm	Side (Cover	(upper) Screw	7
38491	"	u	"	"		d Eyelet (double)
26092	4	и	и	"	"	
23873	Bala	nce W	heel w	ith tw	o 430c.	
430c	"					
38414	Cloth	Plate				
691F		и	Screy			
1094F	и	а	и			
38415	и	и	Slide		to the second second	
38416	"	**	"	"		g
725	"	"	u	ш	"	Screw
38417	Clotl	n Plate	Slide	(large) comp	lete, Nos. 38415, two

```
38418
      Cloth Plate Slide (small)....
 38419
                     Spring.....
  725
                         Screw.....
 38420
      Cloth Plate Slide (small) complete, Nos. 38418.
          38419 and two 725.....
 38421
      Cloth Plate complete, Nos. 38414, 38417 and 38420.
 38422
      Crank Connecting Rod.....
*38423
                    Cap.....
                      Screw....
  158E
  372c
                    Hinge Screw.....
  1518E
46064
      Face Plate....
  211F
 38425
      Feed Bar with 231c and 460c....
 23716
            Bushing....
 23726
            Hinge Pin.
            Set Screw....
  231c
 38426
            Slide Block.....
 38427
         Connecting Rod with 1057E....
*23865
                   Cap.....
                      Screw....
  1057E
 23866
                   Hinge Pin (eccentric).....
                       " Clamping Screw ...
  1057E
46065
      Feed Dog. Old Serial No. 19183.....
  898p
            Screw.....
  460c
            Stop Screw.....
*38127
         Eccentric....
*23729
               Body.....
                   Set Screw.....
  443C
 21331
               Pressure Spring.....
 21332
                         Cap.....
                          " Screw.....
  934D
  196F
               Set Screw....
      Feed Eccentric (adjustable) complete, Nos. 196F,
 38128
          934D, 1103C, 21331, 21332, 23729, 38127 and
          two 443c....
 38429
      Feed Lifting Eccentric with two 465c....
 38430
                    Cover.....
  335D
                       Screw....
                    Set Screw.....
  465C
  1103c
         Regulating Screw.....
         Rocking Frame....
 38431
 38432
                   Bracket with two 465c....
  123E
                        Screw.....
                   Hinge Pin .....
 38433
                    " Set Screw ......
  465c
46066
      Looper with 590p and 38393.....
 38435
          Bell Crank....
```

38436	Looper Bell Crank Hinge Stud	
443c	" " " Set Screw	
38437	" " Pitman	
777c	" " Ball Screw Stud (lower))
1519E		
	Nut	
777c	Looper Bell Crank Pitman Ball Screw Stud (upper)	
1519E		
	Nut	
*7320	Looper Bell Crank Pitman Cap (lower)	
196F	" " " " Screw	
*38438	" " " (upper)	
196F	" " " " Screw	
38439	" Carrier with 1143c and two 1147c	
38440	" " Hinge Pin	
1147c	" " Set Screw	
38441	Looper Carrier Pitman complete, Nos. 1697c, 1698c	
OCTIL	and 38445 to 38447	
50016c		
1518E	" " " " " " Nut	
38442	" " " Stud (left)	
1147c	" " " Set Screw.	
*42525	" " Cap (left)	
196F	" " " Screw	
*42524	Belew	
	" " (right) " " Screw	
196F *38443	Delew	
*38444		
38445	(Hgitt)	
38445	" " Head (left) Nos. 38442 38443, 42525 and two 196F	,
00110		
38446	Looper Carrier Pitman Head (right) Nos. 38444	,
	42524, 50016c and two 196F	
38447	Looper Carrier Pitman Rod	
1697c	" " Nut (left)	
1698c	(light)	
46042	TOCK BHAIT WITH TWO 175D	
175D	Adjusting Screw	
38450	Clank (forked) with 159E	
159E	Clamping Berew.	
38451	blide Diock	
46043	Timge I III	
1508c	Nut	
129E	bet belew	
38452	Eccentric with two 4050	
465c	" Set Screw	
1143c	Bet Belew	
38453	" Shaft	
38454	" " Bracket	

123E	Looper Shaft Bracket Screw
391F	" " Screw
38393	" Thread Guard
590p	" " " Screw
46067	Needle Bar (hollow)
46068	Needle Bar complete, Nos. 2273, 46067, 46069 and
	46070
38456	Needle Bar Bushing.
1133E	" " Set Screw
38458	" " Connecting Link
38459	" " " Hinge Stud
1520E	" " " " Nut
38460	" " " Stud with two 391E
391E	" " " Clamping Screw
46069	" Clamp with 462F and 46071
46070	" " Gib
2273	" " Pin
462F	" " Screw
46071	" " Thread Guide
46050	" Guard
190p	" " Screw
46002	Oil Cup (tension) double, with two 38463
38463	" " Packing (felt)
225F	" " Screw
46003	" " (take-up) with 12443
12443	" " Packing (felt)
46072	Presser Bar.
46073	" " Bushing (lower)
1133E	" " Set Screw
38456	" " (upper)
1133E	" " Set Screw
17541	" " Lifter
17542	" " Hinge Pin
38466	" " Lifting Bracket with 453c and 892c
892c	" " " Adjusting Screw
453c	" " Set Screw
38467	" "Spring (flat)
38468	" " Stud
7298	" Foot Hinge Pin
38365	" " Plate
38010	" " Shank
38366	Presser Foot (hinged) complete for 46065, Nos. 7298,
	38010 and 38365
1000	Presser Foot Screw
574D	Pressure Regulating Thumb Screw
1539D	" " Lock Nut
1868	Roller, % in. diam., coarse, with 652D and 1528D, for
1000	
	38286

	Roller	. 11/4	in. diam., coarse, with 652D and 1528D,
			4000
38219	Roller	Arm	for 24000
38285	ш	"	" 38286
440F	"	и	Adjusting Screw
1547D	"	"	" " Nut
38302	"	"	Bracket
316F	u	"	" Screw Centre
1547D	"	"	" " " Nut
7556	"	"	Lock Spring
176F	а	"	" " Screw
1549D	u	"	" " Nut
38081	u	Need	lle Guard with 242D and 38082
38082	"	"	" Edge Guide
242D		"	" " Screw
171F	"	"	" Set Screw
652D	"	Screw	
1528D	"	u	Nut
38286	Roller		ser complete, 7/8 in. coarse roller, Nos.
			, 176F, 440F, 1549D, 1868, 7556, 38081,
			5, 38302, two 316F and three 1547D
24000	Roller		ser complete, 1¼ in. coarse roller, Nos.
		171F,	, 176F, 440F, 1549D, 1923, 7556, 38081,
		38219	9,38302, two 316F and three 1547D
190D	Roller	Press	ser Screw
46034	1000	m	d Controller
46034	Slack	Inrea	
46034	"	ш	" Clamp
46035 190D	u	u	" Clamp " " Screw
46035 190D 46007	u	"	" Clamp " " Screw Regulator
46035 190D	u	и и и	" Clamp " " Screw Regulator " Bracket with 172c and
46035 190D 46007 38473	и и . и	" " " 1823.	" Clamp " " Screw Regulator " Bracket with 172c and
46035 190D 46007 38473	" " " " Slack	" " 1823 . Threa	" Clamp " Screw Regulator " Bracket with 172c and d Regulator Bracket Clamping Screw
46035 190D 46007 38473 172C 38474	" " " Slack	" " 1823. Threa	" Clamp " Screw Regulator " Bracket with 172c and and Regulator Bracket Clamping Screw " Bushing
46035 190D 46007 38473 172c 38474 1823	" " " Slack " "	" " 1823. Threa	" Clamp " " Screw Regulator " Bracket with 172c and d Regulator Bracket Clamping Screw " Bushing " Roller and Stud
46035 190D 46007 38473 172C 38474	" " " Slack	" " 1823. Threa " "	" Clamp " " Screw Regulator " Bracket with 172c and d Regulator Bracket Clamping Screw " Bushing " Roller and Stud " Screw
46035 190D 46007 38473 172c 38474 1823	" " " Slack " "	" " 1823. Threa	" Clamp " " Screw Regulator " Bracket with 172c and d Regulator Bracket Clamping Screw " Bushing " Roller and Stud " Screw " Nut
46035 190D 46007 38473 172c 38474 1823 166D	" " " Slack " " "	" " 1823. Threa " " "	" Clamp " " Screw Regulator " Bracket with 172c and decorated and Regulator Bracket Clamping Screw " Bushing " Roller and Stud " Screw " " Nut " der thread) Disc
46035 190D 46007 38473 172c 38474 1823 166D 1620E	" " " Slack " " "	" " 1823. Threa " " "	" Clamp " Screw Regulator " Bracket with 172c and decorated decorat
46035 190D 46007 38473 172c 38474 1823 166D 1620E 2102	" " " " " " " " " " Tensio	" " " " " " " " " " " " " " " " " " "	" Clamp " " Screw Regulator " Bracket with 172c and street " Bushing " Roller and Stud " Screw " Nut " der thread) Disc " Regulating Thumb Nut
46035 190D 46007 38473 172C 38474 1823 166D 1620E 2102 1560C	" " " " " " " " " " Tensio "	" " 1823. Threa " " " on (une	" Clamp. " " Screw Regulator. " Bracket with 172c and defended Regulator Bracket Clamping Screw. " Bushing " Roller and Stud " Screw " " Nut " der thread) Disc " Regulating Thumb Nut " Screw Stud
46035 190D 46007 38473 172C 38474 1823 166D 1620E 2102 1560C 916F	Slack Slack Tensio """	" " 1823. Threa " " " on (un. "	" Clamp. " " Screw Regulator. " Bracket with 172c and defended Regulator Bracket Clamping Screw. " Bushing " Roller and Stud " Screw " " Nut " der thread) Disc " Regulating Thumb Nut " Screw Stud " Spring
46035 190D 46007 38473 172C 38474 1823 166D 1620E 2102 1560C 916F 10148	Slack "" Tensio "" ""	" " 1823. Threa " " " " " " " " " " " " " " " " " " "	" Clamp. " " Screw Regulator. " Bracket with 172c and defended Regulator Bracket Clamping Screw. " Bushing " Roller and Stud " Screw " " Nut " der thread) Disc " Regulating Thumb Nut " Screw Stud " Spring
46035 1900 46007 38473 172C 38474 1823 1660 1620E 2102 1560C 916F 10148 17547	Slack "" Tensio "" "" "" "" "" "" "" "" ""	" " 1823. Threa " " " " " " " " " " " " " " " " " " "	" Clamp. " " Screw Regulator " Bracket with 172c and defended Regulator Bracket Clamping Screw. " Bushing " Roller and Stud " Screw " " Nut " Screw " " Screw " " Screw Stud " " Spring " " Thread Guide " per thread) Disc
46035 190D 46007 38473 172C 38474 1823 166D 2102 1560C 916F 10148 17547 2102	Slack "" Tensio "" "" "" "" "" "" "" "" ""	" " " " " " " " " " " " " " " " " " "	" Clamp. " " Screw Regulator " Bracket with 172c and defended Regulator Bracket Clamping Screw. " Bushing " Roller and Stud " Screw " " Nut der thread) Disc " Screw Stud " Spring " Thread Guide per thread) Disc " Regulating Thumb Nut
46035 190D 46007 38473 172C 38474 1823 166D 1620E 2102 1560C 916F 10148 17547 2102 1560C	Slack "" Tensio "" "" "" "" "" "" "" "" ""	" " " " " " " " " " " " " " " " " " "	" Clamp. " " Screw Regulator " Bracket with 172c and defended Regulator Bracket Clamping Screw. " Bushing " Roller and Stud " Screw " " Nut " Nut " Screw Stud " Spring " Thread Guide " Regulating Thumb Nut " Sper thread) Disc " Regulating Thumb Nut " Screw Stud " Spring " Thread Guide " Regulating Thumb Nut " Screw Stud
46035 190D 46007 38473 172C 38474 1823 166D 1620E 2102 1560C 916F 10148 17547 2102 1560C 916F	Slack "" Tensio "" "" "" "" "" "" "" "" ""	" " " " " " " " " " " " " " " " " " "	" Clamp. " " Screw Regulator " Bracket with 172c and ded Regulator Bracket Clamping Screw. " Bushing " Roller and Stud " Screw " " Nut der thread) Disc " Regulating Thumb Nut " Screw Stud " Spring " Thread Guide " Regulating Thumb Nut " Screw Stud " Spring " Regulating Thumb Nut " Spring " Screw Stud " Spring

38225	Thread	(unde	r) Eyel	et (back).		
190D	"		"	" S	crew	
38284	"	"	. "	(front).		
46049	"	"	Nipp	er Cam wit	th 465c	
465c	"	"	"	" Set	Screw	
38210	и	"	и	Spring ((lower)	
38211	ш	"	"	" (upper)	*** *** *** *
176F	u -	"	ш	" 5	Screw	
38475	u	ш	Take	-up with 4	65c	
465c	и	"	"		rew	
38478	и	"	"	Staple	with two	each 590D
		and 38	481			
46040	Thread	(unde	r) Take	-up Staple	Bracket w	ith 910c.
690D	u	"	"	u	" S	crew
46041	"	· a	ш	u	Spring	
190p	"	"	и	"	" Scr	ew
910c	и	"	и	u	Stop Scre	w
38481	u	ш	и	"	Thread	Guard
590D	"	"	"	"	и	"
	,	Screw.				
38482	Thread	(unde	r) Take	-up Stripp	er	
207F	"	"	"	"	Screw	
38476	"	"	"	Thread	d Guard (le	eft)
190D	"	"	"	"	"	" Screw
38477	"	"	"	"	" (r	ight)
190D	и	**	"	"	a	" Screw
38483	u	(upper	c) Contr	oller		
206F	"	"		Scre	w	
46009	"	"	Eyel	et		
190D	"	"	"	Screw		
46010	ш	"	Take	-up with 4	57c	
457c	и	"	"		rew	
46074	Throat	Plate	with 66	5D and 46	075, for 46	065. Old
691F	Throat					
46075	"				. Old S	
		19165.				
665D	Throat	Plate	Thread	Retainer S	Screw	

ACCESSORIES

134 IN. WOOD SCREW NO. 16, TO SECURE MACHINE TO TABLE

2015	Machine Cushion (rubber)
4718	" Rest (felt)
35859	Oiler with Cap and 35861
35860	" 35859 filled with oil
35861	" Spout, 3½ in. long
26026	Screw Driver
38487	Threading Wire
35095	Tweezers, 6 in
8908	Wrench for 1519, 1520 and 1620
23766	" " 1508 and 1518
4822	" 1528, 1547, 1549, 1697 and 1698

FOOT LIFTER PARTS

6439	Chain, 36 in. to 45 in
Nor	E.—When ordering No. 6439 give length required.
4879	Chain Connecting Link for 4885
23759	Lifting Lever
802D	" " Hinge Screw
23761	" " Spring
1002D	" " Stop Screw
4881	Treadle
4882	" Shaft
4883	" Spring
4884	" Stand
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two
	wood screws 1 in. No. 16
23769	Foot Lifter complete, Nos. 802D, 1002D, 4885, 6439,
	23759 and 23761

KNEE LIFTER PARTS

23759	Lifting	Lever										No.	
23760	и	"	Connecting	Rod	for	23	7	68					
38384	u	"	**	"	"	38	38	35	 				
802D	u	"	Hinge Screv	w									
23761	ш	"	Spring										
1002D	"	. "	Stop Screw			:							

2763	Dools	Chaft
	Rock	Shaft
12242	"	" Hanger with two wood screws 1 in.
		No. 10
6335	Rock	Shaft Knee Arm
6336	Rock	Shaft Knee Arm complete, Nos. 2766, 2767
		and 6335
2766	Rock	Shaft Knee Arm Hub with 356c
356c	"	" " Set Screw
2767	"	" " Plate with 356c
356c	"	" " Set Screw
6337	"	" Lifting Bracket with two 356c
7125	"	" " " Hook
356c	"	" " Set Screw
356c	"	" " Set Screw
2770	"	" Stop Dog with 356c
356c	- "	" " Set Screw
23767	Rock	Shaft complete, Nos. 2763, 2770, 6336, 6337,
		7125 and two 12242
23768	Knee	Lifter complete (power table) Nos. 802D,
		1002D, 23759 to 23761 and 23767
38385	Knee	Lifter complete (bench stand) Nos. 802D,
		1002D, 23759, 23761, 23767 and 38384

THREAD UNWINDER

FOR THREE LARGE SPOOLS OR THREE LARGE CONES OF THREAD

27623	Spool Pin.
155c	
41434	" Rest
41435	" " 41434 with 1149c and three each 155c
	and 27623
11490	Spool Rest Set Screw
27940	" Stand with 453c
41514	" Weight, 4 in. diam., with 41515
41515	" " Centre Pin
27739	Thread Cone (wood)
41436	" Guard
41437	" Rod, 30 in. long, with 735c
4530	" " Set Screw
7350	" Set Screw
41438	Thread Unwinder complete, Nos. 27940, 41435 to
	41437 and three each 27739, 41514 and
	wood screws 1 in. No. 12

