This List Supersedes List of 62-38 Machine Issued March 1, 1910 Numbering Department March 25, 1911

LIST OF PARTS COMPLETE



No. 62=38 Machine

THE SINGER MANUFACTURING COMPANY

LIST OF PARTS COMPLETE

FOR

NO. 62-38 MACHINE

Two Needles, One Looper, ½ inch, ¾6 inch and ¼ inch Gauge. For Covering Seams, Necking and Ornamenting Underwear.

(SUPERSEDES 62 S. V. 31 AND 62=10 MACHINE)

*46363	Arm	, uppe	er and	lower	(solid)	
46216	и	Rock	Shaft			
46364	"	ш	и	Crank	(back)	with two 1497c
1497c	"	44	и	"	ш	Set Screw
38412	ec.	"	ш	"	(front)	with 443c
23724	ш	u	u	"	"	Pin
443c	ш	ш	u	и	"	Set Screw
46365	"	Rotar	y Sha	ft		
38329	u		"	Coll	ar with	two 457c
457c	44	44	"	• "	Set S	Screw
23872	"	ü	"	Flan		shing
159F	ш		"		"	
4784	"	"	"	Oil	Pad (fel	t)
144D	"	u	_"			
17509	"	Side (Cover	(lower)	
286D	ш	ш	и	u	Thumb	Screw
46366	"	44		(upper		
9533	"	"	"	"		
176D	и	"	"	u	Screw.	
23873	Balar	nce W	heel v	vith tw	о 430с	
430c	"		" S	Set Scr	ew	
46078	Cloth	Plate				
691F	"	- 44	Screv	w (left))	
1094F	"	11	"			
38418	**	"	Slide	(left).		
38419	"	"	"	"	Spring	
725н	46	"	- 44	44		Screw
38420	Cloth	Plate	Slide	(left)	complet	e, Nos. 38418, 38419
		and	two 7	25н		
		Plate	Slide	(right)	
922D	"			"	* ******	b Screw
46079	Cloth					22D, 1460н, 38105н,
		3842	20, 460	078 an	d 46082	••••

50069c Crank Connecting Rod Ball Screw Stud. 1619E " " " " " " " Nut *46222 " " " " " Screw. *46223 " " " " " " Screw. *46225 " " Washer (fibre) 46179 Face Plate. 46111 " Pin. 286D " Thumb Screw. 38425 Feed Bar with 231c and 460c. 23716 " Bushing. 23726 " Hinge Pin 231c " Set Screw. 38427 Connecting Rod with 23865 and three 1057E. *23865 " " Cap. 1057E " " " Screw. 23866 " " " Hinge Pin (eccentric). *23865 " " " Clamping Screw. 46143 Dog. 157D " Screw. 460c " Stop Screw. *38127 Eccentric. *23729 " Body. 443c " Screw. 21331 " Pressure Spring. 21332 " " Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196f, 934p, 1103c, 21331, 21332, 23729, 38127 and two 443c.	46221	Cran	k Connecting Rod with 46222, 46223 and two each 896E and 1057E
**46222	50069c	Cran	k Connecting Rod Ball Serow Stud
*46222			
#46223		"	Nut
*46223		"	
1057E " " " Washer (fibre) 46179 Face Plate. 46111 " Pin. 286D " " Thumb Screw. 38425 Feed Bar with 231c and 460c. 23716 " Bushing. 23726 " Hinge Pin 231c " Set Screw. 38426 " " Slide Block 38427 " Connecting Rod with 23865 and three 1057E. *23865 " " Cap. 1057E " " " Screw. 23866 " " Hinge Pin (eccentric) 1057E " " " Clamping Screw. 46143 " Dog. 157D " " Screw. 460c " Stop Screw. *23729 " " Body. 443c " " Set Screw. 21331 " Pressure Spring. 21332 " " Cap. 934D " " " Screw. 196F " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " Screw 465c " " Bracket with two 465c. 123E " " Bracket with two 465c. 123E " " Screw 465c " " Set Screw 38433 " Hinge Pin 465c " " Set Screw 38433 " Hinge Pin 465c " " Set Screw 465c " " Set Screw 465c " " Set Screw 38433 " Hinge Pin 465c " " Set Screw		и	
46225 " " Washer (fibre) 46179 Face Plate 46111 " Pin		"	
46179 Face Plate. 46111 " " Pin. 2860 " " Thumb Screw. 38425 Feed Bar with 231c and 460c. 23716 " " Bushing. 23726 " " Hinge Pin 231c " Set Screw. 38426 " " Slide Block 38427 " Connecting Rod with 23865 and three 1057c. *23865 " " Cap. 1057e " " " Screw. 23866 " " Hinge Pin (eccentric) 1057e " " " Clamping Screw. 46143 " Dog 157D " " Screw. 460c " Stop Screw. *38127 " Eccentric *23729 " " Body. 443c " " Set Screw. 21331 " Pressure Spring. 21332 " " Cap 934D " " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " Screw. 465c " " Set Screw. 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw. 38433 " " Hinge Pin 465c " " Set Screw.		"	201011111111111
46111 " " Pin. 286b " " Thumb Screw. 38425 Feed Bar with 231c and 460c. 23716 " Bushing. 23726 " " Hinge Pin 231c " " Set Screw. 38426 " " Slide Block 38427 " Connecting Rod with 23865 and three 1057E. *23865 " " Cap. 1057E " " " Screw. 23866 " " " Hinge Pin (eccentric) 1057E " " " " Clamping Screw. 46143 " Dog. 157D " " Screw. 460c " " Stop Screw. *38127 " Eccentric *23729 " Body. 443c " " Set Screw. 21331 " " Pressure Spring. 21332 " " Cap. 934D " " Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " Screw. 465C " " Set Screw. 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw. 38433 " " Hinge Pin 465C " " Set Screw.	46179	Face	TO!
286b " " Thumb Screw. 38425 Feed Bar with 231c and 460c. 23716 " " Bushing. 23726 " " Hinge Pin 231c " " Set Screw. 38426 " " Slide Block 38427 " Connecting Rod with 23865 and three 1057E. *23865 " " " Cap. 1057E " " " " Screw. 23866 " " Hinge Pin (eccentric). 1057E " " " " Clamping Screw. 46143 " Dog. 157D " " Screw. 460c " " Stop Screw. *38127 " Eccentric *23729 " " Body. 443c " " " Set Screw. 21331 " " Pressure Spring. 21332 " " " Cap. 934D " " " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " " Screw. 465c " " Set Screw. 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw. 38433 " " Hinge Pin 465c " " " Set Screw.	46111	"	
38425 Feed Bar with 231c and 460c 23716 " " Bushing 23726 " " Hinge Pin 231c " " Set Screw 38426 " " Slide Block 38427 " Connecting Rod with 23865 and three 1057E. *23865 " " Cap 1057E " " " Screw 23866 " " " Hinge Pin (eccentric) 1057E " " " " Clamping Screw 46143 " Dog 157D " " Screw 460c " " Stop Screw *38127 " Eccentric *23729 " " Body 443c " " Set Screw 21331 " Pressure Spring. 21332 " " " Cap 934D " " " Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c 38429 Feed Lifting Eccentric with two 465c 46113 " " Cover 335D " " " Screw 465c " " Set Screw 38431 " Rocking Frame 38432 " " Bracket with two 465c 123E " " " Screw 38433 " " Hinge Pin 465c " " Set Screw 38433 " " Hinge Pin 465c " " Set Screw	286p	"	
23716 " " Bushing. 23726 " " Hinge Pin 231c " " Set Screw 38426 " " Slide Block 38427 " Connecting Rod with 23865 and three 1057E. *23865 " " Cap. 1057E " " " Screw. 23866 " " Hinge Pin (eccentric) 1057E " " " Clamping Screw. 46143 " Dog 157D " " Screw. 4600 " " Stop Screw. *38127 " Eccentric *23729 " " Body. 443c " " Set Screw. 21331 " Pressure Spring. 21332 " " " Cap. 196F " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c 46113 " " Cover. 335D " " " Screw. 465c " " Set Screw. 38431 " Rocking Frame. 38432 " " Bracket with two 465c 123E " " " Screw. 38433 " " Hinge Pin 465c " " Set Screw.	38425	Feed	
23726 " " Hinge Pin 2310 " " Set Screw. 38426 " " Slide Block 38427 " Connecting Rod with 23865 and three 1057E. *23865 " " " Cap. 1057E " " " " Screw. 23866 " " Hinge Pin (eccentric) 1057E " " " " Clamping Screw. 46143 " Dog. 157D " " Screw. 4600 " " Stop Screw. *38127 " Eccentric *23729 " " Body. 4430 " " " Set Screw. 21331 " " Pressure Spring. 21332 " " " " Cap 934D " " " " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " " Screw 465C " " Set Screw. 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw 38433 " " Hinge Pin 465C " " " Set Screw 466C " " " Set Screw 466C " " " Set Screw 466C " " " Screw 466C " " " Screw 466C " " " Set Screw 466C " " " Screw 466C " " " Screw 38433 " " Hinge Pin 465C " " " Set Screw	23716		
231c " " Set Screw. 38426 " " Slide Block 38427 " Connecting Rod with 23865 and three 1057E. *23865 " " " Cap. 1057E " " " " Screw. 23866 " " " Hinge Pin (eccentric) 1057E " " " " " Clamping Screw. 46143 " Dog. 157D " " Screw. 460c " " Stop Screw. *38127 " Eccentric *23729 " Body. 443c " " Set Screw. 21331 " " Pressure Spring. 21332 " " " Cap. 934D " " " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " Screw. 465C " " Set Screw. 1103c " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw. 38433 " " Hinge Pin 465C " " " Set Screw.	23726	"	
38426 " "Slide Block 38427 " Connecting Rod with 23865 and three 1057E. *23865 " " " Cap. 1057E " " " " Screw. 23866 " " Hinge Pin (eccentric) 1057E " " " " Clamping Screw. 46143 " Dog. 157D " " Screw. 460c " " Stop Screw. *38127 " Eccentric *23729 " " Body. 443c " " Set Screw. 21331 " " Pressure Spring. 21332 " " " Cap. 934D " " " Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " " Screw. 465c " " Set Screw. 1103c " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw. 38433 " " Hinge Pin 465c " " " Set Screw.	231c	u	
*23865	38426	"	
*23865 " " " Cap. 1057E " " " " Screw. 23866 " " Hinge Pin (eccentric) 1057E " " " " Clamping Screw. 46143 " Dog. 157D " " Screw. 460c " " Stop Screw. *38127 " Eccentric *23729 " " Body. 443c " " Set Screw. 21331 " " Pressure Spring. 21332 " " " Cap. 934D " " " Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " " Screw. 465c " " Set Screw. 1103c " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw. 38433 " " Hinge Pin 465C " " " Set Screw.	38427	"	Connecting Rod with 23865 and three 1057E.
23866 " " " Hinge Pin (eccentric) 1057E " " " " " Clamping Screw. 46143 " Dog 157D " " Screw 460c " " Stop Screw *38127 " Eccentric *23729 " " Body 443c " " Set Screw 21331 " " Pressure Spring. 21332 " " " Cap 934D " " " Screw 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c 38429 Feed Lifting Eccentric with two 465c 46113 " " Cover 335D " " " Screw 465c " " Set Screw 1103c " Regulating Screw 38431 " Rocking Frame 38432 " " Bracket with two 465c 123E " " " Screw 38433 " " Hinge Pin 465c " " " Set Screw 465c " " " Set Screw 465c " " " " Set Screw	*23865	u	
23866 " " " Hinge Pin (eccentric) 1057E " " " " " Clamping Screw 46143 " Dog 157D " " Screw 460c " " Stop Screw *38127 " Eccentric *23729 " " Body 443c " " Set Screw 21331 " " Pressure Spring. 21332 " " " Cap 934D " " " Screw 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c 38429 Feed Lifting Eccentric with two 465c 46113 " " Cover 335D " " " Screw 465c " " Set Screw 1103c " Regulating Screw 38431 " Rocking Frame 38432 " " Bracket with two 465c 123E " " " Screw 38433 " " Hinge Pin 465C " " " Set Screw 466C " " " Set Screw 4670 " " Screw 4682 Folder Holder Seat Cover	1057E	"	
1057E " " " " " Clamping Screw. 46143 " Dog. 157D " " Screw. 460c " " Stop Screw. *38127 " Eccentric *23729 " " Body. 443c " " Set Screw. 21331 " " Pressure Spring. 21332 " " " Cap. 934D " " " Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " " Screw. 465c " " Set Screw. 1103c " Regulating Screw. 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw. 38433 " " Hinge Pin 465C " " " Set Screw 466C " " " Set Screw 4670 " " Screw 4682 Folder Holder Seat Cover.	23866	"	" " Hinge Pin (eccentric)
46143 " Dog. 157D " " Screw. 460c " " Stop Screw. *38127 " Eccentric *23729 " " Body. 443c " " Set Screw. 21331 " Pressure Spring. 21332 " " " Cap. 934D " " " Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " " Screw. 465c " " Set Screw. 1103c " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw. 38433 " " Hinge Pin 465C " " " Set Screw 465C " " " Set Screw 465C " " " Set Screw	1057E	"	" " " Clamping Screw
157D " " Screw. 460c " " Stop Screw. *38127 " Eccentric *23729 " " Body. 443c " " Set Screw. 21331 " " Pressure Spring. 21332 " " " Cap. 934D " " " Screw. 196F " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " " Screw. 465c " " Set Screw. 1103c " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465c. 123E " " " Screw. 38433 " " Hinge Pin 465c " " Set Screw 465c " " Screw 465c " " Screw 465c " " Screw 38433 " " Hinge Pin 465c " " " Set Screw	46143	"	
*38127 " Eccentric *23729 " " Body. 443c " " Set Screw. 21331 " Pressure Spring. 21332 " " " Cap 934D " " " Set Screw. 196F " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c 46113 " " Cover 335D " " " Set Screw 1103c " Regulating Screw 1103c " Regulating Screw 38431 " Rocking Frame 38432 " " Bracket with two 465c 123E " " Screw 38433 " " Hinge Pin 465C " " " Set Screw 466C " " " Set Screw 4682 Folder Holder Seat Cover.	157D	"	# G
*23729 " " Body. 443C " " Set Screw. 21331 " Pressure Spring. 21332 " " " Cap. 934D " " " Set Screw. 196F " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C. 38429 Feed Lifting Eccentric with two 465C. 46113 " " Cover. 335D " " " Screw. 465C " " Set Screw. 1103C " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465C. 123E " " " Screw. 38433 " " Hinge Pin 465C " " " Set Screw. 465C " " " Set Screw.	460c	"	" Stop Screw
443c " " Set Screw. 21331 " " Pressure Spring. 21332 " " " " Cap 934D " " " Set Screw. 196F " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " " Screw 465c " " Set Screw 1103c " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465c 123E " " " Screw 38433 " " Hinge Pin 465c " " " Set Screw 465c " " " Set Screw	*38127	"	Eccentric
21331 " " Pressure Spring. 21332 " " " " Cap 934D " " " " Screw. 196F " " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " Cover. 335D " " " Screw 465c " " Set Screw 1103c " Regulating Screw 1103c " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465c 123E " " Screw 38433 " " Hinge Pin 465c " " " Set Screw 465c " " " Set Screw	*23729	"	" Body
21332 " " " Cap 934D " " " " Screw. 196F " " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F,			" Set Screw
934D " " " Screw. 196F " " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F,			rressure Spring
196F " " Set Screw. 38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C. 38429 Feed Lifting Eccentric with two 465C 46113 " " Cover 335D " " " Screw 465C " " Set Screw 1103C " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465C 123E " " " Screw 38433 " " Hinge Pin 465C " " " " Set Screw			" Cap
38128 Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C. 38429 Feed Lifting Eccentric with two 465C. 46113 " " Cover. 335D " " " Screw. 465C " " Set Screw. 1103C " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465C. 123E " " Screw. 38433 " " Hinge Pin 465C " " " " Set Screw 46082 Folder Holder Seat Cover.			" " " Screw
934D, 1103C, 21331, 21332, 23729, 38127 and two 443C. 38429 Feed Lifting Eccentric with two 465C 46113 " " Cover 335D " " " Screw 465C " " Set Screw 1103C " Regulating Screw 38431 " Rocking Frame 38432 " " Bracket with two 465C 123E " " " Screw 38433 " " Hinge Pin 465C " " " " Set Screw 46082 Folder Holder Seat Cover.			" Set Screw
two 443c. 38429 Feed Lifting Eccentric with two 465c. 46113 " " " Cover. 335D " " " " Screw 465C " " " Set Screw 1103c " Regulating Screw 38431 " Rocking Frame. 38432 " " " Bracket with two 465c 123E " " " Screw 38433 " " Hinge Pin 465c " " " " Set Screw 46082 Folder Holder Seat Cover.	38128	Feed	Eccentric (adjustable) complete, Nos. 196F,
38429 Feed Lifting Eccentric with two 465c 46113 " " Cover 335D " " " Screw 465C " " Set Screw 1103c " Regulating Screw 38431 " Rocking Frame 38432 " " Bracket with two 465c 123E " " " Screw 38433 " " Hinge Pin 465C " " " " Set Screw 46082 Folder Holder Seat Cover.			
46113 " " " Cover			two 443c
335D " " " " Screw 465C " " Set Screw 1103C " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465C 123E " " Screw 38433 " " Hinge Pin 465C " " " " Set Screw 46082 Folder Holder Seat Cover.			
465c " " " Set Screw 1103c " Regulating Screw 38431 " Rocking Frame. 38432 " " Bracket with two 465c 123E " " " Screw 38433 " " Hinge Pin 465c " " " " Set Screw 46082 Folder Holder Seat Cover.			Cover
1103c " Regulating Screw			" Screw
38431 " Rocking Frame. 38432 " " " Bracket with two 465c 123E " " " Screw 38433 " " Hinge Pin 465c " " " " Set Screw 46082 Folder Holder Seat Cover.	200		" Set Screw
38432 " " " Bracket with two 465c 123E " " " Screw 38433 " " Hinge Pin 465c " " " " Set Screw 46082 Folder Holder Seat Cover.			Regulating Screw
123E " " " Screw			
38433 " " " Hinge Pin 465c " " " Set Screw 46082 Folder Holder Seat Cover.	00101		Dracket with two 465C
465c " " " " Set Screw 46082 Folder Holder Seat Cover.			Screw
46082 Folder Holder Seat Cover.			Tinge Fin
	465c		" Set Screw
1460H " " " " Conom	46082	Folde	er Holder Seat Cover
1400H Screw	1460н	"	" " " Screw
46203 Looper with 590D and 38393	46203	Loop	

46145	Looper	Bell C	rank	with 1259c
38436	"	u	u	Hinge Stud
443c	"	ш	ш	" Set Screw
46314	Looper	Bell (Crank	k Pitman complete, Nos. 1706E,
		1713E	and 4	46317 to 46319
50081c				Pitman Ball Screw Stud (upper)
1636E	"		и	
		Nut.		
46228				Pitman Ball Stud (lower)
1037c	"	"	"	" " " Set
10010		Screw		
*46229				Pitman Cap (lower)
171E	Looper "	"	"	" " Screw
*46230	"	"	и	" " (upper)
171E		"	"	" " Screw
*46315	"	"	"	" End Bearing (lower)
	"	"		End Dearing (lower)
*46316	"	"	"	(upper)
46317				11cad (10 Wel) 1105, 40220,
				15 and two 171E
46318				Pitman Head (upper) Nos. 46230,
		46316,	5008	31c and two 171E
46319	Looper	Bell C	rank	Pitman Rod
1706E	44	- 4	"	" " Nut (lower)
1713E	u	и	u	" " (upper)
46244	"	"	u	" Washer (fibre)
38439	a	Carrie	r wit	th 1143c and two 1147c
38440	44	"	Hir	nge Pin
38440 1147C	"	u	Hir.	nge Pin
1147c	"		"	" Set Screw
	 Looper	Carrie	r Pitr	" " Set Screw
1147c 46367	". Looper	Carrier 46176,	r Pitr 4624	" Set Screw
1147c 46367 50070c	Looper Looper	Carrie 46176, Carrie	r Pitr 4624 r Pitr	" Set Screw
1147c 46367 50070c 1636E	Looper Looper	Carrie 46176, Carrie	r Pitr 4624 r Piti	" " Set Screw man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " Nut
1147c 46367 50070c 1636E 46237	Looper Looper " "	Carrie 46176, Carrie	r Pitr 4624 r Pitr	" " Set Screw
1147c 46367 50070c 1636E 46237 1147c	Looper Looper " " "	Carried 46176, Carried	r Pitr 4624 r Pitr	" " Set Screw man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " Nut " " Stud (left) " " " Set Screw.
1147c 46367 50070c 1636E 46237 1147c *46238	Looper Looper " "	Carried 46176, Carried	r Pitr 4624 r Pitr	" " Set Screw
1147c 46367 50070c 1636E 46237 1147c *46238 171E	Looper Looper " " " " "	Carrier 46176, Carrie	r Pitr 4624 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " Nut " " Stud (left) " " Set Screw. " Cap (left) " " " Screw.
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238	Looper Looper " " "	Carried 46176, Carried """"""""""""""""""""""""""""""""""""	r Pitr 4624 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw " " (right)
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E	Looper Looper " " " " " "	Carried 46176, Carried """"""""""""""""""""""""""""""""""""	r Pitr 4624 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " Set Screw. " Cap (left) " " Screw " " (right) " " Screw
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238	Looper Looper " " " " "	Carried 46176, Carried """"""""""""""""""""""""""""""""""""	r Pitr 4624 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " Set Screw. " Cap (left) " " " Screw " (right) " " Screw " End Bearing (left)
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E	Looper Looper " " " " " "	Carried 46176, Carried """"""""""""""""""""""""""""""""""""	r Pitr 4624 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw. " (right) " " Screw. " End Bearing (left) " " (right)
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E *46239	Looper "" "" "" "" "" "" "" "" "" "" "" "" "	Carried 46176, Carried """"""""""""""""""""""""""""""""""""	r Pitr 4624 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw. " (right) " " Screw. " End Bearing (left) " " (right) " " Head (left) Nos. 46237 to
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E *46239 *46240	Looper "" "" "" "" "" "" "" "" ""	Carried 46176, Carried """"""""""""""""""""""""""""""""""""	r Pitr 4624 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw " " (right) " " Screw " " Ind Bearing (left) " " " (right) " " " Head (left) Nos. 46237 to two 171E
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E *46239 *46240	Looper "" "" "" "" "" "" "" "" ""	Carried 46176, Carried """"""""""""""""""""""""""""""""""""	r Pitr 4624 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw " " (right) " " Screw " " Ind Bearing (left) " " " (right) " " " Head (left) Nos. 46237 to two 171E
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E *46239 *46240 46241	Looper "" "" "" Looper	Carrie 46176, Carrie " " " " " " " " " " " " " " " " " " "	r Pitr 4624 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw " " (right) " " Screw " " Ind Bearing (left) " " (right) " " Head (left) Nos. 46237 to two 171E itman Head (right) Nos. 46238,
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E *46239 *46240 46241	Looper "" "" "" Looper	Carried 46176, Carried 46176, Carried 46239 : Carried 46240,	r Pitri 4624 r Pitri and t	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw. " (right) " " Screw. " End Bearing (left) " " (right) " " Head (left) Nos. 46237 to two 171E itman Head (right) Nos. 46238, 70c and two 171E
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E *46239 *46240 46241 46242 46176	Looper "" "" "" Looper	Carried 46176, Carried 46176, Carried 46239 : Carried 46240,	r Pitri 4624 4624 r Pitri and t 5007 r Pitri	" Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw. " (right) " " Screw. " End Bearing (left) " " (right) " " Head (left) Nos. 46237 to two 171E itman Head (right) Nos. 46238, 70c and two 171E man Rod.
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E *46239 *46240 46241 46242 46176 1708E	Looper "" "" "" Looper Looper	Carried 46176, Carried 46176, Carried 46239 : Carried 46240, Carri	r Pitri 4624 r Pitri and t 5007 r Pitri	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw. " (right) " " Screw. " End Bearing (left) " " (right) " " Head (left) Nos. 46237 to two 171E itman Head (right) Nos. 46238, 70c and two 171E man Rod. " Nut (left)
1147c 46367 50070c 1636E 46237 1147c *46238 171E *46238 171E *46239 *46240 46241 46242 46176	Looper "" "" Looper Looper Looper	Carried 46176, Carried """ """ """ """ """ """ """ """ """ "	r Pitr 4624 r Pitr and t er Pitr 5007 r Pitr	" " Set Screw. man complete, Nos. 1708E, 1709E, 41 and 46242 man Ball Screw Stud (right) " " " " Nut " " Stud (left) " " " Set Screw. " Cap (left) " " " Screw. " (right) " " Screw. " End Bearing (left) " " (right) " " Head (left) Nos. 46237 to two 171E tman Head (right) Nos. 46238, 70c and two 171E man Rod. " Nut (left)

```
Looper Carrier Rock Shaft with two 175D.
 175p
                     Adjusting Screw.....
38450
                     Crank (forked) with 159E
 159E
                         Clamping Screw...
38451
                         Slide Block....
46043
                     Hinge Pin....
1508E
                           Nut.....
 129E
                           Set Screw...
         Eccentric with two 465c.....
46149
 465c
               Set Screw....
         Needle Guard with 46105....
46204
46105
                 Pin...
 229p
                  Screw.....
1143c
         Set Screw.
38453
38454
             Bracket....
 123E
                  Screw.....
 391p
             Screw.....
38393
         Thread Guard.....
                  Screw....
 590p
46150
    Needle Bar (hollow).....
    Needle Bar complete, Nos. 46150 and 46152.....
46151
38456
           Bushing....
                 Set Screw....
1133E
46205
            Connecting Link.....
38459
                      Hinge Stud....
                       " " Nut....
1520E
46206
                  Stud with two 391E.....
 391E
                   " Clamping Screw....
46152
         Clamp with two 1498F.....
1498F
         Set Screw....
    Presser Bar...
17540
38464
            Bushing (lower).....
1133E
                      Set Screw.....
38456
                 (upper)....
1133E
                 " Set Screw.....
17541
            Lifter....
17542
                Hinge Pin....
38466
            Lifting Bracket with 453c and 892c....
 892c
                     Adjusting Screw . . . . .
 453c
                     Set Screw.....
38467
            Spring (flat).....
38468
                Stud....
26276
         Foot Hinge Pin....
46154
            Plate....
46087
            Shank....
    Presser Foot (hinged) complete, Nos. 26276, 46087
46155
         and 46154.....
```

190D	Presser Foot Screw.				
574D	Pressur	e Regu	lating Th	numb Screw	
1539D	u		"	" Lock Nut	
46207	Slack T	hread	Controlle	r	
46035	и	u.	и	Clamp	
190p	44	cc .	и	" Screw	
46208	"	"	Regulato		
46209	ш	и	"	Arm	
206F	"	"		" Screw	
38473	u	"		Bracket with 172c and	
00110		1823		Diachee With 1720 and	
172c	Slack T		Regulato	r Bracket Clamping Screw	
38474	Slack I	iii eau	"	Bushing.	
1823	. "	a	"	Roller and Stud	
50062D	"	"			
The state of the s	"	"	"	Screw	
1620E				" Nut	
2102	Tension	i (unae	er thread)		
1560c		"	u	Regulating Thumb Nut	
916F		"		Screw Stud	
42121	4		"	Spring	
17547	"	"	"	Thread Guide	
2102	"	(uppe	r thread)	Disc.	
1560c	"	"	и	Regulating Thumb Nut	
916F	"	266	"	Screw Stud	
13710	"	"	"	Spring	
17547	"	- "	ш	Thread Guide	
38225	Thread	(under	e) Eyelet	(back)	
190D	"	ш	и	" Screw	
38284	ш	**	и	(front)	
46049	- 11	"	Nipper	Cam with 465c	
465c	"	"	- 11	" Set Screw	
38210	"	"	**	Spring (lower)	
38211	"	"	и	" (upper)	
46247	"	u	"	" " Stop	
176F	"	"	. "	" Screw	
46210	"		Take-u	o with 465c	
465c	ш	"	"	Set Screw	
46211	"	и	"	Staple	
46040	"	"	"	" Bracket with 910c.	
690p	и	11	"	" " Screw	
46041	"	"	"	" Spring	
190D	"	"	"	" " Screw	
910c	- "	"	"	" Stop Screw	
	7 "			btop berem	
46212				Stripper	
207D	"	. "	"	" Screw	
38476	"	"	"	Thread Guard (left)	
207D			44	" " " Screw	
38477		и	· · ·	" " (right)	

207D	Thread	(unde	er) Take-up	Thread C	iu	ıa	rc	1 (r	ig	h	t) :	S	cı	·e	w
46213	"		er) Controll														
228p	"			Screw.													
46214	"	"	Take-up														
228p	ш	"	"	Screw													
46162	Throat	Plate	for 46143														
691F	"		Screw														

ACCESSORIES

2015	Machine Cushion (rubber)
	134 in. Wood Screw No. 16, to secure machine to
	table
4718	Machine Rest (felt)
35859	Oiler with Cap and 35861
35860	" 35859 filled with oil
35861	" Spout, 3½ in. long
26026	Screw Driver
38487	Threading Wire.
35095	Tweezers, 6 in
8908	Wrench for 1520, 1620, 1706, 1708 and 1709
23766	" " 1508 and 1636
19221	" " 1619

FOLDER

FOR BELT LOOPS OF TROUSERS, FOR SHORT LENGTHS OF MATERIAL

26027 Folder on Slide

30021	rolder on Silde		 	
35998	" Holder with 850	5 and 18116	 	
1460н				
18116				
8505		ivet		
36028	Feed Dog for 36027		 	
26276	Presser Foot Hinge Pin		 	
36029	" " Plate		 	
36030	" " Shank		 	
36031	Presser Foot (hinged)			
	26276, 36029 and	d 36030	 	
36032	Throat Plate for 36028	for 36027	 	

FOOT LIFTER PARTS

6439	Chain, 36 in. to 45 in
Nor	TE. When ordering No. 6439 give length required.
4879	Chain Connecting Link for 4885
23759	Lifting Lever.
802D	" " Hinge Screw
23761	" " Spring
1002D	" Stop Screw
4881	Treadle
4882	" Shaft
4883	" Spring
4884	" Stand
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two
	wood screws 1 in. No. 16
23769	Foot Lifter complete, Nos. 802D, 1002D, 4885, 6439,
	23759 and 23761

KNEE LIFTER PARTS

			211 121(1.11(10
23759	Liftin	g Lever	•
23760	"	"	Connecting Rod for 23768
38384	"	"	" " " 38385
802D	ш	"	Hinge Screw
23761	"	u	Spring.
1002D	и	ш	Stop Screw
2763	Rock	Shaft	
12242	"		Hanger with two wood screws 1 in.
			0
6335	Rock	Shaft F	Knee Arm
6336	Rock		Knee Arm complete, Nos. 2766, 2767
		and 6	335
2766	Rock	Shaft F	Knee Arm Hub with 356c
356c	"	ш	" " Set Screw
2767	"	u	" Plate with 356c
356c	"	"	" Set Screw
6337	"	" L	ifting Bracket with two 356c
7125	"	"	" " Hook
356c	"	"	" " Set Screw
356c	**	"	" Set Screw
2770	"		top Dog with 356c
356c	"	u	" Set Screw
23767	Rock		omplete, Nos. 2763, 2770, 6336, 6337,
			and two 12242
23768	Knee		complete (power table) Nos. 802D,
		1002D	, 23759 to 23761 and 23767
38385	Knee	Lifter	complete (bench stand) Nos. 802D,
		1002D	, 23759, 23761, 23767 and 38384

THREAD UNWINDER

FOR THREE LARGE SPOOLS OR THREE LARGE CONES OF THREAD

27623	Spool	Pin
155c	u	" Set Screw
41434	ш	Rest
41435	u	" 41434 with 1149c and three each 155c
		and 27623
1149c	Spool	Rest Set Screw.
27940	u	Stand with 453c
41514	. "	Weight, 4 in. diam., with 41515
41515	u	" Centre Pin
27739	Threa	d Cone (wood)
41436	u	Guard
41437	"	" Rod, 30 in. long, with 735c
453c	u	" Set Screw
735c	"	" Set Screw
41438	Threa	d Unwinder complete, Nos. 27940, 41435 to
		41437 and three each 27739, 41514 and wood
		screws 1 in. No. 12.