LIST OF PARTS COMPLETE

FOR

NO. 62-39 MACHINE

Two needles, one looper, gauges from $\frac{1}{10}$ inch to $\frac{1}{10}$ inch. For silking the backs of gloves

SUPERSEDES 62 S. V. 28 MACHINE

	11(1:1)	
	Arm, upper and lower (solid)	
23702	" Rock Shaft.	*
38411	" " Crank (back) with two 1497c	
1497c	Det Bereit.	
38412	" " (front) with 443c	
23724	" " " " Pin	
443c	" " " Set Screw	
38413	" Rotary Shaft	
38329	" " Collar with two 457c	
457c	" " Set Screw	
23872	" " Flanged Bushing	
159F	" " " Screw	
4784	" " " Oil Pad (felt)	
144D	" " Screw	. 1
17509	" Side Cover (lower)	
286D	" " " Thumb Screw	
38489	" " (upper)	
38490	" " " 38489 with 38491 and tw	0
	26092	
190p	Arm Side Cover (upper) Screw	
38491	" " " Thread Eyelet (double)	
26092	" " " " " Rivet	
23873	Balance Wheel with two 430c	
430c	" Set Screw	
38414	Cloth Plate	
691F	" " Screw (left)	
1094F	" " (right)	
38415	" " Slide (large) with 1602E	
38416	" " " Spring	
725н		
38417	Cloth Plate Slide (large) complete, Nos. 38415, tw	70
	38416 and four 725H	

38418	Cloth Plate Slide (small)
38419	" " " Spring
725н	
38420	Cloth Plate Slide (small) complete, Nos. 38418,
	38419 and two 725н
38421	Cloth Plate complete, Nos. 38414, 38417 and 38420
38422	Crank Connecting Rod
*38423	" " Cap
158E	" " " Screw
372c	" " Hinge Screw
1518E	" " " " Nut
46110	Face Plate
46111	" " Pin
286D	" " Thumb Screw
38425	Feed Bar with 231c and 460c
23716	" " Bushing
23726	" " Hinge Pin
231c	" " Set Screw
38426	" " Slide Block
38427	" Connecting Rod with 1057E
*23865	" " " Cap
1057E	" " " Screw
23866	" " Hinge Pin (eccentric)
1057E	" " " Clamping Screw
	Claimping Serent.
46164	" Dog
46164 898D	" Dog
46164 898D 460c	" Dog. " " Screw. " " Stop Screw.
46164 898D 460c *38127	" Dog. " " Screw. " Stop Screw. " Eccentric.
46164 898D 460c *38127 *23729	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body.
46164 898D 460C *38127 *23729 443C	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " Set Screw.
46164 898D 460C *38127 *23729 443C 21331	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " Set Screw. " " Pressure Spring.
46164 898D 460c *38127 *23729 443c 21331 21332	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " Set Screw. " Pressure Spring. " " " Cap.
46164 898D 460c *38127 *23729 443c 21331 21332 934D	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " Set Screw. " " Pressure Spring. " " " Cap. " " " " Screw.
46164 898D 460c *38127 *23729 443c 21331 21332 934D 196F	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " Set Screw. " " Pressure Spring. " " " Cap. " " " Screw. " " Set Screw.
46164 898D 460c *38127 *23729 443c 21331 21332 934D	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " Set Screw. " " Pressure Spring. " " " Cap. " " " Screw. " " Set Screw. " " Set Screw.
46164 898D 460c *38127 *23729 443c 21331 21332 934D 196F	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " Set Screw. " " Pressure Spring. " " " Cap. " " " Screw. " " Set Screw.
46164 898D 460c *38127 *23729 443c 21331 21332 934D 196F	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " " Set Screw. " " Pressure Spring. " " " " Cap. " " " " Screw. " " Set Screw. " " Set Screw. " " Set Screw. " " Set Screw. " " and two 443c
46164 898D 460c *38127 *23729 443c 21331 21332 934D 196F	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " " Set Screw. " " Pressure Spring. " " " " Cap. " " " Set Screw.
46164 898b 460c *38127 *23729 443c 21331 21332 934b 196F 38128	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " " Set Screw. " " Pressure Spring. " " " " Cap. " " " " Screw. " " Set Screw. " " Set Screw. " " Set Screw. " " Set Screw. " " and two 443c
46164 898b 460c *38127 *23729 443c 21331 21332 934b 196F 38128	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " " Set Screw. " " Pressure Spring. " " " " Cap. " " " Set Screw. Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c. Feed Lifting Eccentric with two 465c
46164 898b 460c *38127 *23729 443c 21331 21332 934b 196F 38128	" Dog. " " Screw. " " Stop Screw. " Eccentric. " " Body. " " " Set Screw. " " Pressure Spring. " " " " Cap. " " " Screw. " " Set Screw. " " Set Screw. " " Set Screw. Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c Feed Lifting Eccentric with two 465c " " Cover. " " " Screw.
46164 898b 460c *38127 *23729 443c 21331 21332 934b 196F 38128 38429 46113 335b 465c	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " " Set Screw. " " Pressure Spring. " " " " Cap. " " " " Screw. " " Set Screw. " " Set Screw. Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443c Feed Lifting Eccentric with two 465c " " Cover. " " Screw " " Screw " " Screw
46164 898b 460c *38127 *23729 443c 21331 21332 934b 196F 38128 38429 46113 335b 465c 1103c	" Dog. " " Screw. " " Stop Screw. " Eccentric " " Body. " " Set Screw. " " Pressure Spring. " " " Cap. " " " Screw. " " Set Screw. " " Set Screw. " " Set Screw. Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443c Feed Lifting Eccentric with two 465c. " " Cover. " " Screw. " " Screw. " " Set Screw. " " Regulating Screw.
46164 898b 460c *38127 *23729 443c 21331 21332 934b 196F 38128 38429 46113 335b 465c 1103c 38431	" Dog. " " Screw. " " Stop Screw. " Eccentric. " " Body. " " Set Screw. " " Pressure Spring. " " " Cap. " " " Screw. " " Set Screw. " " Set Screw. " " Set Screw. Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C. Feed Lifting Eccentric with two 465C. " " Cover. " " Screw. " " Screw. " " Set Screw. " Regulating Screw. " Rocking Frame.
46164 898D 460C *38127 *23729 443C 21331 21332 934D 196F 38128 38429 46113 335D 465C 1103C 38431 38432	" Dog. " " Screw. " " Stop Screw. " Eccentric. " " Body. " " Set Screw. " " Pressure Spring. " " " Cap. " " " Set Screw. " " Set Screw. " " Set Screw. " Set Screw. Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C Feed Lifting Eccentric with two 465C. " " Cover. " " " Screw. " " Set Screw. " Regulating Screw. " Rocking Frame. " " Bracket with two 465C.
46164 898D 460C *38127 *23729 443C 21331 21332 934D 196F 38128 38429 46113 335D 465C 1103C 38431 38432 123E	" Dog. " " Screw. " " Stop Screw. " Eccentric. " " Body. " " Set Screw. " " Pressure Spring. " " " Cap. " " " Screw. " " Set Screw. " " Set Screw. " " Set Screw. Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C. Feed Lifting Eccentric with two 465C. " " Cover. " " " Screw. " " Set Screw. " Regulating Screw. " Rocking Frame. " " Bracket with two 465C. " " " Screw.
46164 898D 460C *38127 *23729 443C 21331 21332 934D 196F 38128 38429 46113 335D 465C 1103C 38431 38432	" Dog. " " Screw. " " Stop Screw. " Eccentric. " " Body. " " Set Screw. " " Pressure Spring. " " " Cap. " " " Set Screw. " " Set Screw. " " Set Screw. " Set Screw. Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C Feed Lifting Eccentric with two 465C. " " Cover. " " " Screw. " " Set Screw. " Regulating Screw. " Rocking Frame. " " Bracket with two 465C.

46066	Looper with 590p and 38393
38435	" Bell Crank
38436	" " Hinge Stud
4430	" " " Set Screw
46101	" " " Pitman
7770	
16361	
	Nut
7770	C Looper Bell Crank Pitman Ball Screw Stud (upper)
16361	E " " " " " " " " " " " " " " " " " " "
	Nut
*46102	Looper Bell Crank Pitman Cap (lower)
1871	O " " " " " Screw
*46103	" " " (upper)
1871	o " " " " Screw
38439	" Carrier with 1143c and two 1147c
38440	" " Hinge Pin
11470	C " " Set Screw
38441	Looper Carrier Pitman complete, Nos. 1697c, 1698c
	and 38445 to 38447
500160	Looper Carrier Pitman Ball Screw Stud (right)
15181	
	Nut
38442	Looper Carrier Pitman Ball Stud (left)
11470	
*42525	" " Cap (left)
1871	
*42524	" " " (right)
1871	" " " Screw
*38443	" " End Bearing (left)
*38444	" " " " (right)
38445	" " Head (left) Nos. 38442,
	38443, 42525 and two 187D
38446	Looper Carrier Pitman Head (right) Nos. 38444,
00110	42524, 50016c and two 187D
38447	
	Looper Carrier Pitman Rod
1697	Looper Carrier Pitman Rod
16976 16986	Looper Carrier Pitman Rod " " Nut (left). " " " (right).
16976 16986 46042	Looper Carrier Pitman Rod " " Nut (left) " " " (right) " " Rock Shaft with two 175D.
16976 16986 46042 1751	Looper Carrier Pitman Rod " " Nut (left) " " (right) " " Rock Shaft with two 175D. " " " Adjusting Screw
16976 16986 46042	Looper Carrier Pitman Rod " " Nut (left) " " " (right) " " Rock Shaft with two 175D " " " Adjusting Screw " " " Crank (forked) with
16976 16986 46042 1751 38450	Looper Carrier Pitman Rod " " Nut (left) " " " (right) " Rock Shaft with two 175D " " " Adjusting Screw " " " Crank (forked) with
16976 16986 46042 1751 38450	Looper Carrier Pitman Rod " " Nut (left) " " " (right) " " Rock Shaft with two 175D " " " Adjusting Screw " " " Crank (forked) with 159E. Looper Carrier Rock Shaft Crank Clamping Screw
16976 16986 46042 1751 38450	Looper Carrier Pitman Rod " " Nut (left) " " " (right) " Rock Shaft with two 175D " " " Adjusting Screw " " " Crank (forked) with
16976 16986 46042 1751 38450	Looper Carrier Pitman Rod " " Nut (left) " " " (right) " " Rock Shaft with two 175D " " " Adjusting Screw " " " Crank (forked) with 159E. Looper Carrier Rock Shaft Crank Clamping Screw
16976 16986 46042 1751 38450 1598 38451	Looper Carrier Pitman Rod " " " Nut (left) " " " (right) " " Rock Shaft with two 175D " " " Adjusting Screw " " " Crank (forked) with 159E. Looper Carrier Rock Shaft Crank Clamping Screw " " " " Slide Block " " " " " Hinge Pin

38452	Looper Eccentric wit	h two 465c
465c		Screw
46104		l with 46105
46105	" " "	Pin
229p		Screw
1143c		Belew
38453		
	Shart	
38454	" " Bracke	tScrew
123E		
391D		
38393	" Thread Guar	d
590D		Screw
46067		
46165		Nos. 2273, 46067, 46070 and
38456	0	••••••
1133E		Set Screw
38458	" " Connecting	ng Link
38459	, " " "	" Hinge Stud
1520E	<i>u u u</i>	" " " Nut
38460	<i>u u u</i>	Stud with two 391E
391E	u u u	" Clamping Screw
46166	" Clamp with 4	62F
46070	" " Gib	
2273	" " Pin	
462F	" " Screw.	
46050	" Guard	
190p	" " Screw.	
46002		able, with two 38463
38463		king (felt)
225F		ew
17540		
38464	the state of the state of the state of the state of	(lower)
1133E		" Set Screw
38456		(upper)
1133E		" Set Screw
17541	" " Lifter	
17542		nge Pin
38466		Bracket with 453c and 892c
892c	" " "	" Adjusting Screw
453c		" Set Screw
38467		lat)
38468	oping (tud
15261		ar with 237F.
237F	" " " "	Set Screw
46167	" Foot with 46	168 and two 662D.
46168		
662D		crew
190D		

574D	Pressure	Regula	ating Ti	humb Screw	·	
1539D	u	"		u u	Lock N	
46169	Slack T	hread C	ontrolle	r		
460c	u	u	"	Set Screw		
2102	Tension	(under	thread)	Disc		
1560c	44	ш	и,	Regulating	Thum	b Nut
916F	4	u	и	Screw Stu	d	
10148	"	"	"	Spring		
17547	"	и		Thread Gu	ide	
2102	"	(upper	thread)	Disc		
1560c	"	"	ш	Regulating	Thum	b Nut
916F	. "	"	"	Screw Stu	d	
13710	44	"	44	Spring		
17547	и	"	"	Thread Gu		
38225	Thread	(under)	Eyelet	(back)		
190p	"	"	"	" Scre	w	
38284	"	"	- "	(front)		
46049	"	"	Nipper	Cam with	465c	
465c	"	ш	и	" Set Se	crew	
38210	"	"	и	Spring (lov	ver)	
38211	"	"	"	" (up	per)	
176F	"	"	"		ew	
38475		"	Take-u	p with 4650	3	
465c	"	"	"	Set Screw		
38478	и	- 44	. "	Staple wi	th two	each 590D
	a	nd 3848	31			
46040	Thread	(under)		p Staple Br		
690D	"	"	"	"	" 5	Screw
46041	" .			" Sp	ring	
190D	"	"	"	" .	" Sc	rew
910c	"	* 44	"		•	w
38481	"	"	"		read	Guard
590D	"	"		"	"	"
	S	crew				
38482	Thread	(under)	Take-			
207D	"	"	. "		Screw.	
38476	и	"	**	Thread	Guard	d (left)
207D	"	"	"	"	"	. "
	S	crew				
38477	Thread	(under) Take-	-up Thread	Guar	d (right)
207D	"	- "	"	16	"	44
		crew				
38483	Thread	(upper)	Contro			
206F	"	и	- 4	Screw.		
46170	"	"	Eyelet			
190D	"	"	u	Screw		
46171	"	"	Take-u	ip with 223		
223D	"	"	"	Clamping	Screw	

46172	Throat	Plate	with 665D and 46075, for 461	64
691F	u	ш	Screw	
46075	и	ш	Thread Retainer	
665D	"		" Screw	

ACCESSORIES

2015	Machine Cushion (rubber)
	134 in. Wood Screw No. 16 to secure machine to
	table
35859	Oiler with Cap and 35861
35860	" 35859 filled with oil
35861	" Spout, 3½ in. long
26026	Screw Driver.
38487	Threading Wire.
35095	Tweezers, 6 in
8908	Wrench for 1519, 1520 and 1620
23766	" " 1508, 1518, and 1636
4822	" " 1697 and 1698

FOOT LIFTER PARTS

6439 Chain 36 in to 45 in

0100	Onam, of m. to 49 m
Note	.—When ordering No. 6439 give length required.
4879	Chain Connecting Link for 4885
23759	Lifting Lever.
802D	" " Hinge Screw
23761	" " Spring
1002D	" "Stop Screw
4881	Treadle
4882	" Shaft
4883	" Spring
4884	" Stand
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two
	wood screws 1 in. No. 16
23769	Foot Lifter complete, Nos. 802D, 1002D, 4885, 6439,

KNEE LIFTER PARTS

23759 and 23761....

23759	Lifting	Lever							 	80		
23760	"	и	Connecting	Rod	for	23'	768	3	 			
38384	а	и	и	"	u	388	85	i				
802D	"	"	Hinge Scre	w	***						. ,	
23761	"	и	Spring									
1002D	- 44	- 44	Stop Screw									

2763	Rock	Shaft			****				
12242	ш	"	Hang	er w	ith t	wo w	rood s	crews	1 in.
		No.	10						
6335	Rock	Shaft	Knee	Arn	1				
6336							Nos.		
2766	Rock						356c.		
356c	"	ш	"	"	"	Set S	Screw		
2767	ш	"	""	Plat	e wit	h 356	C		
356c	44	"	"	"	Set	Screv	v		
6337	и	"	Liftin	g Br			two 3		
7125	44	"			ш		k		
356c	"	"	- 44			ш	Set S	Screw.	
356c	"	и	u		"	Set	Screw.		*** *** *
2770	"	"	Stop	Dog	with	356c.			
356c	. "	ш							
23767	Rock	Shaft	comp	lete,	Nos.	2763,	2770,	6336,	6337,
		7125	and t	two 1	2242	,			
23768	Knee	Lifte	r com	plete	e (po	wer	table)	Nos.	802D,
		1002	D, 23'	759 t	o 23	761 a	nd 237	767	
38385	Knee						tand)		
		1002	D, 237	759,	23761	1, 237	67 and	1 3838	4

THREAD UNWINDER

FOR THREE LARGE SPOOLS OR THREE LARGE CONES OF THREAD

27623	Spool	Pin
155c	. "	" Set Screw
41434	"	Rest
41435	"	" 41434 with 1149c and three each 155c
		and 27623
1149c	Spool	Rest Set Screw.
27940	ш	Stand with 453c.
41514	и	Weight, 4 in. diam., with 41515
41515	ш	" Centre Pin
27739	Threa	d Cone (wood)
41436	u	Guard
41437	"	" Rod, 30 in. long, with 735c
453c	16	" Set Screw
735c	ш	" Set Screw
41438	Threa	d Unwinder complete, Nos. 27940, 41435 to
		41437 and three each 27739, 41514 and
		wood screws 1 in. No. 12

