62-43

Numbering Department March 26, 1913

LIST OF PARTS COMPLETE



FOR

Machine No. 62-43

THE SINGER MANUFACTURING COMPANY

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 62-43

For Skirts, Muslin Underwear, etc. Has positive ruffling mechanism below with graduated adjustment above the cloth plate; has upper right hand edge folder, ruffle guide and under strip folder. For inserting a flounce, lace or embroidery and securing it under a folded strip in one operation. Two needles, two loopers; gauges 1/8, 3/16 or 1/4 inch.

(FORMERLY 62 S. V. 39 MACHINE)

*52679	Arm,	uppe	er and	lower	(solid)	with 52705 and two
		949	E			
52630	Arm	Oil T	ube w	ith 490	92, for	oiling 46221
49092	u	"	" P	acking	(felt)	
46216	"	Rock				
46217	u		"	Crank	(back)	with two 1497c
1497c	"	u	"	"	ш	Set Screw
38412	"	u	"	ш	(front)	with 443c
23724	и	"	u	ш	и	Pin
443c	и	"	a	и	"	Set Screw
46218	ш	Rota	y Sha			
38329	"	"	"	Colla	ar with	two 457c
457c	u	"	"	"	Set S	Screw
23872	и	"		Flan	ged Bu	shing
159F	u	"	"	. "		" Screw
4784	"	"	"	Oil I	Pad (fel	t)
144D	"	"	ш	Scre	w	
17509	"	Side (Cover	(lower)		
286D	"	"	"	"	Thum	Screw
52554	"	"	"			
9533	"	"	"	"	Pin	
176D	"	u	"	ш	Screw	
23873	No. of Concession, Name of Street, or other party of the last of t	nce W				
430c	ш		" 5	Set Scre	ew	
52680	Cloth	Plat	e. Ol	d Seria	l No. 2	3513

52681	Cloth	Plate Extens	ion	
157D	"	" "	Screw	
691F	"	" Screw		
52682	"	" Slide (l	arge)	
52683	α,	u u		Old Serial No.
		20752		
52684	Cloth	Plate Slide	(large) Spring	Bracket (back)
330E	ш	u u	" "	" "
		Screw		
52685	Cloth	Plate Slide		Bracket (front)
330E	"	" "	" "	" "
0001		Screw		
725H	Cloth	Plate Slide (1	arge) Spring Sc	rew
52686				Nos. 52682; two
32000	Cloth			
38418	Cloth			
	· "	riate since (s		
38419	"	" "	spring	rew
725н			50	
38420	Cloth			ete, Nos. 38418,
	C1 - 41			0, 52680, 52681,
52687	Cloth			nd four 330E
52688	Cloth			Serial No. 21702.
	Cloth	riate Suppor		
COID	44	" "	" Conor	
691F	Cuant	" " "	" Screv	V
691F 46221	Crank		Rod with 46222	2, 46223 and two
46221		each 896E a	Rod with 46222 nd 1057E	2, 46223 and two
46221 50069c		each 896E a	Rod with 46222 nd 1057E	2, 46223 and two
46221 50069c 1619E		each 896E a Connecting I	Rod with 46222 nd 1057E Rod Ball Screw	2, 46223 and two Stud
46221 50069c 1619E *46222	Crank	each 896E a Connecting I	Rod with 46222 nd 1057E Rod Ball Screw	2, 46223 and two Stud. " Nut
46221 50069C 1619E *46222 896E	Crank "	each 896E at Connecting I	Rod with 46222 nd 1057E Rod Ball Screw " " " Cap (lower) " " "	2, 46223 and two Stud. " Nut Screw
46221 50069C 1619E *46222 896E *46223	Crank " " "	each 896E at Connecting I	Rod with 46222 nd 1057E Rod Ball Screw " " " Cap (lower) " " "	2, 46223 and two Stud. " Nut Screw
50069c 1619E *46222 896E *46223 1057E	Crank	each 896E a Connecting I	Rod with 46222 nd 1057E Rod Ball Screw " " Cap (lower) " " (upper " " (upper	2, 46223 and two Stud. " Nut Screw Screw.
50069c 1619E *46222 896E *46223 1057E 46225	Crank " " " " " " " " " " " " "	each 896E a Connecting I	Rod with 46222 nd 1057E Rod Ball Screw " " " Cap (lower) " " (upper " " " " Washer (fib	2, 46223 and two Stud. "Nut Screw Screw screw.
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179	Crank " " " " " " " " " " " " "	each 896E a Connecting I " " " " " " " " " " " " " " " " " " "	Rod with 46222 nd 1057E Rod Ball Screw " " " Cap (lower) " " " (upper " " " " Washer (fib	Stud. " Nut Screw. Screw. screw.
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111	Crank " " " " " Face	each 896E a Connecting I " " " " Plate	Rod with 46222 nd 1057E Rod Ball Screw " " Cap (lower) " " (upper " " " " Washer (fib	2, 46223 and two Stud. " Nut Screw Screw
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D	Crank " " " " " Face " "	each 896E a Connecting I " " " " Plate " Pin " Thumb	Rod with 46222 nd 1057E Rod Ball Screw " " (upper " " " (upper " " " " " Washer (fib	2, 46223 and two Stud. "Nut Screw.). Screw.
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425	Crank " " " " " Face " "	each 896E a Connecting I " " " Plate " Pin " Thumb Bar with 2310	Rod with 46222 nd 1057E Rod Ball Screw " " (upper " " " (upper " " " " " Washer (fib	2, 46223 and two Stud. "Nut Screw.). Screw.
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716	Crank " " " Face " " Feed	each 896E a Connecting I " " " Plate " Pin " Thumb Bar with 2310 " Bushing.	Rod with 46222 nd 1057E Rod Ball Screw " " (upper " " " (upper " " " " " Washer (fib	2, 46223 and two Stud. "Nut Screw.). Screw.
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716 23726	Crank " " " " " " " " " " " " " " " " " "	each 896E a Connecting I " " " " " " " Plate " Pin " Thumb Bar with 2316 " Bushing. " Hinge Pin	Rod with 46222 nd 1057E Rod Ball Screw " " (upper " " " (upper " " " " " Washer (fib	2, 46223 and two Stud. "Nut Screw.). Screw.
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716 23726 231C	Crank " " " " " " " " " " " " " " " " " "	each 896E a Connecting I " " " " " " " " " " " " " " " " " "	Rod with 46222 nd 1057E Rod Ball Screw " " (upper " " (upper " " " washer (fib	2, 46223 and two Stud. "Nut Screw.). Screw. ore).
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716 23726 231C 38426	Crank " " " " " Face " " Feed " "	each 896E a Connecting I " " " " " " " " " " " " " " " " " "	Rod with 46222 nd 1057E Rod Ball Screw " " (upper " " " " " " Washer (fib	2, 46223 and two Stud. "Nut Screw.). Screw. ore).
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716 23726 231C	Crank " " " Face " " Feed " "	each 896E a. Connecting I " " " " " " " " " " " " " " " " " "	Rod with 46222 nd 1057E Rod Ball Screw " " (upper " " " " " " Washer (fib	2, 46223 and two Stud. "Nut Screw.). Screw. ore). , 23865 and two
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716 23726 231C 38426 38427	Crank " " " " " " " " " " " " " " " " " "	each 896E a Connecting I " " " " " " " " " " " " " " " " " "	Rod with 46222 nd 1057E Rod Ball Screw " " (upper " " " " washer (fib	2, 46223 and two Stud. "Nut Screw.). Screw. ore).
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716 23726 231C 38426 38427	Crank " " " " " " " " " " " " " " " " " "	each 896E a Connecting I " " " " " " " " " " " " " " " " " "	Rod with 46222 nd 1057E Rod Ball Screw " " (upper " " " " " " Washer (fib	2, 46223 and two Stud. "Nut Screw. Screw. ore).
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716 23726 231C 38426 38427 *23865 896E	Crank " " " Face " " Feed " "	each 896E a Connecting I " " " " " " " " " " " " " " " " " "	Rod with 46222 nd 1057E Rod Ball Screw " " Cap (lower) " " " (upper " " " " " Washer (fib	2, 46223 and two Stud. "Nut Screw. Screw. ore). 4, 23865 and two
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716 23726 231C 38426 38427 *23865 896E 23866	Crank " " " Face " " Feed " " "	each 896E a Connecting I " " " " " " " " " " " " " " " " " "	Rod with 46222 nd 1057E Rod Ball Screw " " " (upper " " " " " " " " " " " " " " " " " " "	2, 46223 and two Stud. "Nut Screw. Screw. ore). , 23865 and two
46221 50069C 1619E *46222 896E *46223 1057E 46225 46179 46111 286D 38425 23716 23726 231C 38426 38427 *23865 896E	Crank " " " Face " " Feed " " " Feed " "	each 896E a Connecting I " " " " " " " " " " " " " " " " " "	Rod with 46222 nd 1057E Rod Ball Screw " " " (upper " " " " " " " " " " " " " " " " " " "	2, 46223 and two Stud. "Nut Screw. Screw. ore). 23865 and two eccentric) amping Screw.

898D	Feed	Dog Screw
460c	"	" Stop Screw
*38127	"	Eccentric
*23729	"	" Body
443c	"	" Set Screw
21331	"	" Pressure Spring
21332	"	" " " Cap
934D	"	" " " Screw
196F	"	" Set Screw
38128	Feed	Eccentric (adjustable) complete, Nos. 196F,
		934D, 1103C, 21331, 21332, 23729, 38127 and
		two 443c
38429	Feed "	Lifting Eccentric with two 465c
46113	"	Cover
335D	"	Screw
465c	"	" Set Screw
1103c		Regulating Screw
38431	. ",	Rocking Frame
38432	' "	" Bracket with two 465c
123E	"	Screw
38433	"	ninge Fin
465c		Set Screw
46474	Loop	er (back) with 590D and 46115
1147c	"	Set Screw
46115	"	Inread Guard (double)
590D	"	Screw
46475	"	(front)
1120c	"	Set Screw
46226	"	Bell Crank with 1037c.
38436		" " Hinge Stud
443c		Set Screw
46227	Loope	er Bell Crank Pitman complete, Nos. 1706E,
500709	T	1713E and 46233 to 46235
	Loope	er Bell Crank Pitman Ball Screw Stud (upper)
1636E		Nut.
46228	Loone	er Bell Crank Pitman Ball Stud (lower)
1037c	"	" " Set
100.0		Screw
*46229	Loope	er Bell Crank Pitman Cap (lower)
171E	u u	" " " Screw
*46230	ш	" " (upper)
171E	"	" " " " Screw
*46231	ш	" " End Bearing (lower)
*46232	ii.	" " " (upper)
46233	ш	" " Head (lower) Nos. 46228
		46229, 46231 and two 171E
46234	Loope	er Bell Crank Pitman Head (upper) Nos. 46230,
		46232, 50070c and two 171E

46235	Looper	Bell Cr	ank Pit	tman	Rod
1706E	ű	4	ш	"	" Nut (lower)
1713E	ш	"	u	u	" " (upper)
38496	"	Carrier	with 1	120c	and three 1147c
38440	"	"			
1147c	"	ш	"	" "	Set Screw
	т	0	D'4		
46236					plete, Nos. 1708E, 1709E
F0050-					
	Looper	Carrier	Pitma	n Bai	l Screw Stud (right)
1636E	"	"	"		Nut
46237	"	"	"	"	Stud (left)
1147c					" Set Screw
*46238	"	"	"	Car	o (left)
171E	"		"	"	" Screw
*46238	u	ee	"	"	(right)
171E	u	"	"	"	" Screw
*46239	,"	"	"	End	d Bearing (left)
*46240	"	u	"	"	" (right)
46241	ш	"	"	He	ead (left) Nos. 46237 to
10211		46239 a	nd two		1.,
46242	Looner				ead (right) Nos. 46238,
10212					wo 171E
46243		Carrier			
1708E	Looper "	Carrier "	r Itilia	ii itot	
	"	"	. "	и	Nut (left)
1709E	"	"	"		" (right)
46244	"	"		Wa	sher (fibre)
46042	"	"	Rock	Shaft	with two 175D
175D				"	Adjusting Screw
38450	"	"	"	"	Crank (forked) with
		159E			
159E	Looper	Carrier	Rock	Shaft	Crank Clamping Screw
38451	"	u	"	ш	" Slide Block
46043	ш	и	u	u	Hinge Pin
1508E	"	ш	и	"	" " Nut
129E	u	ш	ш	· u	" Set Screw
38452	"	Eccent	ric with	h two	465c
465C	u	"			V
38453	"	Shoft			· · · · · · · · · · · · · · · · · · ·
391F	"				
38454	"				
	"	"	oracket		
123E		D (1	11		w
23793					0050 00500 1 40455
46476	Needle				2273, 23793 and 46477.
38456	"	" Bu			
1133E					rew
38458	"			g Lin	k
38459	"	"	"	"	Hinge Stud
1520E	"	"	"	"	" " Nut

38460	Needle Bar Connecting Stud	with two 391E
391E	u u u	Clamping Screw
46477	" Clamp with 46478 an	
2273		
46478	" " Thread Guide	
52690	" Guard (back)	
176F	" " Screw	
52691	" " (front)	
206F		
1498F	" Set Screw	
17540	Presser Bar	
38464	" Bushing (lower)	
1133E		Set Screw
38456	" " (upper)	••••
1133E	u u u u	Set Screw
17541	" " Lifter	
17542		1
38466		with 453c and 892c
892c		Adjusting Screw
453c		Set Screw
38467		
38468		
36528	" -	
36529	" Edge Folder	
665D	" " " Scr	ew
36530		
664D		ew
36531	" Ruffle Retaining	g Blade. Old Serial No.
665D	Presser Foot Ruffle Retainin	g Blade Screw
36532	Presser Foot complete, with	
		guide, Nos. 36528 to
		four 665D. Old Serial
	No. 22713	
36533		
36534		wer)
665D		" Screw
36535	" " " (ur	pper)
665D	<i>u u u u</i>	" Screw
36536	" Ruffle Retainin	g Blade
665D	u u u u	" Screw
36537	Presser Foot (lap seam feller	
	to 36536 and six 665D	Old Serial No. 22887.
36538	Presser Foot (strip folding)	
36530		wer)
664D	" " " "	Screw
36539	" " " (up	per)
665D		Screw

	36531	Presser	Foot R	uffle R	etaining	Blac	de		
	665D	"	u_	"		"		ew	
	36540	Presser	Foot	strip f	olding)	com	plete,	with	right
					ide, and				
41	Story Folder				3531, 36				
			and fou	r 665D.	Old S	erial	No. 23	1527	
	190D	Presser							
	574D	Pressure	e Regul	ating T	humb	Screw			
	1539D	"	u		" .	"		Nut	
	52692	Ruffling	Blade.	Old	Serial N	No. 22	141		
	52693	"	ш	Holder	with 9	558 a	nd 52	695	
	50140D	"	"	u	Hinge	Screv	v		
	52694	"	ш	"	Spring				
	812D	"	"	u	"			Screw	
	1621c	"	u	ш	u		ш	"	Lock
		1	Nut						
	9558	Ruffling	Blade	Holder	Spring	Pin.			
	910c	"	"	u-	Stop S				
	-1550н	"	"	u	"	"	Nut		
	665D	"	u	Screw.					
	52695	"			Pin				
	52696	и			k (forke				
		4	148c						
	52697	Ruffling	Drivin	ng Cran	k (fork	ed) 5	52696	with	52703
		2	and two	each :	136D an	d 207	7		
	52698	Ruffling	Drivin	g Cran	k Oil Pa	ad (fe	lt)		
	448C	"	"	"					
	52699	"	и	"					
	52700	"	ш	u	"			1 two	
	457c	u	u	"	"	"	Set	Screw	7
	52701	и	u	"	Slide	Block	with	10120	D
	1012c	ш	u	"	"	u	Clan	ping	Screw
	52702	"	и	и	"	"	Pin.		
	52703	"	u	"	и	"		Holde	
		4	40c						
	2077	Ruffling	Drivin	g Cran	k Slide	Block	Pin	Holde	r Pin.
	136p	"_	"	"	. "	"	"		Screw
	440c	"	"	. "	и	"	"	Set Sc	rew
	52704	"	Eccent	tric wit	h two 4	48c			
	448c	u	ш	Set	Screw.				
*	52705	"	Frame						
	949E	u	ш	Screw					
	52706	а	Regula	ator wit	th 624c				
	52707	"	"	Co	nnectio	n			
	52708	"	"		и	Hin		ud	
	621D	"	"		u	"	"	Scr	ew
	52709	"	u	Ha	indle wi	th 64	7D		
	647D	"	"		" Cla	ampir	ng Scr	ew	

2049	Ruffling	g Regula	ator Pin	
624c	u	"	Set	Screw
52710	"	и	Sha	ıft
283D	"	"	Thu	ımb Screw
9525	"	"	•	" Washer
52711		Separa	ting Bla	ade. Old Serial No. 23775
664D		"	1	' Screw
52712	"	Shaft.		
52713	Ruffling			eft) with 177c, 9558 and two
		145D		
145D	Ruffling	g Shaft	Crank (left) Clamping Screw
177c	"	ш	"	" Set Screw
52714	u	u	" (r	right) with 448c and 624c
448c	a	"	"	" Set Screw
52715	u	"	"	" Slide Block with 1012c
1012c	"	- "	"	" " Clamping
		Screw		
52716		g Shaft		right) Slide Block Pin
624c	"	~ "	"	" " " S e t
10001				
46034	Slack T	hread C	ontrolle	r
46035	u	"		Clamp
190D	"			" Screw
46007	u	" R	Regulato	
38473	"	"	"	Bracket with 172c and 1823
172c	"	"	"	" Clamping Screw
38474	"	"	"	Bushing
1823	"	"	"	Roller and Stud
166D	"			Screw
1620E				" Nut
2102	Tension	(under	thread)	
1560c	"	"		Regulating Thumb Nut
916F	u u	u	"	Screw Stud
10148	"	"	"	Spring
17547	"			Thread Guide
2102	"	(upper	thread)	
1560c	"	u	"	Regulating Thumb Nut
916F	"	"	"	Screw Stud
2103	"		"	Spring
17547				Thread Guide
38225	Thread	(under)	Eyelet	(back)
190D		"		" Screw
38284	"	"		(front)
46049	"	"	Nipper	Cam with 465c
465c	"	"	"	" Set Screw
38210	"	"	"	Spring (lower)
38211	"	"	"	" (upper)
46247	"	"	"	" Stop
176F	THE STREET	12 2 4 6 1 40	0.00	" Screw

38475	Thread	(under)	Take-up	with	465c	
465c	u	ш	"	Set S	crew	
46047	ш	"	и	Stapl	e	
52717	u	u	u	u	Bracket	with 910c
690p	"	" .	"	ш	"	Screw
46041	и	ш	ш	и	Spring.	
190D	"	и	"	ш		crew
910c	· u	u	u	"		ew
38482	u	u	u	Strip		
207D	и	ш	u	. "		
38476	. "	"	"	Threa		(left)
207D	u	u	"		и	" Screw
38477	"	"	4	- 4	"	(right)
207D	"	"	"	"		" Screw
38483	"	(upper)	Controlle	er		
206F	"	"	"			
46009	"	u	Eyelet			
190D	"	ee				
46010	u	и				
457c	"	ii.	"	Set S	crew	,
52718	Throat	Plate w	rith 52711			Old Serial
691F			crew (bac	k)		
50027F	"	"	" (fron	nt)		

ACCESSORIES

2015	Machine Cushion (rubber)
-	13/4 in. wood screw No. 16, to secure machine to
	table
4718	Machine Rest (felt)
35859	Oiler with Cap and 35861
35860	" 35859, filled with oil
35861	" Spout, 3½ in. long
26026	Screw Driver
38487	Threading Wire
35095	Tweezers, 6 in
8908	Wrench for 1520, 1620, 1706, 1708 and 1709
23766	" " 1508 and 1636
19221	" 1619
22003	" " 1550

STRIP FOLDER

36541	Strip	Folder	on Shank
1443F	и	u	Screw

FOOT LIFTER PARTS

6439	Chain, 36 in. to 45 in
N	Note. When ordering No. 6439 give length required.
4879	Chain Connecting Link for 4885
23759	Lifting Lever.
802D	" " Hinge Screw
23761	" " Spring
1002D	" "Stop-Screw
4881	Treadle
4882	" Shaft
4883	" Spring
4884	" Stand
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two
	wood screws 1 in. No. 16
23769	Foot Lifter complete, Nos. 802p, 1002p, 4885, 6439, 23759 and 23761

KNEE LIFTER PARTS

23759	Lifting Lever
23760	" Connecting Rod for 23768
38384	" " " 38385
802D	" " Hinge Screw
23761	" "Spring
1002D	" " Stop Screw
2763	Rock Shaft
12242	" " Hanger with two wood screws 1 in.
	No. 10
6335	Rock Shaft Knee Arm
6336	Rock Shaft Knee Arm complete, Nos. 2766, 2767 and
	6335
2766	Rock Shaft Knee Arm Hub with 356c
. 356c	" " " Set Screw
2767	" " Plate with 356c
356c	" " " Set Screw
6337	" Lifting Bracket with two 356c
7125	" " " Hook
356c	" " " Set Screw
356c	" " Set Screw
2770	" Stop Dog with 356c
356c	" " Set Screw
23767	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337,
	7125 and two 12242
23768	Knee Lifter complete (power table) Nos. 802D,
	1002D, 23759 to 23761 and 23767
38385	Knee Lifter complete (bench stand) Nos. 802D,
	1002p, 23759, 23761, 23767 and 38384

THREAD UNWINDER

FOR FOUR LARGE SPOOLS OR FOUR LARGE CONES OF THREAD

27623	Spool Pin	
155C	" " Set Screw	
41534	" Rest	
41535	" 41534 with 1149c and four each 1	
	27623	
1149c	Spool Rest Set Screw	
27940	" Stand with 453c	
41514	" Weight, 4 in. diam., with 41515	
41515	" Centre Pin	
27739	Thread Cone (wood)	
41633	" Guard with 208E and four 41569	
41569	" " Eyelet	
41637	" Rod (lower)	
41638	" " (upper)	
41639	" " Coupling with two 456c.	
456C	" Set Screw	
41640	Thread Guard Rod complete, 30 in. long, No.	s. 41637
	to 41639	
453C	Thread Guard Rod Set Screw	
208E	" " Screw	
41537	Thread Unwinder complete, Nos. 27940,	
41633, 41640, three wood screws 1 in. No. 12		
and four each 27739 and 41514		