

62-44

NUMBERING DEPARTMENT  
SEPTEMBER 6, 1911

# LIST OF PARTS COMPLETE



## Machine No. 62=44

---

THE SINGER MANUFACTURING COMPANY

# LIST OF PARTS COMPLETE FOR MACHINE NO. 62-44

For general work in fabrics and light leather. For  
lap seaming button laps on shoes, etc. Two  
needles, two loopers, gauges from  $\frac{3}{32}$  inch  
to  $\frac{3}{8}$  inch. Alternating pressers.

(FORMERLY 62 S. V. 41)

*46279	Arm, upper and lower (solid).....
46291	" Rock Shaft.....
46217	" " " Crank (back) with two 1497c.....
1497c	" " " " " Set Screw.....
46280	" " " " (front) with 443c.....
23724	" " " " " Pin.....
443c	" " " " " Set Screw.....
46218	" Rotary Shaft.....
38329	" " " Collar with two 457c.....
457c	" " " " " Set Screw.....
23872	" " " Flanged Bushing.....
159F	" " " " " Screw.....
4784	" " " Oil Pad (felt).....
144D	" " " Screw.....
17509	" Side Cover (lower).....
286D	" " " " Thumb Screw.....
46366	" " " (upper).....
9533	" " " " Pin.....
176D	" " " " Screw.....
23873	Balance Wheel with two 430c.....
430c	" " " Set Screw.....
38414	Cloth Plate.....
691F	" " Screw (left).....
1094F	" " " (right).....
46254	" " Slide (large) with four 1602E.....
1602E	" " " Bushing.....
38416	" " " Spring.....
725H	" " " " Screw.....
46255	Cloth Plate Slide (large) complete, Nos. 46254, two 38416 and four 725H.....
38418	Cloth Plate Slide (small).....
38419	" " " " Spring.....
725H	" " " " " Screw.....



38420	Cloth Plate Slide (small) complete, Nos. 38418, 38419 and two 725H.
46256	Cloth Plate complete, Nos. 38414, 38420 and 46255.
46221	Crank Connecting Rod with 46222, 46223 and two each 896E and 1057E.
50069C	Crank Connecting Rod Ball Screw Stud.
1619E	" " " " " Nut...
*46222	" " " " Cap (lower)
896E	" " " " Screw
*46223	" " " " (upper)
1057E	" " " " Screw
46225	" " " " Washer (fibre)
52533	Face Plate with 316F, 442C, 46289, 46428 and 52544.
171D	" " Screw
38425	Feed Bar with 231C and 460C.
23716	" " Bushing
23726	" " Hinge Pin
231C	" " Set Screw
38426	" " Slide Block
38427	" Connecting Rod with 23865 and three 1057E.
*23865	" " " Cap
1057E	" " " " Screw
23866	" " " " Hinge Pin (eccentric)
1057E	" " " " Clamping Screw
52534	" Dog
898D	" " Screw
460C	" " Stop Screw
*38127	" Eccentric
*23729	" " Body
443C	" " " Set Screw
21331	" " " Pressure Spring
21332	" " " " Cap
934D	" " " " " Screw
196F	" " " Set Screw
38128	Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C.
38429	Feed Lifting Eccentric with two 465C.
46113	" " " " Cover
335D	" " " " " Screw
465C	" " " " " Set Screw
1103C	" Regulating Screw
38431	" Rocking Frame
38432	" " " " Bracket with two 465C.
123E	" " " " " Screw
38433	" " " " " Hinge Pin
465C	" " " " " " Set Screw

46092	Lifting Presser Bar.....
46073	" " " Bushing (lower).....
1133E	" " " " " Set Screw.....
46073	" " " " " (upper).....
1133E	" " " " " Set Screw.....
17541	" " " Lifter.....
17542	" " " " Hinge Pin....
46282	" " " Lifting Bracket with 704C and 892C.....
892C	Lifting Presser Bar Lifting Bracket Adjusting Screw
704C	" " " " " Clamping Screw.
38467	" " " Spring (flat).....
38468	" " " Stud.....
52535	" " Foot.....
190D	" " " Screw.....
52536	Looper (back) with 590D and 38393.....
1147C	" " Set Screw.....
38393	" " Thread Guard.....
590D	" " " " Screw.....
52537	" (front).....
1120C	" " Set Screw.....
46226	" Bell Crank with 1037C.....
38436	" " " Hinge Stud.....
443C	" " " " " Set Screw.....
46227	Looper Bell Crank Pitman complete, Nos. 1706E, 1713E and 46233 to 46235.....
50070C	Looper Bell Crank Pitman Ball Screw Stud (upper)
1636E	" " " " " " " " " "
	Nut.....
46228	Looper Bell Crank Pitman Ball Stud (lower).....
1037C	" " " " " " " Set Screw.....
*46229	Looper Bell Crank Pitman Cap (lower).....
171E	" " " " " " Screw.....
*46230	" " " " " " (upper).....
171E	" " " " " " Screw.....
*46231	" " " " " End Bearing (lower).....
*46232	" " " " " " (upper).....
46233	" " " " " Head (lower) Nos. 46228, 46229, 46231 and two 171E.....
46234	Looper Bell Crank Pitman Head (upper) Nos. 46230, 46232, 50070C and two 171E.....
46235	Looper Bell Crank Pitman Rod.....
1706E	" " " " " Nut (lower).....
1713E	" " " " " " (upper).....
38496	" Carrier with 1120C and three 1147C.....
38440	" " Hinge Pin.....
1147C	" " " " Set Screw.....



46236	Looper Carrier Pitman complete, Nos. 1708E, 1709E and 46241 to 46243.....
50070C	Looper Carrier Pitman Ball Screw Stud (right).....
1636E	" " " " " " " Nut.....
46237	" " " " " Stud (left).....
1147C	" " " " " Set Screw.....
*46238	" " " " Cap (left).....
171E	" " " " " Screw.....
*46238	" " " " " (right).....
171E	" " " " " Screw.....
*46239	" " " " End Bearing (left).....
*46240	" " " " " (right).....
46241	" " " " Head (left) Nos. 46237 to 46239 and two 171E.....
46242	Looper Carrier Pitman Head (right) Nos. 46238, 46240, 50070C and two 171E.....
46243	Looper Carrier Pitman Rod.....
1708E	" " " " " Nut (left).....
1709E	" " " " " (right).....
46244	" " " " Washer (fibre).....
46042	" " " " Rock Shaft with two 175D.....
175D	" " " " Adjusting Screw.....
38450	" " " " Crank (forked) with 159E.....
159E	" " " " " Clamping Screw.....
38451	" " " " " Slide Block.....
46043	" " " " Hinge Pin.....
1508E	" " " " " Nut.....
129E	" " " " " Set Screw.....
38452	" Eccentric with two 465C.....
465C	" " Set Screw.....
38453	" Shaft.....
38454	" " Bracket.....
123E	" " " Screw.....
391D	" " " Screw.....
46051	Needle Bar.....
46052	Needle Bar complete, Nos. 46051 and 46053.....
38456	" " Bushing.....
1133E	" " " Set Screw.....
38458	" " Connecting Link.....
38459	" " " Hinge Stud.....
1520E	" " " " " Nut.....
38460	" " " Stud with two 391E.....
391E	" " " Clamping Screw.....
46053	" Clamp with 46054 and two 1072F.....
46054	" " Thread Guide (two pieces).....
38461	" Guard (back).....
176F	" " " Screw.....
46001	" " (front).....

206F	Needle Guard (front) Screw.....
1072F	" Set Screw.....
46002	Oil Cup (tension) double, with two 38463.....
38463	" " " Packing (felt).....
225F	" " " Screw.....
574D	Pressure Regulating Thumb Screw.....
1539D	" " " " Lock Nut.....
52538	Slack Thread Controller.....
52539	" " " Bracket.....
175D	" " " " Screw.....
52540	" " " Connection with 457C.....
457C	" " " " Set Screw.....
110C	" " " Hinge Screw.....
2102	Tension (under thread) Disc.....
1560C	" " " Regulating Thumb Nut.....
916F	" " " Screw Stud.....
10148	" " " Spring.....
17547	" " " Thread Guide.....
2102	" (upper thread) Disc.....
1560C	" " " Regulating Thumb Nut.....
916F	" " " Screw Stud.....
2103	" " " Spring.....
17547	" " " Thread Guide.....
38225	Thread (under) Eyelet (back).....
190D	" " " " Screw.....
38284	" " " (front).....
46049	" " Nipper Cam with 465C.....
465C	" " " " Set Screw.....
38210	" " " Spring (lower).....
38211	" " " " (upper).....
46247	" " " " " Stop.....
176F	" " " " Screw.....
38475	" " Take-up with 465C.....
465C	" " " Set Screw.....
46047	" " " Staple.....
46040	" " " " Bracket with 910C.....
690D	" " " " " Screw.....
46041	" " " " Spring.....
190D	" " " " " Screw.....
910C	" " " " " Stop Screw.....
38482	" " " Stripper.....
207D	" " " " " Screw.....
38476	" " " Thread Guard (left).....
207D	" " " " " " Screw.....
38477	" " " " " (right).....
207D	" " " " " " Screw.....
38483	" (upper) Controller.....
206F	" " " " Screw.....



<b>52541</b>	Thread (upper) Eyelet.....								
190D	"	"	"	"	Screw.....				
46171	"	"	"	"	Take-up with 223D.....				
223D	"	"	"	"	Clamping Screw.....				
<b>52542</b>	Throat Plate for 52534.....								
691F	"	"	"	"	Screw.....				
<b>52543</b>	Vibrating Presser Bar.....								
212F	"	"	"	"	Cap Screw.....				
46287	"	"	"	"	Lifting Bell Crank.....				
212F	"	"	"	"	"	"	"	Cap Screw..	
46284	"	"	"	"	"	"	"	Driving	
	Arm with 157D, 602D and 1989.....								
157D	Vibrating Presser Bar Lifting Bell Crank Driving Arm				Clamping Screw.....				
1989	Vibrating Presser Bar Lifting Bell Crank Driving Arm				Roller.....				
602D	Vibrating Presser Bar Lifting Bell Crank Driving Arm				Roller Cap Screw.....				
<b>52544</b>	Vibrating Presser Bar Spring.....								
316F	"	"	"	"	Stop Screw.....				
46428	"	"	"	"	Stud.....				
46289	"	"	"	"	Stop (raw hide).....				
442C	"	"	"	"	Adjusting Screw.....				
<b>52545</b>	"	"	"	"	Foot.....				
203D	"	"	"	"	Screw.....				

## ACCESSORIES

2015	Machine Cushion (rubber).....								
—	1¾ in. Wood Screw No. 16, to secure machine to table								
4718	Machine Rest (felt).....								
35859	Oiler with Cap and 35861.....								
35860	" 35859, filled with oil.....								
35861	" Spout, 3½ in. long.....								
26026	Screw Driver.....								
38487	Threading Wire.....								
35095	Tweezers, 6 in.....								
8908	Wrench for 1520, 1706, 1708 and 1709....								
23766	" " 1508 and 1636.....								
19221	" " 1619.....								

## LAP SEAM GUIDE

<b>36384</b>	Lap Seam Guide on Shank.....								
190D	"	"	"	"	Screw.....				
7071	"	"	"	"	Washer.....				

## FOOT LIFTER PARTS

6439 Chain, 36 in. to 45 in. ....

NOTE. When ordering No. 6439 give length required.

4879	Chain Connecting Link for 4885.....
23759	Lifting Lever.....
802D	" " Hinge Screw.....
23761	" " Spring.....
1002D	" " Stop Screw.....
4881	Treadle.....
4882	" Shaft.....
4883	" Spring.....
4884	" Stand.....
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....
23769	Foot Lifter complete, Nos. 802D, 1002D, 4885, 6439, 23759 and 23761.....

## KNEE LIFTER PARTS

23759	Lifting Lever.....
23760	" " Connecting Rod for 23768.....
38384	" " " " " 38385.....
802D	" " Hinge Screw.....
23761	" " Spring.....
1002D	" " Stop Screw.....
2763	Rock Shaft.....
12242	" " Hanger with two wood screws 1 in. No. 10
6335	" " Knee Arm.....
6336	Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 6335.....
2766	Rock Shaft Knee Arm Hub with 356C.....
356C	" " " " " Set Screw.....
2767	" " " Plate with 356C.....
356C	" " " " " Set Screw.....
6337	" " Lifting Bracket with two 356C.....
7125	" " " " " Hook.....
356C	" " " " " Set Screw.....
356C	" " " " " Set Screw.....
2770	" " Stop Dog with 356C.....
356C	" " " " " Set Screw.....
23767	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337, 7125 and two 12242.....
23768	Knee Lifter complete (power table) Nos. 802D, 1002D, 23759 to 23761 and 23767.....
38385	Knee Lifter complete (bench stand) Nos. 802D, 1002D, 23759, 23761, 23767 and 38384.....



## THREAD UNWINDER

FOR FOUR LARGE SPOOLS OR FOUR LARGE CONES  
OF THREAD

27623	Spool Pin.....	
155C	" " Set Screw.....	
41534	" Rest.....	
41535	" " 41534 with 1149C and four each 155C and 27623.....	
1149C	Spool Rest Set Screw.....	
27940	" Stand with 453C.....	
41514	" Weight, 4 in. diam., with 41515.....	
41515	" " Centre Pin.....	
27739	Thread Cone (wood).....	
41536	" Guard.....	
41437	" " Rod, 30 in. long, with 735C.....	
453C	" " " Set Screw.....	
735C	" " " Set Screw.....	
41537	Thread Unwinder complete, Nos. 27940, 41437, 41535, 41536, three wood screws 1 in. No. 12 and four each 27739 and 41514.....	