

Sec 31

62-58

DEPARTMENT No. 54

AUG. 28, 1915

LIST OF PARTS COMPLETE



FOR

Machine No. 62=58

THE SINGER MANUFACTURING COMPANY

LIST OF PARTS COMPLETE FOR MACHINE NO. 62-58

For window shades, makes stitch $\frac{5}{16}$ in. long. One needle, one looper. Has reciprocating slide above the work, under the presser foot.

SUPERSEDES 62 S. V. 56 MACHINE.

*53014	Arm, upper and lower (solid).....
52630	" Oil Tube with 49092, for oiling 46221.....
49092	" " " Packing (felt).....
46216	" Rock Shaft.....
46217	" " " Crank (back) with two 1497c.....
1497c	" " " " " Set Screw.....
38412	" " " " (front) with 443c.....
23724	" " " " " Pin.....
443c	" " " " " Set Screw.....
46218	" Rotary Shaft.....
38329	" " " Collar with two 457c.....
457c	" " " " " Set Screw.....
23872	" " " Flanged Bushing.....
159F	" " " " " Screw.....
4784	" " " Oil Pad (felt).....
144D	" " " Screw.....
17509	" Side Cover (lower).....
286D	" " " " Thumb Screw.....
52554	" " " (upper).....
9533	" " " " Pin.....
190D	" " " " Screw.....
23873	Balance Wheel with two 430c.....
430c	" " " Set Screw.....
46321	Cloth Plate.....
691F	" " " Screw (left).....
1094F	" " " " (right).....
46322H	" " " Slide (left).....
46323H	Cloth Plate Slide (left) complete, Nos. 38419, 46322H and two 725H.....
38419	Cloth Plate Slide (left) Spring.....
725H	" " " " " Screw.....
38105	" " " (right) with 1602H.....
1602H	" " " " Bushing.....
286D	" " " " Thumb Screw.....
53015	Cloth Plate complete, Nos. 38105, 46321 and 46323H..

46221	Crank Connecting Rod with 46222, 46223 and two each 896E and 1057E.....
50069C	Crank Connecting Rod Ball Screw Stud.....
1619E	" " " " " Nut.....
*46222	" " " Cap (lower).....
896E	" " " " Screw.....
*46223	" " " " (upper).....
1057E	" " " " Screw.....
46225	" " " Washer (fibre).....
53016	Face Plate.....
46111	" " Pin.....
286D	" " Thumb Screw.....
38425	Feed Bar with 231c and 460c.....
23716	" " Bushing.....
23726	" " Hinge Pin.....
231C	" " Set Screw.....
38426	" " Slide Block.....
53017	" Connecting Rod with 1057E, 23865 and two 896E.....
*23865	Feed Connecting Rod Cap.....
896E	" " " " Screw.....
23866	" " " Hinge Pin (eccentric).....
1057E	" " " " Clamping Screw.....
53018	" Dog.....
898D	" " Screw.....
460C	" " Stop Screw.....
*38127	" Eccentric.....
*23729	" " Body.....
443C	" " " Set Screw.....
21331	" " Pressure Spring.....
21332	" " " " Cap.....
934D	" " " " " Screw.....
196F	" " Set Screw.....
38128	Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c.....
38429	Feed Lifting Eccentric with two 465c.....
46113	" " " Cover.....
335D	" " " " Screw.....
465C	" " " Set Screw.....
1103C	" Regulating Screw.....
53019	" Rocking Frame.....
53020	" " " Bracket with two 465c.....
123E	" " " " Screw.....
38433	" " " Hinge Pin.....
465C	" " " " Set Screw.....
36781	Guide.....
1443D	" Screw.....

46335	Looper	with 590b and 38393.....	
46226	"	Bell Crank with 1037c.....	
38436	"	" " Hinge Stud.....	
443c	"	" " " " Set Screw.....	
46227	Looper	Bell Crank Pitman complete, Nos. 1706E, 1713E and 46233 to 46235.....	
50070c	Looper	Bell Crank Pitman Ball Screw Stud (upper)	
1636E	"	" " " " " " " "	
		Nut.....	
46228	Looper	Bell Crank Pitman Ball Stud (lower).....	
1037c	"	" " " " " " " " Set Screw	
*46229	"	" " " " " " " " Cap (lower).....	
171E	"	" " " " " " " " Screw.....	
*46230	"	" " " " " " " " (upper).....	
171E	"	" " " " " " " " Screw.....	
*46231	"	" " " " " " " " End Bearing (lower).....	
*46232	"	" " " " " " " " (upper).....	
46233	"	" " " " " " " " Head (lower) Nos. 46228, 46229, 46231 and two 171E.....	
46234	Looper	Bell Crank Pitman Head (upper) Nos. 46230, 46232, 50070c and two 171E.....	
46235	Looper	Bell Crank Pitman Rod.....	
1706E	"	" " " " " " " " Nut (lower).....	
1713E	"	" " " " " " " " (upper).....	
38439	"	Carrier with 1143c and two 1147c.....	
38440	"	" " Hinge Pin.....	
1147c	"	" " " " " " " " Set Screw.....	
46236	Looper	Carrier Pitman complete, Nos. 1708E, 1709E and 46241 to 46243.....	
50070c	Looper	Carrier Pitman Ball Screw Stud (right).....	
1636E	"	" " " " " " " " Nut...	
46237	"	" " " " " " " " Stud (left).....	
1147c	"	" " " " " " " " Set Screw.....	
*46238	"	" " " " " " " " Cap (left).....	
171E	"	" " " " " " " " Screw.....	
*46238	"	" " " " " " " " (right).....	
171E	"	" " " " " " " " Screw.....	
*46239	"	" " " " " " " " End Bearing (left).....	
*46240	"	" " " " " " " " (right).....	
46241	"	" " " " " " " " Head (left) Nos. 46237 to 46239 and two 171E.....	
46242	Looper	Carrier Pitman Head (right) Nos. 46238, 46240, 50070c and two 171E.....	
46243	Looper	Carrier Pitman Rod.....	
1708E	"	" " " " " " " " Nut (left).....	
1709E	"	" " " " " " " " (right).....	
46244	"	" " " " " " " " Washer (fibre).....	
46042	"	" " " " " " " " Rock Shaft with two 175d.....	

175D	Looper Carrier Rock Shaft Adjusting Screw.....
38450	" " " " Crank (forked) with 159E..
159E	" " " " " Clamping Screw.....
38451	" " " " " Slide Block.....
46043	" " " " " Hinge Pin.....
1508E	" " " " " " Nut.....
129E	" " " " " " Set Screw.....
38452	" Eccentric with two 465c.....
465c	" " Set Screw.....
1143C	" Set Screw.....
38453	" Shaft.....
52553	" " Bracket.....
123E	" " " Screw.....
391F	" " Screw.....
38393	" Thread Guard.....
590D	" " " Screw.....
38455	Needle Bar (hollow) with 857H.....
38456	" " Bushing.....
1133E	" " " Set Screw.....
38458	" " Connecting Link.....
38459	" " " " Hinge Stud.....
1520E	" " " " " " Nut.....
38460	" " " Stud with two 391E.....
391E	" " " " Clamping Screw.....
46050	" Guard.....
176F	" " Screw.....
857H	" Set Screw.....
17540	Presser Bar.....
46073	" " Bushing (lower).....
1133E	" " " " Set Screw.....
38456	" " " (upper).....
1133E	" " " " Set Screw.....
52597	" " Lifter.....
52598	" " " Hinge Stud.....
465C	" " " " " Set Screw.....
52599	" " Lifting Bracket with 1356E.....
1356E	" " " " Clamping Screw.....
52600	" " " " Connecting Link.....
990F	" " " " " " Cap Screw
724C	" " " " " " H i n g e Screw.....
46422	Presser Bar Spring (flat).....
38468	" " " Stud.....
53021	" Foot Body.....
53022	" Roller.....
14995	" " Hinge Pin.....
53023	Presser Foot (roller) complete, Nos. 14995, 53021 and 53022.....

190D	Presser Foot Screw.....					
574D	Pressure Regulating Thumb Screw.....					
1539D	" " " " Lock Nut.....					
✓ 53024	Reciprocating Spring Presser Blade.....					
20245	" " " " Holder.....					
1099F	" " " " " Hinge					
	Screw.....					
1601D	Reciprocating Spring Presser Blade Holder Hinge					
	Screw Nut.....					
233D	Reciprocating Spring Presser Blade Screw.....					
✓ 53025	" " " " " Washer.....					
✓ 53026	" " " " Connecting Rod with 906c					
	52590 and two 896E.....					
*52590	Reciprocating Spring Presser Connecting Rod Cap					
896E	" " " " " " "					
	Screw.....					
40247	Reciprocating Spring Presser Connecting Rod Hinge					
	Pin.....					
906c	Reciprocating Spring Presser Connecting Rod Hinge					
	Pin Set Screw.....					
*52723	Reciprocating Spring Presser Eccentric.....					
✓ *53027	" " " " " Body.....					
443C	" " " " " Set Screw					
21331	" " " " " Pressure Spring					
21332	" " " " " " "					
	Cap.....					
934D	Reciprocating Spring Presser Eccentric Pressure Spring					
	Cap Screw.....					
196F	Reciprocating Spring Presser Eccentric Set Screw.....					
✓ 53028	Reciprocating Spring Presser Eccentric (adjustable)					
	complete, Nos. 196F, 934D, 1106C, 21331, 21332,					
	52723, 53027 and two 443C.....					
1106C	Reciprocating Spring Presser Regulating Screw.....					
✓ 53029	" " " " Shaft.....					
52594	" " " " " Crank (back) with					
	157E.....					
157E	Reciprocating Spring Presser Shaft Crank (back)					
	Clamping Screw.....					
✓ 53030	Reciprocating Spring Presser Shaft Crank (front) with					
	1057E.....					
1057E	Reciprocating Spring Presser Shaft Crank (front)					
	Clamping Screw.....					
✓ 53031	Reciprocating Spring Presser Shaft Crank (front)					
	complete, Nos. 1099F, 1601D, 20245, 53024,					
	53025, 53030 and two 233D.....					
2102	Tension (under thread) Disc.....					
1560C	" " " " Regulating Thumb Nut.....					
916C	" " " " Screw Stud.....					

10148	Tension (under thread)	Spring
17547	"	"	Thread Guide.....
2102	"	(upper thread)	Disc.....
1560c	"	"	Regulating Thumb Nut.....
916c	"	"	Screw Stud.....
13710	"	"	Spring.....
17547	"	"	Thread Guide.....
38225	Thread (under)	Eyelet (back)
190D	"	"	" Screw.....
38284	"	"	(front).....
46049	"	"	Nipper Cam with 465c.....
465c	"	"	" Set Screw.....
38210	"	"	Spring (lower).....
38211	"	"	" (upper).....
46247	"	"	" " Stop.....
176D	"	"	" Screw.....
38475	"	"	Take-up with 465c.....
465c	"	"	" Set Screw.....
38478	"	"	" Staple with two each 590D and 38481.....
46040	Thread (under)	Take-up Staple Bracket with 910c
690D	"	"	" " Screw.....
46041	"	"	" Spring.....
190D	"	"	" " Screw.....
910c	"	"	" Stop Screw.....
38481	"	"	" Thread Guard.....
590D	"	"	" " " Screw.....
38482	"	"	" Stripper.....
207D	"	"	" " Screw.....
38476	"	"	" Thread Guard (left).....
207D	"	"	" " " Screw.....
38477	"	"	" " (right).....
207D	"	"	" " " Screw.....
38483	"	(upper)	Controller.....
206F	"	"	" Screw.....
53032	"	"	Eyelet (front of arm).....
202F	"	"	" " " Set Screw.....
53033	"	"	" (side of arm).....
190D	"	"	" " " Screw.....
53034	"	"	Take-up Body.....
38397	"	"	" Retaining Plate.....
38321	"	"	" " Spring.....
93F	"	"	" " " Screw.....
457c	"	"	" Set Screw.....
53035	Thread (upper)	Take-up complete, Nos. 93F, 457c, 38321, 38397 and 53034
53036	Throat Plate for 53018	
691F	"	"	" Screw.....

ACCESSORIES

2015	Machine Cushion (rubber).....
4718	“ Rest (felt).....
—	1¾ in. Wood Screw No. 16, to secure machine to table.
35859	Oiler with 35861.....
35860	“ 35859, filled with oil.....
35861	“ Spout, 3½ in. long.....
26026	Screw Driver (large).....
26485	“ “ (small).....
38487	Threading Wire.....
35095	Tweezers, 6 in.....
5714	Wrench for 1601.....
8908	“ “ 1520, 1706, 1708 and 1709.....
19221	“ “ 1619.....
23766	“ “ 1508 and 1636.....

FOOT LIFTER PARTS

6439	Chain, 36 in. to 45 in.....
------	-----------------------------

NOTE: When ordering No. 6439 give length required

4879	Chain Connecting Link.....
52602	Lifting Lever.....
802D	“ “ Hinge Screw.....
52603	“ “ Link.....
957D	“ “ “ Hinge Screw.....
23761	“ “ Spring.....
1002D	“ “ Stop Screw.....
4881	Treadle.....
4882	“ Shaft.....
4883	“ Spring.....
4884	“ Stand.....
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....
52604	Foot Lifter complete, Nos. 802D, 957D, 1002D, 4885, 6439, 23761, 52602 and 52603.....

KNEE LIFTER PARTS

52602	Lifting Lever.....
23760	“ “ Connecting Rod.....
802D	“ “ Hinge Screw.....
52603	“ “ Link.....
957D	“ “ “ Hinge Screw.....
23761	“ “ Spring.....
1002D	“ “ Stop Screw.....

2763	Rock Shaft.....
12242	" " Hanger with two wood screws 1 in. No. 10.
6335	" " Knee Arm.....
6336	Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 6335.....
2766	Rock Shaft Knee Arm Hub with 356c.....
356c	" " " " Set Screw.....
2767	" " " " Plate with 356c.....
356c	" " " " Set Screw.....
6337	" " Lifting Bracket with two 356c.....
7125	" " " " Hook.....
356c	" " " " Set Screw.....
356c	" " " " Set Screw.....
2770	" " Stop Dog with 356c.....
356c	" " " " Set Screw.....
23767	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337, 7125 and two 12242.....
52605	Knee Lifter complete, Nos. 802D, 957D, 1002D, 23760, 23761, 23767, 52602 and 52603.....

THREAD UNWINDER

FOR TWO LARGE SPOOLS OR TWO LARGE CONES OF THREAD.

27623	Spool Pin.....
155c	" " Set Screw.....
41530	" Rest.....
41531	" " 41530 with 1149c and two each 155c and 27623.....
1149c	Spool Rest Set Screw.....
27940	" Stand with 453c.....
41514	" Weight, 4 in. diam., with 41515.....
41515	" " Centre Pin.....
27739	Thread Cone (wood).....
41631	" Guard with 208E and two 41569.....
41569	" " Eyelet.....
41637	" " Rod (lower).....
41638	" " " (upper).....
41639	" " " Coupling with two 456c.....
456c	" " " " Set Screw.....
41640	Thread Guard Rod complete, 30 in. long, Nos. 41637 to 41639.....
453c	Thread Guard Rod Set Screw.....
208E	" " Screw.....
41533	Thread Unwinder complete, Nos. 27940, 41531, 41631, 41640, two each 27739, 41514 and three wood screws 1 in. No. 12.....

