

LIST OF PARTS. COMPLETE



FOR

Machine No. 62-60

THE SINGER MANUFACTURING COMPANY

LIST OF PARTS COMPLETE

FOR

MACHINE No. 62-60

For Inserting Elastic Webbing Between a Folded Strip and the Body of the Garment in the bottom of shirt waists. Two needles, two loopers, gauges $\frac{1}{4}$ to $\frac{3}{16}$ in. Fitted with a combination attachment for folding the edge of the garment, guiding, stretching the elastic webbing, folding the covering strip and stitching to the garment in one operation; also fitted with a lever for releasing the tension on the elastic webbing where the gathering is not required. The guide is hinged so that the elastic webbing can be placed under one needle to be stitched to the garment at the starting and finishing of the operation. The machine is regularly furnished with a holder for the elastic webbing and strip.

*52736	Arm, upper and lower (solid).....
52630	" Oil Tube with 49092, for oiling 46221.....
49092	" " Packing (felt).....
46216	" Rock Shaft.....
46217	" " " Crank (back) with two 1497c.....
1497c	" " " " " Set Screw.....
38412	" " " " (front) with 443c.....
23724	" " " " " Pin.....
443c	" " " " " Set Screw.....
46218	" Rotary Shaft.....
38329	" " " Collar with two 457c.....
457c	" " " " Set Screw.....
23872	" " " Flanged Bushing.....
159F	" " " " " Screw.....
4784	" " " Oil Pad (felt).....
144D	" " " Screw.....
17509	" Side Cover (lower).....
286D	" " " " Thumb Screw.....
52554	" " " (upper).....
9533	" " " " Pin.....
176D	" " " " Screw.....

23873	Balance Wheel with two 430c.....
430c	" " Set Screw.....
53072	Cloth Plate.....
691F	" " Screw (left).....
1094F	" " " (right).....
46322H	" " Slide (left).....
46323H	Cloth Plate Slide (left) complete, Nos. 38419, 46322H and two 725H.....
38419	Cloth Plate Slide (left) Spring.....
725H	" " " " " Screw.....
38105	" " " (right) with 1602E.....
1602E	" " " " Bushing.....
286D	" " " " Thumb Screw.....
53073	Cloth Plate complete, Nos. 36913 to 36916, 38105, 46323H, 53072 and two 203c.....
46221	Crank Connecting Rod with 46222, 46223 and two each 896E and 1057E.....
50069c	Crank Connecting Rod Ball Screw Stud.....
1619E	" " " " " " Nut.....
*46222	" " " Cap (lower).....
896E	" " " " " Screw.....
*46223	" " " " (upper).....
1057E	" " " " " Screw.....
46225	" " " Washer (fibre).....
46179	Face Plate.....
46111	" " Pin.....
286D	" " Thumb Screw.....
38425	Feed Bar with 231c and 460c.....
23716	" " Bushing.....
23726	" " Hinge Pin.....
231c	" " Set Screw.....
38426	" " Slide Block.....
38427	" Connecting Rod with 1057E, 23865 and two 896E.
*23865	" " " Cap.....
896E	" " " " Screw.....
23866	" " " Hinge Pin (eccentric).....
1057E	" " " " " Clamping Screw.....
53074	" Dog.....
157D	" " Screw.....
460c	" " Stop Screw.....
*38127	" Eccentric.....
*23729	" " Body.....
443c	" " " Set Screw.....
21331	" " Pressure Spring.....
21332	" " " " Cap.....
934D	" " " " " Screw.....
196F	" " Set Screw.....

38128	Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103c, 21331, 21332, 23729, 38127 and two 443c.....
38429	Feed Lifting Eccentric with two 465c.....
46113	" " " Cover.....
335D	" " " " Screw.....
465C	" " " Set Screw.....
1103C	" Regulating Screw.....
38431	" Rocking Frame.....
38432	" " " Bracket with two 465c.....
123E	" " " " Screw.....
38433	" " " Hinge Pin.....
465C	" " " " " Set Screw.....
52976	Looper (back) with 590D and 38393.....
52775	" " Carrier with 1147c.....
193F	" " " Screw.....
1147C	" " Set Screw.....
38393	" " Thread Guard.....
590D	" " " " Screw.....
52977	" (front) with 590D and 38393.....
52778	" " Carrier with 1120c and two 1147c.....
1120C	" " Set Screw.....
38393	" " Thread Guard.....
590D	" " " " Screw.....
46226	" Bell Crank with 1037c.....
38436	" " " Hinge Stud.....
443C	" " " " " Set Screw.....
46227	Looper Bell Crank Pitman complete, Nos. 1706E, 1713E and 46233 to 46235.....
50070C	Looper Bell Crank Pitman Ball Screw Stud (upper)
1636E	" " " " " " " "
	Nut.....
46228	Looper Bell Crank Pitman Ball Stud (lower).....
1037C	" " " " " " Set Screw
*46229	" " " " " Cap (lower).....
171E	" " " " " Screw.....
*46230	" " " " " (upper).....
171E	" " " " " Screw.....
*46231	" " " " End Bearing (lower).....
*46232	" " " " " (upper).....
46233	" " " " Head (lower) Nos. 46228, 46229, 46231 and two 171E.....
46234	Looper Bell Crank Pitman Head (upper) Nos. 46230, 46232, 50070c and two 171E.....
*46235	Looper Bell Crank Pitman Rod.....
1706E	" " " " " Nut (lower).....
1713E	" " " " " (upper).....

52779	Looper Carrier (adjustable) complete, Nos. 193F, 52775 and 52778.....
38440	Looper Carrier Hinge Pin.....
1147C	" " " " Set Screw.....
46236	Looper Carrier Pitman complete, Nos. 1708E, 1709E and 46241 to 46243.....
50070C	Looper Carrier Pitman Ball Screw Stud (right).....
1636E	" " " " " " " " Nut.....
46237	" " " " Stud (left).....
1147C	" " " " " " " Set Screw.....
*46238	" " " " Cap (left).....
171E	" " " " " " Screw.....
*46238	" " " " " (right).....
171E	" " " " " " Screw.....
*46239	" " " " End Bearing (left).....
*46240	" " " " " (right).....
46241	" " " Head (left) Nos. 46237 to 46239 and two 171E.....
46242	Looper Carrier Pitman Head (right) Nos. 46238, 46240, 50070C and two 171E.....
46243	Looper Carrier Pitman Rod.....
1708E	" " " " Nut (left).....
1709E	" " " " " (right).....
46244	" " " Washer (fibre).....
46042	" " " Rock Shaft with two 175D.....
175D	" " " " Adjusting Screw.....
38450	" " " " Crank (forked) with 159E.....
159E	" " " " " Clamping Screw.....
38451	" " " " " Slide Block.....
46043	" " " " Hinge Pin.....
1508E	" " " " " " Nut.....
129E	" " " " " " Set Screw.....
38452	" " Eccentric with two 465C.....
465C	" " " Set Screw.....
38453	" " Shaft.....
52553	" " " Bracket.....
123E	" " " " Screw.....
391F	" " " " Screw.....
46051	Needle Bar.....
46052	Needle Bar complete, Nos. 46051 and 46053.....
38456	" " " Bushing.....
1133E	" " " " Set Screw.....
38458	" " " Connecting Link.....
38459	" " " " Hinge Stud.....
1520E	" " " " " " Nut.....
38460	" " " " Stud with two 391E.....
391E	" " " " " Clamping Screw.....

46053	Needle Clamp with 46054 and two 1072F.	
46054	" " Thread Guide (two pieces)	
52819	" Guard (back)	
190D	" " " Screw	
52821	" " (front) for $\frac{1}{4}$ in. gauge	
52822	" " " " $\frac{9}{32}$ in. to $\frac{3}{8}$ in. gauge	
52823	" " " " $\frac{13}{32}$ in. to $\frac{1}{2}$ in. gauge	
52824	" " " " $\frac{17}{32}$ in. to $\frac{9}{16}$ in. gauge	
206D	" " " Screw	
1072F	" Set Screw	
17540	Presser Bar	
38464	" " Bushing (lower)	
1133E	" " " " Set Screw	
38456	" " " (upper)	
1133E	" " " " Set Screw	
17541	" " Lifter	
17542	" " " Hinge Pin	
38466	" " Lifting Bracket with 453c and 892c	
892C	" " " " Adjusting Screw	
453C	" " " " Set Screw	
38467	" " Spring (flat)	
38468	" " " Stud	
26276	" Foot Hinge Pin	
53075	" " Plate	
46087	" " Shank	
53076	Presser Foot (hinged) complete, Nos. 26276, 46087 and 53075	
190D	Presser Foot Screw	
574D	Pressure Regulating Thumb Screw	
1539D	" " " " Lock Nut	
46034	Slack Thread Controller	
46035	" " " Clamp	
190D	" " " " Screw	
46007	" " Regulator	
38473	" " " Bracket with 172c and 1823	
172C	" " " " Clamping Screw	
38474	" " " Bushing	
1823	" " " Roller and Stud	
50062D	" " " Screw	
1620E	" " " " Nut	
2102	Tension (under thread) Disc	
1560C	" " " Regulating Thumb Nut	
916C	" " " Screw Stud	
10148	" " " Spring	
17547	" " " Thread Guide	
2102	" (upper thread) Disc	
1560C	" " " Regulating Thumb Nut	

916c	Tension (upper thread) Screw Stud.....
2103	" " " Spring.....
17547	" " " Thread Guide.....
38225	Thread (under) Eyelet (back).....
190b	" " " " Screw.....
38284	" " " (front).....
46049	" " Nipper Cam with 465c.....
465c	" " " " Set Screw.....
38210	" " " Spring (lower).....
38211	" " " " (upper).....
46247	" " " " " Stop.....
176b	" " " " Screw.....
38475	" " Take-up with 465c.....
465c	" " " Set Screw.....
46047	" " " Staple.....
46040	" " " " Bracket with 910c.....
690b	" " " " " Screw.....
46041	" " " " Spring.....
190b	" " " " " Screw.....
910c	" " " " Stop Screw.....
38482	" " " Stripper.....
207b	" " " " Screw.....
38476	" " " Thread Guard (left).....
207b	" " " " " " Screw.....
38477	" " " " " (right).....
207b	" " " " " " Screw.....
38483	" (upper) Controller.....
206F	" " " Screw.....
46009	" " Eyelet.....
190b	" " " Screw.....
46010	" " Take-up with 457c.....
457c	" " " Set Screw.....
53077	Throat Plate for 53074.....
691F	" " " Screw.....

ACCESSORIES

2015	Machine Cushion (rubber).....
—	1¾ in. Wood Screw No. 16, to secure machine to table.....
4718	Machine Rest (felt).....
35859	Oiler with 35861.....
35860	" 35859, filled with oil.....
35861	" Spout, 3½ in. long.....
26026	Screw Driver (large).....
26485	" " (small).....

38487	Threading Wire.....
35095	Tweezers, 6 in.....
8908	Wrench for 1520, 1620, 1706, 1708 and 1709.....
23766	" " 1508 and 1636.....

EDGE FOLDER

36908	Folder.....✓
990D	" Screw.....
36909	" Shank.....✓
1423D	" " Screw (long).....
1443D	" " " (short).....

TAPE FOLDER

36910	Folder.....✓
1443D	" Screw.....

ELASTIC GUIDE

36942	Guide.....
36912	" Carrier.....✓
1425D	" " Hinge Screw.....
36913	" " Shaft.....
36914	" " " Bracket.....
203C	" " " " Screw.....
36915	" " " Crank with 889c.....
889C	" " " " Set Screw.....
36916	" " " Lever with 889c.....
889C	" " " " Set Screw.....
36943	" Tension Plate.....
36918	" " " Releaser.....
217D	" " " " Screw.....
36944	" " " Releasing Lever.....
23258	" " " " " Friction Washer..
104D	" " " " " Hinge Screw.....
1560C	" " " Regulating Thumb Nut.....
637E	" " " Screw Stud.....
36919	" " " Spring.....
50061D	" Hinge Screw.....
36920	" Latch Spring.....
1443F	" " " Screw.....
36921	" Spring.....
1443F	" " " Screw.....

TAPE HOLDER AND ELASTIC SPOOL HOLDER FOR UNDER THE BENCH

36922	Bracket with two 1341F.....
36923	Elastic Spool Spindle with 25011.....
36924	" " " Clamp with 1147F.....
36925	" " " " Hinge Stud (eccentric)....
1147F	" " " " " " Set Screw.....
36926	" " " " Spring.....
25011	" " " Washer.....
36927	Tape Holder with 1442F.....
36928	" " Rod.....
1341F	" " " Set Screw.....
1442F	" " " Set Screw.....
36929	Tape Holder and Elastic Spool Holder complete, for under the bench, Nos. 36922 to 36928 and four wood screws 1¼ in. No. 12.....

FOOT LIFTER PARTS

6439	Chain, 36 in. to 45 in.....
NOTE. When ordering No. 6439 give length required.	
4879	Chain Connecting Link for 4885.....
23759	Lifting Lever.....
53078	" " Connecting Rod.....
53079	" " " Collar (lower) with two 465c.....
465c	Lifting Lever Connecting Rod Collar (lower) Set Screw.....
53080	Lifting Lever Connecting Rod Collar (upper) with two 620c.....
620c	Lifting Lever Connecting Rod Collar (upper) Set Screw.....
802b	Lifting Lever Hinge Screw.....
53081	" " Spring.....
1002b	" " Stop Screw.....
4881	Treadle.....
4882	" Shaft.....
4883	" Spring.....
4884	" Stand.....
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....
53082	Foot Lifter complete, Nos. 802b, 1002b, 4885, 6439, 23759 and 53078 to 53081.....

THREAD UNWINDER

FOR FOUR LARGE SPOOLS OR FOUR LARGE CONES OF THREAD

27623	Spool Pin
155c	" " Set Screw
41534	" Rest
41535	" " 41534 with 1149c and four each 155c and 27623
1149c	Spool Rest Set Screw
27940	" Stand with 453c
41514	" Weight, 4 in. diam., with 41515
41515	" " Centre Pin
27739	Thread Cone (wood)
41633	" Guard with 208E and four 41569
41569	" " Eyelet
41637	" " Rod (lower)
41638	" " " (upper)
41639	" " " Coupling with two 456c
456c	" " " " Set Screw
41640	Thread Guard Rod complete, 30 in. long, Nos. 41637 to 41639
453c	Thread Guard Rod Set Screw
208E	" " Screw
41537	Thread Unwinder complete, Nos. 27940, 41535, 41633, 41640, three wood screws 1 in. No. 12 and four each 27739 and 41514

From the library of: Superior Sewing Machine & Supply LLC