

SINGER

710W1

List of Parts Complete

for

MACHINE NO. 710W1

12-21-59

Part Rep

710wl List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
1241D	Hook Ram Return Spring Screw Eye
6055	Base Bolt Washer (2)
11831	Screw Driver
23766	Wrench
51078	Base Bolt (2)
53563X	Hook Hopper Cover Thumb Nut
144465	Wrench (1/8" Hex.)
201752X	Hook Ram Starting Lever Stop Screw Nut
201759X	Feed Carrier Bracket Stop Screw Nut
201759X	Safety Switch Actuating Screw Nut
201773X	Feed Starting Lever Roller Screw Stud Nut
201773X	Hook Die Anvil Pressure Lever Roller Screw Stud Nut
201773X	Hook Ram Starting Lever Roller Screw Stud Nut
201774X	Hook Die Anvil Pressure Screw Nut
201774X	Hook Holder Support Lock Nut
201775X	Hook Catch Plate Lever Screw Nut (2)
201775X	Hook Ram Cam Support Plate Screw Nut (3)
201775X	Hook Transfer Track (upper) Screw Nut (2)
201776X	Hook Hopper Bracket Screw Nut (4)
201776X	Hook Hopper Cover Hinge Screw Nut
201776X	Hook Hopper Screw Nut (4)
201776X	Hook Ram Guide Plate Screw Nut (3)
201776X	Hook Transfer Track (upper) Support Plate Screw Nut (4)
201777XC	Work Gauge Screw Nut
201780X	Cam Shaft Frame Screw Nut (4)
201780X	Hook Ram Cam Bracket Screw Nut (2)
201781X	Cam Shaft Reductor Screw Nut (4)

MACHINE NO. 710w1

310001	Base with 310152, and 350720ALX
310002	" Cover
350686X	" " Screw
310020	Belt Tightener Roller
310160	" " " Stud
310161	" " " " Bracket
350737ALX	" " " " " Screw
310589	" " " " " " Washer
310162	Belt Tightener complete, for Hopper Rotor Driving Shaft Pulley Belt, Nos: 310020, 310160 and 310161
310003	Cam with 350707ALX and 350773ALX
310138	" Driving Shaft
310139	" " " Coupling with 350595XC and 350721ALX
310140	" " " " Key
350721ALX	" " " " Position Screw
350595XC	" " " " Set Screw
310141	" " " Interlocking Sleeve
310143	" " " " " Retaining Ring
310142	" " " " " Spring
310143	" " " Retaining Ring
310004	" Key
350773ALX	" Position Screw
350707ALX	" Set Screw
310005	" Shaft with 310010
310144	" " Bearing Block

MACHINE NO. 710w1

257155	Cam Shaft Bearing Block Pin (spirol)
350754ALX	" " " " Screw (4)
310137	" " Coupling and Pulley with 350595XC and 350721ALX
310140	" " " " " Key
350721ALX	" " " " " Position Screw
350595XC	" " " " " Set Screw
310008	" " Frame with two 350720ALX
232866	" " " Dowel Pin (2)
350758X	" " " Screw (long)
350759X	" " " " (short) (3)
201780X	" " " " Nut (4)
310009	" " Hand Wheel with two 350690ALX
350690ALX	" " " " Set Screw
310010	" " Oil Cup
310011	" " Reductor
350665ALX	" " " Screw (4)
201781X	" " " " Nut (4)
310013	" " " Shaft Pulley (loose)
310163	" " " " " " Retaining Ring
310014	Feed Carrier Bracket with 310010, two each 201759X and 350751X
310010	" " " Oil Cup
310015	" " " Regulator Block
310016	" " " " " Link (2)
310017	" " " " " " Pin (2)

MACHINE NO. 710w1

310126	Feed Carrier Bracket Regulator Block Link Pin Retaining Ring (4)
350718E	" " " " " Screw
350719ALX	" " " Screw (2)
350751X	" " " Stop Screw
201759X	" " " " " Nut
310018	" Starting Lever with 310152
310168	" " " Return Spring
310152	" " " " " Hook (threaded)
310020	" " " Roller (ball bearing)
310021	" " " " Cam
350734X	" " " " Screw Stud
201773X	" " " " " " Nut
310022	" " " " Spacer
310023	" " " Shaft with 310010
310010	" " " " Oil Cup
350720ALX	" " " " Set Screw
310024	" " " Spacer with 350721ALX
350721ALX	" " " " Set Screw
203172	" " " Thrust Washer (2)
310200	Hook
310201	" Back Plate
310025	" " " Ejector Handle
310026	" " " Feed Slide
310027	" " " " " Block
232866	" " " " " " Dowel Pin (2)

MACHINE NO. 710w1

350737ALX	Hook	Back	Plate	Feed	Slide	Block	Screw	(6)
310028	"	"	"	"	"	Gib	(2)	
350689ALX	"	"	"	"	"	"	Screw	(6)
310029	"	"	"	"	"	"	Spacer	(2)
310128	"	"	"	"	"	Wear	Plate	(left)
310129	"	"	"	"	"	"	"	(right)
350738ALX	"	"	"	"	"	"	"	Screw (4)
310030	"	"	"	Magazine				
310031	"	"	"	"	Clamp	Plate		
350722ALX	"	"	"	"	"	"	Screw	(2)
310032	"	"	"	"	"	"	Tension	Spring (2)
310033	"	"	"	Separating	Plate			
350728ALX	"	"	"	"	"	Screw		
310034	"	"	"	Tension	Bar			
350719ALX	"	"	"	"	"	Screw	(2)	
310127	"	"	"	"	"	Spacer	(2)	
310035	"	"	"	"	"	Spring	(2)	
310173	"	"	"	Weight				
310036	"	Catch	Plate					
310037	"	"	"	Lever	with	249571		
350731ALX	"	"	"	"	Screw	(2)		
201775X	"	"	"	"	"	Nut	(2)	
249571	"	"	"	Position	Pin			
350723ALX	"	"	"	Screw				
310032	"	"	"	Tension	Spring			
310084	"	"	"	"	"	Washer		

MACHINE NO. 710w1

* 310155	Hook Closing Finger (center)
* 310050	" " " " Hinge Pin
* 310049	" " " (outer)
* 310051	" " " " Hinge Pin
* 310039	" Die (2)
310174	Hook Die Assembly, Nos. 310041, 310046, 310047, 310050, 310155, two
* 310041	" " Anvil each 310039, 310045, 310049, 310051 and 350741ALX
310042	" " " Pressure Lever
310020	" " " " " Roller (ball bearing)
350735X	" " " " " " Screw Stud
201773X	" " " " " " " " Nut
310043	" " " " " Shaft with 310010
310010	" " " " " " Oil Cup
350720ALX	" " " " " " Set Screw
231836	" " " " " Spacing Washer (2)
350724XC	" " " " " Screw
310044	" " " " " Bushing
201774X	" " " " " Nut
* 310045	" " " Retaining Pin
* 310046	" " Block (left)
* 310047	" " " (right)
350741ALX	" " " Clamping Screw
* 310045	" " " Dowel Pin
350725ALX	" " " Screw (2)
* 310045	" " " Pin
310048	" " Cover Plate
350653ALX	" " " " Screw (4)
310052	" Holder

MACHINE NO. 710w1

350695ALX Hook Holder Screw

310053 " " Support with 257128

201774X " " " Lock Nut

350774ALX " " " Set Screw

310054 " Hopper

310055 " " Bracket

232866 " " " Dowel Pin (2)

350741ALX " " " Screw (4)

201776X " " " " Nut (4)

310056 " " Cover

350755ALX " " " Hinge Screw

201776X " " " " " Nut

310136 " " " Tension Spring

53563X " " " Thumb Nut

350695ALX " " " " " Screw

310057 " " Rotor

350743X " " " Clamping Screw

310132 " " " " " Washer

310058 " " " Driving Shaft

310145 " " " " " Gear (spiral) with two
350595XC

350595XC " " " " " " Set Screw

310146 " " " " " " Thrust Washer

310059 " " " " " Pulley with two 350595XC

310060 " " " " " " Belt

MACHINE NO. 710w1

350595XC	Hook Hopper Rotor Driving Shaft Pulley Set Screw
310146	" " " " " " Thrust Washer
310147	" " " Gear (spiral) with two 350721ALX
350721ALX	" " " " Set Screw
310148	" " " " Thrust Washer
310064	" " " Shaft
350690ALX	" " " " Screw
310149	" " " " " Washer
350737ALX	" " Screw (4)
201776X	" " " Nut (4)
310065	" Position Plate
310066	" " " Bracket with 310150
350732ALX	" " " " Screw (2)
310150	" " " Pin
310067	" " " Tension Spring
310068	" " " " " Block
350728ALX	" " " " " " Screw
310069	" Ram with 1241D, and two 350737ALX
310070	" " Cam
310071	" " " Bracket with 201752X, 310152 and 350772X
232866	" " " " Dowel Pin (2)
350760X	" " " " Screw (left)
350761X	" " " " " (right)
201780X	" " " " " Nut (2)
350725ALX	" " " Position Screw (2)

MACHINE NO. 710w1

310072	Hook Ram Cam Support Plate
250397	" " " " " Dowel Pin (2)
350756X	" " " " " Screw (3)
201775X	" " " " " " Nut (3)
310073	" " Guide Plate (inner)
310074	" " " " (outer)
350729ALX	" " " " Screw (3)
201776X	" " " " " Nut (3)
310075	" " " " Spacer (lower)
310076	" " " " Spacer (upper)
310133	" " Hinge Pin
350720ALX	" " " " Set Screw
310169	" " Return Spring
1241D	" " " " Screw Eye
351891	" " Roller (ball bearing)
310134	" " " Screw Stud
350737ALX	" " " " " Adjusting Screw
201781X	" " " " " Nut
310079	" " Starting Lever with 350720ALX
310080	" " " " Extention Plate
310081	" " " " Return Spring
310152	" " " " " " Hook (threaded)
310020	" " " " Roller (ball bearing)
350735C	" " " " " Screw Stud
201773X	" " " " " " " Nut

MACHINE NO. 710w1

310082	Hook Ram Starting Lever Shaft with 310010
310010	" " " " " Oil Cup
350720ALX	" " " " " Set Screw
350772X	" " " " " Stop Screw
201752X	" " " " " " Nut
203172	" " " " " Thrust Washer
203172	" " Thrust Washer (2)
310083	" Release Plate
257128	" " " Position Pin (spirol)
350730ALX	" " " Screw
310032	" " " Tension Spring
310084	" " " " " Washer
310085	" Transfer Exit Track (hopper)
350726ALX	" " " " " Screw (2)
310086	" " Lead Track (hopper)
310087	" " " " " Clamp (back)
350725ALX	" " " " " " " Screw
310088	" " " " " " (side)
350725ALX	" " " " " " " Screw
310170	" " " " " Spacing Washer (.025 thick)
310171	" " " " " " Washer (.030 thick)
310172	" " " " " " Washer (.035 thick)

Note: One of the above washers is furnished with this machine in thickness required.

310089 Hook Transfer Track (center)

MACHINE NO. 710w1

310090	Hook Transfer Track (center) Plate
310091	" " " " Retaining Plate
350715ALX	" " " " " " Screw (5)
350715ALX	" " " " " Screw (7)
310092	" " " " Support Plate
350719ALX	" " " " " " Screw
310151	" " " " " " Spacer
350741ALX	" " " " " " " Screw (2)
310093	" " " (lower)
310094	" " " " Plate
350719ALX	" " " " " Screw (2)
350732ALX	" " " " " Screw (2)
310095	" " " (upper)
310096	" " " " Plate
350715ALX	" " " " " Screw (3)
350731ALX	" " " " " Screw (2)
201775X	" " " " " Nut (2)
310097	" " " " Support Plate
350719ALX	" " " " " " Screw (4)
201776X	" " " " " " " Nut (4)
310098	Machine Cover (back)
310164	Machine Cover (back) complete, Nos. 310098, 310099 and seven 350739X
310099	" " " Flange Plate
350739X	" " " " " Screw

MACHINE NO. 710w1

350740X	Machine Cover (back) Screw (6)
310100	" " (front)
310165	Machine Cover (front) complete, Nos. 310100, 310101 and four 350739X
310101	" " " Flange Plate
350739X	" " " " " Screw
350740X	" " " Screw (4)
310102	" " (left)
310166	Machine Cover (left) complete, Nos. 310102, 310103 and three 350739X
310103	" " " Flange Plate
350739X	" " " " " Screw
310104	" " (right)
310167	Machine Cover (right) complete, Nos. 310104, 310105 and four 350739X
310105	" " " Flange Plate
350739X	" " " " " Screw
350740X	" " " Screw (4)
310106	" " (upper, back)
310107	" " (upper, front)
310108	" Starting Switch Contact Block
350727ALX	" " " " " Screw
310109	" " " Lever
310110	" " " " 310109 with 310108 and 350727ALX
350745ALX	" " " " Hinge Screw
310135	" " " " " Washer

MACHINE NO. 710w1

310112	Machine Starting Switch Lever Releaser Plate
310113	" " " " Spacer
310114	Motor Mount Plate
350744ALX	" " " Screw (4)
310115	" Pulley Belt (V-belt)
350751X	Safety Switch Actuating Screw
201759X	" " " " Nut
310116	Work Gauge
310117	" " Button
310118	" " Guard
350669ALX	" " " Screw (2)
310119	" " Guide Bar
310120	" " " " Bracket
350732ALX	" " " " " Screw (lower)
310153	" " " " " " Collar
350733ALX	" " " " " (upper)
310121	" " " " Cushion (rubber)
310122	" " " " Retaining Plate
350715ALX	" " " " " " Screw (2)
350757ALX	" " " " Screw
310123	" " " " Spring
310124	" " " " " Retaining Plate
350682ALX	" " " " " " " Screw
350742X	" " " Screw
201777XC	" " " Nut
310125	" " Slide

MACHINE NO. 710w1 - ELECTRICAL PARTS

310157	Armature Hub Retaining Spring
350764ALX	" " " " Screw
310158	" Spring Washer
995902	Cam Switch
995903	" " Enclosure
350767X	" " Screw (2)
201762X	" " " Nut (2)
257210	" " Wiring Solder Lug (self locking)(2)
995895	Capacitor (600 Volts D.C. 2x.1 MFD.)
350699X	" Screw (2)
257124	" " Lock Washer (2)
995916	Control Box
995914	" " Cover
350699X	" " " Screw (4)
350686X	" " Screw (3)
257124	" " " Lock Washer (3)
350699X	" Panel Screw (3)
257124	" Panel Screw Lock Washer (3)
995946	Fuse (1 Amp. 250 Volts), for 995947
995897	" (10 Amp.), for 995898
995898	" Mount, for 995897
995947	" " " 995946
995866	" " Insulator, (mounted under 995947)
350740X	" " Screw, for 995947
194120	Light Lamp (115 Volts)

MACHINE NO. 710w1 - ELECTRICAL PARTS

995908	Light Lamp Socket
350762X	" " " Screw (2)
995899	" " Wiring Grommet (rubber) (mounted in Ram Cam Bracket)
995901	Machine Starting Switch
995903	" " " Enclosure
350767X	" " " Screw (2)
257206	" " " " Washer (fibre) (2)
995899	" " " Wiring Grommet (rubber) (mounted in Ram Cam Bracket)
995909	Magnetic Clutch (brake)
995910	" " (drive)
228907	" " " Retaining Chain with 202784 (4 11/16 inches long)
202784	" " " " Chain Hook
350686X	" " (drive) Retaining Chain Screw
995907	Main Power Cord with Plug
995956	" " " Adapter Plug
995896	" " " Bushing (mounted in rear of Base)
995900	" " Switch (toggle)
310156	" " " Cover
350727ALX	" " " " Screw (3)
995948	" " " Terminal (4)
995899	" " " Wiring Grommet (rubber) (2)
995949	Mini Box
228895	" " Grommet (rubber) (2)
350680ALX	" " Screw (2)

MACHINE NO. 710w1 - ELECTRICAL PARTS

995915 Motor (115 Volts A.C. 60 Cycle, 1725R.P.M.)
310159 " Pulley with 350661ALX
350661ALX " " Set Screw
350744ALX " Screw (4)
201782X " " Nut (4)
995957 Resistor (47 Ohm, 1/2 Watt)
995958 Safety Switch
995903 " " Enclosure
350767X " " Screw (2)
257206 " " " Washer (fibre) (2)
995863 Silicon Diode Rectifier (4)
995865 " " " Mount (2)
995867 " " " " Insulator (2)
995864 " " " " " Pad (2)
350706 " " " " Screw (brass) (4)
995868 Surge Current Resistor (10 Ohms, 10 Watts)
350768X " " " Screw
257124 " " " " Lock Washer
257206 " " " " Washer (fibre) (2)
257207 " " " " " (steel) (2)
995906 " " " Spacer (insulated)
995911 Timer Relay (2)
350699X " " Screw (4)
257124 " " " Lock Washer (4)
995912 Wiring Cradle (mounted on Base)

MACHINE NO. 710w1 - ELECTRICAL PARTS

995950	Wiring Cradle (mounted on Cam Shaft Frame)
995913	" " Clip, for 995912
995951	" " " " 995950
350696X	" " Screw (2)
257205	" " " Lock Washer (2)
995953	" Lock (yellow) (4) (for internal wiring in Mini Box)
995899	" Grommet (rubber) (mounted in Base)
995904	" Plug
350686X	" " Screw (2)
995905	" Socket
995954	" " Insulator (rubber)

MACHINE NO. 710w1

ACCESSORIES

51078	Base Bolt (2)
6055	" " Washer (2)
310175	Pick with Magnet
228491	Pressure Oiler
239350	Pliers
11831	Screw Driver
23766	Wrench
255540	" (2)
257163	" (5/64" Hex.)
267242	" (3/32" Hex.)
144465	" (1/8" Hex.)
239353	" (5/32" Hex.)
239352	" (3/16" Hex.)
262127	" (7/32" Hex.)